

Pegasus

Brand Name: POSH

Model Name: C350

FCC ID : 2ABN6POSHC350

Basic terms

ROOT: Android system in the super-administrator user account, which has control of the entire system permissions, and only have the permissions to the original system can be refreshed for the revision of the various systems

APK: Android application type, with the Windows Mobile platform cab and exe file is similar to the user can be installed directly;

Webkit: The Android platform browser kernel and Apple's Safari, Google's Chrome and FireFox use this kernel as a web page rendering mechanism;

Operating method described

Phone keys introduced

Menu button: Click to display the corresponding program menu, the user can choose the corresponding sub-functions in the menu;

HOME button: Click to exit to the idle interface;

Back button: Click on the interface will fall back to the previous step;

 
Search: Click into the search interface

Lock screen: click on the following screen lock


To shortcut keys

Designed a unique shortcut key mode in the Android platform, users can, in some interface, hit the screen for a long time and hold will soon be a shortcut key, similar to the context menu appears on the computer. Such as

Space in the main interface, long click on the screen does not release, will appear the following shortcuts:

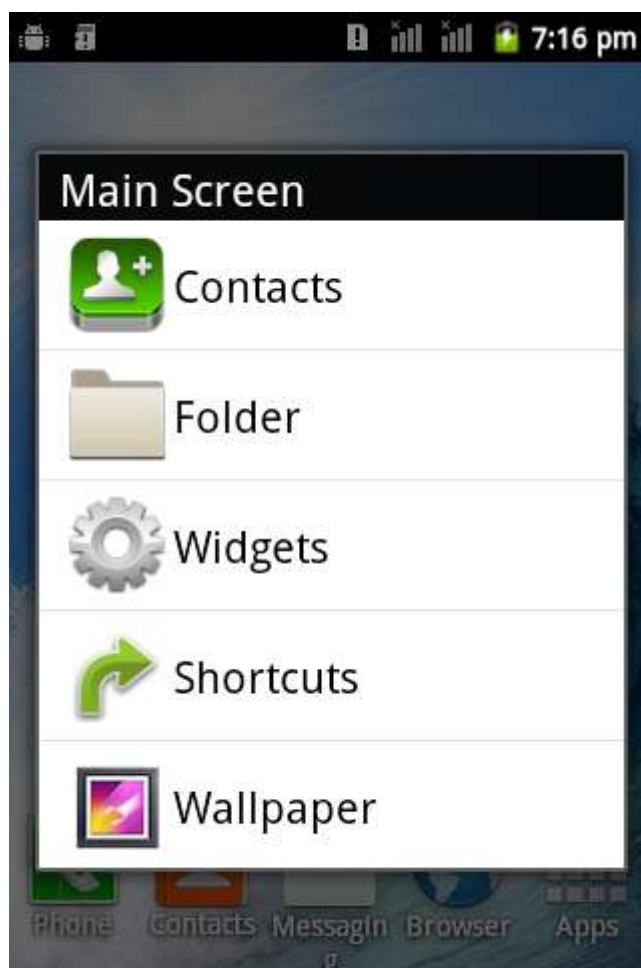


 Select an address book entry in the phone book program, and for a long time to hold down the screen does not release, the following shortcut keys, you can send SMS / MMS, send contacts, editing, and favorites such as:

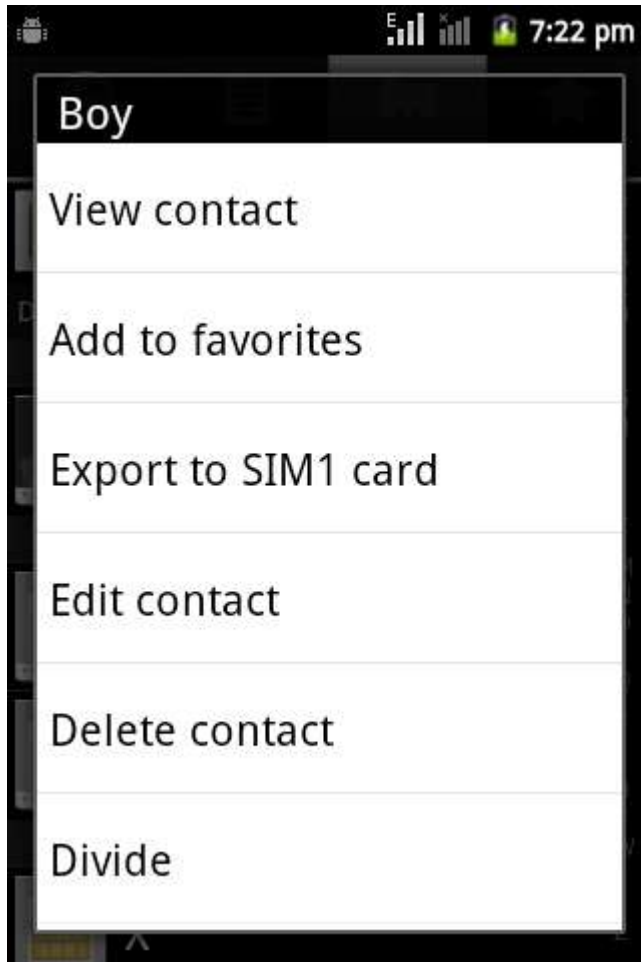


Information Function

 To sort the entire information in accordance with the contacts, conversational arrangement, user understanding of the entire information communication history information, information in accordance with the first sort contacts, including contact name for the first digital, and then the letters of the alphabet, then Pinyin way.

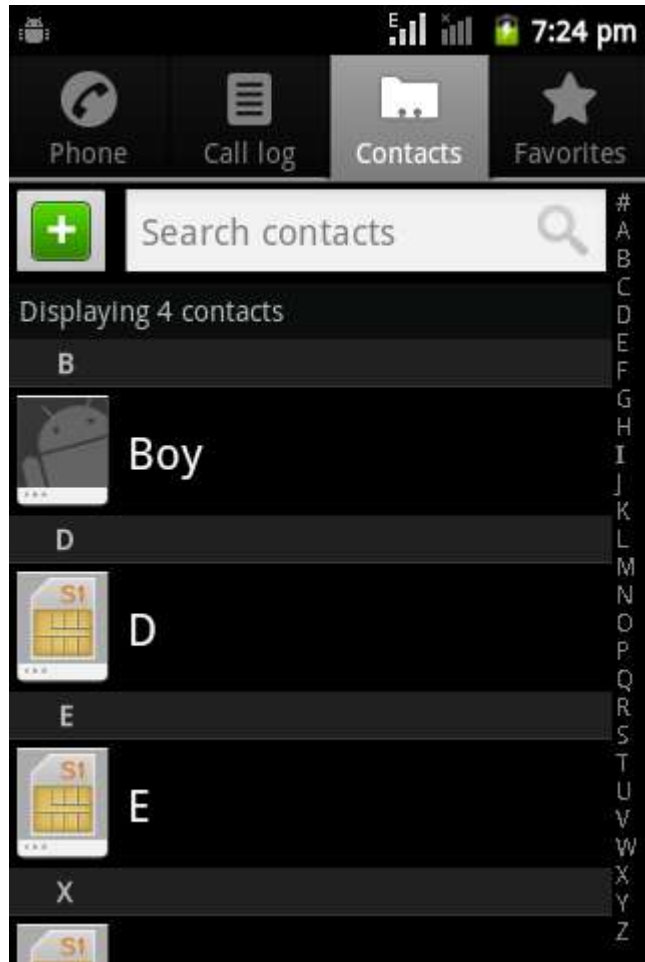


Send MMS

 New information - click the menu key, select the "additional" function
- Select the desired additional content;

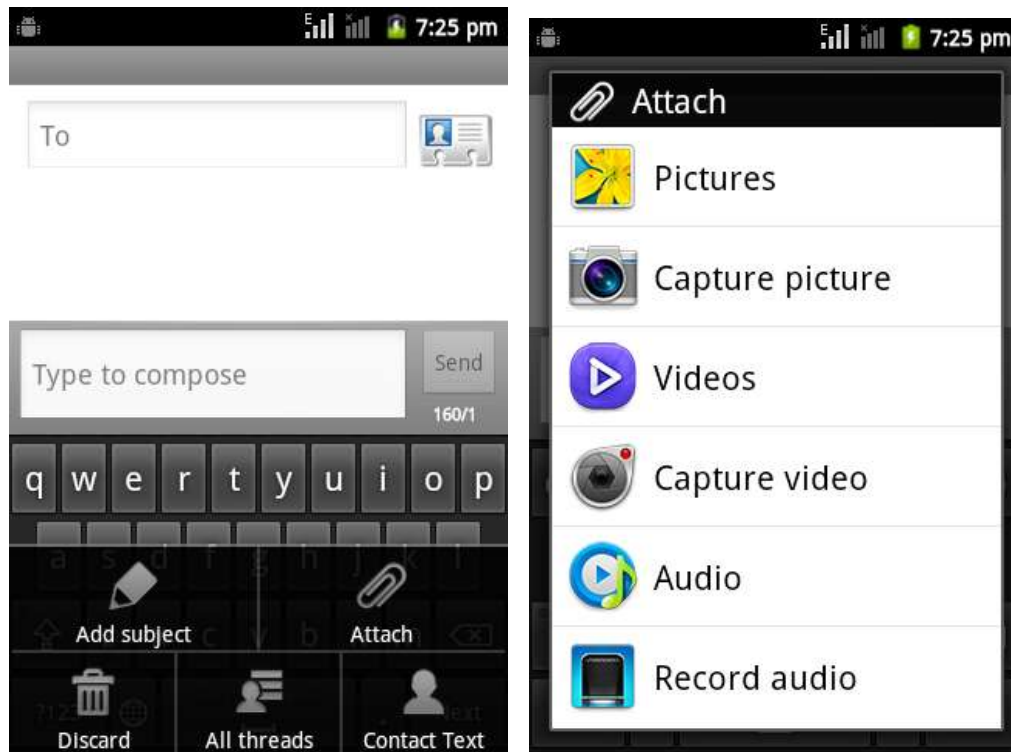


Replacement text messages to remind the sound

 Into the information screen - click the menu key, select "Settings" function - "to select" select ringtone "feature;

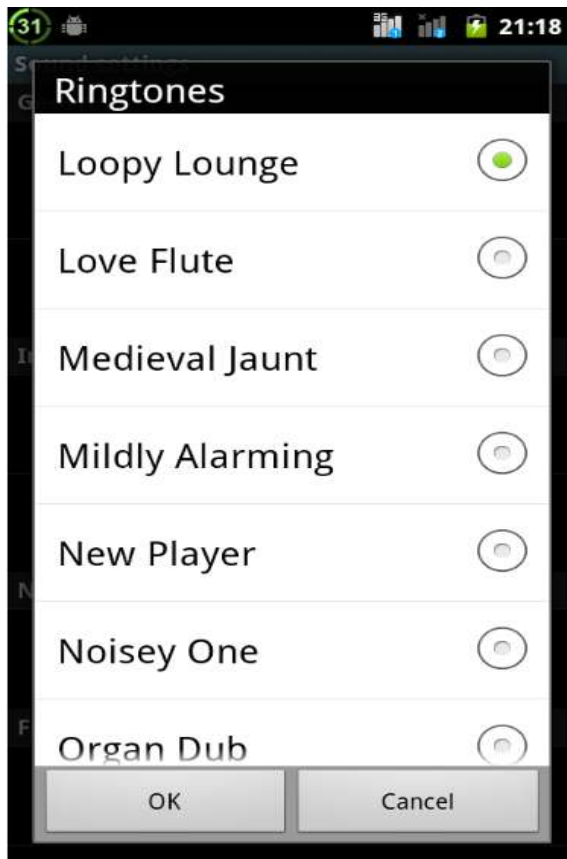


View the sender information

 Access to the information interface - Select - "long press information, there shortcut keys -" select "View Contact

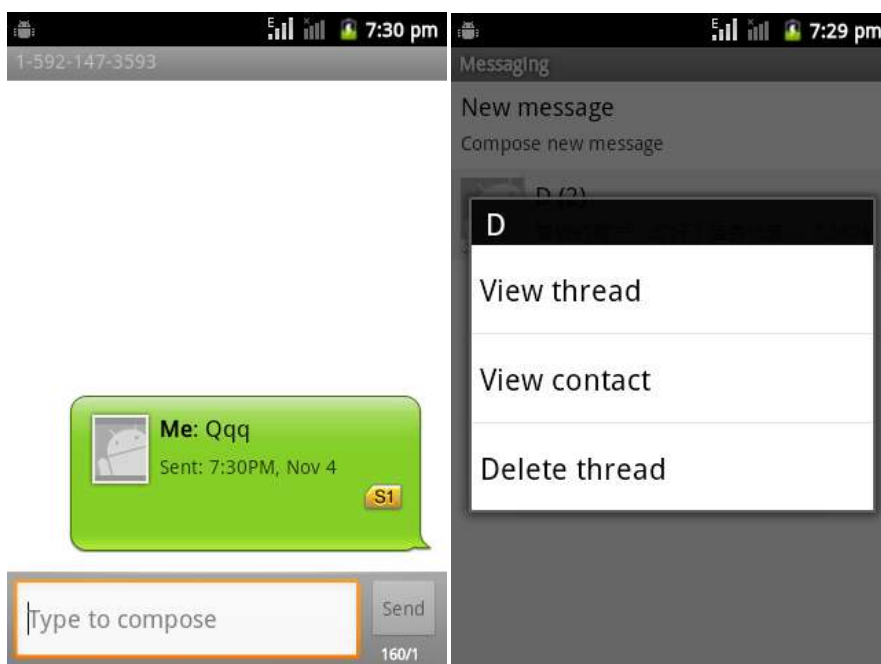


Forwarding information

 Access to the information interface - Select - "long press information, there shortcut keys -" select "Forward" functions

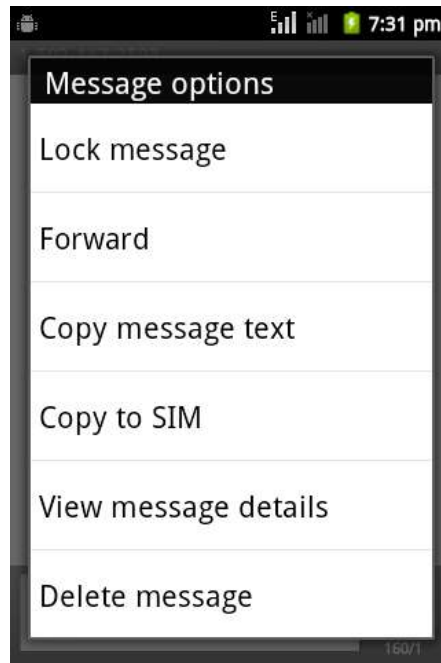


View Message details

 Access to the information interface - Select - "long press information, there shortcuts - Select" View Details "feature

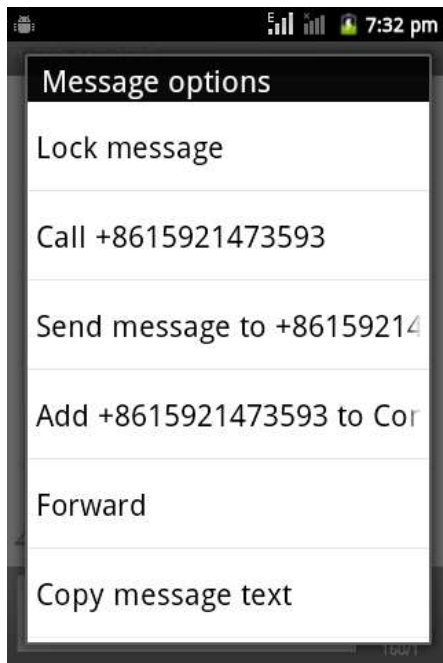

Delete certain specific information in the information session

 Access to the information interface – Select – “long press information, there shortcuts – Select” Delete “function

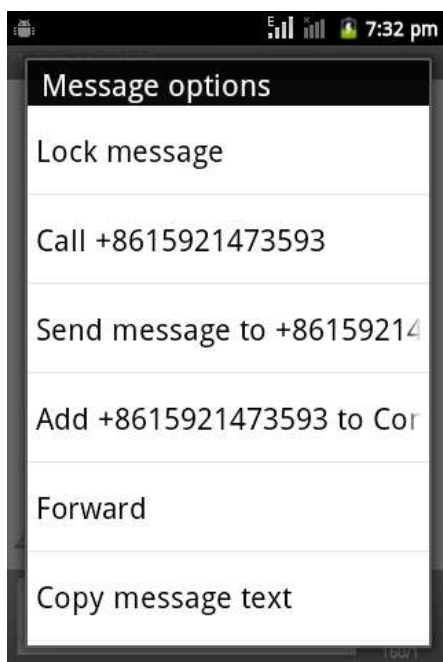

Contacts Features

Integrated dialers, call history, contacts and favorites functions;

 
Address book introduced

The first figure, and then English characters, then sorted Pinyin;



Favorites introduction


Contains the user's favorite contacts, and often call contact information, and contact information of the Ju Shangban part of the overall fabric collection for the user, the lower half of the system default often call the contact information;

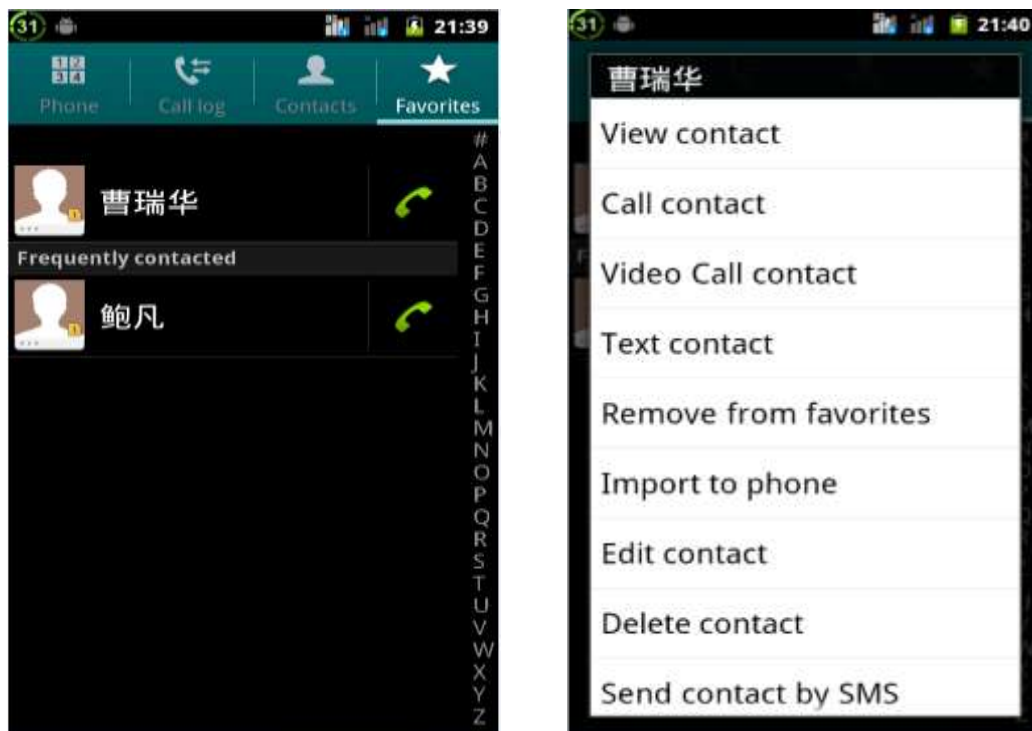

Contact Lookup

Go to the contact interface – click the menu button, select “Search” function;

 The search feature Search by first letter and the whole string

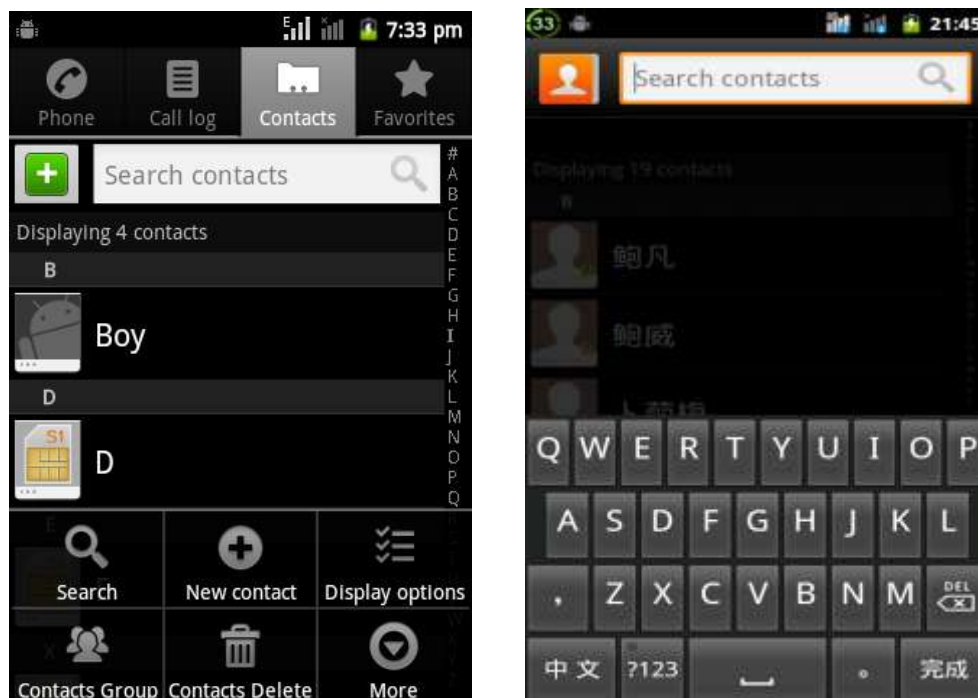


Import contact information methods

The first method, use Bluetooth to achieve data synchronization

The original mobile phone and cellphone using Bluetooth address book synchronization;

 
The second method, the use of Gmail data synchronization

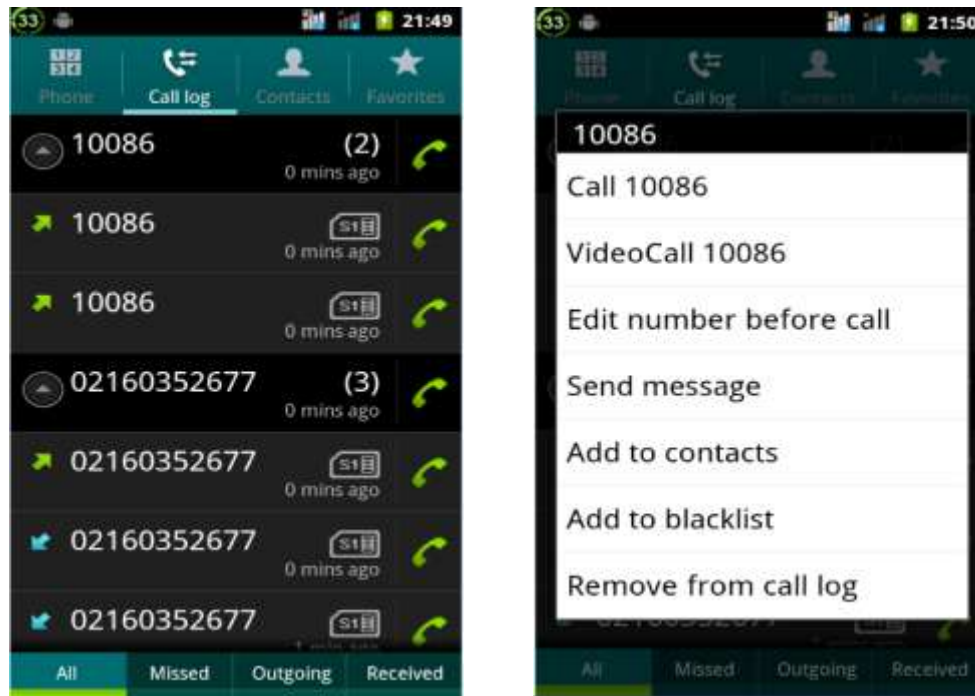

Save call records contact information


To enter the call log interface – choose need to save the call log – long press record, a shortcut key – Select "Add to Contacts" feature

 Or directly into the call log entry, select "Add to Contacts" feature

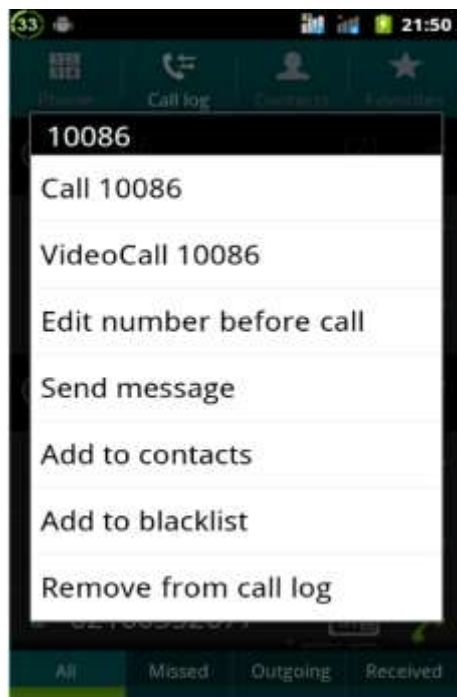

Paste the text / copy function introduced

 - The input string into the input field, press and hold the input area, a shortcut key - "Select All Cut," Copy All "," Select "or" Select Text "function


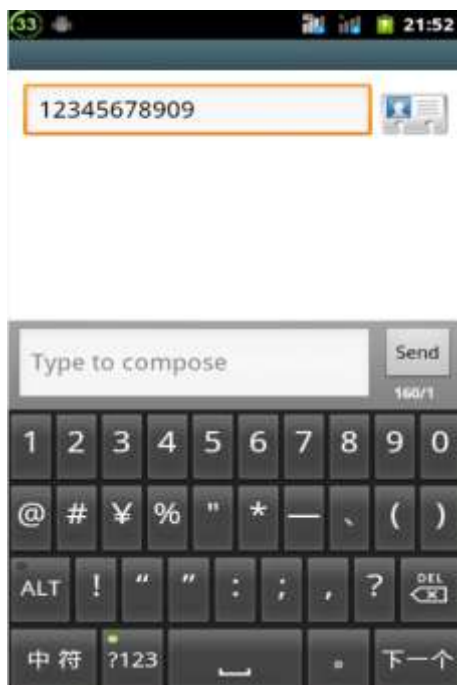


E-mail Features

Configure the mailbox account

Into the program group interface - "Select" e-mail applications - enter your e-mail address and password.

  If the system automatically recognizes the mailbox information, will automatically complete the configuration; if the system does not recognize, will ask the user according to the Mailbox type IMAP or POP3, enter the appropriate configuration information.

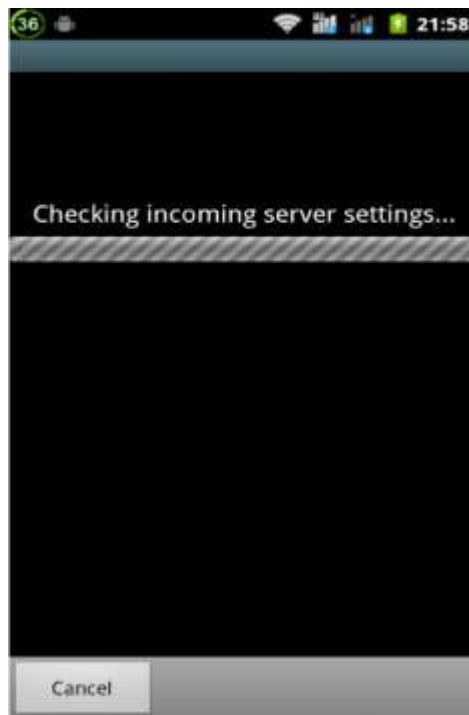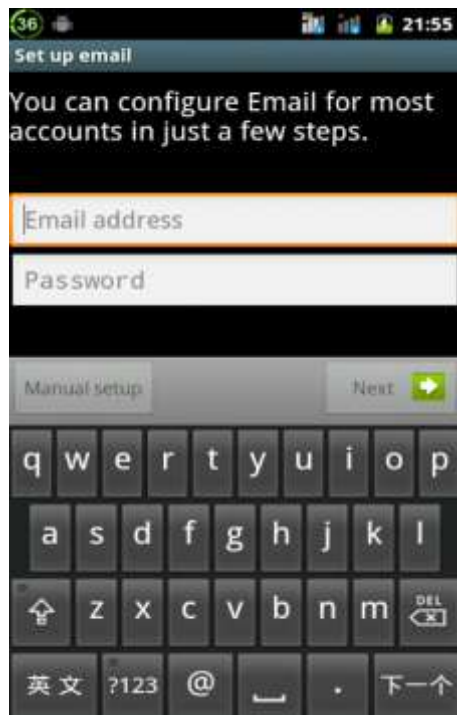


Gmail for example:

E-mail address: ruihua.cao @ gmail.com

Password:



Configure multiple mailboxes account

 Into the program group interface - "select" E-mail applications - click the menu key, select "Add Account" feature

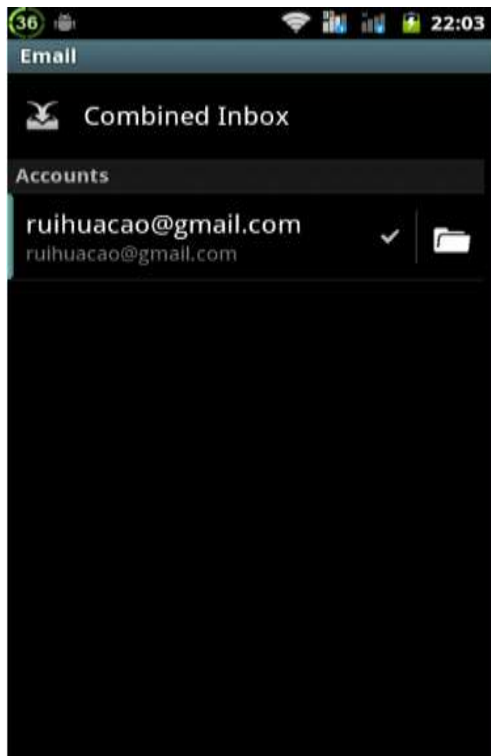


Delete the mailbox account

  Enter the interface of the program group - select the "Email" application - select need to delete the mail - the "long press to select the mailbox account, there shortcuts - Select" Delete Account "function

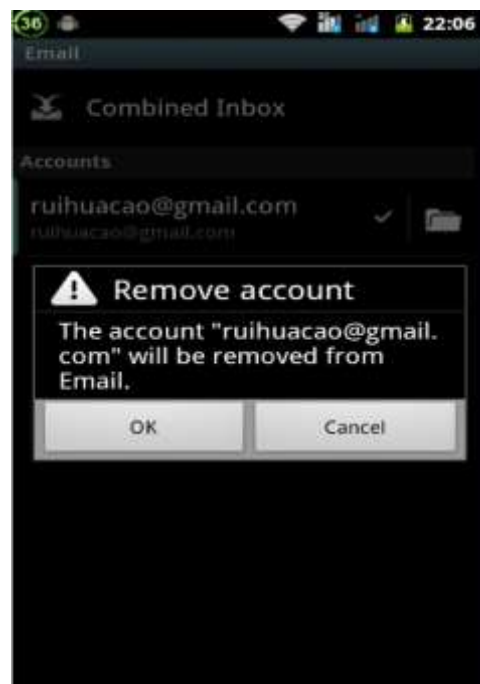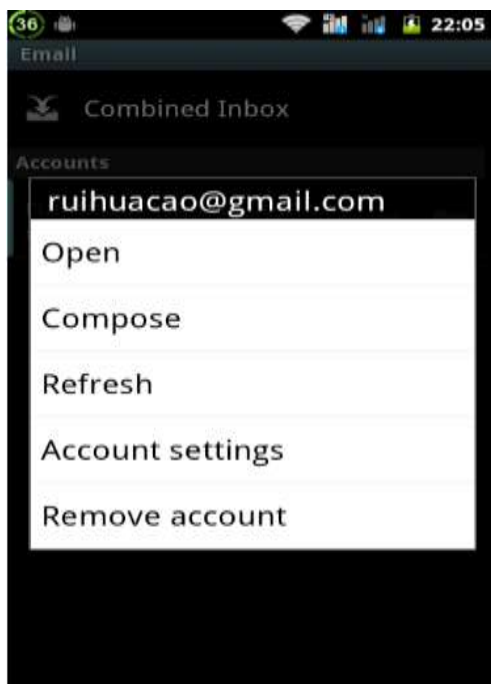

Set the mailbox check frequency

 Enter the interface of the program group – the “E-mail applications – to enter need to configure the mailbox account – click the menu key, select” Account Settings “–” Select “Email check frequency

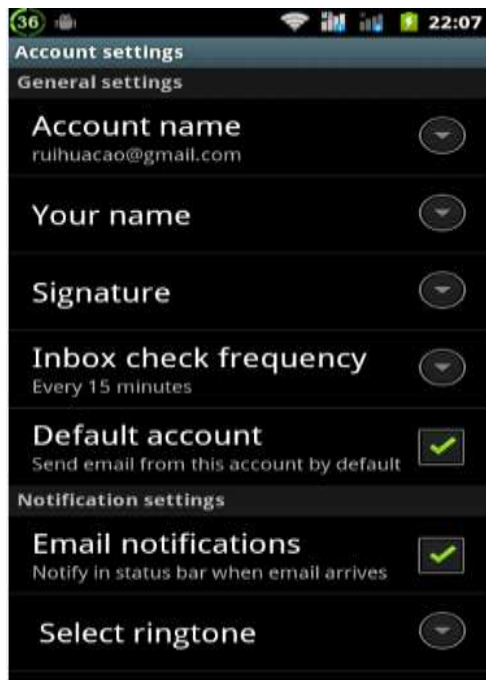

Set the mailbox letter ringtones

Enter the interface of the program group – the “E-mail applications – to enter need to configure the mailbox account – click the menu key, select” Account Settings “–” Select “to select the ringtones



Desktop Features

Commonly used functions into the desktop

Enter the interface of the program group - Select the applications you need to load the desktop - "long by application, the application will be placed to the desktop;



 
Replacement of wallpaper

Click the desktop in the desktop space - the "long, there shortcut keys - select the" wallpaper "function



Packet applications

In the desktop space – the “long by the desktop, a shortcut key – Select the folder” function – “Open the New Folder – enter the program group interface – Select the desired into the application folder –” long-press the application will applications into the new folder


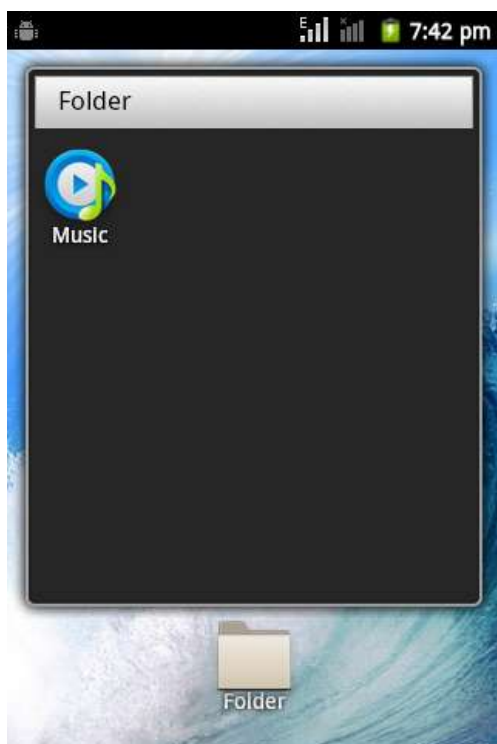


Change the folder name

Open the folder on the desktop - "long by folder title bar -" "Rename Folder" dialog box


Change the folder name

  Open the folder on the desktop - "long by folder title bar -" "Rename Folder" dialog box

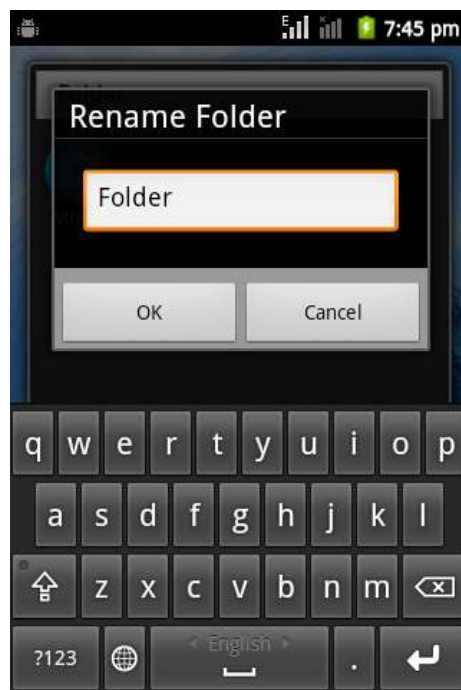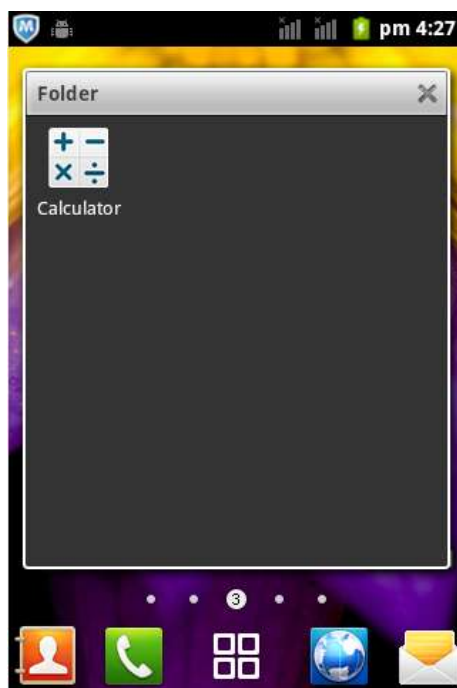



Add contacts to your desktop

 Select the "shortcuts" feature in the desktop space - the "long by the desktop, a shortcut key -" - "Select" Contacts "feature - select a contact

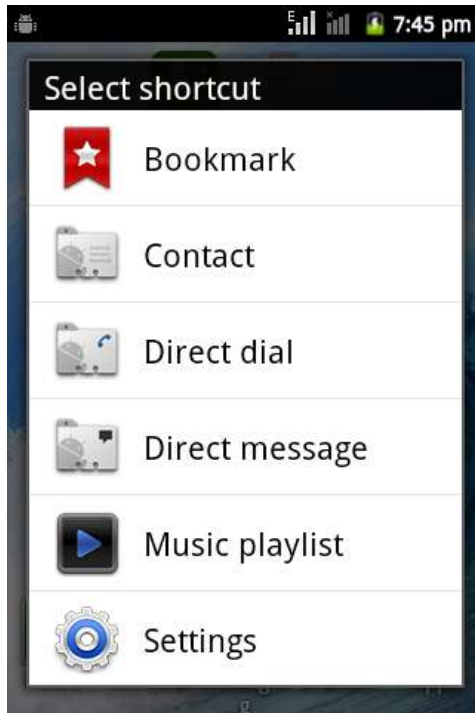

Add URL to the desktop

  Select the "shortcuts" feature in the desktop space – the "long by the desktop, a shortcut key –" – "select" bookmark "function –" to select the URL

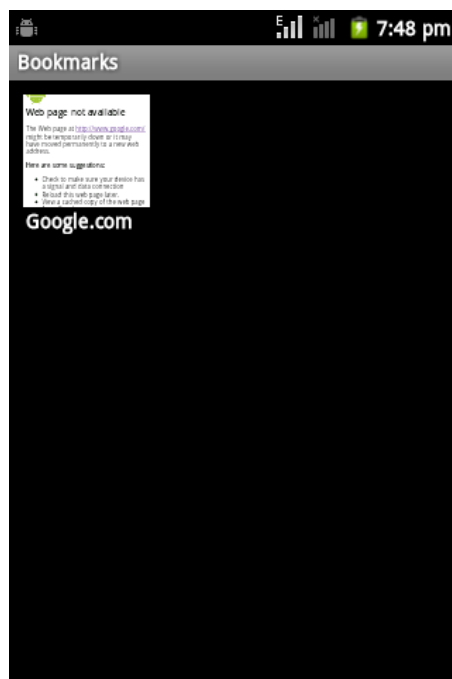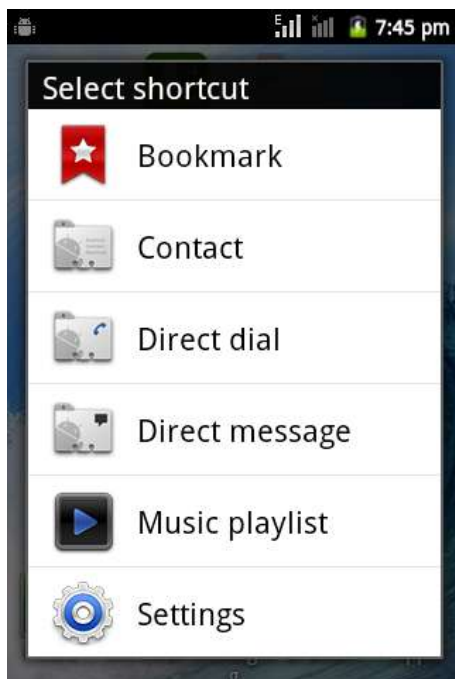

Add a playlist to the desktop

Select the "shortcuts" feature in the desktop space – the "long by the desktop, a shortcut key –" – "Select" music playlist "function –" to select the playlist

(Ibid.) operating methods and procedures

Add to favorites the contact information to your desktop

In the desktop space – the "long by the desktop, a shortcut key – select the" folder "function –" Choice "Starred Contacts" feature – "Select a playlist

(Ibid.) operating methods and procedures

Remove desktop content

Select the desktop content – the "long press the icon –" into the bottom of the screen the trash can icon



The use of FM

You must insert the headset when using the FM.


Click on the icon FM headset is plugged into the FM automatic station search, the search is completed, you can normally listen to the FMFlight Mode Function




Click the "  " key, turn off FM


Click the "  " key, Add radio.



Click on  button, you can enter the list of saved stations

 


Click on  button, you can switch the radio.

Click on  button, FM playback mode switch.

Select the "Settings" – select "wireless network" – "check flight mode" function

Or select the phone "switch machine" button – Select the "flight mode" feature

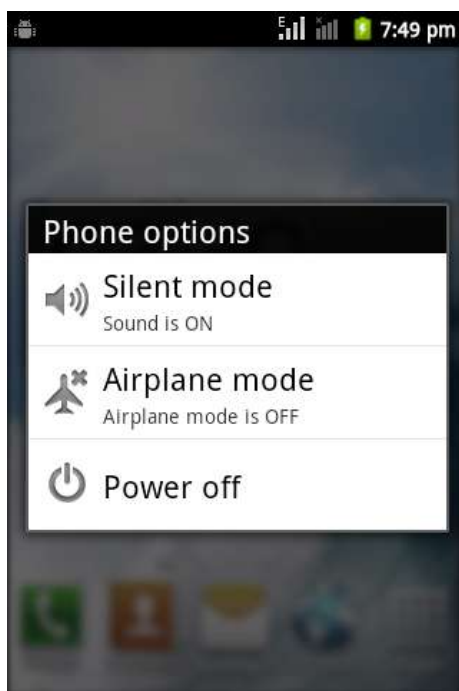

WIFI and BT

WIFI

Select the "Settings" – select "wireless & networks" – "WLAN settings" function, Check WLAN options open WIFI



Click MEUN button, select Scan, Search Nearby AP



Click the "Advanced" button, set the interface type WLAN



Click Search to AP, the password input box pops up



After entering the correct password and click "connect", after a successful connection to the normal Internet.

 


BT


Select the "Settings" - select "wireless & networks" - "Bluetooth settings" function, Check WALN options open WIFI.




Check the "Discoverable", open the Bluetooth searchable, click "Discoverable timeout" setting Bluetooth searchable time.

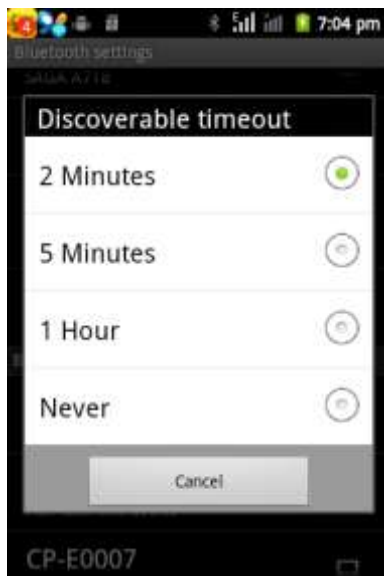

 Click the "Scan for devices" to search for Bluetooth devices.

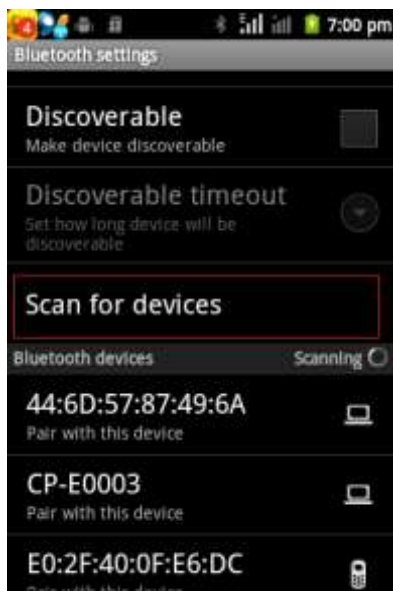


 Click on a search for Bluetooth devices, it will pop up a matching box, click on the "pair" can be paired, click on the "don't pair" can cancel pairing after pairing is complete you can transfer the file to normal.

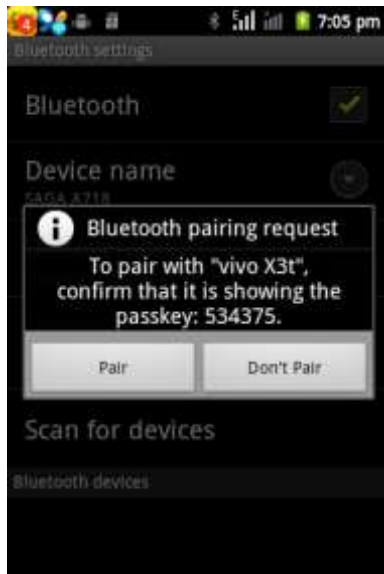


Screen lock settings

 Select "Settings" – "Select the location and security" – "Select" screen lock settings ."

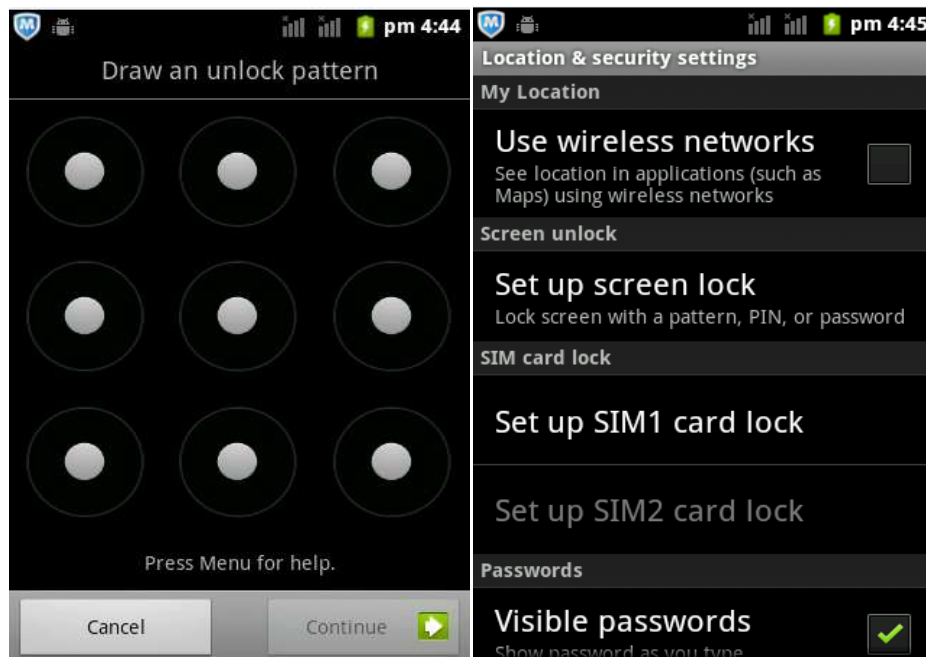


Restore the factory settings

 Select the "Settings" – select "privacy settings" – "select" restore factory settings "

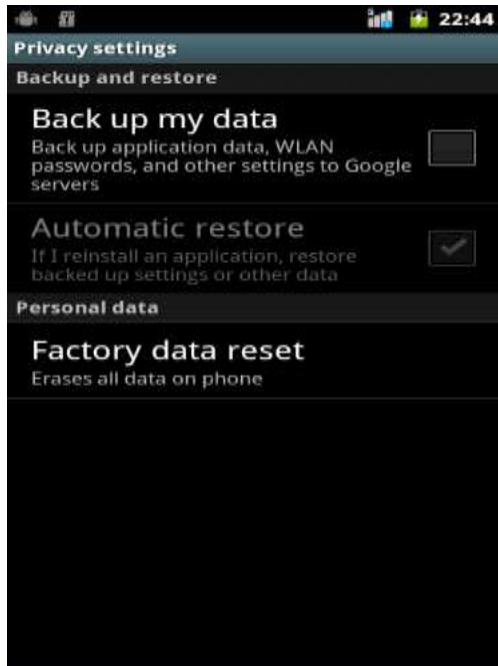

Storage

 Select the "Settings" – select "Storage" – "Storage Settings"

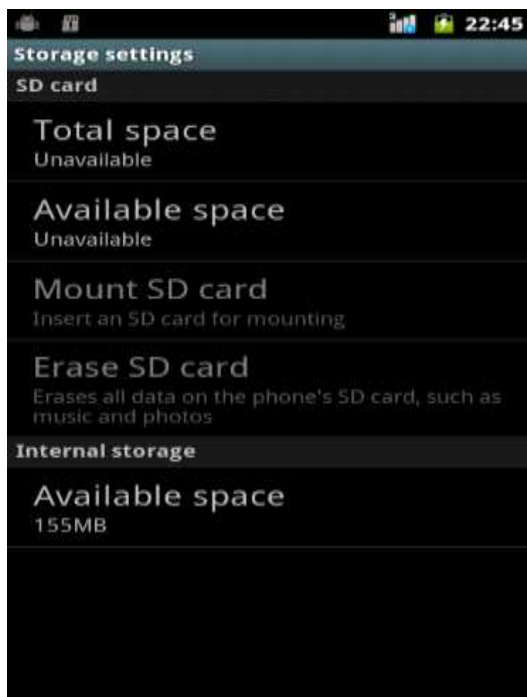


English language switching the phone

Select "Settings" – select the "voice and keyboard settings" – "choose"
Select Voice ", select either English or Chinese




Input method settings

 Select "Settings" – select the "voice and keyboard settings" – Select the
text input **settings**

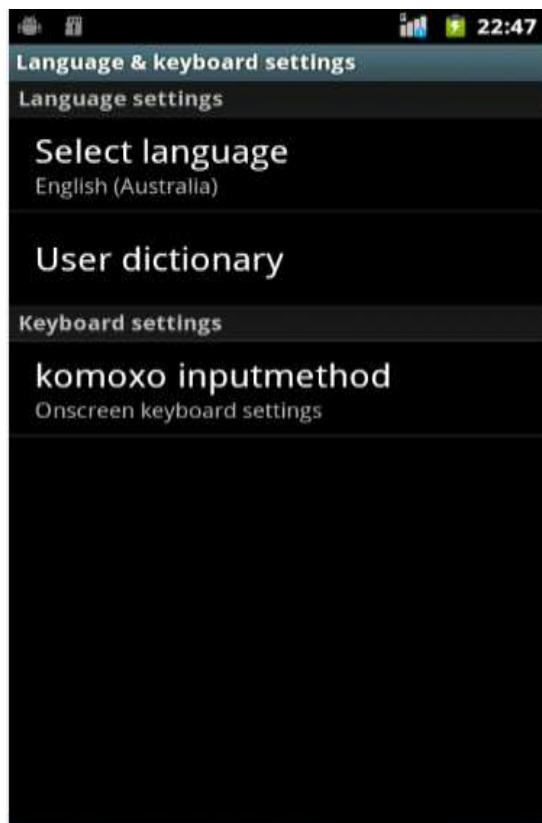

Replace the mobile phone input method

 
In each input text box, long press the shortcut key appears, choose another input method

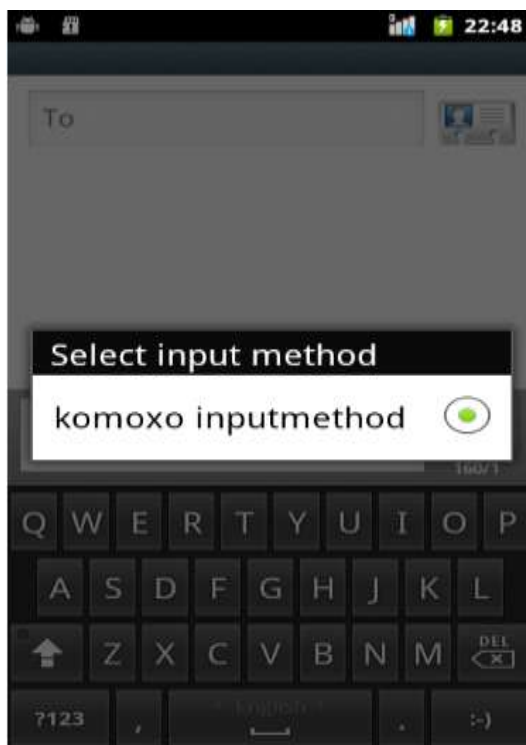

Cable link Android phone

Select "Settings" - "Select" Applications -" Select the "development"
- "check the" USB debugging "

 The driver of the product installed on your computer link USB cable;


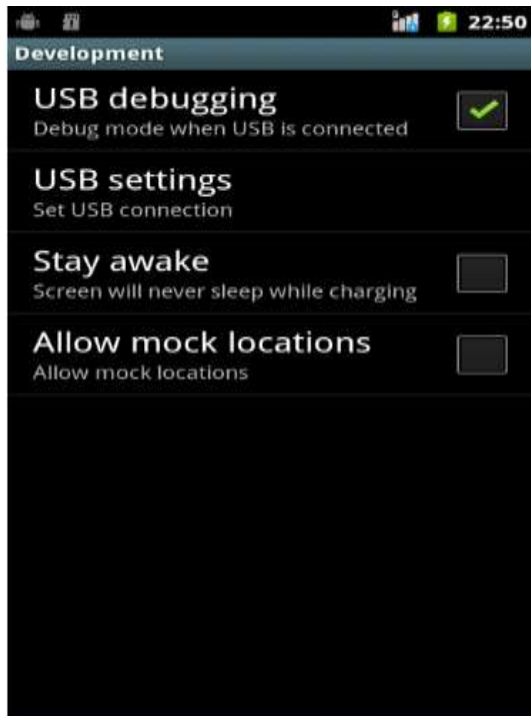


Browser features introduced

Visit the website


Browser - click on the "menu button" - select "go to" function, enter the
URL need to browse the web

  Access to save a good web site, or historical inform

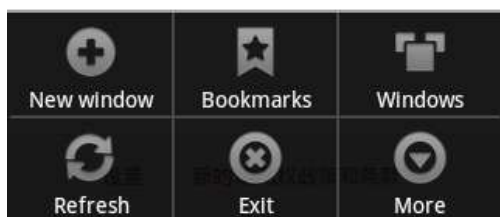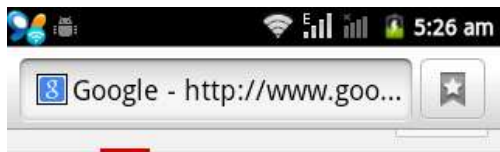

Picture or other object in the download page

 
Browser – browse the web, in the pictures, long press the shortcut, select "Save Image" function

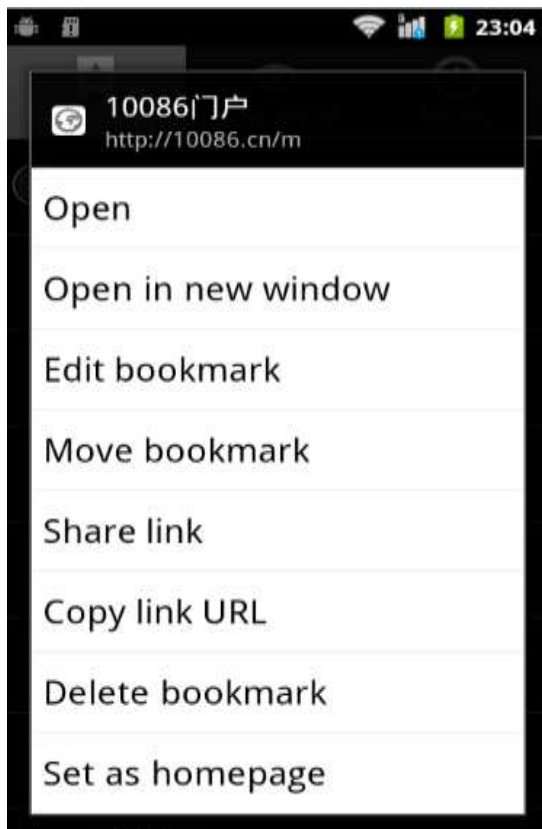

Other web page content, including applications, ringtones, super connections, can be long to complete the call shortcuts

Browser settings / page to find

 Browser – Browse the web – click the menu key, select “More” function, you can achieve your browser settings / page to find

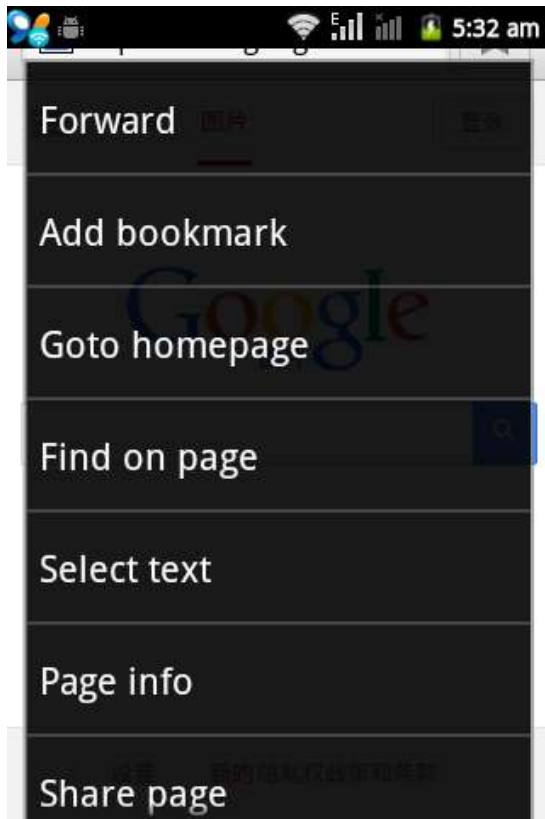

Q/A

1) how to turn off too much running in the background software

Download Advanced Task Manager Advanced Task Manager and select install, it can help you achieve the end the program automatically switch between programs to display information about memory, exclusion list, an end of all widgets, fast uninstall program and other functions, to achieve free up memory space, reduce the pressure of the CPU computing to improve the operating speed, to extend the purpose of standby time.

Download:

http://m.91.com/soft/detail.aspx?platform=android&f_id=4001520

(2) how to quickly set up Email

Android system can automatically set up most POP3 or IMAP mail accounts, e-mail address and password in the e-mail applications, direct input, if

not automatically adapts to the mailbox, will require the user to configure the mailbox server information. Specific content see previous e-mail features "section.

(3) How do I view the SD card capacity

Select "Settings" and then select "SD card & phone storage", will be able to view the current phone's SD card capacity

How to save the power of mobile phones

First reduce the screen brightness, in normal use by reducing the brightness to reduce battery drain, in the "Settings" in "sound and display the project to find the" brightness ", and then the sliding scale bar you can set the brightness of the Android phone;

Usually turn off the vibration of the calls and text messages to remind;

As little as possible to run large-scale software and software to run multiple Android operating system does not exit the program, run software and procedures to process management software is recommended to turn off the process.

5 how the phone lock screen, to prevent others from using

In the "Settings", select the location and security settings, and select "set the screen lock" pattern "to set a personal unlock pattern to achieve the purpose to prevent strangers or to ensure the privacy of confidential documents.

6. Why USB data cable link on the computer

Recognized in the phone's "Settings" - "application" - "development", "USB debugging" functions check; also install the correct USB drivers

7. How to install the program on non-Android Market

Select the "Settings" - "application", "unknown source" function check

8. When browsing the web or other applications, how to switch to other applications

If you browse the Web need to open other applications, can task switch by pressing the Home key, short press after return to the desktop (to note is the system default show only 6 tasks)

9. How to enter the fast mute mode

In addition to ongoing press the volume down key, long press the end call key, and directly choose the silent mode in the menu to quickly enter.

10 How to forward SMS / MMS

Information applications, long a piece of content information in the list until the shortcut menu, select "Forward" can be realized.

11 how to copy and paste text content

In the input field, press and will pop up the shortcut menu, including copy and paste function.

Download and install the application can install path is set to SD card
Platform sake, only to install the application in the phone memory

13 is installed too many applications in the mobile program group, how
to solve

On the desktop in the new folder, drag applications to the program
group to the folder

14 contacts to sort, can change the

Platform design to sort of number, and then letters, then the Chinese
way of sorting; the user can not own

15 contacts support grouping

Sake of platform, the current version not to support the Address Book
group, if necessary, in Gmail, the user program grouping, and can be
synchronized with Gmail

16 contacts and SMS storage capacity limit

Platform sake, no clear restrictions on contacts and SMS storage value
depends on the size of the flash memory space of the current mobile phone

17 SD card set personalized ring tones

, Namely the establishment of the "ringtones" (ringtones) alarms (alarm) notifications (SMS notification ringtone), ringtones into a different folder, the phone can automatically recognize the SD card.

18 how to synchronize the original phone contacts to the phone

The first method: Bluetooth, two cellphone sync contacts;

The second method: using the Gmail synchronization, attach the original phone's address book to Gmail, then use the phone's ActiveSync (Moxier application) to save your contacts to your phone; details please refer to the Contact Function "

20 How to Find a contact

The contact interface, press the Menu key, select "Search" menu, you can find the contacts, you can use the letters the first letter of the query;

21 how to download applications for mobile phones

1) access to Google Market <http://www.android.com/market/>; part of the software needs to pay to download;

2) third-party sites, access to application software, such sites are:

<http://www.waptw.com/>

<http://android.sj.91.com/list/rjyxhj.shtml>

.....

Download the software will be installed in the SD card and some software may be a result of the operating system version, network access node, size or other reasons can not be used.

22 commonly used android forum

<http://bbs.gfan.com/>

<http://www.hiapk.com/>

<http://ibbs.91.com/>

<http://android.tgbus.com/>

23 How do I delete the downloaded software

"Settings" - "Applications" - "" management application "- Select the application to be deleted

24 How to view mobile version

"Settings" - "" phone ", you can get the version information of the mobile phone, including the Android version, Linux version, software version, hardware version

25 how to copy the contact information in the SIM card

Into the Contacts application, click the menu key, select "Import Contacts", then you can see the contacts in the SIM card, if only to import, click an item to. Import All you need to press the Menu key, select Import All to import to.

26 Why have the time and date display in the SMS

SMS display, the day's show time, day of the show date

27 whether the phone supports Java

Platform reason, the phone does not support Java, if you need to install third-party Java application, you need to install the Java Runtime Environment in the phone.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 0.5cm separation distance between the user' s body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refer to FCC website search for FCC ID: 2ABN6POSHC350 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined

by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.