

Contents
Your Tablet
Contents

Contents
Let's go
Touchscreen & keys
Home screen
Calls
Web
Latitude
Manage your life
Contacts
Messaging
Text entry
Tips & tricks
Personalize
Photos & videos
Music
WHT wireless
Wireless Connection
USB & memory card
Tools
Management
Security
Troubleshooting

Let's go

Let's get you up and running

Assemble & charge Note: Your device is always on when being charged.

Turning the Tablet on & off

To turn on your Tablet, press and hold the **Power** button
To turn off your Tablet, press and hold **Power** then touch **Power off** on the screen.

Wireless Connection

If you want to use a Wireless Connection computer network for even faster Internet access, touch Menu > Settings > Wireless & networks > Wireless Connection settings.

Touchscreen & keys

A few essentials

Touch tips

Here are some tips on how to navigate around your Tablet.

Toucl

To choose an icon or option, touch it.




Touch & hold

To open special options, touch and hold an icon or other item. Try it: In the home screen, touch Contacts, then touch and hold a contact to open options.

Drag

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: In the home screen, touch **Contacts**, and then drag your **Contacts** list up or down.

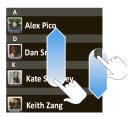


Flick

To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Zoom

Get a closer look at maps or web pages. To zoom in, double touch the screen. To zoom out, double touch, the screen again.

You can also zoom in or out by pinching your fingers together or moving them apart on the screen.

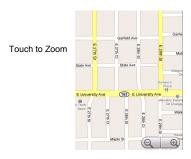

Key tips

- Power key
 In power off mode, press this key to turn on your Tablet.
- In power on mode and screen-off mode, press this key to turn on the screen.
- In power on and screen-on mode, press this key to turn the screen off.

Touch **Home** △ to close any menu or App and return to the home screen. From the home screen, touch and hold **Home** to show the last few Apps you used, then touch an App to open the

selected App.

Touch **Menu** to open menu options, or touch Back to go back.

Sleep & wake up

To save your battery, prevent accidental touches, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power. To wake up the touchscreen, press Power again, or open the Tablet.

To change how long your Tablet waits before the screen goes to sleep automatically, touch **Menu** 🔀 > Settings > Sound & display > Screen timeout.

Power key menu

Press and hold **Power** to open the power key menu, where you can turn off the Tablet (Power off), or turn Airplane mode or Silent mode on or off.

Adjust volume
Press the volume keys to change the ring volume (from the home screen), or the earpiece volume (during a call).

Rotate the screen

When you rotate the Tablet 90 degrees anticlockwise, the touchscreen can rotate to stay right-side up:

Find it: Menu 🔀 > Settings > Sound & display > Orientation

Home screen Quick access to the things you need most

Quick start: Home screen
The home screen gives you all your latest information in one place. It's what you see when you turn on the Tablet or touch Home from a menu. It will appear basically like this:



Note: Your home screen might look a little different.

The home screen extends beyond what you see on the screen to give you more room for adding shortcuts, widgets, and more. Flick the home screen left and right to see more panels or to add widgets or shortcuts.



Widgets

Add a widget, such as a clock, music player, or a calendar that shows upcoming appointments. To open a widget, touch it. To add widgets, touch Menu > Add > Widgets. If your home screen is full, you won't see the add option. You'll have to delete widgets or shortcuts to make room.

Note: If you install Apps from Android Market that have widgets, touch and hold the home screen, then select a widget to add to the home screen.

Shortcuts

To add shortcuts to the home screen, open the App menu (see below), then touch and hold the shortcut you wish to add. It will be added to the home screen.

Alternatively, access **Menu** $^{\odot}$ > **Add** > **Shortcuts**.

Apps

Your Tablet comes with a few Apps already installed, and you can download and install more. To open an App, touch it.

App menu

All the Apps on your Tablet, including the Apps that came with your Tablet and the ones you download and install, are listed in alphabetical order in your *App* (application) menu. To open the App menu, touch and drag up.

Running multiple Apps

There is no need to close an App before opening another one.

Your Tablet can run multiple Apps, all at once.
You can open a new App by touching **Home** to return to the home screen, then opening the App menu and touching the App you want. To switch from one running App to another, touch and hold **Home**

to see what Apps are already open, then touch the one you want. You can view up to the last six Apps that you ran.

Tablet status & notifications

The status bar at the top of the screen contains icons that tell you about messages and Tablet status. To view your notifications, touch the status bar and drag it down.



Icons on the right tell you about Tablet status:


	WHT active	ш	network (full signal)
6 10	GPS active	B	network (roaming)
<u>?</u>	Wireless Connection active	<u>1</u>	downloading
(0)	Volume	18	voicemail message
"Q"	Vibrate	3G	3G (fastest data)
■×	Silent	क्षा	flight mode
Ā	mute call		battery (charging)
	battery (full charge)	C)	Speaker phone active
0	alarm set		

Calls It's good to talk

Quick start: Calls

Dialling options

Find it: Phone

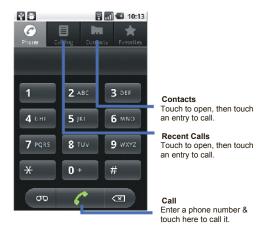

In-call options

During a call:

To use a WHT device touch WHT. (The device must be turned on and previously

paired — see "Connect new devices" on page 63.)

- To mute a call, touch Mute.
- To use the speaker phone, touch Speaker.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal.

Always obey the laws and drive safely.

Tip: You can touch **Home** or △ → Back to leave the active call display. To reopen it, touch **Home** △ → Phone > Return to call in progress.

Make & answer calls

To make a call, touch **Phone**, enter a number, then touch **C**.

Tip: If the screen is locked, drag
to the right.

To answer a call, drag
to the right.

To end a call, touch **End**.

To ignore a call, drag
to the left.

Enter numbers during a call

To enter numbers during a call, touch **DialPad**.



Recent calls
Find it: Phone > Call log
• To call a number, touch it.

- To send a text message, create a contact, view a contact, or other options, touch and hold an entry.

 To clear the list, touch **Menu** 8 > **Clear call log**

Frequent calls
Find it: Phone > Favourites

- To call a number, touch it.
- To send a text message, view a contact, or other options, touch and hold an entry.

Conference calls

To start a conference call, call the first number. After the call is answered, touch \boldsymbol{Add} \boldsymbol{call} and call the next

When the next number answers, touch Merge call. Tip: Before merging, you can switch back and forth between the two calls by touching \$\square\$.

Your phone pad number
Find it: Menu S > Settings > About phone > Status > My phone number

Emergency calls


Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even if your tablet is locked. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

- 1 Touch Phone (if your Tablet is locked, touch Emergency Call).
- 2 Enter the emergency number.
- 3 Touch C to call the emergency number.

Web

You don't need a PC, surf the web with your Tablet

Quick start: Browser Find it: Browser

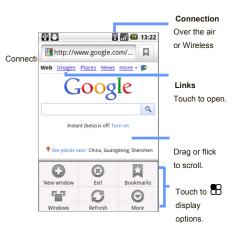

Note: If you can't connect, contact your service provider.

Connect

Your Tablet uses the mobile network (over the air) to connect to the Web automatically.

Note: Your service provider may charge to surf the Web or download data.

To use a wireless network, touch Menu 🔀 > Settings > Wireless & networks. Touch Wireless Connection to turn it on and touch Wireless Connection settings to search for nearby wireless networks. Touch a network to connect.

Web touch tips

Zoom & magnify

In Web pages, when you scroll (drag or flick), zoom icons appear at the bottom of your screen.



Select links

When you touch a link, your Tablet outlines it and goes to that page. If you touch



and hold the link, your Tablet shows options, like **Open** in new window or **Bookmark link**.

Options	
Open	Open a new browser window.
Bookmarks	See your bookmarks.
Windows	View the browser windows that are currently open.
Refresh	Reloads the current page.

Back/Forward	Navigate to previously viewed pages.
More	Shows additional browser options.

Set your location sources

Set your Tablet to determine your location using GPS satellite signals (highly accurate, but uses battery power) or using the mobile network (less accurate, but conserves battery power).

To set your location, touch Menu > Settings > Location & security > Use GPS satellites and/or Use wireless networks

wireless networks.

Manage your life

Stay on top of things.


What can you manage? Email, contacts, and calendar on your Tablet give you access to the same personal information that you add, view, and edit on your computer.

Contacts

Contacts like you've never had before

Quick start: Contacts

Find it: Contacts

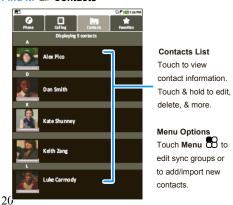

Tip: To search the list, just open your Tablet and type a name, or simply touch **Search** and type using the touchscreen keypad. When you flick or drag this list, a scroll bar appears on the right. Drag the scroll bar to move the list faster.

Call, text, or email contacts
Find it: Contacts

For View contact, Call contact, Text contact, Add to favourites, or other options, touch and hold the contact.

Edit or delete contacts
Find it: Contacts

Touch the contact, then touch **Menu** 8 > Editcontact or Delete contact.

Create contacts

Find it: Contacts > Menu > New contact

Select the account to save the contact to, then type the contact name and details.



When you're finished, touch **Done**.


Groups

Find it: Contacts > Menu > Display options
You can put your Contacts into groups that you create
(like "friends", "family", or "work"). Then, you can find
contacts faster by showing one group at a time.

Messaging

Sometimes it's best 2 text, or IM, or email . . .

Quick start: Messaging Find it: Messaging

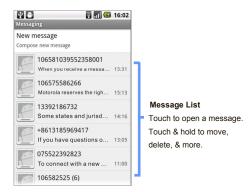

Tip: To see more messages, flick or drag up.

Read & reply to messages

- To open a message and all of its replies, touch it.
- To respond to a message, just open it and enter your response in the text box at the bottom.

To open options, touch and hold a message.

Create messages

Find it: Messaging > New message
Enter the recipient and message. In text messages and emails, touch Menu for options, like Insert smiley or Attach.

Send & receive attachments

To send a file in a message, open a new message and touch **Menu** S > **Attach**.

When you receive a message with an attachment, open the message and touch the file name to download it. Then, touch the name again to open it. Some file formats can be converted to HTML for faster viewing. In such cases, your Tablet will show a button that says

Get HTML version.

Find it: Talk

Touch to change your online status message.



Touch **Menu** to see a list of your Google Talk friends, send invitations to add new friends, and much

Instant messages

To send and receive instant messages, you can use an instant messaging App or your browser.

Voicemail

When you have a new voicemail, is shown at the top of your screen. To hear the voicemail, touch **Tablet** then touch and hold .

Text entry

Think keyboard, now think smaller

To change text entry settings, change languages, and see the dictionary of terms you've used, from the home screen, touch Menu Settings > Language & keyboard.

Touchscreen keypad

When your Tablet is closed, you can open the display keypad by touching a text field. To close the keypad, touch **Back** .

Text Entry

Touch to open the touchscreen keypad.



To change your settings for this keypad, from the home screen, touch Menu > Settings > Language & keyboard > keyboard.

Text entry settings

When you use the touchscreen keypad, your Tablet suggests words from your dictionary and chosen language. Your Tablet also automatically enters anostrophes in some words, like "dont"

apostrophes in some words, like "dont."

Find it: Menu Settings > Language & keyboard

• To change the language and style of your

touchscreen keypad, touch Select locale.

- To edit your dictionary, touch User dictionary.
- To change the sounds, correction, and other settings for your touchscreen keypad, touch keyboard.
- To change the automatic correction settings for your full keypad, touch keyboard.

Tips & tricks

A few handy hints

General tips

- ullet To return to home screen, touch **Home** ullet
- To see recently dialled numbers, touch Phone
 Call log.
- To sleep/wake your Tablet, press **Power**
- To set screen timeout, touch Menu 😂> Settings
 - > Sound & display > Screen timeout.
- To search, touch Search Q.
- To turn sound on/off, press and hold Power
 - > Silent mode.
- To turn airplane mode on/off, press and hold **Power > Airplane mode**.

Battery tips

Want to extend your battery life? Try these:

- To turn off automatic applications sync, touch
 Menu S > Settings > Accounts & sync.
- To turn off WHT power, touch **Menu**
- > Settings > Wireless & networks > WHT.
- To turn off Wireless Connection, touch $\textbf{Menu} \ \, \boldsymbol{ \overline{ \mathbb{S}} } > \mathbf{Settings}$
 - > Wireless & networks > Wireless Connection.
- To add a **Power Control** widget, touch **Menu**
 - > Add > Widgets > Power Control.

Note: The Power Control widget is a simple way to enable/disable Wireless Connection, WHT wireless, GPS, Sync (turns on/off all active accounts, Google, and Exchange), and display brightness.

Personalize

Add your personal touch

Widgets

To create a new widget:

- 1 Find an empty spot on your home screen where you want to add a widget, then touch and hold.
 Tip: You can flick left or right to open other panels on
 - your home screen.

2 Touch Widgets.

3 Touch the type of widget. If necessary, enter the widget settings.

You can personalize widgets with content that you choose.

Ringtones

To personalize your ringtones:

Find it: Menu > Settings > Sound & display > Tablet ringtone or Notification ringtone
To set your vibrate options:

Find it: Menu 🔀 > Settings > Sound & display

> Tablet vibrate

Wallpaper

To apply a new wallpaper:

- 1 Find an empty spot on your home screen, then touch and hold.
- 2 Touch Wallpapers.
- 3 Touch Media gallery to select a photo as your wallpaper, or touch Wallpaper gallery to choose a wallpaper that comes with your Tablet.

Sounds

- To set volume for media and videos, touch **Menu**
- > Settings > Sound & display > Media volume.
 To play tones when using dial Tablet, touch Menu
- > Settings > Sound & display > Audible touch
- To play sound on a screen selection, touch **Menu**
- > Settings > Sound & display > Audible selection.

Display settings

- To set display brightness, touch **Menu**
- > Settings > Sound & display > Brightness.

 To set orientation, touch Menu > Settings
 > Sound & display > Orientation.

 To set animation, touch Menu > Settings
 > Sound & display > Orientation.
- - > Sound & display > Animation.

Note: Some Apps are designed so that your Tablet can "animate" them by rotating, fading, moving, and stretching one or more images.

Quick launch shortcuts

To set keyboard shortcuts to launch your favourite App, touch Menu S > Settings > Applications > Quick launch > Assign Application.

To use a quick launch shortcut, touch Search \bigcirc and the assigned key, for example, Search and B to launch the browser.

You can also add shortcuts directly to the home screen for actions like **Direct dial** and **Direct message**. Just touch and hold an empty spot on the home screen, then touch **Shortcuts** and select a shortcut.

Language & region
Set your menu language and region:
Find it: Menu

Settings > Language & keyboard > Select locale

Photos & videos

See it, capture it, share it!

Photos

Take & share photos

Take that family photo, and post it online for everyone to see.

Note: To get the clearest photos, wipe the lens clean with a soft, dry cloth before you take a photo.

Find it: Press Camera key



A thumbnail of the photo you've just taken is shown on the right. Touch the thumbnail to view it.

- To set the photo as a wallpaper or contact photo, touch Menu

 Set as.
- To send the photo in a message or post it online, touch **Menu** \bigotimes > **Share**.
- To delete the photo, touch Menu 🕏 > Delete.


ullet For more options, touch **Menu** ullet > **More**.

Photo options
In the viewfinder, touch **Menu** S > **Settings** to open the camera menu:

Options	
Store location	Save the latitude and longitude of where the photo was taken so the photo can be displayed on Google Maps or used in other Applications.
Scene mode	Select a setting for better image capture under different lighting environments: Auto, Action, Portraits, Landscape, Night, Beach, Snow, and Sunset.
Options	
Flash mode	Choose from Automatic , On , and Off .
White balance	Compensate for colour differences in different lighting. Set to Auto or, for greater precision, set to Incandescent or Fluorescent for indoor lighting or to Daylight or Cloudy for outdoor lighting.

Colour effect	Apply different colour effects to
	images. Choose Sepia for an
	"antique" look, Mono for black and
	white, Negative to invert the image,
	Red Tint, Blue Tint, or Green Tint
	to apply tints to the image.
Picture size	Set the size of your photo. (You
	may need to reduce the image size
	for a picture message because
	some networks limit the size of files
	you can send.)
Picture	Choose from Fine, Super fine, and
quality	Normal. (Reduce picture quality for
	photos that you send in
	MMS/picture messages.)

Options	
Flash mode	Choose from Auto (for best overall image quality), Infinity , and Macro (for close-ups).

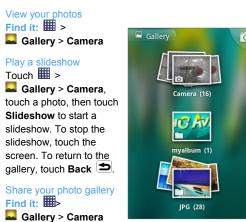

To send your photo in a message or post it online:

- 1 Touch and hold a photo, then touch **Share**.
- 2 Choose how you want to share like WHT, Email, or Messaging.

Manage your photos
Find it: ■ Gallery > Camera Touch and hold a photo, then:

- To delete the photo, touch **Delete**.
- To set the photo as a contact picture or wallpaper, touch More > Set as.

Edit your photos
Touch For Sallery > Camera, touch & hold the photo, then select your edit option.

Videos

Record & share videos

Find it: Press Camera , then drag the switch up.

Note: To get the clearest videos, wipe the lens clean with a soft, dry cloth before you record a video.



Tip: To send your video in a message, set the video quality to Low (for MMS messages) by touching Menu So Settings > Video Quality.

To record a video, touch O. Touch O. again to stop the video, or press Camera key O.

A thumbnail of the video you've just taken is shown on the right. Touch the thumbnail, then touch Menu So.

To send the video in a message or post it online,


- touch **Share**.
 To play the video, touch **©**.
- To delete the video, touch Delete.

Video options

In the viewfinder, touch **Menu** $^{\blacksquare}$ > **Settings** to open the video menu:

Select Low if sending the video in an MMS message, High if storing the video on an SD card
Set the length of your video. Select
30 seconds if sending the video in an MMS/video message. Select 10 minutes or 30 minutes if storing the video on an SD card.
Compensate for colour differences

in different lighting. Set to Auto or, for greater precision, set to Incandescent or Fluorescent for indoor lighting or to **Daylight** or Cloudy for outdoor lighting. Colour effect Apply different colour effects on videos. Choose **Sepia** for an "antique" look, \boldsymbol{Mono} for black and white, Negative to invert the video image, Red Tint, Blue Tint, or Green Tint to apply tints to the video.

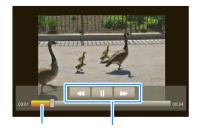

Progress Bar Music

Video Controls

When music is what you need...

Quick start: Music



Categories

Music Controls

Touch a category, then touch a song or playlist.

Tip: When a song is playing, you can add it to a playlist by touching **Menu** Shadd to playlist.

Set up music

40

What music transfer tools do I need?

To put music on your computer and then load it on your Tablet, you need:

- A Computer
- A USB data cable.

You need a memory card

Your music is stored on your memory card. Your Tablet supports removable microSD memory cards. Make sure your memory card is installed.

Tip: To see the available memory on your memory card, touch Menu Settings > SD card & Tablet storage.

What music file formats can I play?

Your Tablet can play many types of files: AMR-NB/WB, MP3, PCM/WAV, AAC, AAC+, eAAC+, MIDI, OGG, and WMA.

What headphones can I use?

Your Tablet has a 3.5mm headset jack for wired stereo listening. You can go wireless with WHT stereo headphones or speakers

Get music

Transfer music using USB

Transfer music files from a computer to your memory card

1 With a memory card inserted, and your Tablet showing the home screen, connect a micro USB data cable from your Tablet's micro USB port to a USB port on your computer.

Note: You may need to remove the USB data cable from the charger power head.

Note: Make sure to connect the Tablet to a high power USB port. Typically, these are located directly on your computer.

Other operating systems may not be compatible.

- 2 Your Tablet shows a USB connection dialog, at the top of the screen. Flick down, then touch USB connection. You are not able to use the files on your memory card while it is connected.
- 3 Touch Mount (if asked) to connect your memory card.
- 4 On your computer, locate and click on the "Removable Disk" icon to access the Tablet's memory card.
- 5 Drag and drop your music to a folder on the memory
 - **Tip:** To help manage your music, create a "Music" folder on your memory card.
- 6 When you're done, select the "Safely Remove 42"


Hardware" feature on your computer. On your Tablet, drag down the notification panel, touch **Turn off USB storage**, and select **Turn off**.

Play music

Music library

Open your music library, then select what you want to play.

Find it: = > • Music

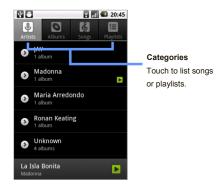

Your music is stored by artists, albums, songs, and

playlists. Touch a category, then touch the song or playlist you want to play. Touch **Menu** > **Party shuffle** to randomly play all your songs.

Music player

Just touch a song or playlist to get going.



Music player controls

- Play/pause Touch / .
- Fast forward/rewind Touch and hold 4 / 10.
- View playlist Touch **!** .
- Shuffle Touch ズ.
- Volume Press the side volume keys.
- View library Touch Menu 🔀 > Library.
 Turn shuffle on/off Touch Menu 🔀 > Party
- Add to playlist Touch Menu 🔀 > Add to playlist.
- Use as ringtone Touch Menu 🔀 > Use as ringtone.
- Delete Touch Menu 🔀 > Delete.

Hide, wake, turn off

Touch **Home** △ to use another App. Your music

will continue to play.

When you see in the status bar, a song is playing, flick down to see details. Touch the song to return to the music controls.

To turn off your music touch

Playlists

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist, or touch **New** to create a new playlist.

To add a song to the playlist you're playing, touch **Menu** Add to playlist in the music player.

To edit, delete and rename playlists, touch and hold the playlist, in the music library.

WHT wireless


Lose the wires and go wireless

46

Quick start: WHT wireless

Find it: Menu $^{\blacksquare}$ > Settings > Wireless & networks

> WHT settings

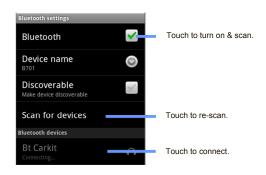

Turn WHT power on or off

Find it: Touch Menu 🚭 > Settings > Wireless & networks > WHT.

Note: To extend battery life, turn WHT power off when not in use.

Connect new devices

Note: This feature requires an optional accessory.

To connect with a new device, you need to pair with it. You only need to do this once for each device

- Make sure the device you are pairing with is in discoverable mode.

 Note: Refer to the guide that came with the device.
- **Note:** Refer to the guide that came with the device for details.
- 2 Touch Menu

 S > Settings > Wireless & networks

 > WHT settings.
- 3 Touch WHT to turn on and scan. If WHT is already on, touch Scan for devices.
- 4 Touch a device to connect.
- 5 If necessary, touch OK, or enter the device passkey to connect to the device. When the device is connected, the WHT indicator appears in the status har.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 10 meters.

Turn Bluetooth on or off, search for available Bluetooth devices, and make your phone visible or invisible to other Bluetooth devices.

- 1. Rename phone: check and rename device name.
- 2. Visibility timeout: set the time of others can find your Device.
- 3. Show received files: show the files download and upload.

Reconnect devices

To automatically reconnect your Tablet with a paired device, simply turn on the device.

To manually reconnect your Tablet with a paired device, touch the device name in the **WHT devices** list.

Disconnect devices

To automatically disconnect your Tablet from a paired device, simply turn off the device. To manually disconnect your Tablet from a paired device, touch the device name in the devices list, then touch Menu 🕏 > Disconnect.

Edit properties

To edit the device name, touch **Menu 8** > **Settings** > Wireless & networks > WHT settings > Device name. Enter a name and touch OK.

Wireless Connection

Home, office, or hotspot

Quick start: Wireless Connection
Find it: Menu

> Settings > Wireless & networks

> Wireless Connection settings

Use a wireless network for fast Internet access and to download data.



Turn Wireless Connection on or off Find it: Menu 🔀 > Settings > Wireless & networks > Wireless Connection. Note: To extend battery life, turn off Wireless Connection power when not in use.

Wireless Connection search & connect

- > Wireless Connection settings.
- 2 Touch Wireless Connection to turn on and scan. If Wireless Connection is already on, touch **Menu**

51

 \blacksquare > **Scan**. Your Tablet lists the networks it finds within range.

Tip: To see your Tablet's MAC address or other Wireless Connection details, touch **Menu** S > **Advanced**.

- 3 Touch a network to connect.
- 4 If necessary, enter Network SSID, Security, and Wireless password, and touch Connect. When your Tablet is connected to the network, the wireless indicator
 appears in the status bar.
- Tip: When you are in range and Wireless Connection is on, you will automatically reconnect to available networks you've connected to before.

USB & memory card

Connect your Tablet and computer, then drag & drop

USB drag & drop

You can transfer your pictures, videos, music, ringtones, and more, from your computer to your Tablet's memory card.

 With a memory card inserted, and your Tablet showing the home screen, connect a micro USB data cable from your Tablet's micro USB port to a USB port on your computer.

Note: You may need to remove the USB data cable from the charger power head.

Note: Make sure to connect the Tablet to a high power USB port. Typically, these are located directly on your computer.

- 2 Your Tablet shows a USB connection dialog at the top of the screen. Flick down, then touch USB connected. You will not be able to use the files on your memory card while it is connected.
- 3 Touch Mount (if asked) to connect your memory card.
- 4 On your computer, locate and click on the "Removable Disk" icon to access the Tablet's memory card.
- 5 Drag and drop your pictures, videos, music, ringtones, and more, to the Tablet folder on the memory card. To help manage your files, you can create more folders inside your Tablet folder.
- 6 When you're done, select the "Safely Remove Hardware" feature on your computer. On your Tablet, drag down the notification panel, touch Turn off USB storage, and select Turn off.

Memory card

Note: You need to install a memory card to use your

Tablet.

Remove or format your memory card

Before you remove or format your memory card you need to unmount it. Touch **Menu** > **Settings** > **SD** card & Tablet storage > Unmount SD card. To format your memory card, touch Format SD card. Warning: All data on your memory card will be deleted.

Tools

Stay on top of things

To turn on an alarm, touch the check box.

When an alarm sounds, touch Dismiss to turn it off or Snooze to delay.

To add an alarm, touch Menu 8 > Add alarm, then enter alarm details.

To enable or disable an alarm, touch the check box.



Your calculator has basic and advanced views. To change views, touch **Menu** S > **Advanced panel** or **Basic panel**. To clear history, touch **Menu** S > **Clear history**.

Management

Stay in control

Wireless manager

Find it: Menu S > Settings > Wireless & networks
Manage all your wireless connections: Wireless
Connection, WHT, airplane mode, & mobile networks.

Airplane mode

Use airplane mode to turn all your wireless connections off — useful when flying.

Update my Tablet

Network

You should not need to change any network settings. Contact your service provider for help.

Touch Menu S > Settings > Wireless & networks > Mobile networks to show options for roaming networks, network selection, operator selection, and access point names.

Security

Help keep your Tablet safe

Quick start: Security

Find it: Menu > Settings > Location & security



Screen lock

Note: You can make emergency calls on a locked Tablet. A locked Tablet still rings, but you need to unlock it to answer.

Lock the screen in the following ways:

- Press Power ①.
- Let the screen time out (don't press anything).
- Switch the power off.

To unlock the screen, press **Power** \bigcirc , or open the Tablet, then, drag \bigcirc to the right.

Set unlock pattern

To set an unlock pattern, that you need to draw to unlock your screen, touch Menu Settings

> Location & security > Set unlock pattern, then follow the instructions to draw your pattern.

To turn the lock off, touch Menu Settings

> Location & security > Require pattern.

To change the lock pattern, touch Menu Settings

> Location & security > Change unlock pattern.

Forgot your pattern or password?

If you forget your pattern or password, see your service provider.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Outer FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 10mm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the back of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 10mm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided. For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refer to FCC website search for FCC ID: 2ABN6S700 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.