

POSH Equal Lite W700

Users Manual

FCC ID: 2ABN6W700

1.	
POSH Equal Lite	1
W700	1
Introduction	2
The Names and Explanation of Each Part	3
Appearance	3
Safety & Notice	3
Start to use	4
Touch & type	4
Assemble & charge	5
Switch On and Off	6
Home screen	7
Quick start: Home screen	7
Text entry	7
Enter text	7
Enter Various Characters	7
Edit Text	7
Select Text	7
Shortcut	7
BT	8
GPS	8
Web application	8
Wireless Connection Networks	8
Browser	8
Multimedia	9
Camera	9
Music	9
Videos	9
FM Radio	9
Gallery	9
Sound Recorder	9
Other application	9
Clock	9
Calculator	10
File manager	10
Connect to a computer via USB	10

Introduction

Thank you for purchasing this product.

For your cellular tablet works property. Please follow the instructions in this manual. To prevent any possible incidents or malfunction, please follow all safety warnings. If because function upgrade cause described in the manual content does not accord with actual products, please refer to our company subsequent release of information.

The Names and Explanation of Each Part

Appearance



Safety & Notice

WARNING: Please pay attention to these guidelines, it's dangerous and may break the law, even the manufacturer will not undertake any responsibility to the user who does not follow with the following recommendations or improper to use the Tablet.

- ◆ If the tablet supports the "Flight mode" function, please set the mode as "Flight mode" on the plane. If not support, please turn off the tablet before boarding, because the tablet may cause interference in aircraft. Please follow any restrictions on the airplane.
- ◆ Switch the device off near the fuel, chemicals, or blasting areas. Keep the device away from the children.
- ◆ Switch off the Tablets in the hospital or other forbidden using Tablet place. The Tablets will affect the normal work of electronic equipment and medical devices, such as pacemakers, hearing aids and other medical electronics equipment.
- ◆ Non-original accessories and components are not provided with repair

warranty qualification.

- ◆ Please do not disassemble your tablet by yourself, if your tablet is out of order, please contact your supplier.
- ◆ Please do not charge the Tablet before battery is installed. Do not short-circuit the battery.
- ◆ Tablet must be charged in the good ventilated and cooling environment, and away from flammable and explosive materials.
- ◆ In order to demagnetization, please keep Tablet away from the magnetic material, such as disks, credit card etc.
- ◆ Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery, and contact with the supplier.
- ◆ Do not use the Tablet in too high or too low temperature environment, and do not expose the Tablet to strong sunlight or high humidity.
- ◆ Do not use liquid or wet cloth with strong detergent to clean the device.
- ◆ This Tablet is provided photograph, video recording and sound recording functions; please follow the relevant laws and regulations to use those functions. Photograph, video recording and sound recording without authorization may violate laws and regulations.
- ◆ While using the network functions, please do not download the files which have virus, do not install any photos and ring tones which have been damaged. If it results the tablet abnormally, our company will not undertake any responsibility.
- ◆ Please dispose of batteries according to local regulations, please recycle when possible. Please do not dispose as household waste.
- ◆

STATEMENT: Our Company reserves the right to revise this manual content without prior notice.

Start to use

Touch & type

Use your fingers to manipulate icons, buttons, menus, the onscreen keyboard, and other items on the touch screen. You can also change the screen's orientation.

To select or activate something, touch it.

To type something, such as a name, password, or search terms, just touch where you want to type. A keyboard pops up that lets you type into the field.

Other common gestures include:

- **Touch & hold:** Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs.
- **Drag:** Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. For example, you can drag to reposition shortcuts on the Home screen.


- **Swipe or slide:** Quickly move your finger across the surface of the screen, without pausing when you first touch (so you don't drag something instead). For example, you can slide a Home screen left or right to view the other Home screens.
- **Double-tap:** Tap quickly twice on a webpage, map, or other screen to zoom. For example, double-tap a webpage in Browser to zoom in, and double-tap again to zoom out.
- **Pinch:** In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen:** On most screens, the orientation of the screen rotates with your device as you turn it. You can change this Display setting.

Assemble & charge

- SD card in

Slide the SD card into the SD card slot with the metallic pins facing downwards. Push the card until it locks into place.

Warning: Use only compatible memory cards for use with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

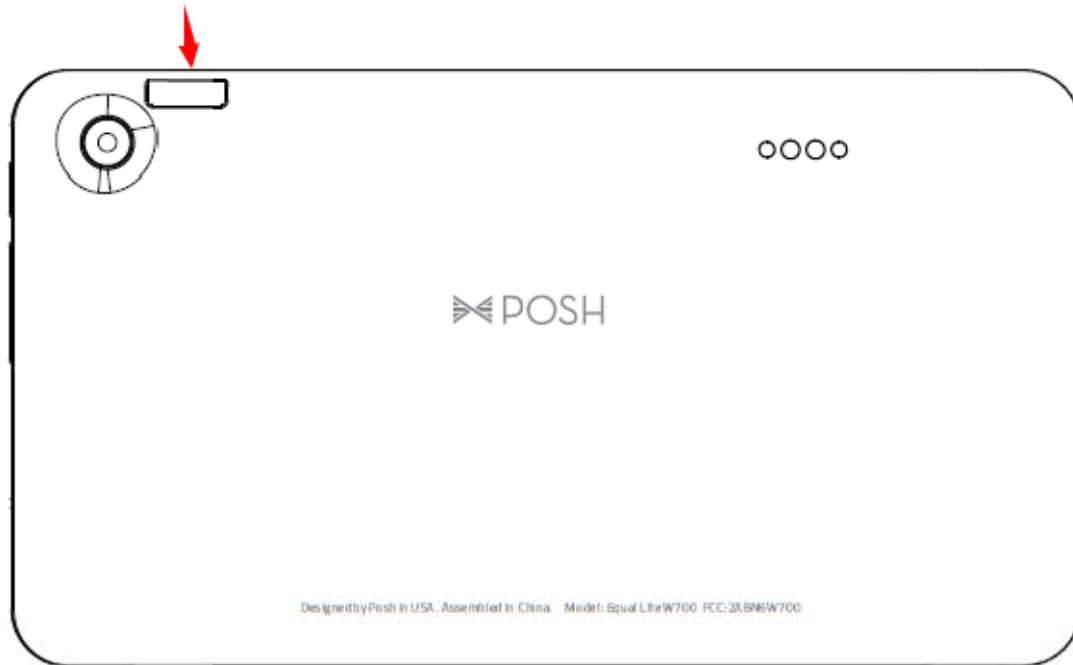

■ Charge up

To charge the battery, plug in the charger connector at your tablet (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. Disconnect the charger from the tablet. Disconnect the charger from the AC power socket.

Attention: Charge the tablet in a well ventilated place in which the temperature is from -10°C to +50 °C. Use the charger provided by the manufacturer only. The use of unconfirmed charger may lead to dangers and violate the manufacturer's warranty clause. If the temperature is too high or too low during the charge, the device will automatically send a warning and stop charging to avoid damage to the battery or any danger.

Switch On and Off

Do a long press the Switch on/off key to switch on/off the tablet.

Home screen

Quick start: Home screen

The Home screen gives you all your latest information in one place. It's what you see when you turn on the tablet. It is the equivalent of the desktop on a computer. It's your gateway to the main features in your tablet. You can customize your Home screen with shortcuts, widgets, folders, and wallpapers.


You need slide the Home screen left or right to view more content in other panels on the Home screen. You can add shortcuts, widgets, folders, etc. to Home screen.

Text entry



Touch the keys of the on-screen QWERTY keyboard to enter text conveniently. You can open this keyboard by touching a text field.

Enter text

Touch the keys on the keyboard to type.

- Use the **Delete key**  to erase characters to the left of the cursor.
- When you finished typing, Press **Back key** to close the keyboard.

Enter Various Characters

- Touch the **Symbols key**  to switch to the numbers and symbols keyboard.
- Touch  on the symbols keyboard to view additional symbols.

Edit Text

You can edit the text you enter in text fields and use menu commands to cut, copy, and paste text, within or across applications. Some applications do not support editing some or all of the text they display. Others may offer their own way to select text you want to work with.

- Touch and hold the text field that contains the text to select the word.
- Cut or copy the text.

Select Text

You can select text for cutting or copying. The selected text is highlighted in blue.

- Touch and hold the portion that contains text. Some options open with icons.
- Move the cursor to select the text.

Shortcut

- To add a shortcut to Home screen
 1. From Home screen, touch Launcher icon.
 2. From APPS tab, you will see application menu.
 3. Touch and hold an application icon until it vibrates, then back to the Home screen, and drag it to the desired location.

- To remove a shortcut on Home screen

If you want to remove the shortcut, you can touch and hold the shortcut icon on Home screen until it vibrates, and then drag it to Remove tab.

BT

BT is a short-range wireless communications technology that devices can use to exchange information over a distance of about 10 meters.

Turn BT on or off, search for available BT devices, and make your tablet visible or invisible to other BT devices.

1. Rename tablet: check and rename device name.
2. Visibility timeout: set the time of others can find your Device.
3. Show received files: show the files download and upload.

GPS

From Settings into the location access, open the GPS satellites.

Web application

Wireless Connection Networks

Wireless Connection is a wireless networking technology that can provide internet access at distance of up to 100 meters. To use Wireless Connection on your tablet, you access a wireless access point, or "hotspot". Some hotspots are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your tablet so it can connect to them.

TIP: Turn off Wireless Connection when you are not using it, to extend the life of your battery.

■ Connect to Wireless Connection Network

1. Touch **Launcher** icon, and from Application menu, touch **Settings**.
2. Touch **Wireless Connection**.
3. Check Wireless Connection to turn it on. The tablet scans for available Wireless Connection networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.
4. Touch a network to connect to it

If the network is secured, you are prompted to enter a password or other credentials (Ask your network administrator for details)

Browser

Use your web browser to view and navigate web pages, add pages as bookmarks, and save pages for offline reading. You can open several windows at the same time and switch among them easily. You can also request the desktop version of a web page if you don't want to view the mobile version.

■ Open the web browser

From your Home screen, touch **Browser** icon or find it: **Application menu > Browser**.

■ Search and address bar

Cancel the download of
the current web page



Enter a search word to
search for a web page, or
enter a web page address
to load a web page

Multimedia

Camera

Take a photo or record a video with the camera in your tablet. You can hold the camera horizontally or vertically. Share a photo or a video with your friends, or upload your photos and videos to a web service.

Music

The tablet comes with a Music player that plays songs, listen to audio book and podcasts you have stored. It gives you a host of setting options to make your listening experience interesting.

Videos

Play video. Enter the video list, scroll the screen to browse and choose the file you want to play.

FM Radio

The tablet comes with an in-built FM Radio. You can listen to FM radio stations, and add them to channel list. You have to plug in an earphone, as the antenna of the FM radio. You can listen to the radio either through an earphone, or through the speaker in the tablet.

Gallery

You can view the captured images, recorded video clips, and downloaded images in the Gallery.

Sound Recorder

You can use the sound recorder to record sounds and also select to save the recordings in your tablet.

Other application

Clock

The clock allows you to view time and date. You can also add an alarm, set the alarm and turn it on. Then, the alarm can ring at a specific time you set.

• Add an alarm

1. From your Home screen, touch **Launcher** icon, then find it: **Application menu > Clock**.

2. Touch .

3. You need set time, ringtone, repeat, vibrate, etc. Then, turn it on.

4. After you finish setting, touch **Done**. Then the alarm can ring at a specific time you set.

Calculator

Keep your calculations on your finger tips with the calculator. Using this application allows you to make calculations. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. You can also use an advanced panel.

File manager

You can manage files, including Download, Music, and Received File. Press Add folder icon to create a new folder or select folders to copy, move and delete.

Connect to a computer via USB

You can connect your tablet to a computer with a USB cable to transfer music, pictures, and other files between your tablet's SD card and the computer.

You cannot share your tablet's data connection and SD card via USB cable at the same time. If you are using USB tethering, you must turn that off first.

FCC statement

This device complies with Part 15 of the FCC Rules: Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference that is received, including any interference that may cause undesired operation.

*RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device is acting as slave and operating in the 2.4 GHz (2412 ~2462 MHz) band.

Ad Hoc function is supported but not able to operate on non-US frequencies. Do not use the device with the environment which below minimum -10 °C or maximum over 50°C .

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.