

# TREESTAND LIGHT

100 Yard Remote Treestand Locator Model No.62510

INCLUDES: Treestand Light

1 "23A" 12V Battery (Remote)

4 "AA" Batteries (Treestand Light)

Tree Strap (10 ft x 1 in)

100 Yard Remote Control

Tree Accessory Holder

Need help finding your stand in the dark? The Primos Treestand Light will help you find it. The Treestand Light attaches to the tree and works by remote up to 100 yards away or manually with a switch on the unit. Choose from 3 settings on the light: Strobe Mode – will flash 2 red lights to locate your stand. Red or Green Mode – Choose from 6 red LED's or 3 Green LED's to light your ladder while climbing up your stand. Main light can be adjusted down 90°.

**IMPORTANT:** Please read all instructions and warnings before using this product to ensure safe and proper use.

## BATTERY INSTALLATION

Remove screw from back of light and install (4) "AA" batteries according to the diagram located inside of the battery chamber. (See Diagram 1a) Remove screw from back of remote and install (1) "23A" 12V battery according to the diagram located inside of the battery chamber. (See Diagram 1b)

## OPERATION

Place the 3-Way switch located on side of unit in the RF position for use with the remote control. The ON position will turn only the (3) green LED's, and OFF position will completely turn off unit. (See Diagram 2)

### To Use Remote Control:

- First turn unit switch to RF position
- Press Red to operate the (6) red LED's in head of light
- Press Green to operate the (3) green LED's in head of light
- Press Red Strobe to operate the (2) red strobe lights
- Press off to turn LED's off

### Double Mounting Options Included:

- Hang light with tree hook (Included)
- Use strap provided by wrapping strap around tree and pulling it snug

Headlamp will rotate 90° to illuminate treestand steps/ladder.

Be sure that switch on unit is turned to OFF position when unit is stored.

Unit switch should be left in RF position during use in field to allow remote operation.

Diagram 1a


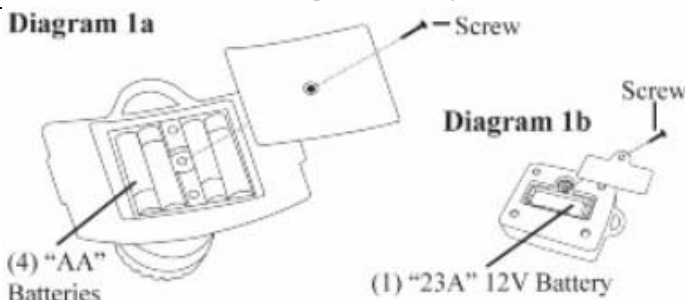


Diagram 2

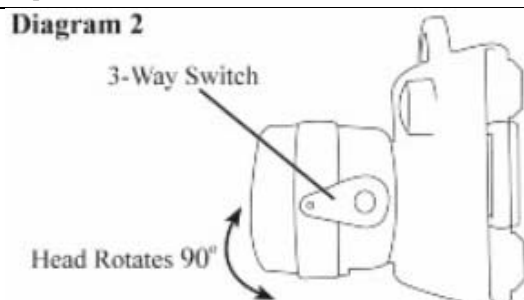

## MAINTENANCE

If unit starts to malfunction, change the batteries in the light and the remote.

When unit batteries are in need of replacement, please use "AA" alkaline batteries.

When battery in remote is in need of replacement, use "23A" / 12V battery.

VISIT OUR WEBSITE AT PRIMOS.COM

## LIMITED WARRANTY

**WARNING:** This product contains chemicals, including lead, known to the State of California to cause birth defects or other reproductive harm. WASH HANDS AFTER USE.

**WARRANTY OF LIABILITY:** By breaking the seal on this package, the consumer accepts all liability associated with the use or abuse of this product. Including, but not limited to, injury of any kind, breakage of product, or damage to any equipment used in conjunction with this product.

Made to Primos® Brand Gear  
Specifications in China



Primos® Hunting Calls™  
604 First St., Flora, MS 39071

CUSTOMER SERVICE  
601-879-9323

**PRIMOS**  
HUNTING CALLS™  
SPEAK THE LANGUAGE™