

XBOX RF 2.4GHZ WIRELESS Advanced Controller

KC-7201D RF

Welcome

Thank you very much for purchasing the RF game-pad. The RF game-pad is one of peripheral equipments for XBOX console. It has vibration function to provide you more realistic feelings, and complete function keys to set your game-pad more powerful. It can convenience charge the rechargeable battery while playing. Before using this controller, please read this manual and retain it for future reference.

Your Xbox™ RF Advanced Controller Package Includes:

Xbox™ RF Advanced Controller
Instruction Manual

Warning: Before using this product please read the Xbox video game system instruction manual for safety, health other information.

Important Ergonomic Information

Some medical studies have suggested that long periods of repetitive motion, coupled with poor habits and an uncomfortable environment may be linked to certain types of physical discomfort or injuries. These include carpal tunnel syndrome, tendonitis, and tenosynovitis. It is important to take frequent breaks during game play, and if you feel aching, numbness, or tingling in your arms, wrists, or hands, Please consult a qualified health professional.

Specification

1. For XBOX console
2. This is a dual shock rumble full analogue RF game pad
3. This product will have 8 channels; Channels must be matched on both RF pad and the host unit. User can use any channel for any port. All channels are stand-alone.
4. Range up to 10M
5. Vibration can enable or disable by the user for increase the battery life
6. Designed for short range wireless communication in 2.4ghz – world wide license free band.
7. Power switch and vibration switch for save your power.
8. Dual vibration motor
9. Operation voltage: 3.3V

10. Operation current: 15MA
11. Vibration voltage: 4.2V
12. Vibration voltage: ≤80MA
13. Charge input: 6VDC 500MA
14. Rechargeable battery 1.2V 750mAh *4pcs

Setting the frequency channel

Before using your playfree controller, please setting the frequency channel on the controller and receiver so that they match.

 
Controller channel setup

1. Set the switches as shown as shown


Receiver setup

1. Set the switches on the side of the receiver as shown


Frequency switch configuration

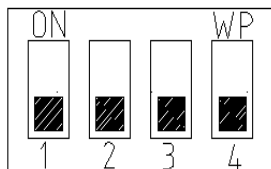


1 PLAYER

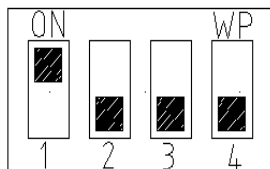 

2 PLAYER

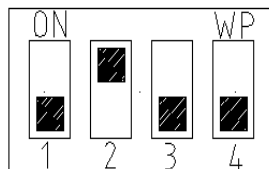 


3 PLAYER

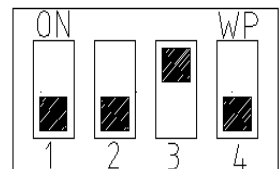 


4

 
PLAYER

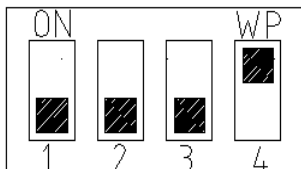


5 PLAYER

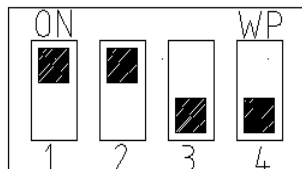 

6PLAYER

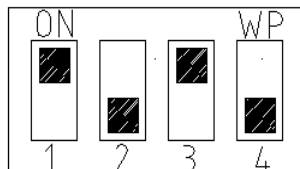 

7PLAYER

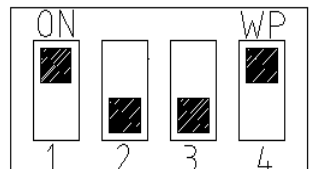 

8

PLAYER

Battery install

1. Remove battery compartment cover from the controller
2. Insert 4x1.2V AAA size batteries, observing the correct polarity, we recommend alkaline batteries
3. Refit the battery compartment cover

Receiver connection

1. Ensure that your ps2 console is switched off

2. Plug the receiver unit into a controller port on your ps2 controller
3. Turn on your ps2 console

Using your playfree controller

Switch on the controller by sliding the power on/off, switch to on.

Saving battery life, please turn off the controller when you have finished playing

Usage of all button

1. Start button

It has start and pause in the games

2. Back button

Back to the previous menu.

3. Turbo button

When you press turbo button, press the fire button at the same time, then undo the turbo and fire button, finally press the fire button, the fire button has turbo function and led flash.

4. Clear button

When you press the clear button, press a fire button at the same time to clear the fire button's turbo function,

5. Fire button

Including X, Y, A, B, white, black. These button have different in different games, you can set them function in some game according your liking

6. D-pad

Move leading actor direction or select option menu in the game

7. L-STICK

Function is same with the D-pad, but, it has analog function, using analog function is more real in same games, racing flight games

8. R-stick

It has analog function, you set it in different games

9. L, R button

They have analog function, you set it in different games

10. Vibration

If you want vibration function, please set vibration ON status in option menu in the game.

Charge operation

When the yellow LED flash, It means batteries power are low, we must charge it now, Insert adapter into the socket of your home, insert other end of the adapter into charge port on the game controller, and the red LED should light, and after four hour the green LED will on, the red LED go out. It means batteries charge enough. We can charge the battery while playing.

Precaution of Usage & Storage

- Do not use or store this joystick in an area where is highly moist, dangerous hot, extra- cold or full of dust.
- Do not expose this joystick to direct sunlight for a long time.
- Do not lay this joystick on a surface that is slanted or unstable.
- Do not apply a strong force upon this joystick or drop it roughly from a high place.
- If you want to clean this joystick, you can use a soft cloth, sock it in clean water or diluted neutral detergent, wring out it thoroughly before wiping the dirt from the case. Never use chemicals such as benzene or paint thinner to clean this joystick.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT