


IMPORTANT SAFETY INSTRUCTIONS

- Do not use this apparatus near water.
- Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vase, shall not be placed on the apparatus.
- The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions. Please charge your unit when it is:
 - The battery icon indicates the power is lower.
 - The unit shuts off suddenly, even if restart again.
 - Tapping any button has no response.
 Please use the supplied AC power adaptor to charge the unit; otherwise, using other adaptors may damage your unit.
- When the player is formatting, uploading or downloading, do not disconnect the connection. It may cause program error if you do this.
- We are not responsible for the memory loss caused by product damage, repairmen or other reasons. Please operate strictly following these instructions.
- Clean only with dry cloth. Do not use aerosol cleaners, benzene, anti-static liquids or any other solvent for cleaning.
- Refer all servicing to qualified service personnel.
- Turn off the unit or use airplane mode when use is prohibited, such as traveling in the aircraft.
- The supplied USB cable is used for data transmission only.
- Non-waterproof.

Illustrations contained within this user manual are for representation only and subject to change.


PRODUCT OVERVIEW

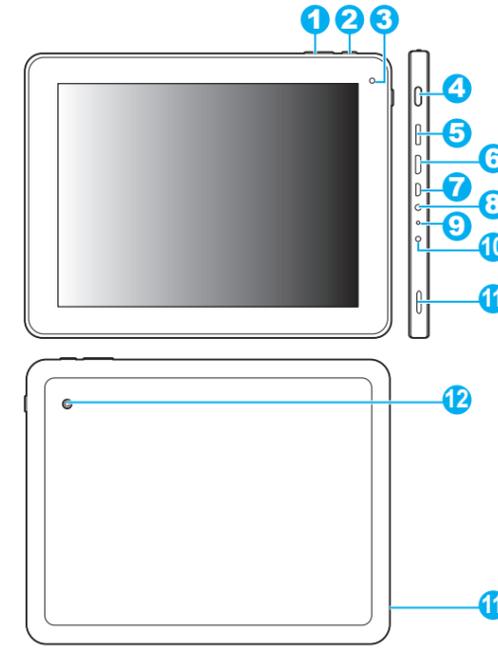

PRODUCT OVERVIEW

- Volume+/- buttons**
Press to increase or decrease the volume level.
- (Return) button**
Press to go back to the main screen.
- Front camera**
Uses to take a photo or record a video.
- (Power) button**
 - Press and hold to turn on/off the unit.
 - Press to wake up the screen.
 - Press to lock the screen.
- TF card slot**
Insert a flash card to extend the memory.
- Micro HDMI port (Optional)**
Outputs signals to external HDMI devices via HDMI cable.
- Micro USB port**
Connect through USB cable to your PC for transferring data.
- (DC IN) jack**
Connect to AC adaptor for charging.
- (Microphone)**
Uses for video conference, talking, and sound recording.
- (Earphone) jack**
Outputs audio to earphone, speakers and amplifier.
- Speakers**
Outputs high-fidelity sound quality sound effect.
- Rear camera**
Uses to take a photo or record a video.

CHARGING THE BATTERY

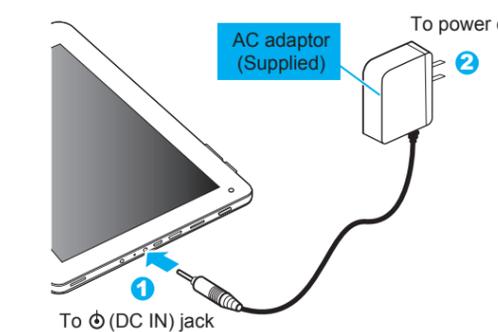


CAUTION!
Please charge the battery fully when use the unit at the first time.


Notes:

- Please charge only using the supplied AC power adaptor.
- Charge your unit at least for 10 hours at the initial two charges. After then you can charge just for 7 hours.


EXPLORING THE MAIN SCREEN

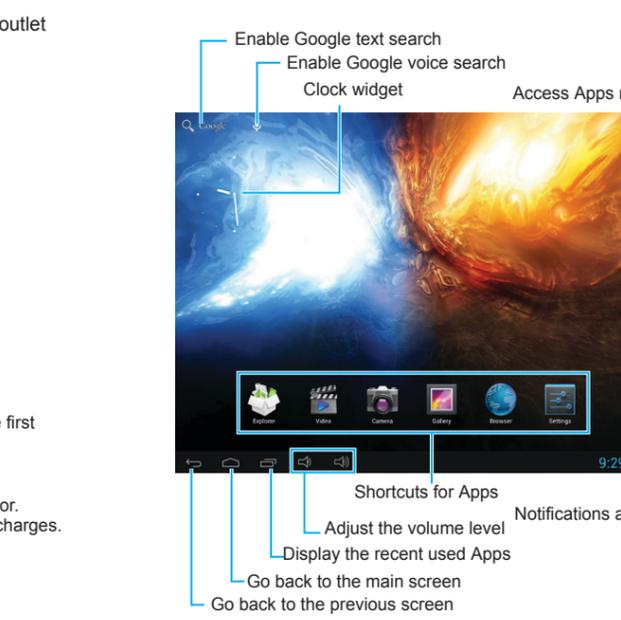

ANDROID APPS AND WIDGETS

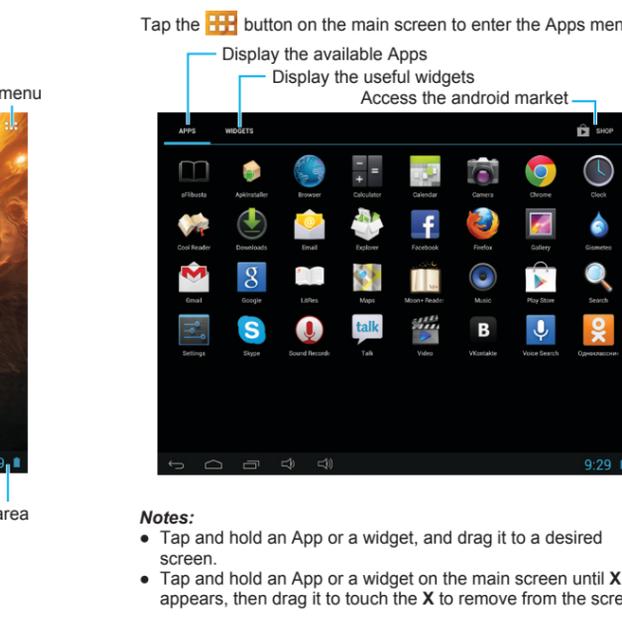

NOTIFICATIONS PANEL

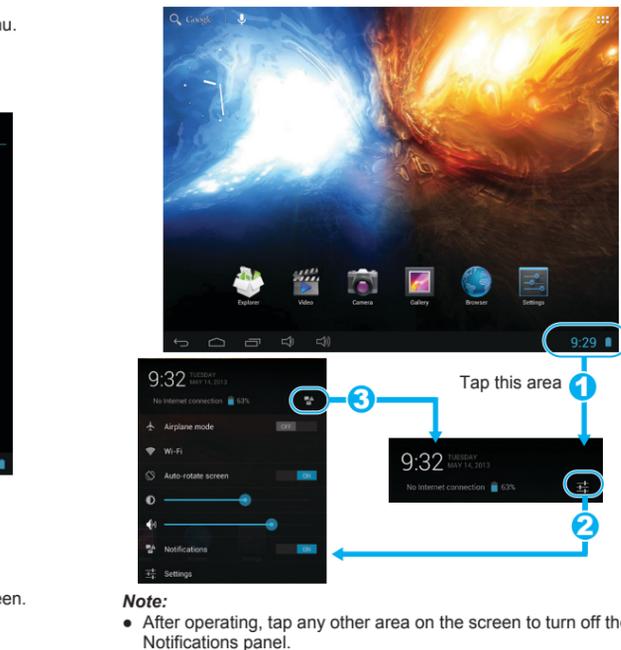


BASIC OPERATION

- ### OPERATING ACTIONS
- Tap:** Tap an item or App once to select the item or launch the App.
- Long-tap:** Tap and hold the current operating interface or area until the relevant items appear, then release.
- Slide:** Slide up/down/left/right to switch between different screens conveniently.
- Drag:** Tap and hold an icon on the desktop and drag to other position.
- Pinch & Spread:** Use two fingers to tap the screen, and adjust the distance between them to zoom in/out the current photo or web contents.

INFORMATION INPUT

When you need to input texts, tap the text input box, the keyboard will appear automatically. After input, tap the button to close the keyboard.

CONNECTIONS

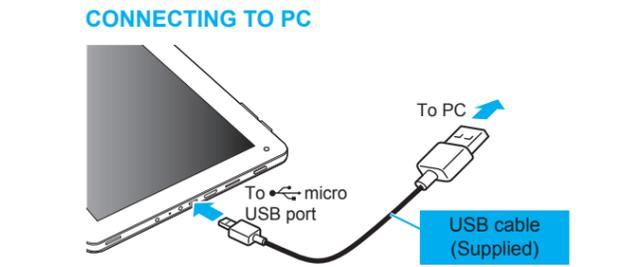

WARNING!


- When connecting to PC, please follow the computer prompts strictly to avoid any data loss.
- Do not disconnect the USB connection during data transferring; otherwise it will cause data damage or loss.

- Connect the one end of the USB cable (supplied) to the unit, and the other end of the USB cable (supplied) to your PC.
- Tap **Turn on USB storage** to transfer files.

CONNECTING TO HDMI DEVICES (Optional)

A HDMI cable can output both video and audio and enables you to enjoy digital-quality video and audio with minimal loss of quality.

CONNECTIONS

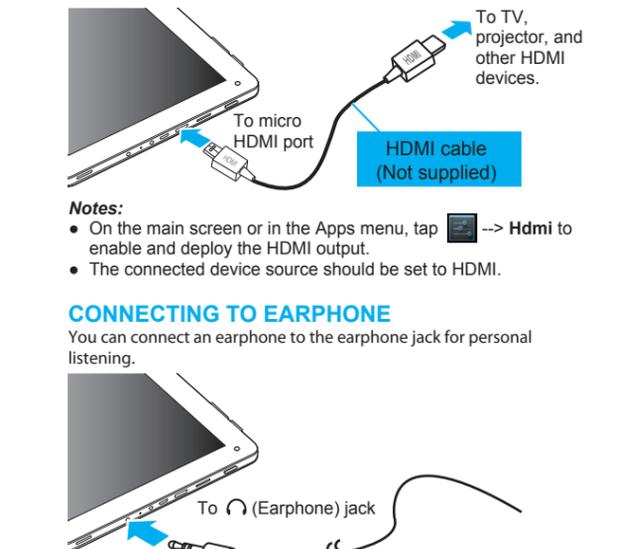

For protecting your hearing, always turn the volume down before plugging the earphones and use only the minimum volume setting necessary to hear your conversation or music.