

## WARRANTY

We are happy to offer a 30 day money back guarantee. If you are for any reason dissatisfied with the purchase of your Clarisonic from an authorized dealer, call Customer Service at 888-525-2747 to make arrangements for the return.

In addition, every Clarisonic Mia comes with a one-year warranty covering any problems resulting from everyday use of the product. Call Customer Service at 888-525-2747 if you feel your Clarisonic is not operating properly.

## ALSO AVAILABLE FROM CLARISONIC

Your Clarisonic Mia Skin Cleansing System includes a cleanser optimized for use with your Clarisonic and a Sensitive brush head. We also offer Normal and Delicate brush heads and cleansers for different skin types. Purchase Clarisonic products from your skin care professional, spa, Clarisonic retailer, or from clarisonic.com.

### RENEWAL SERUM *(for all skin types)*

Apply this translucent soothing serum after using Clarisonic for healthy, radiant skin

### CLEANSERS

Gentle Hydro Cleanser *(for normal to sensitive skin)*

Nourishing Care Cleanser *(for dry and mature skin)*

Refreshing Gel Cleanser *(for oily skin)*

Refining Skin Polish *(for all skin types)*

### BRUSH HEADS

Normal *(gray)*

Sensitive *(white)*

Delicate *(blue)*



### CLARISONIC CLASSIC SKIN CARE SYSTEM

Our classic model with 2 speeds and T-TIMER® setting.



### CLARISONIC PLUS WITH SPOT THERAPY KIT

Three speeds for the face plus a Spot Therapy mode to care for areas of the body needing extra attention.

888-525-2747 | clarisonic.com

## REGISTER TODAY

### Register and become a Clarisonic Preferred Customer!

To register your Clarisonic Mia go to [www.clarisonic.com/Registration](http://www.clarisonic.com/Registration). Sign up for Clarisonic email and gain access to sneak previews of new product introductions, exclusive offers, special event invitations, and great insider skin care tips.

888-525-2747 | clarisonic.com

Clarisonic respects your privacy: we do not share your personal information with any third parties.

Visit [clarisonic.com](http://clarisonic.com) for more comprehensive information including product user guide updates, customer reviews, frequently asked questions, and more.

clarisonic

© Pacific Bioscience Laboratories, Inc. 2009. All rights reserved. Clarisonic and T-TIMER are registered trademarks and Mia and pLink are trademarks of Pacific Bioscience Laboratories, Inc.

Pacific Bioscience Laboratories, Inc.  
13222 SE 30th Street #A1  
Bellevue WA 98005  
Toll Free: 888-5-CLARISONIC or 888-525-2747

Assembled in USA

PBL04584

Mia™

# SONIC SKIN CLEANSING USER GUIDE

Become a Clarisonic Preferred Customer. Details on back.

1  
SPEED

clarisonic



- A HANDLE
- B BRUSH HEAD (Sensitive)
- C ON/OFF BUTTON
- D pLink™ CHARGER
- E PLUG



## YOUR CLARISONIC® Mia™

The essential first step in your daily skin care ritual, Clarisonic is a professional-caliber brush that uses a gentle sonic micro-massage action to cleanse deeply. Clarisonic gently clears pores without harsh abrasion or chemicals, cleansing so effectively that skin care products absorb better. Clinical results include 6x more makeup removed than manual cleansing, reduced appearance of pores, fine lines and wrinkles, and improved skin tone.

### TO USE

**Prior to the first use, charge the Clarisonic Mia handle for 24 hours.**

Wet your skin and the brush head with warm water. Liberally apply cleanser to your skin or to the brush head. Push the on/off button to turn your Clarisonic on and gently move the brush using a small circular motion, beginning on the forehead, then moving to the nose/chin area and the cheeks.

Pressing too hard will impede the motion of the brush and reduce its effectiveness. The outer brushes are designed to contain any residual mist from the brush oscillation, so be sure to hold the brush head flush to your skin.

**To pause** the cleansing cycle for up to 30 seconds, simply press the on/off button.

Mia will automatically shut off after one minute.

The Mia handle is waterproof for use in the shower or bathtub. Refer to Important Safeguards regarding the charger.

### CHARGING


Your Clarisonic Mia is rechargeable with the included pLink™ charger, which magnetically attaches to the handle as shown. A fully charged Mia gives 20 minutes of use.

#### Charge Indicators

Action	Indicator
Attach pLink charger	Brush head pulses once
Charge the handle	LED flashes while charging LED glows solid when fully charged
Detach pLink charger	Brush head pulses once if partially charged Brush head pulses twice when fully charged
After 20 minutes of use, the handle needs to be charged	Brush head pulses and LED flashes Allow 24 hours for a full charge.

The pLink charger is compatible with 100-240 Volts AC; 50/60 Hz, allowing it to be used worldwide.

Gently move the brush using a small circular motion.

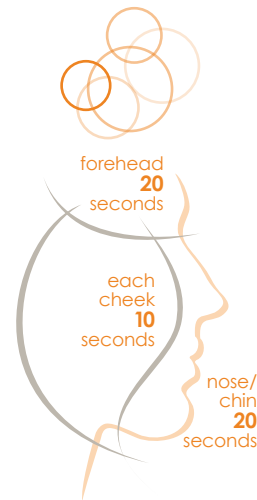

For proper charging place the pLink charger on the handle as shown.

### CARING FOR YOUR CLARISONIC

To keep your Clarisonic in optimum condition, care for it as follows. Do not use abrasive cleaners or chemicals to clean any part of the Clarisonic. Do not put any part of the Clarisonic in a dishwasher.

#### HANDLE

Once a week remove the brush head and wash the handle using warm soapy water to remove any residue buildup. The handle is sealed and fully waterproof. Never attempt to open the brush handle for any reason.

#### CHARGER

**IMPORTANT:** Unplug the charger, then wipe it with a soft, damp cloth. Do not immerse the charger in water.

**NOTE:** The Mia handle is **not** compatible with the charging cradle for full-size Clarisonic models.

#### BRUSH HEADS

We recommend that the Clarisonic brush head be replaced every 90-120 days as the bristles become fatigued and less effective over time. Once a week, remove the brush head from the handle and rinse with warm soapy water to remove any residue.

**To remove** the brush head, ① grip the brush head firmly, then push and twist it counter-clockwise (like a medicine cap). ② Pull the head away from the handle.

**To attach** the brush head, push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

**TIP:** Use the brush head cap to easily remove and attach the brush head with a simple twist.



### IMPORTANT CAUTIONS AND WARNINGS

If you are under a doctor's care for any skin condition or if you think you may have a skin condition, please consult your physician before using the Clarisonic.

We recommend that you **do not** share brush heads if you and/or any other Clarisonic user suffer from any skin conditions.

We recommend that you start with one of the Clarisonic cleansers that has been optimized for gentle daily use with the Clarisonic. **Do not** use the Clarisonic with jagged exfoliating particles such as shells. Clarisonic brushes may be used with soft, rounded exfoliating particles.

Using the Clarisonic to remove makeup may stain the bristles, but will not affect performance. If discoloration occurs, clean the brush head with soap and water. **Do not** use the Clarisonic brush to remove eye makeup.

### IMPORTANT SAFEGUARDS

#### READ ALL INSTRUCTIONS BEFORE USE

When using electrical products, especially when children are present, basic safety precautions should always be followed, including but not limited to the following:

#### DANGER—To reduce the risk of electrocution:

- Do not** place or store the Clarisonic charger where it can fall or be pulled into a tub or sink.
- Do not** place the Clarisonic charger into water or other liquid, or use the charger while bathing.
- Do not** reach for a Clarisonic charger that has fallen into water. Unplug immediately.

Never operate the Clarisonic handle if it is damaged. Do not operate the charger if it has a damaged cord or plug, if it is not working properly, or if it has been dropped into water. Call Clarisonic at 888-525-2747.

**NOTE:** This equipment has been tested and found to comply with Part 18 of the FCC Rules. Refer to our website for further information.