 


SURE·SHOT HD

GAMING PLATFORM

QUICK START MANUAL

SURE SHOT HD GUN CONTROLLER

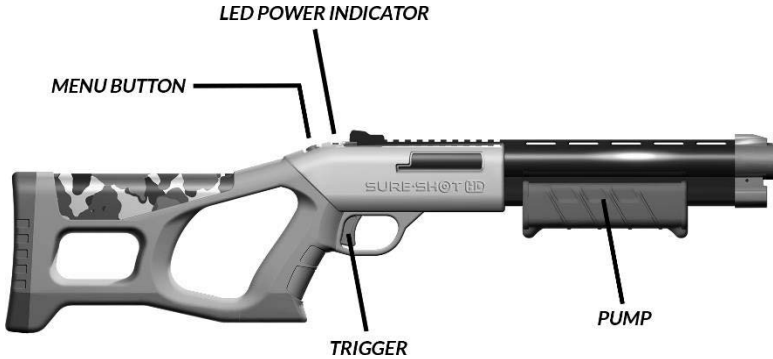

PLATFORM CONTROLS	FUNCTION
Trigger	Make Selection
Pump	Go Back a Screen
Menu	Toggle Button Options

SYSTEM WIDE CONTROLS	FUNCTION
HOLD Pump for 5 Seconds	Re-Calibrate Gun Hardware
HOLD Menu for 5 seconds	Puts Gun in Sleep Mode
Trigger, Pump, Menu	Wake Up From Sleep

GAME CONTROLS	FUNCTION
Trigger	Shoot
Pump	Reload
Menu	Display OS Menu In-Games

GUN CONTROLLER SETUP


1. Open the battery panel on the Sure Shot HD gun hardware using a Philips head screwdriver and insert three (3), fresh 1.5V "AA" batteries.
2. Replace battery panel and tighten the screw to secure the cover.

SURE SHOT HD BASE

Placing the Sure Shot HD Base on your TV

3. Place the Adhesive backed Hook and Loop Strips on Sure Shot HD Base and on the TV to fasten the base to the TV.

Place SureShot HD Base Centered Above (or Below) TV.

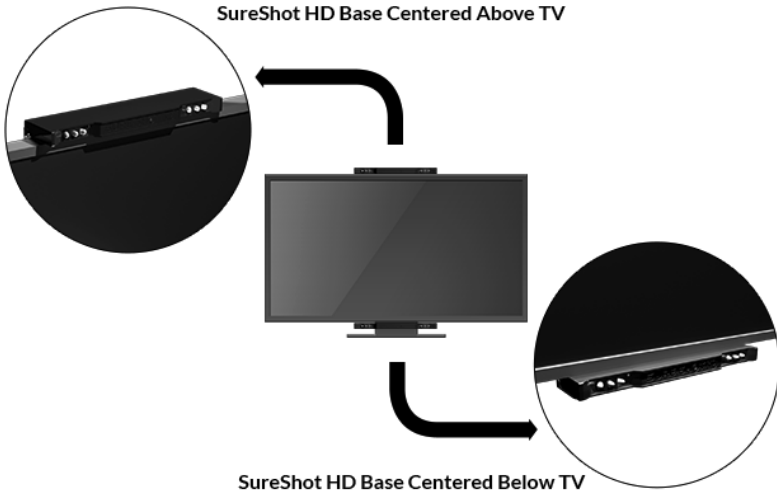


4. Make sure the Sure Shot HD Base is level with the ground and centered either directly above or below the TV, with the LED lights facing forward.

Connecting the Sure Shot HD Base


5. Plug one end of HDMI cable to the HDMI port of the Sure Shot HD Base and connect the other end to an open HDMI port on your TV.
6. If you have a USB port on the back of your TV, plug the circular end of DC 5v power cable into the circular DC 5v port of your Sure Shot HD Base and plug the other end into the standard USB port on your TV.

Connect SureShot HD Base to USB on TV.

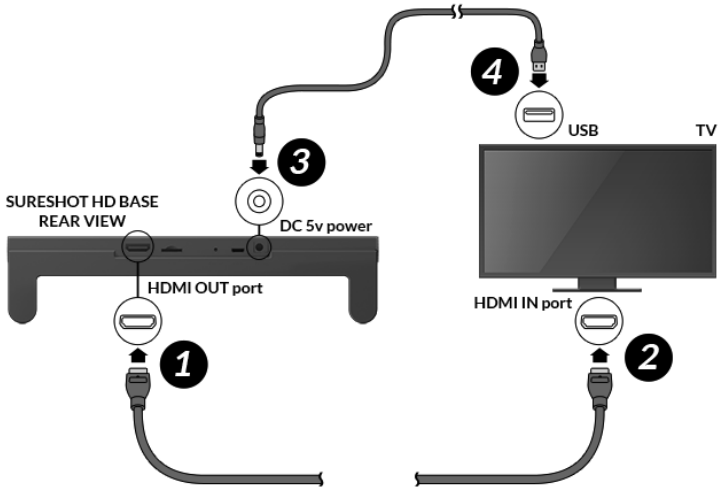

7. If you **do not** have a USB port on the back of your TV, plug the circular end of DC 5v power cable into the circular DC 5v port of your Sure Shot HD Base, plug the other end into a USB AC Adapter (*not included*), and plug the adapter into the wall outlet.

Connect SureShot HD Base to wall socket.

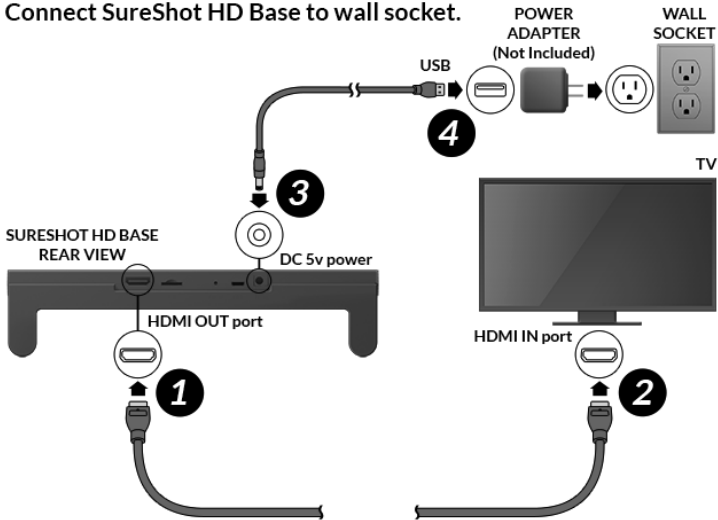


8. Turn on TV, select correct HDMI input connected to the Sure Shot HD Base.
9. Press any button on the gun to turn the power on.
10. Follow the on-screen instructions for calibration and account creation.

GUN CALIBRATION

Calibration teaches Sure Shot HD your location while playing the game and TV screen size. For optimal performance, follow these guidelines:

- Make sure the Sure Shot HD Base is firmly and squarely attached to your TV and that it is level with the ground and centered directly above or below the TV, with the LED lights facing forward
- Make sure the gun has three (3) fresh 1.5V “AA” batteries (not included)
- For TVs smaller than 65”, the tip of the gun should be between 5 and 8 feet away from the TV
- For TVs larger than 65”, the top of the gun should be between 8 and 10 feet away from the TV
- Reduce any conflicting light sources near the TV

USING A GUEST ACCOUNT

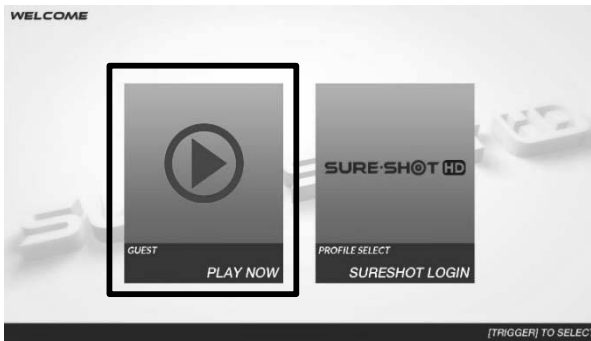

To get started playing on your Sure Shot HD system, with a guest account, aim at the **PLAY NOW** button and pull the trigger.

IMPORTANT

While using a guest account, you will not be able to use many of the network features like the Sure Shot Shop, friend management, and important operating system and game updates.

This will immediately log you into the Guest Account and take you directly to the Main Menu where you can play your games immediately.

USING THE MAIN LOBBY

This is the main lobby for the Sure Shot HD platform. The content area in the middle of the screen shows all of the current games on the system, each of which can be played by simply aiming at the large icon and pulling the trigger.



To enter the Shop and look at all of the available titles, aim at the **Sure Shot Shop icon** and pull the trigger.


Shooting the **MORE buttons** on the left and right side of the screen will scroll through all of the available games that you've purchased.

CREATING A SURE SHOT HD ACCOUNT


You are not required to create a Sure Shot HD account, but without one, you will not be able to access the Sure Shot Shop, updates to your existing games, or other network features.

- Accounts are completely free
- You must have an internet connection to use all Sure Shot HD services
- Sure Shot HD will sometimes require system software to be up-to-date for certain network features to continue functioning


To create your Sure Shot HD account, aim at the **SURE SHOT HD LOGIN** button on the right and pull the trigger.

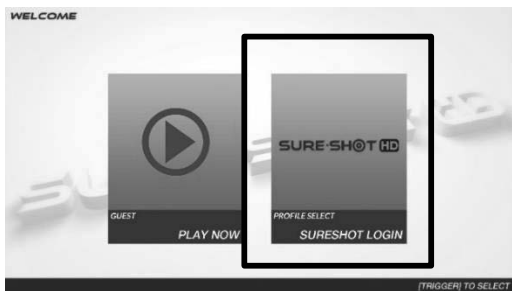


1. Select Wi-Fi Access Point, if available

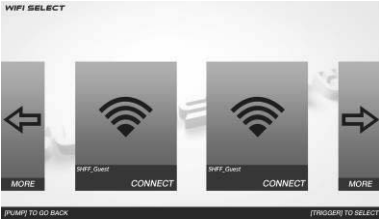

5. Enter your profile username

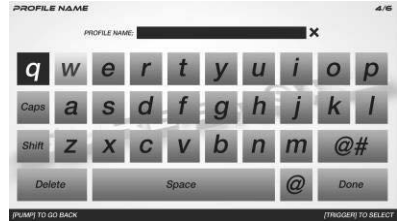


2. Enter your Wi-Fi password, if necessary

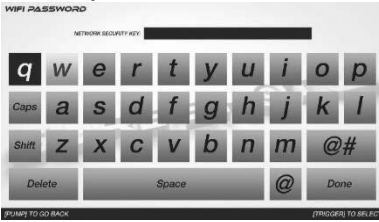


6. Enter your profile password




3. Enter your first and last name

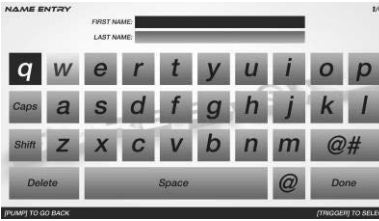


7. Choose an Avatar

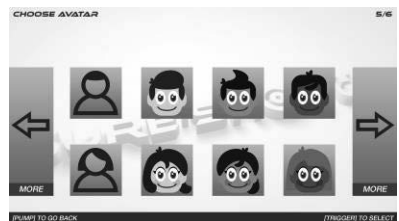

4. Enter your email address

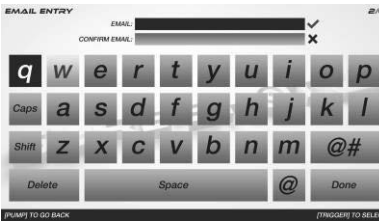

8. Confirm the Account

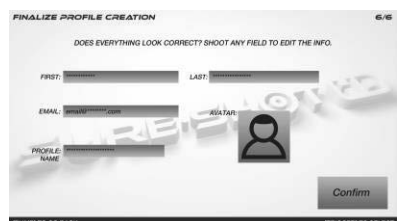

PURCHASING FROM THE SURE SHOT SHOP

New titles will be available for purchase in the Sure Shot Shop.

 

To access these titles, aim at the Store header above the game icons, and pull the trigger. This will bring up a list of titles that are available for purchase.

Once the list of games has appeared, aim the reticle at a game you want to examine and pull the trigger. This will bring up more in-depth details about the game such as the description, screenshots, and sometimes gameplay videos.


To make a purchase, simply aim the reticle at the **BUY BUTTON** and pull the trigger. Once you pull the trigger, you'll see a confirmation screen where you can choose to go Back or continue with to Checkout.

If this is your first time making a purchase, you'll need to add a credit card.

If you've already added a credit card from previous purchases, then you will see those cards in the list and you can simply aim the reticle at the card and pull the trigger to select it.

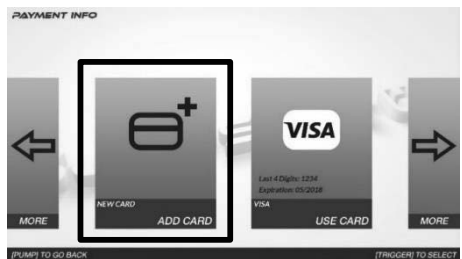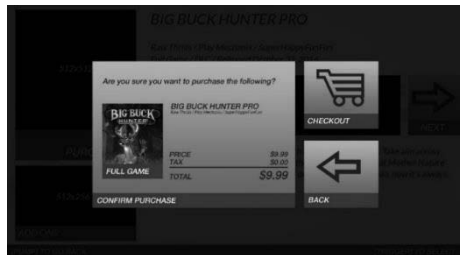

To add a new card, aim at the ADD CARD button and pull the trigger. This will take you through the steps of entering in all of your card information.

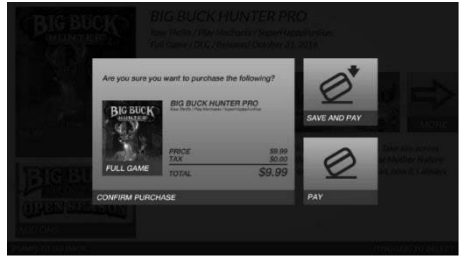

At the end of this sequence, you'll have the option to **SAVE & PAY** or **PURCHASE**.

SAVE & PAY will allow you to save your card information for future purchases, so that you don't have to enter all the information in again.

Selecting **PAY** will just make the purchase and not save any credit card information for future purchases.

After selecting either **SAVE & PAY** or **PURCHASE** we will submit the transaction for approval. If there are any issues with the transactions, you will have a chance to edit the information and re-submit the payment.

DELETING A CREDIT CARD

The Sure Shot HD system allows you to delete your card information at any time by going into your Profile from the Main Menu and selecting **SETTINGS**.



From this screen, select **PAYMENT INFO**.



On this screen, press the **Menu button** on the gun and the option to delete cards will appear below each card in the list. Aim at the card you want to delete and pull the trigger to delete it.



GUN SLEEP MODE / TURNING OFF SURE SHOT HD

Caution

Disconnecting the DC power cable during gameplay may cause data corruption or permanent damage to the system. Always make sure the Sure Shot HD box is in the main Sure Shot HD Lobby before unplugging the power.

Turning off Power Completely

Disconnect the DC 5v power plug from the back of the Sure Shot HD box.

Putting Gun into Sleep Mode

The Sure Shot HD gun will automatically go into Sleep Mode in 2 minutes if there's no connection to the Sure Shot HD box. It will also go to sleep within 5 minutes if it's connected, but there's no activity.

The gun can manually be placed in Sleep Mode by holding the MENU button for 5 seconds.

WIRELESS NETWORKING FEATURE

The 2.4 GHz range of radio waves used by the wireless networking feature of this product is a range shared by various devices. This product has been designed to minimize the effect of other devices using the same range. However, in some cases interference from other devices may reduce the connection speed, shorten the signal range or cause the connection to be terminated unexpectedly.

When using the Sure Shot HD™ system's scan function to select a wireless LAN access point, access points that are not intended for public use may be displayed. Only connect to an access point that you are authorized to use.

MICRO SD EXPANSION CARD

The Sure Shot HD box features a built in Micro SD card reader that can read most SD cards up to 32GB. However, this functionality is currently disabled will be available at a later time.

DELETING APPLICATIONS

 
At some point you might need to free up storage space on the set top box to so that you can download new games or applications. Deleting a game or application from your set top box does

not mean you lose it. Your privileges have been saved to your account and you can re-download those applications at any time from the Sure Shot Shop screen.

To delete a game or app, go to **MY GAMES**.

From this screen, press the **MENU** button on the top of the gun hardware and the space below the game icon will turn red with the **UNINSTALL** text inside that red area.

Now, aim the gun at the app or game you wish to uninstall and pull the trigger.

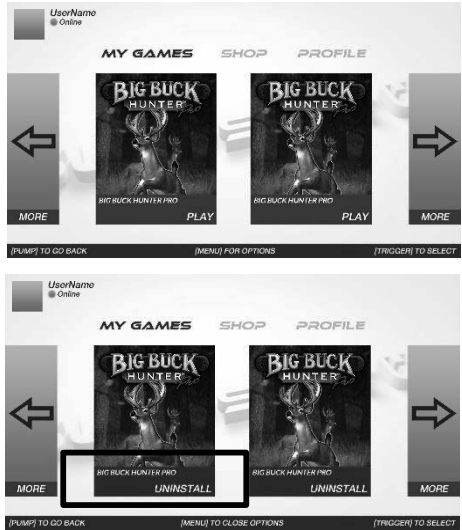

PHOTOSENSITIVITY/EPILEPSY WARNING

Please read before using this game or allowing your children to use it. A very small percentage of people are susceptible to epileptic seizures or loss of consciousness when exposed to certain flashing lights or light patterns in everyday life. Such people may have a seizure while watching television images or playing certain video games. This may happen even if the person has no medical history of epilepsy or has never had any epileptic seizures. If you or anyone in your family has ever had symptoms related to epilepsy (seizures or loss of consciousness) when exposed to flashing lights, **consult your doctor prior to playing**.

We advise that parents should monitor the use of video games by their children. **DISCONTINUE USE IMMEDIATELY** and consult your doctor if you or your child experience:

- dizziness
- blurred vision
- eye or muscle twitches
- loss of consciousness
- disorientation
- any involuntary movement or convulsion

WARNING - BATTERY INFORMATION

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging.
7. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

WARNING - REPETITIVE MOTION INJURIES

Playing video games can make your muscles, joints or skin hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome or skin irritation:

- Avoid excessive play. Parents should monitor their children for appropriate play.
- Take a 10 to 15 minute break every hour, even if you don't think you need it.

- If your hands, wrists or arms become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

WARNING - RADIO FREQUENCY INTERFERENCE

The Sure Shot HD system can emit radio waves that can affect the operation of nearby electronics, including cardiac pacemakers.

- Do not operate the Sure Shot HD system within 9 inches of a pacemaker while using the wireless feature.
- If you have a pacemaker or other implanted medical device, do not use the wireless feature of the Sure Shot HD system without first consulting your doctor or the manufacturer of your medical device.
- Observe and follow all regulations and rules regarding use of wireless devices in locations such as hospitals, airports, and on board aircraft. Operation in those locations may interfere with or cause malfunctions of equipment, with resulting injuries to persons or damage to property.

END OF PRODUCT RECYCLING

The Sure Shot HD™ system is made of many materials that may be recycled. Follow local regulations when disposing of the system.

WARRANTY INFORMATION

You may need only simple instructions to correct a problem with your product. First, please visit www.shff.com/support for further information regarding the Sure Shot HD platform.

If you're unable to resolve the issue through our website or through Customer Support, verify on your original receipt if the product is eligible for replacement.

HARDWARE WARRANTY: Super Happy Fun Fun, Inc. warrants to the original purchaser that the hardware product shall be free from defects in material and workmanship for ninety (90) days from the date of purchase.

If a defect covered by this warranty occurs during this warranty period, Super Happy Fun Fun will repair or replace the defective hardware product or component, free of charge. The original purchaser is entitled to this warranty only if the date of purchase is registered at point of sale or the consumer can demonstrate, to Super Happy Fun Fun's satisfaction, that the product was purchased within the last 90 days.

SERVICE AFTER EXPIRATION OF WARRANTY: Please visit our website at www.shff.com/support for troubleshooting information and repair or replacement options. In some instances, it may be necessary for you to ship the complete product, FREIGHT PREPAID AND INSURED FOR LOSS OR DAMAGE, to Super Happy Fun Fun. Please do not send any products to Super Happy Fun Fun without contacting us first.

WARRANTY LIMITATIONS THIS WARRANTY SHALL NOT APPLY IF THIS PRODUCT: (a) IS USED WITH PRODUCTS NOT SOLD OR LICENSED BY SUPER HAPPY FUN FUN (INCLUDING, BUT NOT LIMITED TO, NON-LICENSED GAME ENHANCEMENT AND COPIER DEVICES, ADAPTERS, SOFTWARE, AND POWER SUPPLIES); (b) IS USED FOR COMMERCIAL PURPOSES (INCLUDING RENTAL); (c) IS MODIFIED OR TAMPERED WITH; (d) IS DAMAGED BY NEGLIGENCE, ACCIDENT, UNREASONABLE USE, OR BY OTHER CAUSES UNRELATED TO DEFECTIVE MATERIALS OR WORKMANSHIP; OR (e) HAS HAD THE SERIAL NUMBER ALTERED, DEFACE OR REMOVED. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED IN DURATION TO THE WARRANTY PERIODS DESCRIBED ABOVE (3 MONTHS, AS APPLICABLE). IN NO EVENT SHALL SUPER HAPPY FUN FUN BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM THE BREACH OF ANY IMPLIED OR EXPRESS WARRANTIES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR EXCLUSION OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state or province to province. Super Happy Fun Fun's address is: Super Happy Fun Fun, Inc. 11044 Research Blvd. Suite C-220, Austin, TX 78759

This warranty is only valid in the United States and Canada.

COPYRIGHT AND TRADEMARKS

Copyright 2016 Super Happy Fun Fun, Inc. All Rights Reserved.
Big Buck Hunter Pro Copyright © 2006 Play Mechanix, Inc. All Rights Reserved
Big Buck Hunter Pro Open Season Copyright © 2009 Play Mechanix, Inc. All Rights Reserved
©2012 Play Mechanix, Inc. All Rights Reserved

CREDITS

Mark Pierce	Concept and Design, Executive Producer
Bill LaCoste	OS Design, Director of Product Development
Athanasios Ikonomou	Senior Lead Engineer
Manickam Appuraj	Senior Server Engineer
Howard Delman	Gun Hardware Design, Electrical Engineer, and Firmware
Asmir Gogic	Gun Firmware Engineer
Philip Armstrong	Operating System Engineer
Wade Paterson	Client Engineer
Stephen Riesenberger	Producer
Billy Sagulo	Art Director
Mark Vearrier	Artist
Jonathon Ruland	Artist
Orlando Dungca	Quality Assurance
Dave Meyer	Marketing and Logistics
Mark Gruber	Industrial Design
John Ducusin	Motion Graphics
Orange Ball Creative	Packaging and Website
Hamsterball Studios	System Sound Design

Very Special Thanks: Eugene Jarvis and MobiDev, LLC.

Special Thanks: Andrew Eloff, Erik Chan, CH Sui, Rainer Wong, Apple Li, Tony, George Petro, and John Ma

FCC AND IC NOTICE

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated with at least 20 cm (8 in) and more between the radiator and person's body.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

The wireless controller complies with FCC/IC radiation exposure limits set forth for uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules.

This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption rate (SAR).

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with Class B FCC limits.

You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. If you have questions about this product, visit www.sureshothd.com.

You can also write to: Super Happy Fun Fun, Inc., Customer Support, 11044 Research Blvd., Suite C-220, Austin, TX 78759 U.S.A.

Declaration of Conformity

Trade Name: Sure Shot HD Gaming
No.: SMEST001A
Responsible Party: Super Happy Fun Fun, Inc.
Address: 11044 Research Blvd.
Suite C-220
Austin, TX 78759 U.S.A.
Telephone No.: 512-349-7885

This product has been rated by the Entertainment Software Rating Board. For information about the ESRB rating please visit www.esrb.org.

