

SURE·SHOT HD

3-STEP QUICK START

1 WHAT'S IN THE BOX

Gun Controller


Requires three AA batteries
(not included)



Sure Shot HD Console & fasteners




HDMI cable

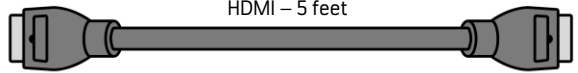


HDMI – 5 feet

 USB power cable



USB – 5 feet

Quick Start Guide, Profile and FAQs, & Legal Notice

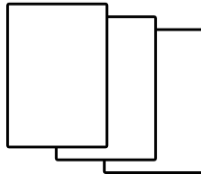

Tools Needed: **Phillips screwdriver** (not included)




2

SET UP AND POWER ON


Secure **Sure Shot HD Console** above or below TV Using **fasteners** and **flaps**.

Flip **console flaps** down for more stability.

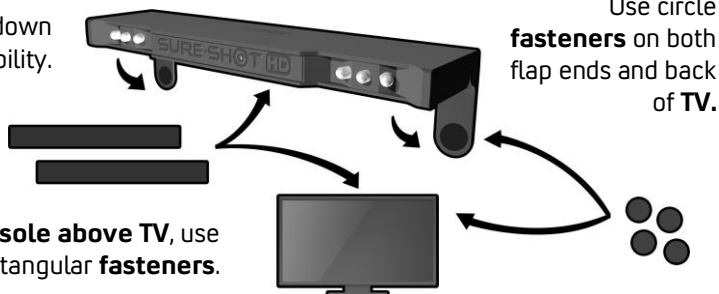

If securing **console above TV**, use rectangular **fasteners**.

Connect the **HDMI cable** to the **TV** and **Sure Shot HD Console**. Connect the **USB power cable** to the **Sure Shot HD Console** and **power source** (see **!** below).

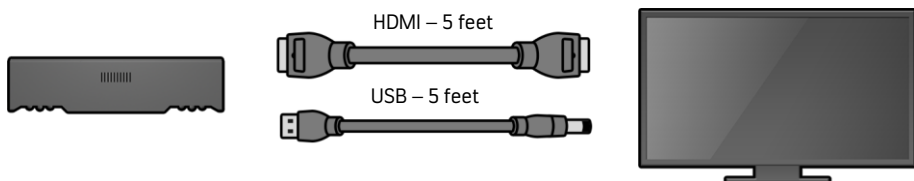

Turn on your **Sure Shot HD Console** by turning on your **TV**.




The **Sure Shot HD Console** needs 2.0 amps to work properly. Use the following **power source**:

USB on **TV** (2.0 amps)
Some TVs **do not** provide enough power.



OR

2.0 amp **USB wall adapter**
(Not included. Comes with most smart phones)

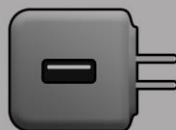





CALIBRATE GUN AND CHOOSE YOUR GAME

Calibration is how **Sure Shot HD** knows where you are **aiming on your TV**.

Put three (3) fresh **AA batteries** in your **gun** and press the **button** on top of your **gun** to turn it on.

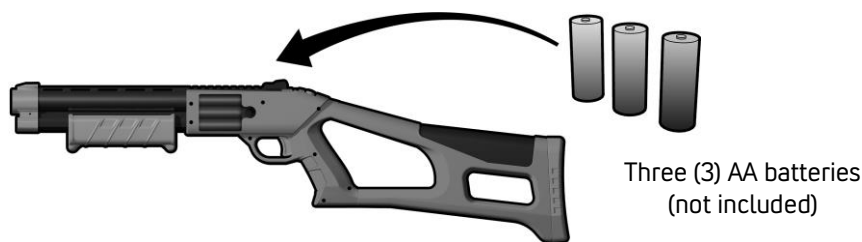


Stand 6 to 10 feet from your TV for best play.
Calibrate your aim for best shooting results.

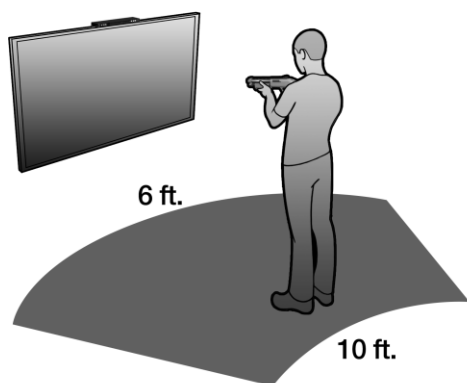

You can **recalibrate** at any time by **holding the pump back for 5 seconds**.

Select **PLAY NOW**
to get to **My Games**.

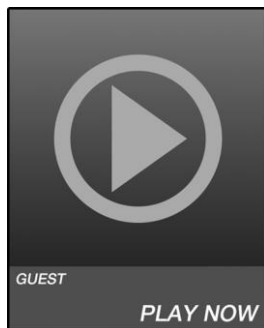

Select **Big Buck Hunter® Pro™** to

PLAY!



! **Connect to Wi-Fi to update** your Operating System and games. Create a **Free Sure Shot HD Account** to access the **Sure Shot Shop** for great games and more!



For more help, FAQs, and info
Visit www.sureshothd.com!