

SURE·SHOT HD

GET ONLINE! HAVE FUN!

GET MORE GAMES, PLAY IN ONLINE TOURNAMENTS, AND UPDATE OPERATING SYSTEM

 
Create a **FREE Sure Shot HD Account and Profile** to access the **Sure Shot Shop** for more games and add-ons.

To start, select **SURESHOT LOGIN**.



You can **SKIP** connecting to Wi-Fi and finish creating the account. However, you must connect to Wi-Fi to save the account and access the shop.

Next, select **NEW PROFILE/CREATE**.

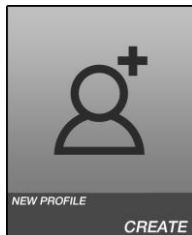

Accounts let you play in Big Buck Hunter® Pro™ online tournaments.

Complete the next 6 steps:

- First Name and Last Name
- Email
- Password (min. 4 characters)
- Username (min. 2 characters)
- Avatar
- Finalize

...AND YOU'RE DONE!

CONNECT TO WI-FI

Connect to Wi-Fi to keep your games and operating system up to date with the latest versions.

Select Wi-Fi from the menu.



Make sure you have your Wi-Fi name and password to connect.

Select your Wi-Fi name from the list and sign in with your Wi-Fi password to connect.



The **Sure Shot Shop** is always adding games to its library. Be sure to **sign in** to see what's brand new at the **Sure Shot Shop!**

MY SURE SHOT HD CONSOLE KEEPS RESTARTING OVER AND OVER AGAIN AFTER I PLUG IT IN TO THE USB PORT ON MY TV - WHAT SHOULD I DO?

The USB port from your TV is most likely not providing enough power. To power the **Sure Shot HD Console**, a power output of at least **2.0 amps** is required. Some TVs have a power output of less than **2.0 amps**.

Please use a **USB Wall Adapter** (not included, but standard with most smart phones) and plug it into a standard wall outlet.

MY GUN CONTROLLER DOES NOT SEEM TO BE SHOOTING ACCURATELY - WHAT DO I DO?

Make sure the **gun controller** has **fresh batteries** - low battery levels can affect **gun controller** accuracy greatly.

Stand far enough from the **Sure Shot HD Console** - **6 to 8 feet for smaller TVs and 8 to 10 feet for larger TVs**.

Try calibrating the **gun controller** again. Pull back and hold the pump on the **gun controller** for **5 seconds** to start the recalibration sequence. It is recommended to calibrate when you start, change the distance or shooting angle, or change the lighting in the room.

MY AUDIO / VIDEO IS HAVING ISSUES. WHAT SHOULD I DO?

Check your **HDMI cable** to make sure it is properly seated into your TV and the **Sure Shot HD Console**. If the problem persists, please try another HDMI cable and / or another HDMI port on your television.

MY CURSOR SEEMS TO FLOAT OR LAG AS I MOVE IT AROUND THE SCREEN

Many TVs these days have extra image processing that creates better cinema quality experiences, but this extra processing can also create large amounts of input lag for all gaming consoles.

For the best gaming experience, make sure your TV is set to **GAME MODE**.

Please check out our website **SureShotHD.com** for info on how to enable **GAME MODE** for some of the major TV brands.

WHAT IS THE RECOMMENDED SET UP FOR MY SURE SHOT HD CONSOLE WITH THE TV?

The **Sure Shot HD Console** should be centered **above** or **below** the TV for the best experience. Set up **above** the TV is recommended for TVs up to **65 inches**. Set up **below** is recommended only for TVs up to **43 inches**.

HOW DO I SHUT DOWN MY SURE SHOT HD CONSOLE?

To completely shut down the **Sure Shot HD Console**, **unplug** the **USB power cord** from the **power source** or **back of the console**.

The **Sure Shot HD Console** will automatically go into sleep mode **5 minutes** after all **gun controllers** are powered off.

For more help, FAQs, and info
Visit **www.sureshothd.com**!