


Instruction Manual
SM-3795

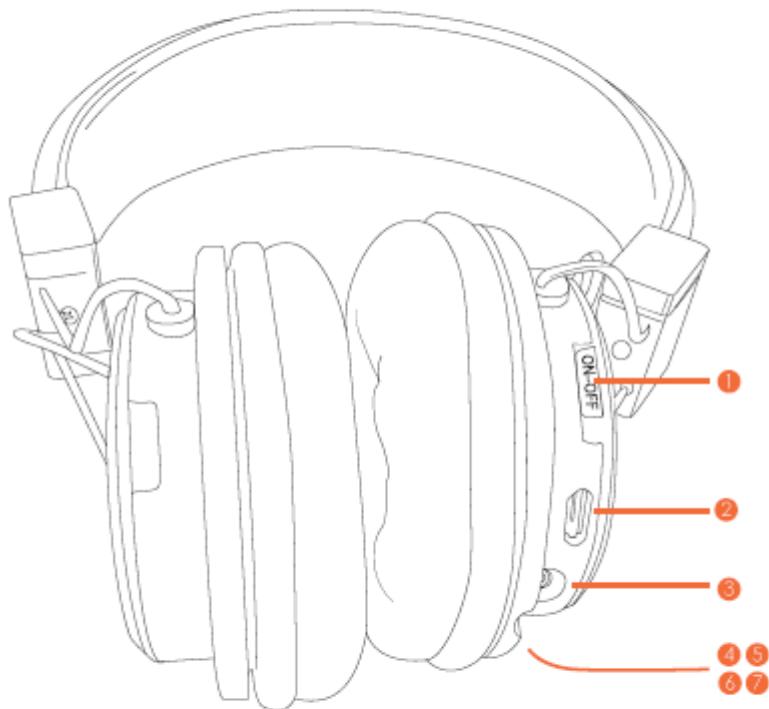

1. Power ON/OFF switch
2. Micro-USB Charging Input Port
3. Line-In AUX port
4. Play/Pause
5. Next Track (Volume Down)
6. Previous Track (Volume Up)
7. Volume Control

Tech Specifications:

USB Charge	DC 5V IN
Bluetooth Version	3.0
Bluetooth Distance	10m
Frequency	20Hz-20KHz
SNR	88dB
Charging Time	≤ 2 Hours

Instructions on Use:

SAFETY INSTRUCTIONS: it is strongly recommended to fully charge the device and completely read the instructions before first Bluetooth use.

- Do not attempt to repair. Seek professional consultation if speaker isn't working.
- Do not insert foreign objects into speaker.
- Keep out of reach of children.
- Do not use near or around water as this could result in electrocution.
- Keep away from flame.

1. To Charge the Tex:

- To charge the Tex Bluetooth Speaker, insert the Micro-USB end of the cable into the charging input port on the speaker.
- Insert the opposite end into a computer USB port or a compatible AC wall adapter.
- While the Tex is charging, the LED indicator will light red, and shut off when complete.

2. LED Indicator:

- When the Tex is in pairing mode, the LED indicator will flash blue. Once the devices are paired, the LED light will continuously flash.
- When the Tex is charging the LED indicator will light red until fully charged, and then the light will turn off.

3. Bluetooth Mode (Mobile Device):

- When the device is powered ON to begin pairing, press and hold the power button for around 6 seconds. The LED light will flash blue to indicate the Tex is in pairing mode.
- Follow the instructions on your mobile device, and select **Tex** from the list.
- Once selected, you can now play audio from your device through the Tex Bluetooth Headphones.
- *In Bluetooth® mode, pressing the button once will go to the previous track, holding the button down will decrease the volume.*

4. Line-In Mode:

- Connect the provided 3.5mm audio cable into the Line-In AUX port.
- Use the native control on the connected device to play audio through the Tex Bluetooth Headphones.

5. Power Button:

- Please charge the Tex fully before its first use.
- To turn the Tex on/off, hold down the power button for two seconds.

6. Play/Pause/Previous/Next/Volume:

- Press the knob to play or pause the current track.
- Press the knob once to answer an incoming call.
- Press the knob once to hang up a phone call.
- Hold down the knob to reject an incoming call.
- Press the button twice to redial a phone call.
- *In Bluetooth mode, rotate the knob once to go to the next/previous track, rotating and holding the knob will increase/decrease the volume.*

7.FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.