

DVD-ROM & CD-R/RW COMBINATION DRIVE

CW-8572-B / CW-8572-C

INSTRUCTION MANUAL

Please read through these instructions before operating this unit.

Interface : ATAPI

DVD-ROM & CD-R/RW COMBINATION DRIVE CW-8572-B / CW-8572-C INSTRUCTION MANUAL

Please read through these instructions before operating this unit.
Interface : ATAPI

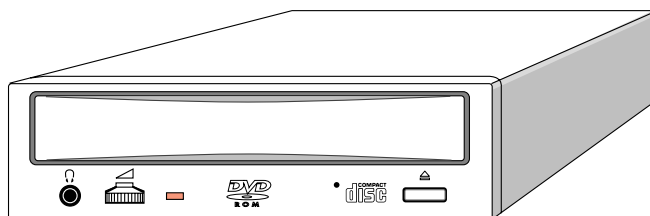


TABLE OF CONTENTS

IMPORTANT SAFETY NOTICE	iv
LASER SAFETY INFORMATION	A-1
INTRODUCTION	A-4
1. PRECAUTIONS WHEN OPERATING	A-5
1.1 PRECAUTIONS WHEN TRANSPORTING	A-5
1.2 INSTALLATION LOCATION	A-5
1.3 PRECAUTIONS FOR USE	A-5
1.4 PRECAUTIONS FOR OPERATION	A-5
1.5 PRECAUTIONS WHEN HANDLING DISCS	A-5
2. PARTS AND FUNCTIONS	A-7
2.1 FRONT VIEW	A-7
2.2 REAR VIEW	A-7
3. CONNECTIONS	A-8
3.1 CONNECTING VIEW	A-8
4. GUIDE TO OPERATION	A-8
4.1 INSTALLATIONS	A-8
5. GENERAL DESCRIPTION	A-9
5.1 FEATURE SUMMARY	A-9
5.2 SYSTEM SET UP	A-9
5.3 POWER SAVING	A-9
6. SPECIFICATION SUMMARY	A-10
6.1 PERFORMANCE	A-10
6.2 ERROR RATES	A-11
6.3 AUDIO PERFORMANCE	A-11
6.4 GENERAL PERFORMANCE	A-12
6.5 ENVIRONMENTAL CONDITIONS	A-12
6.6 PICK UP LASER	A-12
7. BEFORE REQUESTING SERVICE	A-12
7.1 TROUBLESHOOTING	A-12
APPENDIX A.	A-13

IMPORTANT SAFETY NOTICE

NOTICE

- (1) You may not reproduce or transcribe any part of this publication without permission.
- (2) We reserve the right to revise this document at any time without notice.
- (3) If you have any questions about this document, contact your sales representative.

SAFETY NOTICE

- (1) To prevent fire or electric shock, do not expose this appliance to rain or moisture.
- (2) To avoid electric shock or damage to the eyes due to laser beam, do not attempt to disassemble the cabinet.

For USA (Model CW-8572-B only)

FEDERAL COMMUNICATIONS COMMISSION (FCC) RADIO FREQUENCY INTERFERENCE STATEMENT

Class B Computing Device

NOTE : This equipment has been tested and found to comply with the limits for a Class **B** digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and , if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LASER SAFETY INFORMATION

Class 1 LASER Product

This equipment is certified to comply with DHHS Rule 21 CFR Chapter 1, Subchapter J in effect as of date of manufacture.

Elsewhere, the drive is certified to conform to the requirements of the International Electrotechnical Commission (IEC) 825 and CENELEC EN60825 for Class 1 laser products.

Class 1 laser products are not considered to be hazardous. To ensure continued product safety, the following precautions should be heeded. This equipment has the Optical Pickup which has the Dual Lasers (DVD & CD).

Caution :

- (1) The use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- (2) The drive is designed to be incorporated into a computer-based system or unit which has an enclosing cover. The drive may not be used as a stand-alone unit.
- (3) Do not open the drive unit; no user adjustments or serviceable parts are inside.

CLASS 1 LASER PRODUCT KLASS 1 LASER APPARAT	LASER KLASSE 1 EN60825	LUOKAN 1 LASERLAITE APPAREIL A LASER DE CLASSE 1
CAUTION – LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. VORSICHT – LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET, NICHT IN DEN STRAHL BLICKEN. ADVARSEL – LASERSTRÅLING VED ÅBNING, SE IKKE IND I STRÅLEN. ADVARSEL – LASERSTRÅLING NÄR DEKSEL ÖPNES, STIRR IKKE INN I STRÅLEN. VARNING – LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD, STIRRA EJ IN I STRÅLEN. VARO! – AVATTAESSA OLET ALTTIINA LASERSÄTEILYLLE, ÄLÄ TUJOTA SÄTEESEEN.		
CAUTION – INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. VORSICHT – UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET, NICHT DEM STRAHL AUSSETZEN. ADVARSEL – USYNLIG LASERSTRÅLING VED ÅBNING, UNDGÅ UDSÆTTELSE FOR STRÅLING. ADVARSEL – USYNLIG LASERSTRÅLING NÄR DEKSEL ÖPNES, UNNGÅ EKSPONERING FOR STRÅLEN. VARNING – OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD, STRÅLEN ÄR FARLIG. VARO! – AVATTAESSA OLET ALTTIINA NÄKYMÄTÖNTÄ LASERSÄTEILYLLE, ÄLÄ KATSO SÄTEESEEN. DANGER – Invisible Laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.		

- This label is attached to the bottom of the drive unit.
- Diese Aufschrift befindet sich auf der Bodenplatte des Gerätes. (For German)
- Cette étiquette figure au dos du lecteur. (For French)
- Märkningen återfinns på drivenhetens undersida. (For Swedish)
- Denne merkelappen er festet til undersiden av spilleren. (For Norwegian)
- Denne etiket er sat fast i bunden af drev-enheden. (For Danish)
- Tämä etiketti on liimattu laitteen pohjaan. (For Finnish)

For Finnish

VAROITUS! Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

For Swedish

VARNING! Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

for DVD-ROM or DVD-RAM**LASER Specification**

Type: Semiconductor laser InGaAlP / GaAs
 Wave Length: 650 ± 15 nm
 Divergence: $\theta = 20^\circ \sim 35^\circ$ (Typical 27°)
 Output Power: 0.33 mW

Laser-Daten: (For German)

Typ: InGaAlP / GaAs-Halbleiter-Laser
 Wellenlänge: 650 ± 15 nm
 Divergenz: $\theta = 20^\circ \sim 35^\circ$ (Typisch 27°)
 Ausgangsleistung: 0,33 mW

LASER: (For French)

Type: Laser semi-conducteur InGaAlP / GaAs
 Longueur d'ondes: 650 ± 15 nm
 Divergence: $\theta = 20^\circ \sim 35^\circ$ (Environ 27°)
 Puissance de sortie: 0,33 mW

Laser- specifikationer: (For Swedish)

Typ: Laserhalvedare InGaAlP / GaAs
 Våglängd: 650 ± 15 nm
 Divergens: $\theta = 20^\circ \sim 35^\circ$ (Typiskt 27°)
 Uteffekt: 0,33 mW

LASER Spesifikasjon: (For Norwegian)

Type: Halvleder laser InGaAlP / GaAs
 Bølgelengde: 650 ± 15 nm
 Divergens: $\theta = 20^\circ \sim 35^\circ$ (Typisk 27°)
 Utgangseffekt: 0,33 mW

Laser Specifikationer: (For Danish)

Type: Semiconductor InGaAlP / GaAs
 Bølge-længde: 650 ± 15 nm
 Divergens: $\theta = 20^\circ \sim 35^\circ$ (Typisk 27°)
 Udgang-effekt: 0,33 mW

LASERin tekniset tiedot: (For Finnish)

Tyyppi: Laserpuolijohdin InGaAlP / GaAs
 Aallon pituus: 650 ± 15 nm
 Hajaantumisen: $\theta = 20^\circ \sim 35^\circ$ (Tyypillinen 27°)
 Teho: 0,33 mW

for CD-R/RW or CD-ROM**LASER Specification**

Type: Semiconductor laser GaAlAs
 Wave Length: 785 ± 5 nm
 Divergence: $\theta = 15^\circ \sim 18^\circ$ (Typical 16°)
 Output Power: Read = 1.0 mW
 Write = 64 mW

Laser-Daten: (For German)

Typ: GaAlAs-Halbleiter-Laser
 Wellenlänge: 785 ± 5 nm
 Divergenz: $\theta = 15^\circ \sim 18^\circ$ (Typisch 16°)
 Ausgangsleistung: Lesen = 1,0 mW
 Schreiben = 64 mW

LASER: (For French)

Type: Laser semi-conducteur GaAlAs
 Longueur d'ondes: 785 ± 5 nm
 Divergence: $\theta = 15^\circ \sim 18^\circ$ (Environ 16°)
 Puissance de sortie: Lecture = 1,0 mW
 Ecriture = 64 mW

Laser- specifikationer: (For Swedish)

Typ: Laserhalvedare GaAlAs
 Våglängd: 785 ± 5 nm
 Divergens: $\theta = 15^\circ \sim 18^\circ$ (Typiskt 16°)
 Uteffekt: Läsning = 1,0 mW
 Skrivning = 64 mW

LASER Spesifikasjon: (For Norwegian)

Type: Halvleder laser GaAlAs
 Bølgelengde: 785 ± 5 nm
 Divergens: $\theta = 15^\circ \sim 18^\circ$ (Typisk 16°)
 Utgangseffekt: Lese = 1,0 mW
 Skrive = 64 mW

Laser Specifikationer: (For Danish)

Type: Semiconductor GaAlAs
 Bølge-længde: 785 ± 5 nm
 Divergens: $\theta = 15^\circ \sim 18^\circ$ (Typisk 16°)
 Udgang-effekt: Læse = 1,0 mW
 Skrive = 64 mW

 
LASERin tekniset tiedot: (For Finnish)

Tyyppi: Laserpuolijohdin GaAlAs
 Aallon pituus: 785 ± 5 nm
 Hajaantumisen: $\theta = 15^\circ \sim 18^\circ$ (Tyypillinen 16°)
 Teho: Lue = 1,0 mW
 Kirjoita = 64 mW

INTRODUCTION

This DVD-ROM & CD-R/RW Combination drive features both DVD/CD media reading and CD-R/RW media writing technology.

This drive unit uses DVD-ROM discs which bear the following mark.



This drive unit uses CD-R discs which bear the following mark.



This drive unit uses CD-RW discs which bear the following mark.



This drive unit uses CD-ROM discs which bear the following mark.



This drive unit uses audio compact discs which bear the following mark.



System Requirements

- Computer
 - IBM PC-AT or Compatible
- Operating System
 - PC-DOS Ver. 6.3 or later
 - MS-DOS Ver. 6.2 or later
 - MS Windows 3.1
 - MS Windows 95
 - MS Windows 98 / 98 SE
 - MS Windows 2000
 - MS Windows Me
 - MS Windows XP

CHAPTER 1 PRECAUTIONS WHEN OPERATING

1.1 PRECAUTIONS WHEN TRANSPORTING

To avoid damage

- * Keep the original packing materials for the drive unit.
- * Before you transport the drive unit, remove the disc from the drive unit and repack the drive unit in its original packing.

1.2 INSTALLATION LOCATION

Do not place unit in the following environments.

- * High-temperature, high-humidity, extreme temperature changes.
- * Dusty
- * Excessive vibration/ sudden shock.
- * Inclined place.
- * Direct sunlight.

1.3 PRECAUTIONS FOR USE

- * Never push objects of any kind through the Cabinet slots, never spill liquid of any kind on the unit.
- * Do not place objects on the product.
- * Do not attempt to service this product yourself.
- * Do not open or remove covers.
- * Do not place foreign objects in the disc insertion slot and attempt to operate.
- * Do not use DVD-ROM drive when vertically installed. (Horizontal installation type only)

1.4 PRECAUTIONS FOR OPERATION

To avoid error

- * Do not move the drive unit during operation.
- * Do not operate the unit directly after a sudden increase in temperature.


NOTE :

A great proportion of problems are usually caused by the following.


- ① Dust or Finger-prints on the surface of the disc.
- ② Random Electrical Noise.
- ③ Scratches and Defects on the surface of the disc.

1.5 PRECAUTIONS WHEN HANDLING DISCS

- ① Hold the disc by the edges, do not touch the surface of the disc.

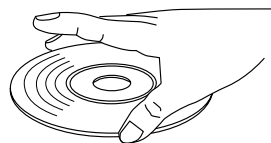


- ② To remove dust or fingerprint, use a clean, soft, dry cloth.

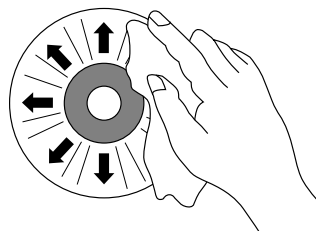


- ③ Do not write and paste paper on the recording/ reading side of the disc.
Do not paste paper to the all surface of the CD-R/RW disc.

When labelling a CD-R/RW disc for identification purposes, write only on the premarked label side using a soft, felt tip marker.


Should not paste a large or thick label to the outer back surface (the label side) of the disc, or it generates drive vibration due to imbalance of the disc.

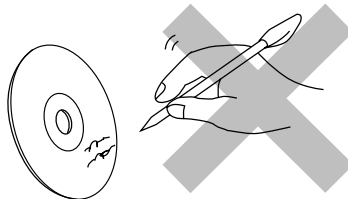

- ④ Do not store the disc in a place where the temperature is high.

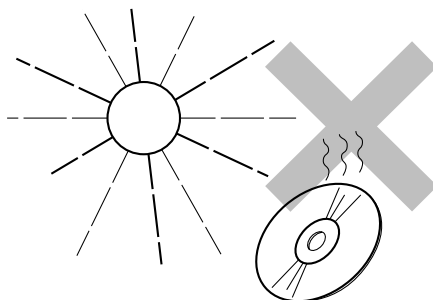


- ⑤ Do not use benzine, thinners and cleaners, etc.

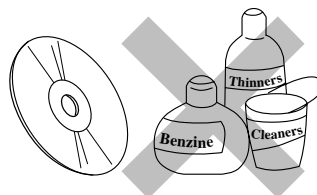


- ⑥ Do not make the center hole larger.



- ⑦ Do not bend the disc.

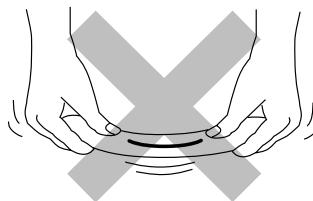


- ⑧ Do not drop the disc, or subject it to shock.

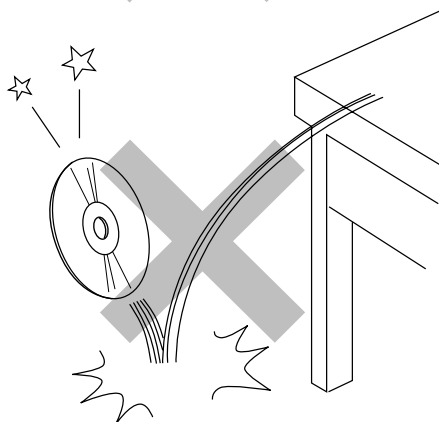


CHAPTER 2 PARTS AND FUNCTIONS

2.1 FRONT VIEW

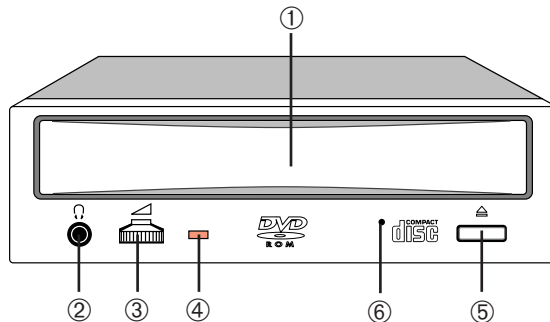

- ① **DISC TRAY**
Accepts a disc.
- ② **HEAD PHONE JACK** (Model CW-8572-B only)
Headphone can be connected using a 3.5mm stereo mini plug.
- ③ **VOLUME** (Model CW-8572-B only)
Adjusts audio output level of Headphone.
- ④ **BUSY / WRITING INDICATOR**
Lights when data is being accessed from the disc, or the drive is playing an audio CD.
Blinks when the drive is writing onto the CD-RW or CD-R disc.
- ⑤ **EJECT/LOAD BUTTON**
Ejects and loads the disc tray.
- ⑥ **EMERGENCY EJECT HOLE**
Insert an instrument such as straightened paper clip into this hole to manually eject the tray. (See 4.1)


2.2 REAR VIEW

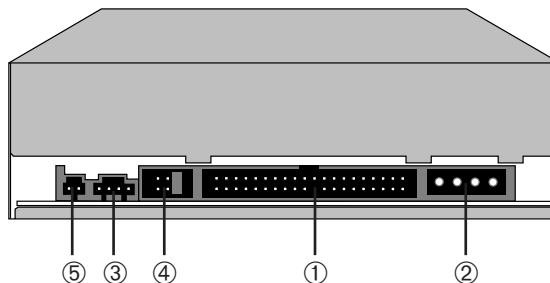

- ① **INTERFACE CONNECTOR**
Connects to host computer's interface connector.
- ② **DC (IN) CONNECTOR**
- ③ **AUDIO OUT CONNECTOR** (Analog)
- ④ **JUMPER PIN**
Insert the jumper according to the Master / Slave / CSEL drive.
(See the figure in the next page.)
- ⑤ **DIGITAL AUDIO OUT CONNECTOR**

CHAPTER 3 CONNECTIONS

3.1 CONNECTING VIEW

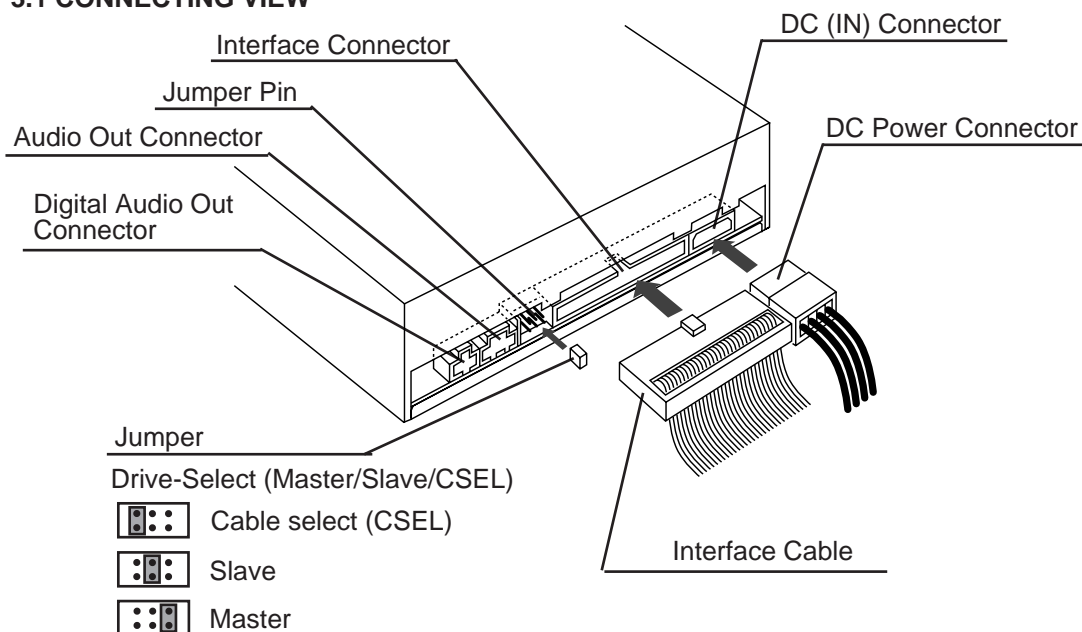


CHAPTER 4 GUIDE TO OPERATION

4.1 INSTALLATIONS

- Starting the drive.

- ① Turn on the power supply.
- ② Press the eject button. The tray is ejected from the drive.
- ③ Place the disc in the tray with the disc's label facing up.
- ④ Press the eject button or press the tray lightly as in the following figure. The tray is retracted automatically.
- ⑤ Loading start.

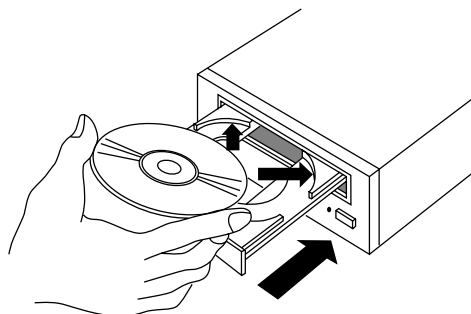


* This figure shows in case of Horizontal Installation.

CAUTION:

- Do not insert any foreign objects into the disc tray. This could result in a malfunction.
- Do not manually force the tray to open.
- When the drive is not in use, keep the tray closed to protect against dust and dirt.
- Do not press down hard on the tray when loading a disc, since this may result in damage to or malfunction of the tray.

- In case of emergency, eject the tray manually. If for some reason the tray will not eject automatically, press the eject-bar (for example, insert a straightened paper clip minimum straight length = 45 mm, Diameter = 1 ~ 1.5 mm) into the emergency eject hole to manually eject the tray. (Before proceeding with this emergency step, make sure that the power is switched OFF.)

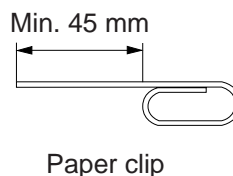

CHAPTER 5 GENERAL DESCRIPTION

5.1 FEATURE SUMMARY

- ① Embedded ATAPI Interface.
- ② Automatic Loading with tray.
- ③ Horizontal and Vertical Installation.
(Vertical : Vertical installation type only, 12 cm Disc only)
- ④ Both DVD & CD-R/RW media readable or writable
- ⑤ MS-DOS CD-ROM Extensions Available.
- ⑥ 5 1/4" Half Height Design.

5.2 SYSTEM SET UP

The ATAPI Devices are selected by the Address field in the Drive Select Register. When a single Device is attached to the interface, it shall be set as Device 0. When the ATAPI Device is attached along with an ATA Mass Storage Device, the ATAPI Device will be set as Device 1 and respond as a Slave.

5.3 POWER SAVING

- ① When the drive waits for a command from the Host for more than two minutes, then the drive enters Power Save Mode. Laser and Spindle motor stop.
- ② Re-start is automatic when the Host Command is received or eject button is pushed.

NOTE :

- **ATAPI** : AT Attachment Packet Interface.
- **MS-DOS** and **MS Windows** are trademarks or registered trademarks of Microsoft Corporation.
- **IBM PC-AT** is a registered trademark of International Business Machines Corporation.

CHAPTER 6 SPECIFICATION SUMMARY

6.1 PERFORMANCE

① Disc diameter	12cm, 8cm (CD-ROM / DVD-ROM)
② Disc speed	
CD-ROM (CAV mode) *1	8560 r/min
DVD (CAV mode)	6895 r/min
③ Data capacity	
CD :	703 / 797 Mbytes [typical] (Mode 1/ Mode 2) (79 min and 58 sec disc)
DVD :	4.7 Gbytes (DVD-R) 4.7 Gbytes (Single Layer) 8.5 Gbytes (Dual Layer) 9.4 Gbytes (Single Layer Double Side)
④ Data transfer Rate	
<u>CD reading</u>	
CD-ROM (CAV mode)	2597 ~ 6000 Kbytes/s (Mode 1) 2961 ~ 6840 Kbytes/s (Mode 2)
CD-RW (CAV mode)	2070 ~ 4800 Kbytes/s (Mode 1) 2365 ~ 5484 Kbytes/s (Mode 2)
<u>CD-RW writing</u>	
10x CLV mode *2	1500 Kbytes/s (Mode 1) 1710 Kbytes/s (Mode 2)
<u>CD-R writing</u>	
10x~16x ZCLV mode *3	1500 ~ 2400 (Mode 1) 1710 ~ 2736 (Mode 2)
<u>DVD reading</u>	
DVD-5 (CAV mode)	6.7 ~ 16.2 MBytes/s
DVD-9 (CAV mode)	4.5 ~ 10.8 MBytes/s
DVD-R (CAV mode)	4.5 ~ 10.8 MBytes/s
From buffer	16.67 Mbytes/s (PIO Mode 4 without IORDY) 16.67 Mbytes/s (Multi-word DMA Mode 2) 33.3 Mbytes/s (Ultra DMA Mode 2)
⑤ Access time	
Random access time (CD CAV mode) *4	90 ms [typical]
Fullstroke access time (CD CAV mode) *5	180 ms [typical]
Random access time (DVD CAV mode) *6	105 ms [typical]
Fullstroke access time (DVD CAV mode) *7	210 ms [typical]
⑥ Buffer Size	2 MBytes
MTBF	125,000 POH (duty 20%)

NOTE:

- *1 CAV : Constant Angular Velocity
- *2 CLV: Constant Linear Velocity
- *3 ZCLV: Zoned Constant Linear Velocity
- *4 Random access time (CD) : Average Data read over the complete area from 00 min. 02 sec. 00 block to 59 min. 58 sec. 74 blocks, more than 2000 times including latency and layered error correction time.
- *5 Fullstroke access time (CD) : From 00 min. 02 sec. 00 block to 59 min. 58 sec. 74 blocks including latency and layered error correction time.
- *6 Random access time (DVD) : Average Data read over the complete area from starting data recorded area(LBA:0) to maximum data recorded area(LBA:23197F), more than 2000 times including latency and layered error correction time.
- *7 Fullstroke access time (DVD) : From starting data recorded area (LBA:0) to maximum data recorded area (LBA:23197F) including latency and layered error correction time.

6.2 ERROR RATES

- Soft read errors Less than 10^{-9}
- Hard read errors Less than 10^{-12}

6.3 AUDIO PERFORMANCE

- (1) Analog audio
 - ① Number of channels 2
 - ② Frequency response 100 Hz ~ 20 kHz (Headphone)
20 Hz ~ 20 kHz (Line-out)
 - ③ SN Ratio More than 80 dB (Headphone/ Line-out)
 - ④ Distortion
 - Line-out Less than 0.1 % (1 kHz)
 - Headphone Less than 0.2 % (1 kHz)
 - ⑤ Output level 0.60 Vrms [typical] (Headphone/ Line-out)
- (2) Digital audio
 - ① Output level 3.3V CMOS level
 - ② Data format Base a decision on IEC-958

6.4 GENERAL PERFORMANCE

① Power rating	+5 V \approx 1.0 A +12 V \approx 2.0 A
② Dimensions (W x H x D)	146 x 41.3 x 190 mm (exclude Front Bezel)
③ Weight	915 g [typical]

6.5 ENVIRONMENTAL CONDITIONS

Operating	
• Temperature	5 ~ 50 °C
• Humidity	5 ~ 90 %RH (Max. wet bulb temp. is 29 °C, Non-condensation)
Non-operating	
• Temperature	- 30 ~ 65 °C
• Humidity	5 ~ 90 %Rh (Non-condensation)

6.6 PICK UP LASER

- ① for DVD-ROM or DVD-RAM
- Type Semiconductor laser InGaAlP / GaAs
 - Wave Length 650 \pm 15 nm
 - Divergence $\theta = 20^\circ \sim 35^\circ$ (Typical 27 °)
 - Output power 0.33 mW
- ② for CD-R/RW or CD-ROM
- Type Semiconductor laser GaAlAs
 - Wave Length 785 \pm 5 nm
 - Divergence $\theta = 15^\circ \sim 18^\circ$ (Typical 16 °)
 - Output power Read = 1.0 mW
Write = 64 mW

CHAPTER 7 BEFORE REQUESTING SERVICE

7.1 TROUBLESHOOTING

- (1) There are many kinds of problems caused by misuse. When a problem occurs, check the table below which describes possible problems occurring with your DVD-ROM & CD-R/RW Combination drive.
- (2) If the DVD-ROM & CD-R/RW Combination drive is not operating correctly and you cannot restore operation by following the detailed procedures in the table below, do not remove the cover of the units or adjust further.
- (3) In the case of (2) above, unplug the unit and consult with your dealer or the nearest service station.

TROUBLE	CORRECTION
• DVD-ROM & CD-R/RW Combination drive does not operate and Busy Indicator does not light.	<ol style="list-style-type: none"> ① Confirm that the connection between the DVD-ROM & CD-R/RW Combination drive and the host computer is correct. ② Confirm that the program is correct. ③ Confirm that the setting drive select switch is correct. ④ Confirm that the disc has been inserted label side up. ⑤ Confirm that foreign objects have not been inserted.

APPENDIX A.

Easy Installation of the Device Driver for DOS / Windows 3.1

The CW-8572-B/C DVD-ROM & CD-R/RW Combination drive must be installed into your host computer, before installing this device driver.

1. Turn the power of your personal computer on. If your system automatically loads Windows, you must exit Windows and reach the DOS prompt C:\ .
This explanation assumes that your floppy drive is designed "A" and your hard disk drive "C". If, however, you have used other letters to designate your drives, please substitute the appropriate letters.
2. Insert the floppy disk "Device Driver for DVD-ROM & CD-R/RW Combination drive" into your floppy disk drive.
3. Type **A:** and press <Enter>.
The current drive changes to "A".
4. Type **INSTALL** and press <Enter>.
5. Type " 2 " and press <Enter> for selection of Installation menu.

```
Installation menu
1. Custom Installation
2. Express Installation.
3. Quit
Please input number ->
```

The software will then be transferred, and the CONFIG.SYS, and AUTOEXEC.BAT, etc. will be changed.

Note: If you want to designate the drive / directory where to install, select "1" of Installation menu.

6. After you check **MSCDEX** for use, type " Y " and press <Enter>.

```
Now, in installation point drive C,
MSCDEX in seaching ...

MSCDEX is found in the directory as
follow.
C:\DOS\MSCDEX.EXE

Is this MSCDEX installed on the
system ? [Y/N]
```

The completion message appears, and reach the DOS prompt.

7. Eject the floppy disk from the floppy disk drive.
After the installation, keep this floppy disk for future use.
8. To restart the system, press the reset button on your personal computer, or the following keys:

Ctrl + **Alt** + **Delete**

Check that the device driver of this equipment has been installed during the start-up procedure.

Every time DOS is started, the device driver of this equipment will be automatically installed.

Weight and dimensions shown are approximate.
Specifications are subject to change without notice.