 



Sub Display Indicators

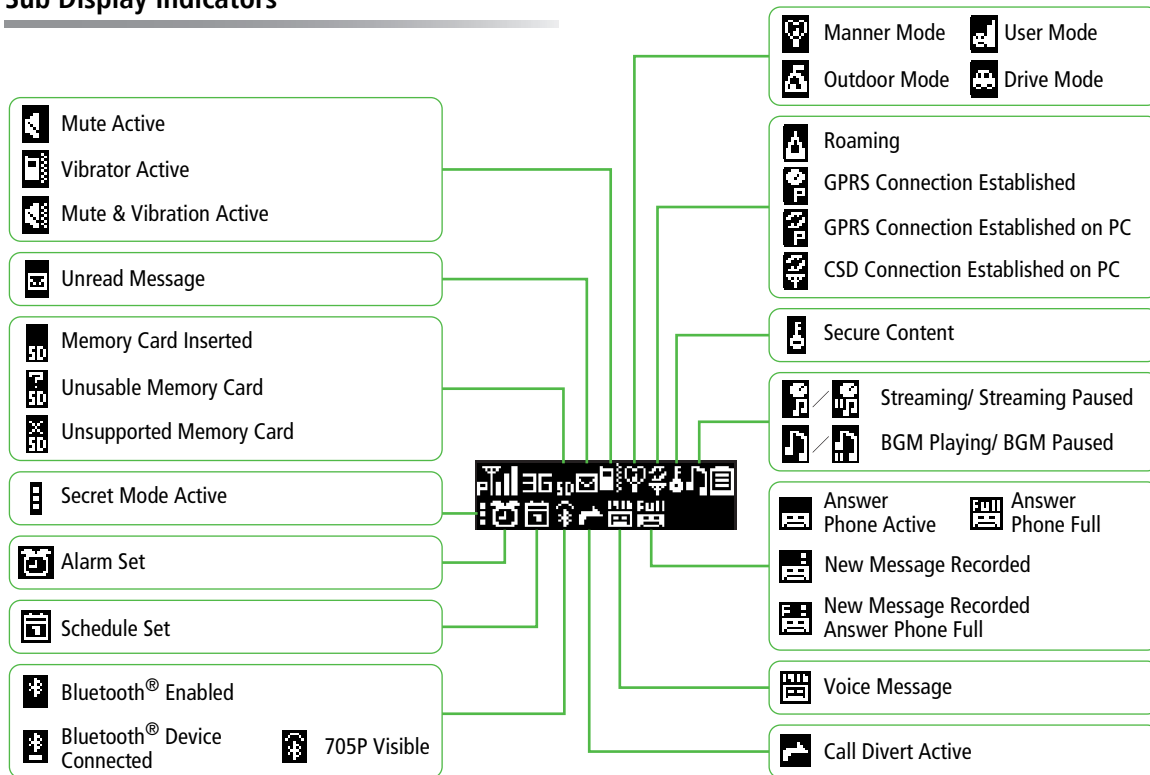


Manual Symbols

Multi Selector & Softkeys

 Use Multi Selector to select items, navigate menus, etc.

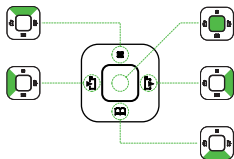

Softkeys correspond to functions/commands appearing at the bottom of Display.

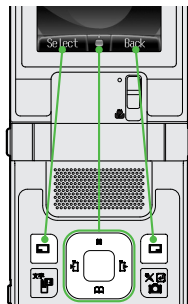


Menu Navigation

In this manual, handset operations before steps are described as shown below.

Example)

Main menu ► 設定 ► 一般設定 ► Language

Enter Main menu, then move through sub menus. " ► " means "scroll through the menu and select the menu item, then press ".

Security Codes

USIM PINs

PIN1&PIN2

PIN1	Prevent unauthorised use of handset.
PIN2	Required to clear Total Call Cost and to set Cost Limit.

- PIN1 & PIN2 are 9999 by default.
- PIN1 & PIN2 can be changed.
- When PIN Entry is **Enable**, PIN1 (4-8 digits) is required every time handset is turned on (with USIM Card inserted).

PIN Lock & Cancellation (PUK)

PIN1 Lock or PIN 2 Lock is activated if PIN1 or PIN2 is incorrectly entered 3 times. Cancel PIN Lock by entering the Personal Unblocking Key (PUK).

- For information on PUK, contact SoftBank Customer Centre, General Information (☎ P.18-50).



- If PUK is incorrectly entered 10 times, USIM Card is locked and handset is disabled. Write down PUK.
- For procedures required to unlock USIM Card, contact SoftBank Customer Centre, General Information (☎ P.18-50).
- When PIN Entry is **enabled**, emergency calls are not available.

Codes

Handset Code

9999 or the 4-digit number selected at initial subscription. Handset Code is required to use/change some handset functions.

- * appears when Handset Code is entered.

Centre Access Code

The 4-digit number in the contract; required to access optional service via landlines or subscribe to fee-based information.

Network Password

The 4-digit number selected at initial subscription, required to restrict handset services. If Network Password is incorrectly entered 3 times, Call Barring settings are locked. To resolve, Network Password and Centre Access Code must be changed. For details, contact SoftBank Customer Centre, General Information (☎ P.18-50).





Note

- Write down Handset Code, Centre Access Code and Network Password. If lost, contact SoftBank Customer Centre, General Information (☎ P.18-50).
- Do not reveal Handset Code, Centre Access Code and Network Password. SoftBank is not liable for misuse or damages.

Basic Operations

Power On/Off

- 1 Press and hold  for more than 2 seconds to turn power on
- 2 To turn power off, press and hold  for more than 2 seconds

Language (言語設定)

Main menu ► 設定 ► 一般設定 ► Language

- 1 Select 自動, *English* or 日本語 → 

My Phone Number

- 1 In Standby,  

Date & Time

Main menu ► Settings ► Phone Settings
► Date & Time ► Home Clock ► Date & Time

1 Enter date →  → Enter time → 

Network Settings


Main menu ► Settings ► Connectivity
► Network Settings ► Select Network

1 Select *Automatic*, *3G* or *GSM* → 



Voice Calls

Making a Voice Call




1 In Standby:
Standard dialling

Enter a phone number and 





Calling from Phone Book


 → Select an entry → Select a phone number → 

Calling from Call Log


 →  to switch to *All Calls History*, *Outgoing*, *Missed Calls* or *Incoming* → Select a record → 


International dialling

Enter a phone number →  [Menu] → *International Call* →  → Select the country →  → 

2 To end the call, 

Answering a Voice Call


1 When a call is received, 

2 To end the call, 



Call Time & Call Cost

Main menu ► Settings ► Call Settings

Viewing Call Time

- 1 Select **Total Call Time**
- 2  to return to Call Settings menu

Viewing Call Charges

 

- 1 Select **Service Charges** →  → **Total Call Cost**
- 2  to return to Service Charge menu

Answer Phone


Up to 8 voice messages can be recorded on 705P.



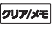


- Unavailable when handset is off or out-of-range, or in Offline mode.
- Answer Phone is not available for incoming Video Calls.

Setting Answer Phone



- 1 In Standby, press and hold 
 - To cancel, press and hold  again.

Playing a Message

When a new voice message is received,  appears in Standby.

- 1 In information window, select **Answer Phone**
→ 
Answer Phone list appears.
- 2 Select a message → 
Playback starts.
 - To delete a message: Select a message → [Menu]
→ **Delete** →  → [YES]

Manner Mode

- 1 In Standby, press and hold  to activate Manner mode
 - To cancel, press and hold  again.



Text Entry

Key Assignments

Key	Input Modes	
	Alphanumerics	Numbers
	. - @ _ / : ~ 1	1
	a b c A B C 2	2
	d e f D E F 3	3
	g h i G H I 4	4
	j k l J K L 5	5
	m n o M N O 6	6
	p q r s P Q R S 7	7
	t u v T U V 8	8
	w x y z W X Y Z 9	9
	0 / half pitch space	0
		Press and hold for +
	Display Symbol list/ Pictograph list	✖
	Press and hold to see e-mail address/URL list	
	, ! ? ¥ & () * # ' ' = ^ + ;	# - , ! ? ¥ & () * # ' ' = ^ + ;

Key	Input Modes	
	Alphanumerics	Numbers
	Toggle input modes	
	Press and hold to toggle half pitch and full pitch characters	
	Line break	Line break
	Toggle upper and lower case characters	
	Press to delete one character after cursor (Delete one character before cursor when cursor is at the end of a sentence)	
	Press and hold to delete all characters after cursor (Delete all characters before cursor when cursor is at the end of a sentence)	

  Character Input Modes

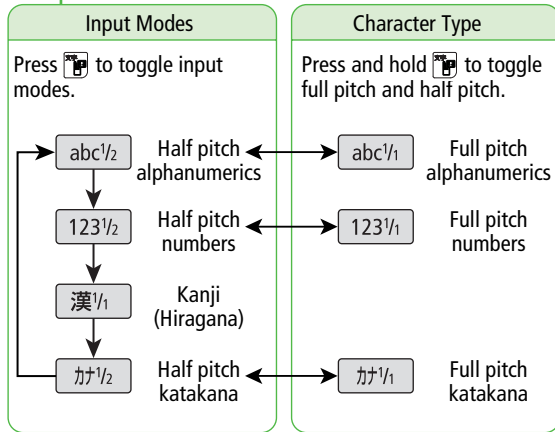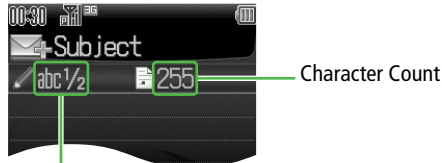

Symbols & Pictographs

- 1 In a text entry window, to open Symbols
 - to toggle Symbols and Pictographs.
 - Log list may appear first.
- 2 to select a list → to select a symbol or pictograph →
- 3 [Close] to close the list

Phone Book

Save up to 500 entries in 705P Phone Book. Save phone numbers or e-mail addresses etc. in USIM Card Phone Book (maximum number of savable entries varies by card).

Phone Book Entry Items

Item	Description	705P	USIM Card
Last Name / First Name*	Enter up to 25 half pitch alphanumerics (12 full pitch characters) (When saving to USIM Card, enter last name and first name in <i>Name</i> .)	<input type="radio"/>	<input type="radio"/>
Reading	Holds up to 12 editable characters (automatically entered when <i>Last Name</i> and <i>First Name</i> are entered)	<input type="radio"/>	<input type="radio"/>
Phone Number*	Save up to 3 entries in Phone Book; 2 in USIM Card Phone Book	<input type="radio"/>	<input type="radio"/>
Email Address*	Save up to 3 entries in Phone Book; 1 in USIM Card Phone Book	<input type="radio"/>	<input type="radio"/>
Birthday	Enter entrant's birth date here	<input type="radio"/>	-
Address	Enter postal code, country, state/province, city, street address	<input type="radio"/>	-
Note	Enter up to 32 characters	<input type="radio"/>	-
Voice Call Ringtone	Set incoming voice call ringtone	<input type="radio"/>	-
Video Call Ringtone	Set incoming video call ringtone	<input type="radio"/>	-
Message Ringtone	Set incoming message ringtone	<input type="radio"/>	-
Illumination	Set incoming call light colour	<input type="radio"/>	-
Picture	Save an image to appear for incoming calls	<input type="radio"/>	-
Group	Add entry to a group	<input type="radio"/>	<input type="radio"/>
Secret Setting	Save entry as a secret to restrict access to it	<input type="radio"/>	-

* Required to save an entry



Back-up Important Information

Keep a separate copy of important information. When battery is exhausted or removed for long periods, Phone Book entries may be lost. Handset damage may also affect information recovery. SoftBank is not liable for any damages resulting from accidental loss/alteration.

New Phone Book Entries

Main menu ► Phone Book ► New Entry

- 1 Enter Information → [Save]
 - Fill in at least one of the following fields: *Last Name*, *First Name*, *Phone Number* and *Email Address*.

Editing Phone Book Entries

- 1 In Standby, → Select an entry
- 2 [Menu] → Select *Edit* →
- 3 Select an item → → Edit the item →
- 4 [Save]

Saving Numbers from Call Log

 
- 1 In Standby, → to switch to *All Calls History*, *Outgoing*, *Missed Calls* or *Incoming*
- 2 Select a record → [Menu] → *Add to Phone Book* →
- 3 **For New:**
Select *Create New Entry* → → Enter other information
For Add:
Select an entry →
- 4 [Save]

Video Call



Exchange voice and images with video call-compatible handsets.

- Only available within 3G network coverage ( appears).

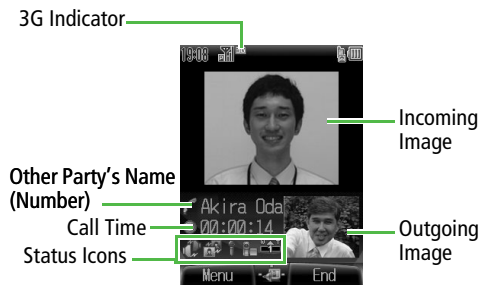




Video Call Window

 


Making a Video Call

- 1 In Standby, enter a phone number → 
- 2 To end the call, 

Answering a Video Call



- 1 When a video call is received,  or 
- 2 To answer with live video,  [YES]
 - To answer with an alternative image,  [NO]
- 3 To end the call, 



Camera





Capturing Still Images

Main menu ► Camera ► Camera tab

- 1 Frame subject →  to capture the image
- 2 To save the image,  [Save]
- 3  to exit

Recording Video




Main menu ► Camera ► Video Camera tab

- 1 Frame subject →  to start recording
- 2  to end recording
- 3 To save the video clip, *Save to Data Folder*
→ 
- 4  to exit

Media Player

Playing Media Files

Main menu ► Entertainment ► Media Player

- 1 **Playing Music Files**
Select *Audio* → Select *All Music List, Music, Ring Song* or *Playlist* → 
Playing Video Files
Select *Videos* → Select *List All, Video Folder* or *Playlist* → 
- 2 Select a file → 
Playback starts.

Playback Key Operations

Item	Operation
Adjust Volume	(Increase) / (Decrease)
Replay Track	
Play Previous	twice
Play Next	
Rewind	Press and hold
Forward	Press and hold
Pause/Resume	
Stop	Music: twice or → Video: or
Show Full Screen*	

* Supports video playback only

Memory Card

Save captured images, recorded clips or downloaded files.

- A low battery may cause file read/write errors.
- While in use, do not remove Memory Card or battery.
- Memory Card files may be damaged or lost due to misuse, accidents or malfunctions. Always back up important files.

Formatting Memory Card

- Memory Cards formatted on other devices may not work properly with 705P. Format Memory Card on 705P.
- Formatting Memory Card deletes all saved files/data.

Main menu ► Settings ► Memory Card Settings
► Format Memory Card

- 1 → Enter Handset Code (4 digits) →
 - Handset Code (📖 P.18-27)

Data Folder


Save captured images, recorded video clips, downloaded files, etc. here.

Folder	File Format	Icons
Pictures	JPEG (.jpg/.jpeg/.jpe/.jif)	
	GIF (.gif)	
	BMP (.bmp)	
	WBMP (.wbmp)	
	PNG (.png)	
Sounds	SM4F (.mmf)	
	SP-MIDI (.mid/.midi)	
	AMR-NB (.amr)	
	MPEG-4 (.3gp/.mp4)	
	XMX (.mxf)	
S!Appli	Java	
Music	MPEG-4 (.3gp/.mp4)	
Videos		
Books	Comic file (.ccf)	
Templates	Text file (.txt)	


Opening Data Folder

Main menu ► Data Folder

 - Select a folder →
 - **Pictures** and **Videos** folders are shown in Thumbnail view by default.

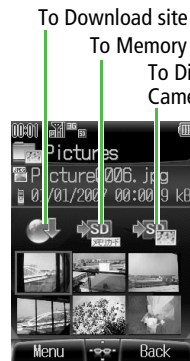

Pictures (Thumbnail)

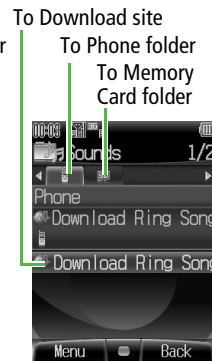

Sounds (List)

- Select a file →

Connectivity

Transfer Phone Book entries, Schedules, or image/sound files, etc. to compatible devices wirelessly via infrared or Bluetooth®, or connect 705P to PCs via USB Cable.



- Some downloaded files may be protected under copyright laws. These files should not be sent.




Infrared

- Place handset and other device within the effective range of 20 cm, and align the infrared ports.









- Though invisible, do not point infrared beam at eyes.

Sending

- 1 Select an item →  [Menu] → *Send* → 
- 2 Prepare recipient device
- 3 Select *Infrared* → 
Transfer begins.

Receiving

Main menu ► Settings ► Connectivity
► Infrared

- 1 Select *ON* → 
- 2 
 appears in Standby.
 - Acquire infrared transmission within 3 minutes.
- 3 Transfer starts and confirmation appears
- 4 
- 5 Select *Phone* or *Memory Card* → 
 - For Phone Book or Schedule entries :  [Save]

Bluetooth®


- Wireless transmission security protocols comply with Bluetooth® specifications. However, always take care when transferring files via Bluetooth®; security may be compromised by operating environment/configuration.
- SoftBank accepts no liability whatsoever for any data generated or information leaked during Bluetooth® transmissions.

Sending


- 1 Select an item →  [Menu] → *Send* → 
→ *Bluetooth* → 

When there is no entry in Paired Devices, device search starts.

- 2 Prepare recipient device








- 3 Select a device → 

Transfer begins.

- When selecting an unpaired device in step 2, enter the same Authorisation Code (4-16 digits) for handset and the other device → 

Receiving

Main menu ► Settings ► Connectivity
► Bluetooth ► Settings ► ON/OFF

- 1 Select *ON* → 
- 2   appears in Standby.
- 3 Connection is requested
- 4  → 
- 5 Select *Phone* or *Memory Card* → 
 - For Phone Book or Schedule entries:  [Save]

USB Cable

Connect 705P to PCs to transfer Data Folder files.

- Install Utility Software on PC before connecting handset.
- See "Utility Software Set Up Guide" for installation/usage details.

Optional Services


Call Divert	Divert calls to a preset phone number.
Voice Mail	Callers may leave voice messages at Voice Mail Centre when 705P is off, out-of-range or engaged. Unavailable when Call Waiting is active.
Call Waiting*	Place a call on hold to receive another incoming call.
Multiparty Call*	Call another party during a call or talk to multiple parties simultaneously.
Call Barring*	Stop all outgoing/incoming calls including international calls.
Caller ID*	Show or hide your phone number when you make a call or confirm the phone number of a caller.

* Separate subscription required

Messaging

SoftBank messaging services are available in Japan and overseas.

Mail	Exchange longer text messages of up to 5000 characters with SoftBank or e-mail compatible handsets, PCs, etc; attach image/sound files.
SMS	Exchange short text messages of up to 70 alphanumeric characters with SoftBank handsets.

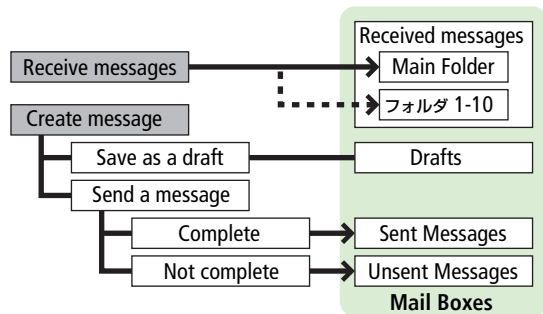




- Separate subscription required to use Mail and to receive e-mail.
- The Centre resends undeliverable messages at regular intervals until delivered. Messages not delivered by specified expiry are deleted.

Customising Handset Address

Change your e-mail address (alphanumerics before @) to reduce the risk of receiving spam.




Main menu ► Messaging ► Settings
► Email Address Settings




- 1 Select *My SoftBank* → 
- 2 Select 各種変更手続き → 
- 3 Select オリジナルメール設定・各種メール設定 → 
- 4 Follow onscreen instructions

Sending Messages

Main menu ► Messaging ► Create Message

1 Enter an address

Select *Add Address* →  → Select a Phone Book entry →  → Select a SoftBank handset number or e-mail address → 

- To enter an address directly: Select *Add Address* →  → Select *Enter Number* or *Enter Address* →  → Enter a SoftBank handset number or e-mail address → 




2 Enter a subject

Select *Add Subject* →  → Enter subject → 

3 Enter a message

Select *Input Text* →  → Enter text → 

4 Attach a file




Select **Add Attachment** →  → Select **Pictures, Sound, Videos** or **Music** →  → Select a file →  [Save]




5 Select **Send** →

Sending SMS Messages

Main menu ► Messaging ► Create New SMS

1 Enter an address

Select **Add Address** →  → Select a Phone Book entry →  → Select a SoftBank handset number → 

● To enter an address directly: Select **Add Address** →  → **Enter Number** →  → Enter a SoftBank handset number → 

2 Enter a message




Select **Input Text** →  → Enter text → 

3 Select **Send** →

Receiving Messages

When a new message is received, Information window opens.




Reading a Message

- 1 In Information window, select **Mail** → 
- 2 Select **Main Folder** → 
- 3 Select a message → 




Retrieving Complete Messages

When the Centre sends the initial portion of a message, follow these steps to retrieve the complete message.

Main menu ► Messaging ► Received Messages

- 1 Select a folder → 
- 2 **From list of received messages**
Select an incomplete message with  →  [Menu] → **Retrieve** → 







From incomplete message

- Select an incomplete message with  → 
- Select **Retrieve** at the end of message text
- 

Reply & Forward






Replying to a Message

Main menu ► Messaging ► Received Messages

- 1 Select a folder → 
- 2 Select a message →  →  [Menu] → **Reply** → 
- 3 Select **To Sender** or **To All** →  → Complete message → **Send** → 

Forwarding a Message

Main menu ► Messaging ► Received Messages

- 1 Select a folder → 
- 2 Select a message →  [Menu] → **Forward** → 
- 3 Enter recipient's address →  → Complete message → **Send** → 



Web (Yahoo! Keitai Web)

Access the Mobile Internet directly from 705P. Browse or download image or sound files as well as information.

Accessing the Mobile Internet

Opening Yahoo! Keitai Main Menu

Main menu ► Yahoo! Keitai ► Yahoo! Keitai
► English




- 1 Select a menu item → 
- 2 Repeat Step 1 as required
- 3 To end the session, 



Yahoo! Keitai Main menu content is subject to change.




Entering URL

Main menu ► Yahoo! Keitai ► Enter URL
► Direct input


- 1 Enter URL → 
- 2 Select a menu item → 
- 3 Repeat Step2 as required
- 4 To end the session, 

Using URL History

Main menu ► Yahoo! Keitai ► Enter URL
► URL History List

- 1 Select URL → 
- 2 Select a menu item → 
- 3 Repeat Step2 as required
- 4 To end the session, 

Web Options Menu

When browsing via Yahoo! Keitai, press  [Menu] for the following options:





Forward	Go to the next page.
Bookmarks	View the list of bookmarks or add a new bookmark to the list.
Saved Pages	View the list of saved Web pages or add a new saved page to the list.
Select & Save	View or playback image/sound files, or save them to Data Folder.
Reload Page	Refresh the page for latest version.
Yahoo! Keitai	Open Yahoo! Keitai Main menu.
More	Enter or view URL, send URL via Mail/SMS, view certificates, etc.

S! Appli

S! Appli are proprietary JAVA applications run on SoftBank handsets. Download S! Appli via Web.

Downloading S! Appli


Main menu ► S!Appli ► S!Appli Library

- 1 Select **Download S!Appli** →  → Select an S! Application → 
- 2  to start downloading
 - Downloaded S! Application is automatically saved when download is complete.
- 3 To run downloaded S! Application,  [YES]
Downloaded S! Application starts.




Using S! Appli

Activating S! Appli

Main menu ► S!Appli ► S!Appli Library


- 1 Select an S! Application → 
S! Application starts.

Suspending/Terminating S! Appli

- 1 While running an S! Application, 
- 2 **To suspend S! Application:** Select *Suspend* → 
To terminate S! Application: Select *Terminate* → 

Resuming S! Appli

Main menu ► S!Appli ► S!Appli Library

- 1 Select *Resume* or *Terminate* → 

Near Chat

Exchange text messages with other SoftBank handsets or compatible devices wirelessly via Bluetooth®.

- The effective range is approximately 10 metres.
- Requires pre-installed Near Chat S! Application.



Note

The effective range may vary with ambient conditions.

Software Update

Check for 705P software updates and download as required.

- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery before starting the update.
- Select a place where signal is strong and stable.
- Do not remove battery during the update.
- Other functions are not available during Software Update.
- 705P is disabled until the update is complete. The update may take some time.

Main menu ▶ Tools ▶ Software Update ▶ Start

1 Follow onscreen instructions

When the update is complete, 705P will turn off, then restart automatically. Information window appears.

To check update result

- In Information window, select *Update Result*.
- In Standby, **Main menu ▶ Tools ▶ Software Update ▶ Information**

Scheduled Update


Follow onscreen instructions for setup.

Confirmation appears at scheduled update time.

Press  or wait 10 seconds for update to start.

- Software Update will not start while 705P is in use. Continuing handset usage for 10 minutes or more after confirmation appears cancels Scheduled Update.



- Software Update failure may disable 705P. Contact SoftBank Customer Centre, Customer Assistance ( P.18-50).
- Software Update does not affect 705P Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup, as appropriate, of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Update automatically cancels Keypad Lock.



For further information, visit SoftBank website (<http://www.softbank.jp>).

Specifications

705P

Weight (including battery)		Approx. 103 g
Dimensions (closed)		Approx. 50 x 101 x 14.8 mm
Standby Time (closed)	3G	Approx. 350 hours
	GSM	Approx. 290 hours
Talk Time	3G	Approx. 190 minutes
	Video Call	Approx. 90 minutes
	GSM	Approx. 200 minutes
Charging Time	AC Charger	Approx. 160 minutes
	In-Car Charger	Approx. 160 minutes
Maximum Output	3G	0.25 W
	GSM	2.0 W

- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when a S! Application is active.

- Talk Time and Standby Time decrease with handset use in poor signal conditions.

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	800 mAh
Dimensions	Approx. 35.5 x 46.3 x 4.5 mm

AC Charger

Power Source	AC 100 V - 240 V, 50 - 60 Hz
Power Consumption	3.9 W
Output Voltage/Current	DC 6 V / 650 mA
Charging Temperature	5°C- 35°C
Dimensions (excluding protrusions and cord)	Approx. 49 x 53 x 20 mm