

P-04A/P-05A

ISSUE DATE:

'09.1

NAME:

PHONE NUMBER:

MAIL ADDRESS:

INSTRUCTION MANUAL

^{NTT}
docomo

docomo SMART series

Introduction

Settings

Calls

Mail

Site Access

Camera/1Seg/Music

Data Management

Convenient Functions

Security Settings

Appendix

Index

DOCOMO W-CDMA/GSM/GPRS System

Thank you for selecting the “docomo SMART series P-04A/P-05A”.



Read this manual before use to correctly operate your P-04A/P-05A.

For Using This Manual

- Note that “P-04A/P-05A” is referred to as “FOMA terminal” in this manual.
- The most operating procedures and displays in this manual are described with the default settings of the “BLACK” P-04A handset.
- Displays and illustrations described in this manual are for reference. The actual ones might differ.
- This manual introduces operating procedures of main functions.
Your FOMA terminal comes with “使いかたナビ (Guide)” (Japanese only). This may also be some help to you to check operating procedures. (See page 26)
- This FOMA terminal supports Kisekae Tool (see page 37). If you use Kisekae Tool to change the design of the Menu display, some menu configurations may change according to the usage frequency, depending on the type of the menu. Further, some menu numbers that are assigned to the menu items do not apply.












For Users Who Use P-05A

This manual is described based on the operations and displays of the P-04A. When you read this manual to operate P-05A, keep the following in mind.

- ◎ You cannot use the camera function and its related functions with P-05A. (Shooting still images/movies, Bar Code Reader, etc.)
- ◎ With the **P-05A** mark, the supplemental descriptions are given to text where operations or displays differ from those of P-04A.
- ◎ Read the  key as the  key.

- It is prohibited to copy all or part of this manual without permission.
- The instructions contained in this manual may be changed without notice.

Contents

 Introduction P.2	Precautions, Handling Precautions, Role of Each Part, How to Read Display, Operating Menu, UIM (FOMA card)/Battery, Charging, Entering Characters, etc.	 Data Management P.74	Data BOX, microSD Card
 Settings P.36	Changing Ring Tone, Setting Color for Call/Charging Indicator and Others, Kisekai Tool, Changing Stand-by display	 Convenient Functions P.80	Osaifu-Keitai, Alarm, Schedule, Voice Recorder, Infrared Communication, iC Communication, Reading Aloud, etc.
 Calls P.40	Making a Call, Manner Mode, Public Mode (Drive Mode/Power Off), Network Services, Phonebook, International Calls, Using Overseas, etc.	 Security Settings P.88	Security Codes, Reset Settings, Initialize, Remote Reset, Spam Mail Prevention
 Mail P.54	Composing i-mode Mail, Displaying Received i-mode Mail	 Appendix P.94	Troubleshooting, Warranty and After-sales Services, Software Update, Main Specifications, Intellectual Property Right, Function List, etc.
 Site Access P.56	i-mode, i-appli, i-motion, i-Channel, i-concier, Full Browser	 Index P.116	Index
 Camera/ 1Seg/Music P.64	Shooting with Camera, Watching 1Seg, Music&Video Channel, Playing Back Music		



Accessories and Main Options

<Accessories>

 
- P-04A/P-05A Handset
(With Warranty and Back Cover P32,

P-05A Back Cover P33)



- P-04A/P-05A CD-ROM

The PDF versions of "Manual for PC Connection" and "Kuten Code List" are included.



- Instruction Manual (Japanese version)

 


- Battery Pack P17




<Main Options>

- FOMA AC Adapter 01/02
(With Warranty and Instruction Manual)

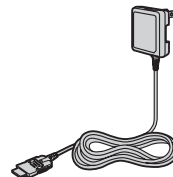

 - Desktop Holder P31
(With Instruction Manual)

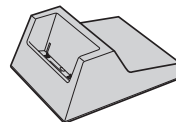



Main Functions of P-04A/P-05A



i-mode mail/Deco-mail/Deco-mail pictogram

▶ P.54

Besides mail text, you can attach photos, movie files, etc.

International Roaming

▶ P.51

 
Your FOMA terminal, phone number, and mail address are available overseas.



i-concier

▶ P.61

○○ Railway
Suspension of the service now...

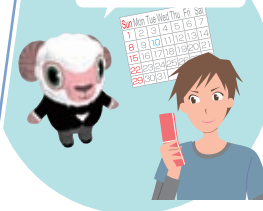

i-concier is a service that enables you to receive useful information from a character (Machi-chara image) on the Stand-by display and download schedule event (i-schedule) files for your convenience.

1Seg

▶ P.67

You can watch 1Seg programs of the terrestrial digital broadcasting for mobile objects.



View Blind

▶ P.38

You can make the display hard to see from an angle. You can use the FOMA terminal without concern for others' eyes.

Voice Recorder

▶ P.84



Shall we start the next meeting from 10 a.m. the day after tomorrow?

Certainly.

You can record voice instead of taking notes. You can repeatedly play it back, so it is convenient to record the proceedings at a meeting, etc.

Yuttari Talk

▶ P.40

You can slow down the other party's speaking speed during a call.

One-push Open

▶ P.19

You can open the FOMA terminal by key operation.

Abundant Lock Functions

▶ P.90

The FOMA terminal features various Lock Functions.



Moving Data Files

You can use the microSD card to move data files.

Move Backup Files from the microSD Card

<For Phonebook, Mail (Inbox, Outbox, Draft)>

Stand-by display ► ► LIFEKIT ► microSD ► Refer microSD data
 ► Phonebook, Inbox, Outbox, Draft (Select an item)
 ► Select a data file to be moved ► ► Overwr. all to ph.
 ► Enter your Terminal Security Code ► YES ► YES ► NO (for Phonebook only)

<For Image, Movie>

Stand-by display ► ► DATA BOX ► My picture, motion
 (Select an item) ► ► Picture, Movie (Select an item)
 ► Select a folder which has the files to be moved
 ► ► Multiple-choice ► ► ► Copy to phone

Move Phonebook Entries/Mail Messages at a Time

- Stand-by display ► ► LIFEKIT ► microSD
 ► Backup/Restore ► Restore to phone
- Enter your Terminal Security Code ► YES

Back Up Data Files to the microSD Card

<For Phonebook, Mail (Inbox, Outbox, Draft)>

Stand-by display ► ► LIFEKIT ► microSD ► Refer microSD data
 ► Phonebook, Inbox, Outbox, Draft (highlight an item) ►
 ► Copy to microSD ► Enter your Terminal Security Code
 ► YES ► YES (for Phonebook only)

<For Image, Movie>

Stand-by display ► ► DATA BOX ► My picture, motion
 (Select an item) ► Select a folder which has the files to be saved
 ► ► Multiple-choice ► ► ► Copy to microSD

Back up/Restore Phonebook Entries/Mail Messages at a Time

- Stand-by display ► ► LIFEKIT ► microSD
 ► Backup/Restore ► Backup to microSD
- Enter your Terminal Security Code ► YES
 - Backup files are overwritten each time they are copied.
 - You can move batch backup files only to the model with the batch restoration function.
 - You cannot back up all the files of images and movies at a time.




Using Infrared Communication

By infrared communication, you can send/receive Phonebook entries, mail messages, bookmarks and others to/from another mobile phone or personal computer equipped with the infrared communication function.

This function is also helpful for when you change your models and move files, if another model is also equipped with the infrared communication function.

- See page 86 for how to operate.

Using iC Communication

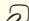You can send/receive data files such as Phonebook entries, photos, ToruCa files, etc. by facing the  mark of your FOMA terminal toward that of another FOMA terminal supporting the iC communication function.

This function is also helpful for when you change your models and move files, if another model is also equipped with the iC communication function.

- See page 86 for how to operate.

Using Data Security Service

On the Data Storage Center site, you can set so as to periodically save and update the Phonebook entries in your FOMA terminal to the Data Storage Center. Besides Phonebook entries, you can store images and mail messages, and can easily restore them when you lose files or you change models.

- This is a pay service which is available on a subscription basis.
- You are separately charged a packet communication fee.
- For details on Data Security Service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Using Data Security Service with i-concier

自動お預かり／更新設定 (Automatic saving/Update settings)

Stand-by display ▶  ▶ **i-CONCIER** ▶  (MENU)

▶ 設定 (Settings) ▶ 自動お預かり／更新設定 (Automatic saving/Update settings) ▶ Follow the instructions on the display.

お預かりデータ確認 (Check saved data)


Stand-by display ▶  ▶ **i-CONCIER** ▶  (MENU)

▶ 設定 (Settings) ▶ お預かりデータ確認 (Check saved data) ▶ Follow the instructions on the display.

お預かりデータ更新 (Update stored data)

Stand-by display ▶  ▶ **i-CONCIER** ▶  (MENU)

▶ 設定 (Settings) ▶ お預かりデータ更新 (Update stored data)

▶ Check the data files to be updated ▶  (MENU)

▶ Enter your Terminal Security Code ▶ YES

お預かり通信履歴 (Communication records of saving)




Stand-by display ▶  ▶ **i-CONCIER** ▶  (MENU)

▶ 設定 (Settings) ▶ お預かり通信履歴 (Communication records of saving) ▶ Select a record.







Precautions

ALWAYS FOLLOW THESE DIRECTIONS

- Before using the FOMA terminal, read these safety precautions carefully so that you can use it correctly. After reading the precautions, keep them in a safe place.
- Be sure to observe these safety precautions because they are designed to protect you or those around you from causing injury and to avoid unnecessary damage to the property.
- The symbols below indicate the levels of danger or damage that can be caused if the particular precautions are not observed.

	Danger	This symbol indicates that incorrect handling will almost certainly cause death or serious injury.
	Warning	This symbol indicates that incorrect handling poses a risk of causing death or serious injury.
	Caution	This symbol indicates that incorrect handling poses a risk of causing injury or damage to the product or property.

■ The following symbols show specific directions:

	Denotes things not to do. (Prohibition)
Don't	
	Denotes not to disassemble.
Do not disassemble	
	Denotes not to touch with wet hands.
Not wet hands	
	Denotes not to use where it could get wet or not to wet it.
Avoid Water	
	Denotes mandatory instructions (matters that must be complied with).
Do	
	Denotes to pull the power plug out of the outlet.
Pull the power plug out	

■ "Safety Precautions" are divided into the following six sections:

General precautions for FOMA terminal, batteries, adapters/chargers, and UIM.....	P.7
Precautions for FOMA terminal.....	P.8
Precautions for batteries.....	P.10
Precautions for adapters/chargers.....	P.11
Precautions for UIM.....	P.12
Notes on using near electronic medical equipment.....	P.13

General precautions for FOMA terminal, batteries, adapters/chargers, and UIM



Danger



Don't

Do not use, store or leave the FOMA terminal and its accessories in places with a high temperature such as near fire or places exposed to direct sunlight, or in cars under the blazing sun.

The devices could be deformed or malfunction, or the battery may leak, overheat, burst, or catch fire, thus resulting in the deterioration of performance and shortening of the life of devices. Also, part of the case could get heated, causing bare skin burns.



Do not disassemble

Do not disassemble, modify or solder the FOMA terminal or accessories.

Accidents such as fire, injury, or electric shock, or malfunction may result. The battery may leak, overheat, burst or catch fire.



Avoid Water

Do not wet the FOMA terminal or accessories.

If liquids such as water or pet urine get onto them, overheating, electric shock, fire, malfunction, injury or others may result. Pay attention to the place of use and the way of handling.



Do

With your FOMA terminal, use the batteries and adapters/chargers specified by NTT DOCOMO, INC.

If you use any type of battery, adapter or charger other than the specified one, your FOMA terminal, battery or other accessories may leak, overheat, burst, catch fire or malfunction.

Battery Pack P17

FOMA AC Adapter 01/02

FOMA AC Adapter 01 for Global use

FOMA DC Adapter 01/02

Desktop Holder P31

FOMA Dry Battery Adapter 01

FOMA Portable Charging Adapter 01

FOMA USB Cable with Charge Function 01/02

※For other compatible products, contact a handling counter such as a docomo shop.



Warning



Don't

Do not place the batteries, the FOMA terminal, adapters/chargers, or UIM in cooking appliances such as microwave ovens or high-pressure containers.

The battery may leak, overheat, burst, or catch fire. The FOMA terminal or the adapter/charger may overheat, smoke, or catch fire, or its circuit parts may become damaged.



Don't

Do not throw the FOMA terminal or accessories, or subject them to severe shocks.

The battery may leak, overheat, burst, or catch fire. Also, malfunction or fire may result.



Don't

Be careful not to let electroconductive materials (metal pieces, pencil leads etc.) contact with the charging terminal or connector terminal. Also, make sure that those are not entered into the inside of the FOMA terminal.

Short-circuit could cause fire or malfunction of the FOMA terminal.



Do

When you are in a place such as a gas station where flammable gas is generated, turn off the FOMA terminal, and never do charging. Otherwise, catching fire may result.

Ensure that you use Osaifu-Keitai with the FOMA terminal turned off when you are in the vicinity of the gas station.

(When IC Card Lock is set, turn off the power with the lock released.)



Do

If odor, overheat, discoloration, or deformation is detected during use, battery charge, or storage, immediately observe the following:

- 1. Pull the power plug out of the outlet or cigarette lighter socket.**
- 2. Turn off the power to the FOMA terminal.**
- 3. Remove the battery pack from the FOMA terminal.**

If you use the FOMA terminal and its accessories as they are, overheat, burst, or catching fire could result or the battery could leak.



Caution



Do not place the FOMA terminal or accessories on unstable locations such as wobbly tables or slanted locations.

Don't

The FOMA terminal or accessories may fall, resulting in injury or malfunction.



Do not store in humid or dusty places, or in high temperature environments.

Don't

Malfunction may result.



Do

If children use the FOMA terminal or accessories, a guardian should explain the safety precautions and correct operations. The guardian should also make sure that the instructions are followed during use.

Otherwise, injury may result.



Do

Keep out of the reach of babies and infants.

Accidental swallowing or injury may result.



Do

Be especially careful when you use the FOMA terminal for a long time with the adapter/charger connected.

If you use i-appli programs, talk on the videophone, watch 1Seg programs and so on for a long time during charging, the temperature of the FOMA terminal, battery pack, or adapter/charger might rise. If you directly touch the part of high temperature continuously, redness, itching, rash, or low-temperature bare skin burns may result depending on your physical conditions or predisposition.

Precautions for FOMA terminal



Warning



Don't

Do not directly point the infrared data port at someone's eyes during transmission.

His/her eyes may possibly be affected. Other infrared devices may operate erroneously if the infrared data port is pointed at them during transmission.



Don't

Do not put the FOMA terminal in the place where it could be affected by an expanded airbag, e.g., on the dashboard.

If the airbag expands, the FOMA terminal could hit you and others, causing accidents such as injury and the FOMA terminal could malfunction and become damaged.



Don't

If you have any implanted electronic medical equipment, do not place your FOMA terminal in a chest pocket or inner pocket.

If the FOMA terminal is positioned close to electronic medical equipment, it may cause that equipment to malfunction.



Don't

Do not allow liquids such as water, or foreign materials such as metal pieces or flammable materials to get into the UIM or microSD card slot of the FOMA terminal.

Fire, electric shock or malfunction may result.



Do

Turn off the FOMA terminal in places where use is prohibited such as in airplanes and hospitals.

Otherwise, electronic devices and electronic medical appliances may be adversely affected. If the Auto Power ON function is set, deactivate the setting, then turn the power off. For use inside medical facilities, make sure that you comply with their regulations. You may be punished for using the FOMA terminal in airplanes, which is prohibited by law.



Do

When talking with the FOMA terminal set to Hands-free, be sure to keep the FOMA terminal away from your ear.

Further, when you play games or play back music with the earphone/microphone connected, adjust the sound volume to moderate volume.

The excessive sound volume impairs your hearing.

Further, accidents may result due to the hardness of hearing of surrounding sound.



Do

For those with weak heart conditions, the vibrator and ring volume must be adjusted carefully.

Those functions may cause an effect on the heart.



Do

If thunder starts to rumble while you are using the FOMA terminal outdoors, turn off the power and move to a safe place.

Otherwise, you could be struck by lightning or suffer an electric shock.



Do

Turn off the FOMA terminal when near electronic devices using high-precision control or weak signals.

The FOMA terminal may possibly cause these devices to malfunction.

※Electronic devices that may be affected:

Hearing aids, implanted cardiac pacemakers, implanted defibrillators, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices. If you use an implanted cardiac pacemaker, implanted defibrillator or any other electronic medical device, consult the manufacturer or retailer of the device for advice regarding possible effects from the radio waves.



Do

If the display part or camera lens is broken, be careful about broken glasses or the exposed interior of the FOMA terminal.

Plastic panels are used for the surfaces of the display part and camera lens so that glasses do not easily get scattered, however, pay attention not to erroneously touch the broken part or interior.

Otherwise, injury may result.



Caution



Don't

Do not swing the FOMA terminal by its strap.

The FOMA terminal may hit you or persons around you, and accidents such as injury or malfunction and damage may result.



Don't

Do not place magnetic cards or similar objects near the FOMA terminal or between phone parts.

Magnetic data on cash cards, credit cards, telephone cards and floppy disks, etc. may be deleted.



Don't

Do not bring magnetic substances close to your FOMA terminal.

Strong magnetic items might cause in erroneous operation.



Don't

If you erroneously break the display part and then crystal liquid gets leaked, never take or suck the liquid to or into your mouth, or apply to skin.

If the crystal liquid gets into the eyes or mouth, immediately rinse it out with clean water and then seek medical attention.

When it adheres to your skin or clothes, immediately wipe it away with alcohol etc., and then rinse it out with water and soap.

Otherwise, the loss of eyesight or injury to your skin may result.



Don't

Do not bring your ears close to the speakers while a ring tone sounds or a melody is played back from the FOMA terminal.

Otherwise, your hearing could be impaired.

Precautions (Continued)



Don't

Do not open the FOMA terminal by pressing the one-push open button near persons around you or your face.

The FOMA terminal may hit you or persons around you, causing accidents and injuries.



Do

Electronic devices in some types of cars can be affected by use of the FOMA terminal.

For safety's sake, make sure not to use the FOMA terminal inside such cars.



Do

Itching, rash or eczema may be caused depending on your physical conditions or predisposition. If an abnormality occurs, stop using the FOMA terminal immediately, and then seek medical attention.

Metals are used for the following parts:

Where it is used	Material	Finishing
Upper case Back cover	Stainless	Baking finish
Side upper key Side lower key	ABS	Evaporated aluminum, hard coating
Metal part of the one-push open button	Aluminum	Alumite treatment
Charging terminal	Copper alloy	Gold-plated finish with nickel-plated ground



Do

Be careful not to get your finger or a strap caught in the parts when you close or open the FOMA terminal.

Accidents such as injury or damage may result.



Do

When you watch a 1Seg program, watch in a place bright enough taking a certain distance from the display.

Otherwise, your visual acuity could be reduced.



Do

The back cover is made of metal, so handle it with care.

You may hurt your hand or fingers.

Precautions for batteries

- Check the description on the label of the battery pack for the type of battery.

Description	Type
Li-ion	Lithium-ion battery



Danger



Don't

Do not let any metal object such as a wire come in contact the battery terminals. Also do not carry or store the battery together with any metal objects like a necklace.

The battery may leak, overheat, burst or catch fire.



Don't

Do not use excessive force to attach the battery to the FOMA terminal even when you cannot attach it successfully. Also, check that the battery is the right way round when you attach it.

The battery may leak, overheat, burst or catch fire.



Don't

Do not throw the battery into fire.

The battery may leak, overheat, burst or catch fire.



Don't

Do not pierce it with nails, hit it with a hammer, or step on it.
The battery may leak, overheat, burst or catch fire.



Do

If the battery fluid gets into your eyes, do not rub them. Flush your eyes with clean water and seek medical attention immediately.
Otherwise, the loss of eyesight may result.



Warning



Don't

When any abnormality due to external shock such as the deformation or scratches by dropping is found on the battery pack, immediately stop using it.
The battery may leak, overheat, burst, or catch fire. Also, malfunction or fire may result.



Do

If charging is not completed at the end of the specified charging time, stop charging.
Otherwise, the battery may leak, overheat, become damaged or catch fire.



Do

Immediately stop using the FOMA terminal and keep it away from fire if the battery leaks or emits an odor.
The leaked battery fluid may ignite, causing fire or burst.



Do

Be careful that your pets do not bite into the battery pack.
The battery may leak, overheat, burst, or catch fire. Also, malfunction or fire may result.



Caution



Don't

An exhausted battery should not be disposed of with other waste.
The battery may catch fire or damage the environment. After insulating the battery terminals with tape, take the unneeded battery to a handling counter such as a docomo shop or dispose of it in accordance with local waste disposal regulations.



Don't

Do not charge the wet battery.
The battery pack may overheat, catch fire, or burst.



Do

If the battery fluid comes in contact with skin or clothes, immediately stop using, then rinse it out thoroughly with clean water.
Skin injury may result.

Precautions for adapters/chargers



Warning



Don't

Do not use a damaged adapter/charger cord or power cord.
Electric shock, overheating or fire may result.



Don't

Do not use the AC adapter and desktop holder in steamy places such as a bathroom.
Electric shock may occur.



Don't

The DC adapter is for use only in a negative (-) grounded vehicle. Do not use it in a positive (+) grounded vehicle.
Fire may result.



Don't

If it starts to thunder, do not touch the FOMA terminal and adapter/charger.
You might be struck by lightning or suffer an electric shock.



Don't

Never short-circuit the charging terminal when the adapter is plugged into the power outlet or cigarette lighter socket. Also, never touch the charging terminal with fingers or other bare skin.
Fire, malfunction, electric shock or injury may result.



Precautions (Continued)



Don't

Place the charger and desktop holder on a stable location during charging. Do not cover or wrap the charger and desktop holder in cloth or bedding.

The FOMA terminal may drop off, or the charger and desktop holder may overheat, causing fire or malfunction.



Don't

Do not place something heavy on the adapter/charger cord and power cord.

Electric shock or fire may result.



Not wet hands

Do not touch the power cord of the adapter/charger, or power outlet with wet hands.

Electric shock may result.



Do

Use the adapter/charger at the specified V AC.

If you use it at a wrong voltage, fire or malfunction may result. When using the FOMA terminal overseas, use FOMA AC adapter available overseas.

AC adapter: 100 V AC

DC adapter: 12/24 V DC

[For negative (-) grounded vehicles only]

AC adapter available overseas: 100 V to 240 V AC

[Connect only to household AC outlet]



Do

If a fuse of the DC adapter has blown, replace it with a specified fuse.

If you use an unspecified fuse, fire or malfunction may result. For the specified fuse, refer to each instruction manual.



Do

Keep the power plugs dust-free.

Otherwise, fire may result.



Do

When pulling the AC adapter into the power outlet, firmly plug it in, taking care not to contact with metal straps or the like.

Otherwise, electric shock, short-circuit or fire may result.



Do

When removing the adapter/charger out of the outlet or cigarette lighter socket, do not forcibly pull the adapter/charger cord or power cord, instead take hold of the power plug and then pull.

If you pull the plug out by the cord, the cord may be damaged, which could result in electric shock or fire.



Pull the power plug out

When the adapter/charger is not to be used for a long period of time, unplug the power cord from the outlet.

Otherwise, electric shock, fire, or malfunction may result.



Pull the power plug out

If liquids such as water get in the charger, unplug the power cord immediately from the outlet or cigarette lighter socket.

Otherwise, electric shock, smoke or fire may result.



Pull the power plug out

Before cleaning, pull the power plug out of the outlet or cigarette lighter socket.

Otherwise, electric shock may result.

Precautions for UIM



Caution



Do

Be careful not to touch the cut surface of the UIM (IC portion) when removing it.

You may hurt your hand or fingers.

Notes on using near electronic medical equipment

■The description below meets “Guidelines on the Use of Radio-communication Equipment such as Cellular Telephones – Safeguards for Electronic Medical Equipment” by the Electromagnetic Compatibility Conference Japan.



Warning



Do

Comply with the following in hospitals or health care facilities:

- Do not carry the FOMA terminal into operating rooms, intensive care units (ICU) or coronary care units (CCU).
- Turn off the FOMA terminal in hospital wards.
- If there is any electronic medical equipment near you, turn off the FOMA terminal even when in a location such as a lobby.
- Comply with any regulations of hospital and health care facilities instructing you not to use or carry in a mobile phone.
- If the Auto Power ON function is set, deactivate the setting, then turn the power off.



Do

Turn off the FOMA terminal in crowded areas such as inside trains during rush hour, as someone with an implanted cardiac pacemaker or implanted defibrillator may be near you.

Operation of an implanted cardiac pacemaker or implanted defibrillator can be affected by radio waves.



Do

If you use an implanted cardiac pacemaker or implanted defibrillator, use the mobile phone 22 cm or more away from an implanted cardiac pacemaker or implanted defibrillator.

Operation of an implanted cardiac pacemaker or implanted defibrillator can be affected by radio waves.



Do

Patients using electronic medical equipment other than implanted cardiac pacemakers or implanted defibrillators (outside medical establishments for treatment at home, etc.) should check the influence of radio waves upon the equipment by consulting its manufacturer.

Operation of electronic medical equipment can be affected by radio waves.

Handling Precautions

General notes

■ Do not wet the equipment.

The FOMA terminal, battery, adapter/charger, and UIM are not waterproofed. Do not use them in environments, which are high in humidity such as in bathrooms, and do not allow them to get wet from rain. Furthermore, if carrying them against your body, they become moist due to perspiration and the internal parts may become corroded, causing malfunction. If the parts are found to have been damaged due to exposure to the liquids, any repairs will not be covered by warranty, or repairs may not be possible. This may be repaired at a cost if repairs are possible.

■ Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.

The screen of the FOMA terminal sometimes has a special coating so that they are easier to see. If you rub it roughly with a dry cloth, it might be scratched. Take care of the way of handling, and use only a dry, soft cloth such as the one for cleaning glasses. If the screen is left with water drop or stain adhered, smear may be generated or the coating might peel off.

Do not use alcohol, thinner, benzene, detergent or other solvents for cleaning, otherwise the printing may be removed or discoloration may result.

■ Occasionally clean the terminals of the equipment using a dry cotton swab.

If the terminals become soiled, the connection might deteriorate so that the power turns off or the battery does not charge fully. Wipe the terminals with a dry cloth or cotton swab.

■ Do not place the FOMA terminal near an air conditioner outlets.

Condensation may form due to rapid changes in temperature, and this may corrode internal parts and cause malfunction.

■ Do not apply excessive force onto the FOMA terminal and battery pack.

If you put the FOMA terminal in a bag along with many other articles or sit with the FOMA terminal in a clothes pocket, the display, internal circuitry and the battery pack could be damaged or malfunction. Also, if an external device is left connected to the connector terminal, the connector could be damaged, or malfunction.

■ Carefully read each instruction manual attached to the FOMA terminal, adapter/ charger, or desktop holder.

■ Do not rub or scratch the display part with metals.

Doing so might cause damage to the part, resulting in trouble or malfunction.

Notes on handling the FOMA terminal

■ Avoid using in extremely high or low temperatures.

The FOMA terminal should be used within a temperature range of 5°C to 35°C and a humidity range of 45% to 85%.

■ The FOMA terminal, if operated near land-line phones, television sets, radios or other devices that are in use, may affect them. You should operate your FOMA terminal as far away from such equipment as possible.

■ It is recommended that you make separate notes of the information stored in the FOMA terminal and keep such notes in a safe place.

We take no responsibility for any loss of the stored data items.

■ Do not drop the FOMA terminal or subject it to strong impacts.

Malfunction or damage may result.

■ Do not insert an external device to the connector terminal (earphone-microphone terminal) at a slant when connecting, and do not pull it out when it is inserted.

Malfunction or damage may result.

■ Make sure that nothing, such as a strap, gets caught between the parts of the FOMA terminal when you close it.

Otherwise, malfunction or damage may result.

■ The FOMA terminal becomes warm during use or charging but this is not an abnormality. Use the FOMA terminal as it is.

■ Do not leave the camera in places exposed to direct sunlight.

Pixels may be discolored or burns may result.

■ Usually, put the cover of the connector terminal and microSD card slot to use the FOMA terminal.

Dust or water might enter into the FOMA terminal, causing malfunction.

■ Do not use the FOMA terminal with the back cover left removed.

The battery pack might come out, or malfunction or damage may result.



- Do not apply an excessively thick sticker onto the surfaces of the display, keys, or buttons. Malfunction may result.
- While you are using the microSD card, never take it off or turn off the power to the FOMA terminal. Data may be erased or malfunction may result.

Notes on handling batteries

- Batteries have a limited life.
Though it varies depending on the usage state, you are advised to replace the battery if its usable time is extremely short even when you fully charge it. Make sure that you buy the specified battery.
- Charge the battery in a place with an appropriate ambient temperature of 5°C to 35°C.
- Make sure that the battery is charged when you use the FOMA terminal for the first time or have not used it for a long period of time.
- The usable time of the battery differs depending on the usage environment or its remaining life.
- Depending on how the battery pack is used, it might swell as its operating life becomes short, but this is not a problem.

■ Note the following points when you store a battery pack over a long period:

- Storage in a fully charged state (the state immediately after charging is completed)
- Storage with no battery power left (the state you cannot turn on the power of the handset due to battery drain)

These may lower the battery pack's performance and shorten its operating life.

You are advised to store the battery pack in the state of two bars of battery icon indication as a guide for when you store it for a long period.

Notes on handling chargers/adapters

- Charge the battery in a place with an appropriate ambient temperature of 5°C to 35°C.
- Charge the battery where:
 - There is very little humidity, vibration, and dust.
 - There are no land-line phones, television sets or radios nearby.
- During charging, the adapter/charger may become warm. This is not an abnormality, so continue charging.
- Do not use the DC adapter for charging the battery when the car engine is not running. The car battery could go flat.
- When using the power outlet having the disengaging prevention mechanism, observe the instructions given in that instruction manual.
- Do not give a strong shock. Also, do not deform the charging terminal. Malfunction may result.

Notes on handling the UIM

- Never use more force than necessary when inserting/removing the UIM.
- The UIM may become warm during use, but this is not a sign of a malfunction. Continue using it as it is.
- The warranty does not cover damage caused by inserting the UIM into some other types of IC card reader/writer.
- Always keep the IC portion clean.
- Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.
- It is recommended that you make separate notes of the information stored on the UIM and keep such notes in a safe place.
We take no responsibility for any loss of the stored data items.
- For the environmental protection, bring any unneeded UIMs to a handling counter such as a docomo shop.
- Avoid using in extremely high or low temperatures.
- Do not damage, carelessly touch, or short-circuit the IC.
Data might be lost or malfunction may result.
- Do not drop the UIM or subject it to strong impacts.
Malfunction may result.

Handling Precautions (Continued)

- Do not bend the UIM or place something heavy on it.
Malfunction may result.
- Into the FOMA terminal, do not insert the UIM with a label or sticker pasted.
Malfunction may result.

Notes on handling the FeliCa reader/writer

- The FeliCa reader/writer function on the FOMA terminal uses very weak radio waves which do not require to be licensed as radio stations.
- The FeliCa reader/writer is operated on the 13.56 MHz frequencies. When you use another reader/writer nearby, take enough distance between your FOMA terminal and the reader/writer. Further, ensure that there are no radio stations that use the same frequencies.

Caution

- Do not use the modified FOMA terminal.
Using a modified FOMA terminal infringes the Radio Law.
The FOMA terminals are granted technical regulations conformity certification as the specified radio equipment under the Radio Law and bear a "technical conformity mark" on the nameplate as evidence of conformity. Unscrewing the FOMA terminal and modifying internal components void the technical regulations conformity certification. Do not use the FOMA terminal in this state, which infringes the Radio Law.

- Be especially careful not to operate the FOMA terminal while driving.
You will be imposed punishment if you use the mobile phone in your hand while driving. If you answer a call out of necessity, tell the caller with Hands-free that you will call him/her back, park your car to somewhere safe, and then dial.
- Use the FeliCa reader/writer functions in Japan only.
The FeliCa reader/writer functions on the FOMA terminal have been authorized in compliance with the radio transmission standards in Japan. You might be imposed punishment if you use them overseas.





FOMA Terminal



- Because the FOMA terminals use radio waves, they cannot be used in places where radio waves do not reach, such as inside tunnels, underground, or in buildings; or the outside where radio waves are weak or out of the FOMA service area. They may not be used in the high-rise buildings even when the antennas are unobstructed. You may also experience interruption of calls even when using without moving while the radio waves are strong enough for the three antennas to appear on the display.
- Use the FOMA terminal carefully to avoid disturbing other people when in public, or in crowded or quiet places.
- Since the FOMA terminals use radio waves as the medium of telecommunication, calls may be tapped by the third party. However, the W-CDMA-GSM/GPRS system automatically supports tapping prevention, so your conversation will be incomprehensible to the third party, because it is recognized as mere noise.
- The FOMA terminals change your voice into digital signals and send them to the other party. In places where the radio waves are weak, the digital signals may not be converted correctly, and in such a case, the voice may sound different from the actual original voice.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL. Neither DOCOMO nor the certifiers as listed herein make any representation and warranty as for the security in the use of SSL. In the event that the user shall sustain damage or loss due to the use of SSL, neither DOCOMO nor the certifiers shall be responsible for any such damage or loss.

Certifiers: VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., and Comodo CA Ltd.

- This FOMA terminal supports FOMA Plus-Area and FOMA High-Speed Area.
- The FOMA terminal can be used only via the FOMA network provided by DOCOMO and in DOCOMO's roaming area.
- It is recommended that you make separate notes of the information (such as Phonebook entries, schedule events, text memos, record messages, voice memos, movie memos) stored in the FOMA terminal and keep them in a safe place. Note that we cannot be held responsible for the unlikely event of loss of the stored contents due to a malfunction, repair, change of your model, or other mishandling of the FOMA terminal.
- You are advised to save your important data files to the microSD card. If you have a personal computer, you can transfer and save the information such as Phonebook entries, mail messages, schedule events, and others to the personal computer by using DOCOMO keitai datalink.

Role of Each Part

Light sensor

For sensing brightness (Do not cover it with your hands or do not put a sticker on it. Doing so might disable the brightness detection.)

Display

Command navigation key

For operating functions and menus

Mail key

For showing the Mail menu

Menu key

For showing the Main menu

Start key

For starting calls

Numeric keys

For entering phone numbers and text

Microphone

For speaking to the other party

Infrared data port

For using infrared communication and the infrared remote control

Earpiece

For listening to the other party's voice

i-mode key/i-αappli key

For showing the i-mode menu

Camera key/1Seg key

P-05A A different key is allocated.

Voice recorder key/1Seg key

CLR Clear key

For clearing entered characters

Power/End key

For turning on/off the power or ending calls

Multi key

For showing the Multitask menu

Connector terminal

Integrated terminal for connecting earphone or for charging, etc.

Using Earphone

Connect an optional connector-terminal-compatible earphone.

 
When using a connector-terminal-non-compatible earphone, use an optional plug adapter for connection.

 
- When inserting or pulling the plug adapter, take hold of the plug for the handset side and insert or pull it straight. Be careful not to take hold of the cover of the connector terminal and plug for the handset side together when you pull it out.
- See page 29 for how to open the cover of the connector terminal.

Flat plug of the Flat-plug Earphone /Microphone with Switch

Earphone terminal (Flat-plug)

Example for connecting the Flat-plug Earphone/Microphone with Switch (option)

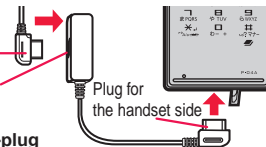

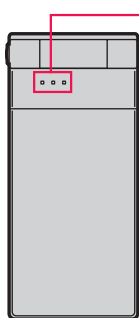


Call/Charging indicator

It lights/flickers for incoming calls/mail messages and during a call, by the following patterns:

	Left	Center	Right
Incoming call	Lights	—	Lights/Flickers※
Incoming mail	—	Lights	Lights/Flickers※
Missed call	Flickers	—	—
Unread mail	—	Flickers	—
Missed call/ Unread mail	Flickers	Flickers	—
Charging	—	—	Lights in red

 ※Lights/flickers as you set for "Set color".

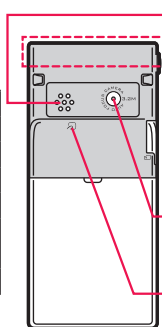

Speaker

FOMA antenna/1Seg antenna

The antenna is embedded in the handset. Do not cover the antenna part with your hand for better communication/reception.

Camera

P-05A

The camera is not mounted.

mark

Place this mark over the scanning device when you use Osaifu-Keitai.

Strap hole

Side ▲ key

For turning up the earpiece volume or ring volume

 
Side ▼ key

For turning down the earpiece volume or ring volume



One-push open button

You can open the FOMA terminal by pressing the One-push open button. (Be careful not to drop the FOMA terminal by the rebound when opened.)

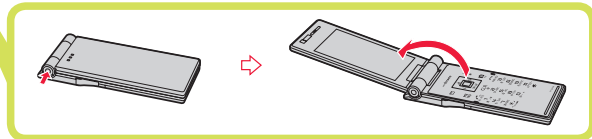

microSD card slot

For inserting a microSD card



How to Read Display

Battery level (estimate)



Full \longleftrightarrow Low

Radio waves reception level (estimate)



Strong \longleftrightarrow Weak



...You are out of the FOMA service area or radio waves do not reach.



...New i-concier information exists.



...A microSD card is inserted.



...During Lock All



...Unread Messages R/F exist.



...Unread i-mode mail or SMS messages exist.

When this icon is shown, charge the battery.



Stand-by Display



Stand-by display at purchase

For the displays in "How to Read Display", the following settings are changed from the default Stand-by display.







- **[MENU]** → **SET./SERVICE** → **Display** → **Display setting** → **Stand-by display** → **OFF**
- **[MENU]** → **SET./SERVICE** → **Display** → **Display setting** → **Clock** → **Stand-by clock** → **[Message]** (Position) → **Pattern 1**

 
You can check the meanings of icons also by following operations.

Stand-by display → **[MENU]** → **SET./SERVICE** → **Display** → **Icons**



Status Icon

-  ...Vibrator is set.
-  ...Ring Volume is set to "Silent".
-  ...During Manner Mode
-  ...An alarm is set.
-  ...The number of record messages
-  ...The number of videophone record messages

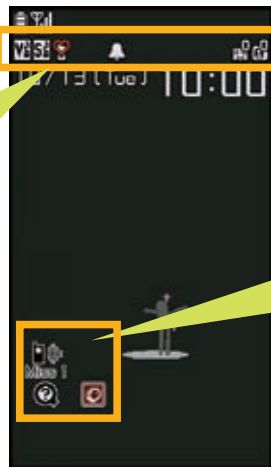

Notification Icon

-  Miss 1 ...Missed call
-  Mss ...Record message
-  Mss ...Videophone record message
-  New 1 ...New i-mode mail or SMS
-  New 1  ...New Message R/F
-  ...使いかたナビ (Guide)
-  ...i-concier

Desktop Icon

Proceed to Respective Functions from Icons

You can proceed to respective functions from "Status icon", "Notification icon", and "Desktop icon".

 
1. Stand-by display  Use  to highlight an icon  (Select)




Executing Operations Shown at the Bottom of the Display

When you want to execute the operation shown at the lower part of the display, press the key corresponding to the display.

Basic display examples and key assignments

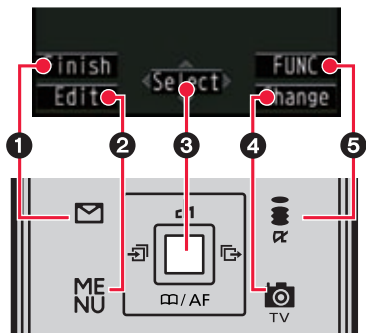

①	Indicates the operation you can perform with the key.	Finish
②	Indicates the operation you can perform with the key.	Edit Store
③	Indicates the operation you can perform with the key.	Select Set
	Indicates the operation you can perform with the key.	
④	Indicates the operation you can perform with the key.	Change Detail
	P-05A Indicates the operation you can perform with the key.	
⑤	Indicates the operation you can perform with the key.	FUNC Set

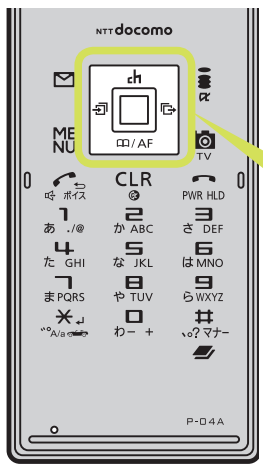 

Command Navigation Key



 
- Moves the cursor or highlighted display up. (Press and hold to scroll continuously.)
- Scrolls the page up.



- Moves the cursor to the right.
- Scrolls forward page by page. (Press and hold to scroll continuously.)



- Fixes the operation.



- Moves the cursor to the left.
- Scrolls back page by page. (Press and hold to scroll continuously.)



- Moves the cursor or highlighted display down. (Press and hold to scroll continuously.)
- Scrolls the page down.



 
Operating Menu

In this manual, the easiest operation to select a menu item is described.

- Some menu functions can be operated by the keys other than **ME NU**.



Stand-by display

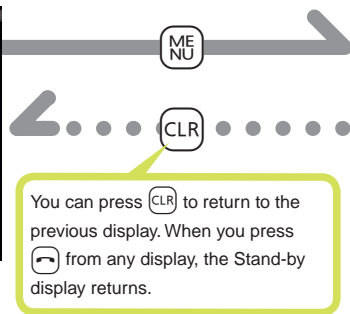

Menu icon

 
Menu icon name

The name of the selected menu icon is displayed. In this manual, the item names shown here are described in operating procedures, etc.






■ Descriptions for operating procedures in this manual

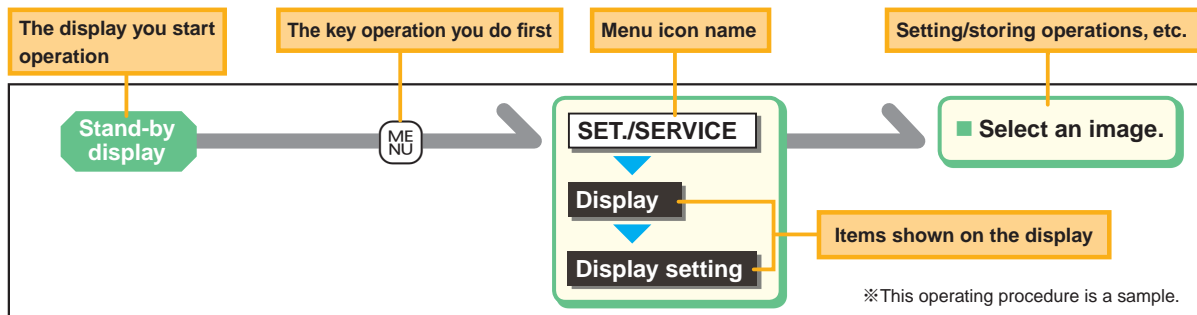In this manual, above operation is described as below.





 
Use  to highlight an item and press . Repeat selecting items to call up the target function.

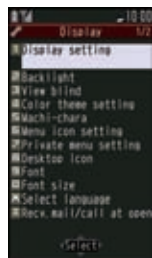


Point
• See "Function List" for the menu items of each function. (See page 110)

Function Menu

When (**FUNC**) is displayed at the lower right of the display while you are operating each menu, you can use specific functions such as Store, Edit, and Delete by pressing .

<Example> Display the Function menu of a Phonebook entry





 

Looking Up a Function You Want to Use

Stand-by display



■ Use to highlight “” (Guide icon), and press (選択)

■ Select a search method.

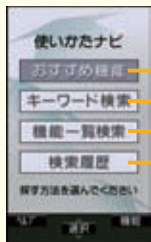

Displays the recommendable functions.

Enter keywords and retrieve.

 
Retrieves from the function list.

Displays up to 30 search histories.


■ Select a function you want to use

この機能を使う
(Operate function)

Executes the function.
Operate each function.

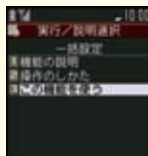

 You can check the explanation of functions and operating method as well.

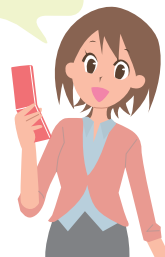



Attaching UIM and Battery

 


About UIM

The UIM is an IC card that holds your information such as phone numbers. You cannot use the FOMA terminal for communications such as voice/videophone calls, i-mode, or sending/receiving mail, unless the UIM is inserted.


Remove the back cover

While pressing the surrounding part of "C", slide the back cover (2 mm or more) in the direction of the arrow to unlock it.

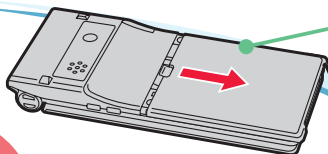

Insert the UIM

 With the golden IC surface downward, push the UIM slowly to the end while pressing the surface of it.

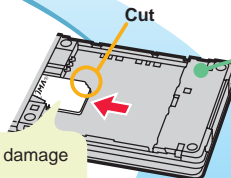


Take care not to damage the IC portion.

When you remove the UIM, pull it out slowly while sliding.

Arrow mark

Attach the battery pack

 With the arrow mark facing up, securely attach the battery pack through the dents of the FOMA terminal, and then push the battery pack to the direction B while pressing it to the direction A.

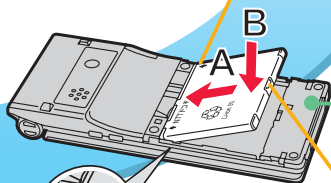

Dent

Projection

When you remove the battery pack, lift it up with the projection of the battery pack.

 
Attach the back cover

After placing the back cover on the FOMA terminal as illustrated above, slide it in the direction of the arrow and attach it in place.

- Make sure there is no gap between the back cover and the FOMA terminal, and slide the back cover to close it completely.

If it is not completely closed, you may hurt your hand or fingers because it is made of metal.

Charging Battery

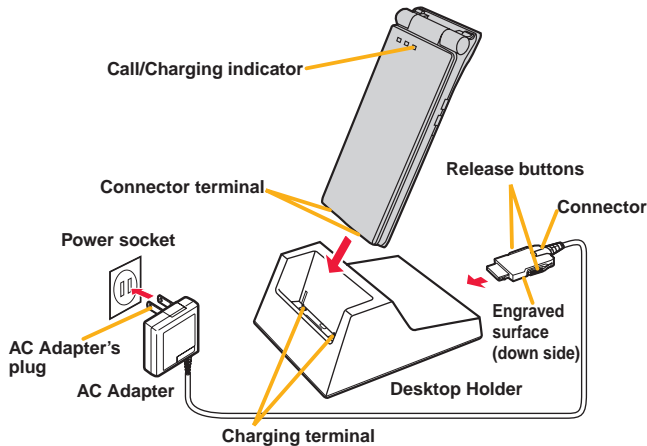

■ Plug the connector of AC Adapter (option) horizontally with its engraved side facing down into the connector terminal of the Desktop Holder (option).

■ Pull out the AC Adapter's plug, and plug it into a household power socket of 100 V AC.

 
■ Set the FOMA terminal onto the desktop holder securely.

- Be sure to set the closed FOMA terminal onto the desktop holder.
- Be careful that a commercial strap is not caught between the FOMA terminal and desktop holder.

■ When charging is completed, hold the desktop holder with fingers and lift up the head of FOMA terminal to remove.



When Charging Only with the AC Adapter

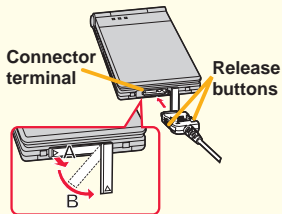

Into the connector terminal, insert the connector with the engraved surface facing up until it clicks. When pulling out, pull the connector straight while pressing the release buttons.

When charging the battery, place the cover of the connector terminal as illustrated. Pull out the left side ("▷" mark side) of the connector terminal's cover to the direction A, and turn it to the direction B.

 
Point

- For detaching, pull out the connector horizontally while pressing the release buttons. Malfunction could result if you try to pull it forcibly.
- When charging starts, the call/charging indicator lights in red. When charging is completed, it goes out.



Turning Power ON

- Press and hold for at least one second.
- To turn power off, press and hold at least two seconds.

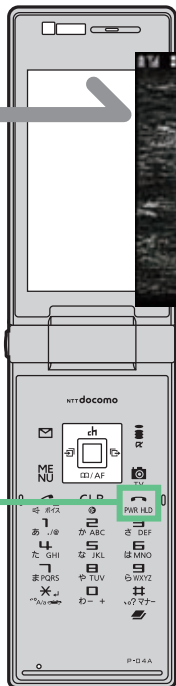


Stand-by display

When the Initial Setting display appears

After the Wake-up display is shown, the Stand-by display appears.

 This display is designed reflecting the image of tuning on the radio receiver.

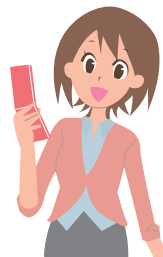


Switching to English Display

Stand-by display ▶ **ME** ▶ 設定/サービス (SET./SERVICE) ▶ ディスプレイ (Display)
 ▶ バイリンガル (Select language) ▶ **English** (英語)




Configuring Initial Setting

 YES

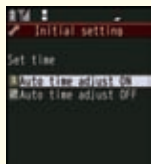

Set the date and time.

 
Auto time adjust ON

- After confirming the current date and time, press  (Select).



Set Keypad Sound and Font Size.

- Select "ON" or "OFF" of Keypad Sound




- Select a font size.




Set your Terminal Security Code. (See page 88)

 - Enter "0000"
- Enter your new Terminal Security Code

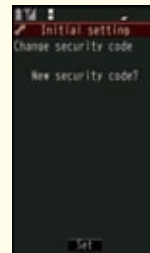

YES

Point

- You can set each item afterward separately.
- The set time might be reset if the battery pack is left removed for a long time.
- When the time cannot be corrected automatically such as when  is displayed and the date/time has not been set, the Manual Time Setting display appears.



Displaying World Time

Stand-by display



ME
NU

SET./SERVICE

Clock

World time watch

ON

- Use  to select an area and press  (Select).

The time of the specified area is displayed on the Stand-by display.



Summer Time

You can advance the time displayed for the overseas country you stay and for a region of World Time Watch by one hour.

Stand-by display  ME
NU  SET./SERVICE  Clock  Summer Time  ON




Checking Your Own Phone Number



PHONEBOOK

▼

Own number

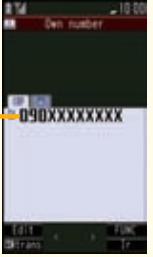Own number 

From the display on the right, press (**Edit**) to store your name, mail address, etc.

After entering each item, press (**Finish**) to complete storing.

Notifying the Other Party of Your Phone Number



Stand-by display →

SET./SERVICE

▼

NW services

▼

Caller ID notification

▼

Activate

→



Entering Characters

You can enter characters for storing Phonebook entries or composing mail messages.

■ Switch the input modes.

Each time you press (Mode), input modes are switched.

- 漢: Kanji/Hiragana input mode
- ↓
- か: Katakana input mode
- ↓
- abc: Alphabet input mode
- ↓
- 123: Numeral input mode

Other Key Operations

(FUNC):

Enter "Pictogram", "Symbol", etc.

 
: Enter a line feed.

(You can switch between uppercase and lowercase or enter " " and "°" by pressing this key after you enter a character.)

: (For at least one second)

Undo the fixed/erased characters.

: Clear text.

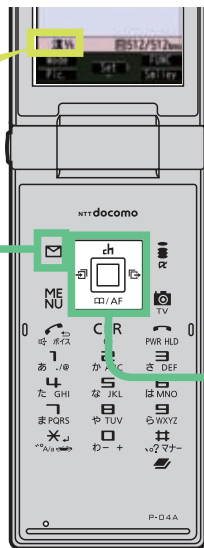

■ Enter characters.

By repeatedly pressing a numeric key, you can enter other characters allocated to the key.

<Example> When you press **2**

Kanji/Hiragana input mode

「か→き→く→け→こ」

Katakana input mode

「カ→キ→ク→ケ→コ→2」

Alphabet input mode

「a→b→c→A→B→C→2」

Numeral input mode

「2」

■ Convert/fix characters.

Use to specify the area to be converted.

Use to move the cursor onto the candidate list.

Use to select a conversion candidate.

Use to fix the character.



 
<Example> Entering “お菓子”

Character Entry display



- Enter hiragana characters in Kanji/Hiragana input mode.


Press **1** five times,
press **2** once, and
press **3** twice.

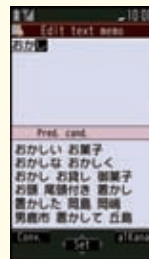

When a character on the same key comes after a character such as “あ” and “い”, press **□** to move the cursor.


- Fix characters.

 Use **□** to highlight “お菓子” and press **□** **Select**.

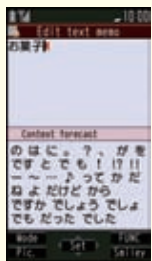

- Convert into kanji characters.

 Use **□** to move the cursor onto the candidate list.

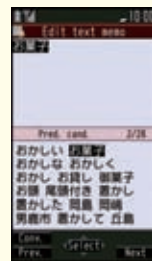




Changing Ring Tone




Settings
 
<Example> Changing the ring tone for incoming calls

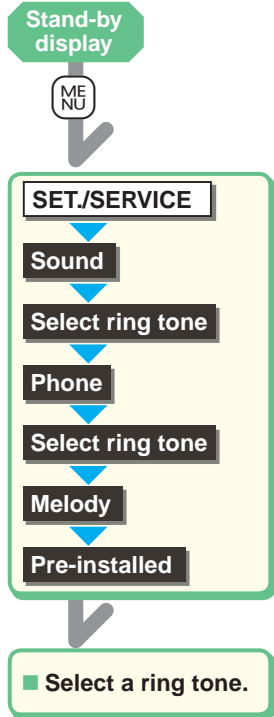


Ring Volume

 You can adjust the ring volume.

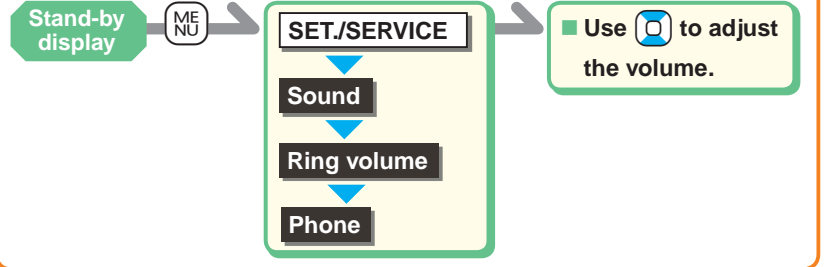

Vibrator

 You can set the vibrator to notify you of incoming calls.

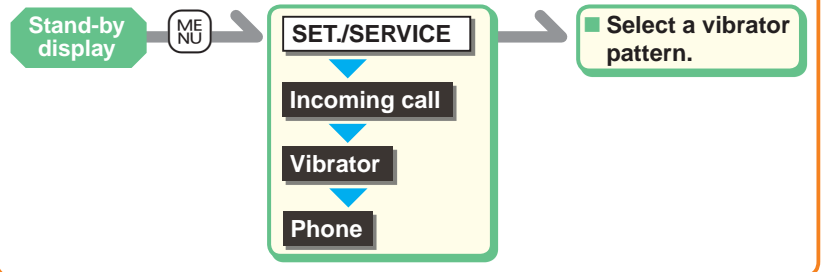



Setting Color for Call/Charging Indicator and Others

Stand-by display

ME
NU

SET./SERVICE

Illumination

All illum. setting

When you set each illumination separately, select a type of illumination.

■ Select a pattern.

They flicker in the set color when a mail message comes in.



Using Kisekae Tool

You can set the ring tone, Stand-by display, menu icons and others at a time.

Stand-by display

ME
NU

SET./SERVICE

Kisekae



■ Highlight a Kisekae Tool file and press (Set all)

 
YES

Reset Changed Menu Icon

1. Stand-by display (FUNC) Reset
2. Enter your Terminal Security Code YES



Changing Stand-by Display

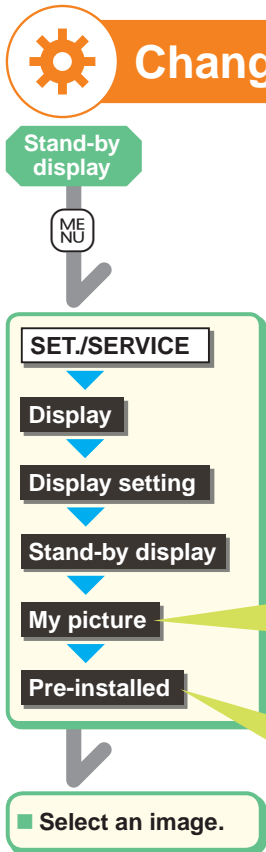


When you set a movie (i-motion), select "i motion" instead.


When you set an image downloaded from a site, select "i-mode".


Backlight

You can set lights for the display and keypad to OFF.



- Press and hold for at least one second from the Stand-by display.




"" appears on the Stand-by display.


To Set Back to ON
Perform the same operation.


View Blind

You can make the display hard to see from people around.



- Press and hold for at least one second from the Stand-by display.

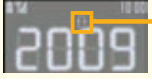

"" appears on the Stand-by display.

To Release
Perform the same operation.



Menu Icon Setting

 
You can set the display of Main Menu.

Stand-by display



Select a pattern.

When you set "Simple menu", Main Menu switches to a menu of only basic functions for easy operation.

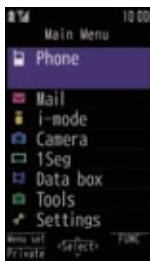

Font Size

You can change the font size.

Stand-by display



SET./SERVICE

Display

 
Font size

Set at one time




Select an item.


When the font size is set, the displays are shown as below:

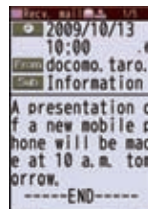


Extra large

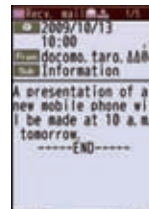 

Large

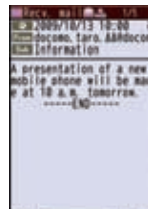 

Standard

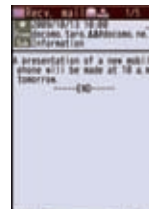 


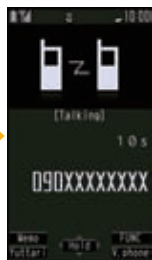 
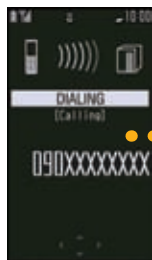 
Small

Making a Call

Stand-by display

■ Enter a phone number, starting with the city code.

■ Press  to end the call.




Display during Videophone Calls


 (Change):


Switch the display locations of the received image and sent image.



 P-05A Press .

 : Adjust the magnification.

Yuttari Talk

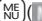You can slow down the other party's speaking speed by pressing  (Yuttari) during a voice call.

Press  (Normal) again to return to the normal speed.


When you make a videophone call, press  (V. phone) instead of .



Receiving a Call

■ A call comes in.

The ring tone sounds and the Call/Charging indicator flickers.

■ Press  to end the call.

When a Videophone Call Comes in

You can receive the videophone call with the same operation.