



Use Call Records and Make a Call

Stand-by display ▶ (Received calls) or (Redial) ▶ Select a call record ▶ ▶ Press to end the call.

The phone number you dialed or you received call from is stored as a record. You can make a call using the record.



Point

- DOCOMO videophones conform to 3G-324M, standardized by the international standard 3GPP. You cannot connect to the videophone that uses a different format.
 - **3GPP (3rd Generation Partnership Project):**
This is the regional standards organization for developing common technical specifications for third-generation mobile telecommunication systems (IMT-2000).
 - **3G-324M:**
This is the international standard for the third generation of mobile videophones.
 - This FOMA terminal supports only 64 kbps communication speed of the videophone.
You cannot talk on the videophone at 32 kbps communication speed.
 - This FOMA terminal has no inward-facing camera. Therefore, the image sent to the other party is a Chara-den image, still image, or image being shot by the outward-facing camera.
- P-05A** You cannot send the image through your camera because the FOMA terminal has neither outward-facing camera nor inward-facing camera.



When You cannot Answer a Call

By activating Record Message in advance, you can record a caller's voice/video message when you cannot answer a call.

- When a call comes in, an answer message is played back after the ring time elapses. Then, the caller can record a voice/video message.

Activate Record Message

Stand-by display



LIFEKIT

Rec.msg/voice memo

Record message setting

ON

■ Select an answer message

■ Enter a ring time (seconds).

Point

Record Message is not available when the FOMA terminal is out of the service area or turned off and cannot receive calls.

Play Back Record Message

Stand-by display



LIFEKIT

Rec.msg/voice memo

Play/Erase msg.

■ Select a record message.



As callers' messages are recorded to your FOMA terminal, you are not charged for recording/playback operations.

For Videophone Record Message

Select "Play/Erase VP msg."

Press (Erase) and select "YES" to erase a record message being played back.

Put a Call on Hold during a Call/while Ringing

<While ringing> While ringing ► Press to release hold and answer the call.

- The caller is charged for the call even while the call is on hold.

<During a call> During a call (Hold) ► Press to release hold and answer the call.

- The caller is charged for the call even while the call is on hold.

 



Setting Manner Mode

Just by pressing a key, you can set to mute the tones from the FOMA terminal such as a ring tone and keypad sound.



- Press and hold for at least one second from the Stand-by display.

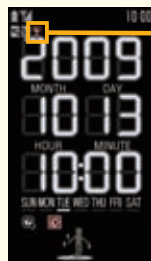

 appears on the Stand-by display.

To Release

Perform the same operation.



When you activate Manner Mode, the vibrator instead of the sound notifies you of incoming calls, etc.



Calls



Using Public Mode

Once you activate Public Mode (Drive Mode), the guidance is played back telling that you cannot answer the call as you are currently driving or in a place where you should refrain from speaking on the phone. Then the call is disconnected.

Once you activate Public Mode (Power Off), the guidance is played back for a call coming in while the power is off, telling that you cannot answer the call as you are currently in a place where the power should be turned off (hospital, airplane, around priority seat in a train, etc.). Then the call is disconnected.

 



Calls

Public Mode (Drive Mode)



- Press and hold for at least one second from the Stand-by display.

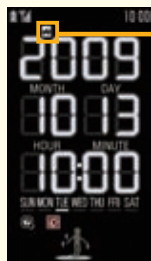

" appears on the Stand-by display.



To Deactivate

Perform the same operation.

When a call comes in during Public Mode (Drive Mode), the ring tone does not sound and the record is stored in "Received calls". The alarm does not sound even when the specified alarm time comes.

Public Mode (Power Off)

Stand-by display

- Enter      .



To Deactivate

Stand-by display       



Using Network Services

Available Network Services

The following are the DOCOMO network services available from the FOMA terminal.

- The network services are not available when you are out of the service area or out of reach of radio waves.
- For details, refer to "Mobile Phone User's Guide [Network Services]".
- For subscriptions and inquiries, contact "docomo Information Center" on the back page of this manual.

Service	Application	Monthly fee
Voice Mail Service	Required	Charged
Call Waiting Service	Required	Charged
Call Forwarding Service	Required	Free
Nuisance Call Blocking Service	Not required	Free
Caller ID Notification Service	Not required	Free
Caller ID Display Request Service	Not required	Free
Dual Network Service	Required	Charged

Service	Application	Monthly fee
English Guidance	Not required	Free
Multi Number	Required	Charged
2in1	Required	Charged
Public Mode (Drive Mode)	Not required	Free
Public Mode (Power Off)	Not required	Free
OFFICEED	Required	Charged
Melody Call	Required	Charged

- "OFFICEED" is a pay service which is available on a subscription basis.
For details, visit the DOCOMO-enterprise-oriented website (in Japanese only). <http://www.docomo.biz/d/212/>
- "Deactivate" does not mean that the contract for Voice Mail Service, Call Forwarding Service or other services is canceled.
- You can store new network services in the menu when they are provided by DOCOMO.
- In this manual, a brief outline for each network service is described following the procedure using the menus of the FOMA terminal.



Using Network Services (Continued)

■ Voice Mail Service

• Activate

Stand-by display  **SET./SERVICE** **NW services** **Voice mail** **Activate** **YES** **YES** ▶ Enter a ring time (seconds).

• Deactivate

Stand-by display  **SET./SERVICE** **NW services** **Voice mail** **Deactivate** **YES**

• Play messages

Stand-by display  **SET./SERVICE** **NW services** **Voice mail** **Play messages** **Play (voice mail)** or **Play (videophone)** **YES**
▶ Operate following the voice guidance.

■ Call Waiting Service


• Activate

Stand-by display  **SET./SERVICE** **NW services** **Call waiting** **Activate** **YES**

• Deactivate

Stand-by display  **SET./SERVICE** **NW services** **Call waiting** **Deactivate** **YES**

• Answer an Incoming Call during a Call

Each time you press , you can switch the parties you can talk with.

■ Call Forwarding Service

• Activate

Stand-by display  **SET./SERVICE** **NW services** **Call forwarding** **Activate** **Register fwd number**
▶ Enter the phone number of forwarding destination ▶ **Set ring time** ▶ Enter a ring time (seconds) ▶ **Activate** ▶ **YES**

• Deactivate

Stand-by display  **SET./SERVICE** **NW services** **Call forwarding** **Deactivate** **YES**



Services Available for FOMA Terminal

Available services	Phone number
Directory assistance service (Charges apply: guidance fee + call fee) ※Listed phone numbers only can be given.	(No prefix) 104
Telegrams (Telegram charges apply)	(No prefix) 115
Time check (Charges apply)	(No prefix) 117
Weather forecast (Charges apply)	City code of the desired area + 177
Emergency calls to police	(No prefix) 110
Emergency calls to fire station and ambulance	(No prefix) 119
Emergency calls for accidents at sea	(No prefix) 118
Disaster messaging service (Charges apply)	(No prefix) 171
Collect calls (Charges apply: guidance fee + call fee)	(No prefix) 106

Point

- When using the collect call (106), the recipient is charged a call fee and handling fee ¥90 (¥94.5 with tax) for each call. (As of December 2008)
- When using the directory assistance service (104), you are charged a guidance fee ¥100 (¥105 with tax) plus a call fee. For whom having weak eyesight or handicapped arms, the guidance is available charge free. For more details, dial 116 (NTT inquiry counter) from land-line phones. (As of December 2008)
- This FOMA terminal supports "Emergency Location Report".
When you make an emergency call such as at 110/118/119, information about the place where you are dialing from (location information) is automatically notified to emergency-response agencies such as police stations. It might happen that your correct location is not detected by emergency-response agencies depending on the location you dialed or radio wave conditions.
When you do not notify your phone number by call such as by adding "184", your location information and phone number are not notified. However, when an emergency-response agency has judged that the location information and phone number should be detected because of emergency priority such as protection of human life, they might be notified regardless of your setting.
The region and timing "Emergency Location Report" is introduced vary depending on the preparation of respective emergency-response agencies.
- When you make a call at 110/119/118 from the FOMA terminal, tell an operator that you are calling from a mobile phone and then precisely notify your phone number and actual location. Further, remain still while talking to prevent your call from being disconnected. Do not turn off the power immediately after the call, but instead make sure that your phone can receive calls for at least 10 minutes.
- You might not be connected to regional police/fire station depending on the area from where you call. If this happens, use public phones nearby or land-line phones.
- If you use "Call Forwarding Service" for the land-line phone and specify a mobile phone as the forwarding destination, callers may hear ringback tone even when the mobile phone is busy, out of the service area, or the power is turned off depending on the settings of the land-line phone/mobile phone.
- Note that the FOMA terminal is not available to 116 (NTT inquiry counter), Dial Q2, Message Dial, and credit call services. (You can use auto credit call to the FOMA terminal from land-line phones or public phones.)





Storing a Phonebook Entry

 
Stand-by display



(for at least one second)

Phone

■ Enter each item.

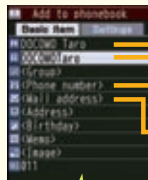

Enter a name.

Enter a reading.


Enter a phone number.

Enter a mail address.



 
(Finish)

The display for entering a name appears. Enter a name and proceed.

You can store a postal address and birthday as well. You can also separately set a ring tone or mail ring tone for the party of the Phonebook entry by pressing  to show the "Settings" display.



Making a Call by Using the Phonebook

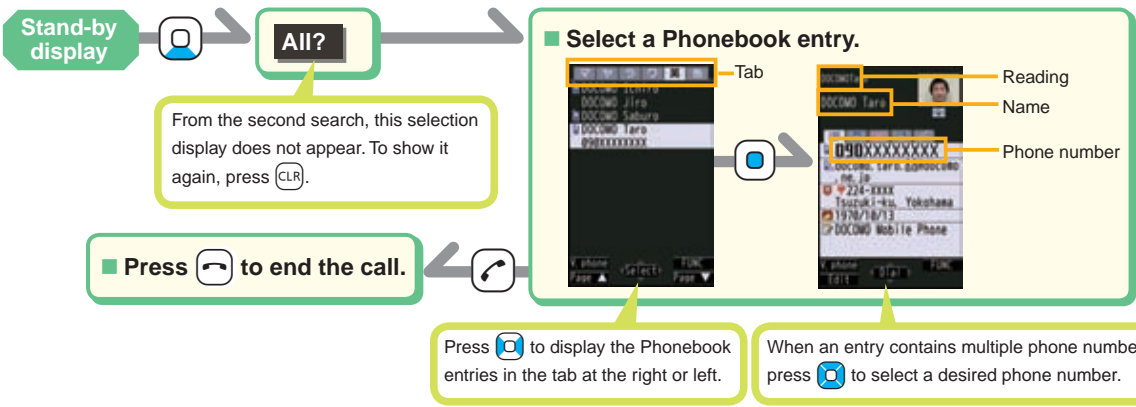

Delete a Phonebook Entry

Stand-by display → **[Phonebook]** → Select a Phonebook entry → **[FUNC]** → *Delete data* → *This phonebook* → **YES**



Making an International Call

You can use WORLD CALL when you make an international call from Japan.

■ WORLD CALL

WORLD CALL is the international call service available from DOCOMO mobile phones.

When you have signed up for FOMA service, you have contracted to use "WORLD CALL" (except those who have applied not to use it).

- You can make calls to about 240 countries and regions.
- The WORLD CALL charges are added to your monthly bill for FOMA service.
- The application/monthly fee is free of charge.
- The service is not available with some billing plans.
- Contact "docomo Information Center" on the back page of this manual for inquiries about WORLD CALL.
- When using international carriers other than DOCOMO, contact them.
- The caller ID might not be notified, or might not be displayed correctly depending on the carrier. In this case, you cannot make a call by using Received Calls.

Stand-by display

○ (for at least one second)

Country/area code

Area code (city code)

Destination phone number



Dial

■ Press to end the call.

Press (V. phone) to make an international videophone call.

When the area code (city code) begins with "0", enter it except for the "0". However, include "0" when making a call to some countries or regions such as Italy.



Using Overseas

You can use International Roaming (WORLD WING) when you make a call overseas.

■ International Roaming (WORLD WING)

International Roaming (WORLD WING) is a service that enables you, using local carrier's networks, to make calls or to communicate even in the foreign countries which are out of the service area of the FOMA network.

- There are communication systems of 3G Network, GSM Network, and GPRS Network as the main networks overseas.
- At the time of purchase, the FOMA terminal is set to automatically switch networks in foreign countries.
- Overseas use fee is added to your monthly bill. You might be requested, however, to pay the fee with the bill for the following month or later depending on the overseas carrier of your stay. Note that the usage amount to be paid for a month might not be charged in the same month.
- When a call comes in during international roaming, the call is forwarded from Japan. The caller is charged a call fee to Japan and the receiver is charged a receiving fee.
- Refer to the following booklets before you use your FOMA terminal overseas:
 - “Mobile Phone User’s Guide [International Services]”
 - “Mobile Phone User’s Guide [Network Services]”
 - “海外ご利用ガイド (Guide for Overseas Use)” pre-installed in the “i-mode” folder of “My documents” in Data Box



Using Overseas (Continued)

■ Available services overseas

Communication Services	3G	GSM	GPRS
Voice call ^{※1}	○	○	○
Videophone call ^{※1}	○	—	—
SMS	○	○	○
i-mode ^{※2}	○	—	○
i-mode mail	○	—	○
i-Channel ^{※2 ※3}	○	—	○
i-concier ^{※4}	○	—	○
Packet communication by connecting with a personal computer	○	—	○

○: Available —: Not available

※1 In B Mode or Dual Mode of 2in1, you cannot make calls from Number B.

※2 You need to make overseas usage settings.

※3 You need to make i-Channel settings. You are charged a packet communication fee each time you receive i-Channel messages (including the basic channel).

 
※4 You need to make overseas usage settings for i-concier. You are charged a packet communication fee each time you receive information.

Point

- Some services are not available depending on the carrier or network. For connectable countries, regions, and carriers, refer to the DOCOMO Global Service web page.
- The packet communication fee for the overseas use differs from the one for the use in Japan.




Making a Call to Outside the Country You Stay (Including Japan)

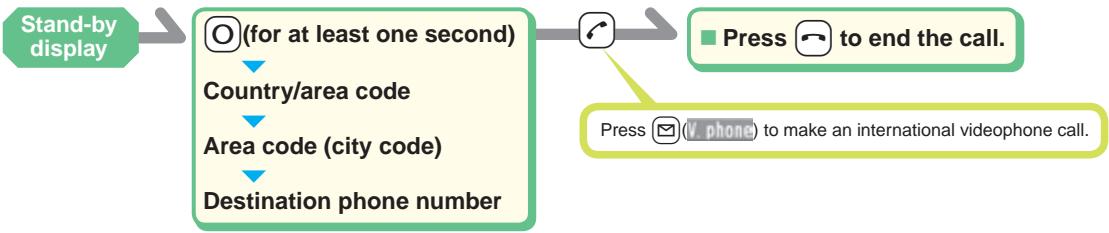

Point

- Enter “81” as a country/area code when you make an international call to Japan or you make a call to another WORLD WING user.
- When the area code (city code) begins with “0”, enter it except for the “0”. However, include “0” when making a call to some countries or regions such as Italy.

 Making a Call to a Person in the Country You Stay

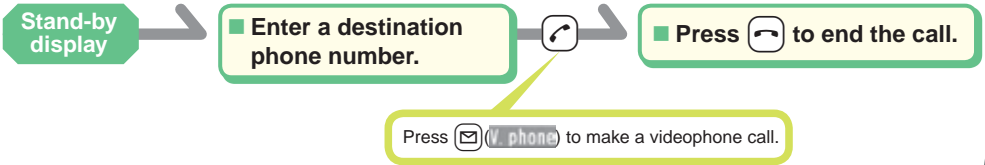



Using i-mode Mail

Once you subscribe to i-mode, you can exchange e-mails over the internet as well as among i-mode phones.

You can attach images, etc., besides mail text. You can easily compose and send expressive mail messages using Deco-mail pictograms.

For details on i-mode mail, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Sending i-mode Mail

 


Mail

Stand-by display



Enter each item.

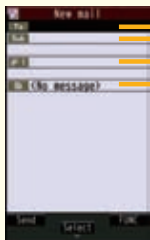

- Enter a mail address.
- Enter a subject.
- Select a file such as an image.
- Enter text.




You can enter pictograms by pressing while composing a text message.



Displaying Received i-mode Mail

Stand-by display



When you receive an i-mode mail message,  appears on the Stand-by display.

 
Inbox




Select a folder




Select an i-mode mail message.

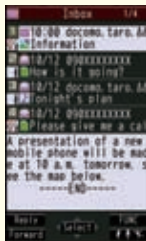

Check New Messages

By pressing and holding  for at least one second, you can check with the i-mode Center for a new mail message or Message R/F.

 When you receive an i-mode mail message or Message R/F, the following display appears.




Number of item

Select an item to show the display for selecting a folder.

Early Warning "Area Mail"

As an Area Mail message, you can receive information such as emergency earthquake alerts distributed from the Japan Meteorological Agency.

When you receive an Area Mail message,  lights.

The received content of some messages is automatically displayed. To erase the displayed content, press .



SMS

The destination address is a phone number, so you can send messages even if you do not know the mail address of the destination FOMA terminal.

Message R/F

This service automatically delivers news, etc. Message R (Request) and Message F (Free) are available for message type.

Reply to i-mode Mail

Press   while i-mode mail is displayed. Enter text and then send.



Mail



Using i-mode

i-mode is a service that enables you, using the display of the FOMA terminal supporting i-mode (i-mode phone), to use online services such as site (program) access, Internet access, and i-mode mail.

- i-mode is a pay service that is available on a subscription basis.
- For details on i-mode, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

■ Before Using i-mode

- Contents of sites (programs) and web pages (Internet web pages) are generally protected by copyrights law. Data such as text and images that you obtained to the i-mode phone from sites (programs) and Internet web pages can be used for personal entertainment but cannot be used in whole or in part, as it is or after modification, for commercial purposes or sent as e-mail attachments or output from your i-mode phone to other devices, unless you have permission from the copyright holders.
- If you replace the UIM with another one or turn on the power with the UIM not inserted, you cannot display/play back files, depending on the model, such as still images/movies/melodies obtained from sites, attached files (still images/movies/melodies and other files) sent/received by mail, screen memos, or Messages R/F.
- When the file whose display and/or playback is restricted by the UIM is set for the Stand-by display or specified ring tone, the FOMA terminal works with the default contents when you replace the existing UIM with new one or turn on the power with the UIM not inserted.

■ About “P-SQUARE”

You can download the pre-installed i-appli programs, Chara-den images, Machi-chara images, Kisekai Tool files, templates, dictionaries, and Deco-mail pictograms from the “P-SQUARE” site (in Japanese only).

iMenu → メニューリスト (Menu List) → ケータイ電話メーカー (Mobile Phone Maker) → P-SQUARE



QR code for
accessing the site

Accessing Sites

Stand-by display



Return to Previous Page/Go to Next Page

Press to return to the previous page and press to go to the next page.

Change to Menu in English

Stand-by display Menu English





Using i-αppli

“i-αppli” is a software program for i-mode mobile phones. By downloading* various software programs from the i-mode site, you can use your FOMA terminal more conveniently. You can automatically update the stock price information or weather information, and enjoy games without accessing network.

※You are separately charged a packet communication fee.

- The packet communication fee for the overseas use differs from the one for the domestic use.
- For details on i-αppli, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

Downloading i-αppli

■ Select a software program from an i-αppli obtainable site.

OK

YES

Starting i-αppli

Stand-by display



(for at least one second)

■ Select a software program.



■The following i-αppli programs are pre-installed:

- ケータイTOOL<GLOBAL> (Keitai Tool <GLOBAL>)
- ズーキーパー DX Ver.P (ZOOKEEPER DX Ver.P)
- Gガイド番組表リモコン (G Guide Program List Remote Control)
- iD 設定アプリ (iD Setting Application)
- DCMX クレジットアプリ (DCMX Credit Application)
- 楽オク出品アプリ2 (Rakuoku Exhibition Application 2)
- 地図アプリ (Map Application)
- i アプリバンキング (i-αppli Banking)

※For how to operate, refer to Help for each software program.

※You can delete the pre-installed i-αppli programs.

You can re-download them from the “P-SQUARE” site.

■Deadlines for re-download services

・“ケータイTOOL<GLOBAL> (Keitai Tool <GLOBAL>)”, “ズーキーパー DX Ver.P” (ZOOKEEPER DX Ver.P): the end of January, 2013

※The re-download service might be halted or closed without notice even in the service period.



Using i-motion

i-motion is a data file composed of video, sound and music, and you can play it back after downloading from an i-motion compatible site into your FOMA terminal. You can also set it for a ring tone.

Downloading i-motion

- Select an i-motion movie from an i-motion obtainable site.

Save

YES

- Select a folder.



Playing Back i-motion

 
Stand-by display

ME
NU

DATA BOX

motion

- Select a folder
- Select a file.

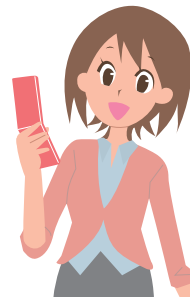

Site Access



Using i-Channel



This service distributes information such as news and weather forecast to i-Channel mobile phones. The automatically received latest information flows on the Stand-by display by tickers. You can read it on the i-Channel list by pressing the i-Channel key.

There are two kinds of i-Channel as below:

“Basic channel” Provided by DOCOMO

(You are not charged a packet communication fee for auto-updates of information.)

“Favorite channel” Provided by IPs (Information Providers)

(You are separately charged a packet communication fee for auto-updates of information.)

 
Note that you are separately charged a packet communication fee for browsing detailed information for both of “Basic channel” and “Favorite channel”.

When you use the international roaming service, you are charged a packet communication fee for both auto-update and browsing detailed information.

- i-Channel is a pay service which is available on a subscription basis (You need to subscribe to i-mode to apply for i-Channel).
- For details on i-Channel, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.



Connecting to i-Channel

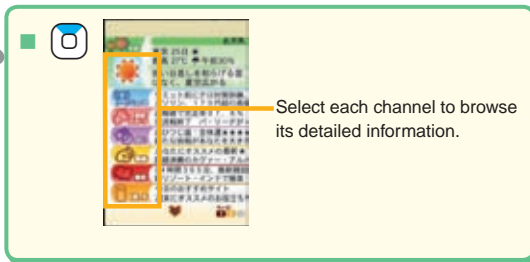



Using i-concier

i-concier is a service that a character (Machi-chara image) on the Stand-by display supports your life as a “concierge”. With i-concier, you can receive the information of train status or other daily necessities, download schedule events/i-schedule events, and save/update the Phonebook entries, ToruCa files, and schedule events/i-schedule events.


■ Before Using i-concier

 
- i-concier is a pay service which is available on a subscription basis (You need to subscribe to i-mode to apply for i-concier).
- If you have not subscribed to Data Security Service but will newly subscribe to i-concier, you will subscribe to Data Security Service as well as i-concier.
- There are two kinds of information; one is sponsored by DOCOMO and the other is by IPs (Information Providers). You are not charged a packet communication fee for DOCOMO-sponsored information when receiving it. You are separately charged a packet communication fee for IP-sponsored Information when receiving it.
- You are separately charged a packet communication fee for using detailed information.
- While using the international roaming service, you are charged a packet communication fee for both receiving information and browsing detailed information.
The packet communication fee for the overseas use differs from the one for the domestic use.
- Depending on the contents (information, i-schedule, and others), you might be separately charged an information fee besides the i-concier monthly fee.
- You are separately charged a packet communication fee for auto-updates of i-schedule, ToruCa, and Phonebook.
- For details on i-concier, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.



Using i-concier (Continued)

Receiving Information

- When you receive information, “” blinks and the content is displayed on the Stand-by display.

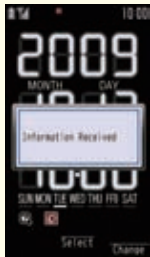

- Select a message.

 
Displaying i-concier Files

Stand-by display

ME
NU

i-CONCIER

- Select a piece of information.

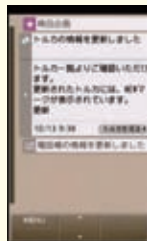




Using Full Browser

You can browse Internet web pages designed for PCs using the Full Browser function.

- Note that you are charged a high communication fee for the massive data communication such as browsing Internet web pages having many images or downloading data files. For details on the packet communication fee, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.
- You can browse Internet web pages composed of frames. You can select a frame to display it as well.
- You can display SSL/TLS[®]-compatible pages via Full Browser.

 ※SSL and TLS are the methods of safer data communication using authentication/encryption technology to protect your privacy. SSL/TLS pages prevent eavesdropping and information alteration during communication by exchanging encrypted data files. Further, server authentication prevents web spoofing, thus making your personal information such as credit card number or postal address exchanged safer.

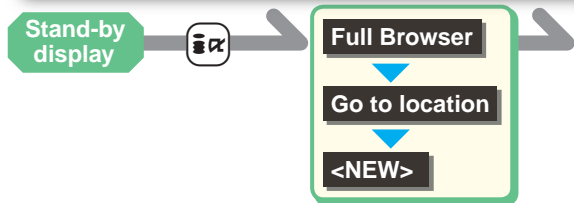


Point

- You might not correctly display some Internet web pages.

Enter a URL.

OK

 You can access an Internet web page.

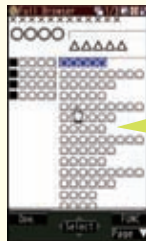

Operations on the Full Browser display

- 1 Return to previous page.
- 3 Go to next page.
- 7 Reduce display size.
- 8 Display in standard size.
- 9 Enlarge display size.





Shooting with Camera

 
P-05A The camera function is not available.

Stand-by display

Start the camera.

Record
Save

For still image

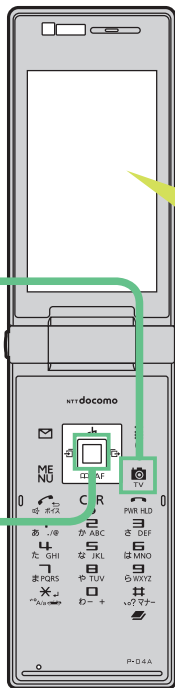

Finder Display

Camera mode

: Still image shooting (photo) mode

: Movie shooting (movie) mode

Focus

Press to focus.

 
Zoom

Press to adjust the magnification.

Settings

You can change settings by the corresponding key.


- ①: Brightness ()
- ②: White balance ()
- ③: Photo mode ()
- ④: Image quality ()
- ⑤: Image size ()
- ⑥: High sensitivity ()
- : Focus ()

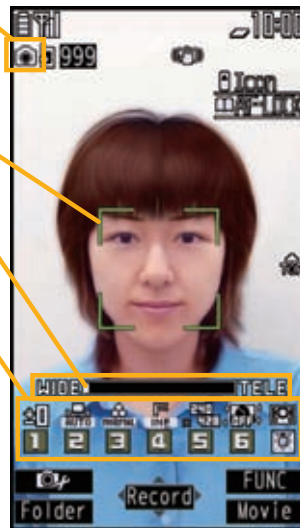

Switching Camera Modes


From the Function menu of the Finder display, you can switch to "Photo mode", "Movie mode", "Continuous mode", and "Bar code reader".
 
<Example> Recording a movie in the Movie mode

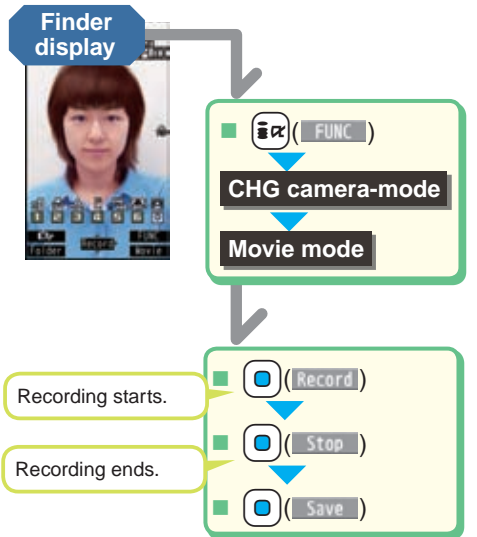

Viewing a Image

 Finder display

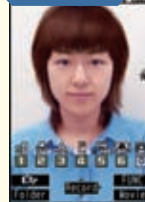

ME
NU (Folder)

Select a still image.



- Do not leave the FOMA terminal with the lens pointing direct to the sunlight. Pixels may be discolored or burns may result.
- When the battery level is low, you may not be able to save shot still or movies.
- You need to obtain a microSD card separately to use the functions related to the microSD card.



Shooting with Camera (Continued)

Scanning a Bar Code

You can use the outside camera to scan QR codes and store them as data files.

From the scanned data, you can make calls, compose i-mode mail messages, access Internet web pages, and so on.

■When scanning with Bar Code Reader

- Take the code as large as possible within the guide frame.
- Autofocus works when you scan a code about 10 cm or more away from it.
- When you scan a code in the out-of-focus state, the recognition rate lowers.
- Scan so that the camera is in parallel with the code.

Guide frame



■QR Code

QR Code is one of the 2-dimensional codes that denotes data in the vertical and horizontal directions.

Kanji, katakana, alphanumeric characters, and pictograms are displayed when you scan it. Some QR codes have image or melody information.

- “株式会社NTTドコモ (NTT DOCOMO, INC.)” is displayed when you scan this QR code with the FOMA terminal.



<Example> Access P-SQUARE by using QR code on the right



QR code for accessing the site

1. Stand-by display ▶  ▶ LIFEKIT ▶ Bar code reader
2. Scan code ▶ Fit a QR code to the guide frame and press  ▶  (Start)
3. Select a URL ▶ i-mode ▶ YES





Watching 1Seg

1Seg is a service provided by television entrepreneurs (broadcasting stations).

You are not charged a communication fee for receiving audio and video. For viewing fee of NHK, contact NHK.

※ You are charged a packet communication fee for browsing "Data broadcasting site" and "i-mode site". You might be charged an information fee for using some sites (i-mode pay sites).

※ For details on the 1Seg service, browse the web pages as follows:

The Association for Promotion of Digital Broadcasting

From personal computers: <http://www.dpa.or.jp/english/>

From i-mode: <http://www.dpa.or.jp/1seg/k/> (In Japanese only)

※ 1Seg is not available overseas.

■ Radio waves

1Seg is one of the broadcasting services receiving radio waves (broadcasting waves) different from that used for the FOMA services.

1Seg might not work correctly in the following places:

- Places far away from the radio tower that transmits broadcasting waves
- Mountain-ringed regions or behind buildings
- In tunnels, underground, or recesses of buildings

※ The reception conditions might be improved by moving your FOMA terminal away from or close to you, or by moving yourself to another place.

■ Battery level

If you try to start 1Seg when the battery is low, the battery alert tone sounds, and the confirmation display appears asking whether to start it. In addition, when the battery level becomes low while you are watching or recording a 1Seg program, the battery alert tone sounds.

- When you do nothing from the confirmation display for about one minute, 1Seg automatically terminates.

 
■ Messages on the display when you use 1Seg for the first time

When you use 1Seg for the first time after purchase, the Exemption Clause Confirmation display appears. If you select "NO" from the confirmation display which appears after pressing  (OK), the same confirmation display does not appear afterward.

- The Exemption Clause Confirmation display also appears when you replace the UIM with another one or remove the UIM.




Watching 1Seg (Continued)

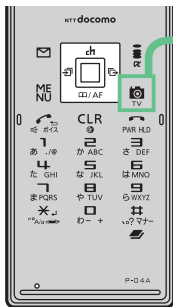

■ Press and hold for at least one second from the Stand-by display to start 1Seg.


P-05A Press and hold  for at least one second.

 - When you have not stored any channel list, select “OK” and execute Channel Setting.

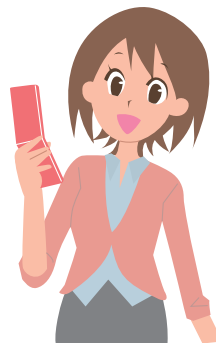


Setting Channels

  
When you activate 1Seg for the first time or change the area you are in, you need to operate “Channel setting”.

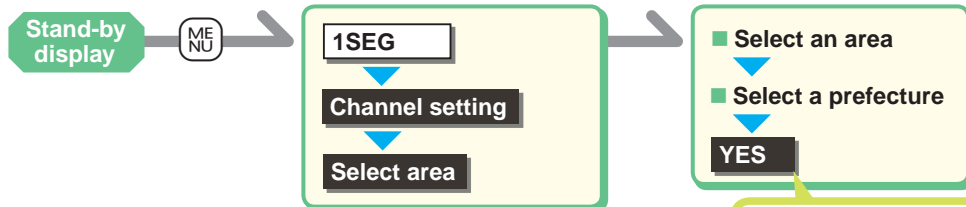

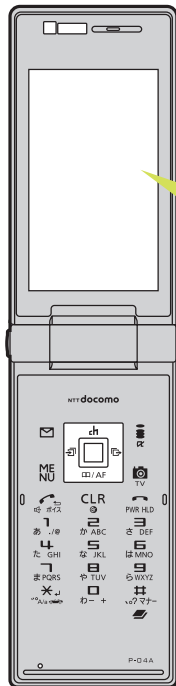

 Broadcasting stations set by prefecture are stored to a channel list.
Select a stored channel list and then select a broadcasting station to watch a 1Seg program.



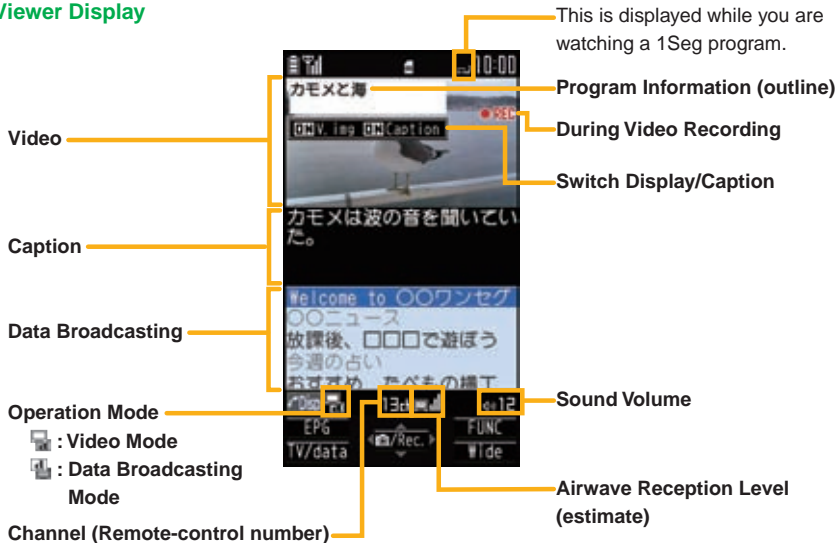


Viewer Display



-  : Video Mode
-  : Data Broadcasting Mode

About the Operation on the Viewer Display

-  : Sound volume adjustment
-  : Channel selection
-  (for at least one second): Video recording
 - The recorded video is saved to the microSD card (*DATA BOX* → *1Seg* → *Video*).



Using Music&Video Channel

Music&Video Channel is a service which automatically delivers up to about one-hour programs at night by just setting your favorite music programs in advance. Further, you can enjoy high-quality movie program of up to about 30 minutes. Programs are updated periodically and you can enjoy the delivered programs at your convenient time such as on commuting.

- For the details on Music&Video Channel, refer to “Mobile Phone User’s Guide [i-mode FOMA version]”.

■ Before using Music&Video Channel

- Music&Video Channel is a pay service which is available on a subscription basis. (To apply for Music&Video Channel, you need to subscribe to Pake-hodai, Pake-hodai full or Pake-hodai double besides i-mode.)
- Other than the service fee for using Music&Video Channel, you might be separately charged an information fee depending on the program.
- If you insert the UIM to the Music&Video Channel incompatible FOMA terminal after you subscribe to Music&Video Channel, you cannot use Music&Video Channel Service. Note that the service fee applies unless you cancel the Music&Video Channel subscription.
- If you cancel your i-mode contract, program files in the Downloaded Program folder might be deleted.
- You cannot set or obtain programs during international roaming.* Take procedures to halt the distribution of programs before going abroad. Then, after homecoming, resume receiving distribution.
※Note that you are charged a packet communication fee for the i-mode access if you try to set or obtain programs during international roaming.

