

Internet

Getting Started 13-2

Using Yahoo! Keitai 13-3

Opening Yahoo! Keitai Main Menu 13-3

Entering URL 13-4

Using Access Histories 13-4

Exiting Mobile Internet 13-4

Using PC Site Browser 13-5

Opening Menu 13-5

Entering URL 13-5

Using Access Histories 13-5

Exiting Internet 13-5

Basic Operations 13-6

Using Cursor 13-6

Text Entry & Item Selection 13-7

Using Information 13-8

Bookmarks & Saved Pages 13-8

Managing Bookmarks & Saved Pages 13-9

Bookmarks/Saved Pages Functions 13-10

Downloading Image/Sound Files 13-11

Using Number, Address or URL 13-11

Streaming 13-12

Option Menu Items 13-13

Getting Started

Access Yahoo! Keitai Mobile Internet and PC sites.

"Yahoo! Keitai" is both a SoftBank Mobile Internet service and the SoftBank Mobile Internet portal.

View PC Internet websites via PC Site Browser.

Internet

Yahoo! Keitai

- View Mobile Internet Websites (☞ P.14-3)
- Download image/sound files, etc. (☞ P.14-10)
- Register S! Quick News (☞ P.7-2)

PC Sites

- View PC Sites (☞ P.14-5)
- Download still images (☞ P.14-10)

Note

- Separate subscription is required for Network access.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Video Calls cannot be received while connecting to the Network.

Cache Memory

Retrieved information is temporarily saved in Cache Memory.

When full, oldest is deleted first.

- Previously viewed pages may load from Cache Memory. To view the latest, update information (☞ P.14-11).
- Cached items with expiry dates are deleted upon expiry.
- Information remains even after handset is disconnected from the Network or handset power is turned off.

Tip

- Clear Cache ● Delete Cookies (☞ P.17-14) ● Initialize Browser (☞ P.17-15)

SSL/TLS

SSL (Secure Socket Layer) and TLS (Transport Layer Security) are encryption protocols for secure Internet transmissions of important/sensitive information such as credit card numbers.

Server certificates are saved on handset (☞ P.17-14).

Notes

When a security notice appears, subscribers must decide for themselves whether or not to open the page.

SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co.,Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust.net Co., Ltd. cannot be held liable for any damages associated with the use of SSL and TLS.

Tip

Settings ● Security Settings (☞ P.17-14)

Using Yahoo! Keitai

Opening Yahoo! Keitai Main Menu

Select Yahoo! Keitai Main Menu items to access websites.

Main Menu ► Yahoo! Keitai

1 *Yahoo! Keitai*

Handset connects to the Network.

2 Select a menu item

- Repeat Step 2 as required.
- Basic Operations: ☞ P.14-6

Note

- Shortcut: In Standby, press [Y] [Y/]

Entering URL

Enter URLs (addresses beginning with "http://" or "https://") directly to access websites, or open previously viewed pages using URL histories.

- Up to 20 URL histories are stored.

Main Menu ► Yahoo! Keitai ► Enter URL

1 Enter URL Directly

Direct Entry → Enter URL

Use URL History

URL History List →

Select a URL



URL History List Window

■ Edit URL Histories

> In Step 1, **URL History List** → Highlight URL → [Menu] → **Edit** → Edit URL

■ Delete URL Histories

> In Step 1, **URL History List** → (Highlight URL →) [Menu] → **Delete** → **One** or **All** → [YES]

Using Access Histories

Open previously viewed pages using access histories.

- Up to 100 access histories are stored. (The number of savable histories varies depending on data amount.)

Main Menu ► Yahoo! Keitai ► History

1 Select a history



Access History Window

■ Delete Access Histories

> In Step 1, (Highlight URL →) [Menu] → **Delete** → **One** or **All** → [YES] (→ For **All**, enter Phone Password)

Exiting Mobile Internet

1 [Back] → [Home]


Note

- Closing handset does not affect active browser.

Using PC Site Browser

Opening Menu

View PC websites using PC Site Browser.

- When PC Site Browser is active,  appears.
- Some pages may not be viewable.
- Viewing PC websites may incur high charges.

Main Menu ► Yahoo! Keitai ► PC Site Browser

1 Homepage

Confirmation appears. Press  [OK].


- To show confirmation each time: *Show Every Time*

2 Select a menu item

Repeat Step 2 as required.

Tip

 
Settings

- Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai ( P.17-13)

Entering URL

Follow same operation accessed from Yahoo! Keitai.

 
Main Menu ► Yahoo! Keitai ► PC Site Browser
► Enter URL

- Follow Step 1 of same operation accessed from Yahoo! Keitai. ( P.14-4)

Using Access Histories

Follow same operation accessed from Yahoo! Keitai.

Main Menu ► Yahoo! Keitai ► PC Site Browser
► History

- Follow Step 1 of same operation accessed from Yahoo! Keitai. ( P.14-4)

Exiting Internet

1  → 

Note

- Closing handset does not affect active browser.

Basic Operations

Using Cursor

Move Cursor	Use cursor to select underlined menu items. ⏪ to move right ⏩ to move left ⏮ to move to previous line ⏭ to move to next line
Scroll Pages	Scroll bar appears on right side or at bottom of Display when page content continues beyond view. ⏮ scroll up/down ⏭ scroll left/right ⏮ scroll page up by a screenful ⏭ scroll page down by a screenful ● To scroll continuously, press and hold above keys.
Move to previous page/ next page	Previously viewed pages are temporarily saved in Cache Memory (⏮ P.14-2). ⏮ [Back]: Return to previous page ⏭ [Menu] → Forward : View next page ● Some web pages may not appear after performing the steps above.

Web Page Sound Volume

- When Manner Mode is active or Voice Call Ringer Volume set to **Silent**, web page sounds are muted.
- Sound volume cannot be adjusted while viewing web pages. Adjust Voice Call Ringer Volume beforehand (⏮ P.XX-2).
- If activated, Media Player sound volume is adjustable.
- Incoming message and S! Quick News ringtones do not sound while Yahoo! Keitai is active regardless of mode or message ringtone settings. 📧 indicates and handset vibrates for Incoming messages, and handset vibrates for S! Quick News.

When Authentication is Required

Some pages require user authentication for access.

If required, enter user ID or password.

Tip

 
Settings

- Change Font Size
- Scroll Unit
- Images Off
- Sounds Off (⏮ P.17-13)
- Delete User ID or Password Entered when Authentication is Required (⏮ P.17-14)

Text Entry & Item Selection

Enter text or select items to send information.

Example:

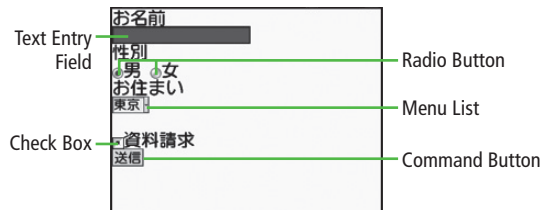

- Actual web pages may differ in appearance.

Text Entry Field	Highlight field → → Enter text → ● Enter previously entered text (input memory). [Menu] → <i>Insert</i> → <i>Input Memory</i> → Select input memory
Menu List	Highlight field → Menu list appears. Highlight an item → Selected items are highlighted.
Radio Button	Highlight <input type="radio"/> → When selected, appears.
Check Box	Highlight <input type="checkbox"/> → When selected, appears.
Command Button	Highlight the button → Corresponding command is executed.

Tip

Settings ● Delete Input Memory

Using Information

Bookmarks & Saved Pages

Bookmark websites or save page content to Saved Pages.

- Some copy protected materials cannot be saved.

Bookmarks	Save links to websites. Handset connects to the Network to open the link. Create folders to organize Bookmarks.
Saved Pages	Save page content. Handset opens saved pages without connecting to the Network.

Saving Web Pages

1 Open a web page → ☒ [Menu] → **Bookmarks** or **Saved Pages**

2 **Add**

3 **Save Bookmarks**

Select title → Edit title → ☒ [Save]

- To save to folders: Select Folder → Select a folder (Not selectable when no folders exist in Bookmarks.)

Save Saved Pages

Edit title

Viewing Bookmarks & Saved Pages

Main Menu ▶ Yahoo! Keitai (▶ PC Site Browser)

1 **Bookmarks** or **Saved Pages**

Example: Yahoo! Keitai Browser



Bookmarks List Window



Saved Pages List Window

2 Select an item

Tip

- Save URLs to Bookmarks ● Open Bookmarks & Saved Pages List while Online (☞ P.XX-10)

Managing Bookmarks & Saved Pages

Follow the steps below to open Bookmarks or Saved pages list:

■ Yahoo! Keitai

Main Menu ► Yahoo! Keitai ► Bookmarks or Saved Pages

■ PC Site Browser

Main Menu ► Yahoo! Keitai ► PC Site Browser
► Bookmarks or Saved Pages

Note

- Panasonic site bookmark cannot be edited/deleted.
- When a different USIM Card is inserted, Saved Pages do not appear or title name cannot be changed.

Creating New Bookmark Folders

- Folders cannot be created within existing folders.

- 1 In Bookmarks list window, [Menu] → **Create**
- 2 **Folder** → Enter title

■ Move Bookmarks to Folder

> In Bookmark list window, highlight a bookmark → [Menu] → **Move to** → Select a folder

■ Edit Folder Title

> In Bookmark list window, highlight a folder → [Menu] → **Edit** → Edit folder title

Editing Bookmark Titles/URLs

- 1 In Bookmark list window, highlight a bookmark → [Menu] → **Edit**
- 2 Select a title/URL
- 3 Edit Bookmark title/URL → [Save]

Renaming Saved Pages

- 1 In Saved Pages list window, highlight an item → [Menu] → **Rename**
- 2 Edit title

Bookmarks/Saved Pages Functions

From ► **Main Menu** ► **Yahoo! Keitai** (► **PC Site Browser**)
► **Bookmarks** or **Saved Pages**

Save URLs to Bookmarks

> [Create]* → **Bookmark** → <Title> → Enter Title → <URL> → Enter URL → When saving to a folder, select Folder → Select a folder → [Save]

* When saved items exist: [Menu] → **Create**

Open Bookmarks & Saved Pages List while Online

> On a wave page, [Menu] → **Bookmarks** or **Saved Pages** → **List**

Delete Bookmarks/Folders

> Follow the steps below

Item	Operation/Description
Delete	> Highlight a bookmark/folder → [Menu] → Delete → One → []
Delete Selected Items	> [Menu] → Delete → Selected Files → (Repeat: Select a bookmark/folder)* → [Delete] → [] * To cancel selection, press [] again.
Delete All Items	> [Menu] → Delete → All → [YES] → Enter Phone Password

Delete Saved Pages

> Follow the steps below

Item	Operation/Description
Delete	> Highlight a saved page → [Menu] → Delete → One → []
Delete Selected Saved Pages	> [Menu] → Delete → Selected Files → (Repeat: Select a saved page)* → [Delete] → [] * To cancel selection, press [] again.
Delete All Saved Pages	> [Menu] → Delete → All → [YES] → Enter Phone Password

Reorder Bookmarks/Folders

> Highlight a bookmark/folder → [Menu] → **Reordering** → [] to select new order

Send Bookmark URLs

> Highlight a bookmark → [Menu] → **Send Bookmark** → **S! Mail** or **SMS**



Send Bookmarks via Infrared

> Highlight a bookmark → [Menu] → **Send via Infrared**

Downloading Image/Sound Files

Save images, sounds, etc. to Data Folder or Memory Card.

- For PC Site Browser, only still images can be saved.

- 1 Open a web page →  [Menu] → *Select item*
- 2 Select a file
File details appear.
- 3  [Save]
- 4 **Phone** or **Memory Card**

Available menu items vary by saved content.



Note

- 840P does not support Progressive JPEG files.
- Do not remove/install Memory Card while saving files to it.
- Do not turn handset power off while downloading or saving files. Files may be damaged.
- Some copy protected files may not be saved.

Using Number, Address or URL

Use linked numbers, addresses or URLs to make calls, send messages, access websites, or save them directly to Phone Book.

- 1 Open a web page containing phone numbers, mail addresses or URLs
- 2 **Phone Number**
Select a phone number → Select an item (See below)

Item	Operation/Description
Voice Call	Make a Voice Call > 
Video Call	Make a Video Call > 
Phone Book	Save a number to Phone Book (🔗 P.4-3)

E-mail Address

Select an address → Select an item (See below)

Item	Operation/Description
S! Mail	Create S! Mail (🔗 From Step 4 on 🔗 P.XX-4)
SMS	Create SMS (🔗 From Step 4 on 🔗 P.XX-8)
Phone Book	Save mail address to Phone Book (🔗 P.4-3)

URL

Select URL

Handset connects to the Network.




Streaming

- Supported by compatible files on Yahoo! Keitai sites only.
- Streaming files cannot be saved.

Main Menu ► Yahoo! Keitai ► Yahoo! Keitai


1 Open a web page → Select a file

Media Player activates and streaming starts.

- To pause:  →  to resume
- Playback Window Operations:  P.7-9
(Replay Track, Play Previous and Play Next are unavailable)

2 or [Back] to exit

Note

- Streaming requires a continuous Network connection. Network remains connected even during a pause (Transmission fees apply).
- Streaming indicator appears ( P.1-8).
- Paused streams may stop after three minutes of inactivity.
- When roaming abroad, streaming may be unavailable or not be performed properly.

Incoming Voice Calls while Streaming


Incoming call pauses an active stream.

- Video Calls cannot be received while streaming.

Option Menu Items

In Yahoo! Keitai, press  [Menu] for these options:

- Some functions may not be available depending on web pages.

Item	Operation/Description
Forward	Go to next page
Bookmarks	View Bookmarks list, add bookmarks, or access web pages
Saved Pages	View Saved Pages list or save page content to Saved Pages
Text Copy	Copy page text
Reload Page	Refresh page information
Small Screen/ PC Screen ¹	Toggle display size
Page Operation	Frame In/Frame Out : Select full screen frame Jump to Top : Jump to top of page Jump to Bottom : Jump to end of page Zoom In/Out ¹ : Zoom page in/out
Select Item	View, play or save file to Data Folder (Downloading Images/Sounds:  From Step 2 on P.XX-11)
More	Search in Internet : Search text in Internet Search in this page : Search text within page History : Open previously viewed pages Send Bookmark : Send URL via S! Mail/SMS Enter URL : Enter URL directly or select URL from URL History list to open site Property : View page details or electronic certificates for secure pages Flash(R) Menu : Playback/pause Flash® files

Item	Operation/Description
To PC Site Browser ² / Change Browser ¹	Toggle Yahoo! Keitai/PC site
Yahoo! Keitai ² / Homepage ¹	View top menu
Settings ² /PC Site Browser Settings ¹	Font Size : Change character size Encoding : Change encoding type

¹ PC Site Browser only

² Yahoo! Keitai only

13

Internet

13-14

S! Appli

Before Using S! Appli	14-2
Downloading S! Appli.....	14-2
Using S! Appli.....	14-3
Activating S! Appli.....	14-3
Terminate/Suspend & Resume.....	14-3
Managing Applications	14-4

Before Using S! Appli

S! Appli are Java™-based applications designed to run on SoftBank handsets. Download games and other real-time applications for use on handset.

- Separate subscription required to use downloaded applications (not required for pre-installed S! Appli).
- For usage on pre-installed applications, see Help menu for each S! Appli.

Note

- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Network S! Appli

Network S! Appli requires Network connections.

- Transmission fees apply.

License Information

> [Main Menu](#) ▶ [S! Appli](#) ▶ [Information](#)

Downloading S! Appli

Download up to 100 S! Appli file to handset/Memory Card.

[Main Menu](#) ▶ [S! Appli](#) ▶ [S! Appli List](#)

1 **Download S! Appli**

Handset connects to the Network, and download site appears.

2 Select an S! Appli

Properties appear.

3 Follow onscreen instructions

4 **Phone** or **Memory Card**

Downloaded S! Appli is saved to Data Folder automatically.

- Download may take some time.

5 [YES] to activate

Downloaded S! Appli starts.


- To exit: [NO]


Using S! Appli

Activating S! Appli


Main Menu ► S! Appli ► S! Appli List

1 Select an S! Appli

S! Appli starts and  appears.

- See application Help menu for usage information.
- Confirmation appears when selecting Network S! Appli.
- For a Memory Card S! Appli,  to select **Memory Card** tab before Step 1.

Note

- Activate an S! Appli; **Main Menu ► Data Folder ► S! Appli ► Select an S! Appli**
- Incoming transmissions pause S! Appli.
- View Blind ( P.1-27) is temporarily canceled while an S! Appli is active. To reactivate View Blind, terminate or pause S! Appli.

Tip

Settings ● S! Appli Settings ( P.XX-20)

Terminate/Suspend & Resume

Terminating/Pausing S! Appli

1 While running an S! Appli, 

2 **Terminate** or **Suspend**

 appears for a suspended application.

Resuming/Terminating Paused S! Appli

Main Menu ► S! Appli ► S! Appli List

1 **Resume** or **Terminate**

Resumed application starts from paused point.

Managing Applications

Moving S! Appli between Handset and Memory Card

Main Menu ► S! Appli ► S! Appli List

1 Highlight an S! Appli → [Menu] → *Move*

- Some S! Appli may not be moved to Memory Card.

Deleting S! Appli

Main Menu ► S! Appli ► S! Appli List

1 Highlight an S! Appli → [Menu] → *Delete* → [Delete]

- Some pre-installed S! Appli may not be deleted.

Viewing S! Appli Properties

Main Menu ► S! Appli ► S! Appli List

1 Highlight an S! Appli → [Menu] → *Property*

Set Security Level while Running S! Appli

- Security Level cannot be set for some S! Appli.

Main Menu ► S! Appli ► S! Appli List

1 Highlight an S! Appli → [Menu] → *Permission*

2 Select an item (See below)

Item	Operation/Description
Network Access	Connect to the Network
Auto Invocation	Activate S! Appli
Multimedia Recording	Activate Camera
Data Reading Access	Read Phone Book, schedule events, etc.
Data Rewriting Access	Write/delete Phone Book, schedule events, etc.
Location Access	Retrieve Location information

3 *Always Allowed, Ask First Time, Ask Every Time* or *Not Allowed*

- For *Ask First Time*, confirmation appears the first time application is activated.

Settings

Sound & Vibration	15-2
Ringtones.....	15-2
Warning Tone & Key Tone	15-3
Display	15-4
Main Display	15-4
Display Settings.....	15-4
Main Menu	15-5
Keypad	15-5
Manner Mode	15-6
Date & Time	15-7
Call Settings	15-8
International (Global Roaming).....	15-8
Call Time & Call Cost	15-9
Making & Receiving Calls	15-10
Notification Light	15-11
Phone Book	15-11
Video Call	15-12
Function Menus.....	15-12
Engaged Video Call Settings	15-12

S! Quick News (Japanese)	15-14
Display Settings.....	15-14
Auto Update/Deleting Information	15-14
Messaging	15-15
Universal Settings.....	15-15
S! Mail Settings.....	15-16
Feeling Mail Settings	15-16
SMS Settings	15-17
Internet	15-18
Browser Display Settings.....	15-18
Memory Manager & Reset	15-18
Security Settings.....	15-19
S! Appli	15-20

Settings Sound & Vibration

Ringtones

From ► Main Menu ► Settings ► Sound Settings

Setting/Operation	Default
<p>■ Change Ringtone (Voice Call or Video Call)^{1,2,3}</p> <p>> Assign Ringtone → Voice Call or Video Call → Select a folder in Data Folder → Highlight a tone → [Set]</p>	ブザー.mmf
<p>■ Change Ringtone (Message or S! Quick News)^{1,2}</p> <p>> Assign Ringtone → Message or S! Quick News → Select a folder in Data Folder → Highlight a tone → [Set]</p>	効果音 (キラキラ).mmf
<p>■ Change Ringer Volume (Voice Call, Video Call or Message)⁴</p> <p>> Ringer Volume → Voice Call, Video Call or Message → Adjust volume</p>	Volume 3
<p>■ Change Ringer Volume (S! Quick News)</p> <p>> Ringer Volume → S! Quick News → Adjust volume</p>	Silent
<p>■ Change Ringtone Duration (Message or S! Quick News)</p> <p>> Ringtone Duration → Message or S! Quick News → Enter ring time</p>	5 seconds

■ Set Vibration Alert (Voice Call, Video Call, Message or S! Quick News)⁵

> **Vibration Alert** → **Voice Call, Video Call, Message or S! Quick News** → Select a vibration pattern

OFF

- Files recorded by Voice Recorder cannot be set for ringtones. Some music files cannot be set as Ringtone. (Copy protected files: ☞ P.XX-4)
- When unique tones for each Phone Book entry or Group are set (☞ P.4-4, P.4-5), Phone Book settings take priority.
- If a Voice Call is received while streaming/downloading, default ringtone may sound.
- Same setting applies to sound effects from: Web pages, messages and S! Information Channel. When **Escalating Tone** is set, volume sounds at **Volume 6** (setting may not apply to some content).
- Avoid placing handset on unstable surface when Vibration Alert is active/ while charging battery; cancel Vibration Alert before charging battery.

■ Pre-installed Ringtones

Title	Composer
ブザー	Original Tone
ソナチネ第1番／第4楽章	WOLFGANG AMADEUS MOZART
口笛吹きと犬	PRYOR ARTHUR
ワルキューレの騎行	WAGNER RICHARD WILHELM
おもちゃの兵隊の行進	JESSEL LEON
ウィリアム テル 序曲	ROSSINI GIOACCHINO ANTONIO
騎士たちの踊り OP 64-13	PROKOFEV SERGEJ S
トリッチ・トラッチ・ポルカ	STRAUSS JUN JOHANN
効果音 (運命交響曲)	VAN BEETHOVEN LUDWIG
効果音 (水滴の音)	Original Tone
効果音 (キラキラ)	Original Tone
効果音 (電子音)	Original Tone
効果音 (英語)	Original Tone
効果音 (ショート)	Original Tone
効果音 (ゲーム音)	Original Tone
効果音 (黒電話)	Original Tone
Happy / うれしい	Original Tone
OK / Good	Original Tone
悲しい / ごめんなさい	Original Tone
NG / Bad	Original Tone
注目 / 重要	Original Tone

- Names of composers given above conform to JASRAC Website.

Warning Tone & Key Tone

From ► Main Menu ► Settings ► Sound Settings

Setting/Operation	Default
■ Set Warning Tone Off > <i>Warning Tone</i> → OFF	ON (sound)
■ Change Key Tone > <i>Key Tone</i> → <i>Select Tone Type</i> → Select a tone	Tone 1
■ Change Key Tone Volume > <i>Key Tone</i> → <i>Tone Volume</i> → Adjust volume	Silent

Settings Display

Main Display

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
Change Wallpaper* > <i>Main Display</i> → Select a folder in Data Folder → Highlight an image → [Set]	リング.jpg
Change Backlight Duration > <i>Backlight Time</i> → Select a time	15 seconds
Change Display Color Scheme > <i>Themes</i> → Select a color	White
Change Display Brightness > <i>Brightness</i> → Select a level	Level 3

* Some images may not be set or appear properly. (Copy protected files:
 P.XX-4)

Display Settings

From ► Main Menu ► Settings

Setting/Operation	Default
Set Interface Language > <i>Phone Settings</i> → 言語選択 → English or 日本語	Automatic ¹
Change Clock/Calendar Style > <i>Display Settings</i> → <i>Standby Display</i> → <i>Clock/Calendar Display</i> → Select a clock/ calendar type	Large Clock (Upper Center)
Show Operator Name in Standby > <i>Display Settings</i> → <i>Standby Display</i> → <i>Operator Name</i> → ON	OFF (hide)
Set Standby Window On/Off² > <i>Display Settings</i> → <i>Standby Display</i> → <i>Standby Window</i> → ON (Always) or OFF	ON (Manually)

¹ **Automatic** applies USIM Card language.

² S! Quick News Display Settings (P.XX-14)

Main Menu

From ► **Main Menu** ► Settings ► Display Settings

Setting/Operation	Default
Change Main Menu Theme¹ > <i>Change Menu Theme</i> → <i>Original Menu</i> → Select a menu →	-
Use Other Handset Interface² > <i>Change Menu Theme</i> → <i>S! Familiar Usability</i> → Highlight a menu theme → [Set] →	-
Change Main Menu Background > <i>Main Menu Icons</i> → <i>Change Full Image</i> → Highlight an image → [Set]	-
Change Main Menu Icons > <i>Main Menu Icons</i> → <i>Change Image</i> → (Repeat: Select an icon → Highlight an image → [Set])	-
Reset Main Menu Icons > <i>Main Menu Icons</i> → <i>Reset Defaults</i> →	-

¹ While changing theme, other functions are unavailable. For approximately 30 seconds after process is complete, calls/messages may be blocked.

² Download S! Familiar Usability applications beforehand (☞ P.1-21).

Settings Keypad

From ► **Main Menu** ► Settings ► Phone Settings ► Key Settings

Setting/Operation	Default
Set Keypad Backlight Duration > <i>Keypad Backlight</i> → Select a time or <i>OFF</i>	15 seconds
Change Keypad Function > <i>One Touch Key</i> → <i>Speed Dial</i>	Quick Phone Book Search
Hide Confirmation when Pressing One Touch Site Button > <i>One Touch Site Button</i> → <i>Access Confirm</i> → <i>OFF</i>	ON (show)

Settings Manner Mode

From ► Main Menu ► Settings ► Manner Mode Settings

Setting/Operation	Default
■ Set Manner Mode Type* > Select a mode ● When Manner , Drive or Original Manner is set, an indicator appears in Standby (☞ P.1-8, P.1-10).	Normal
■ Personalize Individual Mode Settings > Highlight a mode → ☑ [Menu] → Edit → Select an item → Edit	—

* Manner Mode and Drive Mode can be activated/deactivated in Standby (☞ P.1-16, P.1-17).

■ Default Settings by Mode

Normal	Manner	Drive	Original Manner Mode
Assign Ringtone (Voice Call/Video Call)			
ブザー.mmf	—	—	ブザー.mmf
Assign Ringtone (Message/S! Quick News)			
効果音 (キラキラ).mmf	—	—	効果音 (キラキラ).mmf
Ringtone Volume (Voice Call/Video Call/Message)			
Volume 3	—	—	Volume 3
Ringtone Volume (S! Quick News)			
Silent	—	—	Silent
Ringtone Duration (Message/S! Quick News)			
5 sec	5 sec	5 sec	5 sec
Key Tone (Tone Type)			
Tone 1	—	Tone 1	Tone 1
Key Tone (Tone Volume)			
Silent	—	Silent	Silent
Warning Tone			
ON	—	OFF	ON
Vibration Alert (Voice Call/Video Call/Message)			
OFF	Pattern 1	OFF	OFF
Vibration Alert (S! Quick News)			
OFF	OFF	OFF	OFF
Answer Phone			
OFF	ON	*	OFF

* When activating Drive Mode, Answer Phone activates automatically, and cannot be set to OFF.

Settings Date & Time

From ► **Main Menu** ► **Settings** ► **Phone Settings**
 ► **Date & Time**

Setting/Operation	Default
Change Date and Time¹ > <i>Home Clock</i> → <i>Date & Time</i> → Enter date → Enter time	—
Deactivate Automatic Time Correction via Yahoo! Keitai² > <i>Time Correction</i> → <i>Automatic Correction</i> → OFF	ON (correct automatically)
Correct Time Manually > <i>Time Correction</i> → <i>Manual Correction</i> → <input type="checkbox"/>	—
Set Local Time (Home Clock) > <i>Home Clock</i> → <i>Home Area</i> → Select a city	Tokyo
Activate Daylight Savings Time (Home Clock) > <i>Home Clock</i> → <i>Daylight Savings Time</i> → ON	OFF
Set Time for a Second Time Zone (Away Clock) > <i>Away Clock</i> → <i>Set Time Zone</i> → Select a city	Tokyo
Activate Daylight Savings Time (Away Clock) > <i>Away Clock</i> → <i>Daylight Savings Time</i> → ON	OFF
Display Away Clock in Standby > <i>Select Clock</i> → <i>Away Clock</i>	Home Clock
Set 12 Hour Time Format > <i>Display Pattern</i> → <i>Time</i> → 12 hour	24 hour

Change Date Format

> *Display Pattern* → *Date* → Select a date format

YY/MM/DD

¹ Date & Time Settings effective on handset: from 00:00 on 2008/01/01 to 23:59 on 2099/12/31

² Time Correction may invalidate Schedule/Alarm entries.

Settings Call Settings

International (Global Roaming)

From ► Main Menu ► Settings ► Call Settings
 ► Optional Services ► International Setting

Setting/Operation	Default
<p>■ Change International Code¹</p> <p>> International Code → Enter Phone Password → Enter International Code</p>	0046010
<p>■ Edit Country/Region Code</p> <p>> Country/Area Number List → Select a country/region → Edit country/region name → Edit country/region code</p>	—
<p>■ Add Country/Region Code</p> <p>> Country/Area Number List → [Menu] → Add → Enter country/region name → Enter country/region code</p>	—
<p>■ Delete Country/Region Code</p> <p>> Country/Area Number List → Highlight a country/region → [Menu] → Delete → [YES]</p>	—
<p>■ Select Operator</p> <p>> Select Operator → Select Auto/Manual → Manual → Select an operator</p>	Automatic







- **Set Operator Priority for Automatic Search**²
- > **Select Operator** → **Set Priority** → [Menu] → **Add, Insert, Edit or Delete**
- **Add**: new network appears at the end of the list; place cursor at the end of the list beforehand.
 - **Insert**: new network appears above selected one.

¹ In Standby, press [Power] → Press and hold [0] (+ appears) to enter International Code automatically. (+ indicates International Code.)

² Available operators vary by network conditions.

Call Time & Call Cost

From ► **Main Menu** ► **Settings** ► **Call Settings**
 ► **Call Time & Cost**

Setting/Operation	Default
View Total Call Charge for Outgoing Calls > <i>All Calls</i> (→ To reset,  →  → Enter PIN2)	-
View Total Call Time for Outgoing Calls¹ > <i>Total Call Time</i> (→ To reset,  → )	-
Display Call Charge² > <i>Display Cost</i> → <i>ON</i>	OFF (hide)
Set Charge Limit^{3,4} > <i>Set Cost Limit</i> →  [Menu] → <i>Edit</i> → Enter PIN2 → Enter charge limit	-
View Remaining Cost > <i>Remaining</i>	-
Enter Currency Denomination and Price per Unit of Call Time > <i>Currency Setting</i> →  → Enter PIN2 → Enter three letter abbreviation for the designated currency → Enter value	-

¹ For Group Calling, total length of all calls made from handset remains.

² Call Cost may not appear depending on subscription.

³ If charge limit is set below the value set in All Calls, outgoing calls are blocked. Reset All Calls or change charge limit to a higher value.

⁴ Emergency numbers (110, 119, 118) are dialable even when the limit is reached.

Making & Receiving Calls

From ► Main Menu ► Settings ► Call Setting

Setting/Operation	Default
<p>■ Press Any Key to Answer Calls¹</p> <p>> Any Key Answer → ON</p>	OFF
<p>■ Answer Calls by Opening Handset</p> <p>> Clamshell Control → Open-to-Answer Call → ON</p>	OFF (not answer)
<p>■ End Calls by Closing Handset²</p> <p>> Clamshell Control → Close-to-End Call → ON</p>	OFF (not end)
<p>■ Open Incoming Call Log for Missed Calls by Opening Handset³</p> <p>> Clamshell Control → Open-to-Display Missed Call → ON</p>	OFF
<p>■ Activate Auto Answer when Using Handsfree Devices⁴</p> <p>> Auto Answer → ON</p>	OFF (not answer automatically)

¹ Valid Keys: , , , , , , , ,

(Unavailable while a call is on hold)

² Unavailable during a call using Earphone. Yahoo! Keitai cannot be canceled by closing handset even if Close-to-End Call is active.

³ Available only when the first information received on handset is Missed Call.

⁴ Handset beeps and call connects after seven seconds. When Auto Answer and Answer Phone (P.2-12) are active, one with shorter Answer Time takes priority. When Auto Answer and Voice Mail, **Ringer Off** (P.2-15) are both active, Voice Mail takes priority.

Settings Notification Light

From ► Main Menu ► Settings ► Phone Settings
► Notification Light

Setting/Operation	Default
<p>■ Set Notification Light for Voice Calls*</p> <p>> <i>Voice Call</i> → Select a color or <i>OFF</i></p>	Color 5
<p>■ Set Notification Light for Video Calls*</p> <p>> <i>Video Call</i> → Select a color or <i>OFF</i></p>	Color 5
<p>■ Set Notification Light for Incoming Messages*</p> <p>> <i>Message</i> → Select a color or <i>OFF</i></p>	Color 2
<p>■ Set Notification Light for Voice Calls in Progress</p> <p>> <i>In Conversation</i> → Select a color or <i>OFF</i></p>	Color 1
<p>■ Set Notification Light for S! Quick News</p> <p>> <i>S! Quick News</i> → Select a color or <i>OFF</i></p>	Color 2
<p>■ Set Notification Light for Clamshell Closing</p> <p>> <i>Clamshell Closing</i> → Select a color or <i>OFF</i></p>	Color 6
<p>■ Turn Off Notification Light for Data Transfer</p> <p>> <i>Data Transfer</i> → <i>OFF</i></p>	ON

● When highlighting a color, Notification Light illuminates.

* Phone Book entry Notification Light (☞ P.4-4, P.4-5) takes priority over this setting.

Settings Phone Book

From ► Main Menu ► Phone Book ► Settings

Setting/Operation	Default
<p>■ Change Save Location for New Entry</p> <p>> <i>Save Settings</i> → <i>USIM</i> or <i>Ask Each Time</i></p>	Phone
<p>■ Open USIM Card Phone Book*</p> <p>> <i>Change View</i> → <i>USIM</i> or <i>Phone & USIM</i></p>	Phone
<p>■ Change Font Size</p> <p>> <i>Font Size</i> → <i>Large</i></p>	Normal

* Depending on the save location setting (Save Settings: ☞ above), selecting *Phone* or *USIM* may prompt a *Change save location as well?* confirmation to appear.

Settings Video Call

Function Menus

From ▶ Main Menu ▶ Settings ▶ Call Settings
▶ Video Call

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Outgoing Image and Sound Settings¹ > <i>Video & Voice Setting</i> → Select an item 	Alternative Picture
<ul style="list-style-type: none"> ■ Change Display Backlight Brightness¹ > <i>Display Backlight</i> → <i>Brightness</i> → Select a level 	Level 3
<ul style="list-style-type: none"> ■ Change Display Backlight Duration¹ > <i>Display Backlight</i> → <i>Backlight Time</i> → <i>Follow General Setting</i>² or <i>Always OFF</i> 	Always ON
<ul style="list-style-type: none"> ■ Change Incoming Video Image Quality¹ > <i>Incoming Video Quality</i> → <i>Motion Prioritized</i> or <i>Quality Prioritized</i> 	Standard
<ul style="list-style-type: none"> ■ Change Alternative Picture > <i>Alternative Picture</i> → Highlight a file → [Set] 	TV コール 代替画像 1.bmp
<ul style="list-style-type: none"> ■ Switch Speaker ON¹ > <i>Loud Speaker</i> → OFF 	ON (speaker on)

¹ To change settings during a call: ☞ P.2-9, Right

² Display Backlight Time setting (☞ P.XX-4) applies.

Engaged Video Call Settings

From ▶ During a Video Call, [Menu] → Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Brightness > <i>Display Backlight</i> → <i>Brightness</i> → Select a level 	Level 3
<ul style="list-style-type: none"> ■ Change Backlight Duration > <i>Display Backlight</i> → <i>Backlight Time</i> → Select an item ● Selecting <i>Follow General Setting</i> applies Display Backlight Time setting. 	Always ON
<ul style="list-style-type: none"> ■ Change Incoming Image Quality > <i>Incoming Video Quality</i> → <i>Motion Prioritized</i> or <i>Quality Prioritized</i> 	Standard
<ul style="list-style-type: none"> ■ Adjust Color Tone to Lighting Conditions > <i>White balance</i> → Select an environment 	Automatic

Settings Digital TV

From **Main Menu** ▶ **TV** ▶ **User Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Hide Caption > <i>Caption</i> → OFF 	ON
<ul style="list-style-type: none"> ■ Change Default View > <i>First View</i> → Normal Screen 	Wide Screen
<ul style="list-style-type: none"> ■ Change Brightness > <i>Display Backlight</i> → <i>Brightness</i> → Select a level 	Level 2
<ul style="list-style-type: none"> ■ Set Backlight Duration while Watching TV > <i>Display Backlight</i> → <i>Backlight Time</i> → Select an item 	Always ON
<ul style="list-style-type: none"> ■ Turn Off Sounds from Data Broadcast/Sites > <i>Data Broadcasting</i> → <i>Sound Effect</i> → OFF 	ON
<ul style="list-style-type: none"> ■ Show Confirmation on Data Broadcast > <i>Data Broadcasting</i> → <i>Reset Confirmation Display</i> → <input type="checkbox"/> 	—
<ul style="list-style-type: none"> ■ Hide Guide in Wide Screen > <i>Icon Always Display</i> → OFF 	ON
<ul style="list-style-type: none"> ■ Reset Channel List > <i>Reset Channel Settings</i> → <input type="checkbox"/> → Enter Phone Password 	—
<ul style="list-style-type: none"> ■ Delete Information Saved in Broadcast Storage Area > <i>Reset Storage Area</i> → Select an item → <input type="checkbox"/> 	—

■ Delete All Information Saved in Broadcast Storage Area

> *Reset Storage Area* → [All] → → Enter Phone Password

—

■ Reset TV Settings

> *Reset TV Settings* → → Enter Phone Password

—

Settings S! Quick News (Japanese)

Display Settings

From ► Main Menu ► Settings ► Display Settings
► S! Quick News Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Show Only Unread Items in Standby > <i>Unread/Read Setting</i> → <i>Unread</i> 	Unread + Read
<ul style="list-style-type: none"> ■ Change Marquee Speed > <i>Marquee Speed</i> → <i>Fast</i> or <i>Slow</i> 	Medium
<ul style="list-style-type: none"> ■ Show Image Data > <i>Image Display</i> → <i>ON</i> 	OFF (hide)

Auto Update/Deleting Information

From ► Main Menu ► Entertainment ► S! Quick News
► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Automatically Update News Flash in S! Quick News List^{1,2} > <i>Auto Refresh</i> → <i>News Flash</i> → Set update frequency 	OFF (not automatically update)
<ul style="list-style-type: none"> ■ Automatically Update General News (Once a day)^{1,2} > <i>Auto Refresh</i> → <i>General</i> → <input checked="" type="checkbox"/> → <i>ON</i> 	OFF (not automatically update)
<ul style="list-style-type: none"> ■ Cancel Automatic Updates for Special News^{1,2} > <i>Auto Refresh</i> → <i>Special</i> → <i>OFF</i> 	ON (Automatically update every four hours) ^{1,2}
<ul style="list-style-type: none"> ■ Delete S! Quick News Information > <i>Del S! Quick News List</i> → <input checked="" type="checkbox"/> [YES] → Enter Phone Password 	—

¹ If calls are in progress at update time, auto update does not occur until next update.

² Video Calls are rejected during auto update.

Settings Messaging

Universal Settings

From ► Main Menu ► Messaging ► Settings
 ► Universal Settings


Setting/Operation	Default
<p>■ Open Incoming Mail Folder Automatically by Opening Handset for New Messages¹</p> <p>> <i>Clamshell Control</i> → ON</p>	OFF
<p>■ Change Font Size²</p> <p>> <i>Font Size</i> → <i>Large</i> or <i>Small</i></p>	Normal
<p>■ Confirm Message Delivery (Available when Messaging to SoftBank Handset Numbers)</p> <p>> <i>Delivery Report</i> → ON</p>	OFF (not confirm)
<p>■ Filter Messages into Folders</p> <p>> <i>Mail Delivery Rule</i> → Select a folder → [Menu] → <i>Add Address</i> → Select a search/entry method → Select/enter address</p>	–
<p>■ Filter Messages by Subject</p> <p>> <i>Mail Delivery Rule</i> → Select a folder → [Menu] → <i>Add Subject</i> → Enter subject</p>	–
<p>■ Change Word Prediction Priority</p> <p>> <i>Learning from Received Message</i> → OFF</p>	ON (prioritize)
<p>■ Require Phone Password Entry when Opening Messaging Folders/Retrieving Server Mail</p> <p>> <i>Mail Security Setting</i> → Enter Phone Password → (Repeat: Select an item)³ → [OK]</p>	OFF (not set)

<p>■ Enable 3D Pictograms when Opening Messages</p> <p>> <i>3D Pictograms</i> → <i>3D Picto Auto Play</i> → <i>Always Display</i> or <i>Display only Unread</i></p>	OFF
<p>■ Change Font/Background Color</p> <p>> <i>3D Pictograms</i> → <i>Color Settings</i> → Select a color</p>	White
<p>■ Set Auto Delete Off (For Drafts or Sent/Unsent Messages)</p> <p>> <i>Auto Delete Sent Messages</i> → OFF</p>	ON
<p>■ Set Auto Delete Off (For Incoming Mail)</p> <p>> <i>Auto Delete Incoming Messages</i> → OFF</p>	ON

1 Available only when the first information received on handset is Message.

2 In the following cases, font size does not change. Open preview window to view created messages in selected font size.

- In Subject field
- In S! Mail Composition window when **Font Size** is set to **Small**

3 To cancel selection, press  again.

S! Mail Settings

From ► **Main Menu** ► Messaging ► Settings
 ► S! Mail Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set S! Mail Download Condition (within Japan) > <i>Incoming Options</i> → <i>Home Auto Settings</i> → <i>From Numbers Only</i> or <i>Manual Retrieval</i> 	Auto Download All
<ul style="list-style-type: none"> ■ Retrieve S! Mail Manually while Abroad > <i>Incoming Options</i> → <i>Roaming Auto Settings</i> → <i>Manual Retrieval</i> 	Auto Download
<ul style="list-style-type: none"> ■ Set Not to Quote Message Text when Replying > <i>Quote Message</i> → <i>OFF</i> 	ON (quote)
<ul style="list-style-type: none"> ■ Open Image Files Manually > <i>Attachment Auto-play</i> → <i>Images</i> → <i>OFF</i> 	ON (open)
<ul style="list-style-type: none"> ■ Play Music Files Automatically* > <i>Attachment Auto-play</i> → <i>Sounds</i> → <i>ON</i> 	OFF (not play back)

* When multiple sound files are attached, the first file plays.

Feeling Mail Settings

From ► **Main Menu** ► Messaging ► Settings
 ► S! Mail Settings ► Feeling Expression

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Hide Information > <i>Information Display Settings</i> → <i>OFF</i> 	ON (show)
<ul style="list-style-type: none"> ■ Deactivate Notification Light > <i>Notification Light Patterns</i> → <i>Settings ON/OFF</i> → <i>OFF</i> 	ON (activate)
<ul style="list-style-type: none"> ■ Change Notification Light Color > <i>Notification Light Patterns</i> → Select feeling → Select a color* 	—
<ul style="list-style-type: none"> ■ Deactivate Vibration > <i>Vibration Patterns</i> → <i>Settings ON/OFF</i> → <i>OFF</i> 	ON (activate)
<ul style="list-style-type: none"> ■ Change Vibration Pattern > <i>Vibration Patterns</i> → Select feeling → Select a pattern 	—
<ul style="list-style-type: none"> ■ Set Message Ringtone > <i>Message Ringtone</i> → <i>Settings ON/OFF</i> → <i>ON</i> 	OFF
<ul style="list-style-type: none"> ■ Change Message Ringtone > <i>Message Ringtone</i> → Select feeling → Select a folder in Data Folder → Highlight a tone → [Set] 	—

* When highlighting a color, Notification Light illuminates.

■ Default Settings

Emotion	Notification Light	Vibration	Message Ringtone
Happy	Color 6	Pattern 1	Happy / うれしい.mmf
OK/Good	Color 2	Pattern 1	OK / Good.mmf
Sad/Sorry	Color 1	Pattern 2	悲しい / だめ んなさい.mmf
NG/Bad	Color 3	Pattern 2	NG / Bad.mmf
Notice/ Important	Color 4	Pattern 3	注目 / 重要.mmf

● When sender is saved in Phone Book, Phone Book settings take priority in the following case (☞ P.4).

- Message Ringtone is set to a ringtone other than **Follow General Setting**
- Notification Light is set to a color other than **Follow General Setting**

SMS Settings

From ▶ **Main Menu ▶ Messaging ▶ Settings**
▶ **SMS Settings**

Setting/Operation	Default
<p>■ Set a Time Limit to Store All Sent SMS at the Center¹</p> <p>> Expiry → <i>Maximum</i> (depending on Server setting) or select a limit</p>	Depends on USIM Card settings
<p>■ Change SMS Center Number²</p> <p>> Message Center → Enter SMS Center number</p>	+8190665 19300
<p>■ Set Input Character to English</p> <p>> Input Character Settings → <i>English(160characters)</i></p>	Japanese (70characters)

¹ When recipient handset is off or out-of-range, SMS are stored at the Center, and delivered when recipient handset detects signal.

² Changing Message Center number may disable SMS.

Settings Internet

Browser Display Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! Keitai ► Settings

PC Site Browser

From ► **Main Menu** ► Yahoo! Keitai ► PC Site Browser
► PC Site Browser Settings

Setting/Operation	Default
Change Font Size > <i>Font Size</i> → Large or Small	Normal
Scroll Unit > <i>Scroll Unit</i> → Whole Screen or Half Screen	Single Line
Images Off > <i>Downloads</i> → Display Images → OFF	ON (Show)
Sounds Off > <i>Downloads</i> → Play Sounds → OFF	ON (Retrieve)
Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai* > <i>Warning Messages</i> → PC Site Browser (when activating) or Yahoo! Keitai (when switching) → OFF	ON (Show)

* PC Site Browser only

Memory Manager & Reset

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! Keitai ► Settings

PC Site Browser

From ► **Main Menu** ► Yahoo! Keitai ► PC Site Browser
► PC Site Browser Settings

Setting/Operation	Default
Clear Cache > <i>Memory Manager</i> → Clear Cache → <input type="checkbox"/>	-
Delete Cookies > <i>Memory Manager</i> → Delete Cookies → <input type="checkbox"/>	-
Delete User ID or Password Entered when Authentication is Required > <i>Memory Manager</i> → Delete Certificates → <input type="checkbox"/>	-
Delete Input Memory > <i>Memory Manager</i> → Delete Input Memory → <input type="checkbox"/>	-
Initialize Browser > <i>Initialized Browser</i> → <input type="checkbox"/> → Enter Phone Password	-
Reset Browser Settings > <i>Reset Defaults</i> → [YES] → Enter Phone Password	-

Security Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! Keitai ► Settings
 ► Security

PC Site Browser

From ► **Main Menu** ► Yahoo! Keitai ► PC Site Browser
 ► PC Site Browser Settings ► Security

Setting/Operation	Default
■ Set Auto Send Off for Manufacturer's Number (for Authentication) > <i>Manufacture Number</i> → OFF	ON (Send)
■ Set Not to Send Referer Information > <i>Send Referer</i> → OFF	ON (Send)
■ Select whether or Not to Allow Cookies to be Stored on handset > <i>Cookies</i> → OFF or Ask Every Time	ON (Save)
■ Select whether or Not to Run Scripts in Yahoo! Keitai ¹ > <i>Script</i> → Select an item	Ask before Connect
■ Select whether or Not to Run Scripts in PC Site Browser ² > <i>Script</i> → Select an item	ON (Run)
■ View Electronic Certificates Issued by Certificate Authorities > <i>Root Certificates</i> → Select an item	–

Setting/Operation	Default
■ Select whether or Not to Retain Authentication Information > <i>Certificate Retention</i> → Always Keep or Not Keep	Keep while Browsing

¹ Yahoo! Keitai Browser only

² PC Site Browser only

Settings **S!** Appli

From ► **Main Menu** ► **S! Appli** ► **S! Appli Settings**

Setting/Operation	Default
Change Volume > Volume → Adjust volume	Volume 4
Backlight On/Off > Display Backlight → <i>Always ON</i> or <i>Always OFF</i>	Follow General Setting*
Deactivate Vibration > Vibration → <i>OFF</i>	ON(Activate)
Suspend S! Appli after Set Period of Inactivity > Auto Suspend Timer → Select a duration	Not Suspended
Synchronize Memory Card Used in Another Handset, etc. to Update S! Appli List > Synchronize Memory Card	—

* Display Backlight Time setting (☞ P.XX-4) applies.

Appendix

Function List	18-2
Troubleshooting	18-9
Warning Signs	18-11
Software Update	18-11
Updating Software Manually.....	18-12
Updating Software Automatically.....	18-12
Key Assignments (5-touch Mode)	18-14
Key Assignments (2-touch Mode)	18-15
Key Assignments (NIKO-touch Mode)	18-16
Symbol List	18-17
Character Code List	18-18
Memory List	18-23
Specifications	18-24
Index	18-25
Warranty & Service	18-31
Warranty	18-31
After-Sales Service	18-31
Customer Service	18-32


Function List


From Main Menu, press key corresponding to a menu number for direct access. (☞ P.1-20)


Example: To select S! Mail Settings in Messaging menu:


1 first column **0** second column **3** third column


1 (Messaging) → **0** (Settings) → **3** (S! Mail Settings)


 Messaging		
	Menu Number/Function Name	Page
1	Messaging	–
1	Incoming Mail	P.12-12
2	Create New S! Mail	P.12-4
3	Retrieve New	P.12-17
4	Drafts	P.12-18
5	Templates	P.12-6
6	Sent Messages	P.12-18
7	Unsent Messages	P.12-18
8	Server Mail Box	–
1	Mail List	P.12-17
2	Delete Server Mail All	P.12-18
9	Create New SMS	P.12-8
0	Settings	–
1	Custom Mail Address	P.12-3
2	Universal Settings	P.15-18
3	S! Mail Settings	P.15-19
4	SMS Settings	P.15-21
*	Memory Status	–
1	Phone	P.12-3
2	USIM	P.12-3

 Yahoo! (Yahoo! Keitai)		
	Menu Number/Function Name	Page
2	Yahoo!	–
1	Yahoo! Keitai	P.13-3
2	Bookmarks	P.13-8
3	Saved Pages	P.13-8
4	Web Search	P.13-3
5	Enter URL	–
1	Direct Entry	P.13-4
2	URL History List	P.13-4
6	History	P.13-4
7	PC Site Browser	–
1	Homepage	P.13-5
2	Bookmarks	P.13-8
3	Saved Pages	P.13-8
4	Web Search	P.13-5
5	Enter URL	P.13-5
6	History	P.13-5
7	Yahoo! Keitai	P.13-3
8	PC Site Browser Settings	P.15-21
8	Settings	–
1	Font Size	P.15-21
2	Scroll Unit	P.15-21
3	Downloads	P.15-21
4	Memory Manager	P.15-22
5	Security	P.15-22
6	Initialized Browser	P.15-23
7	Reset Defaults	P.15-23

 S! Appli		
Menu Number/Function Name		Page
3	S! Appli	–
1	S! Appli List	–
	Tab 1 Phone	P.14-2
	Tab 2 Memory Card	P.14-2
2	S! Appli Settings	–
	1 Volume	P.15-23
	2 Display Backlight	P.15-23
	3 Vibration	P.15-23
	4 Auto Suspend Timer	P.15-23
	5 Synchronize Memory Card	P.15-23
3	Information	P.14-2

 News/Ent. (News/Entertainment)		
Menu Number/Function Name		Page
4	News/Ent.	–
1	S! Information Channel/Weather	–
	1 What's New?	P.6-3
	2 History	P.6-3
	3 Register/Cancel	P.6-2
	4 Get Latest Contents	P.6-2
	5 Missed Event settings(S! Information Channel)	P.6-2
	6 Weather Indicator	P.6-3
2	S! Quick News	–
	1 S! Quick News List	P.6-5
	2 Settings	P.15-17
3	BookSurfing	P.6-6
4	e-Book Viewer	P.6-6

 Camera		
Menu Number/Function Name		Page
5	Camera	–
1	Camera	P.5-5
	2 Video Camera	P.5-6
3	Bar Code Reader	P.11-10
	1 Scan Barcodes	P.11-10
	2 Saved Data List	P.11-11
4	Magnifying Loupe	P.5-8


 Media (Media Player)		
Menu Number/Function Name		Page
6	Media	–
1	Audio	–
	1 All	P.7-5
	2 Music	P.7-5
	3 Ring Song	P.7-5
	4 Playlist	P.7-5
	5 Display Playback Screen	P.7-5
	6 Playback Mode	P.7-7
	7 Download Music	P.7-3
8 Music Search	P.7-3	
2	Video	–
	1 All	P.7-6
	2 Video Folder	P.7-6
	3 Playlist	P.7-6
	4 Display Playback Screen	–
	5 Playback Mode	P.7-7
	6 Download Videos	P.7-3


Tools		
Menu Number/Function Name		Page
7	Tools	—
1	Alarms	P.11-6
2	Calendar	P.11-2
3	Calculator	P.11-7
4	Notepad	P.11-8
5	Count Down Timer	P.11-9
6	Answer Phone	—
1	Message List	P.2-13
2	Settings	P.2-12
7	Voice Recorder	P.11-9
8	Bar Code Reader	P.11-10
1	Scan Barcodes	P.11-10
2	Saved Data List	P.11-11
9	Software Update	—
1	Software Update	P.16-10
2	Regular Updates	P.16-11
3	Update Result	P.16-11
0	One Touch Guide	—
1	Display New Messages	P.11-12
2	Calendar	P.11-12
3	Speed Dial	P.11-12
4	Simple Mode	P.11-12
5	Set as Wallpaper	P.11-12
6	Private Menu	P.11-12
7	View Blind	P.11-12
8	Manner	P.11-12
9	Magnifying Loupe	P.11-12
0	Create New Phone Book	P.11-12


7	0	*	Keyguard	P.11-12
		#	Drive	P.11-12
			Yahoo! Keitai Menu*	P.11-12
			Create Message*	P.11-12
			Key Customization*	P.11-12

 Data Folder		
Menu Number/Function Name		Page
8	Data Folder	–
1	Pictures	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
	Tab 3 DigitalCamera	P.8-2
2	Ring Songs-Tones	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
3	S! Appli	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
4	Music	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
5	Videos	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
	Tab 3 Video Camera	P.8-2
6	Books	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
7	Templates	P.8-2
8	Flash(R)	–
	Tab 1 Phone	P.8-3
	Tab 2 Memory Card	P.8-3
9	Other Documents	–
	Tab 1 Phone	P.8-3
	Tab 2 Memory Card	P.8-3

8	0	Memory Status	–
	1	Phone	P.8-3
	2	Memory Card	P.8-3

 Infrared		
Menu Number/Function Name		Page
9	Infrared	–
1	Infrared ON/OFF	P.9-3
2	Send Account Details	P.9-3
3	Send All Phone Book	P.9-4

 Bar Code (Bar Code Reader)		
Menu Number/Function Name		Page
*	Bar Code	–
1	Scan Barcodes	P.11-10
2	Saved Data List	P.11-11

 Phone (Phone Book)		
Menu Number/Function Name		Page
Phone		
1	Phone Book	P.4-6
2	Create New Entry	P.4-3
3	Mail & Call Log	–
	Tab 1 All Calls / All Mails Logs	P.2-10, P.12-15
	Tab 2 Incoming / Receive Logs	P.2-10, P.12-15
	Tab 3 Outgoing / Send Logs	P.2-10, P.12-15
4	Group	P.4-5
5	Account Details	P.1-24, P.4-14
6	One Touch Key	–
	1 One Touch Key	P.4-8
	2 Speed Dial	P.4-8
7	S! Addressbook Back-up	–
	1 Start Sync	P.4-12
	2 Auto Sync Settings	P.4-13
	3 Sync Log	P.4-13
8	Memory Manager	–
	1 Copy All from USIM	P.4-10
	2 Copy All to USIM	P.4-10
	3 Delete All (Phone)	P.4-10
	4 Delete All (USIM)	P.4-10
	5 Send All Phone Book via Infrared	P.9-4

9	Settings	–
	1 Save Settings	P.15-13
	2 Change View	P.15-13
	3 Search Method	P.4-6
	4 Font Size	P.15-13
	5 Mail Group Setting	P.12-21
	0 Memory Status	P.4-11


● Number in first column is not available for Phone Book.

Settings		
#	Menu Number/Function Name	Page
	Settings	—
1	Sound Settings	—
1	Assign Ringtone	P.15-2
2	Ringer Volume	P.15-2
3	Ringtone Duration	P.15-2
4	Warning Tone	P.15-3
5	Vibration Alert	P.15-2
6	Key Tone	P.15-3
2	Display Settings	—
1	Customize Main Display	P.15-4
2	Font Size	P.15-5
3	Font Pattern	P.15-5
4	Change Menu Theme	P.15-5
5	Backlight Settings	P.15-6
6	Main Menu Icons	P.15-5
7	Themes	P.15-4
8	Standby Display	P.15-4
9	S! Quick News Settings	P.15-17
0	View Blind	P.1-24
3	Phone Settings	—
1	言語選択	P.15-4
2	Date & Time	P.15-8
3	Dictionaries	P.3-9
4	Notification Light	P.15-12
5	Keyguard	P.10-3
6	Key Settings	P.15-6
7	Change Simple Mode	P.1-22

#	4	Security	—
1	1	Password Lock	P.10-4
2	2	Phone Book Lock	P.10-6
3	3	Messaging Lock	P.10-6
4	4	Secret Mode Setting	P.10-7
5	5	Reset	P.10-9
6	6	PIN Certification	P.10-2
7	7	Change PIN	P.10-3
8	8	Change PIN2	P.10-3
9	9	Change Password	P.10-2
5	5	Call Settings	—
1	1	Optional Services	P.2-14
2	2	Call Time & Cost	P.15-10
3	3	Video Call	P.15-14
4	4	Reject Incoming Calls	P.10-5
5	5	Emission OFF Mode	P.1-16
6	6	Show My Number	P.2-20
7	7	Any Key Answer	P.15-11
8	8	Clamshell Control	P.15-11
9	9	Auto Answer	P.15-11
0	0	Ear Volume	P.15-11
6	6	Manner Mode Settings	P.15-7
7	7	Location Settings	—
1	1	Positioning Lock	P.9-6
2	2	Send Location Info	P.9-6
8	8	Memory Card Manager	—
1	1	Format Memory Card	P.8-15
2	2	Check Memory Card	P.8-18
3	3	Memory Card Backup/Restore	P.8-16
9	9	Retrieve NW Info	P.1-14

Troubleshooting

Handset does not turn on

- Was  pressed for more than three seconds?
- Is battery level sufficient?
- Is battery inserted properly? (☞ P.1-13)






Handset functions do not work after turning power on

- Does PIN entry window appear?
PIN entry is **ON**. Enter PIN. (☞ P.11-2)

Insert **USIM** or **INVALID USIM** appears when handset is turned on or operations attempted

- Is USIM Card inserted correctly? (☞ P.1-3)
- Unusable USIM Card may be inserted (☞ P.1-2).
- USIM Card IC chip may be dirty.
Wipe with a clean cloth, then insert USIM Card correctly.





Keypad does not respond

- Does  appear in Standby?
- Keypad is active (☞ P.XX-3). Press  to cancel it.
- Does  appear in Standby?
- Password Lock is active (☞ P.XX-4). Enter Phone Password (☞ P.1-26) to cancel it.
- Does  /  appear in Standby?
Keypad and Password Lock are both active (☞ P.XX-3, P.XX-4).
Cancel Keypad, and then cancel Password Lock.

Display is blurred

- Adjust display brightness (☞ P.XX-4)
- Is View Blind active?
- Cancel View Blind (☞ P.1-27)

Outgoing calls or Video Calls will not connect or message and Internet connections are unavailable

- Does **OUT**   (red) appear?
Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.
- Are you using handset overseas?
Set international settings (e.g. select operator) to use abroad (☞ P.2-8, P.XX-8).
- Does  or  appear?
Messaging Lock is active (☞ P.XX-19). Deactivate Messaging Lock.

Outgoing calls or Video Calls will not connect

- Is area code entered?
- Is restricting outgoing calls in Call Barring? (☞ P.2-18)



Outgoing calls will not connect or busy signal sounds

- Did you enter area code?

Call is interrupted or disconnected

- Does **OUT** appear? Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.

Calls cannot be made via a Phone Book entry

- Entry may be saved as Secret.
Set Secret Mode **ON** (☞ P.10-6).
- Does  or  appear?
Phone Book Lock is active (☞ P.4-10). Deactivate Phone Book Lock.

Entry names do not appear in Call Log or message lists even if saved in Phone Book

- This may occur just after turning handset on. Return to Standby and retry later.

Handset does not respond as customized for incoming calls from numbers saved in Phone Book

- This may occur just after turning handset on.

Cannot charge battery

- Is AC Charger (sold separately) firmly connected to handset or Desktop Holder (not included)? (☞ P.1-14)
- Is AC Charger securely plugged into an outlet?
- Is battery installed in handset correctly? (☞ P.1-13)
- Is handset correctly mounted in Desktop Holder?
- Make sure handset, battery, Desktop Holder and AC Charging terminals are clean.
- Is ambient temperature between +5°C and +35°C?
Otherwise, battery may not reach full charge.
- Battery may need to be replaced.

Handset/accessories feel warm

- AC Charger/Desktop Holder may warm during charging.
Handset may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if handset is held against skin for long periods.




Battery Operating Time is greatly reduced

- Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time Estimates" (☞ P.1-11) and "Battery Time" (☞ P.1-12).

Note


- If you did not find the remedy to your problem here, please contact SoftBank Mobile Customer Center (☞ P.18-32).

Warning Signs

Problem	Causes and Remedies
OUT appears	Handset is out-of-range. Move to a location where signal is strong.
 appears	Keyguard is active (☞ P.XX-3). Cancel Keyguard to use keys. Answer calls even if Keyguard is active.
 appears	Password Lock is active (☞ P.XX-4). Cancel Password Lock to use handset. Answer calls even if Password Lock is active.
 appears	Keyguard and Password Lock are both active (☞ P.XX-3, P.XX-4). Cancel Keyguard, and then cancel Password Lock to use keys. Answer calls even if Keyguard and Password Lock are both active.
Low battery message appears and battery alarm tone sounds	Battery is low. Charge (☞ P.1-14) or replace battery (☞ P.1-13).

Software Update

Check for 840P software updates and download as required. Choose to begin update or schedule update.

- Transmission fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery beforehand. Even if  appears, low battery message may appear. In this case, charge battery until Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Do not remove battery during the update. Update will fail.
- Other functions are not available during Software Update.
- The update may take some time.

 
Main Menu ► Tools ► Software Update
► Software Update

1 

Follow onscreen instructions.

After download is complete, handset automatically turns off and restarts before Software Update begins.

After Software Update is complete, handset automatically turns off and restarts before information appears for successful update. (This process takes approximately 30 seconds.)



Update Results

In Information window, Select


Update Results

- In Standby, **Main Menu ► Tools**
 - **Software Update**
 - **Update Results**



Scheduled Update

Follow onscreen instructions for setup.

Confirmation appears at scheduled update time. Press  or wait ten seconds for update to start.

- Software Update will not start while handset is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.



Note

- Software Update failure may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance (☎ P.18-32).
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup, as appropriate, of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Update may temporarily cancel Keyguard.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Key Assignments

Multiple characters are assigned to each key.

- For input modes and character types: ☞ P.3-2
- Press and hold numeric keys (0 to 9) to enter single-byte numbers assigned to each key, regardless of input mode. To enter +, press and hold 0 in single-byte number mode.

Key	Input Modes			
	Kanji (Hiragana) [Double-byte]	Katakana [Double-/Single-byte]	Alphanumerics [Double-/Single-byte]	Numbers [Double-/Single-byte]
①	あいうえおあいうえお ¹	アイウエオアイウエオ ¹	. / @ - : ! " # \$ % & ' () * + , - . / : ; = < > [\] ^ _ ` { } ~	1
②	かきくけこ ²	カキクケコ ²	a b c A B C	2
③	さしすせそ ³	サシスセソ ³	d e f D E F	3
④	たちつとっ ⁴	タチツテトッ ⁴	g h i G H I	4
⑤	なにぬねの ⁵	ナニヌネノ ⁵	j k l J K L	5
⑥	はひふへほ ⁶	ハヒフヘホ ⁶	m n o M N O	6
⑦	まみむめも ⁷	マミムメモ ⁷	p q r s P Q R S	7
⑧	やゆよゃゅょ ⁸	ヤユヨャュョ ⁸	t u v T U V	8
⑨	らりるれろ ⁹	ラリルレロ ⁹	w x y z W X Y Z	9
⑩	わをんわー ⁰	ワワン ² ー ⁰	0	0 [Press and hold] + ¹

¹ Appears when entering single-byte character.

² Appears when entering double-byte character.

Key	Input Modes			
	Kanji (Hiragana) [Double-byte]	Katakana [Double-/Single-byte]	Alphanumerics [Double-/Single-byte]	Numbers [Double-/Single-byte]
✳	Pictograph List/Symbol List		Pictograph List/Symbol List ³	✳
	[Press and hold] Notepad List			[Press and hold] P (pause) ⁴
#	、 。 ? ! ・ (Single-byte Space)		、 . ? ! ' - & () ¥ (Space)	#
	[Press and hold] Symbol List			
🔑	Toggle input modes			
	[Press and hold] Toggle double-byte and single-byte characters			
📄	Line Break/Scroll Backward ⁵			Line Break
↶	Toggle upper and lower case characters ⁶			
🗑️	Delete one character after cursor (Delete one character before cursor when cursor is at the end of a sentence)			
	[Press and hold] Delete all characters after cursor (Delete all characters before cursor when cursor is at the end of a sentence)			
📄	Emoticons		String Templates ⁷	

³ In single-byte alphanumerics mode, single-byte symbol list appears first.

⁴ Pause can be entered only when entering phone numbers in Phone Book, etc.

⁵ Toggle characters in reverse order (When cursor is at **c** : c → b → a → 2 ...)

⁶ Toggle upper and lower case characters at cursor.

⁷ Parts of URLs appear.

Symbol List

Double-byte Symbol List

、	。	，	．	・	∴	∵	？	！	
”	。	、	、	”	^	—	、	ゞ	
＞	ゞ	〃	全	々	ゞ	○	—	—	
／	＼	～	〃	丨	…	…	’	“	
”	()	[]	[]	{ }	<				
＞	《 》	「 」	『 』	【 】	+				
—	±	×	÷	=	≠	<	>	≦	≧
∞	∴	♂	♀	°	′	”	℃	¥	\$
φ	£	%	#	&	*	@	§	☆	★
○	●	◎	◇	◆	□	■	△	▲	▽
▼	※	〒	→	←	↑	↓	≡	≡	≡
⊆	⊃	⊂	⊄	∪	∩	∧	∨	⊂	⇒
⇔	∀	∃	∠	⊥	∩	∅	∇	≡	≡
≪	≫	√	∞	∞	∴	∫	∫	Å	%
#	b	♪	†	‡	¶	○	ゑ	ゑ	卍
エ	ヴ	カ	ケ	A	B	Γ	Δ	E	Z
H	Θ	I	K	Λ	M	N	Ξ	O	Π
P	Σ	T	Υ	Φ	X	Ψ	Ω	α	β

γ	δ	ε	ζ	η	θ	ι	κ	λ	μ
ν	ξ	ο	π	ρ	σ	τ	υ	φ	χ
ψ	ω	A	B	B	Г	Д	E	Ё	Ж
З	И	Й	К	Л	М	Н	О	П	Р
С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ
Ы	Ь	Э	Ю	Я	а	б	в	г	д
е	ё	ж	з	и	й	к	л	м	н
о	п	р	с	т	у	ф	х	ц	ч
ш	щ	ъ	ы	ь	э	ю	я	—	—
Г	Г	Г	Г	Г	Г	Г	Г	Г	—
Г	Г	Г	Г	Г	Г	Г	Г	Г	+
Г	Г	Г	Г	Г	Г	Г	Г	Г	+
①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩
⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳
I	II	III	IV	V	VI	VII	VIII	IX	X
ミ	キ	チ	ネ	グ	ラ	ト	ル	ネ	ル
ッ	キ	ン	ネ	ル	ン	ル	ル	ル	ッ
グ	ル	ン	ネ	ル	ン	ル	ル	ル	ッ
kg	cc	m ³	平成	、	、	No	KK	TEL	⊕

⊕	⊖	⊗	⊘	(株)	(有)	(代)	明	大	証	昭
≡	≡	∫	∫	Σ	√	⊥	∠	∟	△	
∴	∵	∩	∪							

Single-byte Symbol List

!	"	#	\$	%	&	'	()		
*	+	,	-	.	/	:	;	<	=
>	?	@	[¥]	^	_	'	{
	}	~	。	「	」	、	・	—	”
°									

Character Code List

Character Code List										
First Three Digits	0	1	2	3	Last Digit					
0	1	2	3	4	5	6	7	8	9	
010	0	1	2	3	4	5	6	7	8	9
011	0	1	2	3	4	5	6	7	8	9
012	0	1	2	3	4	5	6	7	8	9
013	0	1	2	3	4	5	6	7	8	9
014	0	1	2	3	4	5	6	7	8	9
015	0	1	2	3	4	5	6	7	8	9
016	0	1	2	3	4	5	6	7	8	9
017	0	1	2	3	4	5	6	7	8	9
018	0	1	2	3	4	5	6	7	8	9
019	0	1	2	3	4	5	6	7	8	9
020	0	1	2	3	4	5	6	7	8	9
021	0	1	2	3	4	5	6	7	8	9
022	0	1	2	3	4	5	6	7	8	9
023	0	1	2	3	4	5	6	7	8	9
024	0	1	2	3	4	5	6	7	8	9
026	0	1	2	3	4	5	6	7	8	9
027	0	1	2	3	4	5	6	7	8	9
028	0	1	2	3	4	5	6	7	8	9
029	0	1	2	3	4	5	6	7	8	9
031	0	1	2	3	4	5	6	7	8	9
032	0	1	2	3	4	5	6	7	8	9
033	0	1	2	3	4	5	6	7	8	9
034	0	1	2	3	4	5	6	7	8	9
035	0	1	2	3	4	5	6	7	8	9
036	0	1	2	3	4	5	6	7	8	9
037	0	1	2	3	4	5	6	7	8	9
038	0	1	2	3	4	5	6	7	8	9
039	0	1	2	3	4	5	6	7	8	9
040	0	1	2	3	4	5	6	7	8	9
041	0	1	2	3	4	5	6	7	8	9
042	0	1	2	3	4	5	6	7	8	9
043	0	1	2	3	4	5	6	7	8	9
044	0	1	2	3	4	5	6	7	8	9
045	0	1	2	3	4	5	6	7	8	9
046	0	1	2	3	4	5	6	7	8	9
047	0	1	2	3	4	5	6	7	8	9
048	0	1	2	3	4	5	6	7	8	9

First Three Digits	Last Digit	First Three Digits	Last Digit	First Three Digits	Last Digit	First Three Digits	Last Digit	First Three Digits	Last Digit
0	1	0	0	0	0	0	0	0	0
232	【	270	察別撤贊	311	蝕心疹身尋	347	審申診壬	354	啄濁
233	珪携繫鴉傑倏建	271	刺屍官紫資寺次	312	須炊瑞梧	348	寐深親刃勒	349	坦坦筆斷
234	卦型敬罪丟云倦憲煥見元眩	272	使子施恥謬字	313	罔粹崇顏摺世	350	侵森臣入迅	351	堅厲端彈
235	【	273	耳軸濕溼社尺惹腫膠	314	世成生近戚赤窈占泉線外閃裡	352	信晉紳震訃	353	單串短燴
236	形祁程祥卸臨深舉拳廉廣諍	274	耳軸濕溼社尺惹腫膠	315	性性請借齊折先袿穿羨錢繕	354	仲新素針貫	355	單串短燴
237	卮裂袈裟迎決健懲廉廣諍	275	耳軸濕溼社尺惹腫膠	320	性性請借齊折先袿穿羨錢繕	355	侵森臣入迅	356	單串短燴
238	卮裂袈裟迎決健懲廉廣諍	276	耳軸濕溼社尺惹腫膠	321	性性請借齊折先袿穿羨錢繕	356	侵森臣入迅	357	單串短燴
239	卮裂袈裟迎決健懲廉廣諍	277	耳軸濕溼社尺惹腫膠	322	性性請借齊折先袿穿羨錢繕	357	侵森臣入迅	358	單串短燴
240	卮裂袈裟迎決健懲廉廣諍	278	耳軸濕溼社尺惹腫膠	323	性性請借齊折先袿穿羨錢繕	358	侵森臣入迅	359	單串短燴
241	卮裂袈裟迎決健懲廉廣諍	279	耳軸濕溼社尺惹腫膠	324	性性請借齊折先袿穿羨錢繕	359	侵森臣入迅	360	單串短燴
242	卮裂袈裟迎決健懲廉廣諍	280	耳軸濕溼社尺惹腫膠	325	性性請借齊折先袿穿羨錢繕	360	侵森臣入迅	361	單串短燴
243	卮裂袈裟迎決健懲廉廣諍	281	耳軸濕溼社尺惹腫膠	326	性性請借齊折先袿穿羨錢繕	361	侵森臣入迅	362	單串短燴
244	卮裂袈裟迎決健懲廉廣諍	282	耳軸濕溼社尺惹腫膠	327	性性請借齊折先袿穿羨錢繕	362	侵森臣入迅	363	單串短燴
245	卮裂袈裟迎決健懲廉廣諍	283	耳軸濕溼社尺惹腫膠	328	性性請借齊折先袿穿羨錢繕	363	侵森臣入迅	364	單串短燴
246	卮裂袈裟迎決健懲廉廣諍	284	耳軸濕溼社尺惹腫膠	329	性性請借齊折先袿穿羨錢繕	364	侵森臣入迅	365	單串短燴
247	卮裂袈裟迎決健懲廉廣諍	285	耳軸濕溼社尺惹腫膠	330	性性請借齊折先袿穿羨錢繕	365	侵森臣入迅	366	單串短燴
248	卮裂袈裟迎決健懲廉廣諍	286	耳軸濕溼社尺惹腫膠	331	性性請借齊折先袿穿羨錢繕	366	侵森臣入迅	367	單串短燴
249	卮裂袈裟迎決健懲廉廣諍	287	耳軸濕溼社尺惹腫膠	332	性性請借齊折先袿穿羨錢繕	367	侵森臣入迅	368	單串短燴
250	卮裂袈裟迎決健懲廉廣諍	288	耳軸濕溼社尺惹腫膠	333	性性請借齊折先袿穿羨錢繕	368	侵森臣入迅	369	單串短燴
251	卮裂袈裟迎決健懲廉廣諍	289	耳軸濕溼社尺惹腫膠	334	性性請借齊折先袿穿羨錢繕	369	侵森臣入迅	370	單串短燴
252	卮裂袈裟迎決健懲廉廣諍	290	耳軸濕溼社尺惹腫膠	335	性性請借齊折先袿穿羨錢繕	370	侵森臣入迅	371	單串短燴
253	卮裂袈裟迎決健懲廉廣諍	291	耳軸濕溼社尺惹腫膠	336	性性請借齊折先袿穿羨錢繕	371	侵森臣入迅	372	單串短燴
254	卮裂袈裟迎決健懲廉廣諍	292	耳軸濕溼社尺惹腫膠	337	性性請借齊折先袿穿羨錢繕	372	侵森臣入迅	373	單串短燴
255	卮裂袈裟迎決健懲廉廣諍	293	耳軸濕溼社尺惹腫膠	338	性性請借齊折先袿穿羨錢繕	373	侵森臣入迅	374	單串短燴
256	卮裂袈裟迎決健懲廉廣諍	294	耳軸濕溼社尺惹腫膠	339	性性請借齊折先袿穿羨錢繕	374	侵森臣入迅	375	單串短燴
257	卮裂袈裟迎決健懲廉廣諍	295	耳軸濕溼社尺惹腫膠	340	性性請借齊折先袿穿羨錢繕	375	侵森臣入迅	376	單串短燴
258	卮裂袈裟迎決健懲廉廣諍	296	耳軸濕溼社尺惹腫膠	341	性性請借齊折先袿穿羨錢繕	376	侵森臣入迅	377	單串短燴
259	卮裂袈裟迎決健懲廉廣諍	297	耳軸濕溼社尺惹腫膠	342	性性請借齊折先袿穿羨錢繕	377	侵森臣入迅	378	單串短燴
260	卮裂袈裟迎決健懲廉廣諍	298	耳軸濕溼社尺惹腫膠	343	性性請借齊折先袿穿羨錢繕	378	侵森臣入迅	379	單串短燴
261	卮裂袈裟迎決健懲廉廣諍	299	耳軸濕溼社尺惹腫膠	344	性性請借齊折先袿穿羨錢繕	379	侵森臣入迅	380	單串短燴
262	卮裂袈裟迎決健懲廉廣諍	300	耳軸濕溼社尺惹腫膠	345	性性請借齊折先袿穿羨錢繕	380	侵森臣入迅	381	單串短燴
263	卮裂袈裟迎決健懲廉廣諍	301	耳軸濕溼社尺惹腫膠	346	性性請借齊折先袿穿羨錢繕	381	侵森臣入迅	382	單串短燴
264	卮裂袈裟迎決健懲廉廣諍	302	耳軸濕溼社尺惹腫膠						
265	卮裂袈裟迎決健懲廉廣諍	303	耳軸濕溼社尺惹腫膠						
266	卮裂袈裟迎決健懲廉廣諍	304	耳軸濕溼社尺惹腫膠						
267	卮裂袈裟迎決健懲廉廣諍	305	耳軸濕溼社尺惹腫膠						
268	卮裂袈裟迎決健懲廉廣諍	306	耳軸濕溼社尺惹腫膠						
269	卮裂袈裟迎決健懲廉廣諍	307	耳軸濕溼社尺惹腫膠						
		308	耳軸濕溼社尺惹腫膠						
		309	耳軸濕溼社尺惹腫膠						
		310	耳軸濕溼社尺惹腫膠						