

Mobile Widget

Mobile Widget (Japanese)	7-2
Using Widgets.....	7-2
Pasting Widgets to Standby	7-2
Activating Widgets.....	7-3
Downloading Widgets	7-4
Arranging Widgets in Standby.....	7-4

Mobile Widget (Japanese)

Paste widgets to Standby to access information or tools from Standby.

Network Widget

Some widgets may periodically connect to network, incurring packet transmission fees.

- During transmission, other functions (e.g. Video Calls) may be disabled.






Show/Hide Widget

> In Standby, 

Using Widgets

Pasting Widgets to Standby

Paste up to five widgets per sheet. Select from four sheets and organize sheets by theme.

- 1 Press and hold  (MULTI/)
Widget List appears.
- 2 Select a widget →  [Menu] →
Paste on Stand-by → Select a sheet
- 3  to move to target location → 

Delete Widgets on Standby Display

> Main Menu ▶ Widget ▶ Settings ▶ Delete Content






- ▶ Select a sheet ▶ Check Contents to delete ▶  [Release] YES

Note

- Alternatively, Main Menu ▶ Widget
 - ▶ Widget Contents or Main Menu ▶ Data Folder
 - ▶ Widget to select widgets
- When saving widgets from microSD to Standby, do not remove microSD Card.

Activating Widgets

Selecting Widgets in Standby



- 1 In Standby (widgets shown),  Pointer () appears.
 - To disable pointer:  or 
- 2  to move pointer → Select a widget
Follow onscreen instructions.

Toggle Sheets

> In Standby,  →  [Back] or  [Forward]








Selecting Widgets from Widget List

- 1 Press and hold  (MULTI/)
Widget List appears.
- 2 Select a widget



Widget List

Move Widgets in List

> Press and hold  (MULTI/) → Highlight a widget →  [Move] →  to determine a target location →  [OK]

Downloading Widgets

Main Menu ► Widget

1 **Widget Store**

940P connects to the Network, and download site appears. Follow onscreen instructions.

Installing Widgets

Some widgets may require you install them manually; follow steps below:




> In download completion window,  [Menu] → **Install**



- Once installation is completed, widgets appear in Widget List. Widget folder in Data Folder includes widgets that are not yet installed.

Note

- Alternatively, **Main Menu ► Data Folder ► Widget ► Download Widget ► YES** to download

Arranging Widgets in Standby

- 1 In Standby,  →  to move pointer → Highlight a widget →  [Operate]
- 2 Select an item (See below)

Item	Operation/Description
Move	>  to move to a target location → 
Delete frm Standby	> YES
Forward	Move overlapping widget to foreground
Rear	Move overlapping widget to background
Reload	Update widget

News/Entertainment

S! Information Channel/Weather (Japanese)..... 8-2

Registering/Canceling	8-2
Using S! Information Channel	8-2
Using Weather Indicator	8-3
Option Menu Items.....	8-4

S! Quick News (Japanese) 8-4

Registering S! Quick News Items	8-4
Opening New Information	8-5
Saving Blog Details.....	8-7
Posting to Blogs	8-7
Bloggng Functions.....	8-8

S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear on Standby.

- Transmission fees apply for updates.
- Auto download is not available overseas.

Registering/Canceling

Main Menu ► News/Entertainment ► S! Info Ch./Weather

1 Register/Cancel → YES

940P connects to the Network.
Follow onscreen instructions.

Using S! Information Channel

- Up to seven updates are saved.

Viewing New Information

When information arrives,  and Event Indicator appear in Standby.

1 In Standby,  →  to move pointer → Select Event Indicator

2  [Select]

Follow onscreen instructions.
● Option Menu Items (→P.7-8)



Manually Retrieve Information


Select Event Indicator "Failed to download"

- Alternatively, Main Menu ► News/Entertainment ► S! Info Ch./Weather ► Get Latest Contents ► YES

Delete Information

> Main Menu ► News/Entertainment ► S! Info Ch./Weather ► Highlight What's New? ►  [Menu] ► Delete ► YES

Note

- Alternatively, Main Menu ► News/Entertainment ► S! Info Ch./Weather ► What's New? to retrieve information
- If there is unread information in both S! Quick News and S! Information Channel,  does not appear. Only Event Indicator appears.

Viewing Previously Received Information

Main Menu ► News/Entertainment ► S! Info Ch./Weather

1 History → Select a date

 for unread news and  for read news appear.

Delete History

> Main Menu ► News/Entertainment ► S! Info Ch./Weather ► History ► (Highlight a History) ►  [Menu] ► Delete or Delete all ► YES
(► For Delete all, enter Phone Password)

Using Weather Indicator

Weather Indicator for current forecast area appears.

Viewing New Information

Event Indicator and Weather Indicator appear for weather updates.

1 In Standby,  →  to move pointer → Select Event Indicator or Weather Indicator

2  [Select]

Information appears.


Follow onscreen instructions.

- Option Menu Items (→P.7-8)

Weather Indicator

Indicators are updated periodically.

Example:  Clear,  Rain later thunderstorm,

 /  Cloudy with occasional snow, etc.

- See Weather Indicator List (→P.19-24) for a complete list of indicators.

Manually Update Weather Indicator

Select Event Indicator "*Failed to download*"

- Alternatively, **Main Menu** ▶ **News/Entertainment** ▶ **S! Info Ch./Weather** ▶ **Weather Indicator** ▶ **Manual Update** ▶ **YES**

Hide Event Indicator

- > **Main Menu** ▶ **News/Entertainment** ▶ **S! Info Ch./Weather** ▶ **Weather Indicator** ▶ **Missed Event Settings** ▶ **OFF**

Note

- Alternatively, view forecast details from **Main Menu** ▶ **News/Entertainment** ▶ **S! Info Ch./Weather** ▶ **Weather Indicator** ▶ **Weather**

Hiding Weather Indicator


Main Menu ▶ **News/Entertainment** ▶ **S! Info Ch./Weather** ▶ **Weather Indicator** ▶ **Display Settings**

1 **OFF**

- When Display Settings is set to **OFF**, update is also deactivated.

Option Menu Items

While viewing a content, press  [Menu] for these options.

Item	Operation/Description
Forward	Go to next page
Text Copy	Copy page text
Select File	View, play or save file to Data Folder (From Step 2 in Downloading Image/Sound Files:  P.14-11)
Jump in this page	Jump to top/end of page
Yahoo! Keitai	View top menu
Font Size*	Change character size
Exit viewing this	Exit content

* Linked with Font Size setting in Internet option menu.

S! Quick News (Japanese)

Add news headlines, weather forecasts, etc. via S! Quick News List to scroll across Standby Window.

- Registering or viewing S! Quick News incurs transmission fees. No fees apply for viewing ticker information. For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Registering S! Quick News Items

- Register one **Quick** news, up to four **General** news and one **Special** news.
- Auto download is not available overseas.

Main Menu ► News/Entertainment ► S! Quick News
► S! Quick News List

1 Add News → YES

Yahoo! Keitai connects and contents list appears.




2 Select an item

Follow onscreen instructions.

Opening New Information

Viewing New Information in Standby

When new information is received,  appears in Standby.

- 1 In Standby,  →  to move pointer → Select ticker
- 2  [Select]
Content list appears.
- 3 Select information
Details appear.

Tip

Settings

- Turn Back Light Off after All S! Quick News Viewed (↗P.18-6)
- Show Only Unread Items in Standby ● Change Marquee Speed
- Hide S! Quick News ● Show Image Data (↗P.18-16)

Opening S! Quick News List


Main Menu ► **News/Entertainment** ► **S! Quick News**
► **S! Quick News List**

- 1 Select an item
Content list appears.
- 2 Select information
Detailed information appears.
- 3 To connect to the Network, select a title → **YES**

Update Manually

> In Step 1,  [Menu] → *Update* or *All Update* → **YES**

View Summary

> In Step 1, highlight information →  [Menu] → *Summary Display*

Delete Registered Items

> In Step 1, (highlight information →)  [Menu] → *Delete* or *All Delete* → **YES** (→ For *All Delete*, enter Phone Password)

Note

- Alternatively, **Main Menu** ► **News/Entertainment**
► **S! Quick News** ► **Settings** ► **Del S! Quick News List**
► **YES** to delete all information

Tip

Settings

- Automatically Update S! Quick News List
- Delete S! Quick News Information (↗P.18-16)

E-Books (Japanese)

Use **BookSurfing®** to acquire/view e-books, comics, photo books, etc. or **e-Book Viewer** to view XMDF files on 940P.

- BookSurfing® and e-Book Viewer are S! Appli.
- Download Content Keys (☞P.9-5) to read CCF/XMDF files.
- Some copy protected files have extensions different from the ones below.

Application	File Format
BookSurfing®	CCF (.ccf)
e-Book Viewer	XMDF (.zbf, .zbk, .zbs)

- Some PC content may not be viewable via e-Book Viewer.

Main Menu ► News/Entertainment

1 *BookSurfing* or *e-Book Viewer*

- See application Help menu for usage information.

Note

- Launch BookSurfing®/e-Book Viewer via S! Appli, or select a file from Books in Data Folder.
- When purchasing a new handset, move CCF/XMDF files via microSD Card. However, if CCF/XMDF files are copy protected, Content Keys backup may be needed (☞P.10-22). Some contents require another Content Key after being moved/copied to a new handset or can not be moved/copied at all.

Blogging

Save blog details to update or view blogs.

- Save up to 20 blog details.

Saving Blog Details

Main Menu ► News/Entertainment ► Post Blog

- 1  [New] → Select an item (See below)

Item	Operation/Description
Service name	Save a blog service name ➤ Enter a service name
Blogger address	Save a mail address for posting by mail ➤ Enter a mail address
Mail title	Save a title to enter automatically when posting by mail ➤ Enter a title
Yahoo! Keitai URL	Save a URL for posting from Yahoo! Keitai ➤ Enter a mail address
PC Site Browser	Save a URL for posting from PC Site Browser ➤ Enter a mail address

- 2  [Finish]

Posting to Blogs

Main Menu ► News/Entertainment ► Post Blog


- 1 **Posing by Mail**
Highlight a service →  [Post] → Compose a message ( From Step 4 on P.14-4) →  [Send]


Posing from Yahoo! Keitai/PC Site Browser

Highlight a service →  [To site] → *By Yahoo! Keitai* or *By PC Site Browser* → **YES**

940P connects to the Network and website appears.
Follow onscreen instructions.

Post Captured Images to Blogs

➤ While a captured image is shown, or highlight an image in Data Folder
→  [Menu] → Post blog* → Follow Step 1 above


* Some images may not be posted (e.g. images opened from Data Folder by pressing  [Folder] in Picture Viewfinder)

- Set **Auto save set** ( P.18-16) in Camera menu to **OFF** to post images to blogs easily.

Blogging Functions

From ► **Main Menu** ► Settings ► Post Blog


■ Edit Service Information

> Highlight a service →  [Edit] → Edit

■ Delete Service Information

> Highlight a service →  [Menu] → Delete →

Select an item (See below)

Item	Operation/Description
Delete this	> YES
Delete selected	> Check services →  [Finish] → YES
Delete all	> Enter Phone Password → YES

Music Player

Overview	9-2
Saving Music	9-2
Downloading Chaku-Uta Full®	9-3
Saving Music Files by Using SD Audio	9-3
Transferring WMA Files	9-4
Using Music Player	9-5
Playback Window Indicators	9-5
Playing Music	9-6
Playback Window Operations.....	9-7
Functions while Playing Files.....	9-8
Chaku-Uta Full®/WMA List.....	9-9
Using Play List	9-10
Play List	9-11

Overview

Play music saved on 940P/microSD Card.

- Play List: [☞P.8-10](#)

Notes

- Files may not play due to file support issues or microSD Card status, etc.
- When playback starts with low battery, confirmation appears. When battery is low during playback, confirmation appears.
- Playback pauses for incoming calls or Alarm. Playback resumes after calls are received or Alarm sounds.

Music Illumination

- Notification Light illuminates when playback starts. When playback starts during charging, Music Illumination lights before Charging Indicator.
- To turn off light, set **Music** to **OFF** in Notification Light setting ([☞P.18-10](#)).

Tip

- Use Bluetooth® Device for Wireless Playback ([☞P.10-10](#))

Saving Music

Save Music to play on Music Player.

Download Chaku-Uta Full® (☞P.8-3)	Open site link to download and save songs ----- Supported file format: SMC, MPEG-4 (MPEG-4 AAC, MPEG-4 AAC+ (HE-AAC), Enhanced aacPlus)
Save Music via SD Audio (☞P.8-3)	Save music CD songs via PC to microSD Card in AAC format ----- Supported file formats: MPEG-2 AAC, MPEG-2 AAC+SBR
Save WMA files (☞P.8-4)	Save Windows Media® Audio (WMA) files in PC to microSD Card via Windows Media® Player ----- Supported file formats: WMA

- Some files may not play even if format is supported.

Copy Protected Files

Copy protected files may not play, be saved or forwarded.
To play a copy protected file, obtain Content Key ([☞P.9-5](#)).
Confirm file expiry date or usage limitations (Music info: [☞P.8-8](#)).

Saving Music Files on PCs

When saving music files for use with 940P, observe the following guidelines:

- Copyrighted Works
 - Do not infringe on third party/intellectual property rights.
 - Music files are limited to private use.
- Obtain software to convert file format.
 - Refer to websites providing software.
 - Performance of some software types is not guaranteed.

Downloading Chaku-Uta Full®

Access websites directly from Music Player to download Chaku-Uta Full® files.

- View details (price, expiry date, etc.) on source website.

Main Menu ▶ Music Player ▶ Data Manager ▶ Main Folder ▶ Download Music

1 YES

940P connects to the Network and Download site appears.

- Follow onscreen instructions to download files.

Note

- Alternatively, follow these steps to access Download site:

Main Menu ▶ Data Folder ▶ Music ▶ Main Folder ▶ Download Music ▶ YES

Saving Music Files by Using SD Audio

Note

- Saving music files requires following:
 - 940P
 - microSD Card (commercial item)
 - USB cable (not included)
 - PC (Windows® XP, Windows Vista®)
 - Software for PC (commercial item)
 Panasonic brand "SD-Jukebox" is recommended. Purchase SD-Jukebox from website below:
<http://club.panasonic.jp/mall/sense/> (Japanese only)
 - Music CD to save

Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode ▶ microSD Mode

- 1 Connect 940P to a PC via USB cable
- 2 Activate SD-Jukebox on PC
- 3 Set a music CD on PC
- 4 Save music files to micro SD Card
 - See SD-Jukebox manual for usage information.
 - After saving, release USB cable from 940P.

Transferring WMA Files

Transfer WMA files from PC to microSD Card via Windows Media® Player. Up to 1000 files can be saved per microSD Card.

- Use PC with Windows Media® Player installed.
- When using Windows Media® Player 10 (10.00.00.3802 or later)/11 on Windows® XP, use Windows® XP Service Pack 2 or later.
- When using Windows Vista®, use Windows Media® Player 11.
- Insert microSD Card into 940P before preparing USB cable (Transferring Data via USB Cable: [P.10-12](#))

Main Menu ► Settings ► Connectivity ► USB Mode
► MTP Mode

1 Connect 940P to a PC via USB cable

Follow Windows Media® Player operations to transfer WMA files from PC to microSD Card.

 
- Refer to Windows Media® Player Help for operations.
- Terminate all software applications before disconnecting USB cable.

Note

- Do not remove microSD Card while transferring files to microSD Card. Files may be damaged.
- WMA files overwrite existing files with same name in handset when copied from PC. To check file names, refer to Windows Media® Player Help.
- 940P may not recognize WMA files saved to a microSD on a different handset. Handset may not recognize WMA files from PCs if **USB Mode** is set to **MTP Mode**. Delete WMAudio and WMSystem folders in My Items (MY FOLDER) on microSD, or format microSD Card ([P.9-18](#)) via PC. Formatting microSD deletes all saved files.
- To play WMA files on handset, save files to WMFile ([P.9-20](#)) on microSD Card and play the files from PC Movies folder in Data Folder.

Using Music Player

Playback Window Indicators

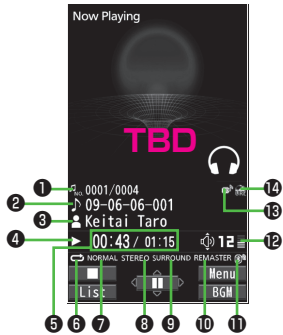

Item	Description												
① File Number/Total Number	—												
② Title	—												
③ Artist	—												
④ Status	—												
⑤ Elapsed Time/Total Time	—												
⑥ Play Mode Indicators	<table border="1"> <tr> <td>TOS</td> <td>Play only one</td> <td>Repeat one</td> </tr> <tr> <td>Repeat all</td> <td>Repeat all</td> <td>Random</td> </tr> <tr> <td>Random play&repeat</td> <td>Random play&repeat</td> <td></td> </tr> <tr> <td>DEMO</td> <td>DEMO</td> <td></td> </tr> </table>	TOS	Play only one	Repeat one	Repeat all	Repeat all	Random	Random play&repeat	Random play&repeat		DEMO	DEMO	
TOS	Play only one	Repeat one											
Repeat all	Repeat all	Random											
Random play&repeat	Random play&repeat												
DEMO	DEMO												
⑦ Equalizer Setting	<table border="1"> <tr> <td>NORMAL</td> <td>Normal</td> <td>H.BASS1</td> <td>H.BASS1</td> </tr> <tr> <td>H.BASS2</td> <td>H.BASS2</td> <td>TRAIN</td> <td>Train</td> </tr> </table>	NORMAL	Normal	H.BASS1	H.BASS1	H.BASS2	H.BASS2	TRAIN	Train				
NORMAL	Normal	H.BASS1	H.BASS1										
H.BASS2	H.BASS2	TRAIN	Train										
⑧ Stereo/Monaural	<table border="1"> <tr> <td>STEREO</td> <td>Stereo</td> <td>MONO</td> <td>Monaural</td> </tr> </table>	STEREO	Stereo	MONO	Monaural								
STEREO	Stereo	MONO	Monaural										
⑨ Listening Setting	<table border="1"> <tr> <td>SURROUND</td> <td>Surround-sound</td> </tr> <tr> <td>NATUR1</td> <td>Natur 1</td> </tr> <tr> <td>NATUR2</td> <td>Natur 2</td> </tr> </table>	SURROUND	Surround-sound	NATUR1	Natur 1	NATUR2	Natur 2						
SURROUND	Surround-sound												
NATUR1	Natur 1												
NATUR2	Natur 2												
⑩ Remaster Setting ON	—												
⑪ Bluetooth® Device Connected	—												
⑫ Volume	—												
⑬ Lyric	—												
⑭ URL	—												

 
Playing Music

Main Menu ► Music


1 Player

Player Menu window appears.

- Last playback window appears.

To open Player menu:  twice.

  [Menu] → **Player menu** to show Player Menu window.



Player Menu Window





2 Select a category (See below)

Item	Operation/Description
All Tracks	Select files from 940P & microSD Card
Play List	Select group of files saved to Play List
Artist	Select files from Artist folder
Album	Select files from Album folder
Genre	Select files from Genre folder

- ★ appears for currently/previously played Play List.

3 Select a file

Selected file plays.

- ★ appears for currently/previously played file.
- Playback Window Operations:  P.8-7
- To end playback,   

Note

- mp4/3gp files in Ring Songs&Tones folder can also be played in Music Player.

Changing Play Mode

1 Player

Player Menu window or Playback window appears.

2 [Menu] → **Play mode setting**

3 Select an item (See below)

Item	Operation/Description
Normal	Play all files in selected category/Play List
Play only one	Play selected file
Repeat one	Repeat selected file
Repeat all	Repeat all files in selected category/Play List
Random	Play selected category/Play List files randomly
Random play&repeat	Repeat selected category/Play List files randomly

Using Other Functions while Listening to Music (Play Background)

Use Phone Book, Messaging, Internet, etc. while listening to music.

- 1 While playing file, [BGM]
- 2 To end, in Standby → **End player**

Note

- Some functions cannot operate simultaneously.
- Volume or play mode change is not available during Play Background.

Playing Chaku-Uta Full®/WMA Files as Demo

Main Menu ► Music ► Data Manager

- 1 Select an item (See below)

Item	Operation/Description
Main Folder	View Chaku-Uta Full® list > Select a folder ● To view file list in handset/microSD Card: [Phone/microSD]
WMA	View WMA list

- [Change] to toggle display view in Chaku-Uta Full® and WMA list.
- 2 Select a Chaku-Uta Full® or WMA file
Demonstration playback starts.


Playback Window Operations

Adjust Volume	or
Play Previous*	or press and hold ● When playback time is over three seconds, previous file plays from beginning.
Play Next*	or press and hold
Rewind	Press and hold
Forward	Press and hold
Pause/Resume	[/]
Stop	[]
View Next Jacket/Lyric	
View Previous Jacket/Lyric	
Switch Jacket/Lyric Display	
Switch Playlist/Playback Window*	[List/Player]
Play Background*	[BGM]
Switch Remaster (↶ P.8-8)	
Switch Listening (↶ P.8-8)	
Switch Equalizer (↶ P.8-8)	

* Not available for playback as a demo

Functions while Playing Files



■ Set Sound Effect

> While playing file, [Menu] → **Sound effect** → Select an item (See below)

Item	Operation/Description
Remaster	Complement sound from earphone or Bluetooth® device to bring close to original sound > ON or OFF
Listening	Add listening effect to sound from earphone or Bluetooth® device > Select an item <ul style="list-style-type: none"> · Surround-sound: Reproduce natural and stereophonic sound · Natur 1 or Natur 2: Complement sound specific to earphone to reproduce natural sound · OFF: Turn off Listening setting
Equalizer	Change quality of sound from earphone or Bluetooth® device > Select an item <ul style="list-style-type: none"> · Normal: Reproduce normal sound · H. BASS1: Enhance low-pitched sound · H. BASS2: Enhance low-pitched sound even more · Train: Minimize sound leakage

■ Functions Available in Playback Window

> While playing file, [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Show Player menu
Play mode setting	Change play mode ( P.8-6)
Sound effect	 Left
Music info	Show song title, artist and playback time
Connect to Website	Open site link > YES
Display Image	Show jacket
Display lyric	Show lyric
Previous image/ Previous lyric	Show previous jacket or lyric
Next image/ Next lyric	Show next jacket or lyric

Chaku-Uta Full®/WMA List

From ▶ Main Menu ▶ Music ▶ Data Manager

Confirm Memory Status

> [Menu] → *Memory Status*

Functions Available in Chaku-Uta Full® Folder List

> *Main Folder* → Highlight a folder → [Menu] → Select an item
(See below)

Item	Operation/Description
Add folder	> Enter folder name
Edit folder name	> Enter folder name
Delete folder	> Enter Phone Password → YES
Memory Status	> Confirm memory status/total files

Functions Available in Chaku-Uta Full®/WMA File List

> *Main Folder* or *WMA* (→ Select a folder) → Highlight a file → [Menu] → Select an item (See below)

Item	Operation/Description
Set as ring tone (Fullsong ring tone) ¹	Set Chaku-Uta Full® as ringtone > Fullsong ring tone → Select an item
Set as ring tone (Point ring tone) ¹	Set a segment of Chaku-Uta Full® as ringtone > Point ring tone → Select a segment → Select an item ● To confirm segment: [Play]
Music info	Show song title, artist and playback time
Move ¹	> Select a storage

Item	Operation/Description
Move to microSD ¹	Move a Chaku-Uta Full® to microSD Card
Add folder ¹	> Enter folder name
Multiple-choice ¹	Select multiple Chaku-Uta Full® files > Check Chaku-Uta Full® files → [Menu] → Delete , Move or Send Ir data → Operate selected item
Connect to Website ¹	Open site link > YES
Display image	Show jacket
Memory Status	Memory status/total number of files appears
DEL all licenses ²	Delete all WMA licenses > Enter Phone Password → YES
Delete this	> YES
Delete all	Delete all files in folder > Enter Phone Password → YES
Attach to S! Mail ¹	Send a file via S! Mail (☞From Step 2 on P.13-4)
Send Ir data ¹	(☞P.10-3)
IC transmission ¹	(☞P.10-5)
Take contents key ¹	(☞P.9-5)

¹ Chaku-Uta Full® files only

² WMA files only

Using Play List

Use **Play List** to organize **Data Folder** music files.
Select **Music** folder files to create **Play List** links to each file in its original folder.


Creating New Play Lists

- Save up to 30 Play Lists with up to 100 songs per list.
- Music files saved on microSD Card are also savable.

Main Menu ► Music

1 *Player*

Player Menu window or Playback window appears.

- When Playback window appears,  [Menu] → **Player menu** to show Player Menu window

2 *Play List* → [Menu] →

Create play list → Select a category and show file list → Check files to save to Play List →

 [Finish]

3 Enter a Play List name



Play List Window

Note


- Create WMA Play Lists (using Windows Media® Player) or SD Audio Play Lists (using SD-Juke Box) on PC. Maximum number of Play Lists to create and songs to save is as follows:
WMA Play Lists: 100 Play Lists; 250 songs per list
SD Audio Play Lists: 99 Play Lists; 99 songs per list

Playing Songs from Play List

Main Menu ► Music

1 *Player*

Player Menu window or Playback window appears.

 
- When Playback window appears,  [Menu] → **Player menu** to show Player Menu window

2 *Play List* → Select a Play List

- To play back selected Play List from the beginning:  [Play]

3 Select a file

Selected file plays back.

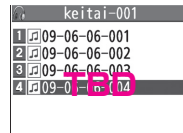

Play List Contents Window

Note

- mp4/3gp files in Ring Songs&Tones folder can also be added to Play List.

Play List

Main Menu ► Music ► Player
 (►) [Menu] ► Player menu) ► Play List

Functions Available in Play List Window

> (Highlight a Play List) [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Open Player menu
Play mode setting	Change play mode (P.8-6)
Create play list	Create a new Play List (P.8-10)
Copy play list	Copy Play List > Enter a Play List name
Edit pl. list name	Edit Play List name > Edit Play List name
Add	Add files to Play List > Select a category, and open a Play List → Check files to add → [Finish]
Delete play list	> Select an item → Operate selected item

Functions Available in Play List Contents Window

> Select a Play List → (Highlight a file) → [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Open Player menu
Play mode setting	Change play mode (P.8-6)

Item	Operation/Description
Music info	Show song title, artist and playback time
Add	Add files to Play List > Select a category, and show contents window → Check files to add [Finish]
DEL from play list	Delete files from Play List > Select an item → Operate selected item
Order to play	> Select a file from Play List to change playing order → to change order → [Select] ● Repeat steps above to change order → [Set]
Add to play list	Add files to another Play List > Add one or Add some (→ For Add some, check files → [Finish]) → Select a Play List
Display image	Show jacket

9 Music Player

9-12

Managing Files

Data Folder	10-2
Data Folder Structure.....	10-2
Opening Files.....	10-4
Viewing & Playing Files.....	10-4
Copy Protected Files.....	10-5
File Display/Playback Functions.....	10-6
Options.....	10-7
Using/Editing Still Images	10-12
Editing Still Images.....	10-12
Creating Animations.....	10-13
Saving Still Images to Phone Book.....	10-14
Managing Folders/Files	10-14
Managing Folders.....	10-14
Using Play List.....	10-15
microSD Card.....	10-16
microSD Card Installation.....	10-17
Format microSD Card.....	10-18
Viewing microSD Card Files.....	10-18
Handset Data Backup.....	10-19
PC File Transfers.....	10-20
microSD Card Functions.....	10-21

Data Folder

Save, play and manage files downloaded from Internet, etc.


- Save still images/videos captured by Camera, downloaded data or data copied/moved from SoftBank handset to microSD Card.

Data Folder Structure

Folder		Function/Saved Data	File Format ¹	
Pictures ²	Download Pictures	Connect to download site	JPEG, GIF (.gif including Interlaced GIF), GIF Pictogram Package File (.gpk), SWF (.swf Flash Animation), PNG (.png including Interlaced PNG)	
	Album-Touch	Activate Album-Touch		
	Main Folder	Downloaded still images, etc.		
	Camera	Still images captured by Camera, etc.		
	My Pictograms	Download My Pict.		Connect to download site
		お気に入り		Downloaded pictograms, etc.
		顔文字, 装飾, etc.		Preinstalled pictograms
	Mail Art	Mail Art (download)		Connect to download site
Pre-installed	Preinstalled still images			
Original Animation	Display still images continuously			
Ring Songs&Tones ²	DL Ring Songs&Tones	Connect to download site	SMF, SP-MIDI, AMR, SMAF and MPEG-4 formatted files (.mid, .midi, .amr, .mmf, .3gp, .mp4)	
	Main Folder	Downloaded ring songs/tones, etc.		
	Pre-installed	Preinstalled ring songs/tones		
	Voice Announce	Data recorded by Voice Announce		
	Play List	Play back Play List		
S! Appli ²	Download S! Appli	Connect to download site	—	
Widget ²	Download Widget	Connect to download site	WGT (.wgt), SWGT (.swgt)	
Music	Main Folder ²	Download Music	Connect to download site	
		Music Search		
		Initial Folder	Downloaded Chaku-Uta Full [®]	
	WMA ³	WMA Files transferred from PC		

Folder		Function/Saved Data	File Format ¹
Videos ²	Download Videos	Connect to download site	MP4 (including .mp4, .3gp, SDV), ASF (.asf)
	Main Folder	Downloaded video files, etc.	
	Camera	Video files recorded by Camera	
	Pre-installed	Preinstalled video files	
	Play List	Play back Play List	
	Position Memory	Play back video files from saved resume position	
PC Movies	microSD ³	PC movies saved using PC	WMA (.wma), WMV (.wmv), ASF (.asf)
	Position Memory	Play back PC movies from saved resume position	
	Play History	Playback records of PC movies	
TV	Image	Still images recorded by Digital TV	JPEG (.jpg)
	Video ³	Copy-protected video files (One-Seg compatible)	TOD (.tod), MOI (.moi), MAI (.mai), PGI (.pgi)
	Position Memory	Play back video files from saved resume position	
Lifestyle-Appli	Download	Connect to download site (Osaifu-Keitai®: ④P.16-2)	—
Books ²	Download Books	Connect to download site	CCF (.ccf), XMDF (.zbf, .zbk, .zbs)
	Customized Screen	Connect to download site	CUSR (.xcsf)
Customized Screen ²	Familiar Usability		
Templates	Download Templates	Connect to download site	—
Font	Download Font	Connect to download site	MTF (.mtf)
	Main Folder	Downloaded fonts	
	Pre-installed	Pre-installed fonts	
Other Documents ²	Main Folder	Incompatible files attached to mail ⁴	—

¹ Some copy protected files have extensions different from above.

² When microSD Card is installed, press  [microSD] in Folder list to view data saved in microSD Card.

³ Available only when microSD Card is installed.

⁴ Some attachment files cannot be saved in Other Documents.

 
Opening Files

Viewing & Playing Files

Main Menu ► Data Folder

1 Select a folder

- In Folder List, press to toggle handset folder and microSD Card folder.

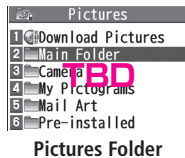

2 Select a folder → Select a file

File appears/plays.

- To toggle file list view: [Change]



When Shortcut to a Download Site is Selected

Handset connects to a download site on Internet.

Operations while Playing Back Ring Songs&Tones

Stop	[Stop]
Volume	
Attach files (during playback) to S! Mail	[]

Videos/PC Movies Playback Operation

- Some operations are not available depending on files.
- Operation descriptions are based on Portrait View.

Adjust Volume	or
Play Previous	 ● Starts from beginning when playback time is over three seconds.
Play Next	
Rewind ¹	Press and hold
Forward ¹	Press and hold
Select Position ²	repeatedly
Change Speed	[/] /
Mute/Resume	[/]
Pause/Resume	[/]
Play Frame by Frame ¹	While pausing, [Frame] ● Play back frame by frame
Remaster (↶P.8-8)	[9]
Listening (↶P.8-8)	[8]
Equalizer (↶P.8-8)	[7]

¹ Videos only

² PC Movies only




 
 


Tip

- File Display/Playback Functions (↶P.9-6)

Copy Protected Files

Playing/forwarding/saving may be restricted and Content Key (P.9-5) may be required for usage.

If Content Key is expired, obtain a new Key to use file.

-  or  (Silver) appears for copy protected files requiring Content Keys.  files are accessible.  files are inaccessible.  appears on images in Thumbnail view of expired files (Original icon appears for Books folder.).
- When deleting  files or folders containing  files, confirmation appears asking whether to delete corresponding Content Key. Other files requiring same Content Key may become unusable.
- See File Properties to confirm restrictions such as expiry term or usage limitation (Options: P.10-7)
- 940P holds up to 1000 Content Keys. Multiple Keys may be required to use a file.
- Interrupted playback (by incoming calls or Alarm) of copy protected WMA files with limited usage in Data Folder is also counted as one usage.


Using Copy Protected Files

- Files downloaded on 940P cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- When set as wallpaper or ringtone, settings may return to defaults if license has expired or different USIM Card is inserted.
- Limited use files cannot be set as wallpaper or ringtone.

Content Key

If Content Key is expired, a message appears when the file is opened. To obtain a new Key, select **YES**. 940P connects to Content Key site.

Note

- Alternatively, obtain Content Key as follows: Highlight a file →  [Menu] → **Take contents key**
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- When 1000 Content Keys have been saved, a message appears. Delete old Keys; otherwise downloads may fail (Connection fees apply).

File Display/Playback Functions

■ Enlarge Still Images

> **Main Menu** ▶ **Data Folder** ▶ **Pictures** ▶ Select a folder ▶ Select a file ▶ [Menu] ▶ **Display size** ▶ **Fit in display**

■ Play Back from a Resume Position

Resume playback (videos/PC Movies) from a saved position.

> **Main Menu** ▶ **Data Folder** ▶ **Videos** or **PC Movies**
▶ **Position Memory** ▶ Select an item

- Save a resume position: Right
- **Marker to resume** is a resume position automatically saved when a call comes in, alarm goes off, battery runs low, or playback is terminated.

■ Functions Available in Video/PC Movie Playback Window

● Some operations are not available depending on files.
> While playback is paused, [Menu] → Select an item (See below)

Item	Operation/Description
Normal play ¹	Play at normal speed
Slow ¹	Play at slow speed
Quick View (1.25x) ¹	Play 1.25 times faster than normal
Quick View(2x) ¹	Play at double speed
Fast ²	Forward
Rewind ²	Rewind
Stop	Return to Videos/PC Movies List window
Position to play	Start playback from specified point > to highlight a play point → [Set]
Connect to Website ¹	Open site link > YES

Item	Operation/Description
Sound effect	Remaster, Listening or Equalizer (P.8-8)
Contents info ²	Show title, file name, etc.
Position memory	Save resume position > Select a resume position ● To play back from a saved position: Left
Attach to S! Mail/ Post blog ¹	Send file via S! Mail or post on a blog > Select an item · Attach to S! Mail (From Step 2 on P.14-4) · Post blog (Step 1 on P.8-7)
Register (Ringtones) ¹	Set as ringtone > Ringtones → Select a type ● ★ appears for item set as ringtone.
Register (Stand-by Display/Start-up Window) ¹	Save a file as Standby Display or Start-up Window > Select an item → YES
Video info ¹	Show title, file name, etc.
Send Ir data ¹	Send file via Infrared (P.10-3)
IC transmission ¹	Send file via IC transmission (P.10-5)
Add shortcut icon ¹	Create a shortcut (P.1-22)
Description ²	Show file information > The words view or Description view
Copy URL ²	Copy URL
Display size	Select a display size > Actual size or Fit in display
Change to full ¹	Switch to Landscape View. Full screen playback starts. ● To toggle views:

¹ Video files only

² PC movies only



Options

Highlight a file in Data Folder →  [Menu] for the following operations.

- Some functions may not be available depending on files.

Pictures

Item	Operation/Description
Edit picture	Edit files (↗P.9-12)
Display picture	Open files
Set display*	Set as wallpaper, Phone Book image, Menu Icons, etc. > Select an item ● ★ appears for item.
Picture info	Show file name, file size, etc.
Attach to S! Mail	Send files via S! Mail (↗From Step 2 on P.13-4)
Graphic mail	Add selected files to Graphic Mail (↗P.13-9)
Post blog	Post file on a blog (↗P.8-7)
Send Ir data	Send files via Infrared (↗P.10-3)
IC transmission	Send files via IC transmission (↗P.10-5)
Add shortcut icon	Create shortcuts (↗P.1-22)
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Positioning	Set where to paste files in Standby > Select a position
Edit file name	Edit file names
Move	Move files to other folders

Item	Operation/Description
Slideshow	Show files in a folder continuously. Select display speed > Normal or Slow
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use →  [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Pictures/ File names	Toggle list view ● Alternatively,  [Change] to toggle
Take contents key	Connect to site for Content Key

* Before setting a file as Video Call related item (except for Incoming/ Outgoing Video Calls), set **Select Images** to **Original** (Change Outgoing Image: ↗P.18-12).

To set a file as Menu Icon related item, set **Menu Icons** to **Customize** (↗P.18-4).

- If incoming calls arrive or handset is turned off while My Pictograms package file (.gpk) is being uncompressed, some pictograms in package file may not open. Retry uncompressing.

Tip

- Enlarge Still Images (↗P.9-6)
- Editing Still Images (↗P.9-12)
- Creating Animations (↗P.9-13)
- Saving Still Images to Phone Book (↗P.9-14)

■ Ring Songs&Tones

Item	Operation/Description
Edit file name	Edit file names
Play melody	Play back files
Set as ring tone	<ul style="list-style-type: none"> > Set as ringtone ● ★ appears for item.
Add shortcut icon	Create shortcuts (☞P.1-22)
Attach to S! Mail	Send files via S! Mail (☞From Step 2 on P.13-4)
Send Ir data	Send files via Infrared (☞P.10-3)
IC transmission	Send files via IC transmission (☞P.10-5)
Copy to microSD	Copy files to microSD Card
Song-Tone info	Show titles, file names, etc.
Memory Status	Show memory information
Delete	<ul style="list-style-type: none"> > Select a type <ul style="list-style-type: none"> · Delete this → YES · Delete select → Check files to delete → ☑[Finish] → YES · Delete all → Enter Phone Password → YES
Sort	Change display order of files > Select an order
Move	Move files to other folders
Move to microSD	Move files to microSD Card
Take contents key	Connect to site for Content Key

■ Widget

Item	Operation/Description
Paste on Stand-by	(☞P.7-2)
Widget Information	Show file names, sizes, etc.
Attach to S! Mail	Send files via S! Mail (☞From Step 2 on P.13-4)
Send Ir data	Send files via Infrared (☞P.10-3)
IC transmission	Send files via IC transmission (☞P.10-5)
Move to microSD	Move files to microSD Card
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use → ☑[Menu] → Select an item

■ S! Appli/Lifestyle-Appli

Item	Operation/Description
Start	Activate S! Appli or Lifestyle-Appli
Security level	Set security level (☞P.15-4)
S! Appli info	Show file names, file sizes, etc.
Add shortcut icon	Create shortcuts (☞P.1-22)
Move to microSD	Move files to microSD Card (Lifestyle-Appli cannot be moved)
Delete	Delete files > YES

■ Music

- See "Functions Available in Chaku-Uta Full®/WMA File List" (☞P.8-9)

■ Videos

Item	Operation/Description
Register	Set as ringtones, Standby Display or Start-up display
Video info	Show titles, file names, etc.
Attach to S! Mail	Send files via S! Mail (☞From Step 2 on P.13-4)
Post blog	Post file on a blog (☞P.8-7)
Send Ir data	Send files via Infrared (☞P.10-3)
IC transmission	Send files via IC transmission (☞P.10-5)
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Move	Move files to other folders

Item	Operation/Description
Add shortcut icon	Create shortcuts (☞P.1-22)
Edit file name	Edit file names
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use → ☞[Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Listing	Change list view ● ☞[Change] to toggle views
Take contents key	Connect to site for Content Key

■ PC Movies

Item	Operation/Description
Contents info	Show titles, file names, etc.
Move	Move files to other folders
Copy	Copy files to other folders
Multiple-choice	Select multiple files to use > Check files to use → [Menu] → Select an item
Comment view	Show descriptions
Memory Status	Show memory information
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES

■ TV

- See Pictures folder for still images.

Item	Operation/Description
Edit title	> Enter titles
Video info	Show titles, channel names, etc.
Add shortcut icon	Create shortcuts (⌘P.1-22)
Delete	> Select an item <ul style="list-style-type: none"> · Delete this → YES · Delete selected → Check files to delete → [Finish] → YES · Delete all → Enter Phone Password → YES
Memory Status	Show memory information
Listing	Change list view <ul style="list-style-type: none"> ● [Change] to toggle views

■ Books

Item	Operation/Description
Play	Play back files
Connect to Website	Open site link
Book info	Show file names, file sizes, etc.
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Add folder	Add folders
Edit file name	Edit file names
Move	Move files to other folders
Take contents key	Connect to site for Content Key
Delete	Delete files > YES

■ Customized Screen

Item	Operation/Description
Preview	Preview files
Collective Setting	Set Customized Screen all at once
File info	Show titles, file names, etc.
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Edit file name	Edit file names
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use → [X] [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Listing	Change list view ● [Change] to toggle views
Take contents key	Connect to site for Content Key
Connect to Website	Open site link

■ Templates

Item	Operation/Description
Compose S! Mail	Send files via S! Mail (P.13-5)
Edit title	Edit titles
Template Info	Show title and file size
Delete this	> YES
Delete selected	> Check files to delete → [Finish] → YES
Delete All	> Enter Phone Password → YES

■ Font

Item	Operation/Description
Set	Apply selected font
File info	Show file names, file sizes, etc.
Edit title	Edit titles
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use → [X] [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Listing	Change list view ● [Change] to toggle views

Other Documents

Item	Operation/Description
File info	Show file names, file sizes, etc.
Attach to S! Mail	Send files via S! Mail (👉From Step 2 on P.13-4)
Copy to microSD	Copy files to microSD Card
Edit file name	Edit file names
Move	Move files to other folders
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use → [Y?][Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order

Note

- Titles of mp4/3gp Ring Songs&Tones files and Videos/Music/Customized Screen files appear in respective lists. Files without titles appear with file names (created when files are saved to handset). Titles cannot be changed; edited file names may not appear in lists.

Using/Editing Still Images

Editing Still Images

- Edit features are not available for all file types.

Main Menu ► Data Folder ► Pictures

- 1 Select a folder → Select a file → [Y?][Menu] → **Edit picture**
- 2 [Y?][Menu] → Select an item (See below)

Item	Operation/Description
Marker stamp	> Select a stamp → 🌀 to move stamp → [Put] <ul style="list-style-type: none"> • Following options are available when positioning a stamp: <ul style="list-style-type: none"> · To rotate or scale up/down: [Y?][Menu] → Select an item · To start over: [Cancel] • To add: [Add]
Frame	> Select a frame <ul style="list-style-type: none"> · To rotate 180 degrees: [Y?][Menu] → 180° rotation · To change frame: 🌀 · To return to frame list: [Cancel]
Character stamp	> Enter text → 🌀 to move text → [Put] <ul style="list-style-type: none"> • To change content/color/font/size: When positioning stamp, [Y?][Menu] → Operate selected item • To start over: [Cancel] after positioning

Item	Operation/Description
Fit in screen	Change image size to Standby (480 x 854) > YES
Change size	> Select a size ● To start over: [Cancel]
Trim away	> Specify a size → [Set] to specify area → [Set] ● To start over: After specifying area, [Cancel]
Retouch	> Select an item ● To start over: [Cancel]
Rotate	> 90° to right, 90° to left or 180° ● To start over: [Cancel]
Brightness	> [Set] to adjust brightness
Attach to S! Mail*	Create S! Mail with edited still images > [Set] → Create S! Mail (From Step 2 on P.13-4) ● Edited files are automatically saved. ● Alternatively, [Attach] to attach pictures to S! Mail
Attach to S! Mail/ Post blog*	Send file via S! Mail or post on a blog > Select an item · Attach to S! Mail → [Set] → Create S! Mail (From Step 2 on P.14-4) · Post blog → [Set] → Post on a blog (P.8-7) ● File is automatically saved with another file name ● Alternatively, [Attach] to attach to S! Mail
Save*	Overwrite/rename to save edited files

* Available after other editing operations.

3 [Set] → [Save]

4 **YES** (Overwrite) or **NO** (Save as)

Creating Animations

Saving Original Animation

Main Menu ▶ Data Folder ▶ Pictures ▶ Original Animation

- 1 <New> → <1st> - <20th>
- 2 Select a folder → Select a file
● Repeat Step 2.
- 3 [Finish]

Functions Available in Original Animation List



In Original Animation list, press [Menu] for following operations.

Item	Operation/Description
Edit title	> Enter title
Org. animation	Add more files to an Original Animation (Above)
Display picture	Play back an Original Animation ● Alternatively, select an Original Animation from list to play back.
Set display	Set an Original Animation as Standby display, etc. > Select item to set Original Animation as
Picture info	View item set for Set display
Release animation	Cancel a saved Original Animation > YES

Saving Still Images to Phone Book

- Savable sizes:
 - Standby (480 x 854) or smaller in JPEG or GIF format (up to 300 Kbytes)
 - VGA (640 x 480) or smaller in PNG format
- Save images to up to 100 Phone Book entries.
- Still images cannot be saved to USIM Card Phone Book entries.

 Main Menu ► Data Folder ► Pictures

- 1 Select a folder → Select a file →  [Menu] → *Set display* → *Phone Book*
- 2 **New Entry**
New → Enter details (→ From Step 3 on P.4-4) →  [Finish]

Add to Existing Entry

Add → Select entry →  [Finish] → **YES**


Managing Folders/Files

Managing Folders

The following operations are available in **Pictures, Music, Books, Videos, Ring Songs&Tones and Other Documents.**

Main Menu ► Data Folder

- 1 Select a folder →  [Menu] → Select an item (See below)

Item	Operation/Description
Add folder	Create user folders
Edit folder name	Edit user folder names
Delete folder	Delete a user folder > Enter Phone Password → YES → YES
Folder security ¹	Hide files in folder unless Phone Password is entered > Enter Phone Password → YES  appears for folder. ● To cancel: Repeat the step
Delete all image ²	> Enter Phone Password → YES → YES
Edit Play List ³	Edit Play Lists
Release Play List ³	Cancel edited Play Lists > YES

Item	Operation/Description
Select storage ⁴	Specify folders on microSD Card to save files to <ul style="list-style-type: none"> > YES ● Folders cannot be specified when saving Books files.
Memory Status ⁵	View memory capacity/number of saved files

¹ Pictures/Videos folders only

² Pictures folder only

³ Play List folder in Ring Songs&Tones folder only

⁴ microSD Card only

⁵ Music folder only



Using Play List

Use **Play List** to organize **Data Folder Ring Songs&Tones/ Videos** files.

Select **Ring Songs&Tones, Music** or **Videos** folder files to create **Play List** links to each file in its original folder.

Creating Ring Songs&Tones Play Lists

Main Menu ► **Data Folder** ► **Ring Songs&Tones**

- 1 Highlight **Play List** →  [Menu] → **Edit Play List**
- 2 Select a number → Select a folder → Select a file
 - Repeat Step 2.
- 3  [Finish]

■ Play Back Play List


> **Main Menu** ► **Data Folder** ► **Ring Songs&Tones** ► **Play List**

- Files are played back in the saved order.

■ Delete a File

> After Step 1, select a file → **Release this**

■ Delete All Files







> In Step 1,  [Menu] → **Release Play List** → **YES**

Note

- mp4/3gp files cannot be added to Play List except in Music Player Play List.

Creating Video Play Lists

Main Menu ► Data Folder ► Videos ► Play List

- 1 Select a Play List
 - 2 Select a number → Select a folder → Select a file
 - Repeat Step 2.
 - 3  [Finish]
- **Play Back Play Lists**
- > Main Menu ► Data Folder ► Videos ► Play List ► Highlight a Play List →  [Play]
- Files are played back in the saved order.
- **Delete a File**
- > After Step 1, (highlight a file →)  [Menu] → *Delete this or DEL all from list* → YES
- **Change Order**
- > After Step 1,  [Menu] → *Oder to play* → Select a file → Select a target →  [Finish] →  [Finish]

microSD Card

- 940P is compatible with up to 2 GB commercial microSD Cards and up to 16 GB commercial microSDHC Cards (as of May 2009). For information on memory card compatibility, visit the website below (Japanese). Note that microSD Cards not listed on the website may not function properly.
 - From Yahoo! Keitai P-egg (as of October 2009)
- Main Menu ► Yahoo! ► Bookmarks
► Panasonic top page (P-egg)
- From PC <http://panasonic.jp/mobile/>
 - Not all operations are guaranteed by the microSD/microSDHC Cards listed.
- Format new microSD/microSDHC Cards for use with 940P (👉P.9-18).

Note

 
- SoftBank is not liable for damages from accidental loss/alteration of microSD Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- microSD Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.

microSD Card Installation




- Turn off handset before inserting/removing microSD Card.
- Battery Installation: [P.1-13](#)

Inserting

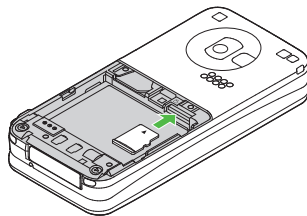- 1 Insert microSD Card until it clicks

 


microSD Card Check


When microSD Card is installed correctly,  appears. If  appears, microSD Card cannot be used. Remove microSD Card from handset, and re-insert it. If  does not disappear, execute Check microSD ([P.9-21](#)) or format microSD Card ([P.9-18](#)).
(Display Indicator: [P.1-10](#))

Removing

- 1 Push microSD Card in
 - microSD Card pops out with a light push.

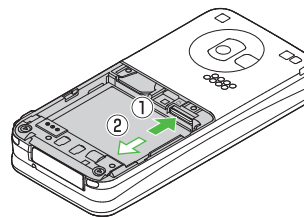

Note

- Do not turn off handset or remove battery/microSD Card while  flashes. microSD Card may be damaged or files lost.
- microSD Card may pop out when inserting/removing it.

Format microSD Card

- Formatting microSD Card deletes all saved files/data.

Main Menu ► Tools ► microSD Backup

- 1 [X?] [Menu] → *microSD format*
- 2 Enter Phone Password → *YES*

Note

 
- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- microSD Cards formatted on other devices may not be used. Format microSD Card on 940P before use.
- 940P cannot format incompatible microSD Cards.
- If format fails, turn power off and remove microSD Card from 940P. Reinsert microSD Card and format it again.

Viewing microSD Card Files

View Phone Book entries, Calendar events, Tasks, mail messages, Notepads and Bookmarks backed up on microSD Card.

Main Menu ► Tools ► microSD Backup

- 1 Select a category

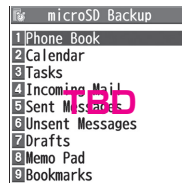

Category List

- 2 Select a file

Backup date appears as file name.



File List

- 3 Select a data



Data List



Detailed Data

Note

- If messages on microSD Card do not appear correctly, copy messages to handset (P.9-19) and execute **Charset Conversion** (P.13-22).

Handset Data Backup

Back up handset data (Phone Book, Calendar, Tasks, Messages, Notepad, Bookmarks, Content Keys) to microSD Card; restore handset data after accidental loss/alteration.

- Back up Content Key: P.9-22

Backing up to microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Highlight a category → [Menu] → **Copy to microSD** (→ For **Bookmarks**, select an item)
- 2 Enter Phone Password → **YES**
All files of selected category are backed up to microSD Card.

One File Backup

> Open a file → [Menu] → **Copy to microSD** → **YES**

Restoring from microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Select a category

2 Restore One Item

Select a file → Highlight an item → [Menu] → **Add to phone**

Restore One File

Highlight a file → [Menu] → **Add to phone** or **Overwrite to phone** → Enter Phone Password

Restore All Files

[Menu] → **Add all to phone** or **Overwr. all to ph.** → Enter Phone Password

3 YES

Note

- Note that **Overwrite to phone** or **Overwr. all to ph.** erases all files of same category on handset.
- Files of 10 MB or larger cannot be moved/copied from microSD Card to handset.
- Data backed up in other SoftBank handsets may not be restored in 940P depending on type and size.

Tip

- Delete Items from microSD Card ● View microSD Card Memory Capacity (P.9-21)

PC File Transfers

Folder Structure

Files moved or copied from 940P to microSD Card are managed as shown below:

- Save files in folders by file type.

DCIM		
● Still images saved to microSD Card		
PRIVATE		
MYFOLDER		
Utility		
Calendar	Calendar.BCK	Calendar Backup files
Contacts	Contacts.BCK	Phone Book Backup files
Rights		Content Key Backup files
Tasks	Tasks.BCK	Tasks Backup files
Memo	Memo.BCK	Notepad Backup files
Mail		
Drafts	Drafts.BCK	Drafts Backup files
Inbox	Inbox.BCK	Incoming Mail Backup files
Outbox	Outbox.BCK	Unsent Messages Backup files
Sent Messages	Sent Messages.BCK	Sent Messages Backup files
My Items		
Book		E-comics
Bookmarks	Bookmarks.BCK	Bookmarks Backup files
Flash(R)		Flash® files

Games and More	S! Appli
Music	Sound files with .3gp, .mp4, .smc
Other Documents	Other files
Pictograms	My Pictograms
Pictures	Still images moved/copied from handset to Main Folder in microSD Card
Sounds & Ringtones	Sound files of: up to 10 MB with .3gp, .mp4, up to 300 KB with .mid, .midi, .amr
Videos	Videos moved/copied from handset to Main Folder in microSD Card
Widget	Widget contents
WMFile*	PC Movies saved from PC to microSD Card

SD_VIDEO

- Videos saved to microSD Card

- Some copy protected files have extensions different from above.
- When moving/copying videos from microSD Card to handset, file format or file size may change.

* If WMFile does not appear in My Items (MYFOLDER), create and save a folder titled WMFile.


Using Data on microSD Card

With a microSD Card inserted, connect handset with a PC via USB cable (not included) to read/write data from/onto microSD Card.

Following equipment is required:

- Connector Cable: USB cable
- PC: PC with USB port (Universal Serial Bus Specification Rev 1.1 compliant)
- Compatible Operating Systems: Windows® XP, Windows Vista® (Japanese version in each)

**Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode
▶ microSD Mode**

- 1 Connect handset to PC via USB cable while 940P is on
 - PC recognizes microSD Card.
 -  appears in Standby (handset).

Note

- Even if incoming call arrives, reading/writing data continues during calls. After calls, check indicators on PC to see if reading/writing is complete.
- File names saved in microSD Card may not properly appear if changed on PC.

microSD Card Functions

■ Restore microSD Card items (Check microSD)

Use Check microSD to repair microSD Card data errors.

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu]**
▶ **Check microSD ▶ YES**

- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- It may take 30 seconds or longer to complete Check microSD depending on data volume on microSD Card.
- 940P cannot check incompatible or unformatted microSD Cards.
- 940P may delete files and folders that fail to be restored.

■ Delete Items from microSD Card

> **Main Menu ▶ Tools ▶ microSD Backup ▶ Select a category**
▶ (Highlight a file →) ** [Menu] ▶ Delete this or Delete all (▶ For Delete all, enter Phone Password) ▶ YES**

- Content Key cannot be deleted.

■ View microSD Card Memory Capacity

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu]**
▶ **microSD info**

■ Back Up Content key

Copy Content Keys to microSD Card from handset or to handset from microSD Card.

> **Main Menu** ▶ **Settings** ▶ **Security** ▶ **Content Key**

▶ **Copy to microSD** or **Copy from microSD** ▶ Enter Phone Password

- Content Keys with expiration dates or usage limits cannot be backed up.
- USIM Card inserted when Content Keys were moved to microSD Card must be inserted to move Content Keys from microSD Card.
- Some applications are made for use on specific models. Some models move Content Keys to microSD Card instead of backing up. Contact SoftBank Mobile Customer Center, General Information for more information(☎P.19-34).

Connectivity


Infrared	11-2
Before Using Infrared.....	11-2
One/Multiple File Transfer	11-3
All File Transfers.....	11-3
IC Transmission	11-4
One File Transfer.....	11-5
All File Transfers.....	11-5
Bluetooth®	11-6
Before Using Bluetooth®.....	11-6
Using Bluetooth®.....	11-7
Suspending Bluetooth® Functions	11-8
Placing Bluetooth® Devices on Standby for Connection.....	11-9
Sending/Receiving Phone Book.....	11-9
Bluetooth® Functions.....	11-10
SoftBank Utility Software (Japanese)	11-11
USB (Japanese)	11-11
Setting USB Mode	11-11
Transferring Data via USB Cable.....	11-11
Data Communication via USB Cable.....	11-12
AV Output	11-13
Connecting Handset to TV	11-13

Infrared

Before Using Infrared

Transfer Phone Book/Calendar events, messages, bookmarks and Data Folder files wirelessly between 940P and compatible devices, including PCs and other mobiles.

 - 940P infrared function is based on IrMC1.1, however, some IrMC1.1-based device transmissions may not be transmitted/received within specification.
- Debris may inhibit infrared transfers; clean infrared ports with a soft cloth beforehand.
- Direct sunlight/fluorescent light may inhibit transfers.
- Align infrared ports within 20 cm of one another and make sure no objects are placed between them. Do not move the devices until transfer is complete.

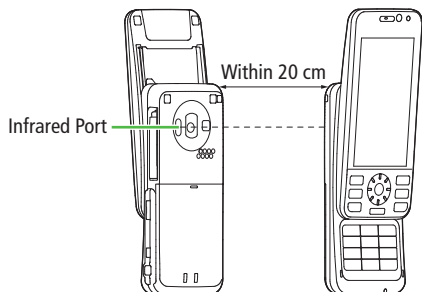

Transferable Files

Transferable file	Condition	One file	All files
Phone Book (Account Details)		<input type="radio"/>	Up to 1000
Calendar events ¹		<input type="radio"/>	Up to 1000
Tasks		<input type="radio"/>	Up to 100
Received message		<input type="radio"/>	Up to 3000
Sent message		<input type="radio"/>	Up to 1000
Drafts		<input type="radio"/>	Up to 10
Notepad		<input type="radio"/>	Up to 20
Ring Songs&Tones		<input type="radio"/>	—
Still image ^{2 3}		<input type="radio"/>	—
Video ³		<input type="radio"/>	—
Bookmark (Yahoo! Keitai, PC Site Browser)		<input type="radio"/>	Up to 100 each
Widget ³		<input type="radio"/>	—

: Transferable —: Not transferable

¹ Saved Holidays/Memorial days not transferable

² Including Flash[®] files

³ Multiple files transferable

Note

- Following files cannot transfer:
 - Files prohibited for transfers from 940P
 - Phone Book entries and SMS on USIM Card
- If memory becomes full, remaining entries are truncated (Memory List: P.19-25).

One/Multiple File Transfer

- Transferable Files: ☞ P.10-2

Sending

- 1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	> ☞ [Menu] → <i>Send Ir data</i> → <i>Send phonebook</i>
Account Details	> ☞ [Ir]
Messages	> ☞ [Menu] → <i>Send Ir data</i> → <i>Send This</i>
Bookmarks	> ☞ [Menu] → <i>Send to ExtnIDvcs</i> → <i>Send Ir data</i> → <i>Send This</i>
Still Images/ Videos/ Widgets	> ☞ [Menu] → <i>Send Ir data</i> <ul style="list-style-type: none">To send multiple files: ☞ [Menu] → <i>Multiple-choice</i> → Select files to send → ☞ [Menu] → <i>Send Ir data</i>
Other Files	> ☞ [Menu] → <i>Send Ir data</i>

2 YES

Receiving

Main Menu ► **Tools** ► **Receive via Infrared** ► **Receive**

- 1 When a file is received, **YES**
Send files from sender side within 30 seconds.
 - To receive subsequent files, select **YES**.

All File Transfers

Precaution

- Receiving all files overwrites all saved files including secret/protected files.
- Sending all Phone Book entries sends Account Details as well.
User-edited information is overwritten (handset number remains).

Session Number

Session number (4 digits) is required for all file transfers via Infrared and IC transmission. Sender and recipient must enter same Session number to complete transfers.

Sending

- 1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	☞ [Menu] → <i>Send Ir data</i> → <i>Send all phonebook</i>
Messages	☞ [Menu] → <i>Send Ir data</i> → <i>Send All</i>
Bookmarks	☞ [Menu] → <i>Send to ExtnIDvcs</i> → <i>Send Ir data</i> → <i>Send All</i>
Other Files	☞ [Menu] → <i>Send all Ir data</i>

- 2 Enter Phone Password → Enter Session number → **YES**
Recipient must enter the same Session number to start transfers.

Receiving


Main Menu ► Tools ► Receive via Infrared ► Receive All

 
- 1 Enter Phone Password → Enter same Session number as sender's → **YES** → **YES**


Saved files are deleted, and transfer starts.

IC Transmission

Exchange files with another IC compatible handset using reader/writer function.

- Type of files and transfer conditions are same as those for infrared file transfer (☞P.10-2).
Multiple file transfer is not available.
- IC transmission is not available when **IC Card Lock** (☞P.16-5) is activated.
- When receiving data, end all active functions.
- If there is difficulty in file transfer, move a  logo close to or away from the other logo or move each side up, down, left, or right.
- Data cannot be sent during charging battery.

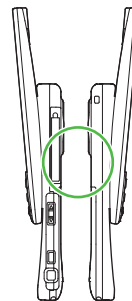

Align  logos of both handsets

One File Transfer

- Before Receiving a File**
- **Receive IC Datum** is set to **ON** by default. When **Receive IC Datum** is **OFF**, One File Transfer is unavailable.
 - To set **Receive IC Datum** on:
Main Menu ▶ **Tools** or **S! Appli** ▶ **Osaifu-Keitai**
▶ **IC Card Settings** ▶ **Receive IC Datum** ▶ **ON**

Sending

1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	> [Menu] → IC transmission → Send phonebook
Account Details	> [ICtrans]
Messages	> [Menu] → IC Transmission → Send This
Bookmarks	> [Menu] → Send to ExtrnlDvcs → IC transmission → Send This
Other Files	> [Menu] → IC transmission

2 **YES**

Receiving

1 Align logo on sender side with 940P (recipient) → **YES**

All File Transfers

- Precautions/Session number (P.10-3)

Sending

1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	> [Menu] → IC transmission → Send all phonebook
Messages	> [Menu] → IC Transmission → Send All
Bookmarks	> [Menu] → Send to ExtrnlDvcs → IC transmission → Send All
Other Files	> [Menu] → AllIC transmission

2 Enter Phone Password → Enter Session number → **YES**
Recipient must enter the same Session number to start transfers.

Receiving

- 1 Align logo on sender side with 940P (recipient)
- 2 **YES** → Enter Phone Password → Enter same Session number as sender's
Saved files are deleted. Transfer starts.

Bluetooth®

Connect handset to Bluetooth® devices to use functions below.

Function	Device	Description
Handsfree Calls (☞P.10-10)	Headsets Handsfree devices	Talk handsfree on handset
Wireless Playback (☞P.10-10)	Audio devices	Play back sounds (Digital TV/ Video) or music (Music Player) wirelessly from external speaker
Internet Connection (☞P.10-10)	PC	Connect wirelessly to Internet using handset as external modem
Sending/Receiving Phone Book (☞P.10-9)	PC Handsets	Send/receive Phone Book entries wirelessly

Tip

Settings

- Stop Ringtone Output to Headset/Handsfree Device
- Continue Calls on Handset when Bluetooth® is Disconnected from Headset/Handsfree Device
- Always Make Calls from 940P even when Headset is Connected
- Always Use Handsfree Device to Make/Receive Calls (☞P.18-17)

Before Using Bluetooth®

Bluetooth® Specifications

Version	Bluetooth® specification Ver.2.0+EDR
Supported Profiles ¹	HSP (Headset Profile) HFP (Hands-Free Profile) A2DP: Advanced Audio Distribution Profile AVRCP: Audio Video Remote Control Profile DUNP: Dial-up Networking Profile OPP (Object Push Profile)
Output	Bluetooth® Power Class2
Frequency Bands ²	2.4GHz (2.402GHz-2.480GHz)
Communication Distance ³	Approximately ten meters

¹ Bluetooth® connections are available with compatible devices supporting the same profile.

² Bluetooth® operates in the 2.4 GHz unlicensed frequency band. Depending on other devices in use in the spectrum, Bluetooth® connection may slow down/terminate, or range may decrease.

³ Affected by distance between devices, obstructions, signal conditions, handset status, etc.

Notes

- 940P may not be able to establish a Bluetooth® connection with some Bluetooth® devices.
- Establish connections with certified Bluetooth® devices that meet the specification standards developed by Bluetooth® SIG.
- Due to the unique characteristics/specifications of a certified Bluetooth® device, connections or transfers may fail; procedures, displayed results or operations may vary from those described in the manual.
- When data transfer is interrupted, it may take some time for process to complete.
- Noise may interfere with wireless or handsfree conversations depending on the status of connected devices or signal conditions.
- For details about headset/handsfree devices, see the device manuals.

Using Bluetooth®

Pair Bluetooth® devices with 940P beforehand to establish connections for different Bluetooth® functions.

Searching & Pairing Devices

Search other Bluetooth® devices.


Paired devices appear in Search&Paired Device list.

- Bluetooth® Passkey is not necessary for paired devices.
- Search up to 20 Bluetooth® devices at one time; pair with up to ten Bluetooth® devices.
- Place Bluetooth® devices on standby for connection.

Main Menu ▶ Tools ▶ Bluetooth ▶ Search&Paired Device

1 **YES***

Device search starts and names of found devices appear.



- To search again:  [Search]



* If there are already paired devices in list, select a device → Select a function

2 Select a device → **YES** → Enter Phone Password

3 Select text entry field → Enter Bluetooth® Passkey

4 Select a Bluetooth® function

940P connects to Bluetooth® device. When complete,  flashes in blue. After no Bluetooth® connection is made for a certain time,  appears in black and Power saver mode starts.

- When Bluetooth® device can connect to multiple services, confirmation appears asking whether to connect to another service.
- While connected,  (Blue) appears. While in Standby,  (Gray) appears.
- When **Dial-up** is selected, 940P stands by for connection requests from other Bluetooth® devices.
- **Dial-up** can be selected regardless of profile types.

Bluetooth® Passkey

Bluetooth® Passkey (1 to 16 digits) is required to connect Bluetooth® devices; sender and recipient must input the same code to complete file transfers.

- Bluetooth® Passkey is not necessary for paired devices.

Search&Paired Device List

1 Device Type

 
Indicators appear for different types of devices.

2 Device Name

Device names appear. When no names are found, Bluetooth® addresses appear.

3 Connection Status

: Connected : Not connected : Not found : Not paired

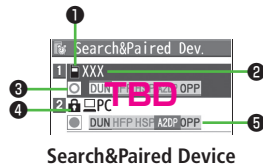


Search&Paired Device

4 Protection

Indicator appears when registered contents are protected.

5 Profile Status

Indicators appear to show profile status.

Icon	Letter Color	Background Color	Frame Color	Status
	Blue	Gray	–	Not connected (Not paired)
	Blue	Gray	Blue	Not connected (Paired)
	White	Green	–	Connected
	Green	White	Green	Standby for connection
	White	Light green	–	Preferred device
	Gray	Gray	–	Not supported

Tip

Settings ● Set Duration to Search for Bluetooth® Devices (P.18-17)

Suspending Bluetooth® Functions

Suspend all Bluetooth® functions connected or on standby for connection, and disable Bluetooth®.

Main Menu ► Tools ► Bluetooth

1 Bluetooth OFF → YES

- To return to standby for previously connected function:
Bluetooth ON

Placing Bluetooth® Devices on Standby for Connection

Main Menu ► Tools ► Bluetooth ► Accept Registered

- 1 Check functions to be on standby for connection →
☑[Finish]
 - To uncheck, select functions to remove check marks.

Sending/Receiving Phone Book

Sending

- 1 Open Phone Book → ☰[Menu] →
Send to Bluetooth
- 2 **One File Transfer**
Send phonebook → Select a recipient device
All File Transfer
Send all phonebook → Select a recipient device →
Enter Phone Password
- 3 **YES**

Receiving

Main Menu ► Tools ► Bluetooth ► Receive via Bluetooth

- 1 **One File Transfer**
Receive → **YES**

All File Transfer

Receive All → Enter Phone Password → **YES** → **YES**

- If memory becomes full, remaining entries are truncated (Memory List: ☞P.19-25).

Tip

Settings

- Set Authentication/Encryption to Send Phone Book Entries
- Enter Password when Sending All Phone Book Entries
(☞P.18-17)

Bluetooth® Functions

From ► Main Menu ► Tools ► Bluetooth

■ Functions Available in Search&Paired Device Window

> **Search&Paired Device** →  [Menu] → Select an item (See below)

Item	Operation/Description
Register devices	> Enter Phone Password → Pair devices (☞ From Step 3 on P.10-7)
Preferred device	Set a preferred Bluetooth® device for incoming calls <ul style="list-style-type: none"> ● Available only for headset function compatible Bluetooth® devices. ● To cancel, perform same operation.
Protect/release	Protect/cancel devices. Protection prevents devices from being deleted or overwritten
Change device name	> Enter a device name
Delete	> YES
Description	Show device name, Bluetooth® address, device class and supported profile
Add shortcut icon	Create shortcuts (☞ P.1-22)

■ Make/Receive Calls via Bluetooth®

> **Search&Paired Device** → Select a device → **Headset** or **Hands-free**
→ **YES** → Make/receive a call using Bluetooth® device

■ Use Bluetooth® Device for Wireless Playback

> **Search&Paired Device** → Select a device → **Audio** → Watch Digital TV or play back videos or music

- Digital TV/Video sounds are played only by A2DP profile compatible Bluetooth® devices compliant with SCMS-T copyright protection standard.

■ Connect to Internet Using Bluetooth® Device

> **Search&Paired Device** → Select a device → **Dial-up**

- 940P waits for dial-up connection.
- Refer to a manual for Bluetooth® device for details.
Download utility software (940P) "Modem Wizard" from website below to PC and install software.
<http://panasonic.jp/mobile/support/download/940p/index.html>
- To establish a dial-up connection, see Help on "Modem Wizard."
- Connecting handset to a PC or PDA for Internet access may incur high packet transmission charges.

■ Place Bluetooth® Device on Standby for Dial-up

> **Dialup Rgstry Standby** → Enter Phone Password → **YES** → Select Bluetooth® Passkey text box → Enter Bluetooth® Passkey

SoftBank Utility Software (Japanese)

Phone Book, Calendar, Tasks, messages, Bookmarks, Notepads and Data Folder can be transferred to a PC, edited or managed by using SoftBank Utility Software.

- For details on and downloading SoftBank Utility Software, visit <http://www.softbank.jp/mb/r/sbu/> (Japanese)

Note

- USB cable (not included) is necessary for using SoftBank Utility Software.
- S! Appli, PC Movies, TV, Lifestyle-Appli, Books, Customized Screen, Templates and Other Documents cannot be backed up.
- Copy protected files may not be backed up.
- Set **USB Mode** to **Communication Mode** (☞Right).

USB (Japanese)

Connect 940P to a PC via USB cable (not included) specified by SoftBank for data transfer or data communication.

Setting USB Mode

<Default> Communication Mode

Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode

- 1 Select an item (See below)

Item	Operation/Description
Communication Mode	Packet transmission, 64K data transmission, data transfer and calls with USB handsfree compatible devices are available (☞Left)
microSD Mode	Read/write data on microSD Card (☞P.9-21)
MTP Mode	Transfer/delete music data via Windows Media® Player on PC (☞P.8-4)

Transferring Data via USB Cable

- Transfer data using SoftBank Utility Software (☞Left).
- Transferring data in microSD Mode (☞P.9-21)

Data Communication via USB Cable

Use 940P as a modem for Internet access by connecting 940P with a PC.

- Download utility software from URL below and install on PC.
<http://panasonic.jp/mobile/support/download/940p/index.html>

- 1 Install "USB ドライバ (USB Driver)" and "Modem Wizard" from Utility Software (940P) to a PC
- 2 Set 940P to **Communication Mode** (P.10-11), and connect 940P to PC via USB cable
 - Power up 940P before connecting to PC via USB cable.
- 3 Start up "Modem Wizard", and operate communication setup
 - "Modem Wizard" enables you to set up APN and dial-up easily.
For setup/starting procedures, see "Modem Wizard" Help.

Note

- Connecting handset to a PC or PDA for Internet access may incur high packet transmission fees.

 
AV Output

View the following on a TV set or other devices using a SoftBank-specified video output cable (not included): Video Call images, Digital TV images, still images/videos saved on 940P.

- View AV-output-compatible S! Appli on TV.

Connecting Handset to TV

- To use video output cable (not included), Stereo Earphone Conversion Cable (not included) is required.

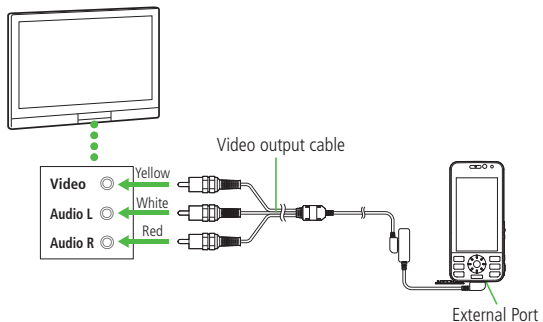

- 1 Open External Port Cover
- 2 Connect video output cable to handset using conversion cable
 - To connect video output cable to conversion cable: P.1-4

- 3 Connect video output cable to video/audio input terminal on TV set
- 4 Open an image file on 940P
 - To toggle display size:

Note

- Some images cannot be displayed on TV.
- Display size setting is not available for some TV sets.

11 Connectivity

11-14

Handset Security

Changing Phone Password 12-2

Security Functions 12-2

USIM PINs 12-2

Keyguard 12-4

Privacy Key Lock 12-5

Personal Data Lock 12-5

Activating Personal Data Lock when Closing Handset 12-7

Secure Remote Lock 12-8

Key Pad Dial Lock 12-9

Additional Lock Functions 12-9

Restricting Calls/Messages 12-10

Hiding Call Logs and Sent/Received Address List 12-10

Secret Mode/Secret Data Only 12-10

Setting Secret Mail 12-11

Mail Security 12-12

Call Restrictions 12-12

Delaying Ringtone 12-13

Rejecting Unknown Callers 12-13

Rejecting Calls without Caller ID 12-13

Reset 12-14

Reset Settings 12-14

All Reset 12-14

Changing Phone Password

<Default> 9999

Change Phone Password as required.

- For Phone Password details: ☞P.1-28

Main Menu ► Settings ► Security ► Change Phone Password

- 1 Enter current 4-8-digit Phone Password
- 2 Enter new 4-8-digit Phone Password → **YES**

Security Functions

USIM PINs

- For more information about PINs: ☞P.1-3

Note

- Emergency numbers (110, 119, 118) are not dialable in PIN/PIN2, PUK/PUK2 entry window.

PIN Authentication

Activate to require PIN entry each time handset is turned on.

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **PIN Authentication**
- 2 **ON** or **OFF**
- 3 Enter PIN

Changing PIN/PIN2

- Set **PIN Authentication** to **ON** before changing PIN (☞Above).

Main Menu ▶ **Settings** ▶ **Security** ▶ **PIN Authentication**

- 1 Enter Phone Password → **Change PIN** or **Change PIN2**
- 2 Enter current PIN/PIN2
- 3 Enter new PIN/PIN2
- 4 Reenter new PIN/PIN2

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering PIN Unlocking Key (PUK/PUK2).

- For information about PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).




- 1 In PIN lock mode, enter PUK/PUK2
- 2 Enter new PIN/PIN2
- 3 Reenter new PIN/PIN2


Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled (Even turning off power is counted as one incorrect entry.). Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).

Keyguard


Lock handset keys to prevent accidental operation except when turning power on/off or answering incoming calls.

- While set,  appears in Standby.
- By default, Keyguard temporarily cancels when handset opens (Keyguard Setting: Right).
- Activate Keyguard in specified time after closing handset (Timer Lock at Close: P.12-7)

1 In Standby, press and hold 

- To toggle Keyguard settings, repeat operation.

While Keyguard is Active

- Emergency numbers (110, 119, 118) are dialable even when Keyguard is set to **Lock Even Slide Open**. Entered numbers do not appear on Display. Once numbers are dialed, Keyguard is canceled.
- Press  to disable Calendar event tone or Alarm.
- Keyguard can be canceled even during a call.

Note

- Alternatively, **Main Menu** ► **Settings** ► **Security Settings** ► **Keyguard** ► **ON** or **OFF** to activate/deactivate Keyguard
- Turning off power cannot cancel Keyguard.

Keyguard Setting

<Default> Unlock When Slide Open

Activate to cancel Keyguard temporarily when opening handset.

Main Menu ► **Settings** ► **Security Settings**
► **Keyguard Setting**

1 **Lock Even Slide Open** or
Unlock When Slide Open

Privacy Key Lock

<Default> OFF

Set Privacy Key Lock to require Phone Password for using 940P except for turning handset on/off and answering calls.

- While locked,  appears in Standby.

Main Menu ► Settings ► Security ► Privacy Key Lock

1 Enter Phone Password

- To cancel Privacy Key Lock, enter Phone Password in Standby. If Phone Password is incorrectly entered five times, 940P turns off.

While Privacy Key Lock is Active

- Emergency numbers (110, 119, 118) are dialable even when Privacy Key Lock is active.
- Only phone numbers appear on Display for incoming calls.
- Calls cannot be received by Bluetooth® headsets or handsfree devices.
- Message ringtones or Alarm tones are disabled.
- Calendar event tone or Alarm is disabled.
- S! Quick News and some indicators do not appear. They appear after Privacy Key Lock is canceled.

Note

- Turning off power cannot cancel Privacy Key Lock.

Personal Data Lock

Set Personal Data Lock to prevent others from reading or tampering with your personal information in Phone Book or Data Folder. Activate to require Phone Password for accessing personal data.

Locked Functions/Data

- Messaging
- S! Appli
- Phone Book search/saving/setting
- Memory Manager/ Memory Status (Phone Book)
- Account Details
- Restrictions (Phone Book)
- Notepad
- Calendar
- Tasks
- Shortcuts
- Event Indicators
- Camera/Video Camera
- Album-Touch
- Lifestyle Appli
- microSD Backup
- Answer Phone
- Voice Recorder
- Customized Screen
- Voice Announce
- Post blog
- Yahoo! Keitai viewing/setting
- PC Site Browser viewing/setting
- Bookmarks/ Saved Pages
- BookSurfing®/e-Book Viewer
- Mobile Widget
- S! Quick News
- S! Information Channel/Weather
- Content Key obtaining/backup
- Voice Dial
- S! GPS Navi
- Data Folder*
- Music Player
- Digital TV
- Bar Code Reader
- Receive via Infrared/Bluetooth®
- IC Data transmission
- Alarm
- Dictionary
- Pedometer
- Reset Settings/All Reset
- Software Update

* Font setting is available.

Activating/Canceling Personal Data Lock

<Default> Deactivate


- While locked,  appears in Standby.

Main Menu ► Settings ► Security ► Personal Data Lock

1 Enter Phone Password → **Activate/Deactivate**

- To cancel Personal Data Lock, repeat operation. If Timer Lock at Close is set, password entry is requested when 940P is opened.

Canceling Personal Data Lock Temporarily

When Phone Password is entered,  disappears and disabled functions become temporarily available.

- Once handset returns to Standby while no functions are active, Personal Data Lock is active again.
- Some functions remain unavailable. Deactivate Personal Data Lock to use the following:
 - Receiving IC data
 - Reject unknown

Note

- While Personal Data Lock is set, some indicators do not appear in Standby. They appear after lock is canceled.
- Turning off power does not cancel Personal Data Lock.

Customizing Personal Data Lock

Enable/disable Alarm, incoming message notification, etc. while Personal Data Lock is active.

Main Menu ► Settings ► Security ► Personal Data Lock

1 Enter Phone Password → **Customize** → Select an item (See below)

Item	Operation/Description
Alarm Tone	Enable/disable Alarms (Calendar, TV timer, or other alerts) or TV Timer Recording. > Select an item → Accept (Enable) or Not Accept (Disable)
Incoming Call Act	Show/hide Event Indicator (incoming messages) or Phone Book entry information (incoming calls). > Select an item <ul style="list-style-type: none"> Incoming Message → Accept (Show indicator) or Not Accept (Hide indicator) Phone Book Available → Accept (Show Phone Book Entry information) or Not Accept (Hide information)
Display/Tone	Enable/disable Display settings, ringtones or indicators. > Select an item <ul style="list-style-type: none"> Internal Display → Accept (Enable Display Settings) or Not Accept (Disable) Ring Tones → Accept (Enable Sound Settings) or Not Accept (Disable) S! Quick News → Accept (Show information) or Not Accept (Hide information) S! Info Ch./Weather → Accept (Show indicators) or Not Accept (Hide indicators) Widget Contents → Accept (Show widgets) or Not Accept (Hide widgets)

Showing Personal Data Lock OFF Window when Opening Handset

<Default> OFF

Main Menu ► Settings ► Security ► Lock OFF at Open

- 1 Enter Phone Password
- 2 **Personal Data Lock** → **ON**

Note

- When Timer Lock at Close and Lock OFF at Open are both active, canceling Personal Data Lock when opening handset temporarily cancels lock. However, lock activates again when specified time elapses after closing 940P.

Activating Personal Data Lock when Closing Handset

<Default> Keyguard: OFF
Personal Data Lock: OFF

Set **Timer Lock at Close** to automatically activate **Keyguard** or **Personal Data Lock** when specified time has elapsed after **940P** is closed.

- While locked,  appears in Standby.

Main Menu ► Settings ► Security ► Timer Lock at Close

- 1 Enter Phone Password
- 2 **Keyguard** or **Personal Data Lock** → Select a time
When **Personal Data Lock** is selected, confirmation
 - When **OFF** is selected, setting is canceled.

Secure Remote Lock

If handset is lost or stolen, remotely lock handset from a PC or mobile. If Secure Remote Lock is active, all operations are unavailable except to turn handset on.

- For service details and user agreement/registration, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) or My SoftBank.

Accessing My SoftBank from Handset (Japanese)

For service details, visit SOFTBANK MOBILE Corp. Website.

Main Menu ▶ Yahoo! ▶ メニューリスト ▶ My SoftBank
▶ English

- Follow onscreen instructions.

Note

- Emergency numbers (110, 119, 118) are dialable even while Secure Remote Lock is set.

Showing Messages during Secure Remote Lock

<Default> OFF

Set Display message to appear when Secure Remote Lock is active.

- Use preset message or create a message.

Main Menu ▶ Settings ▶ Security ▶ Lock Message

1 Enter Phone Password

2 *Display Setting* → ON

■ Save Lock Messages

> After Step 1, *Message* → Enter a message

Key Pad Dial Lock

<Default> Deactivate

Allow dialing only from Phone Book entries and lock dialing with keypad. Unauthorized use of 940P can be prevented.

- While locked,  appears in Standby.

Unavailable Operations


- Dialing with keypad
- Phone Book (saving, editing, deleting, copying from microSD Card, and sending/receiving via Infrared, IC transmission and Bluetooth®)
- Sending S! Mail (by typing in address)/SMS

Available Operations

- Dialing from Phone Book or Voice Dial
- Dialing from Redial, Outgoing Call Logs, Incoming Call Logs, Sent address, or Received address (only phone numbers/mail addresses saved in Phone Book)

Main Menu ► Settings ► Security ► Key Pad Dial Lock

1 Enter Phone Password

While Key Pad Dial Lock is set,  appears in Standby.

- To cancel Key Pad Dial Lock, repeat operation.

Note

- Emergency numbers (110, 119, 118) are dialable even while Key Pad Dial Lock is set.

Additional Lock Functions

IC Card Lock

Deactivate Osaifu-Keitai® functions (☞P.16-5).

Remote Lock

Deactivate Osaifu-Keitai® functions remotely (☞P.16-5).

Restricting Calls/Messages

Hiding Call Logs and Sent/Received Address List

<Default> ON

Main Menu ► Settings ► Incoming Settings ► Call Logs

- 1 Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Incoming	Show/hide Incoming Call Logs/Received address list
Outgoing	Show/hide Redial/Outgoing Call Logs/Sent address list

3 OFF

Note

- While Incoming Call Logs is OFF, Answer Phone (Voice Calls) does not play. Selecting Missed Call indicator does not show Incoming Call Logs.

Secret Mode/Secret Data Only



<Default> Deactivate

Phone Book entries and calendar events saved as secret data appear only when 940P is in Secret Mode/Secret Data Only.

- Set Phone Book or Calendar events as secret data (Phone Book: ☞P.4-7, 4-8 / Calendar events: ☞P.12-5)

Main Menu ► Settings ► Security


- 1 Select an item (See below)




Item	Operation/Description
Secret Mode	View all data including secret data <ul style="list-style-type: none"> • While set,  appears in Standby.
Secret Data Only	View only secret data <ul style="list-style-type: none"> • While set,  flashes in Standby.

- 2 Enter Phone Password

For Secret Data Only, number of saved secret data appears.

Cancel Secret Mode/Secret Data Only

> In Standby,  or follow Step 1 above

-  disappears.
- When widgets are shown,  to hide and press  again.

■ Cancel Secret Mode/Secret Setting

> In Phone Book/Calendar event window, (☑)[Menu] → *Release secret*

Note

- Select whether to save data edited/saved in Secret Mode as secret data. Data saved/edited in Secret Data Only are saved as secret data.
- Turn off handset to cancel secret setting.

Tip


Settings ● Set Learning Feature Off for Secret Mode/Secret Data Only
(☞P.18-10)

Setting Secret Mail

<Default> ON

Forbid showing messages from secret Phone Book entries.

- Secret mail can be viewed in Secret Mode/Secret Data Only even when Secret Mail Display is set to **OFF**.

- 1  → **Settings**
- 2 **Universal Settings** → **Secret Mail Display**
- 3 Enter Phone Password
- 4 **OFF**

Note

- When both Spam Filter and Secret Mail Display are set, messages from Phone Book entries saved as secret mode are sorted into Spam Folder (Safe List: ☞P.13-17).




12

Handset Security




Mail Security

Set handset to require Phone Password for opening mail boxes or operating Server Mail.

-  appears for set mail boxes and menus.



- 1  → **Settings**
- 2 **Universal Settings** → **Mail Security**
- 3 Enter Phone Password → Select items* →  [Finish]
* To cancel: press  again.


■ Set/Cancel Mail Security by Incoming Mail or Sent/Unsent Folder

- >  → **Incoming Mail** or **Sent/Unsent** → Highlight a folder →  [Menu] → **Mail Security** → Enter Phone Password
-  appears for set folders.

Call Restrictions

Reject/accept/forward calls from specified phone numbers, or restrict calling unspecified phone numbers.

- 1  → Search Phone Book
- 2 Select an entry →  [Menu] → **Restrictions**
- 3 Enter Phone Password
- 4 Select an item (See below)


Item	Operation/Description
Restrict Dialing	Allow calls only to specified numbers
Call Rejection	Reject specified numbers
Call Acceptance	Accept from specified numbers only
Call Forwarding	Automatically forward specified numbers • Set destination numbers (Call Forwarding:  P.2-17)

- To cancel, repeat operation.

■ View/Cancel Phone Book Restrictions

- > **Main Menu** ► **Phone Book** ► **Restrictions** ► Enter Phone Password
► Select an item* ► Select a Phone Book entry ► Select a number
► **YES**

* ★ appears for set item.

- Highlight an item,  [Menu] → **Release Settings** → **YES** to cancel restriction on all specified numbers.

Note

- Missed call indicator appears in Standby for calls from rejected numbers.

Delaying Ringtone

<Default> OFF

Delay ringtone/vibration for Voice/Video Calls from unknown numbers.

Main Menu ► Settings ► Incoming Settings
► Ring Time Settings ► Ring Starting Time

1 **ON** → Enter start time

■ Hide Missed Call Records (Disconnected during Ringtone Delay)

> Main Menu ► Settings ► Incoming Settings
► Ring Time Settings ► Missed Calls Display ► Not Display

Rejecting Unknown Callers

<Default> Accept

Main Menu ► Settings ► Security ► Reject Unknown

1 Enter Phone Password → **Reject**

Rejecting Calls without Caller ID

<Default> Accept

Reject calls without Caller ID or from pay phones.

Main Menu ► Settings ► Security ► Call Setting w/o ID

1 Enter Phone Password

2 Select an item → **Reject**

Reset

Reset Settings

Cancel custom settings and return handset functions to their default settings.

Main Menu ► Settings ► Security ► Reset Settings

1 Enter Phone Password → **YES**

Note

- Some default settings may not be restored.
- Reset Settings cancels Navi Appli settings in S! GPS Navi. Set a Navi Appli to activate from **Select Navi Appli** (☞P.18-22).

All Reset

Cancel custom settings and return handset functions to their default settings; clear all Phone Book/Data Folder entries etc.

Main Menu ► Settings ► Security ► All Reset

1 Enter Phone Password → **YES** → **YES**
940P automatically turns off and restarts.

Note

- Fully charge battery (🔋) beforehand.
- Phone Password is reset to default.
- USIM Card/microSD Card files are not affected.
- Data transmission settings (set via PC) are not affected.
- Non-restorable items when deleted by All Reset:
 - Customized settings, Call Logs, downloaded S! Appli, etc.

Tools

Calendar	13-2
Opening Calendar	13-2
Creating Calendar Events	13-2
Saving Holidays/Memorial Days	13-3
Viewing/Editing Calendar Event Details	13-4
Calendar Functions	13-4
Tasks	13-5
Saving a Task	13-5
Using Tasks	13-6
Alarms	13-6
Alarm Tone	13-6
Setting Alarm	13-7
Calculator	13-8
Notepad	13-8
Saving a Note	13-8
Notepad Functions	13-9

Osaifu Keitai®	13-9
Downloading Lifestyle-Appli	13-10
Activating Lifestyle-Appli	13-10
Reader/Writer Transactions	13-11
IC Card Lock	13-12
Dictionary (Japanese)	13-13
Sound Recorders	13-14
Voice Recorder	13-14
Voice Announce	13-14
Bar Code Reader	13-15
Scanning Barcodes	13-15
Viewing/Editing Scanned Data	13-16
Using Scanned Data	13-16

Calendar

 
View by day, week or month; set Alarms for events.

Opening Calendar

Main Menu ► Tools ► Calendar

Current month appears.

- When a date with Calendar events is selected, number of AM and PM events and up to three contents appear.
- [Prev.] or [Next] to show previous/next month calendar.
- To switch Monthly/Weekly view: P.12-4

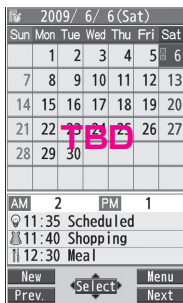


Monthly View

Creating Calendar Events

Save up to 1000 entries.

Main Menu ► Tools ► Calendar

 - 1 to highlight a date → [New] → *Schedule*

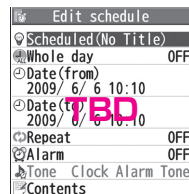

- 2 Select an item (See below)

Item	Operation/Description
Select icon/ Edit summary	> Select an icon → Edit subject
Edit location	> Enter location
Whole day setting	> OFF or ON • When ON is set, Alarm goes off at 0:00 a.m.
Date (from)	> Enter start date and time
Date (to)	> Enter end date and time
Repeat	> Select a repetition → (For Select day , check days → [Finish])
Alarm	> Select an Alarm type (→ For ON/Set time , enter time) • Alarm Tone: P.12-6
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone
Contents	> Enter event description



3 [Finish]

Calendar Event Indicators

Following indicators appear in Calendar Window.

- (Blue): Morning event
- (Orange): Afternoon event
- (Underscore): Event that lasts for two days or longer

● Following indicators appear on Display.

-  : Alarm
-  : Monthly
-  : Daily
-  : Yearly
-  : Weekly

Note

- Calendar events between 00:00 on 2000/01/01 and 23:59 on 2037/12/31 can be saved on 940P.
- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (P.11-5).

Saving Holidays/Memorial Days

Save up to 100 entries (one entry a day) each for Holidays or Memorial days.

Main Menu ► Tools ► Calendar

- 1 (Highlight a date →) [New] → *Holidays* or *Memorial days*
- 2 Select an item (See below)




Item	Operation/Description
Date setting	> Enter a date
Repeat	> Select a repetition type <ul style="list-style-type: none">● 1 time does not repeat Holidays/Memorial days events.
Edit holiday/anniversary	> Enter description

3 [Finish]

Indicators

Holidays appear in red.

Memorial days are marked with a red circle.

- Following indicators appear in Calendar/Calendar Event List Window:
 -  : Holidays
 -  : Memorial days
 -  : Yearly repeat

Viewing/Editing Calendar Event Details

Main Menu ► Tools ► Calendar



1  to select a date

2009/ 6/ 6 (Sat)	
1	11:35~11:35 Scheduled
2	11:40~12:30 Shopping
3	12:30~13:00 Meal

Calendar Event List




2 Select an event

Detailed schedule appears.


- To edit:  [Edit] → Edit selected item
(Schedule:  From Step 2 on P.12-2/
Holiday, Anniversary:  From Step 2 on
P.12-3)



Schedule	
Summary	
Scheduled	
Whole day	OFF
Date (from)	
2009/ 6/ 6 (Sat)	11:35
Date (to)	
2009/ 6/ 6 (Sat)	11:35
Repeat	OFF
Alarm	OFF
Contents	
Scheduled	

 Calendar Event Details

Item	Operation/Description
Weekly display/ 1 Month	Toggle Monthly/Weekly view
Icon display	Entries in category of selected icon appear > Select an icon
No. of schedules	Display number of saved Schedule, Holiday or Anniversary entries
Add shortcut icon	Create a shortcut ( P.1-22)
Send all Ir data	( P.10-3)
All IC transmission	( P.10-5)
Delete past	Delete past entries/items, prior to highlighted date > Select a category to delete → YES
Delete all	> Enter Phone Password → Select an item → YES
Reset holidays	Restore deleted Holidays > YES

Functions Available in Calendar Events List/Details

 - > Select a date (→ Select a Schedule, Holiday or Anniversary) →
 [Menu] → Select an item (See below)

Item	Operation/Description
New	Create a new entry ( P.12-2, P.12-3)
Edit	Edit selected item ( Left)
Copy	Copy an entry to another day > Enter date and time to copy an entry to
Calendar display	Switch from Icon display to Calendar display

13

 
Tools

Calendar Functions

From ► Main Menu ► Tools ► Calendar

Functions Available in Calendar Window

- > Highlight a date →  [Menu] → Select an item (See below)

Item	Operation/Description
New	Create a new entry ( P.12-2, P.12-3)

Item	Operation/Description
Icon display	Entries in category of selected icon appear > Select an icon
Set secret mode/ Release secret	Activate/deactivate Secret Mode > YES (→ For Set secret mode , enter Phone Password) ● Secret entries appear only in Secret Mode or Secret Data Only (↪P.11-9).
Compose S! Mail	Create S! Mail by copying event date and content to message text (↪From Step 2 on P.13-4)
Send Ir data	(↪P.10-3)
Send all Ir data	(↪P.10-3)
IC transmission	(↪P.10-5)
AllIC transmission	(↪P.10-5)
Copy to microSD	Copy an entry to microSD Card > YES ● To display data on microSD Card: ↪P.9-18
Delete this	> YES
Delete past	Delete past entries/items, prior to highlighted date > Select a category to delete → YES
Delete select	> Check entries to delete → [Finish] → YES

Tasks

Make quick notes of task to manage in Task list.

Saving a Task

Main Menu ► Tools ► Tasks

- 1 [New] → Select an item (See below)
 - To check saved Tasks, select a Task. To edit, press [Edit] in detail window.

Item	Operation/Description
Edit Tasks	> Enter content
Due date	> Select how to enter due date → Enter due date ● Select No date to enter none.
Priority	> Select a priority level
Category	> Select a category
Alarm	> Select an Alarm type (→ For ON/Set time , enter time) ● Alarm Tone: ↪P.12-6
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone


- 2 [Finish]
 - When content is not entered, Tasks cannot be saved.

Note

- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (↪P.11-5).

Using Tasks

In Tasks window, press  [Menu] for following operations.

Item	Operation/Description
New	Create a new entry (☞P.12-5)
Edit	Edit an entry (☞P.12-5)
Change status	Change status indicator shown in Tasks list > Select a status (→ For Completion , select an item → Enter Completion date) ● Overdue status indicator turns red.
Show by category	> Select a category
Sort/Filter	Sort list by due date, entry order, status, etc. > Select a condition
Add shortcut icon	Create a shortcut (☞P.1-22)
Send Ir data	(☞P.10-3)
Send all Ir data	(☞P.10-3)
IC transmission	(☞P.10-5)
AllIC transmission	(☞P.10-5)
Copy to microSD	Copy a Task to microSD Card > YES ● To display data on microSD Card: ☞P.9-18
Delete this	> YES
Delete select	> Check entries →  [Finish] → YES
Delete completed	Delete an entry in Completion status > YES
Delete all	> Enter Phone Password → YES

Alarms

Alarm Tone

When scheduled time arrives, alarm tone sounds and Notification Light illuminates.

- For Calendar events and Tasks, alarm message and animation corresponding to selected icon appear on Display.

To Stop Alarm Tone for Calendar Events, Tasks or Alarm

Press any key.

Missed Alarm

"Missed Alarm" Event Indicator appears in Standby for alarms missed during Privacy Key Lock, Personal Data Lock or Infrared transmission once locks are canceled or transmission ends. Select indicator to view content.

Note

- When one or more Alarms are set to the same time, alarm sounds in the order of : "Alarm" → "Timer Recording" → "Tasks" → "Calendar" → "Timer Watching"
 For Tasks, "Missed Alarm" indicator appears.

 
Setting Alarm

Set up to 12 alarms. Alarm tone sounds at the specified time once, everyday or weekly as set.

- appears in Standby when Alarm is set.

Main Menu ▶ Tools ▶ Alarms

- 1 Highlight an Alarm → [Edit]

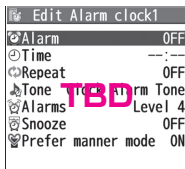

- 2 Select an item (See below)

Item	Operation/Description
Alarm (Alarm on/off)	Activate or cancel Alarm > ON or OFF
Time setting	> Set Alarm time
Repeat	> Select a repetition (→ For Select day , check days → [Finish])
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone
Alarms (Alarm volume)	> to set Alarm tone volume
Snooze setting	When Snooze is set to ON , Alarm tone sounds for 60 seconds, repeating up to six times at five minute intervals. > ON or OFF (→ For OFF , enter time)
Prefer manner mode	Set Manner Mode or Alarm priority. > ON or OFF

3 [Finish]

Alarm Indicators

- Following indicators appear:
 : Repeats daily : Repeats weekly

Cancel & Reactivate Alarm

- > In Step 1 (highlight an Alarm), [Menu] → Select an item
- Cancel or reactivate an alarm entry as required.
- Highlight an entry → to reactivate/cancel Alarm.

Snooze Function

If **ON**, press any key; Snooze window appears. To cancel Alarm, press .

Note


- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (→ P.11-5).

Calculator

- Up to 10 digits can be shown.

Main Menu ▶ Tools ▶ Calculator


Operation	Assigned key
Number (0 - 9)	-
+	
-	
x	
÷	
=	
Decimal point	
%	
Clear	

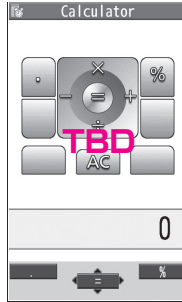 

13
Tools

Example:

 -17+28.5=11.5



Notepad

Save up to 20 notes.

Saving a Note

Main Menu ▶ Tools ▶ Notepad

1 <Not Recorded>

- Select a saved note to view content.
- [Edit] to edit.

2 Enter text

- Up to 256 double-byte or 512 single-byte characters can be entered.



Notepads Window

Notepad Functions

In Notepad list window, press **[Menu]** for following operations.

Item	Operation/Description
Edit	Edit a saved note
Compose S! Mail	Create S! Mail by copying content to message text (☞P.13-4)
Edit schedule	Copy a note to Schedule to create a Calendar event > Schedule → Save a new note (☞From Step 2 on P.12-2)
Add shortcut icon	Create a shortcut (☞P.1-22)
Send Ir data	(☞P.10-3)
Send all Ir data	(☞P.10-3)
IC transmission	(☞P.10-5)
AllIC transmission	(☞P.10-5)
Copy to microSD	Copy a note to microSD Card > YES ● To display data on microSD Card: ☞P.9-18
Notepad Info	Display entry date, latest modified date and category of note
Category	> Select a category ● When no category applies, select None .
Delete this	> YES
Delete selected	> Check notes → [Finish] → YES
Delete all	> Enter Phone Password → YES

Osaifu Keitai®

"Osaifu-Keitai®" is a range of IC Card-based services used by Osaifu-Keitai® compatible handsets. Make purchases using e-money or e-ticketing. Hold handset up to a reader/writer to pay for your purchase.

Osaifu-Keitai® Terms

Osaifu-Keitai®	A contactless IC Card technology to read/write data by holding an IC card up to a reader/writer
IC Card	An IC chip embedded in Osaifu-Keitai®-compatible handsets
Lifestyle-Appli	Applications to use Osaifu-Keitai®. Some applications are preinstalled.

Precautions

- Data saved in IC Card vary by service content and usage history. Procedures to delete IC Card data vary by Lifestyle-Appli. Contact Osaifu-Keitai® service providers for details.
- SoftBank is not liable for damages from accidental loss or alteration of IC Card data or settings.
- IC Card data can be misused if your Osaifu-Keitai® compatible handset is lost or stolen. SoftBank is not liable for any resulting damages.
- Downloading Lifestyle-Appli and using applications may incur high packet transmission charges.

Getting Started

Downloading Lifestyle-Appli

Download Lifestyle-Appli via Internet website.

Registration/Settings

Activate Lifestyle-Appli to complete registration or customize settings.

- Make deposit into account, check payment records or balance, etc.

Note

- Keep a copy of service passwords/customer service contact, etc. in a separate place.

Downloading Lifestyle-Appli


Main Menu ► Tools ► Osaifu-Keitai ► Lifestyle-Appli

- 1 **Download** → **YES**
- 2 Select a Lifestyle-Appli
 - Lifestyle-Appli is saved to Data Folder.

Activating Lifestyle-Appli

- Lifestyle-Appli cannot be activated during a call or while another S! Appli is active.

Main Menu ► Tools ► Osaifu-Keitai ► Lifestyle-Appli

- 1 Select a Lifestyle-Appli
- 2 To exit,  → **Stopped**

Note

 
- Alternatively, **Main Menu** ► **S! Appli** ► **Osaifu-Keitai** ► **Lifestyle-Appli**
or
Main Menu ► **Data Folder** ► **Lifestyle-Appli**

Reader/Writer Transactions


- Complete registration/settings and charge your account beforehand.
- There is no need to activate a Lifestyle-Appli during transaction.

1 Hold logo up to reader/writer

- When IC Card Notification Light is **ON**, Notification Light illuminates (➡P.18-10).
- Hold handset parallel to reader/writer.
Try moving handset around if recognition is slow.
- Check scan result on reader/writer display.
- Osaifu-Keitai® can be used during a call or Internet transmission (May require extra time).

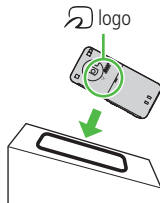

Note

- Data may be unreadable if a metal object, etc. is between  logo and reader/writer.
- Even though Osaifu-Keitai® is available while handset is off, Lifestyle-Appli does not activate. However, if battery is left uncharged after warning tone sounds, Osaifu-Keitai® may become disabled. Charge battery beforehand.
- When handset is held up to reader/writer, handset may show a message or vibrate depending on service. S! Appli, Messaging or Internet may also activate automatically. To avoid such cases, set the functions not to activate during transactions (➡P.18-21).

Tip

Settings

- Disable Handset Response to Commands from Reader/Writer (➡P.18-21)

IC Card Lock

Activating IC Card Lock

<Default> OFF

- While set,  appears in Standby.

- 1 Press and hold  → Enter Phone Password
 - Repeat the step as required to unlock.

Note

- Alternatively, **Main Menu** ► **Tools** ► **Osaifu-Keitai** ► **IC Card Settings** ► **IC Card Lock** or **Main Menu** ► **Settings** ► **Security** ► **IC Card Lock**



Remote Lock

<Default> OFF

- Save up to three phone numbers to enable Remote Lock.

Main Menu ► **Tools** ► **Osaifu-Keitai** ► **IC Card Settings** ► **Remote Lock**

- 1 Enter Phone Password → **ON**
- 2 Select an item (See below)

Item	Operation/Description
Numbers to Permit	Save numbers to activate Remote Lock >> <Not Recorded> → Enter phone numbers →  [Return] <ul style="list-style-type: none"> • To save numbers from Phone Book/Incoming Call Logs or to use a payphone number:  [Menu] → Refer to or Payphone
# of Incoming Call	Specify the number of incoming calls for activating IC Card Lock > Enter a number

- 3  **[Set]**

Activating Remote Lock

- ① Call 940P from one of the specified numbers (Send Caller ID)
- ② Hang up after 940P receives the call
- ③ Repeat ①-② until specified number of incoming calls is reached (within three minutes)
 - After specified number of incoming calls, IC Card Lock is set and a message informs you IC Card Lock is activated.

Note

- When setting IC Card Lock, call 940P from the same specified phone number. Incoming calls from different phone numbers cannot be counted.
- Specified incoming calls may not be counted when Call Forwarding is active.
- Remote Lock is not available when ring time for Answer Phone is set to 0 or Driving Mode is active.
- When Answer Phone activates, counted number of incoming calls are reset.

Dictionary (Japanese)

Use **ケータイTOOL<辞書>** to access dictionaries (学研 辞スパ[®] 英和・和英辞書 and 学研 国語辞書).

- ケータイTOOL<辞書> is an S! Appli.

Main Menu ▶ Tools ▶ Dictionary

 
 



1 Read 免責 (disclaimer) → OK

ケータイTOOL<辞書> activates.

- To disable 免責:
Uncheck **アプリ起動時に常に表示する**。(Always show disclaimer when accessing dictionaries)

2 → Enter a word

Search results appear.


- To scroll pages:  / 
- To switch dictionaries:  / 
- To search again:  [戻る]

3 Select a word

Details appear.

4 To end, → Stopped

Note

- While Dictionary application is active, press  [メニュー] for useful functions.

Sound Recorders

Voice Recorder

Set recorded sounds for ringtones.

- Record for about 60 seconds each.

Main Menu ► Tools ► Sound Recorders ► Voice Recorder

1 **YES**

Recording starts.

2 [Stop] / / (→ **OK**) to stop recording

Recorded sounds are saved in Ring Songs&Tones folder.

Voice Announce

Set recorded sound for on hold tone/holding tone, Alarm, Calendar event alarm, Tasks alarm, ringtones, Answer Phone message, Timer Watching (Digital TV), Ring Songs&Tones Play List.

- Record only one item for about 15 seconds.
- Select **Voice Announce** in individual window to set Voice Announce as specific tone.

Main Menu ► Tools ► Sound Recorders ► Voice Announce

1 **Record**

Recording starts.

Tone beeps five seconds before recording ends.

2 [Stop] to end recording

Tone beeps twice and previous screen returns.

- To play back: **Play**
- To delete: **Erase** → **YES**

Bar Code Reader

Scan barcodes (JAN) or QR Codes with built-in camera. Access websites, send messages, etc. from QR Codes.

JAN Codes

JAN Code is a one-dimensional bar code denoting numerals with bars and spaces of different widths.

QR Codes

QR Code is a two-dimensional bar code containing information.

Example: SoftBank mobile phones



Scanning Barcodes

- Up to five items can be saved.
- For split data, up to 16 QR Codes can be scanned at a time and saved as one item.

Main Menu ► Tools ► Bar Code Reader ► Scan Barcodes

- 1 Frame barcode in the center of Display
 - To adjust Display brightness: **[Menu]** → *Brightness* → Adjust to -3 (dark) - +3 (light)
 - To zoom: **[Zoom]**
 - To use Focus Lock: **[Focus Lock]**

- 2 **[Start]**

Scanning starts, and scanned results appear when completed.

- For split data, **OK** → Repeat Step 1 and 2
- To use scanned data: **[OK]** Step 2 on P.12-12

- 3 **[Y]** **[Menu]** → *Save result* → **OK**

- To start over: **[Y]** → **YES**

Note

- 940P cannot read barcodes or two-dimensional codes other than JAN/QR Codes.
- Some barcodes cannot be read depending on code type or size.
- Barcode recognition may be slow. Hold handset steady while scanning.
- Barcodes may not be correctly read owing to scratch, dirt, damage, quality of printed material, light reflection, or QR code version.

Viewing/Editing Scanned Data

Main Menu ► Tools ► Bar Code Reader ► Saved Data List

1 View

Select an item

Edit Title

Highlight an item →  [Menu] → *Edit title* → Edit

■ Delete Saved Data


► In Step 1, (highlight an item →  [Menu] → *Delete* → *Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) → *YES*

Using Scanned Data

Main Menu ► Tools ► Bar Code Reader ► Saved Data List

1 Select an item

2 [Menu] → Select an item (See below)

Item	Operation/Description
Save result	Save scanned results
Display list	Display Saved Data List
Internet	Connect to URL > <i>Yahoo! Keitai</i> or <i>PC Site Browser</i> → <i>YES</i> ● Alternatively, select URL to connect to Internet.
Compose S! Mail	Create S! Mail to selected address (☞ From Step 4 on P.13-4) ● Alternatively, select address to create S! Mail.
Dialing	Call selected phone number > Select a dialing method → <i>Dial</i> ● Alternatively, select phone number to dial.
Add to Phone Book	Save scanned results to Phone Book (☞ From Step 2 on P. 4-5)
Add bookmark	Save URL to Bookmark > <i>YES</i> →  [OK]
Copy	Copy selected characters to another place (☞ From Step 2 on P.3-9)

TBD

13

Tools

13-18