

Messaging

Basics 14-2

Available Entry Items & Character Entry Limits 14-2

Messaging Folders & Memory Status 14-3

Customizing Handset Address 14-3

Sending S! Mail & SMS 14-4

Sending S! Mail 14-4

Sending SMS Messages 14-7

Creating Messages 14-8

Graphic Mail Functions 14-9

Sending Messages 14-10

Receiving & Viewing Messages 14-10

Opening New Messages 14-10

Window Description 14-11

Retrieving Complete S! Mail 14-12

Opening & Saving Attachments 14-13

Showing Sent/Received Mail Address 14-13

Using Server Mail 14-14

Retrieving/Viewing Messages 14-14

Organizing/Using Messages 14-15

Checking Messages in Messaging Folders 14-15

Auto-sort 14-16

Filter Spam 14-17

Replying to Messages 14-18

Using Mail Groups 14-18

Sent/Received Address 14-19

Organizing Messages 14-20

Using Messages 14-22

Basics

Send messages via S! Mail or SMS.

S! Mail [Separate subscription required]	Exchange text messages with SoftBank or e-mail compatible handsets, PCs, etc.; attach image or sound files etc. ● 940P is compatible with Graphic Mail (☞P.13-5)
SMS	Exchange short text messages with SoftBank handsets.

- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Available Entry Items & Character Entry Limits

Item		S! Mail		SMS	
Address	E-mail address	<input type="radio"/>	Up to 246 single-byte alphanumerics/ Up to 20 recipients	—	—
	Phone number ¹	<input type="radio"/>		<input type="radio"/>	Up to 21 single-byte alphanumerics/Up to 1 recipient
Subject		<input type="radio"/>	Up to 256 double-byte/ Up to 512 single-byte alphanumerics	—	—
Text		<input type="radio"/>	30 KB	<input type="radio"/>	Up to 70 double-/single-byte alphanumerics ²
Attachment		<input type="radio"/>	³	—	—

¹ SoftBank handset numbers only

² When text entry mode is set to **English (160char.)** (☞P.18-19), up to 160 single-byte alphanumerics can be entered.


³ Up to 300 KB including subject, message text and attachment can be sent.

Note

- S! Mail text character limit differs by attachment size.
- SMS messages can be converted to S! Mail (☞P.14-7).
- S! Mail cannot be converted to SMS.

Messaging Folders & Memory Status

Messages are organized in folders by message type.

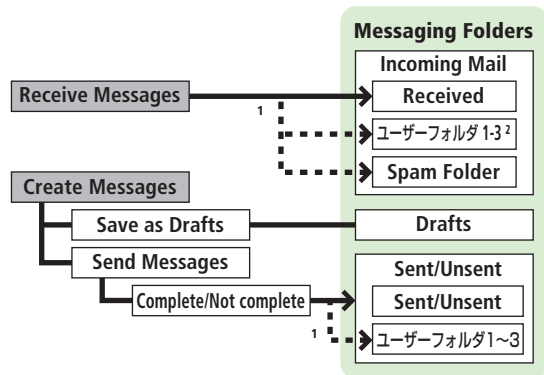

¹ Set Auto-sort messages to specified folders or Spam Folder automatically (☞P.13-16, P.13-17).

² Add up to ten folders (☞P.12-22).

Deleting Messages Automatically

When memory for messaging folders is low, old messages are automatically deleted one by one. Protect important messages from unintentional deletion (☞P.13-21), or set message deletion settings to **OFF** (☞P.18-18). Messages in Drafts and SMS on USIM Card are not deleted automatically.

When Messaging Memory is Full

☑ (Received Full) appears in Standby and no more new incoming messages are received. Delete old messages in Incoming Mail folder (☞P.13-21), then retrieve new messages (☞P.13-15).

View Memory Status

> ☑ → *Memory Status*

Tip

● Mail Security (☞P.11-10)

Customizing Handset Address

Change your handset mail address (alphanumerics before @) to reduce the risk of receiving spam. Default account name is random alphanumerics.

abc123-xyz @ softbank.ne.jp
[Account] [Domain]
Name Name
(Customize here)

- For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Handset mail address cannot be changed in Emission OFF Mode.
- For operations while using Internet: ☞P.14-6

1 ☑ → *Settings* → *Custom Mail Address*


940P connects to the Network.
Follow onscreen instructions.


Sending S! Mail & SMS

Sending S! Mail

- Text entry (☞P.3-3)

Example: Select a Phone Book entry to send S! Mail.


1 Press and hold 

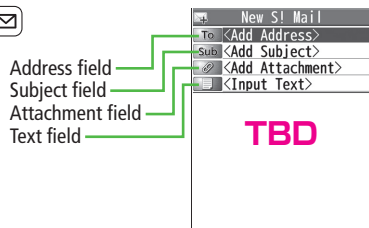

Composition Window


2 Select Address field →

Phone Book

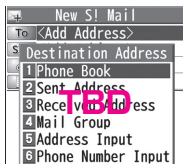


3 Select a Phone Book entry →
Select a SoftBank handset number
or mail address




- Press  to toggle tabs if both mail addresses and phone numbers are saved.

4 Select Subject field →
Enter subject

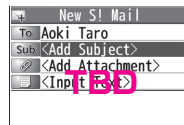


5 Select Text field

6 Enter text

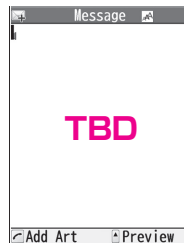

Text Entry Window

7  [Send]

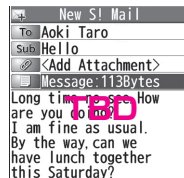

Tip






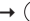



- Addresses ● Functions Available while Creating Messages (☞P.13-8)
- Sending Options (☞P.13-9) ● Sending Messages (☞P.13-10)
- Settings ● Confirm Message Delivery (☞P.18-18)

Adding Attachments

- 1 After Step 6 on P.13-4, select Attachment field
- 2 Select a folder in Data Folder → Select a file
- 3  [Send]

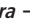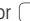

■ Attach Captured Pictures/Videos

- After Step 1, **Activate Camera** → **Photo mode** or **Video mode** → Frame subject →  [Record],  or  (for video,  → For video,  or  →  [Save],  or  (for)

Note

- Some files can not be attached depending on the file format or size.
- Some copy protected files can not be sent.
- Attachments of 300 KB or larger are automatically compressed (Width and height of compressed images may change.). Larger data cannot be attached even when compressed.
- Ring Songs&Tones, Music and Videos files cannot be attached directly from microSD Card. Move files to handset before attaching to messages.

Tip


- Attachments (📎P.13-8)

Graphic Mail

Create HTML messages; select font color/size, background color, or insert images, etc.


Example: Use various Templates to create Graphic Mail.

- Change font size
- Scroll text


- 1 After Step 4 on P.13-4, press  [Menu] → **Load Template** → Select a template

- To view template: Highlight template →  [View]


- 2 Select Text field → Delete "ここに文字をいれてね"

- 3  → **Font Size**


- Alternatively,  [Menu] → **Set Graphic Mail** to open Graphic Palette

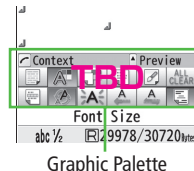

4 Select a font size → Enter text


5  → *Select area*



6 Place cursor before a sentence to scroll →  [Start] → Move cursor to end of sentence →

 [End]


Text is highlighted.

● To cancel selection: 



Reset Operations



> To cancel previous operation: Close Graphic Palette →  [Menu] → *Undo*

> To reset all Graphic Mail operations:  → *Graphic all reset* → *YES* → *YES*

Use Mail Art

> In text entry window,  → *Mail Art* → Select an item →  [Exit]

Use Files Saved in microSD Card

> In text entry window,  → *Insert files* → *File Select* → *Pictures* →  [microSD] → Select a folder → Select a file

Tip

● Use Other Graphic Mail Settings ( P.13-9)


● Download Templates via Internet ( P.13-10)

14

Messaging

7 *Set Scrolling* →  [Exit]

8  to preview → 

● Alternatively,  [Menu] → *Preview* to view text field

9  →  [Send]



Sending SMS Messages

- Text entry (☞P.3-3)

Example: Select a Phone Book entry to send SMS.

1 →

Create New SMS

Address field


Text field



Composition Window

2 Select Address field →

Phone Book

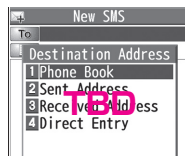

3 Select a Phone Book entry →

Select a SoftBank handset number



4 Select Text field

5 Enter text

- When number of entered character exceeds limit, S! Mail conversion option message appears.

6 [Send]



Text Entry Window

Manual Mail Conversion

> In SMS Composition window, [Menu] → *Change mail type*

Note

- When a single-byte text message including |{}|]~^ is sent or a draft including such text is edited, some characters may be cut out of text field.

Tip

●Addresses ●Functions Available while Creating Messages (☞P.13-8)

Settings ●Confirm Message Delivery (☞P.18-18) ●Change SMS Center Number ●Set Input Character to English (☞P.18-19)

Creating Messages

Addresses

From ▶ In composition window, select Address field

■ Enter Address Directly

> S! Mail: **Address Input** or **Phone Number Input** → Enter a mail address/SoftBank handset number

> SMS: **Direct Entry** → Enter a SoftBank handset number

■ Select Address from Sent Address/Received Address Logs

> **Sent Address** or **Received Address** → Select a log

■ Select S! Mail Address from Mail Group

> **Mail Group** → Select a Mail Group

■ Add/Edit/Delete Address

> Follow the steps (See below)

Item	Operation/Description
Add recipients*	> <Not entered> → Select an address selection method → Select an address or enter directly
Edit	> Select an address → Edit (For SMS: Direct Entry) → Edit address
Delete*	> Highlight an address → [Menu] → Delete receiver → YES

* S! Mail only

■ Change To/Cc/Bcc (S! Mail only)

> Highlight an address → [Menu] → **Destination types** → Select a type

Attachments

From ▶ After attaching a file, select Attachment field

■ Open/Play Attached Files

> Select a file

■ Add Attachments

> [Menu] → **Add Attached Files** → Select a folder → Select a file →

[Finish]

● To capture still images or videos to attach: P.14-5

■ Delete Attachments

> Highlight a file → [Menu] → **Del Attached Files** → **YES**

Other Functions

■ Functions Available while Creating Messages

> In composition window, [Menu] → Select an item (See below)

Item	Operation/Description
Send	Send message
Preview	Preview message while creating
Save as Drafts	Save message to Drafts box without sending
Attached files ¹	View attached file list
Load Template ¹	> Select a template
Save Template ¹	Save edited template > YES
Add Signature ¹	Add signature ● Create and save signature beforehand (P. Below).

Item	Operation/Description
Send Settings ¹	(☞P.14-10)
Image Compression ¹	Decide whether to compress images to attach > ON or OFF
Confirm Delivery ²	(☞P.14-10)
Input character ²	Select character input mode > Japanese or English
Change mail type ²	Switch SMS to S! Mail while creating

¹ S! Mail only

² SMS only

Graphic Mail Functions

■ Use Other Graphic Mail Settings

> In S! Mail text entry window, (☞) → Select an arrange item (See below)

Item	Operation/Description
Insert files: File Select	Insert still images, music files or Flash® Send inserted music files as BGM > Select a file typer → Select a folder → Select a file
Insert files: Camera	Activate camera to insert pictures > Frame subject → (●)[Record] → (●)[Save]
Insert files: Delete BGM	Delete inserted music file > YES
Font Color	> Change font color
Background color	> Change background color
Insert Lines	Insert separator line

Item	Operation/Description
Mail Art	Insert an Mail Art > Select an Mail Art
Graphic all reset	Cancel all Graphic Mail Settings > YES → YES
Select area	Specify text to be arranged > Place cursor before text → (●)[Start] → Specify area → (●)[End] → Select other items → Follow the steps for selected items ● To cancel selection: (●)[End] → (●)
Font Size	> Change font size
Select Blinking	Flash text
Set Scrolling	Scroll text
Set Swinging	Swing text
Alignment	> Select a type

- One file of music or Flash®, and up to 40 types of My Pictograms or images can be inserted per Graphic Mail.
- To delete inserted images, lines, Mail Art, etc.: Close Graphic Palette → Move cursor before images, etc. → (☞)
- Ring Songs&Tones or Music files cannot be inserted directly from microSD Card. Move files to handset beforehand.

■ Save Edited Templates

> In S! Mail composition window, (☞)[Menu] → **Save Template** → **YES**

■ Download Templates via Internet

> (☞) → **Templates** → **Download Templates** → **YES**

- 940P connects to Internet, and a website appears. Follow onscreen instructions.

Sending Messages

From ▶ In composition window, [Menu]

Confirm Delivery

> (For S! Mail, **Send Settings** → **Confirm Delivery** → **ON**)

- Confirm Message Delivery (P.18-18)

Notify Recipients of Message Priority Level

> **Send Settings** → **Priority** → Select a level

Set Reply-to Addresses

> **Send Settings** → **Set Reply Address** → **ON**

- Specify reply-to address beforehand (P.18-21)

Receiving & Viewing Messages

Downloading S! Mail Automatically

By default, the complete message and any attachments are automatically downloaded. This setting also applies while abroad. Transmission fees are incurred; adjust to use (To change auto download settings: P.18-21).

Opening New Messages


When a new message is received,
 and Event Indicator appear in
 Standby.



1 Select indicator

Latest message appears.

- to show previous/next message.

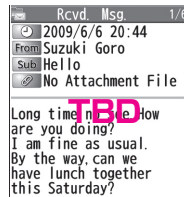

Message Window

Note

- 940P may connect to the Network via URL link in message text.
Data-intensive web pages may incur high charges.
- Depending on situations, Message tone may not sound and Notification Light may not flash.
 flashes for new messages instead.
- Event Indicator disappears even when an unread message other than latest message is selected.


Tip

- Retrieving/Viewing Messages (☞P.13-15) ● Setting Secret Mail (☞P.11-9)
- Settings**
- Change Ringtone ● Change Ringer Volume ● Set Message Ringtone Duration ● Set Vibration Alert (☞P.18-2) ● Adjust Notification Light Color Tone for Incoming Call/Message (☞P.18-10)

Window Description

Messaging Folder Contents

Received Date & Time ¹,
Sender ² and S! Mail Subject
(For SMS, Message Text)

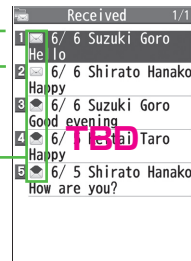


- For Sent/Unsent box, following appear:
¹ Sent date/time
² Recipient

**Example: Received Folder
in Incoming Mail**

Message Type/Status

Message Type	Message Status
/ Unread/Read S! Mail	Attachments
/ Unread/Read S! Mail Notice	(Silver) Protected
/ Unread/Read SMS	Forwarded Message
/ Unread/Read USIM Card SMS	Replied Message
Server Mail	Sending failed (Sent/Unsent Message)
	Delivery Report received (Sent/Unsent Message)
	High Priority
	Low Priority

Message Contents

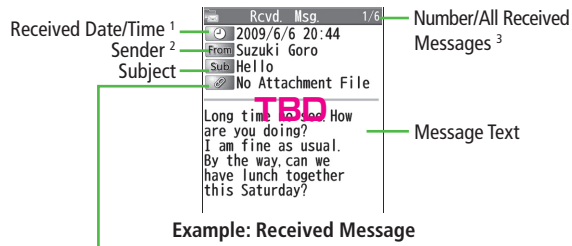

Example: Received Message

Number of Attachments

The number of files (images, sounds, videos, text, etc.) appears.

- For a sent message, the following appear:
¹ Sent date/time ² Recipient ³ Number/all sent messages

Note

- Status indicators for forwarded/replied SMS messages (saved in USIM Card) do not appear.
- After retrieving complete messages, S! Mail Notice icons with (Forwarded) or (Replied) change to (S! Mail).
- Messages remain protected after complete messages are retrieved via protected S! Mail Notices.
- If messages on microSD Card do not appear correctly, copy messages to handset (P.9-19) and execute **Charset Conversion** (P.13-22).


Tip

- Functions Available for Received/Sent/Draft Message List (P.13-20)
 - Functions Available in Received/Sent Message Window (P.13-22)
- Settings** ● Change Font Size (P.18-18)

Retrieving Complete S! Mail

During Video Calls or outgoing mail, complete S! Mail is not downloaded. When notification arrives, retrieve complete message. Note: Depending on download setting, complete message is not downloaded.

- 1 At the end of message text, highlight **Continue**

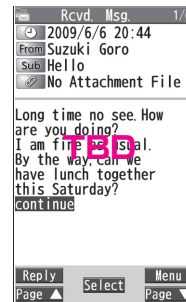

Retrieve from Message List

> In received message list, [Menu] → **Retrieve** → **This one**

Retrieve Multiple Messages

> In received message list, [Menu] → **Retrieve** → **Selected** → Check messages → [Finish] → **YES**

Opening & Saving Attachments

- 1 In Message window,
 [Menu] → **Attached files**
- 2 Select a file →

File plays or shows.
- 3 After viewing,

Attached files window returns.
- 4 To save the file, highlight the file →
 [Save] → **YES** →
 Select a folder



Note

- When messages are opened, attached image files appear/play automatically.
- (Silver) appears with file requiring a Content Key. If Content Key has expired, warning appears when opening a file. Acquire new Content Key (↪P.9-5).
- Incompatible files are saved to Other Documents in Data Folder. Some files may not be saved to 940P.

File Formats Supported by Auto Playback

- Image files (JPEG, GIF, PNG)
- Music files (SMAF, AMR, SMF, SP-MIDI)

Tip

- Settings** ● Play Attached Music Files Automatically (↪P.18-19)

Showing Sent/Received Mail Address

- 1 **Sent Address**
 Press and hold
- Received Address**
 Press and hold
 - SMS : SMS (successfully sent)
 - MAIL : S! Mail (successfully sent)
 - To show Redial/Incoming Call Logs: [Change]
- 2 To view individual log detail, select a log
 - To send S! Mail/SMS to recipient shown: → Mail composition operation (S! Mail: ↪From Step 4 on P.13-4 or SMS: ↪From Step 4 on P.13-7)
 - To save to Phone Book: [Store] → Operation for saving to Phone Book (↪From Step 2 on P.4-5)


Tip

- Sent/Received Address (↪P.13-19)

Using Server Mail

Retrieve mail list stored at the Center to view Server Mail.




Viewing Server Mail

- 1  → *Server Mail*
- 2 *Retrieve Mail List* → **YES**

■ Update Server Mail List

> After Step 1, *Retrieve Mail List* →  [Update] → **YES**

Retrieving Server Mail

- 1  → *Server Mail* → *Retrieve Mail List*
 - If no Server Mail is in the list, **YES** → **OK**
- 2 **Retrieve a New Message**
Select S! Mail
Retrieve Multiple Messages
 [Menu] → *Retrieve* → *Retrieve Selected* →
Check messages →  [Finish] → **YES**

■ Retrieve All Messages

>  → *Server Mail* → *Retrieve All*

Tip

● Mail Security (🔑P.11-10) ● Server Mail Functions (🔑P.13-15)

Retrieving/Viewing Messages

Manually Retrieving New Messages

Retrieve S! Mail messages saved on Server while handset is off/out-of-range.

>  → *Retrieve New*

Server Mail functions

From  **Server Mail**


■ Delete One/Selected Server Mail




> *Retrieve Mail List* → Highlight a message →  [Menu] →
Del Server Mail → *Delete This* or *Delete Selected* (→ For
Delete This, check messages →  [Finish]) → **YES**

■ Delete All Server Mail

> *Delete All* → Enter Phone Password → **YES**

■ Forward Server Mail

> *Retrieve Mail List* → Highlight a message →  [Menu] →
Fwd Server Mail → Select Address field → Select a method →
Select/enter an address →  [Send]

- To forward Server Mail from S! Mail Notice: In received message list, highlight an S! Mail Notice,  [Menu] → *Forward* → *Fwd Server Mail* → <Add Address> → Select/enter and address →  [Send]
- Forwarded S! Mail cannot be deleted from Server Mail List.
-  appears for Server Mail saved to Drafts or Sent/Unsent after forwarded.

■ Sort Server Mail

> *Retrieve Mail List* → [Menu] → *Sort* → Select a condition

■ View Server Mail Information

> *Retrieve Mail List* → Highlight a message → [Menu] → *Mail Information*

■ View Server Mail Memory

> *Server Mail Memory*

Organizing/Using Messages

Checking Messages in Messaging Folders

- Introduction mail is saved in Incoming Mail (Transmission fee does not apply.).

1 [Envelope Icon] → *Incoming Mail, Drafts, Sent/Unsent*

- **NEW** appears for unread messages in Incoming Mail folder.
- [Question Mark Icon] appears for draft or unsent messages in Drafts or Sent/Unsent folder.
- In Incoming Mail folder, select a folder then message.
- Messaging Folders: [Pencil Icon]P.13-3

2 Select a message

- In Received/Sent Message window, toggle [Double Arrow Icon] to view previous/next messages.




Tip

- Functions Available in Incoming Mail Box ● Functions Available for Received/Sent/Draft Message List [Pencil Icon]P.13-20

Auto-sort

Save messages that satisfy set conditions to designated folder automatically.


- Previously received messages are not sorted.
- Sent/received messages are sorted by subject if both address and subject match sort condition applied to specific folder. Messages with no subject are sorted by address.
- Either address or mail subject can be specified per folder.

- 1  → **Incoming Mail** or **Sent/Unsent**
- 2 Highlight a folder →  [Menu] → **Auto-sort Setting**
- 3  [Menu] → Select an item (See below)

Item	Operation/Description
Add Address	Sort messages by sender's address > Select an address selection method → Select/enter an address ● Save up to 10 addresses per folder.
Add Subject	Sort messages by mail subject > Enter a subject ● Save one subject per folder. ● SMS cannot be sorted by mail subject.
Add Group	Sort messages by Group in Phone Book > Select a group ● Save up to 10 groups per folder.

Item	Operation/Description
Add Mail group	Sort messages by Mail Group > Select a Mail Group ● Save up to 10 Mail Groups per folder.

Edit Sort Conditions


> After Step 2, highlight an item →  [Edit] → Edit address, subject or mail group

Change Auto-sort List View

Switch Name view or Address view for Auto-sort.

> After Step 2,  [Menu] → **Display the List** → **Name** or **Address**


Delete Auto-sort Settings

> After Step 2, (highlight an item →)  [Menu] → **Delete** or **Delete All**
 (→ For **Delete All**, enter Phone Password) → **YES**

Re-sort Set Folders

> To re-sort messages in a specific folder: In Step 2, highlight a folder →

 [Menu] → **Re-sort in This** → **YES**

> To re-sort messages in all folders: After Step 1 →  [Menu] → **Sort in All** → **YES**

Filter Spam


Sort messages from unidentifiable senders into Spam Folder without incoming notification. Use Safe List to receive messages from certain addresses/phone numbers and domains.

Note

- Some messages from addresses saved in Phone Book as secret data may be sorted into Spam Folder. Be careful when deleting messages from Spam Folder.



Setting Spam Folder

<Default> OFF


- 1  → **Settings** → **Universal Settings** → **Anti-Spam Measures**
- 2 **Spam Filter** → Enter Phone Password
- 3 **ON** → **YES**

Safe List

- Specify up to 20 addresses and domains (for example, @softbank.ne.jp) to receive messages from without sorting into Spam Folder.

- 1  → **Settings** → **Universal Settings** → **Anti-Spam Measures** → **Safe List**
- 2 **Add Addresses**
 [Menu] → **Add Address** → **Received Address** or **Direct Entry** → Select or enter an address

Add Domains


-  [Menu] → **Add Domain** → Enter a domain (character string after @)

- 3  [Finish]

Edit Saved Addresses

- > After Step 1, highlight an address →  [Edit] → Edit address

Delete Addresses

- > After Step 1, (highlight an address →)  [Menu] → **Delete** or **Delete All** (→ For **Delete All**, enter Phone Password) → **YES**


Tip

- Report Spam (📧P.13-23)

Replying to Messages

1 In Message window, [Reply]

- **Re:** appears before Subject when replying to S! Mail. Received message text is quoted.

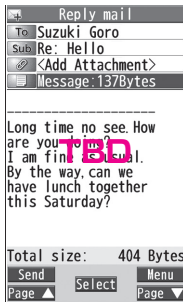

2 Complete message → [Send]

Reply without Quoting/Replying to All

> In Step 1, [Menu] → Reply → Reply to Sender or Reply to All → Compose S! Mail or Compose SMS

- Selectable items differ by mail type.

Note

- Alternatively, reply from Message List window without opening messages (P.13-20)

Tip

- Change Message Quote Setting when Replying (P.18-18)

Using Mail Groups

Save mail addresses by group. Messages can be sent to specified group of recipients.

- Save up to 20 recipients per group.
- Create up to 20 groups.

Creating Mail Groups

Main Menu ► Phone Book ► Settings ► Mail Group

1 Select a group to save

2 Enter Mail Address Directly


Highlight <Not stored> →
[Edit] → Enter mail address

Select Mail Address from Phone
Book or Sent/Received Address Logs

Highlight <Not stored> →
[Menu] → Look-up address

→ Select an item → Select an entry

- Repeat Step 2 to save mail addresses.

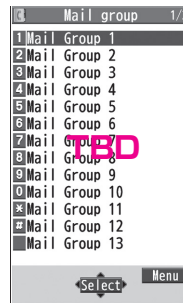


Mail Group List

Change Group Names

> In Step 1, highlight a mail group →  [Menu] → **Edit group name** → Edit name


Reset Group Names

> In Step 1, highlight a mail group →  [Menu] → **Reset group name** → YES




Edit Mail Addresses

> After Step 1, highlight a mail address →  [Edit] → Edit

Delete Saved Mail Addresses

> After Step 1, (highlight a mail address →)  [Menu] → **Delete this** or **Delete all** (→ For **Delete all**, enter Phone Password) → YES


Send a Message to All Group Members


> In Step 1, highlight a mail group →  [] →
● To select a mail group for recipient in S! Mail composition window:
 P.14-8






Sent/Received Address

> Sent address logs: Press and hold  → Highlight an address →

 [Menu] → Select an item (See below)

> Received address logs: Press and hold  → Highlight an address →

 [Menu] → Select an item (See below)

Item	Operation/Description
Character size	Toggle character size
Add to Phone Book	Save selected mail address/number to Phone Book ( From Step 2 on P.4-5)
Add shortcut icon	Create a shortcut ( P.1-22) Select a shortcut in Standby to open composition window with selected mail address/number in Address field
Compose S! Mail	Create S! Mail to selected address/phone number ( From Step 4 on P.13-4)
Compose SMS	Create SMS to selected phone number ( From Step 4 on P.13-7)
Dialing	> Select a dialing method → Dial
Dialed calls ¹	Show Redial logs
Received calls ²	Show Incoming Call Logs
Delete this	> YES
Delete selected	> Check logs to be deleted →  [Finish] → YES
Delete all	> Enter Phone Password → YES


¹ Sent address logs only

² Received address logs only

Organizing Messages



■ Functions Available in Incoming Mail or Sent/Unsent Folder








- >  → *Incoming Mail* or *Sent/Unsent* → (Highlight a folder) →
 [Menu] → Select an item (See below)

Item	Operation/Description
Add folder	Add up to 10 user folders to each of Incoming Mail and Sent/Unsent folders > Enter folder name
Edit folder name*	> Edit folder name
Auto-sort Setting*	> Sort received messages (Auto-sort:  From Step 3 on P.13-16)
Re-sort in This	Re-sort messages in selected folder > YES
Sort in All	Re-sort messages in all folders > YES
Sort folder*	Sort user folders > Select a target location
Mail Security	Set to require Phone Password for opening a folder > Enter Phone Password ● To cancel: repeat the step
Delete folder*	> Enter Phone Password → YES

* ユーザーフォルダ only

■ Functions Available for Received/Sent/Draft Message List

- >  → *Incoming Mail*, *Drafts* or *Sent/Unsent* (→ Select a folder) →
 Highlight a message →  [Menu] → Select an item (See below)

Item	Operation/Description
Edit ^{1 2}	Edit message to send (S! Mail:  From Step 2 on P.13-4/SMS:  From Step 2 on P.13-7)
Send ²	Send Drafts
Retrieve ³	Retrieve complete S! Mail > This one or Selected (→ For Selected , check messages →  [Finish] → YES)
Reply ³	Reply without quoting message > Reply to Sender or Reply to All → Compose S! Mail or Compose SMS → Compose a message (S! Mail:  From Step 4 on P.13-4/SMS:  From Step 4 on P.13-7) ● Selectable items differ by mail type.
Reply with Quote ³	Quote received message to reply > Reply to Sender or Reply to All → Compose S! Mail or Compose SMS → Compose a message (S! Mail:  From Step 4 on P.13-4/SMS:  From Step 4 on P.13-7) ● Selectable items differ by mail type.

Item	Operation/Description
Forward ³	<p>> Forward /Fwd Server Mail → Select Address field → Select an item → Select/enter an address → [Send]</p> <ul style="list-style-type: none"> ● Forward Server Mail (☞P.13-15) ● When forwarding S! Mail, Fw: appears before Subject. Dotted line appears in the first line of Text field. ● Attachments are also forwarded (Messages with copy protected attachments may not be forwardable.).
Dial	> Select an item → Make a call/compose a message/add to Phone Book
Add Address ^{1 3}	<p>Save addresses to Phone Book</p> <p>> Select phone number or mail address → YES (☞From Step 2 on P.4-5)</p>
Protect/Unprotect ^{1 3}	<p>Protect received/sent messages</p> <p>> This one or Selected (→ For Selected, check messages → [Finish])</p> <ul style="list-style-type: none"> ● To unprotect, repeat the step. ● SMS saved in USIM Card cannot be deleted.
Unread/Read ³	Switch status to Unread/Read
Move ³	<p>Move messages to specific folders</p> <p>> Move This or Move Selected (→ For Move Selected, check messages → [Finish] → YES) → Select a folder</p> <ul style="list-style-type: none"> ● SMS saved in USIM Card cannot be moved.
Delete	<p>> Select an item → Operate selected item</p> <ul style="list-style-type: none"> ● If messages are received while selecting multiple messages, message deletion may fail.
Confirm Delivery ¹	View Delivery report
Send Ir data	(☞P.10-3)

Item	Operation/Description
IC Transmission	(☞P.10-5)
Copy to microSD	Copy messages to microSD Card > YES
Copy to USIM/ Copy to Phone ³	Copy SMS to USIM Card/handset > YES
Move to USIM/Move to Phone ³	Move SMS to USIM Card/handset > YES
Sort	Change display order > Select a display order
Mail Information	View detailed information (Subject, From, To, etc.)
Mail history ^{1 3}	<p>Show up to 1000 sent/received mail records</p> <p>> Select a sender/recipient address</p> <ul style="list-style-type: none"> ● or appears. ● Select a record to show Message Window. (PUP) to return to previous window.

¹ Sent messages only

² Drafts only

³ Received messages only




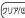
Using Messages

■ Functions Available in Received/Sent Message Window

> In Message Window, [Menu] → Select an item (See below)

Item	Operation/Description
Retrieve ¹	Retrieve complete S! Mail
Edit ²	Edit message to send (S! Mail: ⏪From Step 2 on P.13-4/SMS: ⏪From Step 2 on P.13-7)
Reply ¹	Reply without quoting message > Reply to Sender or Reply to All → Compose S! Mail or Compose SMS → Compose a message (S! Mail: ⏪From Step 4 on P.13-4/SMS: ⏪From Step 4 on P.13-7) ● Selectable items differ by mail type.
Reply with Quote ¹	Quote received message to reply > Reply to Sender or Reply to All → Compose a message (S! Mail: ⏪From Step 4 on P.13-4/SMS: ⏪From Step 4 on P.13-7) ● Selectable items differ by mail type.
Forward ¹	> Forward or Fwd Server Mail ● Forward Server Mail (⏪P.13-15)
Dial	> Select an item → Make a call/compose a message/add to Phone Book
Add Address	Save addresses to Phone Book > Select phone number or mail address → YES (⏪From Step 2 on P.4-5)
Add to Phone Book	Save highlighted phone number/mail address to Phone Book > YES (⏪From Step 2 on P.4-5)

Item	Operation/Description
Attached files	Show attached files
Save Templates	Save edited templates > YES
Add Shortcut Icon	Create a shortcut (⏪P.1-22) Select a shortcut in Standby to open composition window with selected mail address/number in Address field
Copy	Copy address, subject or text Select an item → Copy (⏪After Step 2 on P.3-10)
Font Size	> Select a size
Scroll Unit	Change scroll unit > Half Screen or Whole Screen
Charset Conversion ¹	Convert characters when not properly shown > Select an item
Delete	> Select an item → Operate selected item
Confirm Delivery ²	View Delivery report
Mail Information	View detailed information (Subject, From, To, etc.)
Send Ir data	(⏪P.10-3)
IC Transmission	(⏪P.10-5)
Copy to microSD	Copy messages to microSD Card > YES
Copy to USIM or Copy to Phone ¹	Copy SMS to USIM Card/handset > YES
Move to USIM or Move to Phone ¹	Move SMS to USIM Card/handset > YES

Item	Operation/Description
Report Spam ¹	Report received mail as Spam Mail >  [Send] ● Change destination to report to (P.18-18).
Mail history	Show up to 1000 sent/received mail records > Select a sender/recipient address ●  or  appears. ● Select a record to show Message Window.  to return to previous window.

¹ Received Message Window only

² Sent Message Window only

14

Messaging

14-24

Internet

Getting Started	15-2
Using Yahoo! Keitai	15-3
Opening Yahoo! Keitai Main Menu	15-3
Entering URL	15-4
Using Access Histories	15-4
Exiting Mobile Internet	15-4
Using PC Site Browser	15-5
Opening Menu	15-5
Entering URL	15-5
Using Access Histories	15-5
Exiting Internet.....	15-5
Basic Operations.....	15-6
Using Cursor	15-6
Text Entry & Item Selection	15-7
Using Information	15-8
Bookmarks & Saved Pages.....	15-8
Managing Bookmarks & Saved Pages	15-9
Bookmarks/Saved Pages Functions.....	15-10
Downloading Image/Sound Files	15-11
Using Number, Address or URL.....	15-11
Streaming	15-12
Option Menu Items.....	15-13

Getting Started

Access Yahoo! Keitai Mobile Internet and PC sites.
"Yahoo! Keitai" is both a SoftBank Mobile Internet service and the SoftBank Mobile Internet portal.
View PC Internet websites via PC Site Browser.

Internet

Yahoo! Keitai

- View Mobile Internet Websites (☞P.14-3)
- Download image/sound files, etc. (☞P.14-11)
- Movies/Music Streaming (☞P.14-12)
- Register SI Quick News (☞P.7-4)

PC Sites

- View PC Sites (☞P.14-5)
- Download still images (☞P.14-11)

Note

- Separate subscription is required for Network access.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Video Calls cannot be received while connecting to the Network.

Cache Memory

Retrieved information is temporarily saved in Cache Memory.

When full, oldest is deleted first.

- Previously viewed pages may load from Cache Memory. To view the latest, update information (☞P.14-13).
- Cached items with expiry dates are deleted upon expiry.
- Information remains even after handset is disconnected from the Network or handset power is turned off.

Tip

Settings

- Clear Cache ● Delete Cookies (☞P.18-20)
- Initialize Browser (☞P.18-21)

SSL/TLS

SSL (Secure Sockets Layer) and TLS (Transport Layer Security) are encryption protocols for secure Internet transmissions of important/sensitive information such as credit card numbers.

Server certificates are saved on 940P (➡P.18-21).

Notes

When a security notice appears, subscribers must decide for themselves whether or not to open the page. SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co.,Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust Systems Co., Ltd. cannot be held liable for any damages associated with the use of SSL and TLS.

Tip

Settings ● Security Settings (➡P.18-20)

Using Yahoo! Keitai

Opening Yahoo! Keitai Main Menu

Select Yahoo! Keitai Menu items to access websites.

Main Menu ► Yahoo!

1 Open Top Menu
Yahoo! Keitai

2 Open Menu List
Select a menu item

- Repeat Step 2 as required.
- Basic Operations: ➡P.14-6

Note

- Shortcut: In Standby, press 

Entering URL

Enter URLs (addresses beginning with "http://" or "https://") directly to access websites, or open previously viewed pages using URL histories.

- Up to 20 URL histories are stored.

Main Menu ► Yahoo! ► Enter URL

1 Enter URL Directly

Direct Entry → Enter URL

Use URL History

URL History List →

Select a URL



URL History List Window

■ Delete URL Histories

> In Step 1, **URL History List** → (Highlight a URL →) [Menu] → **Delete** or **Delete All** → YES

Using Access Histories

Open previously viewed pages using access histories.

- Up to 100 access histories are stored (The number of savable histories varies depending on data amount.).

Main Menu ► Yahoo! ► History

1 Select a history



History Window

■ Delete Access Histories

> In Step 1, (highlight a history →) [Menu] → **Delete** or **Delete All** → YES (→ For **Delete All**, enter Phone Password)

■ Show Access History URLs

> In Step 1, highlight a history → [Menu] → **Display URL**

Exiting Mobile Internet

1 [Back] → YES


Note

- Closing handset does not affect active browser.

Using PC Site Browser

Opening Menu

View PC websites using PC Site Browser.

- When PC Site Browser is active,  appears.
- Some pages may not be viewable.
- Viewing PC websites may incur high charges.

Main Menu ► Yahoo! ► PC Site Browser

1 *Homepage*



Confirmation appears. Select *NO*.

- To show confirmation each time: *YES*

2 Select a menu item

Repeat Step 2 as required.

Note

- Alternatively, press  in Yahoo! Keitai Menu to switch to PC Site Browser Menu. To return to Yahoo! Keitai Menu, press  again.

Tip

- **Settings** ● Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai (P.18-19)

Entering URL

Follow same operation accessed from Yahoo! Keitai .

Main Menu ► Yahoo! ► PC Site Browser ► Enter URL

- Follow Step 1 of same operation accessed from Yahoo! Keitai (P.14-4).

Using Access Histories

Follow same operation accessed from Yahoo! Keitai .

Main Menu ► Yahoo! ► PC Site Browser ► History

- Follow Step 1 of same operation accessed from Yahoo! Keitai (P.14-4).

Exiting Internet

- 1  → *YES*











Note

- Closing handset does not affect active browser.

Basic Operations

Using Cursor

- Operation descriptions are based on Portrait View.

Move Cursor	Use cursor to select underlined menu items.  to move right  to move left  to move to previous line  to move to next line
Scroll Pages	Scroll bar appears on right side or at bottom of Display when page content continues beyond view.  scroll up/down  scroll left/right  scroll page up by a screenful  scroll page down by a screenful <ul style="list-style-type: none"> ● To scroll continuously, press and hold above keys.
Move to previous page/ next page	Previously viewed pages are temporarily saved in Cache Memory (☞P.14-2).  [Back] : Return to previous page  [Menu] → Forward : View next page <ul style="list-style-type: none"> ● Some web pages may not appear after performing the steps above.

When Authentication is Required

Some pages require user authentication for access.

If required, enter user ID or password.

Note

- While page is open, press and hold  to switch to TV.


Tip

Settings

- Font Size ● Scroll Unit ● Images Off ● Sound Off (☞P.18-19)
- Delete User ID or Password Entered when Authentication is Required (☞P.18-20)

Text Entry & Item Selection

Enter text or select items to send information.

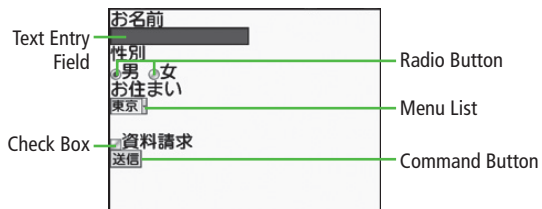

- Actual web pages may differ in appearance.

Text Entry Field	Highlight field → → Enter text →
Menu List	Highlight field → Menu list appears. Highlight an item → Selected items are highlighted.
Radio Button	Highlight → When selected, appears.
Check Box	Highlight <input type="checkbox"/> → When selected, <input checked="" type="checkbox"/> appears. Press again to cancel selection.
Command Button	Highlight the button → Corresponding command is executed.

Using Information


Bookmarks & Saved Pages

Bookmark websites or save page content to Saved Pages.

- Some copy protected materials cannot be saved.

Bookmarks	Save links to websites. 940P connects to the Network to open the link.
Saved Pages	Save page content. 940P opens saved pages without connecting to the Network.

Saving Web Pages

- 1 Open a web page →  [Menu] → **Bookmarks** or **Saved Pages** → **Add**
- 2 Select title → Edit title
- 3 **OK** → **OK**
 - Saved Bookmarks/Saved Pages are saved to Bookmarks List/Saved Pages List (→Right)

Viewing Bookmarks & Saved Pages


Main Menu ► Yahoo! (► PC Site Browser)

- 1 **Bookmarks** or **Saved Pages** → Select an item

Example: Yahoo! Keitai Browser




Bookmarks List Window

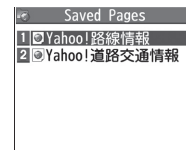

Saved Pages List Window

Open Bookmarks/Saved Pages in Web Page

- Open a web page →  [Menu] → **Bookmarks** or **Saved Pages** → **View Lis**

Note

- Create folders in Bookmarks/Saved Pages List to organize Bookmarks/Saved Pages (→P.14-9).

Tip

- Send Bookmarks via Infrared (→P.10-3)
- Send Bookmarks via IC Transmission (→P.10-5)
- Add Bookmark Shortcuts to Standby
- Save URLs to Bookmarks
- Send Bookmark URLs (→P.14-10)

Managing Bookmarks & Saved Pages

Follow the steps below to open Bookmarks or Saved Pages list:

■ Yahoo! Keitai

Main Menu ► Yahoo! ► Bookmarks or Saved Pages

■ PC Site Browser

Main Menu ► Yahoo! ► PC Site Browser
► Bookmarks or Saved Pages

Note

- When a different USIM Card is inserted, Saved Pages do not appear or title name cannot be changed.

Creating New Bookmarks/Saved Pages Folders

- Folders cannot be created within existing folders.

1 Bookmarks

In Bookmarks list window, [Y] [Menu] → **Create New** → **Folders** → Enter title

Saved Pages

In Saved Pages list window, [Y] [Menu] → **New Folder** → Enter title

■ Move Bookmarks/Saved Pages to Folder

- ① Before moving to folders, set **Sort** to **Saved/Used Order** or **Saved/Moved Order** (☞P.14-10)
- ② In Bookmarks/Saved Pages list window (☞P.14-8), highlight a bookmark/saved page → [Y] [Menu] → **Move to** → Select a folder → Select a destination

■ Edit Folder Title

- > In Bookmarks/Saved Pages list window (☞P.14-8), highlight a folder → [Y] [Menu] → **Edit** → Edit folder title

Editing Bookmark Titles/URLs

- 1 In Bookmarks list window, highlight a bookmark → [Y] [Menu] → **Edit**
- 2 Edit title/URL

Renaming Saved Pages

- 1 In Saved Pages list window, highlight a saved page → [Y] [Menu] → **Edit**
- 2 Edit title

Tip

- Delete Bookmarks/Saved Pages/Folders ● Display Bookmark/Saved Page URLs ● Change Bookmarks/Saved Pages/Folders Display Order ● Sort Bookmarks/Saved Pages/Folders (☞P.14-10)

Bookmarks/Saved Pages Functions

From ► **Main Menu** ► **Yahoo!** (► **PC Site Browser**)
► **Bookmarks** or **Saved Pages**

■ Add Bookmark Shortcuts to Standby

> Highlight a bookmark → [Menu] → *Add shortcut icon* → **YES**

■ Save URLs to Bookmarks

> [Menu] → *Create New* → *Bookmarks* → Enter a title/URL → **OK**

■ Delete Bookmarks/Saved Pages/Folders

> Follow the steps below

Item	Operation/Description
Delete	> Highlight a bookmark, saved page or folder → [Menu] → <i>Delete</i> → YES
Delete Selected Items	Select items to delete > [Menu] → <i>Delete selected</i> → Check items to delete → [Delete] → YES
Delete All	> [Menu] → <i>Delete All</i> → YES → Enter Phone Password

■ Display Bookmark/Saved Page URLs

> Highlight a bookmark/saved page → [Menu] → *Display URL*

■ Change Bookmarks/Saved Pages/Folders Display Order

> Highlight a bookmark/saved page/folder → [Menu] → *Move to* → to select a position

- Before changing order, set *Sort* (Right) to *Saved/Used Order* or *Saved/Moved Order*.

■ Sort Bookmarks/Saved Pages/Folders

> [Menu] → *Sort* → Select a condition


■ Send Bookmark URLs

> Highlight a bookmark → [Menu] → *Send URL* → *S! Mail* or *SMS* → Create a message (S! Mail: From Step 2 on P.13-4/SMS: From Step 2 on P.13-7)

Downloading Image/Sound Files

Save images, sounds, etc. to Data Folder or microSD Card.

- For PC Site Browser, only still images can be saved.

- 1 Open a web page →  [Menu] → **Select File**
- 2 Select a file
File details appear.
- 3 **Save** → **YES**

Available menu items vary by saved content.

- Save location is determined by **Save Settings** (↗P.18-20).
However, save location may change depending on situations. Check confirmation when download is complete.

Note

- Do not remove/install microSD Card while saving files to it.
- Do not turn 940P power off while downloading or saving files.
Files may be damaged.
- Some copy protected files may not be saved.
- Videos selected from web pages play while being downloaded.

Using Number, Address or URL

Use linked numbers, addresses or URLs to make calls, send messages, access websites, or save directly to Phone Book.

- 1 Open a web page containing phone numbers, mail addresses or URLs
- 2 **Phone Number**
Select a phone number → Select an item (See below)

Item	Operation/Description
Voice call	Make a Voice Call
Video call	Make a Video Call
Select image	Select outgoing image
Add to Phone Book	Save a number to Phone Book (↗From Step 2 on P.4-5)

E-mail Address

Select an address → Select an item (See below)

Item	Operation/Description
Compose S! Mail	Create S! Mail (↗From Step 4 on P.13-4)
Compose SMS	Create SMS (↗From Step 4 on P.13-7)
Add to Phone Book	Save mail address to Phone Book (↗From Step 2 on P.4-5)

URL

Select URL

940P connects to the Network.

Streaming

Enjoy video/sound clips while they download.











- Supported by compatible files on Yahoo! Keitai sites only.
- Streaming files cannot be saved.

Main Menu ► Yahoo! ► Yahoo! Keitai

1 Open a web page → Select a file
Streaming starts.

2  or  to exit

Engaged Streaming Operations

Mute/Release Mute	 [ / ]
Pause/Resume*	 [ / ]
Volume	 / 
Set Playback Position*	 to start playback from specified point
Toggle Display Position	 <ul style="list-style-type: none"> ● Toggle Portrait/Landscape view.

* Not available during playback for live events such as live sports programs.

Note

- Streaming requires a continuous Network connection. Network remains connected even during a pause (Transmission fees apply).
- Paused streams may stop after three minutes of inactivity.
- When roaming abroad, streaming may be unavailable or not be performed properly.

Incoming Voice Calls while Streaming

Incoming call pauses an active stream.

- Video Calls cannot be received while streaming.

Option Menu Items

In Yahoo! Keitai, press  [Menu] for following operations.

- Some functions may not be available depending on web pages.

Item	Operation/Description
Forward	Go to next page (➡P.14-6)
Bookmarks	View Bookmarks list, add bookmarks, or add bookmark shortcuts to Standby
Saved Pages	View Saved Pages list or save page content to Saved Pages
Text Copy	Copy page text
Reload Page	Refresh page information
Enter URL	Enter URL directly or use URL History to access pages
Select File	View, play or save file to Data Folder (Downloading Image/Sound Files: ➡From Step 2 on P.14-11)

Item	Operation/Description
Handy Functions	<p>Switch PC Browser ¹/Switch Browser ²: Toggle Yahoo! Keitai/PC site</p> <p>CHG wide scr. mode/RLS wide scr. mode ³: Toggle wide screen mode on/off according to handset orientation</p> <p>Internet Search: Search text in Internet</p> <p>Search In Page: Search text within page</p> <p>Jump in this page: Jump to top/end of page</p> <p>Send URL: Send URL via S! Mail/SMS</p> <p>History: Open previously viewed pages</p> <p>Expand/Shrink ²: Zoom page in/out</p> <p>Set Display Range ²: Specify displayed area of page</p> <p>Flash(R) Menu: Playback/pause Flash® files</p> <p>Properties: View page details or server certificates for secure pages</p>
Yahoo! Keitai ¹ / Home Page ²	View top menu
Settings	<p>Font Size: Change character size</p> <p>Encoding: Change encoding type</p> <p>Pointer: Set Pointer ²</p>
Switch screen ²	Toggle between Small Screen and PC Screen
Exit Browser	Exit Browser

¹ Yahoo! Keitai only

² PC Site Browser only

³ Available only when Motion Control Setting (➡P.18-6) is OFF for Yahoo! Keitai or PC Site Browser.

Internet

15

15-14

S! Appli

Before Using S! Appli	16-2
Downloading S! Appli.....	16-2
Using S! Appli	16-3
Activating S! Appli.....	16-3
Terminate/Suspend & Resume.....	16-3
Using S! Appli Startup History.....	16-3
Managing Applications	16-4

Before Using S! Appli

S! Appli are Java™-based applications designed to run on SoftBank handsets. Download games and other real-time applications for use on 940P.

- Separate subscription required to use downloaded applications (not required for pre-installed S! Appli).
- For usage on pre-installed applications, see Help menu for each S! Appli.

Note

- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Network S! Appli

Network S! Appli requires Network connection.

- Connection fees apply.

License Information

> Main Menu ▶ S! Appli ▶ Information

Downloading S! Appli

Download up to 100 S! Appli files to 940P/microSD Card.

- End suspended S! Appli if any. However, S! Appli may not be ended during calls.

Main Menu ▶ S! Appli ▶ S! Appli List

1 Download S! Appli → YES

940P connects to the Network, and download site appears.

2 Select an S! Appli

Properties appear.

3 Follow onscreen instructions

4 Select a save location

Downloaded S! Appli is saved to Data Folder automatically.

- Download may take some time.

5 YES to activate

Downloaded S! Appli starts.

- To exit: **NO**

Download Lifestyle-Appli

> Main Menu ▶ Tools or S! Appli ▶ Osaifu-Keitai


▶ Lifestyle-Appli ▶ Download ▶ YES ▶ Select a Lifestyle-Appli

- Lifestyle-Appli: ☞ P.16-2

Using S! Appli

Activating S! Appli

Main Menu ► S! Appli ► S! Appli List

- 1 Select an S! Appli
Application starts and  appears.
 - See application Help menu for usage information.
 - Confirmation appears when selecting Network S! Appli.
 - For a microSD Card S! Appli, press  [microSD] before Step 1.

Note



- Activate an S! Appli; **Main Menu ► Data Folder ► S! Appli ►** Select an S! Appli
- Incoming transmissions pause S! Appli.
- AV output compatible applications may be viewed on a TV set (➔P.10-13).

Tip

- Settings** ●Volume ●Backlight On/Off ●Deactivate Vibration
●Sync microSD Card with S! Appli List (➔P.18-21)

Terminate/Suspend & Resume

Terminating/Pausing S! Appli

- 1 While running an S! Appli, 
- 2 **Suspended** or **Stopped**
 appears for a suspended application.

Resuming/Terminating Paused S! Appli

Main Menu ► S! Appli ► S! Appli List

- 1 **Replayed** or **Stopped**
Resumed application starts from paused point.

Using S! Appli Startup History

Main Menu ► S! Appli ► S! Appli History

- 1 Highlight a record →  [Menu] →
Start, S! Appli info or **Delete**

Managing Applications

Moving S! Appli between 940P and microSD Card

Main Menu ► S! Appli ► S! Appli List

- 1 Highlight an S! Appli → **[Y?]**[Menu] → **Move to microSD** or **Move to phone**
 - Some S! Appli may not be moved to microSD Card.

Deleting S! Appli

Main Menu ► S! Appli ► S! Appli List

- 1 Highlight an S! Appli → **[Y?]**[Menu] → **Delete** → **YES**
 - Some pre-installed S! Appli may not be deleted.

Viewing S! Appli Properties

Main Menu ► S! Appli ► S! Appli List

- 1 Highlight an S! Appli → **[Y?]**[Menu] → **S! Appli info**

Setting Security Level while Running S! Appli

- Security Level cannot be set for some applications.

Main Menu ► S! Appli ► S! Appli List

- 1 Highlight an S! Appli → **[Y?]**[Menu] → **Security level**
- 2 Select an item (See below)

Item	Operation/Description
Network Access	Connect to the Network
Auto Invocation	Activate S! Appli
Multimedia Recording	Record multimedia data
Data Reading Access	Read Phone Book, Calendar events, etc.
Data Rewrtng Accss	Write/delete Phone Book, Calendar events, etc.
Location Access	Retrieve Location information

- 3 **Always Allowed, Ask First Time***, **Ask Every Time** or **Not Allowed**

* Confirmation appears the first time application is activated.

Reset Security Level Settings

Reset security level settings to default or condition when downloading.

> In Step 2, **Reset Sec. Setting** → **YES**

S! GPS Navi

About S! GPS Navi.....	17-2
Using S! GPS Navi.....	17-2
Checking Your Current Position.....	17-2
Activating Navi Appli.....	17-3
Using Location Navi (Japanese).....	17-3
Using Location Log.....	17-3

About S! GPS Navi

S! GPS Navi provides location information by communicating with base stations and by GPS satellite. Check your position on map, area information or route to your destination using a Navi Appli.

Note

- Location information may be inaccurate due to location or signal conditions.
- SoftBank is not liable for any resulting damages.
- Position cannot be determined while Positioning Lock is active (☞P.18-22).
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Using S! GPS Navi

Checking Your Current Position

Activate Navi Appli to check your position.

Main Menu ▶ Tools ▶ S! GPS Navi

1 **Current Location** → YES

Positioning starts.

- To check your current position during positioning: When [Use] appears at lower right, (☑) → OK

2 When positioning is complete, (●) [Map] → YES

940P connects to the Network and web page opens.

- To reposition: (☒) [Retry]

Save to Phone Book

Save obtained location information to Phone Book.

- > Positioning is complete → (☑) [Menu] → **Add to Phone Book** → YES
→ Follow the steps for saving to Phone Book (☞From Step 2 on P.4-5)

Indicating Positioning Accuracy Level

Accuracy Level 📶📶📶 ... Fairly accurate

Accuracy Level 📶📶📶 ... Relatively accurate

Accuracy Level 📶📶📶 ... No accurate location information retrieved
Retrieve location information again.

Activating Navi Appli

Search for current area information or route to your destination.

- End all applications including suspended applications.

Main Menu ▶ Tools ▶ S! GPS Navi ▶ Navi Appli

Using Location Navi (Japanese)

Use Location Navi to locate a person via a SoftBank 3G handset or PC.

For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Main Menu ▶ Tools ▶ S! GPS Navi ▶ Location Navi

Note

- Event Indicator appears when location information is automatically provided or location information request is rejected. Select indicator to show location log.


Using Location Log

Up to 50 latest location info are saved. Delete as required.

Main Menu ▶ Tools ▶ S! GPS Navi ▶ Location Logs

1 Show Details


Select a record to view details

-  appears if positioning fails.

Delete a Record

Highlight a record →  [Menu] → *Delete* → *Delete this* → *YES*

Delete All

 [Menu] → *Delete* → *Delete all* → Enter Phone Password → *YES*

Note

- When 50 records are saved, oldest is deleted first.
- When positioning is requested while viewing a record, a message appears and log window returns.

Tip

Settings ● S! GPS Navi Settings (P.18-22)

Settings


Settings Sound & Vibration.....	18-2
Ringtones.....	18-2
Charge Sound/Key Tone.....	18-3
Settings Display.....	18-3
Display Settings.....	18-3
Main Menu.....	18-4
Clock.....	18-5
Back Light.....	18-5
Font.....	18-6
Motion Control Setting.....	18-6
Speed Selector Setting.....	18-6
Settings Manner Mode.....	18-7
Settings Incoming Settings.....	18-7
Settings Date & Time.....	18-8
Settings Call Settings.....	18-9
Call Time & Call Cost.....	18-9
Making & Receiving Calls.....	18-9
Settings Notification Light.....	18-10
Settings Text Entry.....	18-11
Conversion.....	18-11
Conversion during Message Text Entry.....	18-12
Settings Phone Book.....	18-12
Settings Voice Dial.....	18-12
Settings Video Call.....	18-13
Function Menus.....	18-13
Engaged Video Call Settings.....	18-13

Settings Digital TV.....	18-14
Settings Camera.....	18-15
Capturing Still Images (Camera Mode/Action Mode).....	18-15
Recording Videos (Video Camera Mode).....	18-17
Settings Mobile Widget (Japanese).....	18-18
Settings S! Quick News (Japanese).....	18-18
Display Settings.....	18-18
Auto Update/Deleting Information.....	18-19
Settings Bluetooth®.....	18-19
Settings Messaging.....	18-20
Universal Settings.....	18-20
S! Mail Settings.....	18-21
SMS Settings.....	18-22
Settings Internet.....	18-22
Browser Display Settings.....	18-22
Memory Manager & Reset.....	18-23
Security Settings.....	18-23
Reset.....	18-24
Settings S! Appli.....	18-24
Settings Osaifu-Keitai®.....	18-24
Settings S! GPS Navi Settings.....	18-25
Default Settings.....	18-26
Confirming Settings.....	18-27

Settings Sound & Vibration

Ringtones

From ► Main Menu ► Settings

Setting/Operation	Default
<p>■ Change Ringtone</p> <p>> <i>Sound Settings</i> → <i>Ring Tones</i> → Select an item → <i>Select Ring Tone</i> → Select a type → Select a folder → Select a tone</p>	Phone/Video Call: Pattern 1 Message: Tone3
<p>■ Set Machi-Uta (Change Ringback Tone) ¹</p> <p>> <i>Sound Settings</i> → <i>Machi-Uta</i> → Select an item</p>	—
<p>■ Change Ringer Volume</p> <p>> <i>Sound Settings</i> → <i>Ringer Volume</i> → Select a type →  to adjust volume</p>	Level 4
<p>■ Disable 3D Sound Effect (Ringtone/Melody)</p> <p>> <i>Sound Settings</i> → <i>Stereo/3D Sound</i> → <i>OFF</i></p>	ON
<p>■ Set Ringtone Sound Output for Earphone ²</p> <p>> <i>Sound Settings</i> → <i>Earphone</i> → <i>Earphone</i></p>	Earphone + Speaker
<p>■ Set Message Ringtone Duration</p> <p>> <i>Sound Settings</i> → <i>Message Ring Tones</i> → <i>ON</i> or <i>OFF</i> (→ For <i>ON</i>, enter ring time)</p>	ON (Ring time: 05 sec)
<p>■ Set Vibration Alert</p> <p>> <i>Incoming Settings</i> → <i>Vibrator</i> → Select an item → Select a vibration pattern</p>	OFF

¹ For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

² When earphone is connected and Sound Settings is set to **Earphone**, ringtone sounds through earphone and speaker for incoming calls/messages or alarms after about 20 seconds. Other sounds (e.g. Demo playback) are heard only from earphone.

■ Pre-installed Ringtones

Title	Composer
Pinwheel	Original
SINFONIA NR 101 THE CLOCK HOB I 101	HAYDN FRANZ JOSEPH
JE TE VEUX	SATIE ERIK ALFREDI LE
DANSE DES MIRLITONS // CASSE NOISETTE OP 71A /ORI	CHAJKOVSKIJ PETR ILICH
HEIGH HO // SNOW WHITE AND THE SEVEN DWARFS /INST	CHURCHILL FRANK E
DANCE OF THE KNIGHTS OP 64 NO 13	PROKOFEV SERGEJ S
WALTZ/COPPELIA BALLET SUITE	DELIBES LEO CLEMENT PHILIBERT
PETER AND THE WOLF OP 67	PROKOFEV SERGEJ S

Names of composers given above conform to JASRAC Website. Parts of titles may not appear due to Display size.

Charge Sound/Key Tone

From ► Main Menu ► Settings

Setting/Operation	Default
<p>■ Set Key Tone</p> <p>> <i>Sound Settings</i> → <i>Key Tone</i> → <i>ON</i> or <i>OFF</i></p>	OFF
<p>■ Charging Start/End Tone Off</p> <p>> <i>Phone Settings</i> → <i>Battery</i> → <i>Charge Sound</i> → <i>OFF</i></p>	ON

Settings Display

Display Settings

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
<p>■ Change Wallpaper</p> <p>> <i>Internal Display</i> → <i>Stand-by Display</i> → Select an item (→ Select a folder) → Select an image</p>	(☞P.18-23)
<p>■ Add Calendar to Wallpaper</p> <p>> <i>Internal Display</i> → <i>Stand-by Display</i> → <i>Calendar</i> → Select a view format → <i>BG Image ON</i> or <i>BG Image OFF</i> (→ For <i>BG Image ON</i>, select a folder → select an image)</p>	-
<p>■ Change Wallpaper Randomly</p> <p>> <i>Internal Display</i> → <i>Stand-by Display</i> → <i>Random Display</i> → Select a folder → <i>Every Hour</i> or <i>Every Day</i></p>	-
<p>■ Change Outgoing Call/Message Image</p> <p>> <i>Internal Display</i> → Select an outgoing type → Select a folder → Select an image</p>	(☞P.18-23)
<p>■ Change Incoming Call/Message Image</p> <p>> <i>Internal Display</i> → Select an incoming type → <i>Select Calling Disp.</i>¹ → Select an image type → Select a folder → Select an image</p>	(☞P.18-23)
<p>■ Change Battery/Antenna Indicator</p> <p>> <i>Internal Display</i> → <i>Battery Icon</i> or <i>Antenna Icon</i> → Select a pattern</p>	Pattern 1

<ul style="list-style-type: none"> ■ Change Start-up Window > <i>Internal Display</i> → <i>Start-up</i> → <i>OFF</i>, <i>Message</i>, <i>Pictures</i> or <i>Videos</i>² 	-
<ul style="list-style-type: none"> ■ Change Display Color Scheme > <i>Color</i> → Select a color 	(☞P.18-23)
<ul style="list-style-type: none"> ■ Set Interface Language > <i>言語設定</i> → <i>English</i> 	日本語
<ul style="list-style-type: none"> ■ Show New Call/Message when Handset Opens > <i>Open for New</i> → <i>ON</i> 	OFF

¹ ● Setting applies to messages retrieved manually (*Incoming Options* (☞P.18-19) set to *Manual Retrieval*) or when Server Mail is retrieved (Retrieve New window cannot be changed).

² ● For *Pictures* or *Videos*: Select a folder → Select an image
 ● For *Message*: Enter text

Main Menu

From ► **Main Menu** ► **Settings** ► **Display Settings**
 ► **Menu Icons**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Main Menu Theme > Select a pattern 	(☞P.18-23)
<ul style="list-style-type: none"> ■ Change Main Menu Icons > <i>Customize</i> → Select a menu → Select a folder → Select an image 	-
<ul style="list-style-type: none"> ■ Change Main Menu Background > <i>Customize</i> → <i>Background Image</i> → Select a folder → Select an image 	-

Clock

From ► **Main Menu** ► **Settings** ► **Display Settings**
 ► **Internal Display** ► **Clock**

Setting/Operation	Default
Change Standby Clock Pattern ¹ > Stand-by Clock → [Pattern] → Select a pattern (👉P.18-23) → [Set]	
Change Standby Clock Position ^{1 2} > Stand-by Clock → [Position] → Select a position → [Set]	Pattern 1
Change Standby Clock Size ¹ > Stand-by Clock → [Size] → <i>Small</i> → [Set]	Large
Change Standby Clock at Upper Right (lower right in Landscape View) > Icon Clock → Select a pattern	(👉P.18-23)

¹ Highlight **Stand-by Clock** → [Play] to view Standby Clock.

² Even if setting is changed, clock appears in **Pattern 1** when:

- Calendar, World Clock or Operator Name is set to appear in Standby.
- Time zone is set to other than GMT+9.
- Privacy Key Lock is active.

Back Light

From ► **Main Menu** ► **Settings** ► **Display Settings**

Setting/Operation	Default
Turn Back Light On/Off; Set Power Saver Mode ¹ > Back Light Time → Lighting → ON or OFF → Enter time to Power Saver mode	ON + 15secs.
Illuminate Back Light while Charging > Back Light Time → Charging → Long Time Light ²	Standard ³
Limit Back Light to Display Only > Back Light Time → Area → LCD	LCD + Keys
Adjust Brightness > Back Light Time → Brightness → Select a brightness level	Auto ⁴
Forbid Turning On Back Light Softly > Back Light Time → Soft Light → OFF	ON
Disable Auto Image Compensation > LCD AI → OFF	ON

¹ During operation (except when in Standby or S! Appli is active), press and hold [5] to toggle **ON/OFF**.

² When set to **Long Time Light**, Back Light changes to Power Saver mode in three hours.

³ When set to **Standard**, Back Light illuminates with the same setting as **Lighting** setting.

⁴ When set to **Auto**, Back Light is automatically adjusted according to ambient light.

Font

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Font Size by Function > <i>Font Size</i> → Select an item → Select a size 	Standard
<ul style="list-style-type: none"> ■ Set Menu Font Sizes Collectively > <i>Font Size</i> → <i>Collective Setting</i> → <i>Large</i> or <i>Small</i>* 	Standard
<ul style="list-style-type: none"> ■ Change Font Style (Incoming/Outgoing Call Window) > <i>Disp. Call/Recv #</i> → <i>Pattern 2</i> 	Pattern 1

* When set to *Small*, font size for Phone Book and Incoming/Outgoing Call Logs is set to *Standard*.

Motion Control Setting

From ► Main Menu ► Settings ► Phone Settings
► Motion Control Setting

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Disable All Motion Control Settings > <i>OFF</i> 	ON (Except Y! Keitai)
<ul style="list-style-type: none"> ■ Change Motion Control Settings for Individual Functions > Highlight <i>Customize</i> → [Edit] → Select a function → Select an item → [Finish] 	ON (Videos/PC Movies: ON (Wide Screen))

Speed Selector Setting

From ► Main Menu ► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change/Disable Speed Selector Sound* > <i>Sound Settings</i> → <i>Speed Selector Sound</i> → Select a pattern or <i>OFF</i> 	Pattern 1
<ul style="list-style-type: none"> ■ Deactivate Speed Selector > <i>Phone Settings</i> → <i>Speed Selector Setting</i> → <i>Speed Selector</i> → <i>OFF</i> 	ON (Activate)
<ul style="list-style-type: none"> ■ Change Functions Activated by Speed Selector Operation in Standby > <i>Phone Settings</i> → <i>Speed Selector Setting</i> → <i>Rotation Setting</i> → <i>Clockwise</i> or <i>Counterclockwise</i> → Select a function 	Key Guidance

* Volume control is not available.

Settings Manner Mode

From ► Main Menu ► Settings ► Incoming Settings
► Manner Mode Type

Setting/Operation	Default
■ Set Manner Mode Type > <i>Manner Mode, Super Silent or User Mode</i> (→ For <i>User Mode</i> , set individual items → [Finish])	Manner Mode

■ Default Settings by Mode

Manner Mode	Super Silent	Driving Mode	User Mode
Answer Phone			
Value set for Answer Phone	Value set for Answer Phone	ON	OFF
Vibrator			
ON	ON	OFF	ON
Volume (In. Calls/Msg Ring T./Alarm)			
Silent	Silent	Silent	Silent
Rec. Check Tone			
ON	OFF	ON	ON
Key Tone			
OFF	OFF	1	OFF
Selector Sound			
OFF	OFF	2	OFF
Mic Sensitiv.			
Up	Up	Up	Up
LVA Tone (Low battery alarm)			
OFF	OFF	OFF	OFF

¹ Key Tone setting (P.18-2) applies.

² Speed Selector Sound setting (P.18-6) applies

Settings Incoming Settings

From ► Main Menu ► Settings ► Incoming Settings

Setting/Operation	Default
■ Change Answer Setting (P.18-8) > <i>Answer Setting</i> → <i>Quick Silent</i> or <i>OFF</i>	Any Key Answer
■ Answer Calls by Opening Handset > <i>Open-to-Ans. Call</i> → <i>Phone</i> or <i>Video Call</i> → <i>Answer</i>	Keep Ringing
■ Hide Caller Image Saved in Phone Book > <i>Phone Book Image</i> → <i>OFF</i>	ON
■ Activate Auto Answer with Earphone > <i>Auto Answer</i> → <i>ON</i> → Enter ring time	OFF
■ Set Call Waiting Response > <i>In-call Management</i> → <i>Call Forwarding</i> or <i>Call Rejection</i>	Answer

Settings Call Settings

Call Time & Call Cost

From ► Main Menu ► Settings ► Call Settings


Setting/Operation	Default
<p>■ Display Call Time/Cost ¹</p> <p>> Call Time/Cost</p>	-
<p>■ Reset Total Call Charge/Time</p> <p>> Reset → Enter Phone Password → Reset Total Duration or Reset Total Cost → YES (→ For Reset Total Cost, enter PIN2)</p>	-
<p>■ Set Charge Limit ²</p> <p>> Set Max Cost Limit → ON → Enter charge limit → Enter PIN2</p>	OFF


¹ May not be available depending on subscription status. In that case, Set Max Cost Limit is not available.

² When set to **ON**, incoming/outgoing calls including emergency number calls are not dialable if charge limit is reached.

Making & Receiving Calls

From ► Main Menu ► Settings

Setting/Operation	Default
<p>■ Change Earpiece Volume</p> <p>> Call Settings → Volume →  to adjust volume</p>	Level 4

<p>■ Set Handset Response when Closed during Call</p> <p>> Call Settings → Setting When Closed → Hold Call* or End the Call</p>	Continue
<p>■ Set Hold Tone</p> <p>> Call Settings → Hold Tones → On-hold Tone or Holding Tone → Select a tone</p>	On-hold Tone: On-hold Tone 1 Holding Tone: JESU JOY OF MAN's
<p>■ Turn Off Noise Reduction</p> <p>> Call Settings → Noise Reduction → OFF</p>	ON
<p>■ Sound Alarm before Connection is Disconnected</p> <p>> Call Settings → Quality Alarm → OFF or Low Tone</p>	High Tone
<p>■ Sound Alarm until Line is Reconnected</p> <p>> Call Settings → Reconnect Signal → OFF or Low Tone</p>	High Tone
<p>■ Call Service Numbers (Service not available at present)</p> <p>> Call Settings → Service Numbers → Select a service number → </p>	-
<p>■ Specify Phone Book Entry to Call with Earphone</p> <p>> Phone Settings → Headset Switch to Call → Voice Call → Search Phone Book → Select an entry</p>	OFF

* When **Hold Call** is selected: **Speaker ON** (Hold tone sounds from speaker)/**Speaker OFF** (Hold tone does not sound from speaker)

Settings Notification Light

From ► Main Menu ► Settings ► Notification Light

Setting/Operation	Default
<p>■ Set Notification Light by Incoming Type (Voice/Video Calls or Messages)</p> <p>> <i>Incoming</i> → <i>Select Color</i> → Select a type → Select a color</p>	(☞P.18-23)
<p>■ Change Notification Light Color Name for Incoming Call/Message</p> <p>> <i>Incoming</i> → <i>Color</i> → <i>Edit Color Name</i> → Select a color → Edit color name</p>	-
<p>■ Adjust Notification Light Color Tone for Incoming Call/Message</p> <p>> <i>Incoming</i> → <i>Color</i> → <i>Adjust Color Tone</i> → Select a color → Adjust color tone</p>	-
<p>■ Set Notification Light for Missed Calls/New Messages</p> <p>> <i>Missed Call/Unread</i> → <i>OFF When Checked</i> or <i>OFF</i></p>	OFF after 24hours
<p>■ Set Notification Light for When Opening/Closing Handset</p> <p>> <i>Slide</i> → <i>Slide Open</i> or <i>Slide Close</i> → Select <i>OFF</i> or a color</p>	(☞P.18-26)
<p>■ Set Notification Light for During Calls/Music Playback/Bluetooth® Transmission/IC Card Reading</p> <p>> Select a function → Select <i>ON</i>, <i>OFF</i> or a color</p>	-

<p>■ Set Notification Light for During Speed Selector Operation</p> <p>> <i>Speed Selector</i> → Select <i>OFF</i> or a color</p>	(☞P.18-26)
<p>■ View Notification Light Status*</p> <p>> <i>Confirm Status</i></p>	-

* View Notification Light settings for incoming calls/messages or engaged calls.

Settings Text Entry

From ► Main Menu ► Settings ► Phone Settings
► Text Entry Method

Setting/Operation	Default
<p>■ Set Input Mode</p> <p>> Input Mode → Check input mode(s) to use → [Finish] → Select a input mode to prioritize</p>	Input mode: All Prioritized mode: Mode 1 (5-touch)
<p>■ Hide Predictive Candidates/Context Forecast List</p> <p>> Predict → OFF</p>	ON (Show)
<p>■ Set Learning Feature Off for Secret Mode/ Secret Data Only</p> <p>> Learn in Secret Mode → Enter Phone Password → OFF</p>	ON
<p>■ Delete All Learned Words</p> <p>> Reset Learned Words → Enter Phone Password → YES</p>	–

Conversion

From ► In text entry window, [Menu]
► Text entry setting

Setting/Operation	Default
<p>■ View Learned Words</p> <p>> Learned words → Select a row → Select a log ● To delete learned words: Highlight a log → [Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES</p>	–
<p>■ Hide Predictive Candidates and Context Forecast Lists</p> <p>> Predict → OFF</p>	ON (Show)
<p>■ Hide Context Forecast List</p> <p>> Candidate display → OFF</p>	ON (Show)
<p>■ Fix Entered Characters Automatically</p> <p>> Character set time → Select a speed</p>	OFF
<p>■ Hide Word Suggestion Guidance for 2/NIKO-touch Input Method</p> <p>> 2/NIKO-touch guide → OFF</p>	ON (Show)

Conversion during Message Text Entry

From ► **Main Menu ► Settings ► Universal Settings ► Text Predict**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Deactivate Pre-text Predict > <i>Pre-text Predict</i> → OFF 	ON (Activate)
<ul style="list-style-type: none"> ■ Deactivate Time Season Predict > <i>Time Season Predict</i> → OFF 	ON (Activate)
<ul style="list-style-type: none"> ■ Activate Text Expression > <i>Text Expression</i> → <i>Written Language</i> or <i>Colloquialism</i> 	Normal Phrase

Settings Phone Book

From ► **Main Menu ► Phone Book ► Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Save Location for New Entry > <i>Save Settings</i> → <i>USIM</i> or <i>Ask Every Time</i> 	Phone
<ul style="list-style-type: none"> ■ Change Phone Book Search Method > <i>Search Method</i> → Select a method 	A-KA-SA-TA-NA
<ul style="list-style-type: none"> ■ Change Font Size > <i>Font Size</i> → <i>Phone Book</i> or <i>Call Log</i> → <i>Large</i> 	Standard
<ul style="list-style-type: none"> ■ Forbid Forwarding Phone Book Entry Images > <i>Forwarding Image</i> → OFF 	ON*

* If **ON** is selected, images can be forwarded via Infrared, IC transmission or Bluetooth®.

Settings Voice Dial

From ► **Main Menu ► Settings ► Phone Settings ► Voice Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Activate Voice Dial Automatically > <i>Auto Voice Dial</i> → ON 	OFF
<ul style="list-style-type: none"> ■ Activate Voice Dial via Earphone or Bluetooth® Device > <i>Voice Earphone Dial</i> → ON 	OFF

Settings Video Call

Function Menus

From ► Main Menu ► Settings ► Video Call

Setting/Operation	Default
<p>■ Change Incoming Image Quality</p> <p>> <i>Incoming Video Qlty</i> → <i>Quality Prioritized</i> or <i>Motion Prioritized</i></p>	Standard
<p>■ Change Outgoing Image</p> <p>> <i>Select Images</i> → Select a category → Highlight <i>Original</i> → [Menu] → <i>Change setting</i> → Select a folder → Select a file → [Play] to view image</p>	Pre-installed
<p>■ Switch Earpiece On</p> <p>> <i>Loud Speaker</i> → OFF</p>	ON (Loud Speaker ON)
<p>■ Switch to Voice Call when Video Call Fails</p> <p>> <i>Voice Call Auto Redial</i> → ON</p>	OFF
<p>■ Toggle Outgoing/Incoming Image Setting</p> <p>> <i>Switch Images</i> → Select an item</p>	Receiving Priority
<p>■ Monitor Room Remotely</p> <p>> <i>Remote Monitoring</i> (P.2-8)</p>	—

Engaged Video Call Settings

From ► During a Video Call, [Menu] ► V. Call settings

Setting/Operation	Default
<p>■ Change Incoming Image Quality</p> <p>> <i>IncomingVideo Qlty</i> → <i>Qlty Prioritized</i> or <i>Motion Prioritized</i></p>	Standard
<p>■ Change Brightness</p> <p>> <i>Brightness</i> → Select a brightness level</p>	0
<p>■ Adjust Outgoing Image Color Tone to Lighting Conditions</p> <p>> <i>White balance</i> → Select an environment</p>	Automatic
<p>■ Change Outgoing Image Color Tone</p> <p>> <i>Color mode set</i> → Select a color tone</p>	Normal
<p>■ Enhance Image Quality in Low Light Conditions</p> <p>> <i>Night mode</i> → ON</p>	OFF
<p>■ Set Focus*</p> <p>> <i>Focus</i> → Select a focus type</p>	Landscape

* Outside Camera only

Settings Digital TV

From ► Main Menu ► TV ► User Settings

Setting/Operation	Default
<p>■ Change Display Contents</p> <p>> Display → Display Setting → Visual image+DBC or Enlarged V. image+DBC</p>	V. image+Caption+DBC
<p>■ Change Caption Position in Landscape View</p> <p>> Display → Caption Posit. In W-scr → Upper</p>	Lower
<p>■ Hide Guide in Landscape View</p> <p>> Display → Icons → OFF</p>	ON
<p>■ Change Ticker Setting for Incoming Mail Notification while Watching TV</p> <p>> Display → Mail Ticker Display → Sender+Subject or OFF</p>	Receipt Notification
<p>■ Forbid Enhancing Frame Rate Automatically</p> <p>> Video → Mobile W-Speed → OFF</p>	ON
<p>■ Change Image Quality</p> <p>> Video → Image Quality → Select an item</p>	Dynamic
<p>■ Set Back Light Duration while Watching TV</p> <p>> Display Light → Lighting Duration → Enter duration (min.)</p>	Constant Light
<p>■ Deactivate Auto Volume</p> <p>> Sound Effect → Auto Volume → OFF</p>	ON
<p>■ Remaster Sounds from Earphone or Bluetooth® Device</p> <p>> Sound Effect → Remaster¹ → ON</p>	OFF

<p>■ Add Listening Effect to Sound from Earphone or Bluetooth® Device</p> <p>> Sound Effect → Listening¹ → Select an item</p>	OFF
<p>■ Change Quality of Sound from Earphone or Bluetooth® Device</p> <p>> Sound Effect → Equalizer¹ → Select an item</p>	Normal
<p>■ End Recording when Battery Runs Low</p> <p>> Recording → Rec. When Low Battery → Stop Recording</p>	Continue Recording
<p>■ Start Recording TV Automatically when a Call Comes in while Watching TV</p> <p>> Recording → Rec. Program When Call → ON</p>	OFF
<p>■ Hide Images on Data Broadcast Sites</p> <p>> Data Broadcasting → Images → OFF</p>	ON
<p>■ Turn Off Sounds from Data Broadcast/Sites</p> <p>> Data Broadcasting → Sound Effect → OFF</p>	ON
<p>■ Show Confirmation on Data Broadcast</p> <p>> Data Broadcasting → Reset Settings → YES</p>	—
<p>■ Set Power Saving Mode²</p> <p>> ECO Mode → YES</p>	OFF
<p>■ Reset Channel List</p> <p>> Reset Channel Setting → Enter Phone Password → YES</p>	—
<p>■ Delete Information in Broadcasting Storage Area</p> <p>> Reset Storage Area → (Highlight an affiliated channel →) [Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES</p>	—

<p>■ Reset TV Settings > <i>Reset TV Settings</i> → Enter Phone Password → YES</p>	—
<p>■ Check TV Settings > <i>Check TV Settings</i></p>	—

¹ Remaster/Listening/Equalizer Settings: ⏏P.5-8

² To cancel ECO Mode, perform same operation. When ECO Mode is set, following settings automatically activate and cannot be changed. When canceled, original settings return.

Mobile W-Speed: OFF

Image Quality: Normal

Remaster: OFF

Listening: OFF

Equalizer: Normal

Settings Camera

- Change settings before capturing images. Some functions can be changed with simple key touch (⏏P.6-5).
- Some settings are not available depending on camera mode, image size or photo mode.

Capturing Still Images (Camera Mode/Action Mode)

Camera Mode

From ▶ Main Menu ▶ Camera ▶ Camera ▶ [Menu]

Action Mode

From ▶ Main Menu ▶ Camera ▶ Camera ▶ [Video]
 ▶ [Cont.] ▶ [Menu]

Setting/Operation	Default
<p>■ Change Camera Mode > <i>CHG camera-mode</i> → Select a mode</p>	—
<p>■ Change Photo Mode > <i>Photo mode</i> (⏏P.6-9)</p>	Intelligent Auto
<p>■ Change Image Size > <i>Image size</i> → Select a size</p>	Standby (480x854)
<p>■ Change Brightness > <i>Camera settings</i> → <i>Brightness</i> → Select a level</p>	±0
<p>■ Adjust Color Balance According to Lighting Conditions > <i>Camera settings</i> → <i>White balance</i> → Select an item</p>	Auto

<ul style="list-style-type: none"> ■ Change Color Mode > <i>Camera settings</i> → <i>Color mode set</i> → Select an item 	Normal
<ul style="list-style-type: none"> ■ Change Focus Setting > <i>Camera settings</i> → <i>Focus</i> → Select an item 	Camera mode: Face Detection/ Action mode: Auto
<ul style="list-style-type: none"> ■ Change Image Quality > <i>Camera settings</i> → <i>Image quality</i> → Select an item 	Fine
<ul style="list-style-type: none"> ■ Deactivate Image Stabilizer (Outside Camera only) > <i>Camera settings</i> → <i>Img. stabilizer</i> → <i>OFF</i> 	Auto
<ul style="list-style-type: none"> ■ Add Frames > <i>Camera settings</i> → <i>Shoot with frame</i> → <i>ON</i> → Select a frame → Capture an image 	OFF
<ul style="list-style-type: none"> ■ Change Shutter Click Sound > <i>Camera settings</i> → <i>Shutter sound</i> → Select an item 	Sound 1
<ul style="list-style-type: none"> ■ Minimize Flicker while Shooting near Fluorescent Light > <i>Camera settings</i> → <i>Flicker correction</i> → <i>Mode 1 (50Hz)</i> or <i>Mode 2 (60Hz)</i> 	Automatically
<ul style="list-style-type: none"> ■ Change Save Location > <i>Storage setting</i> → <i>Store in</i> → <i>microSD</i> 	Phone
<ul style="list-style-type: none"> ■ Forbid Saving Captured Images Automatically > <i>Storage setting</i> → <i>Auto save set</i> → <i>OFF</i> 	ON (Automatically save)

<ul style="list-style-type: none"> ■ Automatically Capture Images According to Distance/Number of People > <i>Auto shutter</i> (☞P.6-7) 	OFF
<ul style="list-style-type: none"> ■ Capture Images with High Sensitivity > <i>High Sensitiv.</i> → <i>ON</i> 	OFF
<ul style="list-style-type: none"> ■ Set Flash/Photo Light According to Environment > <i>Flash setting</i> or <i>Photo light set.</i> (☞P.6-9) 	Camera mode: Auto/ Action mode: OFF
<ul style="list-style-type: none"> ■ Set Auto Timer > <i>Auto timer</i> (☞P.6-7) 	OFF
<ul style="list-style-type: none"> ■ Change Continuous Shooting Setting > <i>Cont. shooting set.</i> (☞P.6-10) 	—
<ul style="list-style-type: none"> ■ Change Viewfinder Size > <i>Display size</i> → <i>Fit in display</i> 	Actual size
<ul style="list-style-type: none"> ■ Hide Display Indicators > <i>Icon</i> → <i>OFF</i> 	ON (Show)
<ul style="list-style-type: none"> ■ View Memory Information > <i>Memory Status</i> 	—

Recording Videos (Video Camera Mode)

From ► **Main Menu** ► Camera ► Video Camera
 ► [Menu]

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Camera Mode > <i>CHG camera-mode</i> → Select a mode 	—
<ul style="list-style-type: none"> ■ Change Photo Mode > <i>Photo mode</i> (☞P.6-9) 	Normal
<ul style="list-style-type: none"> ■ Change Image Size > <i>Image size</i> → Select a size 	QCIF (176x144)
<ul style="list-style-type: none"> ■ Change Recording Time > <i>File size setting</i> → <i>Long time</i> 	Mail restrict'n(S)
<ul style="list-style-type: none"> ■ Change Brightness > <i>Camera settings</i> → <i>Brightness</i> → Select a level 	±0
<ul style="list-style-type: none"> ■ Adjust Color Balance According to Lighting Conditions > <i>Camera settings</i> → <i>White balance</i> → Select an item 	Auto
<ul style="list-style-type: none"> ■ Change Color Mode > <i>Camera settings</i> → <i>Color mode set</i> → Select an item 	Normal
<ul style="list-style-type: none"> ■ Change Focus Setting > <i>Camera settings</i> → <i>Focus</i> → Select an item 	Face Detection
<ul style="list-style-type: none"> ■ Change Image Quality* > <i>Camera settings</i> → <i>Image quality</i> → Select an item 	Normal
<ul style="list-style-type: none"> ■ Deactivate Image Stabilizer (Outside Camera only) > <i>Camera settings</i> → <i>Img. stabilizer</i> → OFF 	Auto

<ul style="list-style-type: none"> ■ Change Shutter Click Sound > <i>Camera settings</i> → <i>Shutter sound</i> → Select an item 	Sound 1
<ul style="list-style-type: none"> ■ Minimize Flicker while Shooting near Fluorescent Light > <i>Camera settings</i> → <i>Flicker correction</i> → <i>Mode 1 (50Hz)</i> or <i>Mode 2 (60Hz)</i> 	Automatically
<ul style="list-style-type: none"> ■ Change Save Location > <i>Storage setting</i> → <i>Store in</i> → <i>microSD</i> 	Phone
<ul style="list-style-type: none"> ■ Forbid Saving Captured Images Automatically > <i>Storage setting</i> → <i>Auto save set</i> → OFF 	ON (Automatically save)
<ul style="list-style-type: none"> ■ Set Flash/Photo Light According to Environment > <i>Photo light set.</i> → ON 	OFF
<ul style="list-style-type: none"> ■ Set Auto Timer > <i>Auto timer</i> (☞P.6-7) 	OFF
<ul style="list-style-type: none"> ■ Forbid Recording Audio > <i>Movie type set</i> → <i>Video</i> 	Normal
<ul style="list-style-type: none"> ■ Change Viewfinder Size > <i>Display size</i> → <i>Fit in display</i> 	Actual size
<ul style="list-style-type: none"> ■ Change to S! Mail Attachment Mode > <i>Attach S! Mail mode</i> → YES 	—
<ul style="list-style-type: none"> ■ Hide Display Indicators > <i>Icon</i> → OFF 	ON (Show)
<ul style="list-style-type: none"> ■ View Memory Information > <i>Memory Status</i> 	—

* Available only when *File size setting* is set to *Long time*

Settings Mobile Widget (Japanese)

From ▶ Main Menu ▶ Entertainment ▶ Mobile Widget
▶ Settings

Setting/Operation	Default
<input checked="" type="checkbox"/> Deactivate Auto Update > Auto Refresh → OFF	ON (Activate)
<input checked="" type="checkbox"/> Activate Auto Roaming Abroad > Auto Roaming → ON	OFF (Deactivate)
<input checked="" type="checkbox"/> Hide Confirmation when Roaming Abroad > Roaming Notification → OFF	ON (Show)
<input checked="" type="checkbox"/> Forbid Sending/Receiving Cookies > Cookies → OFF	ON (Send/Receive)
<input checked="" type="checkbox"/> Delete Cookies > Delete Cookies → YES	—

Settings S! Quick News (Japanese)**Display Settings**

From ▶ Main Menu ▶ Settings ▶ Display Settings
▶ Internal Display ▶ S! Quick News Settings

Setting/Operation	Default
<input checked="" type="checkbox"/> Show Only Unread Items in Standby > Unread/Read Setting → Unread	Unread + Read
<input checked="" type="checkbox"/> Change Marquee Speed > Marquee Speed → Fast or Slow	Normal
<input checked="" type="checkbox"/> Hide S! Quick News > Display Always → OFF	ON (Show)
<input checked="" type="checkbox"/> Show Image Data > Image Display → ON	OFF (Hide)

Auto Update/Deleting Information

From ► **Main Menu** ► News/Entertainment
 ► S! Quick News ► Settings

Setting/Operation	Default
<p>■ Automatically Update Quick News in S! Quick News List ^{1 2}</p> <p>> <i>Auto Refresh</i> → S! Quick News → Set update frequency</p>	OFF (Not update automatically)
<p>■ Automatically Update General News (Once a day) ^{1 2}</p> <p>> <i>Auto Refresh</i> → General → ON</p>	OFF (Not update automatically)
<p>■ Automatically Update Special News (Every four hours) ^{1 2}</p> <p>> <i>Auto Refresh</i> → Special → ON</p>	OFF (Not update automatically)
<p>■ Delete S! Quick News Information</p> <p>> <i>Del S! Quick News List</i> → YES → Enter Phone Password</p>	—

¹ If calls are in progress at update time, auto update does not occur until next update.

² Video Calls are rejected during auto update.

Settings Bluetooth®

From ► **Main Menu** ► Tools ► Bluetooth
 ► My Devices Settings

Setting/Operation	Default
<p>■ Set Authentication/Encryption to Send Phone Book Entries</p> <p>> <i>Set Authentications</i> → ON → ON</p>	OFF/OFF
<p>■ Enter Password when Sending All Phone Book Entries</p> <p>> <i>Session Number Setting</i> → ON</p>	OFF
<p>■ Set Duration to Search for Bluetooth® Devices</p> <p>> <i>Time-out to Search</i> → Enter duration (sec.)</p>	05 sec
<p>■ Stop Ringtone Output to Headset/Handsfree Device</p> <p>> <i>Forward Ring Tone</i> → OFF</p>	ON
<p>■ Continue Calls on Handset when Bluetooth® is Disconnected from Headset/Handsfree Device</p> <p>> <i>Disconnection Settings</i> → Continue on the Phone</p>	End the Call
<p>■ Always Make Calls from 940P even when Headset Device is Connected</p> <p>> <i>Dial from Headset</i> → Deactivate</p>	Activate
<p>■ Always Use Handsfree Device to Make/Receive Calls</p> <p>> <i>Handsfree Setting</i> → Handsfree Mode</p>	Private Mode ¹
<p>■ View Bluetooth® Properties</p> <p>> <i>Device Properties</i> ²</p>	—

- ¹ In **Private Mode**, device that makes/answers call takes priority.
² Device name, address, class and supported services appear.
 To change device name: ☒ [Edit]

Settings Messaging

Universal Settings

From ► Main Menu ► Messaging ► Settings
 ► Universal Settings

Setting/Operation	Default
■ Change Font Size* > Font Size → Small or Large	Normal
■ Set Scroll Unit in Text Entry/Preview Window > Scroll Unit → Half Screen or Whole Screen	Single Line
■ Change Message Quote Setting when Replying > Quote Message → ON (S! Mail/SMS) or OFF	ON (S! Mail)
■ Confirm Message Delivery (Available when messaging to SoftBank handset numbers) > Delivery Report → ON	OFF (Not confirm)
■ Change Anti-Spam Measures Setting > Anti-Spam Measures → Report Spam → Ⓞ [Edit] → Edit recipient address → ☒ [Finish] → YES	stop@meiwaku. softbankmobile. co.jp
■ Reset Anti-Spam Measures Setting > Anti-Spam Measures → Report Spam → ☒ [Menu] → Reset Address → ☒ [Finish] → YES	-
■ Set Auto Delete Off (For Sent/Unsent) > Auto Sent Msg Del → OFF	ON

<ul style="list-style-type: none"> ■ Set Auto Delete Off (For Incoming Mail) > <i>Auto Received Msg Del</i> → <i>ON (Read Msg Only)</i> or <i>OFF</i> 	ON (All Msg)
<ul style="list-style-type: none"> ■ Hide Incoming Mail Notification while Other Function is Active > <i>Receiving Display</i> → <i>Operation Preferred</i> 	Alarm Preferred (Show)
<ul style="list-style-type: none"> ■ Hide Outgoing Mail Display > <i>Sending Display</i> → <i>OFF</i> 	ON (Show)

* Character size in SMS or S! Mail subject field does not change. Check preview to see actual size.

S! Mail Settings

From **Main Menu** ▶ **Messaging** ▶ **Settings**
▶ **S! Mail Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set Reply-to Address > <i>Sending Options</i> → <i>Set Reply-To</i> → <i>ON</i> → Select reply-to address entry field → Select a reply-to address or enter directly → [Finish] 	OFF (Not set)
<ul style="list-style-type: none"> ■ Set Signature > <i>Sending Options</i> → <i>Set Signature</i> → Select an item (→ <i>ON</i> or <i>ON When New</i> → Select signature entry field → Enter signature → [Finish]) 	OFF (Not set)
<ul style="list-style-type: none"> ■ Forbid Compressing Attachments Automatically > <i>Sending Options</i> → <i>Image Compression</i> → <i>OFF</i> 	ON (Not compress) ¹
<ul style="list-style-type: none"> ■ Set S! Mail Download Condition (within Japan) > <i>Incoming Options</i> → <i>Home Auto Setting</i> → <i>Download by Numbers</i> or <i>Manual Retrieval</i> 	Auto Download All
<ul style="list-style-type: none"> ■ Retrieve S! Mail Manually while Abroad > <i>Incoming Options</i> → <i>Roaming Auto Setting</i> → <i>Manual Retrieval</i> 	Auto Download
<ul style="list-style-type: none"> ■ Play Attached Music Files Automatically ² > <i>Incoming Options</i> → <i>Auto Sound Play</i> → <i>ON</i> 	OFF (Not play back)

¹ JPEG files only

² When multiple sound files are attached, the first file plays.

SMS Settings

From ► **Main Menu** ► Messaging ► Settings
► SMS Settings

Setting/Operation	Default
<p>■ Change SMS Center Number*</p> <p>> <i>Message Center</i> → Enter SMS Center number</p>	+819066519300
<p>■ Set Input Character to English</p> <p>> <i>Set Input Character</i> → <i>English (160char.)</i></p>	Japanese (70char.)

* Changing Message Center number may disable SMS.

Settings Internet

Browser Display Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Set Yahoo! Keitai

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser
► Set PC Site Browser

Setting/Operation	Default
<p>■ Font Size</p> <p>> <i>Font Size</i> → <i>Large</i> or <i>Small</i></p>	Normal
<p>■ Scroll Unit</p> <p>> <i>Scroll Unit</i> → <i>Whole Screen</i> or <i>Half Screen</i></p>	Single Line
<p>■ Images Off</p> <p>> <i>Downloads</i> → <i>Display Image</i> → <i>OFF</i></p>	ON
<p>■ Sound Off</p> <p>> <i>Downloads</i> → <i>Play Sounds</i> → <i>OFF</i></p>	ON
<p>■ Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai*</p> <p>> <i>Warning Messages</i> → <i>PC Site Browser</i> (when activating) or <i>Yahoo! Keitai</i> (when switching) → <i>OFF</i></p>	ON

* PC Site Browser only

Memory Manager & Reset

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Set Yahoo! Keitai

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser
► Set PC Site Browser

Setting/Operation	Default
■ Clear Cache > <i>Memory Manager</i> → <i>Clear Cache</i> → YES	–
■ Delete Cookies > <i>Memory Manager</i> → <i>Delete Cookies</i> → YES	–
■ Delete User ID or Password Entered when Authentication is Required > <i>Memory Manager</i> → <i>Delete Certificates</i> → YES	–
■ Set Data Storage Location to microSD Card* > <i>Save Settings</i> → <i>microSD</i>	Phone

* Yahoo! Keitai Browser only

Security Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Set Yahoo! Keitai
► Security

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser
► Set PC Site Browser ► Security

Setting/Operation	Default
■ Set Auto Send Off for Manufacturer's Number (for Authentication) > <i>Manufacture Number</i> → OFF	ON (Send)
■ Forbid Sending Referrer Information > <i>Send Referrer</i> → OFF	ON (Send)
■ Select whether or Not to Allow Cookies to Be Stored on 940P > <i>Cookies</i> → OFF or <i>Ask Every Time</i>	ON (Save)
■ Select whether or Not to Run Scripts in Yahoo! Keitai ¹ > <i>Script</i> → Select an item	Ask before Connect
■ Select whether or Not to Run Scripts in PC Site Browser ² > <i>Script</i> → Select an item	ON (Run)
■ View Server Certificates Issued by Certificate Authorities > <i>Root Certificates</i> → Select an item	–

<ul style="list-style-type: none"> ■ Select whether or Not to Retain Authentication Information > <i>Certificate Retention</i> → <i>Always Keep</i> or <i>Not Keep</i> 	Keep While Browsing
<ul style="list-style-type: none"> ■ Hide Confirmation when Connecting to Secure Site > <i>Secure Prompt</i> → <i>OFF</i> 	ON

¹ Yahoo! Keitai Browser only

² PC Site Browser only

Reset

Yahoo! Keitai

From ► Main Menu ► Yahoo! ► Reset


PC Site Browser

From ► Main Menu ► Yahoo! ► PC Site Browser ► Reset

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Reset Browser Settings > <i>Restore Defaults</i> → <i>YES</i> → Enter Phone Password 	–
<ul style="list-style-type: none"> ■ Initialize Browser > <i>Initialized Browser</i> → <i>YES</i> → Enter Phone Password 	–

Settings S! Appli

From ► Main Menu ► S! Appli ► S! Appli Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Volume > <i>Volume</i> →  to adjust volume 	Level 4
<ul style="list-style-type: none"> ■ Backlight On/Off ¹ > <i>Display Backlight</i> → <i>Always ON</i> or <i>Always OFF</i> 	Follow General Setting ²
<ul style="list-style-type: none"> ■ Deactivate Vibration > <i>Vibration</i> → <i>OFF</i> 	ON (Activate)
<ul style="list-style-type: none"> ■ Update S! Appli Information on microSD Card Used in Another Handset > <i>Synchronize microSD</i> 	–

¹ Back Light does not go out completely when S! Appli is active.

² Back Light Time setting (P.18-5) applies.

Settings Osaifu-Keitai®

From ► Main Menu ► Tools ► Osaifu-Keitai ► IC Card Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ View IC Card Status > <i>IC Card Status</i> 	–
<ul style="list-style-type: none"> ■ Disable Handset Response to Commands from Reader/Writer > <i>Interface Settings</i> → Enter Phone Password → Select an item → <i>OFF</i> 	All ON

Settings **S!** GPS Navi Settings

From ► Main Menu ► Tools ► S! GPS Navi ► NAVI Settings

Setting/Operation	Default
<p>■ Select Navi Appli to Activate > <i>Select Navi Appli</i> → Select a Navi Appli</p>	—
<p>■ Save Current Map URL > <i>Map URL Settings</i> → Highlight <Not Recorded> → [Edit] → <i>URL Name</i> → Enter a name → <i>Map URL</i> → Enter a URL ("http://" or "https://") → [Finish]</p>	—
<p>■ Select Map URL > <i>Map URL Settings</i> → Select a name</p>	NAVITIME
<p>■ Edit/Delete Map URL* > <i>Map URL Settings</i> → Highlight a name → [Menu] → <i>Edit</i> or <i>Delete</i></p>	—
<p>■ Activate to Lock Positioning Function > <i>Positioning Lock</i> → Enter Phone Password → <i>ON</i></p>	OFF
<p>■ Hide Confirmation when Sending Location Information > <i>Send Location Info</i> → Enter Phone Password → <i>Send without Check</i> (Send location information without showing confirmation)</p>	Send with Check (Show confirmation every time)
<p>■ Hide Notification of Incoming Location Provision Request > <i>Notification Setting</i> → Enter Phone Password → <i>OFF</i></p>	ON

■ **Set Positioning Ringtone/Vibrator/Ringtone Duration**

> *Recv Location Request* → *Ringtone*,
Vibration Alert or *Ringtone Duration* →
 Set individual item

Ringtone:
 Pattern 2
 Vibrator Alert:
 Pattern 1
 Ringtone
 Duration:
 05 seconds

* Pre-installed NAVITIME cannot be edited or deleted.

Default Settings

Default settings vary by handset color as below.

- For operations, refer to respective setting sections.

Setting		Moonlight Purple	Pink	Champagne	Black	
Notification Light (☞P.18-10)	Incoming	Voice Call	A-Signal	B-Signal	C-Signal	D-Signal
		Video Call	A-Signal	B-Signal	C-Signal	D-Signal
		Message	A-Rhythm	B-Rhythm	C-Rhythm	D-Rhythm
	Slide Open		Slide-01	Slide-02	Slide-03	Slide-04
	Slide Close		Slide-05	Slide-06	Slide-07	Slide-08
Display Settings (☞P.18-3 to 6)	Speed Selector		Rotation-01	Rotation-04	Rotation-07	Rotation-10
	Stand-by Display		Purple (Image)	Pink (Image)	Champagne (Image)	Black (Image)
	Stand-by Clock (Pattern)		Pattern 4	Pattern 4	Pattern 1	Pattern 4
	Icon Clock		Pattern 4	Pattern 4	Pattern 1	Pattern 4
	Outgoing Image (Call/Message)		Purple	Pink	Pink	Black
	Incoming Image (Call/Message)		Purple	Pink	Pink	Black
	Menu Icons		Purple	Pink	Champagne	Original
Color Scheme		Purple	Pink	Gold	Black	

Confirming Settings

Main Menu ► Setting ► Phone Settings
► Confirm Settings

■ Confirmable Settings

- Back Light Time
 - View Blind
 - Volume
 - Shikkari Talk
 - Noise Reduction
 - Select Network
 - Speed Selector Setting
 - Motion Control Setting
- ★ appears for items changed from default settings.

Appendix

Function List	19-2
Troubleshooting.....	19-10
Warning Signs	19-12
Software Update	19-13
Updating Software Manually.....	19-13
Updating Software Automatically.....	19-13
Quick Open Menu	19-15
Key Assignments (5-touch Mode).....	19-16
Key Assignments (2-touch Mode).....	19-17
Key Assignments (NIKO-touch Mode).....	19-18
Symbol List	19-19
Character Code List	19-20
Weather Indicator List.....	19-25
Memory List.....	19-26
Specifications	19-26
Index.....	19-28
Warranty & Service.....	19-34
Warranty	19-34
After-Sales Service.....	19-34
Customer Service.....	19-35

Function List

From Main Menu, press key corresponding to a menu number for direct access (→P.1-19, P.1-20).

Example: To select **S! Mail Settings** in Messaging menu:

1 first column **9** second column **3** third column

① (Messaging) → **⑨** (Settings) → **③** (S! Mail Settings)

● To select **①**: **⑨** → **①**; To select **②**: **⑨** → **②**

● When Menu Icons are set to Basic or Customize, first column of function number is not available. Select a menu from Main Menu; then select a function number (second column in table).

Messaging		
Menu Number/Function Name		Page
1	Messaging	—
1	Incoming Mail	—
1	Received	P.13-3
2	ユーザーフォルダ 1	P.13-3
3	ユーザーフォルダ 2	P.13-3
4	ユーザーフォルダ 3	P.13-3
5	Spam Folder	P.13-17
2	Create New	P.13-4
3	Retrieve New	P.13-15
4	Drafts	P.13-15
5	Templates	—
1	Download Templates	P.13-10
6	Sent/Unsent	P.13-15
1	Sent/Unsent	P.14-3
2	ユーザーフォルダ 1	P.14-3
3	ユーザーフォルダ 2	P.14-3
4	ユーザーフォルダ 3	P.14-3

1	7	Server Mail	—
	1	Retrieve Mail List	P.13-14
	2	Retrieve All	P.13-14
	3	Delete All	P.13-15
	4	Server Mail Memory	P.13-15
	8	Create New SMS	P.13-7
	9	Settings	—
	1	Custom Mail Address	P.13-3
	2	Universal Settings	P.18-18
	3	S! Mail Settings	P.18-19
	4	SMS Settings	P.18-19
	0	Memory Status	P.13-3

Yahoo! (Yahoo! Keitai)			
Menu Number/Function Name		Page	
2	Yahoo!	—	
1	Yahoo! Keitai	—	
2	Menu List	P.15-3	
3	Bookmarks	P.14-8	
4	Saved Pages	P.14-8	
5	Enter URL	—	
	1	Direct Entry	P.14-4
	2	URL History List	P.14-4
6	History	P.14-4	

7	PC Site Browser		–	
	1	Homepage	P.14-5	
	2	Bookmarks	P.14-8	
	3	Saved Pages	P.14-8	
	4	Enter URL	P.14-5	
	5	History	P.14-5	
	6	Yahoo! Keitai	P.14-5	
	7	Set PC Site Browser	P.18-19	
2	8	Reset	P.18-21	
	8	Set Yahoo! Keitai		–
		1	Font Size	P.18-19
		2	Scroll Unit	P.18-19
		3	Downloads	P.18-19
		4	Memory Manager	P.18-20
		5	Security	P.18-20
6	Save Settings	P.18-20		
9	Reset		–	
	1	Restore Defaults	P.18-21	
	2	Initialized Browser	P.18-21	


3	S! Appli		–	
	1 S! Appli List		–	
	1	Download S! Appli	P.15-2	
	2	Osaifu-Keitai		–
		1	Lifestyle-Appli	P.16-3
2	IC Card Settings	P.16-5		
3	S! Appli Settings		–	
	1	Volume	P.18-21	
	2	Display Backlight	P.18-21	
	3	Vibration	P.18-21	
	4	Synchronize microSD	P.18-21	
4	S! Appli History		P.15-3	
5	Information		P.15-2	





S! Appli

Menu Number/Function Name


Page

 Osaifu-Keitai		
Menu Number/Function Name		Page
4	Osaifu-Keitai	–
	1 Lifestyle-Appli	P.16-3
	2 IC Card Settings	P.16-5

 Camera		
Menu Number/Function Name		Page
5	Camera	–
	1 Camera	P.6-6
	2 Video Camera	P.6-8
	3 Pictures	P.6-14
	4 Videos	P.6-14

 Entertainment			
Menu Number/Function Name		Page	
6	Entertainment	–	
	1 Mobile Widget	–	
		1 Widget Contents	P.7-3
		2 Settings	P.18-15
	3 Information	P.7-2	
	2 S! Quick News	–	
		1 S! Quick News List	P.7-4
2 Settings	P.18-16		

6	3	S! Info Ch./Weather	–
		1 What's New?	P.7-6
		2 History	P.7-6
		3 Register/Cancel	P.7-6
		4 Get Latest Contents	P.7-6
	5 Weather Indicator	P.7-7	
	4	BookSurfing	P.7-8
	5	e-Book Viewer	P.7-8

 Tools				
Menu Number/Function Name		Page		
7	Tools		–	
	1	Alarms	P.12-6	
	2	Calendar	P.12-2	
	3	Calculator	P.12-8	
	4	Notepad	P.12-8	
	5	Tasks	P.12-5	
	6	Dictionary	P.12-9	
	7	Sound Recorders		–
		1	Voice Call Data	P.2-16
		2	Video Call Data	P.2-16
		3	Answer Phone Setting	P.2-15
		4	Voice Recorder	P.12-10
	5	Voice Announce	P.12-10	
	8	Bar Code Reader		–
		1	Scan Barcodes	P.12-11
		2	Saved Data List	P.12-12
	7	9	S! GPS Navi	–
			1 Navi Appli	P.17-3
			2 Current Location	P.17-2

	3	Location Navi	P.17-3
	4	Location Logs	P.17-3
	5	NAVI Settings	P.18-22
0		Bluetooth	—
	1	Search&Paired Device	P.10-7
	2	Bluetooth OFF/Bluetooth ON	P.10-8
	3	Accept Registered	P.10-9
	4	Dialup Rgstry Standby	P.10-10
	5	Receive via Bluetooth	P.10-9
	6	My Devices Settings	P.18-17
①		Receive via Infrared	—
	1	Receive	P.10-3
	2	Receive All	P.10-4
②		microSD Backup	—
	1	Phone Book	P.9-18
	2	Calendar	P.9-18
	3	Tasks	P.9-18
	4	Incoming Mail	P.9-18
	5	Sent Messages	P.9-18
	6	Unsent Messages	P.9-18
	7	Drafts	P.9-18
	8	Memo Pad	P.9-18
	9	Bookmarks	P.9-18
③		Templates/Users Dic.	—
	1	Templates	P.3-5
	2	User's Dictionary	P.3-10
	3	Download Dictionary	P.3-10



Data Folder

Menu Number/Function Name

Page

8		Data Folder	—
1		Pictures	—
	1	Download Pictures	P.9-2
	2	Main Folder	P.9-2
	3	Camera	P.9-2
	4	My Pictograms	P.9-2
	5	Mail Art	P.9-2
	6	Pre-installed	P.9-2
	7	Original Animation	P.9-13
2		Ring Songs&Tones	—
	1	DL Ring Songs&Tones	P.9-2
	2	Main Folder	P.9-2
	3	Pre-installed	P.9-2
	4	Voice Announce	P.9-2
	5	Play List	P.9-2
3		S! Appli	—
	1	Download S! Appli	P.15-2
4		Widget	—
	1	Download Widget	P.7-3
5		Music	—
	1	Main Folder	P.9-2
	2	WMA	P.9-2
8	6	Videos	—
	1	Download Videos	P.9-3
	2	Main Folder	P.9-3
	3	Camera	P.9-3
	4	Pre-installed	P.9-3
	5	Play List	P.9-3
	6	Position Memory	P.9-6

7	PC Movies	—
	1 microSD	P.9-3
	2 Position Memory	P.9-6
8	3 Play History	P.9-3
	TV	—
	1 Image	P.5-14
9	2 Video	P.5-13
	3 Position Memory	P.9-3
	Lifestyle-Appli	—
0	1 Download	P.16-3
	Books	—
①	1 Download Books	P.9-3
	Customized Screen	—
②	1 Customized Screen	P.1-24
	2 Familiar Usability	P.1-24
③	Templates	—
	1 Download Templates	P.13-10
④	Font	—
	1 Download Font	P.9-3
	2 Main Folder	P.9-3
	3 Pre-installed	P.9-3
④	Other Documents	—
	1 Main Folder	P.9-3



Music Player

Menu Number/Function Name	Page
---------------------------	------

9	Music Player	—
	1 Player	—
1	1 All Tracks	P.8-6
	2 Artist	P.8-6
	3 Album	P.8-6
	4 Genre	P.8-6
	5 Play List	P.8-6
2	Data Manager	—
	1 Main Folder	P.8-7
	2 WMA	P.8-7

TV		
	Menu Number/Function Name	Page
✱	TV	—
1	Watch TV	P.5-5
2	Program List	P.5-7
3	Timer Watching	P.5-14
4	Timer Recording	P.5-14
5	Recording Result	P.5-15
6	TV Link	P.5-11
7	Channel List	P.5-4
8	Channel Setting	—
	1 Select Area	P.5-4
	2 Automatic	P.5-4
9	User Settings	—
	1 Display	P.18-14
	2 Video	P.18-14
	3 Display Light	P.18-14
	4 Sound	P.18-14
	5 Recording	P.18-14
	6 Data Broadcasting	P.18-14
	7 ECO Mode	P.18-14
	8 Reset Channel Setting	P.18-14
	9 Reset Storage Area	P.18-14
	0 Reset TV Settings	P.18-15
✱	Check TV Settings	P.18-15

Phone Book		
	Menu Number/Function Name	Page
	Phone Book	—
1	Phone Book	P.4-2
2	Create New Entry	P.4-3
3	Call Log	—
	1 Outgoing Call Logs	P.2-14
	2 Incoming Call Logs	P.2-14
4	Group	P.4-6
5	Account Details	P.1-30, P.4-13
6	SI Addressbook BkUp	—
	1 Start Sync	P.4-11
	2 Auto Sync Settings	P.4-12
	3 Sync Log	P.4-12
7	Memory Manager	P.4-9
8	Restrictions	P.11-10
9	Settings	—
	1 Save Settings	P.18-11
	2 Search Method	P.18-11
	3 Font Size	P.18-11
	4 Voice Dial	P.4-14
	5 Mail Group	P.13-18
	6 Forwarding Image	P.18-11
0	Memory Status	P.4-10

• Number in first column is not available for Phone Book.

 Settings		
#	Menu Number/Function Name	Page
#	Settings	–
1	Sound Settings	–
1	Ring Tones	P.18-2
2	Ringer Volume	P.18-2
3	Key Tone	P.18-2
4	Stereo/3D Sound	P.18-2
5	Earphone	P.18-2
6	Message Ring Tones	P.18-2
2	Display Settings	–
1	Internal Display	P.18-3
2	External Display	P.18-5
3	Font Size	P.18-6
4	Font	P.1-25
5	Menu Icons	P.18-4
6	Hor. Open Menu	P.18-13
7	Back Light Time	P.18-5
8	View Blind	P.1-30
9	Color	P.18-3
0	Private Menu	P.1-26
*	言語設定	P.18-3
#	Open For New	P.18-3
①	LCD AI	P.18-5
②	Disp. Call/Recv #	P.18-6
③	Describe Icons	P.1-11
3	Customized Screen	–
1	Customized Screen	P.1-24
2	Familiar Usability	P.1-24
3	Release Settings	P.1-24


#	4	Incoming Settings	–
1		Vibrator	P.18-2
2		Manner Mode Type	P.18-7
3		Answer Setting	P.18-7
4		Open-to-Ans. Call	P.18-7
5		Call Logs	P.11-8
6		Phone Book Image	P.18-7
7		Ring Time Settings	P.11-11
8		Info Notice Setting	P.18-7
9		Auto Answer	P.18-7
0		In-call Management	P.18-7
5		Phone Settings	–
1		Horizontal View	P.18-13
2		Side-keys Guard	P.11-8
3		Text Entry Method	P.18-10
4		Battery	P.18-2
5		Pause Dial	P.2-3
6		Headset Switch to Call	P.18-9
7		Voice Settings	P.18-11
8		Confirm Settings	P.18-24
9		Software Update	P.19-12
6		Date & Time	–
1		Date & Time	P.18-8
2		World Clock	P.18-8
3		Daylight Savings	P.18-8
4		Alarm Tone	P.18-8
5		Time Correction	P.18-8

#	7	Security	–
	1	Privacy Key Lock	P.11-4
	2	Personal Data Lock	P.11-4
	3	IC Card Lock	P.16-5
	4	Secret Mode	P.11-9
	5	Secret Data Only	P.11-9
	6	Key Pad Dial Lock	P.11-7
	7	Reject Unknown	P.11-11
	8	Call Setting w/o ID	P.11-11
	9	All Reset	P.11-12
	0	Reset Settings	P.11-12
	*	PIN Authentication	P.11-2
	#	Change Phone Password	P.11-2
	①	Timer Lock at Close	P.11-6
	②	Lock OFF at Open	P.11-6
③	Content Key	P.9-22	
④	Lock Message	P.11-7	
#	8	Call Settings	–
	1	Call Time/Cost	P.18-9
	2	Reset	P.18-9
	3	Set Max Cost Limit	P.18-9
	4	Voice Mail/Call Fwding	P.2-17, P.2-18
	5	Call Waiting	P.2-20
	6	Call Barring	P.2-20
	7	Missed Call Notifi.	P.2-19
	8	Prefix	P.2-3
	9	Volume	P.18-9
	0	Shikkari Talk	P.2-5
	*	Closing Clamshell	P.18-9
	#	Hold Tones	P.18-9
	①	Noise Reduction	P.18-9

#	②	Quality Alarm	P.18-9
	③	Reconnect Signal	P.18-9
	④	Emission OFF Mode	P.1-18
	⑤	Show My Number	P.2-21
	⑥	Service Numbers	P.18-9
	9	Video Call	–
	1	Incoming Video Qlty	P.18-12
	2	Select Images	P.18-12
	3	Loud Speaker	P.18-12
	4	Voice Call Auto Redial	P.18-12
	5	Remote Monitoring	P.2-8
	0	International Call	–
	1	Int'l Dial Assist	P.2-10
	2	Select Operator	P.2-11
	3	PLMN Setting	P.2-11
4	Operator Name	P.2-11	
5	Select Network	P.2-11	
#	①	Connectivity	–
	1	USB Mode	P.10-11
	2	Retrieve NW Info	P.1-16
	②	Notification Light	–
	1	Incoming	P.4-4, P.18-10
	2	Online	P.18-10
	3	Missed Call/Unread	P.18-10
	4	Clamshell Close	P.18-10
	5	Music	P.18-10
	6	Bluetooth	P.18-10
	7	IC Card	P.18-10
	8	Side Key	P.18-10
	9	Confirm Status	P.18-10

Troubleshooting

Handset does not turn on

- Was  pressed for more than one second?
- Is battery level sufficient?
- Is battery inserted properly? (↗P.1-14)



Handset functions do not work after turning power on

- Does PIN Entry window appear?
PIN Authentication is **ON**. Enter PIN (↗P.11-2).


USIM not inserted After power-off Insert USIM or Inserted USIM is unavailable to this mobile phone Please insert valid one appears when handset is turned on or operations attempted

- Is USIM Card inserted correctly? (↗P.1-3)
- Is SoftBank specified USIM Card inserted? (↗P.1-2).
- USIM Card IC chip may be dirty.
Wipe with a clean cloth, then insert USIM Card correctly.

Keypad does not respond

- Does  or  appear in Standby?
Keyguard (↗P.11-3) or Privacy Key Lock is active (↗P.11-4). Cancel it.

Side Keys do not work while handset is closed

- Does  appear?
Side-keys Guard (↗P.11-8) is **ON**.
Set to **OFF**.

Outgoing calls or Video Calls will not connect or message and Internet connections are unavailable

- Does 圏外 欠電 圏外 appear?
Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.
- Are you using handset overseas?
Set international settings (e.g. Select Operator) to use abroad (☞P.2-10).
- Does 圏外 appear?
Personal Data Lock is set (☞P.11-4). Deactivate Personal Data Lock.

Outgoing calls or Video Calls will not connect

- Is area code entered?
- Is restricting outgoing calls in Call Barring? (☞P.2-20)
- Does 欠電 appear in Standby? Total cost has reached upper limit. Set Max Cost Limit to **OFF** or execute **Reset** (☞P.18-9).

Outgoing calls will not connect or busy signal sounds

- Did you enter area code?
- Is restricting outgoing calls in Call Barring? (☞P.2-20)

Call is interrupted or disconnected

- Does 圏外 appear? Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.

"Cannot start any more functions" appears when a menu is opened.

- Maximum number of functions are active at the same time. Cancel current function and try again (☞P.1-29).

Calls cannot be made via a Phone Book entry

- Entry may be saved as Secret.
Set Secret Mode or Secret Data Only **ON** (☞P.11-9).
- Does 圏外 appear?
Personal Data Lock is set (☞P.11-4). Deactivate Personal Data Lock.

Digital TV does not work

- Is handset out of terrestrial Digital TV broadcasting service area or in a location where airwaves are weak?
Move to a location where airwaves are strong (☞P.5-3).

Customized Screen setting cannot be canceled

- Enter "6368##" in Standby → **Release Settings**
Customized Screen cannot be canceled in Standby while Simple menu is active. Deactivate Simple menu in Standby.

Osaifu-Keitai® does not work

- Does 欠電 appear?
Deactivate IC Card Lock (☞P.16-5).

Display clock is reset

- Replacing battery does not reset Display clock; however, if battery is removed for long periods, the clock may be reset. Set Date & Time (☞P.18-8) or Retrieve NW Info (☞P.1-16) again.

Battery Operating Time is greatly reduced

- Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time Estimates" (☞P.1-12) and "Battery Time" (☞P.1-13).

Cannot charge battery

- Is AC Charger (sold separately) firmly connected to handset or Desktop Holder (not included)? (☞P.1-15)
- Is AC Charger securely plugged into an outlet?
- Is battery installed in handset correctly? (☞P.1-14)
- Is handset correctly mounted in Desktop Holder?
- Make sure handset, battery, Desktop Holder and AC Charging terminals are clean.
- Battery may not charge beyond +5°C and +35°C.
- Battery may need to be replaced.





Handset/accessories feel warm

- AC Charger/Desktop Holder may warm during charging. Handset may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if handset is held against skin for long periods.

Note


- If you did not find the remedy to your problem here, please contact SoftBank Mobile Customer Center (☞P.19-34).

Warning Signs

Problem	Causes and Remedies
 appears	Handset is out-of-range. Move to a location where signal is strong.
 appears	Side-keys Guard is ON (☞P.11-8). To activate Side Keys while handset is closed, set Side-keys Guard OFF .
 or  appears	Keyguard (☞P.11-3) or Privacy Key Lock (☞P.11-4) is active. Cancel it to use handset. Answer calls even if Keyguard or Privacy Key Lock is active.
Low battery message appears and battery alarm tone sounds	Battery is low. Charge (☞P.1-15) or replace battery (☞P.1-14).

Software Update

Check for handset software updates and download as required. Choose to begin update or schedule update.

- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery beforehand. Even if  appears, low battery message may appear. In this case, charge battery until Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Do not remove battery during the update. Update will fail.
- Other functions are not available during Software Update.
- The update may take some time.


Updating Software Manually

Main Menu ► Settings ► Phone Settings
► Software Update ► Software Update

1  [YES] → Follow onscreen instructions

After download is complete, handset automatically turns off and restarts before Software Update begins.

After Software Update is complete, handset automatically turns off and restarts before information appears for successful update (This process takes approximately 60 seconds.).



Software Update
Software has been
successfully updated.

Updating Software Automatically

Main Menu ► Settings ► Phone Settings
► Software Update ► Regular Updates

1 **YES** → Follow onscreen instructions

- Select **YES** to activate Internet. Follow onscreen instructions to perform Regular Updates. For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).


Update Results

When Event Indicator appears, **Update** →

- When **Update** indicator does not appear,
Main Menu ► Settings
► Phone Settings
► Software Update
► Update Results



Scheduled Update

Follow onscreen instructions for setup. Confirmation appears at scheduled update time. Press  or wait ten seconds for update to start.

- Software Update will not start while handset is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.



Note

- If handset does not power on after Software Update, remove then re-insert battery and try again. If handset still does not power on, contact SoftBank Mobile Customer Center, Customer Assistance (☎P.19-34).
- Software Update failure may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance (☎P.19-34).
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Quick Open Menu

When **Menu Icons** is set to **Standard** or **Customize** (P.18-4), press menu numbers in Main Menu to open the following functions.

Example: To open Notepad:





In Standby, →

Menu	#
Alarm	44
Calendar	45
Calculator	85
Notepad	42
Tasks	95
Sound Recorders	55
Receive via Infrared	79
Templates/Users Dictionary	38
Pictures folder	46
Ring Songs&Tones folder	16
Phone Book Settings	26
Ring Tones	13
Ringer Volume	50
Key Tone	30
Stereo/3D Sound	64
Earphone/Speaker Settings	51
Message Ring Tones	68
Internal Display	56

Menu	#
External Display	93
Font Settings	66
Menu Icons	57
Back Light Time	70
Color Theme	86
Private Menu Settings	52
Language	15
Describe Icons	36
Vibrator	54
Manner Mode Type	20
Answer Setting	58
Ring Time Settings	90
Info Notice Setting	65
Auto Answer	94
Text Entry Method	35
Date & Time	31
Secret Mode	40
Secret Data Only	41
Call Setting w/o ID	10
Reset Settings	23
Change Phone Password	29
Call Time/Cost	61
Reset Total Duration/Cost	60
Closing Clamshell	18

Menu	#
Noise Reduction	76
Quality Alarm	75
Reconnect Signal	77
Show My Number	17
Notification Light	89

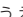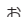Key Assignments (5-touch Mode)



Key \ Display	漢	カナ	abc	123
①	あいうえおあいうえお	アイウエオアイウエオ ¹	. / @ - :  !  ? ₁	1
②	かきくけこ	カキクケコ ²	a b c A B C 2	2
③	さしすせそ	サシスセソ ³	d e f D E F 3	3
④	たちつとっ	タチツテトツ ⁴	g h i G H I 4	4
⑤	なにぬねの	ナニヌネノ ⁵	j k l J K L 5	5
⑥	はひふへほ	ハヒフヘホ ⁶	m n o M N O 6	6
⑦	まみむめも	マミムメモ ⁷	p q r s P Q R S 7	7
⑧	やゆよゃゅょ	ヤユヨャュョ ⁸	t u v T U V 8	8
⑨	らりるれろ	ラリルレロ ⁹	w x y z W X Y Z 9	9
⑩	わをんわー	ワヲン ² ー ⁰	0	0
ⓧ	 ³	 ³	Pictograms	*
	[Press and hold] Templates			
#	、。?!・ □ (Space)	、。?!・ □ (Space)	、。?!・' - & () ¥ □ (Space)	#
	[Press and hold] Symbols ⁴			

¹ Appears when entering single-byte character.

² Appears when entering double-byte character.

³ Added to highlighted character. Press (ⓧ) to display pictographs after determining character.

⁴ In number mode, symbol list may not be displayed.

- While entering character, press  to toggle characters at cursor in reverse order.
- After entering hiragana, katakana or alphanumerics, press  to toggle upper/lower case.
- In number mode, press and hold (0) to enter "+" (not available in S! Mail text field).
- In alphanumerics mode, characters entered after an upper-case character appear in order of: upper case → lower case.

Key Assignments (2-touch Mode)

Kanji (Hiragana) Mode

<Upper Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&			
	8	や	(ゆ)	よ	*	#			■
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん	*	°	6	7	8	9	0

<Lower Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4		つ				p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	や	ゆ	よ							■
	9										
	0	わ									

Katakana Mode

<Upper Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&			
	8	ヤ	(ユ)	ヨ	*	#			■
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン	*	°	6	7	8	9	0

<Lower Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	ヤ	ユ	ヨ							■
	9										
	0	ワ ¹									

Alphanumerics Mode

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	"	\$	%	'	+	a	b	c	d	e
	2	,	.	:	:	<	f	g	h	i	j
	3	=	>	@	[]	k	l	m	n	o
	4	^	_	' ¹ 2			p	q	r	s	t
	5	}	~	~ ²			u	v	w	x	y
	6						z	?	!	-	/
	7						¥	&			
	8		()	*	#				
	9						1	2	3	4	5
	0						6	7	8	9	0

■ Toggle upper/lower case

- 1 Appears when entering double-byte character.
- 2 Appears when entering single-byte character.

Note

- A space is entered by pressing key corresponding to a blank where no character is assigned.
- In kanji (hiragana) or katakana mode, "" or "" is entered by pressing (✳) after entering characters. Press (✳) once for "", twice for "".
- In number mode, press and hold (0) to enter "+" (not available in S! Mail text field).

Key Assignments (NIKO-touch Mode)







Kanji (Hiragana) Mode

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	.	-	@	_	1
	2	か	き	く	け	こ	a	b	c	2	
	3	さ	し	す	せ	そ	d	e	f	3	
	4	た	ち	つ	て	と	っ	g	h	i	4
	5	な	に	ぬ	ね	の	j	k	l	5	
	6	は	ひ	ふ	へ	ほ	m	n	o	6	
	7	ま	み	む	め	も	p	q	r	s	7
	8	や	ゆ	よ	ゃ	ゅ	ょ	t	u	v	8
	9	ら	り	る	れ	ろ	w	x	y	z	9
	0	わ	を	ん	.	。	-	.	!	?	0

Katakana Mode

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	.	-	@	_	1
	2	カ	キ	ク	ケ	コ	a	b	c	2	
	3	サ	シ	ス	セ	ソ	d	e	f	3	
	4	タ	チ	ツ	テ	ト	ッ	g	h	i	4
	5	ナ	ニ	ヌ	ネ	ノ	j	k	l	5	
	6	ハ	ヒ	フ	ヘ	ホ	m	n	o	6	
	7	マ	ミ	ム	メ	モ	p	q	r	s	7
	8	ヤ	ユ	ヨ	ャ	ュ	ョ	t	u	v	8
	9	ラ	リ	ル	レ	ロ	w	x	y	z	9
	0	ワ	ヲ	ン	.	。	-	.	!	?	0

Note

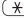- Press  [Mode] to toggle kanji (hiragana) and single-byte number modes.
- To switch to katakana mode: In kanji (hiragana) mode,  [Menu] → **1 byte character**
- To toggle lower/upper case: Enter a character → 
- A space is entered by pressing key corresponding to a blank where no character is assigned.
- Press  once for "°", twice for "°°". In kanji (hiragana) mode, enter characters before pressing .
- In number mode, press and hold  to enter "+" (not available in S! Mail text field).

