

SoftBank 941P

User Guide



SoftBank

# Introduction

**Thank you for purchasing SoftBank 941P.**

- For proper handset use, read User Guide (this guide).
- Accessible services may vary by service area, subscription, etc.

**SoftBank 941P is compatible with both 3G and GSM network technologies.**

## Note

- Unauthorized copying of any part of this guide is prohibited.
- Guide content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this guide. Please contact SoftBank Mobile Customer Center, General Information (☎P.19-34) about unclear or missing information.

## Content Search

|                              |                    |                     |
|------------------------------|--------------------|---------------------|
| Function/Service Name Search | Index              | ☞ P.19-27           |
|                              | Contents           | ☞ P.vi              |
| Objective Search             | Objective Search   | ☞ P.ii              |
|                              | Index              | ☞ P.19-27           |
| Function Search              | Overview           | ☞ P.iv              |
|                              | Contents           | ☞ P.vi              |
| Using Your Handset           | Function List      | ☞ P.19-2            |
|                              | Display            | ☞ P.1-10            |
| Guide Organization           | Contents           | ☞ P.vi              |
|                              | Section Contents   | ☞ Chapter Top Pages |
| Solving Problems             | Troubleshooting    | ☞ P.19-10           |
|                              | Warranty & Service | ☞ P.19-33           |

|                  |           |
|------------------|-----------|
| Getting Started  | <b>1</b>  |
| Call             | <b>2</b>  |
| Text Entry       | <b>3</b>  |
| Phone Book       | <b>4</b>  |
| Digital TV       | <b>5</b>  |
| Camera           | <b>6</b>  |
| Entertainment    | <b>7</b>  |
| Music Player     | <b>8</b>  |
| Managing Files   | <b>9</b>  |
| Connectivity     | <b>10</b> |
| Handset Security | <b>11</b> |
| Tools            | <b>12</b> |
| Messaging        | <b>13</b> |
| Internet         | <b>14</b> |
| S! Appli         | <b>15</b> |
| Osaifu-Keitai®   | <b>16</b> |
| S! GPS Navi      | <b>17</b> |
| Settings         | <b>18</b> |
| Appendix         | <b>19</b> |

## Confirming & Using My Number & My Mail Address

### My Phone Number

Confirm your phone number on 941P in Standby without navigating menus.

**My Number:**  P.1-30

### My Mail Address


Customized address may reduce spam.

**Customizing Handset Address:**  
 P.13-3

## Customizing 941P Settings

### Setting Ringtones

Set Chaku-Uta Full® files as ringtones.

**Ringtones:**  P.18-2

### Downloading Tunes & Tones

Download music (Chaku-Uta Full®) files from mobile websites.

**Downloading Music:**  P.8-3

## Mastering Basics



### Learning Your Handset

Learn key assignments, and navigate menus to select & execute functions.

**Handset Menus:**  P.1-18  
**Parts & Functions:**  P.1-4

### Making Mobile Calls

Use voice telephony or enjoy video telephony with compatible mobiles.

 
**Voice Calls:**  P.2-2  
**Video Calls:**  P.2-6

## Fun Stuff

### Watching One Seg Digital TV

Enjoy One Seg digital TV. Set channels in advance to view/record shows.

**Digital TV:**  P.5-1



### Music Player

Download music files from websites via Music Player directly.

**Music Player:**  P.8-1



### **Sending Your Contact Info**

Save mail address and other details; send to compatible devices wirelessly.

**Account Details:** 📄 P.4-13

### **Messaging Multiple Recipients**

Enter multiple mail addresses/numbers to send a message to all at one time.

**Sending Messages:** 📄 P.13-4

**Add/Edit/Delete Address:** 📄 P.13-8

### **Sending Files Wirelessly**

Send files or your own mail address saved in Account Details via Infrared/IC transmission to other compatible devices.

**Infrared/IC Transmission:** 📄 P.4-13

### **Customizing Standby Display**

Add wallpaper, set clock size/position or set calendar to appear in Standby.

**Wallpaper:** 📄 P.9-7

**Display:** 📄 P.18-3, P.18-5

### **Customizing User Interface**

Download applications that mimic the interface design of previously used handsets.

**Familiar Usability:** 📄 P.1-24

### **Using Shortcuts to Functions**

Access shortcuts to frequently used functions in Standby.

**Shortcuts:** 📄 P.1-22

### **Mastering Text Entry Methods**

Enter text for Messaging functions or to add/edit Phone Book entry items.

**Text Entry:** 📄 P.3-1

### **Using Messaging Services**

Send short or long text messages. Attach image/sound files, etc. to S! Mail.

**Messaging:** 📄 P.13-1

**Graphic Mail:** 📄 P.13-5

### **Accessing the Mobile Internet**

Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files.

**Yahoo! Keitai:** 📄 P.14-2

### **Camera & Video Camera**

Capture still images or record videos. Use Camera even when handset is closed.

**Camera:** 📄 P.6-1

### **Playing Games**

Download and install S! Appli Games via Yahoo! Keitai.



**S! Appli:** 📄 P.15-1

### **Getting News (Japanese)**

Set up S! Quick News to view a variety of information contents.

**S! Quick News:** 📄 P.7-4

**941P Features**

**Horizontal Open Position**

Enjoy Digital TV, Messaging, S! Appli, Camera, etc. in wide horizontal screen. Key labels are adjusted horizontally.

👉 P.1-7

**External Display**

View information and capture images on External Display when handset is closed.

👉 P.1-23

**SoftBank Mobile Features**

**Yahoo! Keitai**

Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files.

👉 P.14-2

**Graphic Mail**

Create HTML messages; select font color/size, background; insert images.

👉 P.13-5

**Useful Features**

**Phone Book/  
S! Addressbook Back-up**

Save Phone Book entries; back up handset entries on Server, etc.

👉 P.4-1, P.4-10

**Camera/Video**

Capture still images or record videos with approx. 8.1 mega pixel camera. Set Image stabilizer/Face detection for high-quality pictures and videos.

👉 P.6-6, P.6-8

**PC-related Functions**

**PC Site Browser**

View PC-based websites on 941P.

👉 P.14-5

**Data Back-up/Management**

Transfer data between handset and PC for back-up and editing.

👉 P.10-11

### Digital TV

Enjoy One Seg digital TV programs and video in wide horizontal screen.

📖 P.5-1

### Simple Menu

Use simplified menus limiting to only basic functions.

📖 P.1-26

### Download Dictionary

Download specialized dictionaries. Dictionary words appear in character conversion suggestions.

📖 P.3-10

### S! GPS Navi

Check your position on map, and navigate to a destination.

📖 P.17-1

### S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive update information. Set Weather Indicator to check weather forecast in Standby.

📖 P.7-6

### Mobile Widget (Japanese)

Download and paste widgets to Standby for quick access to information and various tools.

📖 P.7-2

### Calendar & Alarm

Add events by time/date and set Event Alarms to help manage your schedule.

📖 P.12-2, P.12-6

### Music Player

Play 941P/microSD Card music files.

📖 P.8-1

### Voice Recorder

Record your voice to set as ringtone, etc.

📖 P.12-10

### microSD Mode

Access data on microSD Card from a PC by connecting handset to PC via USB cable (not included).

📖 P.9-21

### Bluetooth®

Connect wirelessly to a Bluetooth®-compatible speaker to enjoy TV in dynamic sound.

📖 P.10-6

### Osai-fu-Keitai®

Use handset as an electronic cash card, reward card or membership card.

📖 P.16-1

# Contents

|                                      |       |
|--------------------------------------|-------|
| Contents .....                       | vi    |
| Package Contents .....               | viii  |
| Using This Guide .....               | viii  |
| Safety Precautions .....             | xii   |
| Handling Precautions .....           | xviii |
| Copyrights and Others .....          | xxii  |
| Specific Absorption Rate (SAR) ..... | xxvi  |

## 1-1. Getting Started

|  |      |
|--|------|
| USIM Card .....                        | 1-2  |
| Parts & Functions .....                | 1-4  |
| About Battery .....                    | 1-13 |
| Handset Power On/Off .....             | 1-17 |
| Manner Mode .....                      | 1-18 |
| Handset Menus .....                    | 1-19 |
| Standby Options & Event Indicators ... | 1-22 |
| Customizing User Interface .....       | 1-25 |
| Private Menu .....                     | 1-26 |
| Simple Menu .....                      | 1-27 |
| Passwords .....                        | 1-29 |
| Multi Task .....                       | 1-30 |
| View Blind .....                       | 1-31 |
| My Number .....                        | 1-31 |

## 2-1. Call

|                                    |      |
|------------------------------------|------|
| Making/Answering Voice Calls ..... | 2-2  |
| Making/Answering Video Calls ..... | 2-6  |
| International Calls .....          | 2-9  |
| Engaged Call Functions .....       | 2-12 |

|                         |      |
|-------------------------|------|
| Call Log .....          | 2-13 |
| Answer Phone .....      | 2-15 |
| Optional Services ..... | 2-17 |

## 3-1. Text Entry

|                                     |      |
|-------------------------------------|------|
| Text Entry .....                    | 3-2  |
| Entering Text .....                 | 3-3  |
| Conversion Methods (Japanese) ..... | 3-6  |
| Editing Text .....                  | 3-9  |
| User's Dictionary .....             | 3-10 |
| Download Dictionary .....           | 3-10 |

## 4-1. Phone Book

|                                  |      |
|----------------------------------|------|
| Overview .....                   | 4-2  |
| Saving to Phone Book .....       | 4-3  |
| Searching/Using Phone Book ..... | 4-6  |
| Managing Phone Book .....        | 4-9  |
| S! Addressbook Back-up .....     | 4-10 |
| Account Details .....            | 4-13 |
| Voice Dial .....                 | 4-14 |

## 5-1. Digital TV

|                                  |      |
|----------------------------------|------|
| Basics .....                     | 5-2  |
| Initial Setup .....              | 5-4  |
| Watching TV .....                | 5-5  |
| TV Links (Japanese) .....        | 5-11 |
| Recording/Playing Programs ..... | 5-12 |

## 6-1. Camera

|                           |     |
|---------------------------|-----|
| Before Using Camera ..... | 6-2 |
| Pictures/Videos .....     | 6-6 |

|                                    |      |
|------------------------------------|------|
| Focus Functions (Outside Camera) . | 6-12 |
| Viewing Saved Images .....         | 6-13 |

## 7-1. Entertainment

|  |     |
|--|-----|
| Mobile Widget (Japanese) .....                     | 7-2 |
| S! Quick News (Japanese) .....                     | 7-4 |
| S! Information Channel/Weather<br>(Japanese) ..... | 7-6 |
| E-Books (Japanese) .....                           | 7-8 |

## 8-1. Music Player

|                          |     |
|--------------------------|-----|
| Overview .....           | 8-2 |
| Saving Music .....       | 8-2 |
| Using Music Player ..... | 8-5 |

## 9-1. Managing Files

|                                  |      |
|----------------------------------|------|
| Data Folder .....                | 9-2  |
| Opening Files .....              | 9-4  |
| Using/Editing Still Images ..... | 9-12 |
| Managing Folders/Files .....     | 9-14 |
| microSD Card .....               | 9-16 |

## 10-1. Connectivity

|   |       |
|---|-------|
| Infrared .....                                | 10-2  |
| IC Transmission .....                         | 10-4  |
| Bluetooth® .....                              | 10-6  |
| SoftBank Utility Software<br>(Japanese) ..... | 10-11 |
| USB (Japanese) .....                          | 10-11 |
| AV Output .....                               | 10-13 |



## 11-1. Handset Security

|                                  |       |
|----------------------------------|-------|
| Changing Phone Password .....    | 11-2  |
| Security Functions .....         | 11-2  |
| Restricting Calls/Messages ..... | 11-8  |
| Reset.....                       | 11-12 |

## 12-1. Tools

|                             |       |
|-----------------------------|-------|
| Calendar .....              | 12-2  |
| Tasks .....                 | 12-5  |
| Alarms .....                | 12-6  |
| Calculator .....            | 12-8  |
| Notepad.....                | 12-8  |
| Dictionary (Japanese) ..... | 12-9  |
| Sound Recorders.....        | 12-10 |
| Bar Code Reader.....        | 12-11 |

## 13-1. Messaging

|                                   |       |
|-----------------------------------|-------|
| Basics .....                      | 13-2  |
| Sending S! Mail & SMS.....        | 13-4  |
| Receiving & Viewing Messages .... | 13-10 |
| Organizing/Using Messages .....   | 13-15 |

## 14-1. Internet

|                             |       |
|-----------------------------|-------|
| Getting Started .....       | 14-2  |
| Using Yahoo! Keitai .....   | 14-3  |
| Using PC Site Browser ..... | 14-5  |
| Basic Operations.....       | 14-6  |
| Using Information .....     | 14-8  |
| Option Menu Items.....      | 14-13 |

## 15-1. S! Appli

|                             |      |
|-----------------------------|------|
| Before Using S! Appli ..... | 15-2 |
| Using S! Appli.....         | 15-3 |

## 16-1. Osaifu-Keitai®

|                              |      |
|------------------------------|------|
| Basics.....                  | 16-2 |
| Using Osaifu-Keitai® .....   | 16-4 |
| IC Card Lock Functions ..... | 16-5 |

## 17-1. S! GPS Navi

|                        |      |
|------------------------|------|
| About S! GPS Navi..... | 17-2 |
| Using S! GPS Navi..... | 17-2 |

## 18-1. Settings

|                                |       |
|--------------------------------|-------|
| Sound & Vibration .....        | 18-2  |
| Display.....                   | 18-3  |
| Manner Mode .....              | 18-7  |
| Incoming Settings.....         | 18-7  |
| Date & Time .....              | 18-8  |
| Call Settings .....            | 18-9  |
| Notification Light .....       | 18-10 |
| Text Entry.....                | 18-10 |
| Phone Book .....               | 18-11 |
| Voice Dial.....                | 18-11 |
| Video Call .....               | 18-12 |
| Horizontal Open Position ..... | 18-13 |
| Digital TV .....               | 18-14 |
| Mobile Widget (Japanese) ..... | 18-15 |
| S! Quick News (Japanese) ..... | 18-16 |
| Bluetooth® .....               | 18-17 |

 
|                            |       |
|----------------------------|-------|
| Messaging .....            | 18-18 |
| Internet.....              | 18-19 |
| S! Appli .....             | 18-21 |
| Osaifu-Keitai® .....       | 18-21 |
| S! GPS Navi Settings ..... | 18-22 |
| Default Settings .....     | 18-23 |
| Confirming Settings.....   | 18-24 |

## 19-1. Appendix


|  |       |
|--|-------|
| Function List .....                    | 19-2  |
| Troubleshooting.....                   | 19-10 |
| Software Update .....                  | 19-12 |
| Quick Open Menu .....                  | 19-14 |
| Key Assignments<br>(5-touch Mode)..... | 19-15 |
| (2-touch Mode).....                    | 19-16 |
| (NIKO-touch Mode).....                 | 19-17 |
| Symbol List .....                      | 19-18 |
| Character Code List .....              | 19-19 |
| Weather Indicator List.....            | 19-24 |
| Memory List.....                       | 19-25 |
| Specifications .....                   | 19-26 |
| Index.....                             | 19-27 |
| Warranty & Service.....                | 19-33 |
| Customer Service.....                  | 19-34 |

## Package Contents

### □ Handset (941P)

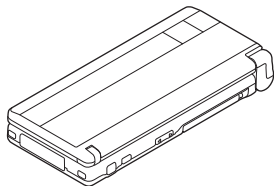

### □ Battery (PMBAS1)

 

### □ Starter Guide

#### Note

- Use SoftBank specified AC Charger (sold separately) to charge battery.
- For more information about AC Charger and accessories, please contact SoftBank Mobile Customer Center, General Information (☎P.19-34).
- Optional battery is available for separate purchase.
- 941P accepts microSD Card (not included). Purchase microSD Card to use related functions (☎P.9-16).

## Using This Guide

### Screenshots

 
#### Before reading this guide, make a note of the following:

- In this guide, SoftBank 941P User Guide, SoftBank 941P is abbreviated as 941P.
- "microSD Card" and "microSDHC Card" are referred to as "microSD Card" in this guide.
- Handset operations and screenshots are based on defaults for handset color **Pink** (☎P.18-23).
- Handset operations and screenshots are based on Normal Position.
- Sample screenshots, etc. are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.
- Key icons use simplified labels.
- Most operation descriptions begin in Standby.
- Pressing a key for more than one second is described as "Press and hold."


## Guide Symbols

Press the corresponding key to execute the function or operation indicated at the bottom of Display.

Example  
(Normal Position):

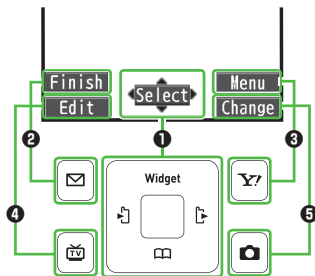

Example  
(Horizontal Open Position):

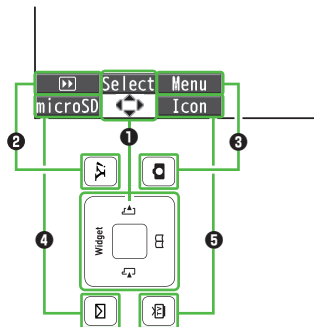 


## Multi Selector Operations (1)

| Operations               | Softkey Label*  |                          |
|--------------------------|-----------------|--------------------------|
|                          | Normal Position | Horizontal Open Position |
| Press  to select an item | ◀ ▶<br>▲ ▼      | ◀ ▶<br>▲ ▼               |
| Press                    | Select          |                          |

\* Softkey labels vary by menu.

## Multi Selector (1)

 Use Multi Selector to select items, navigate menus, etc. In this guide, Multi Selector operations are indicated as shown below.

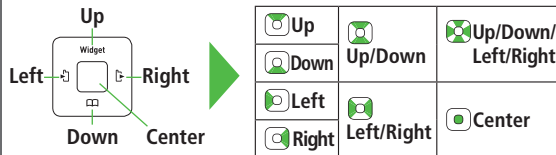

## Softkeys (2 3 4 5)

In this guide, Softkey operations are indicated as shown below.

Example 2 3: [Finish], [Menu]

- [Finish] and [Menu] are Softkey label examples; Softkey labels vary by menu.
- 2 differs between Normal Position and Horizontal Open Position. This guide uses for operation descriptions.

## Japanese Functions & Services

When "(Japanese)" appears in a title, Japanese ability is required to use full range of the function or service.

 
### Operation Descriptions

- Following are examples of operation descriptions. Please note, actual operations may differ.

### Basic Operations

Operations are expressed as shown here.

Example:

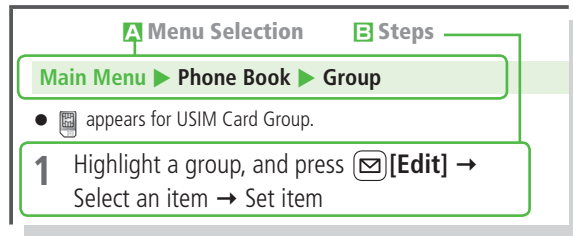

#### A Menu Selection

- 1 Press in Standby to open Main Menu.
- 2 Use to highlight **Phone Book**; then press [Select].
- 3 Use to highlight **Group**; then press [Select].

#### B Steps

- 1 Use to highlight a group; then press [Edit].
- 2 Use to highlight an item; then press [Select].
- 3 Set respective items.

## Advanced Operations

For advanced features and settings, go to pages indicated under Tip.

Example:

**Tip**

- Operations Available during a Voice Call (☞P.2-12)
- Making Calls from Call Log (☞P.2-14)
- Saving Entered Numbers to Phone Book (☞P.4-5)

**Settings** ● Set Handset Response when Closed during Call (☞P.18-9)

**Settings** Refer to Chapter 18 "Settings."

## Abbreviated Descriptions

For advanced settings (Chapter 18), initial operations may be abbreviated or omitted.

Example:

### A Abbreviated Steps

Initial steps are abbreviated.

From ► Main Menu ► Tools ► Calendar

### ■ Functions Available in Calendar Window

> Highlight a date → [F7][Menu] → Select an item (See below)

| Item                       | Operation/Description   |
|----------------------------|---|
| New                        | Create a new entry (↵P.12-2, P.12-3)                            |
| Weekly display/<br>1 Month | Toggle Monthly/Weekly view                                      |
| Icon display               | Entries in category of selected icon appear<br>> Select an icon |

### E Steps

Follow these steps after Abbreviated Steps.

### ■ Use Other Graphic Mail Settings

In S! Mail text entry window, [F7] → Select an arrange item

### C Omitted Steps

Initial steps are omitted. Start operations from specified window.

## Safety Precautions

- Before use, read these safety precautions carefully and use your handset properly. Keep this guide in a safe place for future reference.
- These safety precautions contain information intended to prevent bodily injury to the user and to surrounding people, as well as damage to property, and must be observed at all times.
- SoftBank is not liable for any damages resulting from use of this product.
- These symbols indicate exposure levels to bodily harm from failure to observe cautions or improper usage.  
Make sure to understand these symbols and precautions before reading this guide.

|  |                |   |
|--|----------------|---|
|  | <b>Danger</b>  | Great risk of death or serious injury from improper use |
|  | <b>Warning</b> | Risk of death or serious injury from improper use       |
|  | <b>Caution</b> | Risk of injury or damage to property from improper use  |

- **Symbol Explanations**  
Make sure to understand these symbols and precautions before reading this guide.

|  |                               |  |                                |
|--|-------------------------------|--|--------------------------------|
|  | <b>Prohibited Action</b>      |  | <b>Avoid Moisture</b>          |
|  | <b>Disassembly Prohibited</b> |  | <b>Always Dry Hands First</b>  |
|  | <b>Compulsory Action</b>      |  | <b>Disconnect Power Source</b> |

## Handset, Battery, USIM Card, Charger (sold separately) & microSD Card (not included)



### Danger



**Do not use or leave handset, battery or charger in locations subject to high temperature, such as near an open flame/heater, in sunlight or inside a car on an extremely hot day.**

Battery may leak, overheat, explode, catch fire, or deform handset and cause damage. Part of the casing may also become hot and cause burns.



**Do not use excessive force to attach battery or connect charger to handset. Battery or connector may be the wrong way around.**

Battery may leak, overheat, explode or catch fire.



**Do not disassemble, modify or solder handset.**

May cause accidents such as fire, bodily injury, electric shock or equipment malfunction. Battery may leak, overheat, explode or catch fire. Modifying handset is a violation of Radio Law and subject to prosecution.



**Do not get handset, battery and charger wet.**

If handset, battery or charger is left wet or battery is charged after exposure to liquids such as water or pet urine, overheating, electric shock, fire, injury or malfunction may occur. Be mindful of location when using handset, battery and charger. Handle with care.



**Use specified battery, charger (sold separately) and holder (not included).**

Battery may leak, overheat, explode or catch fire, and charger may overheat, catch fire or cause malfunction.



## Warning



**Do not place handset, battery or charger inside cooking appliances, such as microwave ovens or high-pressure containers, or on IH cooking heaters.**

Battery may leak, overheat, explode or catch fire, and handset and charger may overheat, emit smoke, catch fire or cause malfunction.



**Do not drop, throw or otherwise subject to strong force or impacts.**

Battery may leak, overheat, explode, catch fire, or cause electric shock or damage to handset.



**Do not allow liquids (water, pet urine, etc.) or conductive objects (pencil leads, metal pieces, necklaces, hair pins, etc.) to contact charger terminals, external port terminals or microSD Card slot.**

May cause fire or malfunction triggered by short-circuit.



**Keep handset off and charger disconnected near propane gas, in filling stations or places where flammable gas is generated.**

Handset use in such areas may lead to fire. Be sure to turn off handset before using Osaifu-Keitai®-compatible devices within filling stations (When IC Card Lock is set, turn off handset after unlocking setting.).



**If handset, battery or charger emits an unusual sound, smoke or odor, perform following steps:**

1. Unplug charger from outlet.
  2. Turn off handset.
  3. Remove battery (Take care to avoid burns or injuries.).
- May cause fire or electric shock.



## Caution



**Do not place handset, battery or charger on an unstable surface.**

May fall, causing injury or malfunction. Take extra precautions while vibration alert is active or during charging.



**Keep handset out of the reach of young children.**

May result in accidental ingestion or bodily injury.



**If for use by child, guardian should teach proper handling and ensure handset is used as directed.**

May result in bodily injury.

## Battery



## Danger

See battery label to confirm battery type.

| Label     | Battery Type |
|-----------|--------------|
| Li-ion 00 | Lithium-ion  |



**Do not throw battery into fire.**

Battery may leak, explode or catch fire.



**Do not pierce battery with a nail or other sharp object, hit it with a hammer, step on it, or subject it to strong shocks.**

Battery may leak, overheat, explode or catch fire.



**Do not touch terminals with metallic objects or carry/store battery with conductive objects (pencil leads, metal pieces, necklaces, hair pins, etc.).**

Battery may leak, overheat, explode or catch fire.



**If battery fluid gets into eyes, do not rub; flush with clean water and see a doctor immediately.**

Failure to do so may cause blindness.



### Warning



**If battery fluid comes into contact with your skin or clothing, stop using handset immediately and rinse it off with clean water.**

Battery fluid is harmful to your skin.



**If battery does not charge after specified time, stop charging.**

Battery may leak, overheat, explode or catch fire.



**If battery emits an unusual odor, overheats, discolors or deforms, immediately remove battery and move it away as far as possible from any flame or fire. Take care to avoid burns or injuries.**

Battery may leak, overheat, explode or catch fire.



### Caution



**Do not dispose of battery with ordinary refuse.**

Place tape over the terminals to insulate battery, and take it to a SoftBank retailer or institution that handles used batteries in your area. Comply with local waste disposal regulations for recycling.

## Handset



### Warning



**Do not use handset while driving a vehicle.**

Doing so may interfere with safe driving and cause an accident. Stop your vehicle to park in a safe place before using handset. Drivers using handsets while driving are subject to prosecution.



**Do not aim the infrared port at eyes when using infrared communication.**

Doing so may affect eyes.



**Do not point flash/photo light directly at someone's eyes. Do not look directly at flash/photo light while light is on.**

May damage eyesight or cause accidents due to momentary sight loss or surprise. Do not take pictures of infants at close range.



**Turn off handset near high-precision electronic devices or devices using weak electronic signals.**

Handset may cause these devices to malfunction.

\*Electronic devices that may be affected: Hearing aids, implantable cardiac pacemakers, implantable cardioverter defibrillators, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices.



**Turn off handset aboard aircraft.**

Handset signal may interfere with aircraft operation.

When in-flight handset use is permitted, follow airline instructions for proper use.



**If you have a weak heart, take extra precautions when setting functions such as Vibration or Ringer Volume for incoming transmissions.**

May affect heart.





**In a thunderstorm, immediately turn off handset and seek shelter.**

There is a risk of being struck by lightning and suffering electric shock.



**Caution**



**If handset affects car electronics, stop use.**

Handset use may affect electronics in some models. In this case, stop use; could impede safe driving.



**Do not place a magnetic card near or in handset.**

The stored magnetic data in cash cards, credit cards, telephone cards and floppy disks, etc. may be erased.



**Do not swing handset by its strap, etc.**

Handset may strike you or others, or strap may be broken resulting in injury or damage to handset or other property.



**Do not place your ear too close to the speaker while ringer sounds or sound files play.**

May impair hearing.



**Do not use One-push Open button to open handset near your or another person's face.**

Handset may cause accident and injury.



**Do not use handset if catch (for Horizontal Open Position) remains protruding.**

May cause injury.



**Handset may become hot while used in a hot environment.**

Avoid prolonged skin contact that may result in burns.



**Avoid closing handset on fingers or objects when opening it.**

May result in injury or damage to display.



**Watch TV with adequate lighting and distance from Display.**

May damage eyesight.



**Do not turn up the volume unnecessarily high when using earphones.**

Using earphones with volume turned up for an extended period may impair hearing or injure ears.



**If skin abnormality occurs, immediately stop use and seek medical treatment.**

Handset contains metals. Handset use may cause itching, rashes, eczema or other symptoms depending on the user's physical condition.

| Parts   |   | Materials/Surface Finish                              |
|---|---|---|
| Outer case  | Internal Display side,<br>External Display side,<br>Battery side, Keypad side,<br>Battery cover | ABS resin/<br>Acrylic UV cured coating                |
|   | External Display<br>periphery   | PC+ABS resin/<br>Acrylic UV cured coating             |
| Side Keys, MULTI Key  |   | ABS resin/<br>Acrylic UV cured coating                |
| Ornamental parts of External Display                                      |   | ABS resin/Evaporated tin,<br>Acrylic UV cured coating |
| Internal Display panel,<br>External Display panel,<br>Outside Camera lens |   | Acrylic resin/Hard coating                            |
| Outside Camera panel  |   | PET resin   |
| Keypad  |   | Acrylic urethane resin<br>(Panel: PET resin)          |

| Parts   |            | Materials/Surface Finish                                      |
|---|------------|---|
| Shutter Key   |            | PC resin/<br>Evaporated aluminum/<br>Acrylic UV cured coating |
| One-push Open Button                                    |            | PC resin/<br>Acrylic UV cured coating                         |
| Metal part of One-push Open Button                      |            | Aluminium/Alumite treatment                                   |
| External Port cover,<br>microSD Card Slot cover         |            | PC resin, Elastomer resin/<br>Acrylic UV cured coating        |
| Hinge on Display side                                   |            | PA resin/<br>Acrylic UV cured coating                         |
| Hook for Horizontal Open Position                       |            | Stainless steel/<br>Chrome plating on nickel<br>plating       |
| Charging Terminals                                      |            | Phosphor bronze/<br>Gold plating on nickel plating            |
| Stop pads, Screw caps on keypad side                    |            | Acrylic urethane resin  |
| Horizontal Open Lever                                   |            | Polyacetal resin  |
| Charging Indicator/Notification Light,<br>Infrared Port |            | Acrylic resin   |
| Screws (Battery compartment)                            |            | Aluminium killed steel/<br>Nickel plating                     |
| Battery compartment                                     |            | Glass fiber reinforced epoxy<br>board (label: PET resin)      |
| Battery compartment (Sides)                             |            | PC+ASA resin/Nickel plating<br>on copper plating              |
| Battery<br>terminals                                    | Resin part | PPS resin   |
|   | Metal part | Beryllium copper/<br>Gold plating on nickel plating           |

| Parts   |           | Materials/Surface Finish  |
|---------|-----------|---|
| Battery | Battery   | PC resin (label: PET resin)   |
|         | Terminals | Glass fiber reinforced epoxy board/<br>Gold plating on nickel plating |

## Charger (sold separately)



### Warning



**Do not cover or wrap charger during charging.**

May cause overheating, fire or malfunction.



**Always use the specified power supply/voltage.**

Using incorrect voltage may cause fire or malfunction.

AC Charger: AC100V-240V (household AC outlet only)

In-Car Charger: DC12V, 24V (vehicles with a negative earth only)



**Use In-Car Charger in vehicles with a negative (-) earth.**

**Do not use In-Car Charger if vehicle has a positive (+) earth.**

May cause fire.



**Do not use charger in thunderstorms.**

There is a risk of suffering electric shock.



**Do not handle charger with wet hands.**

May cause electric shock or malfunction.



**If In-Car Charger fuse blows, always replace it with specified fuse.**

Using the incorrect fuse may cause fire or malfunction. Refer to the respective manuals for information on the correct fuse specifications.



**If dust accumulates on plug, unplug charger and wipe with a dry cloth.**

May cause fire.



**When plugging charger into outlet, keep conductive materials (pencil lead, metal parts, necklaces, hair pins, etc.) away from Desktop Holder terminals or charger plug/terminals and plug charger firmly into outlet.**  
May cause electric shock, short-circuit or fire.



**Unplug AC Charger during periods of disuse.**  
May cause electric shock, fire or malfunction.



**If liquid such as water or pet urine get into charger, unplug it immediately.**  
May cause electric shock, smoke emission or fire.



### Caution



**Pull charger (not cord) to unplug charger.**  
Pulling on the cord may damage the cord and cause electric shock or fire.



**Always unplug charger before cleaning it.**  
May result in electric shock.

## Near Electronic Medical Equipment



### Warning

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).



**If you use an implantable cardiac pacemaker or cardioverter defibrillator, keep handset more than 22 cm away from the implant at all times.**  
Handset radio waves may affect implantable cardiac pacemaker or cardioverter defibrillator operations.



**Persons using electronic medical equipment outside medical facilities should consult the vendor about possible radio wave effects.**  
Handset radio waves may affect electronic medical equipment operations.



**Observe the following in medical facilities. Handset radio waves may affect electronic medical equipment.**

- Do not take handset into operating rooms, Intensive Care Units or Coronary Care Units.
- Turn off handset inside hospital wards.
- Turn off handset even outside hospital wards (in hospital lobbies, etc.); electronic medical equipment may be in use nearby.
- Where a medical facility has specific instructions prohibiting the carrying and use of mobile phones, observe those instructions strictly.



**Turn off handset in crowded places such as rush hour trains; implantable cardiac pacemakers or cardioverter defibrillators may be in use nearby.**  
Handset radio waves may affect implantable cardiac pacemaker or cardioverter defibrillator operations.

# Handling Precautions

## General Notes

- SoftBank is not liable for damages from accidental loss/alteration/repair of handset/microSD Card information (Phone Book entries, image/sound files, etc.). Back-up important information.
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- Read microSD Card manual beforehand for proper use.
- **Beware of eavesdropping.**  
Digital signals reduce interception, however transmissions may be overheard. Deliberate/accidental interception of communications constitutes eavesdropping.  
"eavesdropping" means radio communication is received by another receiver deliberately or accidentally.
- **Be cautious of unsafe websites. Take extra precautions especially when posting personal information on websites.**

## Electromagnetic Waves

- For body worn operation, this mobile phone has been tested and meets RF exposure guidelines when used with an accessory containing no metal and positioning the handset a minimum 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

## FCC Notice

- **This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:**  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.
- **Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.**

## FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model handset as reported to the FCC when tested for use at the ear is 0.728 W/kg, and when worn on the body in a holder or carry case, is 0.157 W/kg.

**Body-worn Operation;** This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/> after searching on FCC ID UCE209023A. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

## European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.585 W/kg\*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide\*\*. In this case, the highest tested SAR value is 0.393 W/kg. As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

\*The tests are carried out in accordance with international guidelines for testing.

\*\* Please see Electromagnetic Waves on page xviii for important notes regarding body worn operation.

## Declaration of Conformity

# CE0168

We, Panasonic Mobile Communications Development of Europe Ltd., declare that SoftBank 941P conforms with the essential and other relevant requirements of the directive 1999/5/EC.

A declaration of conformity to this effect can be found at <http://panasonic.net/pmc/support/index.html>

- This product is only intended for sale in Japan.
- Compliance to the European RTTE directive applies to: SoftBank 941P handset, Battery (PMBAS1) and AC Charger (SoftBank ZTDA1).

## Handset Care

- 941P is not waterproof. Avoid exposure to liquids and high humidity.
  - Do not expose handset to precipitation.
  - Air conditioned air may cause condensation, resulting in corrosion.
  - Do not put handset in damp places like bathrooms.
  - On the beach, keep handset away from sun and surf.
  - Perspiration in handset may cause malfunction.
- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank is not liable for any resulting damages.
- Use handset within temperatures of 5°C to 35°C and humidity 35% to 85%. Avoid extreme temperatures/direct sunlight.
- Handset may become warm during use or charging. This is not malfunction.
- Exposing lens to direct sunlight may damage color filter and affect image color.

- Soiled terminals may cause poor connection. If the terminals are dirty, use a dry cloth or cotton swab to wipe them clean.
- Clean handset with dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Avoid forceful rubbing or scratching handset displays.
- Do not subject handset to excessive force.
  - Do not sit down with handset in a back pocket.
  - Do not place heavy objects on a bag with handset inside.
- Do not remove nameplate from handset; doing so invalidates warranty.
- Always turn off handset before removing battery. If battery is removed while saving or sending mail, data may be altered or lost.
- LCD is manufactured with high precision technology, however, some pixels may appear darker/brighter.
- Connect only specified products to External Port.
- While walking, moderate headphone volume to make sounds around you audible and help avoid accidents.
- When holding handset in use, do not cover Speaker.

## Function Usage Limits

These functions are disabled after handset replacement/upgrade or service cancellation: Camera; Digital TV; Music Player; S! Appli; Lifestyle-Appli.

After a period of disuse, these functions may become unusable.

## Mobile Camera

- Be sure to observe proper etiquette when using the camera.
- Do not expose the camera lens to direct sunlight. Concentrated sunlight through the lens may cause the handset to malfunction.
- Be sure to try taking and previewing pictures before using the camera on important occasions like wedding ceremonies.
- Do not commercially use or transfer pictures taken with the camera without the permission of the copyright holder (photographer), except for personal use.
- Do not use the camera in locations where taking photos and recording videos are prohibited.

## Bluetooth®/Wi-Fi

- Bluetooth®/Wi-Fi connection is not guaranteed with all Bluetooth®/Wi-Fi devices.
- Handset complies with Bluetooth®/Wi-Fi security standards. However, this does not ensure 100% security.
- SoftBank is not liable for damages arising from accidental data/information leakage during Bluetooth®/Wi-Fi transmissions.
- Wi-Fi function is only intended for use in Japan. This handset's Wi-Fi function is certified as compliant with the radio standard in Japan. Wi-Fi function should be disabled when travelling outside Japan. Use in other countries may contravene local regulations.
- Bluetooth®/Wi-Fi shares the same frequency band with other industrial/scientific/medical equipment (microwave ovens, etc.), radio stations, amateur radio stations, etc. (hereinafter "other radio stations").
  - 1 Before using Bluetooth®/Wi-Fi function, visually check that there are no other radio stations sharing same frequency band nearby.
  - 2 Should interference occur between this handset and other radio stations, move to another place or stop Bluetooth®/Wi-Fi function (stop the transmission) immediately.
  - 3 For additional information and support, contact us at the following number.  
SoftBank Mobile Customer Center;  
From a SoftBank handset, call toll free at 157 for General Information.  
From landlines, see ☎P.19-34 "Customer Service".

## Wireless Frequency Bands

- Bluetooth® frequency band information is as follows:



- This radio station uses 2.4 GHz band with FH-SS modulation, and its maximum communication distance is 10m.
- This radio station uses 2400 – 2483.5 MHz band. Avoiding frequency band of mobile unit identification apparatus is not possible.

- Wi-Fi frequency band information is as follows:



- This radio station uses 2.4 GHz band with DS-SS/OFDM modulation, and its maximum communication distance is 40m.
- This radio station uses 2400 – 2483.5 MHz band. Avoiding frequency band of mobile unit identification apparatus is possible.

## Precautions for Wi-Fi Usage

- Do not use Wi-Fi function near magnetic devices or sources of magnetic waves.
- Magnetic waves or electrostatic noise may cause noise/interference (especially when a microwave oven is in use).
- Wi-Fi use near TVs or radios may affect TV/radio reception.
- When multiple access points using the same channel are nearby, target access point may not be found.

## Copyrights and Others

### Right of Portrait

Portrait right is the right of an individual to refuse to be photographed by others and protects from the unauthorized publication or use of an individual's photograph by others. Right of personality is a portrait right applicable to all citizens and right of publicity is a portrait right (property right) designed to protect celebrities' interests. Be careful when taking pictures with the handset camera. Photographing, publicizing and distributing photographs of citizens and celebrities without permission are illegal.

### Copyrights

Sounds, images, computer programs, databases, other copyrighted materials, their respective works and copyright holders are protected by copyright laws. Duplicated materials are limited to private use only. If duplications (including conversion of data types), modifications, transfer of duplicates or distribution on networks are made without permission of copyright holders, this constitutes "Literary Piracy" and "Infringement of Copyright Holder Rights" and a criminal action for reparations and criminal punishment may be filed. If duplicates are made using handset, please observe the copyright laws. Materials captured with handset camera are also subject to the above.



---

This product is licensed under the MPEG-4 patent portfolio license, AVC patent portfolio license and VC-1 patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Visual Standard, AVC Standard and VC-1 Standard ("MPEG-4/AVC/VC-1 Video") and/or

(ii) decode MPEG-4/AVC/VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider licensed to provide MPEG-4/AVC/VC-1 video.

No license is granted or implied for any other use.

Additional information may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>.

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this products is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

Windows Media®, Microsoft®, Windows® and Windows Vista® are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

The abbreviations used for respective operating systems (Japanese version) in this guide are as shown below:

Windows Vista® is the abbreviation of Windows Vista® (Home Basic, Home Premium, Business, Enterprise, and Ultimate).

Windows® XP is the abbreviation of Microsoft® Windows® XP Professional operating system or Microsoft® Windows® XP Home Edition operating system.

Microsoft Windows operating system is abbreviated as "Windows" in this guide.

---

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Aplix, microJBlend and JBlend, and all Aplix-or JBlend-related trademarks and logos are trademarks or registered trademarks of Aplix Corporation in the U.S., Japan and other countries.

OKAO Vision is used for multiple face detection to improve camera AF. OKAO is a registered trademark or trademark of OMRON Corporation in JAPAN and other countries.

BookSurfing® is a registered trademark of CELSYS Inc., Voyager Japan, Inc. and INFOCITY Inc.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.



microSDHC Logo is a trademark.

Chaku-Uta® and Chaku-Uta Full® are registered trademarks of Sony Music Entertainment (Japan) Inc.

---

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary. Content providers are using the digital rights management technology for Windows Media contained in this device ("WM-DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM Software to play Secure Content ("WM-DRM Software"). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content ("Secure Content Owners") may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of Revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation lists onto your device on behalf of Secure Content Owners.

This product contains software licensed complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc. For more details, see the bundled "GPL/LGPL 等適用ソフトウェアのライセンスについて" leaflet.



Bluetooth® is a registered trademark of the Bluetooth SIG, Inc.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Panasonic Mobile Communications Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

This product is loaded with Bluetooth™ Stack for Embedded Systems Spec 2.0 by Toshiba Corp.

Powered by MascotCapsule®  
MascotCapsule® is a registered trademark of HI CORPORATION © 2009 HI CORPORATION. All Rights Reserved.

The image stabilization technology utilized is PhotoSolid, a product of Morpho, Inc. PhotoSolid is the registered trademark of Morpho, Inc. in Japan and other countries.

FeliCa is a contactless IC card technology developed by Sony Corporation.

FeliCa is a registered trademark of Sony Corporation.

 is a registered trademark of FeliCa Networks, Inc.

"Osaifu-Keitai" is a registered trademark of NTT DoCoMo, Inc. in Japan.

**NetFront®**  
Mobile Client Suite

**ACCESS™**

This product contains NetFront Mobile Client Suite of ACCESS CO., LTD. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in the United States, Japan and other countries. ©2008 ACCESS CO., LTD. All rights reserved.

This software is based in part on the work of the Independent JPEG Group.

This product contains Browser module under licence from ACCESS CO., LTD. and NTT DoCoMo, Inc.

IrFront is a trademark or registered trademark of ACCESS CO., LTD. in Japan and other countries.

The IrDA Feature Trademark is owned by the Infrared Data Association and used under license therefrom.



This product contains Adobe® Flash® Lite™ Player under license from Adobe Systems Incorporated.

Copyright© 1996-2008 Adobe Macromedia Software LLC. All rights reserved.

Adobe, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

"SOFTBANK," SOFTBANK's equivalent in Japanese, and the SOFTBANK logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and in other countries.

S! Mail, Navi Appli, S! Appli, MOBILE WIDGET, Graphic Mail are trademarks or registered trademarks of SOFTBANK MOBILE Corp. Yahoo! and the "Yahoo!" or "Y!" logos are trademarks and/or registered trademarks of Yahoo! Inc. in the US.

This product is manufactured or sold under license from InterDigital Technology Corporation.

The frequency band used for the Bluetooth® function of 941P is shared with other industrial, scientific or medical equipment (microwave ovens, etc.), and used at premises radio stations, amateur radio station, etc. (hereinafter "other radio stations").

- 1 Before using the Bluetooth® function, visually check that there are no other radio stations sharing the same frequency band nearby.
- 2 Should interference occur between 941P and other radio stations, move to another place or stop the Bluetooth® function (stop the transmission) immediately.
- 3 For additional information and support, contact us at the following number.

SoftBank Mobile Customer Center;

From a SoftBank handset, call toll free at 157 for General Information.

From landlines, see ☎P.19-34 "Customer Service".



This radio equipment operates in the 2.4 GHz band using the FH-SS modulation, and its maximum communication distance is 10m.

Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

The software contained in 941P is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software, and do not separate it from hardware in whole or part.

"One-push Open™" is a trademark of Panasonic Corporation.

## Specific Absorption Rate (SAR)

941P meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the head, shall not exceed 2 W/kg\*. This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

All mobile phones, prior to product launch, must be certified as compliant with government requirements as stipulated by the Radio Law.

941P has been granted Technical Regulations Conformity Certification by TELECOM ENGINEERING CENTER. Its highest SAR value is 1.08 W/kg. This value was obtained by TELECOM ENGINEERING CENTER as part of the certification process. SAR tests were conducted with handset transmitting at its highest certified power level in accordance with testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network. Additional information on SAR can be obtained on the following Websites:

Ministry of Internal Affairs and Communications

<http://www.tele.soumu.go.jp/e/sys/ele/index.htm>

Association of Radio Industries and Businesses (ARIB)

<http://www.arib-emf.org/index02.html> (Japanese only)

\* Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).

# Getting Started 1

|   |             |
|---|-------------|
| <b>USIM Card</b> .....                      | <b>1-2</b>  |
| About USIM Card .....                       | 1-2         |
| USIM Card Installation.....                 | 1-3         |
| USIM PINs.....                              | 1-3         |
| <b>Parts &amp; Functions</b> .....          | <b>1-4</b>  |
| Handset .....                               | 1-4         |
| Display Positions.....                      | 1-7         |
| Key Operations in Standby .....             | 1-8         |
| Display .....                               | 1-10        |
| <b>About Battery</b> .....                  | <b>1-13</b> |
| Before Charging .....                       | 1-13        |
| Battery Installation .....                  | 1-15        |
| Charging Battery .....                      | 1-16        |
| <b>Handset Power On/Off</b> .....           | <b>1-17</b> |
| <b>Manner Mode</b> .....                    | <b>1-18</b> |
| Minding Mobile Manners.....                 | 1-18        |
| Manner-related Features .....               | 1-18        |
| Activating Manner Mode .....                | 1-18        |
| Activating Emission OFF Mode.....           | 1-19        |
| Activating Driving Mode .....               | 1-19        |
| <b>Handset Menus</b> .....                  | <b>1-19</b> |
| Main Menu .....                             | 1-19        |
| Menu Numbers .....                          | 1-20        |
| Accessing Functions/Info from Standby ..... | 1-21        |
| Horizontal Open Menu .....                  | 1-22        |

 
|   |             |
|---|-------------|
| <b>Standby Options &amp; Event Indicators</b> ..... | <b>1-22</b> |
| Event Indicators.....                               | 1-22        |
| Mobile Widget (Japanese).....                       | 1-23        |
| S! Quick News (Japanese).....                       | 1-23        |
| S! Information Channel/Weather (Japanese).....      | 1-23        |
| Shortcuts.....                                      | 1-23        |
| External Display.....                               | 1-24        |
| <b>Customizing User Interface</b> .....             | <b>1-25</b> |
| Customized Screen/Familiar Usability .....          | 1-25        |
| Changing Display Font.....                          | 1-26        |
| <b>Private Menu</b> .....                           | <b>1-26</b> |
| Opening Private Menu .....                          | 1-26        |
| Customizing Private Menu .....                      | 1-27        |
| Adding Shortcuts.....                               | 1-27        |
| <b>Simple Menu</b> .....                            | <b>1-27</b> |
| Activating Simple Menu .....                        | 1-28        |
| Simple Menu .....                                   | 1-28        |
| <b>Passwords</b> .....                              | <b>1-29</b> |
| Phone Password.....                                 | 1-29        |
| Center Access Code.....                             | 1-29        |
| Security Code .....                                 | 1-29        |
| <b>Multi Task</b> .....                             | <b>1-30</b> |
| Activating Another Function.....                    | 1-30        |
| Ending Current Functions.....                       | 1-30        |
| <b>View Blind</b> .....                             | <b>1-31</b> |
| <b>My Number</b> .....                              | <b>1-31</b> |

## USIM Card

### About USIM Card

**Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited Phone Book entry and SMS message storage. USIM must be inserted to use 941P or Network services (calling, messaging, Internet, etc.). Turn handset off before inserting/removing USIM Card.**

USIM Card



- Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Do not damage, carelessly touch or short-circuit IC chip; doing so may result in loss of data or malfunction.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.
- If handset is dropped/subjected to shock, handset may return to Standby. This is not a malfunction.

If **USIM not inserted After power-off Insert USIM** appears, re-insert USIM Card properly then restart handset.

### Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/handset with USIM Card inserted is lost or stolen, contact SoftBank Mobile Customer Center or Global Call Center (☎P.19-34).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Appli may be unusable while a different or replacement USIM Card is inserted into handset.
- Returned USIM Cards are recycled.

### Note

 
- Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.

## USIM Card Installation

- Remove battery (☞P.1-14) then follow steps below.


### Inserting

- 1 With IC chip down, insert USIM Card

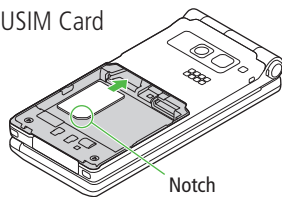

### Removing

 - 1 Slide out USIM Card gently

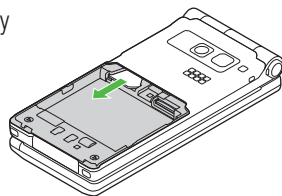

#### Note

- Do not force USIM Card into or out of handset; may damage handset/USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.

## USIM PINs

### There are two USIM Card security codes: PIN & PIN2

- PIN and PIN2 are set to **9999** by default.
- PIN/PIN2 can be changed (☞P.11-2).

|             |  |
|-------------|--|
| <b>PIN</b>  | 4 to 8-digit code used to prevent unauthorized handset use. <ul style="list-style-type: none"> <li>● When <b>PIN Authentication</b> is <b>ON</b> (☞P.11-2), PIN entry is required each time handset is turned on (with USIM Card inserted).</li> </ul> |
| <b>PIN2</b> | Required to clear call times/costs or set maximum cost (☞P.18-9).  |

### PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering the PIN Unlocking Key (PUK/PUK2) (☞P.11-3).

- For information on PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).

 
#### Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).


# 1 Parts & Functions

## Handset

### Normal Position

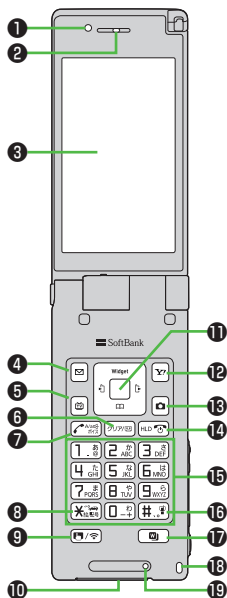

### Horizontal Open Position

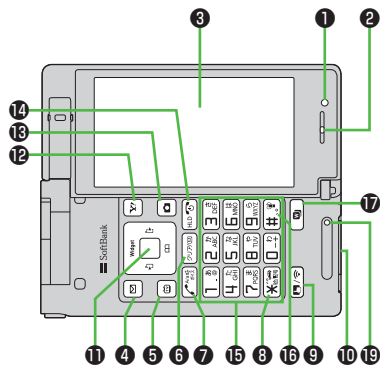 


### Using Earphone/Microphone or Video Output Cable

Connect following accessories (A) and (B) to External Port.

(A) Earphone/microphone or video output cable  
(B) Stereo Earphone Conversion Cable  
<Operation>

 - ① Connect flat plug (A) to flat terminal (B)
- ② Connect plug (B) to External Port

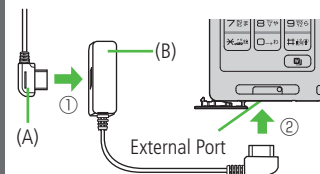

- Do not press answer button on earphone/microphone when connecting. Doing so may cause earphone/microphone to malfunction. In that case, pull out earphone/microphone, and connect again.



**1 Light Sensor**

- Detects ambient light

**2 Earpiece****3 Internal Display****4 Mail Key**

- Open Messaging menu
- Execute Upper Left Softkey function (P.i.x)

**5 TV Key**

- Activate TV
- Execute Lower Left Softkey function (P.i.x)

**6 Clear/Memo Key**

- Delete characters
- Cancel menus
- Use Answer Phone

**7 Send Key**

- Initiate or answer calls
- Toggle upper/lower case in text entry windows
- Use Voice Dial

**8 \*-/Pictograph/Symbol/Driving Mode Key**

- Enter "\*" "
- Access pictographs in text entry windows
- Access symbol list from pictograph list
- Toggle Driving Mode

**9 Touchpad/WiFi Key**

- Toggle Touchpad on/off
- Toggle Wi-Fi function on/off

**10 External Port**

- Connect AC Charger (sold separately), Stereo Earphone Conversion Cable or other accessories here

**11 Multi Selector**

- Scroll up/down/left/right to navigate menus and text (P.i.x)
- Select widgets/S! Quick News
- Open Phone Book
- Open Incoming Call Logs
- Open Redial logs

**12 Yahoo! Keitai Key**

- Open Yahoo! Keitai Main Menu
- Execute Upper Right Softkey function (P.i.x)

**13 Camera Key**

- Activate Camera/Video Camera
- Execute Lower Right Softkey function (P.i.x)

**14 End/Escape & Power Key**

- Power on/off (P.1-16)
- End calls
- Return to Standby

**15 Keypad/Touchpad**

- Enter phone number/text
- Operate Touchpad

**16 #/Symbol/Manner Key**

- Enter "#"
- Toggle Manner Mode

 
**17 Widget Key**

- View list of available widgets
- Activate Music Player

**18 Horizontal Open Position Hook****19 Microphone**

# 1

## Getting Started

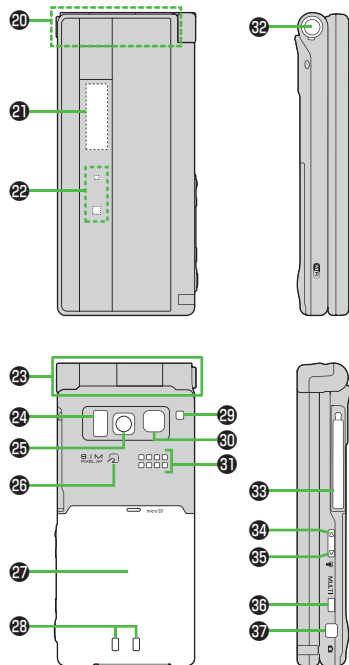

- 20 **Antenna**
- 21 **External Display** (☞P.1-23)
- 22 **Notification Light/Charging Indicator**
  - Flashes for incoming transmissions
  - Lights in red for charging
- 23 **Hinge/Antenna**
- 24 **Infrared Port**
  - Transfer data via Infrared
- 25 **Camera**
- 26 **Logo**
  - Place Logo over a reader/writer when using Osaifu-Keitai® (☞P.16-4)
- 27 **Battery Cover**
- 28 **Charging Terminals**
- 29 **Strap Eyelet**
- 30 **Flash/Photo light**
  - Lights/flashes during Camera use
  - Use when shooting in dark places
- 31 **Speaker**
- 32 **One-push Open Button** (☞P.1-7)
- 33 **TV Antenna**
- 34 **Upper Side Key**
  - Increase earpiece/TV volume

[Closed Position]

  - View Incoming Call Logs on External Display
  - Toggle External Display
  - Turn on illumination

- 35 **Lower Side Key**
  - Decrease earpiece/TV volume


[Closed Position]

  - Set/cancel Manner Mode
  - Check missed calls/new messages
- 36 **(MULTI) MULTI Key**
  - Open TASK MENU/Pictures Folder
- 37 **(CAMERA) Shutter Key**
  - Activate Camera/capture images

## Display Positions
 
### Normal Position


Press One-push Open Button to open handset.

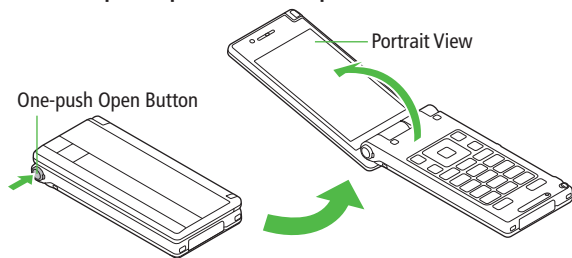

- Fold handset by hand to close. When handset does not close, open it all the way once, then close.
- Customize handset to answer/end calls, etc. by opening/closing handset (☞ P.18-7, P.18-9).
- Be careful not to drop handset when opening handset by One-push Open Button.

### Horizontal Open Position

 - 1 Press **A** lightly
- 2 Flip open (as indicated by arrow)  
Watch TV programs or use Messaging, S! Appli, Camera, etc. in Horizontal Open Position (Landscape View).

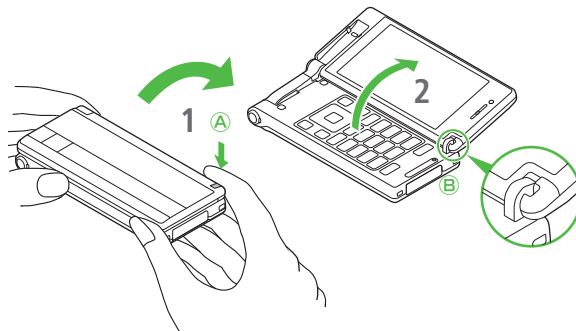


- Hook should be intact **B**. If hook is detached, close handset and try again.  
Do not lift hinge portion **A** when opening handset.

#### Note

 - If One-push Open Button is pressed in Horizontal Open Position, handset opens in Normal Position after it is closed.
- Before switching positions, be sure to completely close handset. Do not switch positions when handset is not fully closed; otherwise malfunction or damage may result.

## Key Operations

- Key operations in Horizontal Open Position may differ from Normal Position.
- Multi Selector (📷📺📧📧📧) operations are described as pictured.

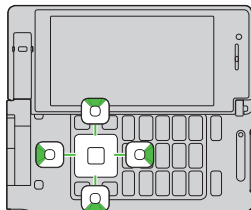

## Settings Linked with Display Position

- Open handset in Horizontal Open Position to show Horizontal Open Menu while handset is in Standby (📖P.1-21). Also, activate Digital TV or Camera automatically (📖P.18-13).







### Note





- Switching Normal Position to Horizontal Open Position may end active screen.

## Key Operations in Standby

Press (less than one second) or press and hold (more than one second) a key in Standby to execute operation according to handset position.

 
| Key Operations |                      | Normal Position (Portrait View) | Horizontal Open Position (Landscape View) |
|----------------|----------------------|---------------------------------|---|
| ☎              | Short Press          | Initiate a call                 | —   |
|                | Long Press           | Voice dial                      | —   |
| ☎              | Short Press          | Show/hide widgets               |   |
|                | Long Press (2 + sec) | Turn off power                  |   |
| 📄              | Short Press          | Open Main Menu                  | Open Horizontal Open Menu                 |
|                | Long Press           | Activate/cancel Keyguard        |   |
| 📞              | Short Press          | Play Answer Phone               | —   |
|                | Long Press           | Activate/cancel Answer Phone    | —   |
| 📷              | Short Press          | Activate Camera                 |   |
|                | Long Press           | Activate Video Camera           |   |
| 📺              | Short Press          | Activate Digital TV             |   |
|                | Long Press           | Activate/cancel IC Card Lock    |   |
| 📧              | Short Press          | Open Messaging Menu             |   |
|                | Long Press           | Open S! Mail Composition window |   |
| Y7             | Short Press          | Access Yahoo! Keitai            |   |
|                | Long Press           | Open Yahoo! Keitai Menu         |   |

| Key Operations  |             | Normal Position<br>(Portrait View)  | Horizontal Open Position<br>(Landscape View) |
|---|-------------|---|--|
|  | Short Press | Open Widget List  |  |
|   | Long Press  | Activate Music Player   |  |
|  | Short Press | Switch Touchpad on/off  |  |
|   | Long Press  | Switch Wi-Fi on/off   |  |
|  | Short Press | Select widget (When widget is hidden, select Event Indicator, shortcut, status indicator, S! Quick News ticker) |  |
|   | Long Press  | Activate slideshow  |  |
|  | Short Press | Open Phone Book search window   | —  |
|   | Long Press  | Open Phone Book entry window  | —  |
|  | Short Press | Open Incoming Call Logs   | —  |
|   | Long Press  | Open Received address logs  | —  |
|  | Short Press | Open Redial logs  | —  |
|   | Long Press  | Open Sent address logs  | —  |
| ①   | Short Press | Enter "1"   | —  |
|   | Long Press  | Open Phone Book page "あ"  | —  |
| ②   | Short Press | Enter "2"   | —  |
|   | Long Press  | Open Phone Book page "か"  | —  |
| ③   | Short Press | Enter "3"   | —  |
|   | Long Press  | Open Phone Book page "さ"  | —  |
| ④   | Short Press | Enter "4"   | —  |
|   | Long Press  | Open Phone Book page "た"  | —  |
| ⑤   | Short Press | Enter "5"   | —  |
|   | Long Press  | Open Phone Book page "な"  | Turn on/off Back Light                       |

| Key Operations  |             | Normal Position<br>(Portrait View) | Horizontal Open Position<br>(Landscape View) |
|---|-------------|------------------------------------|--|
| ⑥   | Short Press | Enter "6"                          | —  |
|   | Long Press  | Open Phone Book page "は"           | —  |
| ⑦   | Short Press | Enter "7"                          | —  |
|   | Long Press  | Open Phone Book page "ま"           | —  |
| ⑧   | Short Press | Enter "8"                          | —  |
|   | Long Press  | Open Phone Book page "や"           | Activate/cancel View Blind                   |
| ⑨   | Short Press | Enter "9"                          | —  |
|   | Long Press  | Open Phone Book page "ら"           | —  |
| ⑩   | Short Press | Enter "0"                          | —  |
|   | Long Press  | Open Phone Book page "わ"           | —  |
| ✳   | Short Press | Enter "✳"                          | —  |
|   | Long Press  | Activate/Cancel Driving Mode       |  |
| #   | Short Press | Enter "#"                          | —  |
|   | Long Press  | Activate/Cancel Manner Mode        |  |
|  | Short Press | Increase earpiece volume           | —  |
|   | Long Press  | Increase earpiece volume           | —  |
|  | Short Press | Decrease earpiece volume           | —  |
|   | Long Press  | Decrease earpiece volume           | —  |
|  | Short Press | —                                  |  |
|   | Long Press  | Activate Camera                    |  |
|  | Short Press | Activate TASK MENU                 |  |
|   | Long Press  | Open Pictures folder               |  |

## Display

## Display Indicators

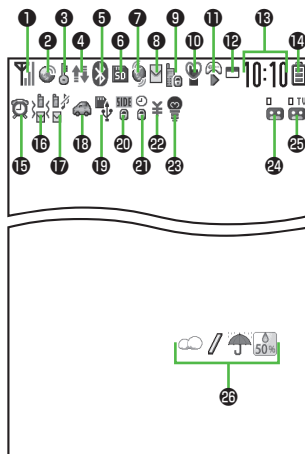

- 15 - 25 are Status Indicators. Access functions from respective indicators (P.1-20).

## 1 Signal Strength

Strong
 Moderate
 Weak
 Low

Emission OFF Mode Active

Out-of-Range

## 2 Packet Transmission in Progress (PC)

Dial-up Connection Established on PC

3G/GSM Packet Transmitting

Operator (set for Select Operator) Out-of-Range

3G/GSM 3G/GSM Packet Transmission Available\*

3G/GSM 3G/GSM Packet Transmission Unavailable\*  
\* Appears only while abroad

Wi-Fi Active (Out-of-Range)

Wi-Fi Active (Within-Range)

Wi-Fi Transmission

## 3 Secure Content

S! Addressbook Back-up Synchronizing

Auto Sync Settings Active

## 4 PC Site Browser Active

Infrared Transmission

IC Transmission

USB Cable Connected

Keypad Active

## 5 Software Update (Notification/Updating/Result)

Voice Mail

(Blue) Bluetooth® Device Connected

(Black) Bluetooth® Power Save Mode

## 6 microSD Card

Inserted

Reading/Writing Data

Write-protected

Unsupported

Unusable

## USB Cable (Not Included) Connected

microSD Mode

MTP Mode

## During Call

During Video Call

During Voice Call

- 7 Positioning
- New S! Quick News Information
- New S! Information Channel info
- 8 Unsent Message
- Unread Message
- Incoming Mail Memory Full (Handset)
- 9 **Security**
  - Privacy Key Lock Active
  - Personal Data Lock Active
  - Key Pad Dial Lock Active
  - IC Card Lock Active
  - Secret Mode and Secret Data Only Active
  - Key Pad Dial Lock, Secret Mode and Secret Data Only Active
  - Key Pad Dial Lock and Personal Data Lock Active
  - Secret Mode, Secret Data Only and IC Card Lock Active
  - Privacy Key Lock and IC Card Lock Active
  - Personal Data Lock and IC Card Lock Active
  - Key Pad Dial Lock and IC Card Lock Active
  - Key Pad Dial Lock, Secret Mode, Secret Data Only and IC Card Lock Active

 
- Key Pad Dial Lock, Personal Data Lock and IC Card Lock Active
- 10 Manner Mode Active
- Manner Mode (set in User Mode)
- 11 **S! Appli**
  - Active/Paused
  - Auto Start Request Received
  - Start Request Received while Active/ Paused
- 12 One Function Active
- Multiple Functions Active
- Digital TV Active
- Recording TV Program
- During Timer Recording
- TV Recording Paused
- Music Playback
- Music Paused
- 13 Time
- 14 **Battery Level**
  - (Red) Alarm Set (Today)
  - (Blue) Alarm Set (After Today)
- 15 Vibration Active (Incoming Call)
- Vibration Active (Incoming Message)

- Vibration Active (Incoming Call/Message)
- 17 Incoming Call Ringtone Disabled
- Incoming Message Ringtone Disabled
- Incoming Call/Message Ringtone Disabled
- 18 Driving Mode
- 19 microSD Mode set for USB Mode
- MTP Mode set for USB Mode
- 20 Side Key Disabled when Handset Closed
- 21 Timer Lock at Close Active
- 22 Call Charge Reached Upper Limit
- 23 Back Light OFF
- View Blind ON
- Back Light OFF; View Blind ON
- 24 Answer Phone Active (Number of Answer Phone Messages (Voice Calls))
- 25 Answer Phone Active (Number of Answer Phone Messages (Video Calls))
- 26 Weather Indicator (P.7-7)

**Note**

- To show icon description: **Main Menu**
  - ▶ **Settings** ▶ **Display Settings**
  - ▶ **Describe Icons** ▶ to highlight an icon


## External Display Indicators

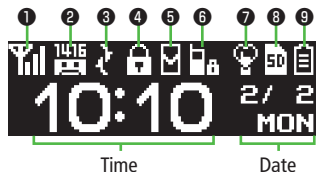

Time  
↑  
⏏ (Right side)




Time

- Upon closing handset, External Display lights up and goes out in 15 seconds.
- Each  press toggles Incoming Call Logs with missed calls.


### 1 Signal Strength

 Strong  Moderate  Weak  Low

 Offline Mode

 Out-of-Range

### 2 Voice Mail

 Software Update (Notification/Updating/Result)

 Bluetooth® Device Connected

 Bluetooth® Power Save Mode

### 3 S! Addressbook Back-up Synchronizing

### 4 Keypad Lock Setting Active

### 5 Unsent Message

 Unread Message

 Incoming Mail Memory Full


### 6 Privacy Key Lock Active


 Personal Data Lock Active

 Keypad Dial Lock Active

 IC Card Lock Active

 Secret Mode and Secret Data Only Active


 Keypad Dial Lock, Secret Mode and Secret Data Only Active


 Keypad Dial Lock and Personal Data Lock Active


 Secret Mode, Secret Data Only and IC Card Lock Active

 Privacy Key Lock and IC Card Lock Active

 Personal Data Lock and IC Card Lock Active

 Keypad Dial Lock and IC Card Lock Active

 Keypad Dial Lock, Secret Mode, Secret Data Only and IC Card Lock Active

 Keypad Dial Lock, Personal Data Lock and IC Card Lock Active

### 7 Manner Mode Active

 Manner Mode (set in User Mode) Active

### 8 microSD Card

 Inserted

 Reading/Writing Data

 Write-protected

 Unsupported

### USB Cable (Not Included) Connected

 microSD Mode

 MTP Mode

### 9 Battery Level





## About Battery


### Before Charging

Charge battery before use or after a period of disuse (AC Charger sold separately).

### Charging Time & Operating Time Estimates

|                      |                   | 3G           | GSM          |
|----------------------|-------------------|--------------|--------------|
| <b>Charging Time</b> |                   | 130 minutes* |              |
| <b>Standby Time</b>  |                   | 650 hours*   | 370 hours*   |
| <b>Talk Time</b>     | <b>Voice Call</b> | 220 minutes* | 230 minutes* |
|                      | <b>Video Call</b> | 140 minutes* | —            |

\* Approximate value

- 3G Mode/GSM Mode:  P.2-11
- Charging time is an average measured within temperatures of 5°C to 35°C.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).

### About Battery

- Clean handset, battery & charger with dry cotton swab.
- Replace battery if operating time shortens noticeably.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.
- Battery may swell as service life nears end; this is not a problem.

### Charging

- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Move charger away from TV/radio if interference occurs.

## Battery Time


- Using handset in poor conditions may shorten battery time.
  - Extreme temperatures
  - Impaired handset, battery or Charging Terminals
  - Signal is weak/handset is out-of-range
  - Handset is left mid-operation (not in Standby)
  - Viewing TV, playing music or using S! Appli, etc.
- Extending battery time
 


Example:

  - Turn Back Light Time **OFF** and Power Saver Mode **ON** (☞P.18-5)
  - Select **OFF** for Key Tone (☞P.18-2)

## When Battery Runs Out

### ● Unless a Call is in Progress

A message appears and warning tone sounds for 10 seconds. Handset power turns off automatically after one minute; press any key except  to cancel warning tone manually. Charge or replace battery.

- If Manner Mode is active, nothing sounds.
- When handset is closed, press  (MULTI) to cancel warning tone.

 
### ● During a Call

A message appears and warning tone sounds via Earpiece or Speaker. After 20 seconds, call ends and handset shuts down in one minute. Charge or replace battery.

## Battery Strength Indicator

- Battery Strength indicator changes as remaining usage time decreases. Charge or replace battery when battery level is low (☞P.1-10, 1-11) or a message appears on Display.

### Battery Voltage

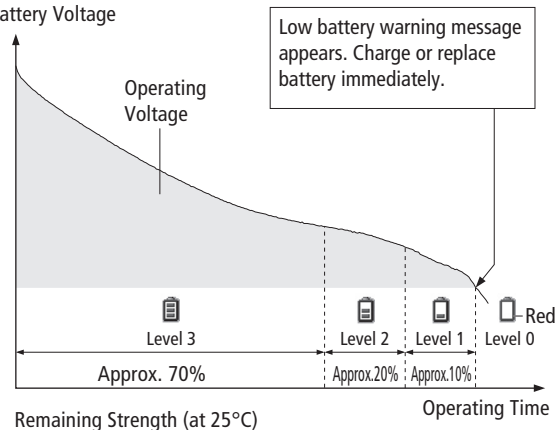


### Note

- Alternatively, check battery level from **Main Menu** ► **Settings** ► **Phone Settings** ► **Battery** ► **Battery Level**

## Battery Installation


- Always turn off handset power before removing battery.
 
### 1 Press and slide to remove cover

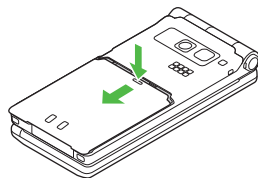


### 2 Insert Battery

 Align battery contacts with handset pins.

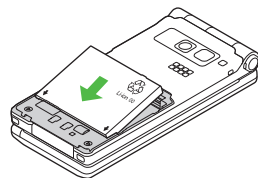


### Remove Battery

 Lift battery out as shown.

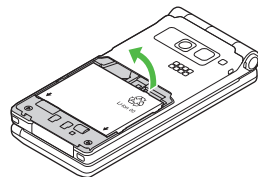

### 3 Replace battery cover

 Cover should click into place.

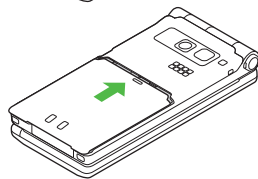

#### Note

- Lithium-ion batteries are valuable and recyclable resources.
  - Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
  - To avoid fire or electric shock, do not:
    - Short-circuit battery
    - Disassemble battery



Li-ion 00

 
# 1

## Getting Started

### Charging Battery

Use only specified AC Charger (sold separately).

Charging Time: Approximately 130 minutes

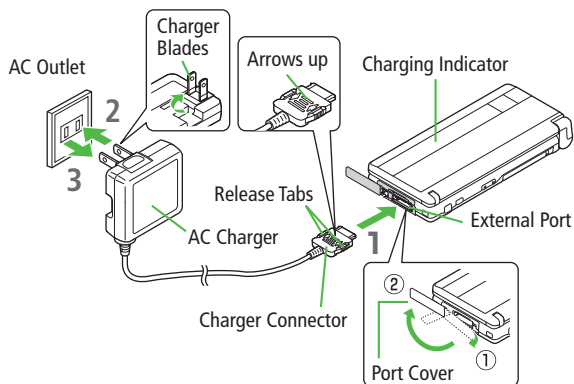

### 1 Connect AC Charger to handset

Insert Charger Connector (printed side up) into External Port.

### 2 Plug AC Charger into AC Outlet

Extend Charger Blades.

Charging Indicator illuminates and charging starts.

When charging is complete, Charging Indicator goes out.

- When Charging Indicator flashes, remove AC Charger and battery from handset then attach them again.

- **Charge Sound** is heard when charging starts/ends.

When handset is turned off or in Manner Mode, nothing sounds.

### 3 When charging is complete, unplug AC Charger, then disconnect handset

Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.

#### Note

- For details, read AC Charger instructions.
- Alternatively, charge battery by using Desktop Holder (not included).

#### Tip

- Charging Start/End Tone Off (📞P.18-2)

## Handset Power On/Off

### 1 Press and hold

Start-up window appears and handset enters Standby.

- Enter PIN if PIN Authentication is ON (☞P.11-2).

### 2 Press for 2+ seconds

Handset shuts down.

- Do not turn on handset immediately after turning off. Wait a few seconds.



Standby

### The First Time Handset Powers Up, and Setup Window Appears...

Select **YES**, and set the following:  
(Each item can be set separately.)





- Set date and time\* (Date & Time: ☞P.18-8)
- Set Phone Password  
Enter **9999**, and enter new Phone Password (4-8 digits) (☞P.1-28).
- Set Key Tone  
Select **ON** or **OFF** (☞P.18-2).
- Set font size  
Set Display font size all at once (☞P.18-6).

\* May be automatically set

#### Note

- If **USIM not inserted After power-off Insert USIM** appears, clean and properly re-insert USIM Card then restart handset.
- After a period of inactivity, Display turns off.

## Retrieving Network Information

When ,  or  is pressed for the first time in Standby, handset initiates Network Information retrieval;  to retrieve it.

- Update Network Information to use messaging, Internet, etc.
- Update Network Information manually: **Main Menu** ▶ **Settings** ▶ **Connectivity** ▶ **Retrieve NW Info** ▶ **YES**

#### Tip

#### Settings

- Change Wallpaper ● Add Calendar to Wallpaper
- Change Wallpaper Randomly ● Change Start-up Window (☞P.18-3)

## Manner Mode

### Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.


- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

### Manner-related Features



|                                       |  |
|---------------------------------------|--|
| <b>Manner Mode</b><br>(☞P.18-7)       | Press Manner key to mute handset tones and activate vibration for incoming transmissions.                          |
| <b>Vibration Mode</b><br>(☞P.18-2)    | Activate in public places, meetings, etc. for silent call/message alerts.  |
| <b>Ringer Volume</b><br>(☞P.18-2)     | Mute call/message tones.   |
| <b>Emission OFF Mode</b><br>(☞P.1-18) | Suspend all handset transmissions.   |
| <b>Answer Phone</b><br>(☞P.2-15)      | Use to handle incoming calls when inappropriate/unsafe to answer.  |
| <b>Driving Mode</b><br>(☞P.1-18)      | While driving, send a voice message informing the caller that you cannot answer the call (Handset does not ring.). |

## Activating Manner Mode

Press one key to mute handset tones and activate vibration for incoming transmissions.

- Manner Mode settings can be changed (☞P.18-7).
- When Manner Mode is active,  appears.

1 In Standby, press and hold 

- To cancel: Press and hold  again
- To activate/cancel while handset is closed: Press and hold 



### Note

- Shutter click and incoming tone via Earphone (**Level 1**) sound even in Manner Mode.
- When Music Player or Digital TV activates in Manner Mode, confirmation appears asking whether to cancel Manner Mode.
- When **Prefer manner mode** is **OFF** (☞P.12-7), Alarm sounds even if Manner Mode is active.

### Tip

- **Settings** ● Set Manner Mode Type (☞P.18-7)

## Activating Emission OFF Mode

Temporarily suspend all handset transmissions; when active, all calls/messages and incoming information are blocked.

- When Emission OFF Mode is active,  appears.

Main Menu ▶ Settings ▶ Call Settings ▶ Emission OFF Mode

### 1 YES


- To cancel: Follow the same steps.

#### Note

- Emission OFF Mode disables Bluetooth®/Infrared/IC transmissions. Bluetooth® handsfree devices cannot be used either.

## Activating Driving Mode

Handset does not ring for incoming calls. Voice guidance informs the caller you are unavailable and Answer Phone activates.

- When Driving Mode is active,  appears.

### 1 In Standby, press and hold

 
- To cancel: Press and hold  again

#### Note

- When Answer Phone memory is full, incoming calls are rejected.
- Check ringtone when earphone/microphone is connected.

## Handset Menus

### Main Menu

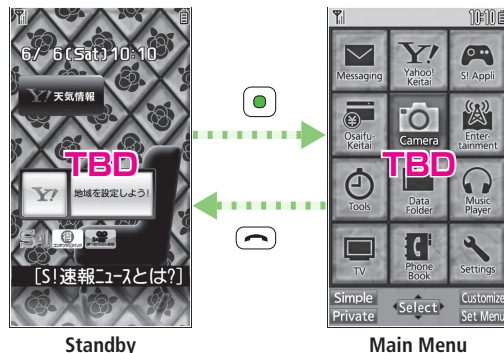


Standby

Main Menu


### 1 In Standby,

Main Menu appears.

- To change Main Menu theme:  
 [Set Menu] → Select a pattern

### 2 to highlight an icon →

Selected function menu appears.

- To return to Standby: 













#### Note

- Standby window returns after 15 seconds of inactivity in Main Menu.

# 1

## Getting Started

### Main Menu Icons

|  |   |   |
|--|---|---|
| <p><b>Messaging</b></p>  <p>Create new/view received messages</p> | <p><b>Yahoo! Keitai</b></p>  <p>Enjoy Mobile Net &amp; PC Site browsing...</p> | <p><b>S! Appli</b></p>  <p>Download, set and use S! Appli</p>          |
| <p><b>Osaifu-Keitai</b></p>  <p>Use Osaifu-Keitai®</p>            | <p><b>Camera</b></p>  <p>Capture images or record videos</p>                   | <p><b>Entertainment</b></p>  <p>Use Mobile Widget or S! Quick News</p> |
| <p><b>Tools</b></p>  <p>Set Alarm or save Calendar entries...</p> | <p><b>Data Folder</b></p>  <p>Open files saved on 941P/microSD Card</p>        | <p><b>Music Player</b></p>  <p>Use Music Player</p>                    |
| <p><b>TV</b></p>  <p>View TV or record/timer-record programs</p>  | <p><b>Phone Book</b></p>  <p>Save entries to call or send messages...</p>      | <p><b>Settings</b></p>  <p>Adjust/customize handset settings</p>       |

### Tip

- Settings** ● Change Display Color Scheme (☞P.18-3) ● Change Main Menu Icons ● Change Main Menu Background (☞P.18-4)

 
### Menu Numbers

Use keypad to select functions or menu items.

### Unnumbered Menu Items

When numbers do not appear, select items as shown.

- **Main Menu**  
 (#) to select **Settings** from Main Menu

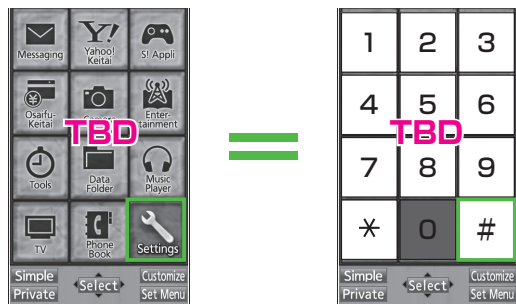

Example: Menu Icons set to Pinky dream




## When Menu Icons is Set to Standard or Customize

 Menus cannot be selected from Main Menu by keypad.

Open menu items by entering specific number in Main Menu (Quick Open Menu: P.19-14).

### ■ Top Menu Opened from Main Menu

(2) to select *Display Settings*

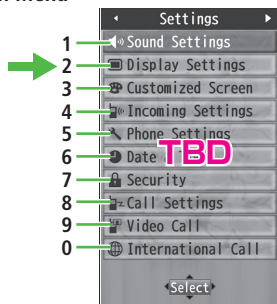


Example: Settings Top Menu

## Numbered Menu Items

 Press key corresponding to menu number to select a menu.

In Display Settings (from *Settings* Top Menu), (5) to select *Menu Icons*

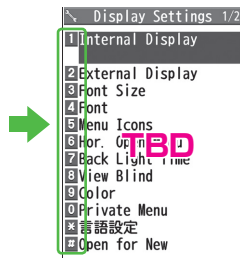

## Accessing Functions/Info from Standby

Select indicators/ticker in Standby to access functions and information.

### ■ Available Items

- Event Indicator (P.1-21)
- Mobile Widget (P.7-2)
- S! Quick News (P.7-4)
- S! Information Channel/Weather (P.7-6)
- Shortcuts (P.1-22)
- Status Indicators (P.1-10)

1 In Standby,

Pointer () appears.

- Press () or () to return to Standby (Pointer disappears).

2 Use to move pointer () to an indicator, icon or ticker →

[Select]

Indicator, icon or ticker is selected. Function name appears.

- Press and hold to move pointer () continuously
- To cancel selection: () or ()

3 [Select]

Function or information appears.

### When Widgets Do Not Appear

Pointer () does not appear. After Step 1, use to highlight an item → [Select] to show function or information

- To show/hide widgets: ()




## ■ Using Pointer ( )


> In Standby,  →  [Menu] → Select an item (See below)

| Item               | Operation/Description   |
|--------------------|---|
| to widgets list    | Open Widget List  |
| Yahoo! JAPAN Login | Open Yahoo! JAPAN log in window                                 |
| Stand-by Display   | Change Standby wallpaper<br>> Select a folder → Select an image |
| Mobile Widget?     | View Mobile Widget overview (Japanese)                          |

## Horizontal Open Menu

In Horizontal Open Position, press  in Standby to access Horizontal Open Menu. From Horizontal Open Menu, access functions available in Horizontal Open Position.



- Default Horizontal Open Menu varies by handset color ( [P.18-23](#) ).
- Press  to go from Horizontal Open Menu to Standby.
- Set handset to open to Horizontal Open Menu, Digital TV or Camera for Horizontal Open Position (Horizontal View: [P.18-13](#) ).
- Some operations and menu items in Horizontal Open Menu differ from those that appear in this guide.

## Standby Options & Event Indicators

Check various indicators and information in Standby.

- To access functions/information from indicators: [P.1-20](#)

### Event Indicators

Event Indicators appear for missed calls, messages, etc.



### ■ Events

|                                    |  |
|------------------------------------|--|
| <b>Missed Calls</b>                | Missed calls ( <a href="#">P.2-13</a> )  |
| <b>New Messages</b>                | New messages ( <a href="#">P.13-10</a> )   |
| <b>Answer Phone</b>                | Recorded caller messages ( <a href="#">P.2-16</a> )  |
| <b>Voice Mail</b>                  | New Voice Mail ( <a href="#">P.2-19</a> )  |
| <b>Missed Call Notification</b>    | If Missed Call Notification is active, indicator appears for calls missed while handset is off, out-of-range, engaged, etc. ( <a href="#">P.2-19</a> ) |
| <b>S! Information Channel Info</b> | S! Information Channel (received/failed updates) ( <a href="#">P.7-6</a> )   |
| <b>Weather Info</b>                | Weather Indicator (received/failed updates) ( <a href="#">P.7-7</a> )  |

### ■ Other Information

- Missed alarm ( [P.12-6](#) )
- S! Appli startup notice ( [P.15-3](#) )
- USB Mode setting ( [P.10-11](#) )
- Missed location information request
- Auto location information notice ( [P.17-3](#) )
- Timer ( [P.5-14](#) )
- Content Key ( [P.9-5](#) )
- Software Update result ( [P.19-13](#) )

## Mobile Widget (Japanese)

Paste various widgets to Standby to access information or tools from Standby.

- Mobile Widget: ☞P.7-2
- To show/hide widgets: ☞



## S! Quick News (Japanese)

By default, S! Quick News appears at bottom of Display.

- S! Quick News: ☞P.7-4
- Show/hide S! Quick News: ☞P.18-16



## S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear on Standby.

- S! Information Channel/Weather: ☞P.7-6



## Shortcuts

Access frequently used functions from Standby.

- Following shortcuts are set by default (Services available only in Japanese):  
S-1 battle, Content Value Package and Simple Select Video



### Adding Shortcuts

- Some functions are not available for shortcuts.

- 1 Open a function, **[Y?][Menu]** → **Add shortcut icon** → **YES**

### Editing/Deleting Shortcuts

- 1 In Standby, **[O]** → **[X]** to move pointer → Highlight a shortcut
- 2 **[Y?][Menu]** → Select an item (See below)

| Item        | Operation/Description   |
|-------------|---|
| Edit title  | > Edit title  |
| Sort        | > Select an item → Select a target → <b>[Finish]</b> → <b>YES</b> |
| Delete this | > <b>YES</b>  |
| Delete all  | > <b>YES</b>  |

## External Display

### Use External Display to view Standby information when handset is closed.

- External Display turns off 15 seconds after handset is closed. Press any side key to turn it back on.
- Close handset while playing recorded videos, music, or recorded programs. Playback image/information appears on External Display.
- TV is unavailable on External Display.



## Key Operations in Standby

| Key Operation |             | Description   |
|---------------|-------------|---|
| [A]           | Short Press | Turn on illumination  |
|               | Long Press  | —   |
| [V]           | Short Press | Activate Info Notice Setting (☞P.18-8)  |
|               | Long Press  | Set/Cancel Manner Mode  |
| [C] (CAM)     | Short Press | Show new message/missed call details (If both available, only missed call details appear.) <ul style="list-style-type: none"> <li>● In missed call logs, press [A]/[V] to view previous/next logs</li> <li>● In Received Message window, press [A]/[V] to scroll screen or press and hold [A]/[V] to view previous/next messages.</li> <li>● To return to Standby: [MULTI]</li> </ul> |
|               | Long Press  | Activate Camera (☞P.6-6)  |

### Note

- Widgets and shortcuts do not appear in External Display.
- When YES/NO selection window appears in External Display, operations are disabled if handset is closed.

### Tip

- External Display (☞P.18-5)

# Customizing User Interface

## Customized Screen/Familiar Usability

|                           |  |
|---------------------------|--|
| <b>Customized Screen</b>  | Download and set Customized Screen to personalize user interface, ringtone, etc., to a selected theme. |
| <b>Familiar Usability</b> | Download Familiar Usability applications that mimic the interface design of other handsets.            |

### Downloading Customized Screen/Familiar Usability

Download characters or applications from websites.

**Main Menu** ► **Data Folder** ► **Customized Screen**





#### 1 *Customized Screen* or *Familiar Usability* → YES

Website providing characters or applications appears.  
Follow onscreen instructions.

- To manage Customized Screen applications in Data Folder:

☞ P.9-11

### Setting Customized Screen/Familiar Usability

- 1 In Standby, 
- 2  [Customize] → *Customized Screen* or *Familiar Usability*
- 3 Highlight a theme →  [Set]
  - To toggle thumbnail and list:  [Change]
- 4 YES

#### Note

- Customized Screen or Familiar Usability cannot be set when battery is low.
- Other functions are not available while switching. For some seconds after switching is complete, all calls/messages may be blocked.
- Familiar Usability does not completely remake handset.
- Alternatively, **Main Menu** ► **Settings** ► **Customized Screen**  
To cancel, select **Release Settings**.
- When Simple menu is active, Customized Screen and Familiar Usability settings are not reflected. To reflect settings, cancel Simple menu.

## Changing Display Font

Change Display font. Fonts can also be downloaded.

### Downloading Fonts

Main Menu ► Settings ► Display Settings ► Font

#### 1 Download Font → YES

Follow onscreen instructions.

- For details on Font folder (Data Folder): ↗P.9-11

#### Note

- While Personal Data Lock is set, fonts cannot be downloaded.

### Changing Font

Main Menu ► Settings ► Display Settings ► Font

#### 1 Select a folder → Highlight a font → [Set]

## Private Menu

Save frequently used functions in Private Menu.

- Up to 12 items can be saved.
- Change preset functions as needed.

 
### Opening Private Menu

#### 1 In Standby, [Private] → [Private]

Private Menu appears.

- To return to Main Menu: [Normal]

#### 2 Select a menu

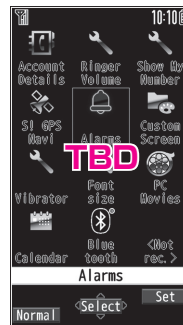

Private Menu Window

### Change Private Menu Background

- > After Step1, [Set] → [Menu] → Change BG image → Select a folder → Select an image

## Customizing Private Menu

- 1 In Standby, → [Private] → [Set]
- 2 Highlight a target → [Menu] → **Add to menu**
- 3 Select an item

### Cancel Functions

➤ In Step 2, (highlight a function →) [Menu] → **Release this** or **Release all** → YES

### Reset Private Menu

➤ In Step 2, [Menu] → **Reset menu** → YES



Private Menu Setting Window

## Adding Shortcuts

- 1 In Standby, → [Private] → [Set]
- 2 [Menu] → **Add shortcut icon** → YES

 
### Note

- Alternatively, open Private Menu setting window from **Main Menu** ► **Settings** ► **Display Settings** ► **Private Menu**

## Simple Menu

Activate Simple menu to limit menu options to basic ones.

- Handset is limited to basic operations (➡P.1-27).

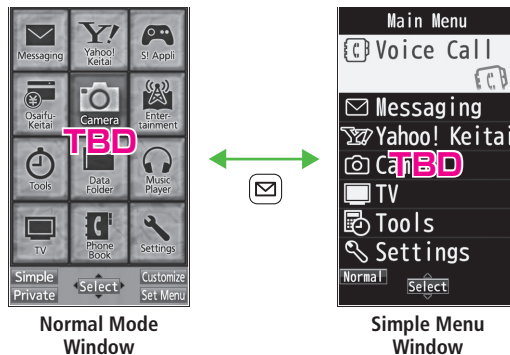

Normal Mode Window



Simple Menu Window

# 1

## Activating Simple Menu

- 1 In Standby,  →  [Simple] → **YES**
- 2 **YES** or **NO**
  - Select **YES** to set all items in Font Size (☞P.18-6) to **Large**.
  - To open Simple menu:  in Standby.

### Cancel Simple Menu

> In Standby,  →  [Normal] → **YES**

#### Note

- Turning off the power does not cancel Simple menu.
- Widgets (in Standby) and S! Quick News do not appear in Simple menu. Customized Screen or Familiar Usability setting is canceled.

## Simple Menu

| Simple Menu           | Page  | Simple Menu          | Page                  |
|-----------------------|-------|----------------------|-----------------------|
| <b>Voice Call</b>     |       | <b>TV</b>            |                       |
| Outgoing Log          | 2-13  | Watch TV             | 5-5                   |
| Incoming Log          | 2-13  | Timer Recording      | 5-14                  |
| Phone Book            | 4-6   | Channel Setting      | 5-4                   |
| Create New Phone Book | 4-3   | <b>Tools</b>         |                       |
| Answer Phone          | 2-15  | Data Folder          | 9-2                   |
| Account Details       | 1-30  | Alarms               | 12-6                  |
| <b>Messaging</b>      |       | Calendar             | 12-2                  |
| Incoming Mail         | 13-15 | Calculator           | 12-8                  |
| Create New            | 13-4  | Notepad              | 12-8                  |
| Retrieve New          | 13-15 | Receive via Infrared | 10-3                  |
| Drafts                | 13-15 | <b>Settings</b>      |                       |
| Sent Messages         | 13-15 | Ringtones/Volume     | 1-17<br>18-2          |
| Create New SMS        | 13-7  | Screen/Fonts         | 18-3<br>to<br>18-6    |
| <b>Yahoo! Keitai</b>  |       | Call Time & Cost     | 18-9                  |
| Yahoo! Keitai         | 14-2  | Date & Time          | 18-8                  |
| Bookmarks             | 14-8  | Security             | 11-2<br>16-5<br>19-12 |
| Saved Pages           | 14-8  | Call Settings        | 2-17<br>to<br>2-21    |
| Enter URL             | 14-4  |                      |                       |
| <b>Camera</b>         |       |                      |                       |
| Take Pictures         | 6-6   |                      |                       |
| See Pictures          | 6-14  |                      |                       |
| Shoot Videos          | 6-8   |                      |                       |
| Watch Videos          | 6-14  |                      |                       |



## Passwords

Phone Password, Center Access Code and Security Code are needed for handset use.

### Phone Password

<Default> 9999

**4 to 8-digit number required to use/change some handset functions.**

- Enter number within 15 seconds.
- \_ appears for each digit entered.
- Phone Password can be changed on handset (☞P.11-2).

### Center Access Code

**4-digit number specified at initial subscription; required to access Voice Mail via landlines or subscribe to fee-based information.**

- Do not attempt to change Center Access Code. For details, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).

### Security Code

**4-digit number specified at initial subscription, required to restrict handset services (☞P.2-20).**

- Enter number within 15 seconds.
- If entered incorrectly three times, Security Code settings lock; Security Code & Center Access Code must be changed. Reach SoftBank Mobile Customer Center, General Information (☞P.19-34) for details.
- Security Code can be changed on handset (☞P.2-21).

#### Note

- Write down Phone Password, Center Access Code and Security Code. Do not reveal Phone Password, Center Access Code and Security Code. SoftBank is not liable for misuse or damages.
- For details, contact SoftBank Mobile Customer Center, General Information (☞P.19-34).

# 1

## Getting Started

 
### Multi Task

Activate up to three functions from four different groups at the same time.

| Group                          | Function  |
|--------------------------------|---|
| ① Messaging Group              | Messaging   |
| ② Yahoo! Keitai/S! Appli Group | Yahoo! Keitai/S! Appli/Entertainment (except for Mobile Widget)/Osaifu-Keitai (Lifestyle-Appli) |
| ③ Tools Group                  | Music Player*/Camera/Tools/Data Folder/TV/Phone Book/Entertainment (Mobile Widget)              |
| ④ Settings Group               | Settings/Osaifu-Keitai (IC Card Settings)   |

\* Functions other than Tools Group may be included.

- [▼] appears above the icons of an active group.
- [ ] appears for single function in use; [ ] for multiple functions in use.

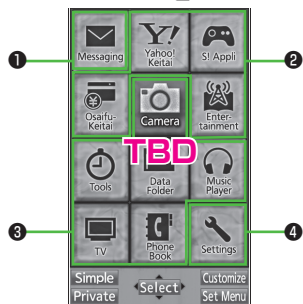

#### Tip

- Other Functions while Watching TV (P.5-8)
- Using Other Functions while Listening to Music (Play Background) (P.8-7)

### Activating Another Function

Activate another function from a different group. Multi Task is unavailable when Simple menu is active.

- 1 [ ] (MULTI) → *Open Menu* → Select a function



TASK MENU Window

#### Note

- If another function is selected from same group, confirmation appears. Select **YES** to cancel current function and start a new function.

### Ending Current Functions

- 1 [ ]

#### End All Active Functions

- > [ ] (MULTI) → [ ] [END] → YES

## View Blind

Activate View Blind to protect Display from prying eyes.

Main Menu ► Settings ► Display Settings ► View Blind

1 *ON*

2 Select a level

- Set level 1-3 (Level 3 is the highest level).

### Note

- Alternatively, press and hold **(S)** to activate/cancel. Previously selected level takes priority.
- View Blind cannot be activated: While in Standby (Normal Position only); while S! Appli is active; while Privacy Key Lock is active; during All Reset

## My Number

Confirm handset phone number in Account Details (P.4-13). Also confirm data saved in Account Details: name, mail address, etc.

- 1 In Standby, **(S)** → **(0)**  
Account Details appears.



# 1 Getting Started

## Making/Answering Voice Calls ..... 2-2

|   |     |
|---|-----|
| Making Voice Calls .....                | 2-2 |
| Outgoing Call Functions .....           | 2-3 |
| Emergency Calls (110, 119, 118) .....   | 2-4 |
| Answering Voice Calls.....              | 2-5 |
| Incoming Call Functions.....            | 2-5 |
| Making Voice Clear (Shikkari Talk)..... | 2-5 |

## Making/Answering Video Calls..... 2-6

|                             |     |
|-----------------------------|-----|
| Note .....                  | 2-6 |
| Video Call Window .....     | 2-6 |
| Making Video Calls.....     | 2-7 |
| Answering Video Calls ..... | 2-8 |
| Remote Monitoring .....     | 2-8 |

## International Calls ..... 2-9

|                                |      |
|--------------------------------|------|
| Calling Abroad from Japan..... | 2-9  |
| Calling while Abroad .....     | 2-10 |
| Global Roaming Settings .....  | 2-10 |

## Engaged Call Functions ..... 2-12

|  |      |
|--|------|
| Operations Available during a Voice Call ..... | 2-12 |
| Operations Available during a Video Call ..... | 2-12 |

## Call Log..... 2-13

|   |      |
|---|------|
| Viewing Call Logs.....                  | 2-14 |
| Making Calls from Call Log.....         | 2-14 |
| Functions Available from Call Log ..... | 2-15 |

## Answer Phone..... 2-15

|   |      |
|---|------|
| Activating/Canceling Answer Phone ..... | 2-15 |
| Playing Messages .....                  | 2-16 |
| Answer Phone Functions .....            | 2-16 |


## Optional Services ..... 2-17

|                       |      |
|-----------------------|------|
| Overview .....        | 2-17 |
| Call Forwarding ..... | 2-17 |
| Voice Mail .....      | 2-18 |
| Call Waiting.....     | 2-20 |
| Call Barring.....     | 2-20 |
| Caller ID .....       | 2-21 |

# Making/Answering Voice Calls

## Making Voice Calls

### Before Calling

- Confirm signal strength (☞P.1-10)
- If any of these indicators appear:  
  
 →Calls cannot be made (☞P.1-10, P.1-11, P.19-12)

### 1 Enter a phone number

- Include area code for all numbers.

08000000000000000000  
 T B D X X X X


 

### 2 Confirm the number, then

- To adjust volume:  or 

### 3 to end call

Call Time appears.

### Correcting Misentries

Use  to place cursor at digit to delete, then .  
 Press and hold  to delete the digit and all digits to the right of cursor.

### Note

- Do not cover antenna area (☞P.1-6) with hand or sticker; may weaken signal strength and cause calls/transmissions to be unavailable.
- Calls cannot be made in Horizontal Open Position except when earphone/microphone is connected.

### Tip

- Operations Available during a Voice Call (☞P.2-12)
- Making Calls from Call Log (☞P.2-14)
- Saving Entered Numbers to Phone Book (☞P.4-5)
- Making Calls from Phone Book (☞P.4-6)

### Settings

- Call Time & Call Cost
- Set Handset Response when Closed during Call (☞P.18-9)

## Outgoing Call Functions

### Showing/Hiding Caller ID

- > Enter number → [☒][Menu] → *Notify caller ID* → *OFF* or *ON*
- To cancel setting: [☒][Menu] → *Notify caller ID* → *Cancel prefix*
- Setting Caller ID on/off (Caller ID: ☞P.2-21)

### Adding Prefix to Phone Number

#### ■ Save Prefix

- > **Main Menu** ▶ **Settings** ▶ **Call Settings** ▶ **Prefix**
  - ▶ Highlight **<Not Recorded>** ▶ [☒][Edit] ▶ Enter a name
  - ▶ Enter a prefix number
- Up to seven entries can be saved.
- To check entries: Select a saved prefix.
- To delete entries: Highlight a prefix → [☒][Menu] → *Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) → *YES*

#### ■ Make Calls Using Prefix

- > Enter a number → [☒][Menu] → *Prefix numbers* → Select an entry → Voice Calls: [☞] / Video Calls: [☒][V. Call]
- Alternatively, in detail window of Phone Book, Redial, Outgoing Call Logs or Incoming Call Logs, [☒][Menu] → *Prefix numbers* → Select an entry → Voice Calls: [☞] / Video Calls: [☒][V. Call]

Example: Save "186" and "184" as prefixes, and add them to phone numbers to show/hide your caller ID when making calls.

## Sending Touch-tone Signals

Send touch-tone signals for services such as reserving tickets, checking bank balance, etc. Save number strings to be sent as a touch-tone signal. Use P (pause) to separate numbers when saving.

#### ■ Save Pause Dial

- > **Main Menu** ▶ **Settings** ▶ **Phone Settings** ▶ **Pause Dial**
  - ▶ [☒][Edit] → Enter a number string
- To enter a pause (p): Press and hold [⌘]
- To delete: In Pause Dial window, [☒][Menu] → *Delete* → *YES*

#### ■ Send Pause Dial

- > **Main Menu** ▶ **Settings** ▶ **Phone Settings** ▶ **Pause Dial**
  - ▶ [☒][Send] ▶ Enter a phone number ▶ [☞] ▶ Once line is connected, press [☒][Send]
- Number string is sent each time [☒][Send] is pressed.
- To send all number strings at one time: Once line is connected, press and hold [☒] → *Send at one time*

## Emergency Calls (110, 119, 118)

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Coast Guard) even when some handset restrictions are active.

### Calls Cannot be Made in Following Cases:

- When *Set Max Cost Limit* is *ON* and charge limit is reached
- In PIN/PIN2, PUK/PUK2 entry window

## Emergency Positioning Request

When an emergency call is made from a mobile phone, location is reported to first response agencies such as the police.

 
- Location information may be inaccurate due to location or signal conditions. Describe location or nearby landmarks.
- Base Station Positioning System is accurate within 100 meters to 10 kilometers. Location information from distant base stations may be inaccurate.
- Function available where first response agencies have completed system installation.
- Dialing 184 before 110, 119 or 118, cancels location report. However, first responders may obtain location information for immediate and serious threats to life.
- Not available for international roaming.
- Requires no separate subscription or transmission fees.



## Answering Voice Calls

### When a Call Arrives...

941P rings; Notification Light flashes.

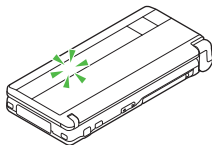

If Caller ID is sent, number appears in Internal Display and External Display; if saved in Phone Book, caller's name appears.

When an International call arrives,  appears at upper left of caller's phone number.

#### 1 to talk

- To adjust volume:  or 

#### 2 to end call

Call Time appears.

#### ■ Adjust Ringer Volume

> While 941P is ringing, .

- Volume adjustment is disabled in following cases:
  - During Manner Mode (☞P.1-17)
  - While **Ringer Volume** is set to **Escalating Tone** (☞P.18-2)

#### Note

- When Caller ID is not sent, **Withheld** appears.
- Calls cannot be received in Horizontal Open Position except when earphone/microphone is connected.




 

#### Tip

- Operations Available during a Voice Call (☞P.2-12)
- Rejecting Unknown Callers ● Rejecting Calls without Caller ID (☞P.11-11)

**Settings** ● Change Answer Setting ● Answer Calls by Opening Handset (☞P.18-7)

## Incoming Call Functions

Following operations are available for incoming calls.

|                     |   |
|---------------------|---|
| Place Calls on Hold | >    |
| Answer Phone        | >  /    |
| Call Rejection      | >  [Menu] → <b>Call Rejection</b> <ul style="list-style-type: none"> <li>● Rejecting Unknown Callers/Rejecting Calls without Caller ID (☞P.11-11)</li> </ul>   |
| Call Forwarding     | >  [Menu] → <b>Call Forwarding</b> <ul style="list-style-type: none"> <li>● Activate Call Forwarding (☞P.2-17) beforehand to forward incoming calls to a preset number. If Call Forwarding is not active, call is rejected.</li> </ul> |

## Making Voice Clear (Shikkari Talk)

<Default> ON

Make other party's voice clear according to surrounding noise.

Main Menu ▶ Settings ▶ Call Settings ▶ Shikkari Talk

1 **ON** or **OFF**

## Making/Answering Video Calls

Exchange video/sound with video call-compatible mobiles.

- Send Alternative Picture (still image) or video Image via Outside Camera.

### Tip

 
- Remote Monitoring (P.2-8)

### Note

- Only available within 3G network coverage.
- 941P is 3G-324M compliant; calls connected via different systems may be disconnected (charges apply).
- Increasing Speaker volume may cause interference. Decrease volume or use earphone.
- Handset may become warm during Video Call. This is not malfunction.
- When incoming/outgoing sound or image fails, try calling again.

## Video Call Window

Example: Outgoing Video Call by Default

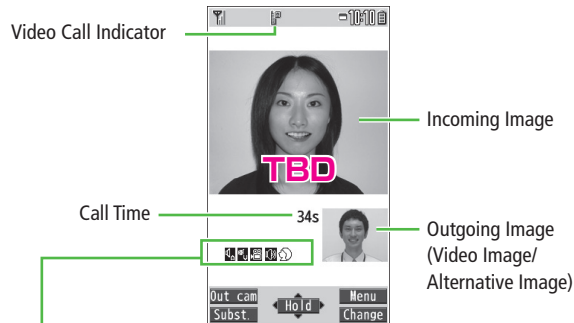

### Indicators

- |                                    |                                    |
|------------------------------------|------------------------------------|
| : Incoming/Outgoing Sound OK       | : Alternative Image ON             |
| (Gray): Incoming/Outgoing Sound NG | : Speaker ON                       |
| : Incoming/Outgoing Image OK       | : AV output                        |
| (Gray): Incoming/Outgoing Image NG | : During Bluetooth® handsfree call |
| : Video ON                         | : Portrait                         |
|                                    | : Close-up                         |
|                                    | : Landscape                        |
|                                    | : Night mode                       |

- Image display changes depending on settings.

## Making Video Calls

### Before Calling

- Confirm signal strength (☞P.1-10)
- If any of these indicators appear:



→ Video Calls cannot be made (☞P.1-10, P.1-11, P.19-12)

### 1 Enter a phone number

080XXXXXX

### 2 Confirm the number, then [V. Call]

When answered, outgoing and incoming images appear; other party's voice sounds via Speaker.

- To adjust volume: [Speaker] or [Volume]

### 3 [End Call] to end call

#### Note

- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (☞P.2-12).

#### Tip

- Outgoing Call Functions (☞P.2-3)
- Operations Available during a Video Call (☞P.2-12)
- Making Calls from Call Log (☞P.2-14)
- Other Ways to Add New Entries (☞P.4-5)
- Making Calls from Phone Book (☞P.4-6)

#### Settings


- Change Outgoing Image ● Switch to Voice Call when Video Call Fails (☞P.18-12)

 
## Answering Video Calls

### When a Video Call Arrives...

941P rings; Notification Light flashes.

If Caller ID is sent, number appears in Internal Display and External Display; if saved in Phone Book, caller's name appears.

When an International call arrives,  appears at upper left of caller's phone number.

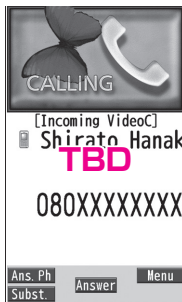


1



Inside Camera Image is sent.

- To send Alternative Image:

  [Subst.]

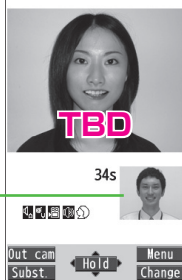

2



to end call

#### Note

- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (P.2-12).

#### Tip


- Adjust Ringer Volume ● Incoming Call Functions (P.2-5)
- Operations Available during a Video Call (P.2-12)

## Remote Monitoring


Use 941P as a monitoring camera to observe a remote place from a phone with 3G-324M compliant Video Call functions. Remote Monitoring starts when 941P receives a Video Call from preset phone number.

### Saving Numbers to Activate Remote Monitoring


Main Menu ▶ Settings ▶ Video Call ▶ Remote Monitoring

- 1 Enter Phone Password → *Other ID*
- 2 <Not Recorded> → Enter a phone number → 
- 3 *Ring Tone Duration* → Enter time (sec)
- 4 *Setting* → *ON*
  - Setting cannot be set to *ON* in Manner Mode.


### ■ Select Numbers from Phone Book/Call Log

> In Step 2, highlight **<Not Recorded>** →  [Menu] → *Refer to*  
→ Select an item → Select a number

### ■ Delete Numbers

> After Step 1, (highlight a number →)  [Menu] → *Delete this* or  
*Delete all* → **YES**



## Using Remote Monitoring

- 1 Make a Video Call to 941P from a preset phone number  
After ring time elapses, Remote Monitoring starts.
  - A Video Call starts if 941P answers before auto answer activates.
- 2 To quit Remote Monitoring,  (caller or recipient side)

## International Calls

### Calling Abroad from Japan


 


- Application not required. For details, go to:  
[http://mb.softbank.jp/en/global\\_services/call/](http://mb.softbank.jp/en/global_services/call/)

- 1 Enter a phone number
- 2  [Menu] → *Int'l dial assist*  
Country/region code list appears.
- 3 Select a country/region
- 4 **Voice Calls**  


#### Video Calls

 [V. Call]

### ■ Enter Country/Region Code Directly

- >  → Press and hold  to display + (IDD Prefix) → Enter a country/  
region code → Enter a number (omit first 0)  
→ Voice Calls:  / Video Calls:  [V. Call]
- Do not omit leading 0 to call Italy (country code: 39).


## Calling while Abroad

- May require application to Global Roaming Service. Download and take Global Roaming Guide when traveling abroad. For details, go to: [http://mb.softbank.jp/en/global\\_services/global\\_roaming](http://mb.softbank.jp/en/global_services/global_roaming)

### Example: Calling Japan from Another Country/Region

- **Auto Assist** (☞Right) is set to **ON** and **Japan** by default.
- Only number starting with **0** is valid.

#### 1 Voice Calls

Enter a phone number → 

#### Video Calls

Enter a phone number →  [V. Call]

#### 2 Dial

First **0** is replaced by **+81**.

- To call a number just as saved in Phone Book: **Dial with orig.No.**

### Calling Other Countries/Regions Using Country/Region Code

Follow the same steps as calling abroad from Japan (☞P.2-9).

### Calling within the Same Country/Region


Follow the same steps as making a Voice Call/Video Call within Japan (☞P.2-2, P.2-7).

## Global Roaming Settings

From ▶ Main Menu ▶ Settings ▶ International Call

### International Call Settings

> **Int'l Dial Assist** → Select an item (See below)

| Item                     | Operation/Description  |
|--------------------------|--|
| <b>Auto Assist</b>       | Replace IDD Prefix with +<br>> <b>ON</b> or <b>OFF</b> (→ For <b>ON</b> , select a country/region)   |
| <b>Country/Area Code</b> | Save up to 27 country/region codes<br>> Highlight <Not Recorded> →  [Edit] → Enter a country/region name → Enter a country/region code<br>● To view an entry: Select a saved country/region name<br>● To delete: Highlight a country/region name →  [Menu] → <b>Delete this</b> or <b>Delete all</b> (→ For <b>Delete all</b> , enter Phone Password) → <b>YES</b> |
| <b>IDD Prefix</b>        | Edit IDD Prefix. IDD Prefix is set to <b>0046010</b> by default<br>>  [Menu] → <b>Edit</b> → Edit IDD Prefix  |

## ■ Network Mode

<Default> Automatically

> **Select Network** → Select an item (See below)

| Item                 | Operation/Description   |
|----------------------|---|
| <b>Automatically</b> | 3G/GSM service area in Japan or abroad.<br>941P selects 3G network in Japan or an available network automatically using area (network condition) abroad.  |
| <b>Manually</b>      | > Select an item <ul style="list-style-type: none"> <li>• <b>3G/GSM</b>: 3G/GSM service area in Japan or abroad. 941P selects an available network using area (network condition).</li> <li>• <b>3G</b>: 3G service area in Japan or abroad</li> <li>• <b>GSM</b>: GSM service area abroad. Unavailable in Japan</li> </ul> |

● **Automatically** is recommended.

## ■ Select Operator

<Default> Auto

> **Select Operator** → Select an item (See below)

| Item                     | Operation/Description   |
|--------------------------|---|
| <b>Auto</b>              | Select an operator automatically  |
| <b>Manual</b>            | Select an operator manually <ul style="list-style-type: none"> <li>&gt; Select an operator               <ul style="list-style-type: none"> <li>● Operators with <b>X</b> are not available.</li> <li>● To show operator list: [☒][Update]</li> </ul> </li> </ul> |
| <b>Network Re-search</b> | Search available networks <ul style="list-style-type: none"> <li>● When <b>Auto</b> is set, 941P selects an available operator automatically. When <b>Manual</b> is set, operator list appears.</li> </ul>  |

## ■ Operator Priority for Automatic Search

> **PLMN Setting** → [☒][Menu] → Select an item (See below)

| Item                           | Operation/Description   |
|--------------------------------|---|
| <b>Add your network</b>        | Save currently connected operator<br>> [☒][Finish] → <b>YES</b>   |
| <b>Add from list</b>           | > Select an operator → [●][Set] → Select a network type → [☒][Finish] → <b>YES</b> <ul style="list-style-type: none"> <li>● To search operators by country/region: [☒][Search] → Select a country/region (To search again in country/region list: [☒][Search] → Enter a country/region name)</li> </ul> |
| <b>Direct input</b>            | Save unlisted operators by entering country/region code and operator code<br>> Enter country/region code (3 digits) and operator code (2 to 3 digits) → Select a network type → [☒][Finish] → <b>YES</b>  |
| <b>Change priority</b>         | > Select a priority → [☒][Finish] → <b>YES</b>  |
| <b>Delete this/ Delete all</b> | > <b>YES</b> → [☒][Finish] → <b>YES</b>   |

## ■ View Operator Name in Standby

<Default> OFF

> **Operator Name** → **ON** or **OFF**

● When **ON** is set, Clock Position is set to **Pattern 1** even when **Pattern 2 - Pattern 12** is set (☞P.18-4).

## Engaged Call Functions

### Operations Available during a Voice Call

|                                    |  |
|------------------------------------|--|
| <b>Adjust Volume</b>               | <p>&gt;  / </p> <ul style="list-style-type: none"> <li>● Adjust volume within two seconds.</li> <li>● Adjusted volume is retained even after calls end or handset is turned off.</li> </ul>  |
| <b>Place Call on Hold</b>          | <p>&gt;  [Hold]</p> <ul style="list-style-type: none"> <li>● To resume call:  <sup>2</sup></li> </ul>  |
| <b>Speaker ON/OFF</b> <sup>1</sup> | <p>Toggle Speaker or Earpiece</p> <p>&gt; </p>   |
| <b>Record Conversation</b>         | <p>Record for about three minutes per call</p> <p>&gt; Press and hold  or  [Rec]</p> <ul style="list-style-type: none"> <li>● To end recording:  [Stop],  or press and hold </li> <li>● To play back recorded data:  P.2-16</li> </ul> |
| <b>Toggle Manner Mode</b>          | <p>&gt; Press and hold  (#)</p>  |
| <b>Toggle Handset/Bluetooth®</b>   | <p>Toggle handset or Bluetooth® device</p> <p>&gt; Press and hold  <sup>2</sup></p>  |

<sup>1</sup> Normal Position only

<sup>2</sup> Function may not be available or call may be placed on hold in Horizontal Open Position.

### Operations Available during a Video Call

|                                     |  |
|-------------------------------------|--|
| <b>Adjust Volume</b>                | <p>&gt;  / </p> <ul style="list-style-type: none"> <li>● Adjust volume within two seconds.</li> <li>● Adjusted volume is retained even after calls end or handset is turned off.</li> </ul>  |
| <b>Place Call on Hold</b>           | <p>&gt;  [Hold]</p> <ul style="list-style-type: none"> <li>● To resume call:  <sup>2</sup></li> <li>● To send Alternative Image:  [Subst.]</li> </ul>  |
| <b>Speaker ON/OFF</b> <sup>1</sup>  | <p>Toggle Speaker or Earpiece</p> <p>&gt; </p>   |
| <b>Record Conversation</b>          | <p>Record up to five calls for about 20 seconds each</p> <p>&gt; Press and hold </p> <ul style="list-style-type: none"> <li>● To end recording:  [Stop] or press and hold </li> <li>● To play back recorded data:  P.2-16</li> </ul> |
| <b>Inside Camera/Outside Camera</b> | <p>&gt;  [In cam/Out cam]</p>  |
| <b>Camera/Alternative Image</b>     | <p>Toggle Camera Image and Alternative Image</p> <p>&gt;  [Image/Subst.]</p>   |
| <b>Incoming/Outgoing Image</b>      | <p>Toggle Incoming Image and Outgoing Image</p> <p>&gt;  [Change]</p>  |
| <b>Zoom</b>                         | <p>&gt;  (zoom in) or  (zoom out)</p>  |
| <b>Toggle Manner Mode</b>           | <p>&gt; Press and hold  (#)</p>  |



|                                  |   |
|----------------------------------|---|
| <b>Toggle Handset/Bluetooth®</b> | Toggle handset or Bluetooth® device<br>>  [Menu] → <i>Talk on BT/Phone</i> → <i>Bluetooth</i> or <i>Phone</i> |
| <b>Backlight Setting</b>         | >  [Menu] → <i>Back light</i> → <i>Constant light</i> or <i>15 seconds light</i>                              |
| <b>Video Call Setting</b>        | >  [Menu] → <i>V. Call settings</i> → Follow the steps for selected item (☞P.18-12)                           |
| <b>LCD AI</b>                    | Activate/deactivate auto image compensation<br>>  [Menu] → <i>LCD AI</i> → <i>ON</i> or <i>OFF</i>            |
| <b>Account Details</b>           | >  [Menu] → <i>Account details</i>  |
| <b>Key Guide</b>                 | >  [Menu] → <i>Key guide</i>  |

<sup>1</sup> Normal Position only

<sup>2</sup> Function may not be available or call may be placed on hold in Horizontal Open Position.

## Call Log

Incoming and outgoing call records appear here. Use these records to call back.

|                           |   |
|---------------------------|---|
| <b>Redial</b>             | Up to 30 outgoing call records (Voice and Video) are saved. Older records of same number are deleted.   |
| <b>Outgoing Call Logs</b> | Up to 30 outgoing call records (Voice and Video) and up to 30 outgoing transmission records (64K data and packet transmission) are saved. Older records of same number are also retained. |
| <b>Incoming Call Logs</b> | Up to 30 incoming call records (Voice and Video) and up to 30 incoming transmission records (64K data transmission) are saved. Older records of same number are also retained.            |

### Indicators for Redial/Outgoing Call Logs/Incoming Call Logs

|               |  |                   |   |
|---------------|--|-------------------|---|
| <b>PHONE</b>  | Dialed/received Voice Calls  | <b>REMOTE</b>     | Received Remote Monitoring calls  |
| <b>MISS</b> * | Missed Voice Calls   | <b>VIDEO</b>      | Dialed/received Video Calls   |
| <b>PHONE</b>  | Dialed/received Video Calls  | <b>64K</b>        | Received calls of 64K data transmission   |
| <b>MISS</b> * | Missed Video Calls   | <b>MISS</b> *     | Missed calls of 64K data transmission   |
| <b>MSG</b>    | New messages recorded on Answer Phone                                      | <b>PKT</b>        | Dialed calls of packet transmission   |
| <b>PHONE</b>  | Dialed/received international Voice Calls                                  | <b>NO CONNECT</b> | Received calls of 64K data/packet transmission when no external device is connected |
| <b>MISS</b> * | Missed international Voice Calls   |                   |   |
| <b>PHONE</b>  | Dialed/received international Video Calls                                  |                   |   |
| <b>MISS</b> * | Missed international Video Calls   |                   |   |
| <b>MCN</b> *  | Calls received while handset is off, out-of-range, engaged, etc. (☞P.2-19) |                   |   |

\* Unchecked calls are highlighted.