

S! Quick News (Japanese)

Add news headlines, weather forecasts, etc. via S! Quick News List to scroll across Standby Window.

- Registering or viewing S! Quick News incurs transmission fees. No fees apply for viewing ticker information. For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Registering S! Quick News Items

- Register one *Quick* news, up to four *General* news and one *Special* news.

Main Menu ▶ Entertainment ▶ S! Quick News
▶ S! Quick News List

1 Add News → YES

Yahoo! Keitai connects and contents list appears.



2 Select an item

Follow onscreen instructions.

Opening New Information

Viewing New Information in Standby

When new information is received,  appears in Standby.

1 In Standby,  →  to move pointer → Select ticker

2  [Select]

Content list appears.

3 Select information

Details appear.






Tip

Settings

- Turn Back Light Off after All S! Quick News Viewed (☞P.18-6)
- Show Only Unread Items in Standby ● Change Marquee Speed
- Hide S! Quick News ● Show Image Data (☞P.18-16)

Opening S! Quick News List

Icons

- | | |
|---|---|
|  Unread Quick news |  Unread General news |
|  Read Quick news |  Read General news |
|  Auto Refresh disabled |  Unread Special news |
| |  Read Special news |


Main Menu ▶ Entertainment ▶ S! Quick News
▶ S! Quick News List

- 1 Select an item
Content list appears.
- 2 Select information
Detailed information appears.
- 3 To connect to the Network, select a title → **YES**

■ Update Manually

> In Step 1,  [Menu] → **Update** or **All Update** → **YES**

■ View Summary

> In Step 1, highlight information →  [Menu] → **Summary Display**

■ Delete Registered Items

> In Step 1, (highlight information →)  [Menu] → **Delete** or **All Delete** → **YES** (→ For **All Delete**, enter Phone Password)

Note

- Alternatively, **Main Menu ▶ Entertainment ▶ S! Quick News**
▶ Settings ▶ Del S! Quick News List ▶ YES to delete all information

Tip

Settings

- Automatically Update S! Quick News List
- Delete S! Quick News Information (P.18-16)

S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear on Standby.

- Transmission fees apply for updates.

Registering/Canceling

Main Menu ► Entertainment ► S! Info Ch./Weather

1 Register/Cancel → YES

941P connects to the Network.
Follow onscreen instructions.

Using S! Information Channel

- Up to seven updates are saved.

Viewing New Information

When information arrives,  and Event Indicator appear in Standby.

- 1 In Standby,  →  to move pointer → Select Event Indicator

- 2  [Select]

Follow onscreen instructions.

- Option Menu Items (P.7-8)



Manually Retrieve Information

Select Event Indicator "Failed to download"

- Alternatively, Main Menu ► Entertainment ► S! Info Ch./Weather ► Get Latest Contents ► YES

Delete Information

> Main Menu ► Entertainment ► S! Info Ch./Weather ► Highlight What's New? ►  [Menu] ► Delete ► YES

Note

- Alternatively, Main Menu ► Entertainment ► S! Info Ch./Weather ► What's New? to retrieve information
- If there is unread information in both S! Quick News and S! Information Channel,  does not appear. Only Event Indicator appears.

Viewing Previously Received Information

Main Menu ► Entertainment ► S! Info Ch./Weather

1 History → Select a date

 for unread news and  for read news appear.

Delete History

> Main Menu ► Entertainment ► S! Info Ch./Weather ► History ► (Highlight a History) ►  [Menu] ► Delete or Delete all ► YES
(► For Delete all, enter Phone Password)

Using Weather Indicator

Weather Indicator for current forecast area appears in Standby.

Viewing New Information

Event Indicator and Weather Indicator appear for weather updates.

1 In Standby,  →  to move pointer → Select Event Indicator or Weather Indicator

2  [Select]

Information appears.



Follow onscreen instructions.

- Option Menu Items (P.7-8)

Weather Indicator

Indicators are updated periodically.

Example:  Clear,  Rain later thunderstorm,

 /  Cloudy with occasional snow, etc.

- See Weather Indicator List (P.19-24) for a complete list of indicators.

Manually Update Weather Indicator

Select Event Indicator "*Failed to download*"

- Alternatively, **Main Menu** ▶ Entertainment
▶ S! Info Ch./Weather ▶ Weather Indicator ▶ Manual Update
▶ YES

Hide Event Indicator

- > **Main Menu** ▶ Entertainment ▶ S! Info Ch./Weather
▶ Weather Indicator ▶ Missed Event Settings ▶ OFF

Note

- Alternatively, view forecast details from **Main Menu**
▶ Entertainment ▶ S! Info Ch./Weather ▶ Weather Indicator
▶ Weather

Hiding Weather Indicator


- Main Menu** ▶ Entertainment ▶ S! Info Ch./Weather
▶ Weather Indicator ▶ Display Settings

1 **OFF**

- When Display Settings is set to **OFF**, update is also deactivated.

Option Menu Items

 
While viewing a content, press  [Menu] for these options.

Item	Operation/Description
Forward	Go to next page
Text Copy	Copy page text
Select File	View, play or save file to Data Folder (From Step 2 in Downloading Image/Sound Files:  P.14-11)
Jump in this page	Jump to top/end of page
Yahoo! Keitai	View top menu
Font Size	Change character size* or character conversion method
Exit viewing this	Exit content

* Linked with Font Size setting in Internet option menu.

E-Books (Japanese)

Use **BookSurfing®** to acquire/view e-books, comics, photo books, etc. or **e-Book Viewer** to view XMDF files on 941P.

- BookSurfing® and e-Book Viewer are S! Appli.
- Download Content Keys ( P.9-5) to read CCF/XMDF files.
- Some copy protected files have extensions different from the ones below.

Application	File Format
BookSurfing®	CCF (.ccf)
e-Book Viewer	XMDF (.zbf, .zbx, .zbs)

- Some PC content may not be viewable via e-Book Viewer.

Main Menu ► Entertainment

1 *BookSurfing* or *e-Book Viewer*

- See application Help menu for usage information.

Note

- Launch BookSurfing®/e-Book Viewer via S! Appli, or select a file from Books in Data Folder.

Music Player

Overview	8-2
Saving Music	8-2
Downloading Chaku-Uta Full®	8-3
Saving Music Files by Using SD Audio	8-3
Transferring WMA Files	8-4
Using Music Player	8-5
Playback Window Indicators	8-5
Playing Music	8-6
Playback Window Operations.....	8-7
Functions while Playing Files.....	8-8
Chaku-Uta Full®/WMA List.....	8-9
Using Play List	8-10
Play List	8-11

Overview

Play music saved on 941P/microSD Card.

- Play List: [☞P.8-10](#)

Notes

- Files may not play due to file support issues or microSD Card status, etc.
- When battery is low, Music Player cannot play files.
- When battery is low during playback, confirmation appears.
- Playback pauses for incoming calls or Alarm. Playback resumes after calls are received or Alarm sounds.

Music Illumination

- Notification Light illuminates when playback starts. When playback starts during charging, Music Illumination lights before Charging Indicator.
- To turn off light, set **Music** to **OFF** in Notification Light setting ([☞P.18-10](#)).

Note

- Use earphone when listening to music.

Tip

- Use Bluetooth® Device for Wireless Playback ([☞P.10-10](#))

Saving Music

Save Music to play on Music Player.

Download Chaku-Uta Full® (☞P.8-3)	Open site link to download and save songs ----- Supported file format: SMC, MPEG-4 (MPEG-4 AAC, MPEG-4 AAC+ (HE-AAC), Enhanced aacPlus)
Save Music via SD Audio (☞P.8-3)	Save music CD songs via PC to microSD Card in AAC format ----- Supported file formats: MPEG-2 AAC, MPEG-2 AAC+SBR
Save WMA files (☞P.8-4)	Save Windows Media® Audio (WMA) files in PC to microSD Card via Windows Media® Player ----- Supported file formats: WMA

- Some files may not play even if format is supported.
- Copy protected files do not play after license expiry (Content Key: [☞P.9-5](#)).

Copy Protected Files

Copy protected files may not play, be saved or forwarded.

To play a copy protected file, obtain Content Key ([☞P.9-5](#)).

Confirm file expiry date or usage limitations (Music info: [☞P.8-8](#)).

Saving Music Files on PCs

When saving music files for use with 941P, observe the following guidelines:

- Copyrighted Works
 - Do not infringe on third party/intellectual property rights.
 - Music files are limited to private use.
- Obtain software to convert file format.
 - Refer to websites providing software.
 - Performance of some software types is not guaranteed.

Downloading Chaku-Uta Full®

Access websites directly from Music Player to download Chaku-Uta Full® files.

- View details (price, expiry date, etc.) on source website.

Main Menu ▶ Music Player ▶ Data Manager ▶ Main Folder ▶ Download Music

1 YES

941P connects to the Network and Download site appears.

- Follow onscreen instructions to download files.

Note

- Alternatively, follow these steps to access Download site:

Main Menu ▶ Data Folder ▶ Music ▶ Main Folder ▶ Download Music ▶ YES

Saving Music Files by Using SD Audio

Note

- Saving music files requires following:
 - 941P
 - microSD Card (commercial item)
 - USB cable (not included)
 - PC (Windows® XP, Windows Vista®)
 - Software for PC (commercial item)
 Panasonic brand "SD-Jukebox" is recommended. Purchase SD-Jukebox from website below:
<http://club.panasonic.jp/mall/sense/> (Japanese only)
- Music CD to save

Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode ▶ microSD Mode

- 1 Connect 941P to a PC via USB cable
- 2 Activate SD-Jukebox on PC
- 3 Set a music CD on PC
- 4 Save music files to micro SD Card
 - See SD-Jukebox manual for usage information.
 - After saving, release USB cable from 941P.

Transferring WMA Files

Transfer WMA files from PC to microSD Card via Windows Media® Player. Up to 600 files can be saved per microSD Card.

- Use PC with Windows Media® Player installed.
- When using Windows Media® Player 10 (10.00.00.3802 or later)/11 on Windows® XP, use Windows® XP Service Pack 2 or later.
- When using Windows Vista®, use Windows Media® Player 11.
- Insert microSD Card into 941P before preparing USB cable (Transferring Data via USB Cable: [P.10-12](#))

Main Menu ► Settings ► Connectivity ► USB Mode
► MTP Mode

1 Connect 941P to a PC via USB cable

Follow Windows Media® Player operations to transfer WMA files from PC to microSD Card.

 
- Refer to Windows Media® Player Help for operations.
- Terminate all software applications before disconnecting USB cable.

Note

- Do not remove microSD Card while transferring files to microSD Card. Files may be damaged.
- WMA files overwrite existing files with same name in handset when copied from PC. To check file names, refer to Windows Media® Player Help.
- 941P may not recognize WMA files saved to a microSD on a different handset. Handset may not recognize WMA files from PCs if **USB Mode** is set to **MTP Mode**. Delete WMAudio and WMSystem folders in My Items (MY FOLDER) on microSD, or format microSD Card ([P.9-18](#)) via PC. Formatting microSD deletes all saved files.
- To play WMA files on handset, save files to WMFile ([P.9-20](#)) on microSD Card and play the files from PC Movies folder in Data Folder.

Using Music Player

Playback Window Indicators

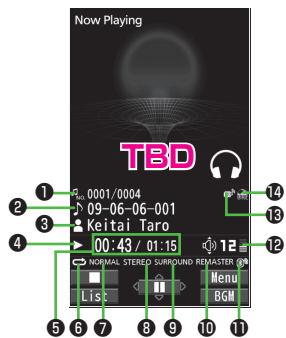


Item	Description								
1	File Number/Total Number —								
2	Title —								
3	Artist —								
4	Status —								
5	Elapsed Time/Total Time —								
6	Play Mode Indicators <table border="1"> <tr> <td>Play only one</td> <td>Repeat one</td> </tr> <tr> <td>Repeat all</td> <td>Random</td> </tr> <tr> <td>Random play&repeat</td> <td></td> </tr> <tr> <td>DEMO</td> <td>DEMO</td> </tr> </table>	Play only one	Repeat one	Repeat all	Random	Random play&repeat		DEMO	DEMO
Play only one	Repeat one								
Repeat all	Random								
Random play&repeat									
DEMO	DEMO								
7	Equalizer Setting <table border="1"> <tr> <td>NORMAL</td> <td>Normal</td> <td>H.BASS1</td> <td>H.BASS1</td> </tr> <tr> <td>H.BASS2</td> <td>H.BASS2</td> <td>TRAIN</td> <td>Train</td> </tr> </table>	NORMAL	Normal	H.BASS1	H.BASS1	H.BASS2	H.BASS2	TRAIN	Train
NORMAL	Normal	H.BASS1	H.BASS1						
H.BASS2	H.BASS2	TRAIN	Train						
8	Stereo/Monaural <table border="1"> <tr> <td>STEREO</td> <td>Stereo</td> <td>MONO</td> <td>Monaural</td> </tr> </table>	STEREO	Stereo	MONO	Monaural				
STEREO	Stereo	MONO	Monaural						
9	Listening Setting <table border="1"> <tr> <td>SURROUND</td> <td>Surround-sound</td> </tr> <tr> <td>NATUR1</td> <td>Natur 1</td> </tr> <tr> <td>NATUR2</td> <td>Natur 2</td> </tr> </table>	SURROUND	Surround-sound	NATUR1	Natur 1	NATUR2	Natur 2		
SURROUND	Surround-sound								
NATUR1	Natur 1								
NATUR2	Natur 2								
10	Remaster Setting ON —								
11	Bluetooth® Device Connected —								
12	Volume —								
13	Lyric —								
14	URL —								

Playing Music

1 Press and hold

Player Menu window appears.

- Last playback window appears.
To open Player menu:  twice.



Player Menu Window



2 Select a category (See below)

Item	Operation/Description
All Tracks	Select files from 941P & microSD Card
Artist	Select files from Artist folder
Album	Select files from Album folder
Genre	Select files from Genre folder
Play List	Select group of files saved to Play List



- ★ appears for currently/previiously played Play List.

3 Select a file

Selected file plays.

- ★ appears for currently/previiously played file.
- Playback Window Operations: P.8-7
- To end playback, 

Note

- Alternatively, follow these steps to play back music files:
Main Menu ► Music Player ► Player
- mp4/3gp files in Ring Songs&Tones folder can also be played in Music Player.
- When playing back files with handset closed, missed calls or new messages cannot be checked by  even if **Info Notice Setting** (P.18-7) is **ON**.

Changing Play Mode

1 Press and hold

Player Menu window appears.

- Last playback window appears. To open Player menu:  twice.

2 [Menu] → **Play mode setting**

3 Select an item (See below)

Item	Operation/Description
Normal	Play all files in selected category/Play List
Play only one	Play selected file
Repeat one	Repeat selected file
Repeat all	Repeat all files in selected category/Play List
Random	Play selected category/Play List files randomly
Random play&repeat	Repeat selected category/Play List files randomly

Using Other Functions while Listening to Music (Play Background)

Use Phone Book, Messaging, Internet, etc. while listening to music.

- 1 While playing file, [BGM]
- 2 To end, in Standby → **End player**

Note

- Some functions cannot operate simultaneously.
- Volume or play mode change is not available during Play Background.

Playing Chaku-Uta Full®/WMA Files as Demo

Main Menu ► Music Player ► Data Manager

- 1 Select an item (See below)

Item	Operation/Description
Main Folder	View Chaku-Uta Full® list > Select a folder ● To view file list in handset/microSD Card: [Phone/microSD]
WMA	View WMA list

- [Change] to toggle display view in Chaku-Uta Full® and WMA list.
- 2 Select a Chaku-Uta Full® or WMA file
Demonstration playback starts.


Playback Window Operations

Adjust Volume	or
Play Previous*	or press and hold ● When playback time is over three seconds, previous file plays from beginning.
Play Next*	or press and hold
Rewind	Press and hold
Forward	Press and hold
Pause/Resume	[/]
Stop	[]
View Next Jacket/Lyric	(3)
View Previous Jacket/Lyric	(1)
Switch Jacket/Lyric Display	(2)
Switch Playlist/Playback Window*	[List/Player]
Play Background*	[BGM]
Switch Remaster (↶ P.8-8)	(9)
Switch Listening (↶ P.8-8)	(8)
Switch Equalizer (↶ P.8-8)	(7)

* Not available for playback as a demo

Functions while Playing Files



■ Set Sound Effect

> While playing file, [Menu] → **Sound effect** → Select an item (See below)

Item	Operation/Description
Remaster	Complement sound from earphone or Bluetooth® device to bring close to original sound > ON or OFF
Listening	Add listening effect to sound from earphone or Bluetooth® device > Select an item <ul style="list-style-type: none"> · Surround-sound: Reproduce natural and stereophonic sound · Natur 1 or Natur 2: Complement sound specific to earphone to reproduce natural sound · OFF: Turn off Listening setting
Equalizer	Change quality of sound from earphone or Bluetooth® device > Select an item <ul style="list-style-type: none"> · Normal: Reproduce normal sound · H. BASS1: Enhance low-pitched sound · H. BASS2: Enhance low-pitched sound even more · Train: Minimize sound leakage

■ Functions Available in Playback Window
 
> While playing file, [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Show Player menu
Play mode setting	Change play mode ( P.8-6)
Sound effect	( Left)
Music info	Show song title, artist and playback time
Connect to Website	Open site link > YES
Display Image	Show jacket
Display lyric	Show lyric
Previous image/ Previous lyric	Show previous jacket or lyric
Next image/ Next lyric	Show next jacket or lyric

Chaku-Uta Full®/WMA List

From ▶ Main Menu ▶ Music Player ▶ Data Manager

Confirm Memory Status

> [Menu] → *Memory Status*

Functions Available in Chaku-Uta Full® Folder List

> *Main Folder* → Highlight a folder → [Menu] → Select an item
(See below)

Item	Operation/Description
Add folder	> Enter folder name
Edit folder name	> Enter folder name
Delete folder	> Enter Phone Password → YES
Memory Status	> Confirm memory status/total files

Functions Available in Chaku-Uta Full®/WMA File List

> *Main Folder* or *WMA* (→ Select a folder) → Highlight a file → [Menu] → Select an item (See below)

Item	Operation/Description
Set as ring tone (Fullsong ring tone) ¹	Set Chaku-Uta Full® as ringtone > Fullsong ring tone → Select an item
Set as ring tone (Point ring tone) ¹	Set a segment of Chaku-Uta Full® as ringtone > Point ring tone → Select a segment → Select an item ● To confirm segment: [Play]
Music info	Show song title, artist and playback time
Move ¹	> Select a storage

Item	Operation/Description
Move to microSD ¹	Move a Chaku-Uta Full® to microSD Card
Add folder ¹	> Enter folder name
Multiple-choice ¹	Select multiple Chaku-Uta Full® files > Check Chaku-Uta Full® files → [Menu] → Delete , Move or Send Ir data → Operate selected item
Connect to Website ¹	Open site link > YES
Display image	Show jacket
Memory Status	Memory status/total number of files appears
DEL all licenses ²	Delete all WMA licenses > Enter Phone Password → YES
Delete this	> YES
Delete all	Delete all files in folder > Enter Phone Password → YES
Attach to S! Mail ¹	Send a file via S! Mail (☞From Step 2 on P.13-4)
Send Ir data ¹	(☞P.10-3)
IC transmission ¹	(☞P.10-5)
Take contents key ¹	(☞P.9-5)

¹ Chaku-Uta Full® files only


² WMA files only

Using Play List




Use **Play List** to organize **Data Folder** music files.
Select **Music** folder files to create **Play List** links to each file in its original folder.

Creating New Play Lists

- Save up to 30 Play Lists with up to 100 songs per list.
- Music files saved on microSD Card are also savable.

- 1 Press and hold 

Player menu appears.

 - Last playback window appears. To open Player menu:  twice
- 2 **Play List** →  [Menu] → **Create play list** → Select a category and show file list → Check files to save to Play List →  [Finish]
- 3 Enter a Play List name




Play List Window


Note

- Create WMA Play Lists (using Windows Media® Player) or SD Audio Play Lists (using SD-Juke Box) on PC. Maximum number of Play Lists to create and songs to save is as follows:
WMA Play Lists: 100 Play Lists; 250 songs per list
SD Audio Play Lists: 99 Play Lists; 99 songs per list

 
Playing Songs from Play List

- 1 Press and hold 

Player menu appears.

 - Last playback window appears. To open Player menu:  twice
- 2 **Play List** → Select a Play List
 - To play back selected Play List from the beginning:  [Play]
- 3 Select a file

Selected file plays back.

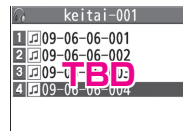

Play List Contents Window

Note




- mp4/3gp files in Ring Songs&Tones folder can also be added to Play List.

Play List


Press and hold  ► **Play List**


Functions Available in Play List Window






> (Highlight a Play List)  [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Open Player menu
Play mode setting	Change play mode ( P.8-6)
Create play list	Create a new Play List ( P.8-10)
Copy play list	Copy Play List > Enter a Play List name
Edit pl. list name	Edit Play List name > Edit Play List name
Add	Add files to Play List > Select a category, and open a Play List → Check files to add →  [Finish]
Delete play list	> Select an item → Operate selected item

Functions Available in Play List Contents Window

> Select a Play List → (Highlight a file) →  [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Open Player menu
Play mode setting	Change play mode ( P.8-6)
Music info	Show song title, artist and playback time

Item	Operation/Description
Add	Add files to Play List > Select a category, and show contents window → Check files to add  [Finish]
DEL from play list	Delete files from Play List > Select an item → Operate selected item
Order to play	> Select a file from Play List to change playing order →  to change order →  [Select] ● Repeat steps above to change order →  [Set]
Add to play list	Add files to another Play List > Add one or Add some (→ For Add some , check files →  [Finish]) → Select a Play List
Display image	Show jacket

∞ Music Player

8-12

Managing Files

Data Folder	9-2
Data Folder Structure.....	9-2
Opening Files.....	9-4
Viewing & Playing Files.....	9-4
File Display/Playback Functions	9-6
Options.....	9-7
Using/Editing Still Images	9-12
Editing Still Images	9-12
Creating Animations.....	9-13
Saving Still Images to Phone Book	9-14
Managing Folders/Files	9-14
Managing Folders.....	9-14
Using Play List.....	9-15
microSD Card.....	9-16
microSD Card Installation	9-17
Format microSD Card.....	9-18
Viewing microSD Card Files	9-18
Handset Data Backup	9-19
PC File Transfers	9-20
microSD Card Functions.....	9-21

Data Folder

Save, play and manage files downloaded from Internet, etc.


- Save still images/videos captured by Camera, downloaded data or data copied/moved from SoftBank handset to microSD Card.

Data Folder Structure

Folder		Function/Saved Data	File Format ¹	
Pictures ²	Download Pictures	Connect to download site	JPEG, GIF (.gif including Interlaced GIF), GIF Pictogram Package File (.gpk), SWF (.swf Flash Animation), PNG (.png including Interlaced PNG)	
	Main Folder	Downloaded still images, etc.		
	Camera	Still images captured by Camera, etc.		
	My Pictograms	Download My Pict.		Connect to download site
		お気に入り 顔文字, 装飾, etc.		Downloaded pictograms, etc. Preinstalled pictograms
	Mail Art	Mail Art (download)		Connect to download site
	Pre-installed	Preinstalled still images		
Original Animation	Display still images continuously			
Ring Songs&Tones ²	DL Ring Songs&Tones	Connect to download site	SMF, SP-MIDI, AMR, SMAF and MPEG-4 formatted files (.mid, .midi, .amr, .mmf, .3gp, .mp4)	
	Main Folder	Downloaded ring songs/tones, etc.		
	Pre-installed	Preinstalled ring songs/tones		
	Voice Announce	Data recorded by Voice Announce		
	Play List	Play back Play List		
S! Appli ²	Download S! Appli	Connect to download site	—	
Widget ²	Download Widget	Connect to download site	WGT (.wgt), SWGT (.swgt)	
Music	Main Folder ²	Download Music	Connect to download site	
		Music Search		
	Initial Folder	Downloaded Chaku-Uta Full [®]		
	WMA ³	WMA Files transferred from PC		

Folder		Function/Saved Data	File Format ¹
Videos ²	Download Videos	Connect to download site	MP4 (including .mp4, .3gp, SDV), ASF (.asf)
	Main Folder	Downloaded video files, etc.	
	Camera	Video files recorded by Camera	
	Pre-installed	Preinstalled video files	
	Play List	Play back Play List	
	Position Memory	Play back video files from saved resume position	
PC Movies	microSD ³	PC movies saved using PC	WMA (.wma), WMV (.wmv), ASF (.asf)
	Position Memory	Play back PC movies from saved resume position	
	Play History	Playback records of PC movies	
TV	Image	Still images recorded by Digital TV	JPEG (.jpg)
	Video ³	Copy-protected video files (One-Seg compatible)	TOD (.tod), MOI (.moi), MAI (.mai), PGI (.pgi)
	Position Memory	Play back video files from saved resume position	
Lifestyle-Appli	Download	Connect to download site (Osaifu-Keitai®: ④P.16-2)	—
Books ²	Download Books	Connect to download site	CCF (.ccf), XMDF (.zbf, .zbs)
	Customized Screen ²	Connect to download site	CUSR (.xcsf)
	Familiar Usability		UIE (.uie)
Templates	Download Templates	Connect to download site	—
Font	Download Font	Connect to download site	MTF (.mtf)
	Main Folder	Downloaded fonts	
	Pre-installed	Pre-installed fonts	
Other Documents ²	Main Folder	Incompatible files attached to mail ⁴	—

¹ Some copy protected files have extensions different from above.

² When microSD Card is installed, press  [microSD] in Folder list to view data saved in microSD Card.




³ Available only when microSD Card is installed.

⁴ Some attachment files cannot be saved in Other Documents.

Using Copy Protected Files

Playing/forwarding/saving may be restricted and Content Key (P.9-5) may be required for usage.



See file information to confirm restrictions such as expiry term or usage limitation (Respective file information in "Options": P.9-7).

 
-  or  (Silver) appears for copy protected files requiring Content Keys.  files are inaccessible.
- Files downloaded on 941P cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- 941P holds up to 1000 Content Keys. Multiple Keys may be required to use a file. Expired Keys are deleted automatically.
- Interrupted playback (by incoming calls or Alarm) of copy protected WMA files with limited usage in Data Folder is also counted as one usage.

Opening Files

Viewing & Playing Files

Main Menu ► Data Folder

- Select a folder
 - In Folder List, press  to toggle handset folder and microSD Card folder.
- Select a folder → Select a file
 - To toggle file list view:  [Change]

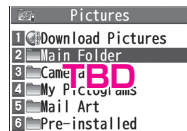

Pictures Folder








Still Image List Window

When Shortcut to a Download Site is Selected
























Handset connects to a download site on Internet.

Operations while Playing Back Ring Songs&Tones

Stop	 [Stop]
Volume	 
Attach files (during playback) to S! Mail	 

■ Videos/PC Movies Playback Operation

- Some operations are not available depending on files.

Adjust Volume	 or 
Play Previous	 ● Starts from beginning when playback time is over three seconds.
Play Next	
Rewind ¹	Press and hold 
Forward ¹	Press and hold 
Select Position ²	 repeatedly
Change Speed	  /  /  / 
Mute/Resume	  / 
Pause/Resume	  / 
Play Frame by Frame ¹	While pausing,  [Frame] ● Play back frame by frame
Switch Portrait/Landscape View (Full Screen)	
Remaster (⇧P.8-8)	
Listening (⇧P.8-8)	
Equalizer (⇧P.8-8)	

¹ Videos only




² PC Movies only

Tip


- File Display/Playback Functions (⇧P.9-6)

Content Key

If Content Key is expired, a message appears when the file is opened. To obtain a new Key, select *YES*. 941P connects to Content Key site.

- Copy Protected Files: ⇧P.9-4
-  or  (Silver) appears for files requiring Content Keys.  files are inaccessible.  appears on images in Thumbnail view of expired files (Original icon appears for Books folder.).

Note

- Alternatively, obtain Content Key as follows: Highlight a file →  [Menu] → *Take contents key*
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- When 1000 Content Keys have been saved, a message appears. Delete old Keys; otherwise downloads may fail (Connection fees apply).

File Display/Playback Functions

Enlarge Still Images

> **Main Menu** ▶ **Data Folder** ▶ **Pictures** ▶ Select a folder ▶ Select a file ▶ [Menu] ▶ **Display size** ▶ **Fit in display**

Play Back from a Resume Position

Resume playback (videos/PC Movies) from a saved position.

> **Main Menu** ▶ **Data Folder** ▶ **Videos or PC Movies**
▶ **Position Memory** ▶ Select an item

- Save a resume position: Right
- **Marker to resume** is a resume position automatically saved when a call comes in, alarm goes off, battery runs low, or playback is terminated.

Functions Available in Video/PC Movie Playback Window

- Some operations are not available depending on files.
- > While playback is paused, [Menu] → Select an item (See below)

Item	Operation/Description
Normal play ¹	Play at normal speed
Slow ¹	Play at slow speed
Quick View (1.25x) ¹	Play 1.25 times faster than normal
Quick View(2x) ¹	Play at double speed
Fast ²	Forward
Rewind ²	Rewind
Stop	Return to Videos/PC Movies List window
Position to play	Start playback from specified point > to highlight a play point → [Set]
Connect to Website ¹	Open site link > YES

Item	Operation/Description
Sound effect	Remaster, Listening or Equalizer (P.8-8)
Contents info ²	Show title, file name, etc.
Position memory	Save resume position > Select a resume position ● To play back from a saved position:
Attach to S! Mail ¹	Send file via S! Mail (From Step 2 on P.13-4)
Register (Ringtones) ¹	Set as ringtone > Ringtones → Select a type ● ★ appears for item set as ringtone.
Register (Stand-by Display/Start-up Window) ¹	Save a file as Standby Display or Start-up Window > Select an item → YES
Video info ¹	Show title, file name, etc.
Send Ir data ¹	Send file via Infrared (P.10-3)
IC transmission ¹	Send file via IC transmission (P.10-5)
Add shortcut icon ¹	Create a shortcut (P.1-22)
Description ²	Show file information > The words view or Description view
Copy URL ²	Copy URL
Display size	Select a display size > Actual size or Fit in display
Change to full ¹	Switch to Landscape View. Full screen playback starts. ● To toggle views:

¹ Video files only

² PC movies only

Options

Copy Protected Files



- When set as wallpaper or ringtone, settings may return to defaults if license has expired or different USIM Card is inserted.
- Limited use files cannot be set as wallpaper or ringtone.

Highlight a file in Data Folder →  [Menu] for the following operations.

- Some functions may not be available depending on files.

Pictures

Item	Operation/Description
Edit picture	Edit files (☞P.9-12)
Display picture	Open files
Set display*	Set as wallpaper, Phone Book image, Menu Icons, etc. > Select an item • ★ appears for item.
Picture info	Show file name, file size, etc.
Attach to S! Mail	Send files via S! Mail (☞From Step 2 on P.13-4)
Graphic mail	Add selected files to Graphic Mail (☞P.13-9)
Send Ir data	Send files via Infrared (☞P.10-3)
IC transmission	Send files via IC transmission (☞P.10-5)
Add shortcut icon	Create shortcuts (☞P.1-22)
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Positioning	Set where to paste files in Standby > Select a position

Item	Operation/Description
Edit file name	Edit file names
Move	Move files to other folders
Slideshow	Show files in a folder continuously. Select display speed > Normal or Slow
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use →  [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Pictures/ File names	Toggle list view • Alternatively,  [Change] to toggle
Take contents key	Connect to site for Content Key

* Before setting a file as Video Call related item (except for Incoming/ Outgoing Video Calls), set **Select Images** to **Original** (Change Outgoing Image: ☞P.18-12).

To set a file as Menu Icon related item, set **Menu Icons** to **Customize** (☞P.18-4).

- If incoming calls arrive or handset is turned off while My Pictograms package file (.gpk) is being uncompressed, some pictograms in package file may not open. Retry uncompressing.

Tip

- Enlarge Still Images (☞P.9-6)
- Editing Still Images (☞P.9-12)
- Creating Animations (☞P.9-13)
- Saving Still Images to Phone Book (☞P.9-14)

Ring Songs&Tones

Item	Operation/Description
Edit file name	Edit file names
Play melody	Play back files
Set as ring tone	<ul style="list-style-type: none"> > Set as ringtone ● ★ appears for item.
Add shortcut icon	Create shortcuts (☞P.1-22)
Attach to S! Mail	Send files via S! Mail (☞From Step 2 on P.13-4)
Send Ir data	Send files via Infrared (☞P.10-3)
IC transmission	Send files via IC transmission (☞P.10-5)
Copy to microSD	Copy files to microSD Card
Song-Tone info	Show titles, file names, etc.
Memory Status	Show memory information
Delete	<ul style="list-style-type: none"> > Select a type <ul style="list-style-type: none"> · Delete this → YES · Delete select → Check files to delete → ☑[Finish] → YES · Delete all → Enter Phone Password → YES

Item	Operation/Description
Sort	Change display order of files > Select an order
Move	Move files to other folders
Move to microSD	Move files to microSD Card
Take contents key	Connect to site for Content Key

Widget

Item	Operation/Description
Paste on Stand-by	(☞P.7-2)
Widget Information	Show file names, sizes, etc.
Attach to S! Mail	Send files via S! Mail (☞From Step 2 on P.13-4)
Send Ir data	Send files via Infrared (☞P.10-3)
IC transmission	Send files via IC transmission (☞P.10-5)
Move to microSD	Move files to microSD Card
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use → ☑[Menu] → Select an item

■ S! Appli/Lifestyle-Appli

Item	Operation/Description
Start	Activate S! Appli or Lifestyle-Appli
Security level	Set security level (☞P.15-4)
S! Appli info	Show file names, file sizes, etc.
Add shortcut icon	Create shortcuts (☞P.1-22)
Move to microSD	Move files to microSD Card (Lifestyle-Appli cannot be moved)
Delete	Delete files > YES

■ Music

- See "Functions Available in Chaku-Uta Full®/WMA File List" (☞P.8-9)

■ Videos

Item	Operation/Description
Register	Set as ringtones, Standby Display or Start-up display
Video info	Show titles, file names, etc.
Attach to S! Mail	Send files via S! Mail (☞From Step 2 on P.13-4)
Send Ir data	Send files via Infrared (☞P.10-3)
IC transmission	Send files via IC transmission (☞P.10-5)
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Move	Move files to other folders
Add shortcut icon	Create shortcuts (☞P.1-22)
Edit file name	Edit file names
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use → [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Listing	Change list view ● [Change] to toggle views
Take contents key	Connect to site for Content Key

■ PC Movies

Item	Operation/Description
Contents info	Show titles, file names, etc.
Move	Move files to other folders
Copy	Copy files to other folders
Multiple-choice	Select multiple files to use > Check files to use → [Menu] → Select an item
Comment view	Show descriptions
Memory Status	Show memory information
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES

■ TV

- See Pictures folder for still images.

Item	Operation/Description
Edit title	> Enter titles
Video info	Show titles, channel names, etc.
Add shortcut icon	Create shortcuts (⌘P.1-22)
Delete	> Select an item <ul style="list-style-type: none"> · Delete this → YES · Delete selected → Check files to delete → [Finish] → YES · Delete all → Enter Phone Password → YES
Memory Status	Show memory information
Listing	Change list view <ul style="list-style-type: none"> ● [Change] to toggle views

■ Books

Item	Operation/Description
Play	Play back files
Connect to Website	Open site link
Book info	Show file names, file sizes, etc.
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Add folder	Add folders
Edit file name	Edit file names
Move	Move files to other folders
Take contents key	Connect to site for Content Key
Delete	Delete files > YES

■ Customized Screen

Item	Operation/Description
Preview	Preview files
Collective Setting	Set Customized Screen all at once
File info	Show titles, file names, etc.
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Edit file name	Edit file names
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use → [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Listing	Change list view ● [Change] to toggle views
Take contents key	Connect to site for Content Key
Connect to Website	Open site link

■ Templates

Item	Operation/Description
Compose S! Mail	Send files via S! Mail (P.13-5)
Edit title	Edit titles
Template Info	Show title and file size
Delete this	> YES
Delete selected	> Check files to delete → [Finish] → YES
Delete All	> Enter Phone Password → YES

■ Font

Item	Operation/Description
Set	Apply selected font
File info	Show file names, file sizes, etc.
Edit title	Edit titles
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use → [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Listing	Change list view ● [Change] to toggle views

Other Documents

Item	Operation/Description
File info	Show file names, file sizes, etc.
Attach to S! Mail	Send files via S! Mail (👉From Step 2 on P.13-4)
Copy to microSD	Copy files to microSD Card
Edit file name	Edit file names
Move	Move files to other folders
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use → [Y?][Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order

Note

- Titles of mp4/3gp Ring Songs&Tones files and Videos/Music/Customized Screen files appear in respective lists. Files without titles appear with file names (created when files are saved to handset). Titles cannot be changed; edited file names may not appear in lists.

Using/Editing Still Images

Editing Still Images

- Edit features are not available for all file types.

Main Menu ► Data Folder ► Pictures

- 1 Select a folder → Select a file → [Y?][Menu] → **Edit picture**
- 2 [Y?][Menu] → Select an item (See below)

Item	Operation/Description
Marker stamp	<p>> Select a stamp → [X] to move stamp → [Put]</p> <ul style="list-style-type: none"> • Following options are available when positioning a stamp: <ul style="list-style-type: none"> · To rotate or scale up/down: [Y?][Menu] → Select an item · To start over: [Cancel] • To add: [Add]
Frame	<p>> Select a frame</p> <ul style="list-style-type: none"> · To rotate 180 degrees: [Y?][Menu] → 180° rotation · To change frame: [X] · To return to frame list: [Cancel]
Character stamp	<p>> Enter text → [X] to move text → [Put]</p> <ul style="list-style-type: none"> • To change content/color/font/size: When positioning stamp, [Y?][Menu] → Operate selected item • To start over: [Cancel] after positioning

Item	Operation/Description
Fit in screen	Change image size to Standby (480 x 854) > YES
Change size	> Select a size ● To start over: [Cancel]
Trim away	> Specify a size → [Crosshair] to specify area → [Set] ● To start over: After specifying area, [Cancel]
Retouch	> Select an item ● To start over: [Cancel]
Rotate	> 90° to right, 90° to left or 180° ● To start over: [Cancel]
Brightness	> [Brightness] to adjust brightness
Attach to S! Mail*	Create S! Mail with edited still images > [Set] → Create S! Mail (From Step 2 on P.13-4) ● Edited files are automatically saved. ● Alternatively, [Attach] to attach pictures to S! Mail
Save*	Overwrite/rename to save edited files

* Available after other editing operations.

3 [Set] → [Save]

4 **YES** (Overwrite) or **NO** (Save as)

Creating Animations

Saving Original Animation

Main Menu ▶ Data Folder ▶ Pictures ▶ Original Animation

- 1 <New> → <1st> - <20th>
- 2 Select a folder → Select a file
● Repeat Step 2.
- 3 [Finish]

Functions Available in Original Animation List


In Original Animation list, press [Menu] for following operations.


Item	Operation/Description
Edit title	> Enter title
Org. animation	Add more files to an Original Animation (Above)
Display picture	Play back an Original Animation ● Alternatively, select an Original Animation from list to play back.
Set display	Set an Original Animation as Standby display, etc. > Select item to set Original Animation as
Picture info	View item set for Set display
Release animation	Cancel a saved Original Animation > YES

Saving Still Images to Phone Book

- Savable sizes:
 - Standby (480 x 854) or smaller in JPEG or GIF format (up to 300 Kbytes)
 - VGA (640 x 480) or smaller in PNG format
- Save images to up to 100 Phone Book entries.
- Still images cannot be saved to USIM Card Phone Book entries.

 Main Menu ► Data Folder ► Pictures

1 Select a folder → Select a file →  [Menu] → *Set display* → *Phone Book*

2 **New Entry**
New → Enter details (→ From Step 3 on P.4-4) →  [Finish]

Add to Existing Entry

Add → Select entry →  [Finish] → **YES**


Managing Folders/Files

Managing Folders

The following operations are available in **Pictures, Music, Books, Videos, Ring Songs&Tones and Other Documents.**

Main Menu ► Data Folder

1 Select a folder →  [Menu] → Select an item (See below)

Item	Operation/Description
Add folder	Create user folders
Edit folder name	Edit user folder names
Delete folder	Delete a user folder > Enter Phone Password → YES → YES
Folder security ¹	Hide files in folder unless Phone Password is entered > Enter Phone Password → YES  appears for folder. ● To cancel: Repeat the step
Delete all image ²	> Enter Phone Password → YES → YES
Edit Play List ³	Edit Play Lists
Release Play List ³	Cancel edited Play Lists > YES

Item	Operation/Description
Select storage ⁴	Specify folders on microSD Card to save files to > YES ● Folders cannot be specified when saving Books files.
Memory Status ⁵	View memory capacity/number of saved files

¹ Pictures/Videos folders only

² Pictures folder only

³ Play List folder in Ring Songs&Tones folder only

⁴ microSD Card only

⁵ Music folder only



Using Play List

Use **Play List** to organize Data Folder Ring Songs&Tones/ Videos files.

Select Ring Songs&Tones, Music or Videos folder files to create Play List links to each file in its original folder.

Creating Ring Songs&Tones Play Lists

Main Menu ► Data Folder ► Ring Songs&Tones

- 1 Highlight **Play List** →  [Menu] → **Edit Play List**
- 2 Select a number → Select a folder → Select a file
 - Repeat Step 2.
- 3  [Finish]

■ Play Back Play List


> Main Menu ► Data Folder ► Ring Songs&Tones ► Play List

- Files are played back in the saved order.

■ Delete a File

> After Step 1, select a file → **Release this**

■ Delete All Files


> In Step 1,  [Menu] → **Release Play List** → **YES**

Note


- mp4/3gp files cannot be added to Play List except in Music Player Play List.

Creating Video Play Lists


Main Menu ► Data Folder ► Videos ► Play List

- 1 Select a Play List
- 2 Select a number → Select a folder → Select a file
 - Repeat Step 2.
- 3  [Finish]




■ Play Back Play Lists

- > Main Menu ► Data Folder ► Videos ► Play List ► Highlight a Play List →  [Play]
- Files are played back in the saved order.


■ Delete a File

- > After Step 1, (highlight a file →)  [Menu] → *Delete this* or *DEL all from list* → YES

■ Change Order

- > After Step 1,  [Menu] → *Oder to play* → Select a file → Select a target →  [Finish] →  [Finish]

microSD Card

- 941P is compatible with up to 2 GB commercial microSD Cards and up to 16 GB commercial microSDHC Cards (as of May 2009). For information on memory card compatibility, visit the website below (Japanese). Note that microSD Cards not listed on the website may not function properly.
 - From Yahoo! Keitai P-egg (as of May 2009)
Yahoo! Keitai top page → メニューリスト → 辞書・ツール → ケータイメーカー → P-egg
 - From PC
<http://panasonic.jp/mobile/>
Not all operations are guaranteed by the microSD/microSDHC Cards listed.
- Format new microSD/microSDHC Cards for use with 941P ( P.9-18).

Note

 
- SoftBank is not liable for damages from accidental loss/alteration of microSD Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- microSD Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.

microSD Card Installation




- Turn off handset before inserting/removing microSD Card.

Inserting

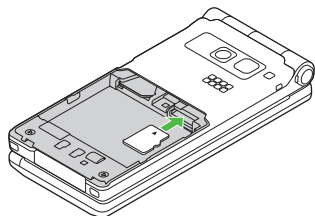- 1 Open cover. Insert microSD Card until it clicks

 


microSD Card Check

When microSD Card is installed correctly,  appears. If  appears, microSD Card cannot be used. Remove microSD Card from handset, and re-insert it. If  does not disappear, execute Check microSD (☞P.9-21) or format microSD Card (☞P.9-18).
(Display Indicator: ☞P.1-10)


Removing

- 1 Push microSD Card in
 - microSD Card pops out with a light push.

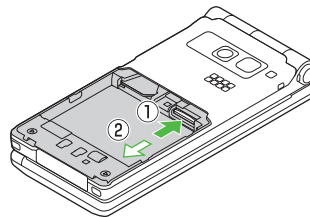

- 2 Remove microSD Card and close cover
 - To close cover: ☞Left


Note

- Do not turn off handset or remove battery/microSD Card while  flashes. microSD Card may be damaged or files lost.
- microSD Card may pop out when inserting/removing it.

Format microSD Card

- Formatting microSD Card deletes all saved files/data.

Main Menu ► Tools ► microSD Backup

- 1  [Menu] → *microSD format*
- 2 Enter Phone Password → **YES**

Note

 
- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- microSD Cards formatted on other devices may not be used. Format microSD Card on 941P before use.
- 941P cannot format incompatible microSD Cards.
- If format fails, turn power off and remove microSD Card from 941P. Reinsert microSD Card and format it again.

Viewing microSD Card Files

View Phone Book entries, Calendar events, Tasks, mail messages, Notepads and Bookmarks backed up on microSD Card.

Main Menu ► Tools ► microSD Backup

- 1 Select a category

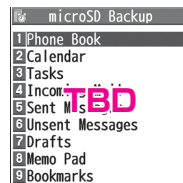

Category List

- 2 Select a file

Backup date appears as file name.



File List

- 3 Select a data



Data List



Detailed Data

Note

- If messages on microSD Card do not appear correctly, copy messages to handset (P.9-19) and execute **Charset Conversion** (P.13-22).

Handset Data Backup

Back up handset data (Phone Book, Calendar, Tasks, Messages, Notepad, Bookmarks, Content Keys) to microSD Card; restore handset data after accidental loss/alteration.

- Back up Content Key: P.9-22

Backing up to microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Highlight a category → [Menu] → **Copy to microSD** (→ For **Bookmarks**, select an item)
- 2 Enter Phone Password → **YES**
All files of selected category are backed up to microSD Card.

One File Backup

> Open a file → [Menu] → **Copy to microSD** → **YES**

Restoring from microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Select a category

2 Restore One Item

Select a file → Highlight an item → [Menu] → **Add to phone**

Restore One File

Highlight a file → [Menu] → **Add to phone** or **Overwrite to phone** → Enter Phone Password

Restore All Files

[Menu] → **Add all to phone** or **Overwr. all to ph.** → Enter Phone Password

3 YES

Note

- Note that **Overwrite to phone** or **Overwr. all to ph.** erases all files of same category on handset.
- Files of 10 MB or larger cannot be moved/copied from microSD Card to handset.
- Data backed up in other SoftBank handsets may not be restored in 941P depending on type and size.

Tip

- Delete Items from microSD Card ● View microSD Card Memory Capacity (P.9-21)

PC File Transfers

Folder Structure

Files moved or copied from 941P to microSD Card are managed as shown below:

- Save files in folders by file type.

DCIM		
● Still images saved to microSD Card		
PRIVATE		
MYFOLDER		
Utility		
Calendar	Calendar.BCK	Calendar Backup files
Contacts	Contacts.BCK	Phone Book Backup files
Rights		Content Key Backup files
Tasks	Tasks.BCK	Tasks Backup files
Memo	Memo.BCK	Notepad Backup files
Mail		
Drafts	Drafts.BCK	Drafts Backup files
Inbox	Inbox.BCK	Incoming Mail Backup files
Outbox	Outbox.BCK	Unsent Messages Backup files
Sent Messages	Sent Messages.BCK	Sent Messages Backup files
My Items		
Book		E-comics
Bookmarks	Bookmarks.BCK	Bookmarks Backup files
Custom Screens		Familiar Usability applications

Flash(R)	Flash® files
Games and More	S! Appli
Music	Sound files with .3gp, .mp4, .smc
Other Documents	Other files
Pictograms	My Pictograms
Pictures	Still images moved/copied from handset to Main Folder in microSD Card
Sounds & Ringtones	Sound files of: up to 10 MB with .3gp, .mp4, up to 300 KB with .mid, .midi, .amr
Videos	Videos moved/copied from handset to Main Folder in microSD Card
Widget	Widget contents
WMFile*	PC Movies saved from PC to microSD Card
SD_VIDEO	
● Videos saved to microSD Card	

- Some copy protected files have extensions different from above.
 - When moving/copying videos from microSD Card to handset, file format or file size may change.
- * If WMFile does not appear in My Items (MYFOLDER), create and save a folder titled WMFile.


Using Data on microSD Card

With a microSD Card inserted, connect handset with a PC via USB cable (not included) to read/write data from/onto microSD Card.

Following equipment is required:

- Connector Cable: USB cable
- PC: PC with USB port (Universal Serial Bus Specification Rev 1.1 compliant)
- Compatible Operating Systems: Windows® XP, Windows Vista® (Japanese version in each)

**Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode
▶ microSD Mode**

- 1 Connect handset to PC via USB cable while 941P is on
 - PC recognizes microSD Card.
 -  appears in Standby (handset).

Note

- Even if incoming call arrives, reading/writing data continues during calls. After calls, check indicators on PC to see if reading/writing is complete.
- File names saved in microSD Card may not properly appear if changed on PC.

microSD Card Functions

■ Restore microSD Card items (Check microSD)

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu]**

▶ **Check microSD ▶ YES**

- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- It may take 30 seconds or longer to complete Check microSD depending on data volume on microSD Card.
- 941P cannot check incompatible or unformatted microSD Cards.
- 941P may delete files and folders that fail to be restored.

■ Delete Items from microSD Card

> **Main Menu ▶ Tools ▶ microSD Backup ▶ Select a category**

▶ (Highlight a file →)  [Menu] ▶ **Delete this or Delete all** (▶ For **Delete all**, enter Phone Password) ▶ **YES**

- Content Key cannot be deleted.

■ View microSD Card Memory Capacity

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu]**

▶ **microSD info**

■ Back Up Content key

Copy Content Keys to microSD Card from handset or to handset from microSD Card.

> **Main Menu** ▶ **Settings** ▶ **Security** ▶ **Content Key**

▶ **Copy to microSD** or **Copy from microSD** ▶ Enter Phone Password

- Content Keys with expiration dates or usage limits cannot be backed up.
- USIM Card inserted when Content Keys were moved to microSD Card must be inserted to move Content Keys from microSD Card.
- Some applications are made for use on specific models. Some models move Content Keys to microSD Card instead of backing up. Contact SoftBank Mobile Customer Center, General Information for more information.
- Content Keys are backed up after the previous back up file is deleted. To back up another key and keep existing keys, move existing keys to handset first and back up a new key.

Connectivity


Infrared	10-2
Before Using Infrared.....	10-2
One/Multiple File Transfer	10-3
All File Transfers.....	10-3
IC Transmission	10-4
One File Transfer.....	10-5
All File Transfers.....	10-5
Bluetooth®	10-6
Before Using Bluetooth®	10-6
Using Bluetooth®	10-7
Suspending Bluetooth® Functions	10-8
Placing Bluetooth® Devices on Standby for Connection.....	10-9
Sending/Receiving Phone Book.....	10-9
Bluetooth® Functions.....	10-10
SoftBank Utility Software (Japanese)	10-11
USB (Japanese)	10-11
Setting USB Mode	10-11
Transferring Data via USB Cable.....	10-11
Data Communication via USB Cable.....	10-12
AV Output	10-13
Connecting Handset to TV	10-13

Infrared

Before Using Infrared

Transfer Phone Book/Calendar events, messages, bookmarks and Data Folder files wirelessly between 941P and compatible devices, including PCs and other mobiles.

 - 941P infrared function is based on IrMC1.1, however, some IrMC1.1-based device transmissions may not be transmitted/received within specification.
- Debris may inhibit infrared transfers; clean infrared ports with a soft cloth beforehand.
- Direct sunlight/fluorescent light may inhibit transfers.
- Align infrared ports within 20 cm of one another and make sure no objects are placed between them. Do not move the devices until transfer is complete.

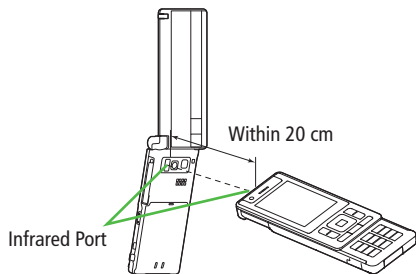

Transferable Files

Transferable file	Condition	One file	All files
Phone Book (Account Details)		<input type="radio"/>	Up to 1000
Calendar events ¹		<input type="radio"/>	Up to 1000
Tasks		<input type="radio"/>	Up to 100
Received message		<input type="radio"/>	Up to 3000
Sent message		<input type="radio"/>	Up to 1000
Drafts		<input type="radio"/>	Up to 10
Notepad		<input type="radio"/>	Up to 20
Ring Songs&Tones		<input type="radio"/>	—
Still image ^{2 3}		<input type="radio"/>	—
Video ³		<input type="radio"/>	—
Bookmark (Yahoo! Keitai, PC Site Browser)		<input type="radio"/>	Up to 100 each
Widget ³		<input type="radio"/>	—

: Transferable —: Not transferable

¹ Saved Holidays/Memorial days not transferable

² Including Flash[®] files

³ Multiple files transferable

Note

- Following files cannot transfer:
 - Files prohibited for transfers from 941P
 - Phone Book entries and SMS on USIM Card
- If memory becomes full, remaining entries are truncated (Memory List: P.19-25).

One/Multiple File Transfer

- Transferable Files: ☞ P.10-2

Sending

- 1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	> ☞ [Menu] → <i>Send Ir data</i> → <i>Send phonebook</i>
Account Details	> ☞ [Ir]
Messages	> ☞ [Menu] → <i>Send Ir data</i> → <i>Send This</i>
Bookmarks	> ☞ [Menu] → <i>Send to ExtnlDvcs</i> → <i>Send Ir data</i> → <i>Send This</i>
Still Images/ Videos/ Widgets	> ☞ [Menu] → <i>Send Ir data</i> <ul style="list-style-type: none">• To send multiple files: ☞ [Menu] → <i>Multiple-choice</i> → Select files to send → ☞ [Menu] → <i>Send Ir data</i>
Other Files	> ☞ [Menu] → <i>Send Ir data</i>

2 YES

Receiving

Main Menu ► **Tools** ► **Receive via Infrared** ► **Receive**

- 1 When a file is received, **YES**
Send files from sender side within 30 seconds.
 - To receive subsequent files, select **YES**.

All File Transfers

Precaution

- Receiving all files overwrites all saved files including secret/protected files.
Files saved in Secret Mode are also deleted.
- Sending all Phone Book entries sends Account Details as well.
User-edited information is overwritten (handset number remains).

Session Number

Session number (4 digits) is required for all file transfers via Infrared and IC transmission. Sender and recipient must enter same Session number to complete transfers.

Sending

- 1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	☞ [Menu] → <i>Send Ir data</i> → <i>Send all phonebook</i>
Messages	☞ [Menu] → <i>Send Ir data</i> → <i>Send All</i>
Bookmarks	☞ [Menu] → <i>Send to ExtnlDvcs</i> → <i>Send Ir data</i> → <i>Send All</i>
Other Files	☞ [Menu] → <i>Send all Ir data</i>

- 2 Enter Phone Password → Enter Session number → **YES**
Recipient must enter the same Session number to start transfers.

Receiving


Main Menu ► Tools ► Receive via Infrared ► Receive All

 
- 1 Enter Phone Password → Enter same Session number as sender's → **YES** → **YES**


Saved files are deleted, and transfer starts.

IC Transmission

Exchange files with another IC compatible handset using reader/writer function.

- Type of files and transfer conditions are same as those for infrared file transfer (☞P.10-2).
Multiple file transfer is not available.
- IC transmission is not available when **IC Card Lock** (☞P.16-5) is activated.
- When receiving data, end all active functions.
- If there is difficulty in file transfer, move a  logo close to or away from the other logo or move each side up, down, left, or right.
- Data cannot be sent during charging battery.



Align  logos of both handsets

One File Transfer

Before Receiving a File

- **Receive IC Datum** is set to **ON** by default. When **Receive IC Datum** is **OFF**, One File Transfer is unavailable.

● To set **Receive IC Datum** on:

- Main Menu** ► **Osaifu-Keitai** ► **IC Card Settings**
► **Receive IC Datum** ► **ON**

Sending

- 1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	> [Menu] → IC transmission → Send phonebook
Account Details	> [ICtrans]
Messages	> [Menu] → IC Transmission → Send This
Bookmarks	> [Menu] → Send to ExtrnlDvcs → IC transmission → Send This
Other Files	> [Menu] → IC transmission

2 YES

Receiving

- 1 Align logo on sender side with 941P (recipient) → **YES**

All File Transfers

- Precautions/Session number (P.10-3)

Sending

- 1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	> [Menu] → IC transmission → Send all phonebook
Messages	> [Menu] → IC Transmission → Send All
Bookmarks	> [Menu] → Send to ExtrnlDvcs → IC transmission → Send All
Other Files	> [Menu] → AllIC transmission

- 2 Enter Phone Password → Enter Session number → **YES**
Recipient must enter the same Session number to start transfers.

Receiving

- 1 Align logo on sender side with 941P (recipient)
- 2 **YES** → Enter Phone Password → Enter same Session number as sender's
Saved files are deleted. Transfer starts.

Bluetooth®

Connect handset to Bluetooth® devices to use functions below.

Function	Device	Description
Handsfree Calls (☞P.10-10)	Headsets Handsfree devices	Talk handsfree on handset
Wireless Playback (☞P.10-10)	Audio devices	Play back sounds (Digital TV/ Video) or music (Music Player) wirelessly from external speaker
Internet Connection (☞P.10-10)	PC	Connect wirelessly to Internet using handset as external modem
Sending/Receiving Phone Book (☞P.10-9)	PC Handsets	Send/receive Phone Book entries wirelessly

Tip

Settings

- Stop Ringtone Output to Headset/Handsfree Device
- Continue Calls on Handset when Bluetooth® is Disconnected from Headset/Handsfree Device
- Always Make Calls from 941P even when Headset is Connected
- Always Use Handsfree Device to Make/Receive Calls (☞P.18-17)

Before Using Bluetooth®

Bluetooth® Specifications

Version	Bluetooth® specification Ver.2.0+EDR
Supported Profiles ¹	HSP (Headset Profile) HFP (Hands-Free Profile) A2DP: Advanced Audio Distribution Profile AVRCP: Audio Video Remote Control Profile DUNP: Dial-up Networking Profile OPP (Object Push Profile)
Output	Bluetooth® Power Class2
Frequency Bands ²	2.4GHz (2.402GHz-2.480GHz)
Communication Distance ³	Approximately ten meters

¹ Bluetooth® connections are available with compatible devices supporting the same profile.

² Bluetooth® operates in the 2.4 GHz unlicensed frequency band. Depending on other devices in use in the spectrum, Bluetooth® connection may slow down/terminate, or range may decrease.

³ Affected by distance between devices, obstructions, signal conditions, handset status, etc.

Notes

- 941P may not be able to establish a Bluetooth® connection with some Bluetooth® devices.
- Establish connections with certified Bluetooth® devices that meet the specification standards developed by Bluetooth® SIG.
- Due to the unique characteristics/specifications of a certified Bluetooth® device, connections or transfers may fail; procedures, displayed results or operations may vary from those described in the manual.
- When data transfer is interrupted, it may take some time for process to complete.
- Noise may interfere with wireless or handsfree conversations depending on the status of connected devices or signal conditions.
- For details about headset/handsfree devices, see the device manuals.

Using Bluetooth®

Pair Bluetooth® devices with 941P beforehand to establish connections for different Bluetooth® functions.

Searching & Pairing Devices

Search other Bluetooth® devices.


Paired devices appear in Search&Paired Device list.

- Bluetooth® Passkey is not necessary for paired devices.
- Search up to 20 Bluetooth® devices at one time; pair with up to ten Bluetooth® devices.
- Place Bluetooth® devices on standby for connection.

Main Menu ▶ Tools ▶ Bluetooth ▶ Search&Paired Device

1 **YES***

Device search starts and names of found devices appear.



- To search again:  [Search]


 
* If there are already paired devices in list, select a device → Select a function

2 Select a device → **YES** → Enter Phone Password

3 Select text entry field → Enter Bluetooth® Passkey

4 Select a Bluetooth® function

941P connects to Bluetooth® device. When complete,  flashes in blue. After no Bluetooth® connection is made for a certain time,  appears in black and Power saver mode starts.

- When Bluetooth® device can connect to multiple services, confirmation appears asking whether to connect to another service.
- While connected,  (Blue) appears. While in Standby,  (Gray) appears.
- When **Dial-up** is selected, 941P stands by for connection requests from other Bluetooth® devices.
- **Dial-up** can be selected regardless of profile types.

Bluetooth® Passkey

Bluetooth® Passkey (1 to 16 digits) is required to connect Bluetooth® devices; sender and recipient must input the same code to complete file transfers.

- Bluetooth® Passkey is not necessary for paired devices.

Search&Paired Device List

1 Device Type

 
Indicators appear for different types of devices.

2 Device Name

Device names appear. When no names are found, Bluetooth® addresses appear.

3 Connection Status

: Connected : Not connected : Not found : Not paired

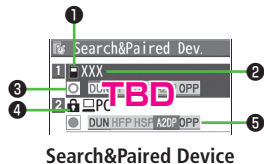






4 Protection

Indicator appears when registered contents are protected.

5 Profile Status

Indicators appear to show profile status.

Icon	Letter Color	Background Color	Frame Color	Status
	Blue	Gray	–	Not connected (Not paired)
	Blue	Gray	Blue	Not connected (Paired)
	White	Green	–	Connected
	Green	White	Green	Standby for connection
	White	Light green	–	Preferred device
	Gray	Gray	–	Not supported

Tip

Settings ● Set Duration to Search for Bluetooth® Devices (P.18-17)

Suspending Bluetooth® Functions

Suspend all Bluetooth® functions connected or on standby for connection, and disable Bluetooth®.

Main Menu ► Tools ► Bluetooth

1 Bluetooth OFF → YES

- To return to standby for previously connected function:
Bluetooth ON

Placing Bluetooth® Devices on Standby for Connection

Main Menu ► Tools ► Bluetooth ► Accept Registered

- 1 Check functions to be on standby for connection →
☑[Finish]
 - To uncheck, select functions to remove check marks.

Sending/Receiving Phone Book

Sending

- 1 Open Phone Book → ☰[Menu] →
Send to Bluetooth
- 2 **One File Transfer**
Send phonebook → Select a recipient device
All File Transfer
Send all phonebook → Select a recipient device →
Enter Phone Password
- 3 **YES**

Receiving

Main Menu ► Tools ► Bluetooth ► Receive via Bluetooth

- 1 **One File Transfer**
Receive → **YES**

All File Transfer

Receive All → Enter Phone Password → **YES** → **YES**

- If memory becomes full, remaining entries are truncated (Memory List: ↗P.19-25).

Tip

Settings

- Set Authentication/Encryption to Send Phone Book Entries
- Enter Password when Sending All Phone Book Entries
(↗P.18-17)

Bluetooth® Functions

From ► Main Menu ► Tools ► Bluetooth

■ Functions Available in Search&Paired Device Window

> **Search&Paired Device** →  [Menu] → Select an item (See below)

Item	Operation/Description
Register devices	> Enter Phone Password → Pair devices (☞ From Step 3 on P.10-7)
Preferred device	Set a preferred Bluetooth® device for incoming calls <ul style="list-style-type: none"> ● Available only for headset function compatible Bluetooth® devices. ● To cancel, perform same operation.
Protect/release	Protect/cancel devices. Protection prevents devices from being deleted or overwritten
Change device name	> Enter a device name
Delete	> YES
Description	Show device name, Bluetooth® address, device class and supported profile
Add shortcut icon	Create shortcuts (☞ P.1-22)

■ Make/Receive Calls via Bluetooth®

> **Search&Paired Device** → Select a device → **Headset** or **Hands-free**
→ **YES** → Make/receive a call using Bluetooth® device

■ Use Bluetooth® Device for Wireless Playback

> **Search&Paired Device** → Select a device → **Audio** → Watch Digital TV or play back videos or music

- Digital TV/Video sounds are played only by A2DP profile compatible Bluetooth® devices compliant with SCMS-T copyright protection standard.

■ Connect to Internet Using Bluetooth® Device

> **Search&Paired Device** → Select a device → **Dial-up**

- 941P waits for dial-up connection.
- Refer to a manual for Bluetooth® device for details.
Download utility software (941P) "Modem Wizard" from website below to PC and install software.
<http://panasonic.jp/mobile/support/download/941p/index.html>
- To establish a dial-up connection, see Help on "Modem Wizard."
- Connecting handset to a PC or PDA for Internet access may incur high packet transmission charges.

■ Place Bluetooth® Device on Standby for Dial-up

> **Dialup Rgstry Standby** → Enter Phone Password → **YES** → Select Bluetooth® Passkey text box → Enter Bluetooth® Passkey

SoftBank Utility Software (Japanese)

Phone Book, Calendar, Tasks, messages, Bookmarks, Notepads and Data Folder can be transferred to a PC, edited or managed by using SoftBank Utility Software.

- For details on and downloading SoftBank Utility Software, visit <http://mb.softbank.jp/r/utilitysoft/cd/> (Japanese)

Note

- USB cable (not included) is necessary for using SoftBank Utility Software.
- S! Appli, PC Movies, TV, Lifestyle-Appli, Books, Customized Screen, Templates and Other Documents cannot be backed up.
- Copy protected files may not be backed up.
- Set **USB Mode** to **Communication Mode** (☞Right).

USB (Japanese)

Connect 941P to a PC via USB cable (not included) specified by SoftBank for data transfer or data communication.

Setting USB Mode

<Default> Communication Mode

Main Menu ► Settings ► Connectivity ► USB Mode

- 1 Select an item (See below)

Item	Operation/Description
Communication Mode	Packet transmission, 64K data transmission, data transfer and calls with USB handsfree compatible devices are available (☞Left)
microSD Mode	Read/write data on microSD Card (☞P.9-21)
MTP Mode	Transfer/delete music data via Windows Media® Player on PC (☞P.8-4)

Transferring Data via USB Cable

- Transfer data using SoftBank Utility Software (☞Left).
- Transferring data in microSD Mode (☞P.9-21)

Data Communication via USB Cable

Use 941P as a modem for Internet access by connecting 941P with a PC.

- Download utility software from URL below and install on PC.
<http://panasonic.jp/mobile/support/download/941p/index.html>

- 1 Install "USB ドライバ (USB Driver)" and "Modem Wizard" from Utility Software (941P) to a PC
- 2 Set 941P to **Communication Mode** (P.10-11), and connect 941P to PC via USB cable
 - Power up 941P before connecting to PC via USB cable.
- 3 Start up "Modem Wizard", and operate communication setup
 - "Modem Wizard" enables you to set up APN and dial-up easily.
For setup/starting procedures, see "Modem Wizard" Help.

Note

- Connecting handset to a PC or PDA for Internet access may incur high packet transmission fees.

 
AV Output

View the following on a TV set or other devices using a SoftBank-specified video output cable (not included): Video Call images, Digital TV images, still images/videos saved on 941P.

- View AV-output-compatible S! Appli on TV.

Connecting Handset to TV

- To use video output cable (not included), Stereo Earphone Conversion Cable (not included) is required.

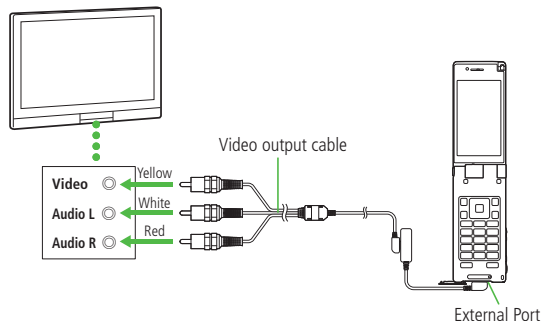

- 1 Open External Port Cover
- 2 Connect video output cable to handset using conversion cable
 - To connect video output cable to conversion cable: P.1-4

- 3 Connect video output cable to video/audio input terminal on TV set
- 4 Open an image file on 941P
 - To toggle display size:

Note

- Some images cannot be displayed on TV.
- Display size setting is not available for some TV sets.

10

Connectivity

10-14

Handset Security

Changing Phone Password	11-2
Security Functions	11-2
USIM PINs	11-2
Keyguard	11-3
Privacy Key Lock	11-4
Personal Data Lock	11-4
Secure Remote Lock	11-6
Key Pad Dial Lock	11-7
Side-keys Guard	11-8
Additional Lock Functions	11-8
Restricting Calls/Messages	11-8
Hiding Call Logs and Sent/Received Address List	11-8
Secret Mode/Secret Data Only	11-9
Setting Secret Mail	11-9
Mail Security	11-10
Call Restrictions	11-10
Delaying Ringtone	11-11
Rejecting Unknown Callers	11-11
Rejecting Calls without Caller ID	11-11
Reset	11-12
Reset Settings	11-12
All Reset	11-12

Changing Phone Password

<Default> 9999

Change Phone Password as required.

- For Phone Password details: ☞P.1-28

Main Menu ► Settings ► Security ► Change Phone Password

- 1 Enter current 4-8-digit Phone Password
- 2 Enter new 4-8-digit Phone Password → **YES**

Security Functions

USIM PINs

- For more information about PINs: ☞P.1-3

Note

- Emergency numbers (110, 119, 118) are not dialable in PIN/PIN2, PUK/PUK2 entry window.

PIN Authentication

Activate to require PIN entry each time handset is turned on.

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **PIN Authentication**
- 2 **ON**
 - To deactivate PIN Authentication: **OFF**
- 3 Enter PIN

Changing PIN/PIN2

- Set **PIN Authentication** to **ON** before changing PIN (☞Above).

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **Change PIN** or **Change PIN2**
- 2 Enter current PIN/PIN2
- 3 Enter new PIN/PIN2
- 4 Reenter new PIN/PIN2

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering PIN Unlocking Key (PUK/PUK2).

- For information about PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☎P.19-34).

- 1 In PIN lock mode, enter PUK/PUK2
- 2 Enter new PIN/PIN2
- 3 Reenter new PIN/PIN2


Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled (Even turning off power is counted as one incorrect entry). Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☎P.19-34).

Keyguard


Lock handset keys to prevent accidental operation except when turning power on/off or answering incoming calls.

- 1 In Standby, press and hold 

When Keyguard is set,  appears.

- To cancel Keyguard, repeat operation.

While Keyguard is Active

- Emergency numbers (110, 119, 118) are dialable even when Keyguard is active. Entered numbers do not appear on Display. Once numbers are dialed, Keyguard is canceled.
- Press  to disable Calendar event tone or Alarm.
- Keyguard can be canceled even during a call.

Note

- Turning off power cannot cancel Keyguard.


Privacy Key Lock

<Default> OFF

Set Privacy Key Lock to require Phone Password for using 941P except for turning handset on/off and answering calls.

Main Menu ► Settings ► Security ► Privacy Key Lock

1 Enter Phone Password

When Privacy Key Lock is set,  appears in Standby.

- To cancel Privacy Key Lock, enter Phone Password in Standby. If Phone Password is incorrectly entered five times, 941P turns off.

While Privacy Key Lock is Active

- Emergency numbers (110, 119, 118) are dialable even when Privacy Key Lock is active.
- Only phone numbers appear on Display for incoming calls.
- Calls cannot be received by Bluetooth® headsets or handsfree devices.
- Message ringtones or Alarm tones are disabled.
- Calendar event tone or Alarm is disabled.
- S! Quick News and some indicators on Internal Display do not appear. They appear after Privacy Key Lock is canceled.

Note

- Turning off power cannot cancel Privacy Key Lock.

Personal Data Lock

Set Personal Data Lock to prevent others from reading or tampering with your personal information in Phone Book or Data Folder. Activate to require Phone Password for accessing personal data.

Locked Functions/Data

- Messaging
- S! Appli
- Phone Book search/saving/setting
- Memory Manager/ Memory Status (Phone Book)
- Account Details
- Restrictions (Phone Book)
- Notepad
- Calendar
- Tasks
- Shortcuts
- Event Indicators
- Camera/Video Camera
- Lifestyle Appli
- microSD Backup
- Answer Phone
- Voice Recorder
- Customized Screen
- Voice Announce
- Software Update
- Yahoo! Keitai viewing/setting
- PC Site Browser viewing/setting
- Bookmarks/ Saved Pages
- BookSurfing®
- e-Book Viewer
- Mobile Widget
- S! Quick News
- S! Information Channel/Weather
- Content Key obtaining/backup
- Voice Dial
- S! GPS Navi
- Data Folder*
- Music Player
- Digital TV
- Bar Code Reader
- Receive via Infrared
- IC Data transmission
- Alarm
- Reset Settings
- All Reset


* Font setting is available.

Activating/Canceling Personal Data Lock

<Default> Deactivate


Main Menu ► Settings ► Security ► Personal Data Lock

1 Enter Phone Password → **Activate/Deactivate**

While Personal Data Lock is set,  appears in Standby.

- To cancel Personal Data Lock, repeat operation. If Timer Lock at Close is set, password entry is requested when 941P is opened.

Canceling Personal Data Lock Temporarily

When Phone Password is entered,  disappears and disabled functions become temporarily available.

- Once handset returns to Standby while no functions are active, Personal Data Lock is active again.
- Some functions remain unavailable. Deactivate Personal Data Lock to use the following:
 - Receiving IC data
 - Reject unknown

Note

- While Personal Data Lock is set, some indicators do not appear in Standby. They appear after lock is canceled.
- Turning off power does not cancel Personal Data Lock.

Customizing Personal Data Lock

Enable/disable Alarm, incoming message notification, etc. while Personal Data Lock is active.

Main Menu ► Settings ► Security ► Personal Data Lock

1 Enter Phone Password → **Customize** → Select an item (See below)


Item	Operation/Description
Alarm Tone	Enable/disable Alarms (Calendar, TV timer, or other alerts) or TV Timer Recording. > Select an item → Accept (Enable) or Not Accept (Disable)
Incoming Call Act	Show/hide Event Indicator (incoming messages) or Phone Book entry information (incoming calls). > Select an item <ul style="list-style-type: none"> · Incoming Message → Accept (Show indicator) or Not Accept (Hide indicator) · Phone Book Available → Accept (Show Phone Book Entry information) or Not Accept (Hide information)
Display/Tone	Enable/disable Display settings, ringtones or indicators. > Select an item <ul style="list-style-type: none"> · Internal Display → Accept (Enable Display Settings) or Not Accept (Disable) · Ring Tones → Accept (Enable Sound Settings) or Not Accept (Disable) · S! Quick News → Accept (Show information) or Not Accept (Hide information) · S! Info Ch./Weather → Accept (Show indicators) or Not Accept (Hide indicators) · Widget Contents → Accept (Show widgets) or Not Accept (Hide widgets)

Activating Personal Data Lock when Closing Handset

<Default> Deactivate

Set **Timer Lock at Close** to automatically activate **Personal Data Lock** when specified time has elapsed after 941P is closed.

Main Menu ► Settings ► Security ► **Timer Lock at Close**

- 1 Enter Phone Password
- 2 **Personal Data Lock** → Select a time
Confirmation appears asking whether to activate Lock OFF at Open. When **Timer Lock at Close** is set,  appears.
 - When **OFF** is selected, setting is canceled.

Opening Personal Data Lock OFF Window when Opening Handset

<Default> OFF

Main Menu ► Settings ► Security ► **Lock OFF at Open**

- 1 Enter Phone Password
- 2 **Personal Data Lock** → **ON**

Note

- When **Timer Lock at Close** and **Lock OFF at Open** are both active, canceling **Personal Data Lock** when opening handset temporarily cancels lock. However, lock activates again when specified time elapses after closing 941P.

Secure Remote Lock

If handset is lost or stolen, remotely lock handset from a PC or mobile. If **Secure Remote Lock** is active, all operations are unavailable except to turn handset on.

- For service details and user agreement/registration, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) or My SoftBank.

Accessing My SoftBank from Handset (Japanese)

For service details, visit SOFTBANK MOBILE Corp. Website.

Main Menu ► Yahoo! Keitai ► Yahoo! Keitai
 ► メニューリスト ► My SoftBank ► English

- Follow onscreen instructions.

Note

- Emergency numbers (110, 119, 118) are dialable even while **Secure Remote Lock** is set.

Showing Messages during Secure Remote Lock

<Default> OFF

Set Display message to appear when Secure Remote Lock is active.

- Use preset message or create a message.

Main Menu ► Settings ► Security ► Lock Message

1 Enter Phone Password

2 *Display Setting* → ON

■ Save Lock Messages

> After Step 1, *Message* → Enter a message

Key Pad Dial Lock

<Default> Deactivate

Allow dialing only from Phone Book entries and lock dialing with keypad. Unauthorized use of 941P can be prevented.

■ Unavailable Operations


- Dialing with keypad
- Phone Book (saving, editing, deleting, copying from microSD Card, and sending/receiving via Infrared, IC transmission and Bluetooth®)
- Sending S! Mail/SMS

■ Available Operations

- Dialing from Phone Book or Voice Dial
- Dialing from Redial, Outgoing Call Logs, Incoming Call Logs, Sent address, or Received address (only phone numbers/mail addresses saved in Phone Book)

Main Menu ► Settings ► Security ► Key Pad Dial Lock

1 Enter Phone Password

While Key Pad Dial Lock is set,  appears in Standby.

- To cancel Key Pad Dial Lock, repeat operation.

Note

- Emergency numbers (110, 119, 118) are dialable even while Key Pad Dial Lock is set.

Side-keys Guard

<Default> OFF

Set Side-keys Guard to disable side key operations while 941P is closed.

Main Menu ► Settings ► Phone Settings ► Side-keys Guard

1 ON

While Side-keys Guard is set,  appears in Standby.

- To set Side-keys Guard to **OFF**, repeat operation.

Note

- When **Menu Icons** is set to **Standard** or **Customize**, press  in Standby → Press and hold  to toggle **ON/OFF**.

Additional Lock Functions

■ IC Card Lock

Deactivate Osaifu-Keitai® functions (☞P.16-5).

■ Remote Lock

Deactivate Osaifu-Keitai® functions remotely (☞P.16-5).

Restricting Calls/Messages

Hiding Call Logs and Sent/Received Address List

<Default> ON

Main Menu ► Settings ► Incoming Settings ► Call Logs

- 1 Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Incoming	Show/hide Incoming Call Logs/Received address list
Outgoing	Show/hide Redial/Outgoing Call Logs/Sent address list

3 OFF

Note

- While Incoming Call Logs is OFF, Answer Phone (Voice Calls) does not play. Selecting Missed Call indicator does not show Incoming Call Logs.

Secret Mode/Secret Data Only

<Default> Deactivate

Phone Book entries and calendar events saved as secret data appear only when 941P is in Secret Mode/Secret Data Only.

- Set Phone Book or Calendar events as secret data (Phone Book: P.4-7, 4-8 / Calendar events: P.12-5)

Main Menu ► Settings ► Security

- 1 Select an item (See below)

Item	Operation/Description
Secret Mode	View all data including secret data
Secret Data Only	View only secret data

- 2 Enter Phone Password

For Secret Data Only, number of saved secret data appears.
When Secret Mode/Secret Data Only is set, appears (For Secret Data Only, indicator flashes.).

■ Cancel Secret Mode/Secret Data Only

> In Standby, or follow Step 1 above

■ Cancel Secret Mode/Secret Setting

> In Phone Book/Calendar event window, [Menu] → *Release secret*

Note

- Select whether to save data edited/saved in Secret Mode as secret data. Data saved/edited in Secret Data Only are saved as secret data.

Tip

- Set Learning Feature Off for Secret Mode/Secret Data Only (P.18-10)

Setting Secret Mail

<Default> ON

Set messages from secret Phone Book entries to appear only when handset is set to Secret Mode or Secret Data Only.





- 1 → *Settings*
- 2 *Universal Settings* → *Secret Mail Display*
- 3 Enter Phone Password
- 4 *OFF*

Note




- When both Spam Filter and Secret Mail Display are set, messages from Phone Book entries saved as secret mode are sorted into Spam Folder (Safe List: P.13-17).

Mail Security

Set handset to require Phone Password for opening mail boxes or operating Server Mail.



- 1  → **Settings**
- 2 **Universal Settings** → **Mail Security**
- 3 Enter Phone Password → Select items* →  **[Finish]**
 * To cancel: press  again.
 appears for set mail boxes and menus.


■ Set/Cancel Mail Security by Incoming Mail Folder

- >  → **Incoming Mail** → Highlight a folder →  **[Menu]** → **Mail Security** → Enter Phone Password
-  appears for set mail boxes and menus.

Call Restrictions

Reject/accept/forward calls from specified phone numbers, or restrict calling unspecified phone numbers.

- 1  → Search Phone Book
- 2 Select an entry →  **[Menu]** → **Restrictions**
- 3 Enter Phone Password
- 4 Select an item (See below)


Item	Operation/Description
Restrict Dialing	Allow calls only to specified numbers
Call Rejection	Reject specified numbers
Call Acceptance	Accept from specified numbers only
Call Forwarding	Automatically forward specified numbers ● Set destination numbers (Call Forwarding:  P.2-17)

- To cancel, repeat operation.

■ View/Cancel Phone Book Restrictions

- > **Main Menu** ► **Phone Book** ► **Restrictions** ► Enter Phone Password
 ► Select an item* ► Select a Phone Book entry ► Select a number
 ► **YES**

* ★ appears for set item.

- Highlight an item,  **[Menu]** → **Release Settings** → **YES** to cancel restriction on all specified numbers.

Note

- Missed call indicator appears in Standby for calls from rejected numbers.

Delaying Ringtone

<Default> OFF

Delay ringtone/vibration for Voice/Video Calls from unknown numbers.

Main Menu ► Settings ► Incoming Settings
► Ring Time Settings ► Ring Starting Time

1 **ON** → Enter start time

■ Hide Missed Call Records (Disconnected during Ringtone Delay)

> Main Menu ► Settings ► Incoming Settings
► Ring Time Settings ► Missed Calls Display ► Not Display

Rejecting Unknown Callers

<Default> Accept

Main Menu ► Settings ► Security ► Reject Unknown

1 Enter Phone Password → **Reject**

Rejecting Calls without Caller ID

<Default> Accept

Reject calls without Caller ID or from pay phones.

Main Menu ► Settings ► Security ► Call Setting w/o ID

1 Enter Phone Password

2 Select an item → **Reject**

Reset

Reset Settings

Cancel custom settings and return handset functions to their default settings.

Main Menu ► Settings ► Security ► Reset Settings

1 Enter Phone Password → **YES**

Note

- Some default settings may not be restored.
- Reset Settings cancels Navi Appli settings in S! GPS Navi. Set a Navi Appli to activate from **Select Navi Appli** (☞P.18-22).

All Reset

Cancel custom settings and return handset functions to their default settings; clear all Phone Book/Data Folder entries etc.

Main Menu ► Settings ► Security ► All Reset

1 Enter Phone Password → **YES** → **YES**
941P automatically turns off and restarts.

Note

- Fully charge battery (🔋) beforehand.
- Phone Password is reset to default.
- USIM Card/microSD Card files are not affected.
- Data transmission settings (set via PC) are not affected.
- Non-restorable items when deleted by All Reset:
 - Customized settings, Call Logs, downloaded S! Appli, etc.

Tools

Calendar	12-2
Opening Calendar	12-2
Creating Calendar Events	12-2
Saving Holidays/Memorial Days	12-3
Viewing/Editing Calendar Event Details	12-4
Calendar Functions	12-4
Tasks	12-5
Saving a Task	12-5
Using Tasks	12-6
Alarms	12-6
Alarm Tone	12-6
Setting Alarm	12-7
Calculator	12-8
Notepad	12-8
Saving a Note	12-8
Notepad Functions	12-9
Dictionary (Japanese)	12-9
Sound Recorders	12-10
Voice Recorder	12-10
Voice Announce	12-10
Bar Code Reader	12-11
Scanning Barcodes	12-11
Viewing/Editing Scanned Data	12-12
Using Scanned Data	12-12

Calendar

 
View by day, week or month; set Alarms for events.

Opening Calendar

Main Menu ► Tools ► Calendar

Current month appears.

- When a date with Calendar events is selected, number of AM and PM events and up to three contents appear.
- [Prev.] or [Next] to show previous/next month calendar.
- To switch Monthly/Weekly view: P.12-4

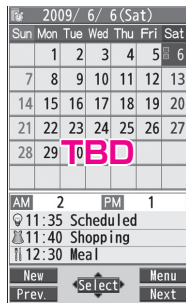


Monthly View

Creating Calendar Events

Save up to 1000 entries.

Main Menu ► Tools ► Calendar

 - 1 to highlight a date → [New] → *Schedule*

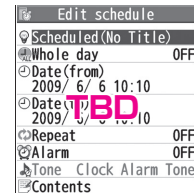

- 2 Select an item (See below)

Item	Operation/Description
Select icon/ Edit summary	> Select an icon → Edit subject
Whole day setting	> <i>OFF</i> or <i>ON</i> ● When <i>ON</i> is set, Alarm goes off at 0:00 a.m.
Date (from)	> Enter start date and time
Date (to)	> Enter end date and time
Repeat	> Select a repetition → (For <i>Select day</i> , check days → [Finish])
Alarm	> Select an Alarm type (→ For <i>ON/Set time</i> , enter time) ● Alarm Tone: P.12-6
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone
Contents	> Enter event description

3 [Finish]

Calendar Event Indicators

Following indicators appear in Calendar Window.

- (Blue): Morning event
- (Orange): Afternoon event
- (Underscore): Event that lasts for two days or longer

• Following indicators appear on Display.

- : Alarm
- : Monthly
- : Daily
- : Yearly
- : Weekly

Note

- Calendar events between 00:00 on 2000/01/01 and 23:59 on 2037/12/31 can be saved on 941P.
- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (P.11-5).

Saving Holidays/Memorial Days

Save up to 100 entries (one entry a day) each for Holidays or Memorial days.

Main Menu ► Tools ► Calendar

- 1 Highlight a date → [New] → *Holidays* or *Memorial days*
- 2 Select an item (See below)

Item	Operation/Description
Date setting	> Enter a date
Repeat	> Select a repetition type <ul style="list-style-type: none">• 1 time does not repeat Holidays/Memorial days events.
Edit holiday/anniversary	> Enter description

3 [Finish]

Indicators


Holidays appear in red.

 
Memorial days are marked with a red circle.

- Following indicators appear in Calendar/Calendar Event List Window:
 - : Holidays
 - : Memorial days
 - : Yearly repeat

Viewing/Editing Calendar Event Details

Main Menu ► Tools ► Calendar

1  to select a date

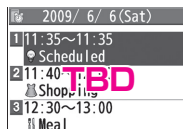


2009/ 6/ 6 (Sat)

1	11:35~11:35
	Scheduled
2	11:40~11:40
	Shop.ing
3	12:30~13:00
	Meal

Calendar Event List

2 Select an event

 - To edit:  [Edit] → Edit selected item
(Schedule:  From Step 2 on P.12-2/
Holiday, Anniversary:  From Step 2 on
P.12-3)

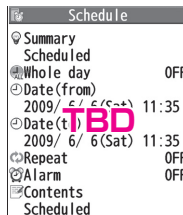

Schedule

Summary	Scheduled
Whole day	OFF
Date (from)	2009/ 6/ 6 (Sat) 11:35
Date (to)	2009/ 6/ 6 (Sat) 11:35
Repeat	OFF
Alarm	OFF
Contents	Scheduled

Calendar Event Details

 
 
 
Calendar Functions

From ► Main Menu ► Tools ► Calendar

■ Functions Available in Calendar Window

> Highlight a date →  [Menu] → Select an item (See below)



Item	Operation/Description
New	Create a new entry ( P.12-2, P.12-3)

Item	Operation/Description
Weekly display/ 1 Month	Toggle Monthly/Weekly view
Icon display	Entries in category of selected icon appear > Select an icon
No. of schedules	Display number of saved Schedule, Holiday or Anniversary entries
Add shortcut icon	Create a shortcut ( P.1-22)
Send all Ir data	( P.10-3)
All IC transmission	( P.10-5)
Delete past	Delete past entries/items, prior to highlighted date > Select a category to delete → YES
Delete all	> Enter Phone Password → Select an item → YES
Reset holidays	Restore deleted Holidays > YES

■ Functions Available in Calendar Events List/Details

> Select a date (→ Select a Schedule, Holiday or Anniversary) →

 [Menu] → Select an item (See below)

Item	Operation/Description
New	Create a new entry ( P.12-2, P.12-3)
Edit	Edit selected item ( Left)
Copy	Copy an entry to another day > Enter date and time to copy an entry to
Calendar display	Switch from Icon display to Calendar display

Item	Operation/Description
Icon display	Entries in category of selected icon appear > Select an icon
Set secret mode/ Release secret	Activate/deactivate Secret Mode > YES (→ For Set secret mode , enter Phone Password) ● Secret entries appear only in Secret Mode or Secret Data Only (↪P.11-9).
Compose S! Mail	Create S! Mail by copying event date and content to message text (↪From Step 2 on P.13-4)
Send Ir data	(↪P.10-3)
Send all Ir data	(↪P.10-3)
IC transmission	(↪P.10-5)
AllIC transmission	(↪P.10-5)
Copy to microSD	Copy an entry to microSD Card > YES ● To display data on microSD Card: ↪P.9-18
Delete this	> YES
Delete past	Delete past entries/items, prior to highlighted date > Select a category to delete → YES
Delete select	> Check entries to delete → [New] [Finish] → YES

Tasks

Make quick notes of task to manage in Task list.

Saving a Task

Main Menu ▶ Tools ▶ Tasks

- 1 [New] → Select an item (See below)
 - To check saved Tasks, select a Task. To edit, press [Edit] in detail window.

Item	Operation/Description
Edit Tasks	> Enter content
Due date	> Select how to enter due date → Enter due date ● Select No date to enter none.
Priority	> Select a priority level
Category	> Select a category
Alarm	> Select an Alarm type (→ For ON/Set time , enter time) ● Alarm Tone: ↪P.12-6
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone


- 2 [Finish]
 - When content is not entered, Tasks cannot be saved.

Note

- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (↪P.11-5).

Using Tasks

In Tasks window, press  [Menu] for following operations.

Item	Operation/Description
New	Create a new entry (☞P.12-5)
Edit	Edit an entry (☞P.12-5)
Change status	Change status indicator shown in Tasks list > Select a status (→ For Completion , select an item → Enter Completion date) ● Overdue status indicator turns red.
Show by category	> Select a category
Sort/Filter	Sort list by due date, entry order, status, etc. > Select a condition
Add shortcut icon	Create a shortcut (☞P.1-22)
Send Ir data	(☞P.10-3)
Send all Ir data	(☞P.10-3)
IC transmission	(☞P.10-5)
AllIC transmission	(☞P.10-5)
Copy to microSD	Copy a Task to microSD Card > YES ● To display data on microSD Card: ☞P.9-18
Delete this	> YES
Delete select	> Check entries →  [Finish] → YES
Delete completed	Delete an entry in Completion status > YES
Delete all	> Enter Phone Password → YES

Alarms

Alarm Tone

When scheduled time arrives, alarm tone sounds and Notification Light illuminates.

- For Calendar events and Tasks, alarm message and animation corresponding to selected icon appear on Display.

To Stop Alarm Tone for Calendar Events, Tasks or Alarm

Press any key.

Missed Alarm

"Missed Alarm" Event Indicator appears in Standby for alarms missed during Privacy Key Lock, Personal Data Lock or Infrared transmission once locks are canceled or transmission ends. Select indicator to view content.

Note

 
- When one or more Alarms are set to the same time, alarm sounds in the order of : "Alarm" → "Timer Recording" → "Tasks" → "Calendar" → "Timer Watching"
 For Tasks, "Missed Alarm" indicator appears.

Setting Alarm

Set up to 12 alarms. Alarm tone sounds at the specified time once, everyday or weekly as set.

Main Menu ► Tools ► Alarms

1 Highlight an Alarm → [Edit]

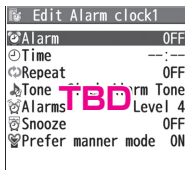

2 Select an item (See below)

Item	Operation/Description
Alarm (Alarm on/off)	Activate or cancel Alarm > ON or OFF
Time setting	> Set Alarm time
Repeat	> Select a repetition (→ For Select day , check days → [Finish])
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone
Alarms (Alarm volume)	> [Volume] to set Alarm tone volume
Snooze setting	> ON or OFF (→ For OFF , enter time) ● When Snooze is set to ON , Alarm tone sounds for 60 seconds, repeating up to six times at five minute intervals.
Prefer manner mode	> ON or OFF ● Set Manner Mode or Alarm priority.

3 [Finish]

☰ appears.

Alarm Indicators

● Following indicators appear:

D : Repeats daily **W** : Repeats weekly

Cancel & Reactivate Alarm

> In Alarms list, press [Menu] → Select **set this** or **Release this** → **YES**

- Cancel or reactivate an alarm entry as required.
- Highlight an entry → [Enter] to reactivate/cancel Alarm.

Cancel Snooze

> Press any key → [Enter]


Note

- Copy protected files may not be set as Alarm tone.
- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (→ P.11-5).

Calculator

Main Menu ► Tools ► Calculator

Operation	Assigned key
Number (0 - 9)	-
+	
-	
x	
÷	
=	
Decimal point	
%	
Clear	

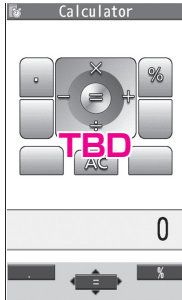 


Notepad

Save up to 20 notes.

Saving a Note

Main Menu ► Tools ► Notepad

 
- 1 *<Not Recorded>*
 - Select a saved note to view content.
 - [Edit] to edit.
- 2 Enter text
 - Up to 256 double-byte or 512 single-byte characters can be entered.

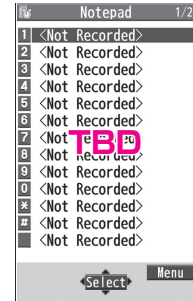

Notepads Window


Example:

 $-17+28.5=11.5$



Notepad Functions

In Notepad list window, press  [Menu] for following operations.

Item	Operation/Description
Edit	Edit a saved note
Compose S! Mail	Create S! Mail by copying content to message text (☞From Step 2 on P.13-4)
Edit schedule	Copy a note to Schedule to create a Calendar event > Schedule → Save a new note (☞From Step 2 on P.12-2)
Add shortcut icon	Create a shortcut (☞P.1-22)
Send Ir data	(☞P.10-3)
Send all Ir data	(☞P.10-3)
IC transmission	(☞P.10-5)
AllIC transmission	(☞P.10-5)
Copy to microSD	Copy a note to microSD Card > YES ● To display data on microSD Card: ☞P.9-18
Notepad Info	Display entry date, latest modified date and category of note
Category	> Select a category ● When no category applies, select None .
Delete this	> YES
Delete selected	> Check notes →  [Finish] → YES
Delete all	> Enter Phone Password → YES

Dictionary (Japanese)


Use ケータイTOOL<辞書> to access dictionaries (学研 辞スパ 英和・和英辞書 and 学研 国語辞書).

- ケータイTOOL<辞書> is an S! Appli.

Main Menu ▶ Tools ▶ Dictionary

- 1 Read 免責 (disclaimer) → **OK**
ケータイTOOL<辞書> activates.
 - To disable 免責:
Uncheck アプリ起動時に常に表示する。(Always show disclaimer when accessing dictionaries)
- 2  → Enter a word
Search results appear.
 - To scroll pages: 
 - To switch dictionaries: (1)/(3)
 - To search again:  [再検索]
- 3 Select a word
Details appear.
- 4 To end,  → **Stopped**

Note

- While Dictionary application is active, press  [メニュー] for useful functions.

Sound Recorders

Voice Recorder

Set recorded sounds for ringtones.

- Record for about 60 seconds each.

Main Menu ► Tools ► Sound Recorders ► Voice Recorder


- 1 **YES**
- 2  [Stop] /  (→ **OK**) to stop recording
Recorded sounds are saved in Ring Songs&Tones folder.

Voice Announce

Set recorded sound for on hold tone/holding tone, Alarm, Calendar event alarm, Tasks alarm, ringtones, Answer Phone message, Timer Watching (Digital TV), Ring Songs&Tones Play List.

- Record only one item for about 15 seconds.
- Select **Voice Announce** in individual window to set Voice Announce as specific tone.

Main Menu ► Tools ► Sound Recorders ► Voice Announce

- 1 **Record**
Recording starts.
Tone beeps five seconds before recording ends.
- 2  [Stop] to end recording
Tone beeps twice and previous screen returns.
 - To play back: **Play**
 - To delete: **Erase** → **YES**

Bar Code Reader

Scan barcodes (JAN) or QR Codes with built-in camera. Access websites, send messages, etc. from QR Codes.

JAN Codes

JAN Code is a one-dimensional bar code denoting numerals with bars and spaces of different widths.

QR Codes

QR Code is a two-dimensional bar code containing information.



Scanning Barcodes

Up to five items can be saved.
For split data, scan up to 16 divided QR Codes.

Main Menu ► Tools ► Bar Code Reader ► Scan Barcodes

- 1 Frame barcode in the center of Display
 - To adjust Display brightness: [Menu] → *Brightness* → Adjust to -3 (dark) - +3 (light)
 - To zoom:
 - To use Focus Lock:

- 2 [Start]
Scanning starts, and scanned results appear when completed.

- For split data, *OK* → Repeat Step 1 and 2
- To use scanned data: Step 2 on P.12-12



Example:
Scanned Results
Window
(QR Code: Left)

- 3 [Menu] → *Save result* → *OK*

Note

- 941P cannot read barcodes or two-dimensional codes other than JAN/QR Codes.
- Some barcodes cannot be read depending on code type or size.
- Barcode recognition may be slow. Hold handset steady while scanning.
- Barcodes may not be correctly read owing to scratch, dirt, damage, quality of printed material, light reflection, or QR code version.

Viewing/Editing Scanned Data

Main Menu ► Tools ► Bar Code Reader ► Saved Data List

1 View

Select an item

Edit Title

Highlight an item →  [Menu] → *Edit title* → Edit

■ Delete Saved Data


► In Step 1, (highlight an item →  [Menu] → *Delete* → *Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) → *YES*

Using Scanned Data

Main Menu ► Tools ► Bar Code Reader ► Saved Data List

1 Select an item

2 [Menu] → Select an item (See below)

Item	Operation/Description
Save result	Save scanned results
Display list	Display Saved Data List
Internet	Connect to URL > <i>Yahoo! Keitai</i> or <i>PC Site Browser</i> → <i>YES</i> ● Alternatively, select URL to connect to Internet.
Compose S! Mail	Create S! Mail to selected address (☞ From Step 4 on P.13-4) ● Alternatively, select address to create S! Mail.
Dialing	Call selected phone number > Select a dialing method → <i>Dial</i> ● Alternatively, select phone number to dial.
Add to Phone Book	Save scanned results to Phone Book (☞ From Step 2 on P. 4-5)
Add bookmark	Save URL to Bookmark > <i>YES</i> →  [OK]
Copy	Copy selected characters to another place (☞ From Step 2 on P.3-9)

Messaging

Basics 13-2

Available Entry Items & Character Entry Limits 13-2

Messaging Folders & Memory Status 13-3

Customizing Handset Address 13-3

Sending S! Mail & SMS 13-4

Sending S! Mail 13-4

Sending SMS Messages 13-7

Creating Messages 13-8

Graphic Mail Functions 13-9

Sending Messages 13-10

Receiving & Viewing Messages 13-10

Opening New Messages 13-10

Window Description 13-11

Retrieving Complete S! Mail 13-12

Opening & Saving Attachments 13-13

Showing Sent/Received Mail Address 13-13

Using Server Mail 13-14

Retrieving/Viewing Messages 13-15

Organizing/Using Messages 13-15

Checking Messages in Messaging Folders 13-15

Auto-sort 13-16

Filter Spam 13-17

Replying to Messages 13-18

Using Mail Groups 13-18

Sent/Received Address 13-19

Organizing Messages 13-20

Using Messages 13-22

Basics

Send messages via S! Mail or SMS.

S! Mail [Separate subscription required]	Exchange text messages with SoftBank or e-mail compatible handsets, PCs, etc.; attach image or sound files etc. <ul style="list-style-type: none">● 941P is compatible with Graphic Mail (P.13-5)
SMS	Exchange short text messages with SoftBank handsets.

- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Note

- Messaging functions are also available in Horizontal Open Position. Switching Normal Position to Horizontal Open Position may end active screen.

Available Entry Items & Character Entry Limits

Item		S! Mail		SMS	
Address	E-mail address	<input type="radio"/>	Up to 246 single-byte alphanumerics/ Up to 20 recipients	—	—
	Phone number ¹	<input type="radio"/>		<input type="radio"/>	Up to 21 single-byte alphanumerics/Up to 1 recipient
Subject		<input type="radio"/>	Up to 256 double-byte/ Up to 512 single-byte alphanumerics	—	—
Text		<input type="radio"/>	30 KB	<input type="radio"/>	Up to 70 double-/single-byte alphanumerics ²
Attachment		<input type="radio"/>	³	—	—

¹ SoftBank handset numbers only

² When text entry mode is set to **English (160char.)** (P.18-19), up to 160 single-byte alphanumerics can be entered.

 
³ Up to 300 KB including subject, message text and attachment can be sent.

Note

- S! Mail text character limit differs by attachment size.
- When number of entered characters exceeds limit in SMS, S! Mail conversion option message appears.
- S! Mail cannot be converted to SMS.

Messaging Folders & Memory Status

Messages are organized in folders by message type.

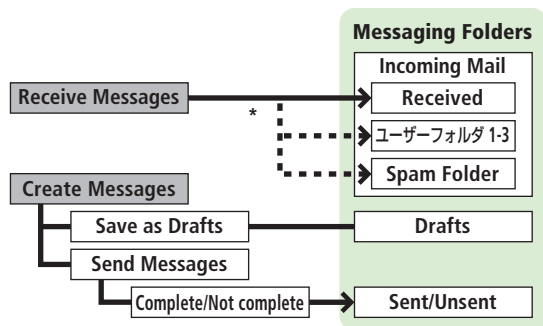

* Set Auto-sort to sort received messages to specified folders or Spam Folder automatically (☞P.13-16, P.13-17).

Deleting Messages Automatically

When memory for messaging folders is low, old messages are automatically deleted one by one. Protect important messages from unintentional deletion (☞P.13-21), or set message deletion settings to **OFF** (☞P.18-18). Messages in Drafts and SMS on USIM Card are not deleted automatically.

When Messaging Memory is Full

☑ (Received Full) appears in Standby and no more new incoming messages are received. Delete old messages in Incoming Mail folder (☞P.13-21). Retrieve new messages (☞P.13-15) after deleting some S! Mail.

View Memory Status

> ☑ → *Memory Status*

Tip

● Mail Security (☞P.11-10)

Customizing Handset Address

Change your handset mail address (alphanumerics before @) to reduce the risk of receiving spam. Default account name is random alphanumerics.

Account Name	Domain Name
abc123-xyz	@ softbank.ne.jp
Customize here	

- For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Handset mail address cannot be changed in Emission OFF Mode.
- For operations while using Internet: ☞P.14-6


1 ☑ → *Settings* → *Custom Mail Address*

 
941P connects to the Network.
Follow onscreen instructions.

Sending S! Mail & SMS

Sending S! Mail

Example: Select a Phone Book entry to send S! Mail.

1 Press and hold 

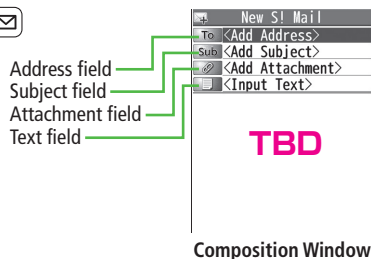


2 Select Address field →
Phone Book



3 Select a Phone Book entry →
Select a SoftBank handset number
or mail address



- Press  to toggle tabs if both mail addresses and phone numbers are saved.

4 Select Subject field →
Enter subject



5 Select Text field

6 Enter text



7  [Send]



Tip










- Addresses ● Functions Available while Creating Messages (P.13-8)
- Sending Options (P.13-9) ● Sending Messages (P.13-10)
- Settings** ● Confirm Message Delivery (P.18-18)

Adding Attachments

- 1 After Step 6 on P.13-4, select Attachment field
- 2 Select a folder in Data Folder → Select a file
- 3  [Send]



■ Attach Captured Pictures/Videos

- After Step 1, **Activate Camera** → **Photo mode** or **Video mode** → Frame subject →  [Record],  or  (→ For video,  [Stop],  or  (→  [Save],  or  (

Note

- Some files can not be attached depending on the file format or size.
- Some copy protected files can not be sent.
- Ring Songs&Tones, Music and Videos files cannot be attached directly from microSD Card. Move files to handset before attaching to messages.

Tip





- Attachments (↗P.13-8)

 
Graphic Mail

Create HTML messages; select font color/size, background color, or insert images, etc.

Example: Use various Templates to create Graphic Mail.

- Change font size
- Scroll text


- 1 After Step 4 on P.13-4, press  [Menu] → **Load Template** → Select a template
 - To view template: Highlight template →  [View]
- 2 Select Text field → Delete "ココに文字をいれてネ"
- 3  → **Font Size**
 - Alternatively,  [Menu] → **Set Graphic Mail** to open Graphic Palette

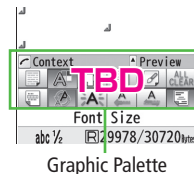



13




Messaging

4 Select a font size → Enter text

 
5  → *Select area*

6 Place cursor before a sentence to scroll →  [Start] → Move cursor to end of sentence →  [End]



7 *Set Scrolling* →  [Exit]

8  to preview → 
 ● Alternatively,  [Menu] → *Preview* to view text field

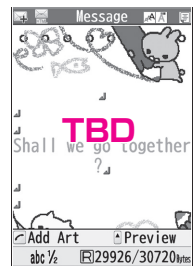

9  →  [Send]



Reset Operations


- > To cancel previous operation: Close Graphic Palette →  [Menu] → *Undo*
- > To reset all Graphic Mail operations:  → *Graphic all reset* → *YES* → *YES*

Using My Pictograms



 
1 After Step 5 on P.13-4, in text entry window,
 →  [My Pict.]

- My Pictogram list appears.
- Previously used pictogram list appears first.
 - Functions in pictogram list (P.3-4)



2 Select a My Pictogram
 My Pictogram is entered.

3 Enter text →  [Send]

Use My Pictograms from Graphic Palette

- > In text entry window,  → *My Pictograms* →  [My Pict.] → Select a My Pictogram →  [Exit]

Use My Pictograms Saved in microSD

- > In text entry window,  → *Insert files* → *File Select* → *Pictures* →  [microSD] → *My Pictograms* → Select a folder → Select a My Pictogram

Tip

- Use Other Graphic Mail Settings (P.13-9)
- Download Templates via Internet (P.13-10)