


















First Three Digits			Last Digit			First Three Digits			Last Digit			First Three Digits			Last Digit		
0	1	2	4	5	6	0	1	2	4	5	6	0	1	2	4	5	6
679	筭	筭	筭	筭	筭	722	莫	沙	723	莫	沙	724	莫	沙	725	莫	沙
680	筭	筭	筭	筭	筭	726	莫	沙	727	莫	沙	728	莫	沙	729	莫	沙
681	筭	筭	筭	筭	筭	730	莫	沙	731	莫	沙	732	莫	沙	733	莫	沙
682	筭	筭	筭	筭	筭	734	莫	沙	735	莫	沙	736	莫	沙	737	莫	沙
683	筭	筭	筭	筭	筭	738	莫	沙	739	莫	沙	740	莫	沙	741	莫	沙
684	筭	筭	筭	筭	筭	742	莫	沙	743	莫	沙	744	莫	沙	745	莫	沙
685	筭	筭	筭	筭	筭	746	莫	沙	747	莫	沙	748	莫	沙	749	莫	沙
686	筭	筭	筭	筭	筭	750	莫	沙	751	莫	沙	752	莫	沙	753	莫	沙
687	筭	筭	筭	筭	筭	754	莫	沙	755	莫	沙	756	莫	沙	757	莫	沙
688	筭	筭	筭	筭	筭	758	莫	沙	759	莫	沙	760	莫	沙	761	莫	沙
689	筭	筭	筭	筭	筭	762	莫	沙	763	莫	沙	764	莫	沙	765	莫	沙
690	筭	筭	筭	筭	筭	766	莫	沙	767	莫	沙	768	莫	沙	769	莫	沙
691	筭	筭	筭	筭	筭	770	莫	沙	771	莫	沙	772	莫	沙	773	莫	沙
692	筭	筭	筭	筭	筭	774	莫	沙	775	莫	沙	776	莫	沙	777	莫	沙
693	筭	筭	筭	筭	筭	778	莫	沙	779	莫	沙	780	莫	沙	781	莫	沙
694	筭	筭	筭	筭	筭	782	莫	沙	783	莫	沙	784	莫	沙	785	莫	沙
695	筭	筭	筭	筭	筭	786	莫	沙	787	莫	沙	788	莫	沙	789	莫	沙
696	筭	筭	筭	筭	筭	790	莫	沙	791	莫	沙	792	莫	沙	793	莫	沙
697	筭	筭	筭	筭	筭	794	莫	沙	795	莫	沙	796	莫	沙	797	莫	沙
698	筭	筭	筭	筭	筭	798	莫	沙	799	莫	沙	800	莫	沙	801	莫	沙
699	筭	筭	筭	筭	筭	802	莫	沙	803	莫	沙	804	莫	沙	805	莫	沙
700	筭	筭	筭	筭	筭	806	莫	沙	807	莫	沙	808	莫	沙	809	莫	沙
701	筭	筭	筭	筭	筭	810	莫	沙	811	莫	沙	812	莫	沙	813	莫	沙
702	筭	筭	筭	筭	筭	814	莫	沙	815	莫	沙	816	莫	沙	817	莫	沙
703	筭	筭	筭	筭	筭	818	莫	沙	819	莫	沙	820	莫	沙	821	莫	沙
704	筭	筭	筭	筭	筭	822	莫	沙	823	莫	沙	824	莫	沙	825	莫	沙
705	筭	筭	筭	筭	筭	826	莫	沙	827	莫	沙	828	莫	沙	829	莫	沙
706	筭	筭	筭	筭	筭	830	莫	沙	831	莫	沙	832	莫	沙	833	莫	沙
707	筭	筭	筭	筭	筭	834	莫	沙	835	莫	沙	836	莫	沙	837	莫	沙
708	筭	筭	筭	筭	筭	838	莫	沙	839	莫	沙	840	莫	沙	841	莫	沙
709	筭	筭	筭	筭	筭	842	莫	沙	843	莫	沙	844	莫	沙	845	莫	沙
710	筭	筭	筭	筭	筭	846	莫	沙	847	莫	沙	848	莫	沙	849	莫	沙
711	筭	筭	筭	筭	筭	850	莫	沙	851	莫	沙	852	莫	沙	853	莫	沙
712	筭	筭	筭	筭	筭	854	莫	沙	855	莫	沙	856	莫	沙	857	莫	沙
713	筭	筭	筭	筭	筭	858	莫	沙	859	莫	沙	860	莫	沙	861	莫	沙
714	筭	筭	筭	筭	筭	862	莫	沙	863	莫	沙	864	莫	沙	865	莫	沙
715	筭	筭	筭	筭	筭	866	莫	沙	867	莫	沙	868	莫	沙	869	莫	沙
716	筭	筭	筭	筭	筭	870	莫	沙	871	莫	沙	872	莫	沙	873	莫	沙
717	筭	筭	筭	筭	筭	874	莫	沙	875	莫	沙	876	莫	沙	877	莫	沙
718	筭	筭	筭	筭	筭	878	莫	沙	879	莫	沙	880	莫	沙	881	莫	沙
719	筭	筭	筭	筭	筭	882	莫	沙	883	莫	沙	884	莫	沙	885	莫	沙
720	筭	筭	筭	筭	筭	886	莫	沙	887	莫	沙	888	莫	沙	889	莫	沙
721	筭	筭	筭	筭	筭	890	莫	沙	891	莫	沙	892	莫	沙	893	莫	沙





Weather Indicator List





- Indicators and categories are subject to change without prior notice.




Weather	
	Clear (day)
	Clear (night)
	Cloudy
	Rain
	Snow
	Thunderstorm
	Precipitation 0%-100%
	Later
	Occasionally




Pollen Level	
	Low
	Moderate
	High
	Very High

Cherry Blossom	
	Blossoms Opening
	Near Full Bloom
	Peak Bloom
	Past Peak

Fall Foliage	
	No Color
	Moderate Color
	Peak Color
	Past Peak

UV Level	
	Low
	Moderate
	High
	Very High

Typhoon	
	Formed
	Approaching
	Severe

Other Information	
	Heavy Rain
	Strong Winds
	Notifications

Memory List

Data Folder	Up to 3500 items (Up to 300 MB) (Including pre-installed data)
--------------------	---

- Shared with S! Appli List
(One S! Appli corresponds up to 6 MB.)

Calendar Events	Up to 1000 items
------------------------	------------------

Phone Book	Up to 1000 items
-------------------	------------------

Messaging	Incoming Mail	Up to 3000 items
	Sent/Unsent	Up to 1000 items

- SMS, S! Mail and PC Mail combined

Yahoo! Keitai	Saved Pages	[Yahoo! Keitai] Up to 20 items/750KB [PC Site Browser] Up to 20 items/1150KB
	Bookmarks	[Yahoo! Keitai] Up to 100 items [PC Site Browser] Up to 100 items
	URL History	[Yahoo! Keitai] URL Entry: Up to 20 items URL Access: Up to 100 items* [PC Site Browser] URL Entry: Up to 20 items URL Access: Up to 100 items*
	Cache	[Yahoo! Keitai] 750KB [PC Site Browser] 1150KB

* The number of savable items varies depending on URL length.

Specifications

941P

Weight (including battery)		135 g*
Dimensions (closed)		50 x 111 x 18.4 mm*
Standby Time (closed)	3G	650 hours*
	GSM	370 hours*
Talk Time	3G	220 minutes*
	Video Call	140 minutes*
	GSM	230 minutes*
TV Reception Time	Normal Mode	3.8 hours*
	ECO Mode	5.6 hours*
Charging Time	AC Charger	130 minutes*
	In-Car Charger	130 minutes*
Maximum Output	3G	0.25 W
	GSM	2.0 W

* Approximate value

- Values above were calculated with battery installed.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- TV-Reception Time is an average measured using earphone/microphone, with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when an S! Appli is active.

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	800 mAh
Dimensions	45 x 4.5 x 37 mm*

* Approximate value

- Specifications subject to change without notice.

Index

Numerics

3G 2-11

A

AC Charger	1-15
Access History	
PC Site Browser	14-5
Yahoo! Keitai	14-4
Account Details	1-30, 4-13
Address (Adding/editing/deleting).....	13-8
After-Sales Service	19-33
Alarms	12-6
All Reset	11-12
Alternative Image.....	2-6
Answer Phone.....	2-15
Answering Calls	
Video Calls	2-8
Voice Calls	2-5
Attachments	
Adding.....	13-8
Deleting.....	13-8
Opening/saving	13-13
Auto Answer	18-7
Auto Focus Lock	6-13
Auto Save (Camera).....	6-11
Auto timer	6-8
Auto-sort	13-16
AV Output.....	10-13

B

Back Light	
Display.....	18-5
S! Appli.....	18-21
Video Calls	2-13
Backup	
microSD Card.....	9-19
S! Address Back-up	4-10
Bar Code Reader.....	12-11
Basic Operations	
Handset	x
Internet	14-6
Battery.....	1-12
Battery Level	1-11, 1-13
Bluetooth®	10-6
Bluetooth® Passkey.....	10-8
Bookmarks.....	14-8
Books folder	9-3
BookSurfing®	7-8
Brightness	
Back Light.....	18-5
Camera	6-5
External Display	18-5
Video Calls	18-12
Browser (Initializing)	18-21

C

Cache Memory.....	14-2
Calculator.....	12-8
Calendar.....	12-2
Calendar Events.....	12-2
Call Barring.....	2-20
Call Cost.....	18-9
Call Forwarding.....	2-17
Call Log.....	2-14
Call Operations.....	2-12
Call Rejection	
Calls without Caller ID.....	11-11
Unknown Callers.....	11-11
Call Restrictions.....	11-10
Call Settings.....	18-9
Call Time.....	18-9
Call Waiting.....	2-20
Caller ID.....	2-3, 2-21
Camera [Section Contents].....	6-1
Center Access Code.....	1-28
Channel Setting.....	5-4
Character Code (Kuten Code)	
Character Code List.....	19-19
Input Options.....	3-5
Charge Limit.....	18-9
Charging Time.....	1-12
Clock Display	
External Display.....	18-5
Horizontal Open Position.....	18-13
Internal Display.....	18-4
Closing Clamshell.....	18-9

Color Scheme.....	18-3
Confirming Settings.....	18-24
Content Key.....	9-5
Context Forecast.....	3-6
Continuous Shooting.....	6-7
Conversion Candidates.....	3-6
Conversion Methods.....	3-6
Cookies Setting/Deleting	
Internet.....	18-20
Mobile Widget.....	18-15
Copy Protected Files.....	9-4
Country/Region Code.....	2-10
Customer Service.....	19-34
Customized Screen.....	1-24

D

Data Folder.....	9-2
Date & Time Settings.....	18-8
Deleting	
Calendar events.....	12-5
Messages.....	13-21
Phone Book.....	4-9
S! Appli.....	15-4
Delivery Report.....	13-9
Dictionary.....	12-9
Digital TV [Section Contents].....	5-1
Digital TV Settings.....	18-14
Display.....	1-10
Display Indicators.....	1-10
Display Settings.....	18-3

Download

Customized Screen.....	1-24
Familiar Usability.....	1-24
Fonts.....	1-25
From web pages.....	14-11
Lifestyle-Appli.....	15-2, 16-3
Music.....	8-3
S! Appli.....	15-2
Templates.....	13-10
Widgets.....	7-3
Download Dictionary.....	3-10
Drafts.....	13-15
Driving Mode.....	1-18, 18-7

E

e-Book Viewer.....	7-8
Earpiece Volume	
Video Calls.....	2-7
Voice Calls.....	2-5
Emergency Calls (110, 119, 118).....	2-4
Emergency Positioning Request.....	2-4
Emission OFF Mode.....	1-18
Event Indicators.....	1-21
External Display.....	1-10, 1-23

F

Familiar Usability.....	1-24
Flash setting.....	6-5, 6-10
Focus Setting.....	6-13
Folder/files.....	9-14
Font Settings.....	1-25
Font Size.....	18-6
Function List.....	19-2

G

Global Roaming Service.....	2-10
Graphic Mail.....	13-5
Group Settings (Phone Book).....	4-6
GSM.....	2-11

H

Handset	
Menus.....	1-18
Parts & Functions.....	1-4
Power On/Off.....	1-16
Handset Security [Section Contents]....	11-1
Help (Text Entry).....	3-2
Hide Call Logs/Address List.....	11-8
Hold	
Video Calls.....	2-12
Voice Calls.....	2-12
Horizontal View.....	18-13
HTML messages.....	13-5

I

IC Card Lock.....	16-5
IC Transmission.....	10-4
IDD Prefix.....	2-9
Image quality (Camera).....	6-5
Image size (Camera).....	6-5
Incoming Call Logs.....	2-13
Incoming Options (S! Mail).....	18-19
Infrared.....	10-2
Input Character Settings (SMS).....	18-19
Inside Camera.....	6-3
Intelligent Auto.....	6-5, 6-10
Internal Display.....	1-10, 18-3
International Call	
From abroad.....	2-10
From Japan.....	2-9
International Setting.....	2-10

Internet [Section Contents].....	14-1
----------------------------------	------

K

Key Assignments	
Mode 1 (5-touch).....	19-15
Mode 2 (2-touch).....	19-16
Mode 3 (NIKO-touch).....	19-17
Key Pad Dial Lock.....	11-7
Key Tone.....	18-2
Keyguard.....	11-3
Kuten Code (Character Code).....	19-19

L

Language.....	18-3
License Information (S! Appli).....	15-2
Lifestyle-Appli.....	16-3
Lock Message.....	11-7
Lock OFF at Open.....	11-6

M	
Mail Group.....	13-18
Mail Security.....	11-10
Main Menu	1-18
Making Calls	
International Calls.....	2-9, 2-10
Video Calls	2-7
Voice Calls	2-2
Manner Mode.....	1-17, 2-12, 18-7
Manufacture Number	18-20
Memory List.....	19-25
Memory Manager (Internet).....	18-20
Menu Icons	18-4
Menu Numbers	1-19
Messaging [Section Contents].....	13-1
microSD Card.....	9-16
Backup.....	9-19
Check.....	9-21
Formatting.....	9-18
Synchronizing	18-21
Missed Call Notification	2-19
Mobile Widget.....	7-2
Mobile W-Speed	5-2
MULTI Key	1-6, 1-29
Multi Selector	ix
Music folder.....	9-2
Music Player [Section Contents].....	8-1
My original set.....	6-5, 6-12
My Pictograms.....	9-2, 13-6

N	
Network Information	1-16
Network S! Appli.....	15-2
New Messages	
Receiving.....	13-15
Viewing	13-10
Night mode	
Camera	6-5
Video Calls	18-12
Normal Mode (Simple Menu)	1-26
Notepad.....	12-8
Notification Light Settings	18-10
O	
One-push Open Button.....	1-7
Open For New.....	18-3
Open-to-Ans. Call.....	18-7
Operator Names	2-11
Optional Services	2-17
Original Animation	9-13
Osaifu-Keitai® [Section Contents].....	16-1
Other Documents folder.....	9-3
Outgoing Call Logs	2-13
Outside Camera	6-3
P	
Passwords.....	1-28

Center Access Code.....	1-28
Phone Password	11-2
Security Code	2-21
PC Site Browser	14-2
Access.....	14-5
Display Settings	18-19
Memory Manager & Settings	18-20
Security Settings	18-20
Personal Data Lock	11-4
Phone Book [Section Contents].....	4-1
Phone Password	1-28
Changing	11-2
Photo light setting	6-5, 6-10
Photo mode.....	6-5
Pictographs.....	3-4
Pictures (Still Images)	
Capturing	6-6
Editing	9-12
Pictures folder	9-2
PIN/PIN2	1-3
Changing	11-2
PIN Authentication	11-2
PIN Lock & Cancellation (PUK)	11-3
Play Background.....	8-7
Play List	8-10
Play mode setting.....	8-6
Predictive Candidates.....	3-6
Privacy Key Lock	11-4
Private Menu	1-25
PUK/PUK2	1-3, 11-3

Q	
QR Code.....	12-11
Quality (Camera).....	6-5
Quick Open Menu.....	19-14

R	
Recipients (Adding/editing/deleting) ...	13-8
Referer Information.....	18-20
Remote Lock.....	16-5
Remote Monitoring.....	2-8
Reset	
All Reset.....	11-12
Browser Settings.....	18-21
Settings.....	11-12
Total Call Charge/Time.....	18-9
TV Settings.....	18-15
Ring Songs&Tones folder.....	9-2
Ring Time (Answer Phone).....	2-16
Ring Time Settings.....	11-11
Ringer Volume.....	18-2
Ringtone.....	9-8, 18-2
Ringtone Duration (Message).....	18-2
Root Certificates.....	18-21

S	
S! Addressbook Back-up.....	4-10
S! Appli [Section Contents].....	15-1
S! GPS Navi [Section Contents].....	17-1
S! Information Channel.....	7-6

S! Mail.....	13-2
Creating/sending.....	13-4
Mail Notice.....	13-11
Settings.....	18-19
Universal Settings.....	18-18
S! Quick News.....	7-4
Settings.....	18-16

Save	
Alarms.....	12-7
Calendar Events.....	12-2
Camera.....	6-11
Notepad.....	12-8
Phone Book.....	4-3, 18-11
S! Information Channel.....	7-6
S! Quick News.....	7-4
Shortcut.....	1-22
User's Dictionary.....	3-10
Saved Pages.....	14-8
Script.....	18-20
Scroll Unit.....	18-19
SD Audio.....	8-2
Secret Data Only.....	11-9
Secret Mail Setting.....	11-9
Secret Mode.....	11-9
Secure Remote Lock.....	11-6
Security	
Data Folder.....	9-14
Internet.....	18-20
S! Appli.....	15-4
Security Code.....	1-28
Security Functions.....	11-2
Server Mail.....	13-14

Settings [Section Contents].....	18-1
Shikkari Talk.....	2-5
Shortcuts.....	1-22
Shutter sound.....	6-11
Side-keys Guard.....	11-8
Signal Strength.....	1-10
Simple Menu.....	1-26
SMS.....	13-2
Creating/sending.....	13-7
Settings.....	18-19
Universal Settings.....	18-18
Snooze.....	12-7
SoftBank Utility Software.....	10-11
Softkeys.....	ix
Software Update.....	19-12
Sort (Messages).....	13-21
Spam Filter.....	13-17
Speaker ON/OFF.....	2-12
SSL.....	14-3
Status Indicators.....	1-10
Still Images (Picture)	
Capturing.....	6-6
Editing.....	9-12
Streaming.....	14-12
Symbols.....	3-4
Symbol List.....	19-18

T

Tasks	12-5
Templates (Graphic Mail).....	13-5
Text Entry [Section Contents]	3-1
Time Correction	18-8
Timer Lock at Close	11-6
TLS	14-3
Trimming (Editing Still Images)	9-13

U

URL History	
PC Site Browser	14-5
Yahoo! Keitai	14-4
USB	10-11
User Mode (Manner Mode)	18-7
User's Dictionary	3-10
USIM Card	1-2
USIM Card Phone Book	4-3
USIM PINs	1-3

V

Vibrator	
Incoming alert	18-2
S! Appli	18-21
Videos (Recording)	6-8
Videos folder	9-3
View Blind	1-30
Viewfinder	
Camera	6-4
Video Camera	6-4
Voice Announce	12-10
Voice Dial	4-14
Voice Mail	2-18
Voice Recorder	12-10
Volume	
Ringtone	18-2
S! Appli	18-21
Video Calls	2-7
Voice Calls	2-5

W

Wallpaper	
External Display	18-5
Horizontal Open Position	18-13
Internal Display	18-3
Warning Messages (PC Site Browser) ...	18-19
Warranty	19-33
Weather Indicator	7-7
White balance	6-5, 6-11
Widgets	7-2
WMA Files	8-2
World Clock	18-8

Y

Yahoo! Keitai	14-2
Access	14-3
Display Settings	18-19
Memory Manager & Settings	18-20
Security Settings	18-20

Z

Zoom	6-8
------------	-----

Warranty & Service

Warranty

Warranty is provided when you purchase a 941P.

- Check name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

SoftBank is not liable for any damage resulting from use of this product.

After-Sales Service

See "Troubleshooting" (☞P.19-10) before contacting SoftBank for service or repairs. If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (☞P.19-34) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, any repairs are performed upon request at subscriber's expense.

Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.

Check phone number before you dial.

SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at
**157 for General Information or
113 for Customer Assistance**

SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(Please take care to dial the correct number. International
charges will apply to this call.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Toll Free Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113

SoftBank 941P User Guide

June 2009, First Edition

SOFTBANK MOBILE Corp.

For additional information, please visit a SoftBank shop.

Model: SoftBank 941P

Manufacturer: Panasonic Mobile Communications Co., Ltd.



モバイル・リサイクル・ネットワーク
携帯電話やPDAのリサイクルにご協力を。

Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands). Before you recycle, please remember these important points:

- Handsets, batteries and chargers submitted for recycling cannot be returned.
- Always erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.