

SoftBank 841P

User Guide



SoftBank

Introduction

Thank you for purchasing SoftBank 841P.

- For proper handset use, read User Guide (this guide).
- Accessible services may vary by service area, subscription, etc.

SoftBank 841P is compatible with both 3G and GSM network technologies.

Note

- Unauthorized copying of any part of this guide is prohibited.
- Guide content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this guide. Please contact SoftBank Mobile Customer Center, General Information (☎ P.17-30) about unclear or missing information.

Content Search

Function/Service Name Search	Index	☞ P.16-22
	Contents	☞ P.vi
Objective Search	Objective Search	☞ P.ii
	Index	☞ P.16-22
Function Search	Overview	☞ P.iv
	Contents	☞ P.vi
Using Your Handset	Function List	☞ P.16-2
	Display	☞ P.1-8
Guide Organization	Contents	☞ P.vi
	Section Contents	☞ Chapter Top Pages
Solving Problems	Troubleshooting	☞ P.16-8
	Warranty & Service	☞ P.16-29

Getting Started	1
Call	2
Text Entry	3
Phone Book	4
Digital TV	5
Camera	6
News/Entertainment	7
Media Player	8
Managing Files	9
Connectivity	10
Handset Security	11
Tools	12
Messaging	13
Internet	14
S! Appli	15
Settings	16
Appendix	17

Confirming & Using My Number & My Mail Address

My Phone Number

Confirm your phone number on handset in Standby without navigating menus.

My Number:  P.1-24

My Mail Address


Customized address may reduce spam.

Customizing Handset Address:
 P.12-3

Customizing Handset Settings

Setting Ringtones

Set Chaku-Uta[®], Chaku-Uta Full[®] or Ringtone Flash[®] files as ringtones.

Ringtones:  P.15-2

Downloading Tunes & Tones



Download music (Chaku-Uta Full[®]) files from mobile websites.

Downloading Music:  P.7-3

Mastering Basics



Learning Your Handset

Learn key assignments, and navigate menus to select & execute functions.

Handset Menus:  P.1-16
Parts & Functions:  P.1-4

Making Mobile Calls

Use voice telephony or enjoy video telephony with compatible mobiles.

Voice Calls:  P.2-2
Video Calls:  P.2-6

Fun Stuff

Watching One Seg Digital TV

Enjoy One Seg digital TV. Set channels in advance to view shows.



Digital TV:  P.5-1

Media Player

Download music/video files from websites via Media Player directly.



Media Player:  P.7-1

Sending Your Contact Info

Save mail address and other details; send to compatible devices wirelessly.

Account Details: P.4-14

Messaging Multiple Recipients

Enter multiple mail addresses/numbers to send a message to all at one time.

Sending Messages: P.12-4
Add/Edit/Delete Address: P.12-9

Sending Files Wirelessly

Send files or your own mail address saved in Account Details via Infrared transmission to other compatible devices.

Infrared: P.4-14

Customizing Standby Display

Add wallpaper, set clock size/position or set calendar to appear in Standby.

Wallpaper: P.8-7
Display: P.15-4

Customizing Key Settings

Set frequently used functions to keys.

Keypad: P.15-6

Using Shortcuts to Functions

Access shortcuts to frequently used functions in Standby.

Standby Window: P.1-19

Mastering Text Entry Methods

Enter text for Messaging functions or to add/edit Phone Book entry items.

Text Entry: P.3-1

Using Messaging Services

Send short or long text messages. Attach image/sound files, etc. to S! Mail.

Messaging: P.12-1
Feeling Mail: P.12-5
Graphic Mail: P.12-6

Accessing the Mobile Internet

Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files.

Yahoo! Keitai: P.13-2

Camera & Video Camera

Pictures: P.5-5
Videos: P.5-6



Playing Games

Download and install S! Appli Games via Yahoo! Keitai.

S! Appli: P.14-1



Getting News (Japanese)

Set up S! Quick News to view a variety of information contents.

S! Quick News: P.6-5

841P Features

One Touch Guide

Access One Touch Guide for instructions to key operations (opening messages/mail folder, viewing calendar or using Speed Dial, etc).

 P.11-12

Simple Mode

Use simplified menus limiting to only basic functions.

 P.1-21

SoftBank Mobile Features

Yahoo! Keitai

Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files.

 P.13-2

Graphic Mail


Create HTML messages; select font color/size, background; insert images.

 P.12-6

Useful Features

**Phone Book/
S! Addressbook Back-up**

Save Phone Book entries; back up handset entries on Server, etc.

 P.4-1, P.4-11

Camera/Video

Capture still images or record videos with approximately two mega pixel camera.

 P.5-5, P.5-6

PC-related Functions

PC Site Browser

View PC-based websites on handset.

 P.13-5

Data Back-up/Management

Transfer data between handset and PC for back-up and editing.

 P.9-5

View Blind

841P protects private information from prying eyes.

 **P.1-24**

Magnifying Loupe

Use handset camera to view enlarged image, etc.

 **P.5-8**

3G High Speed

841P supports HSDPA (High Speed Downlink Packet Access) that provides high-speed web browsing and downloads of Music/video files.

S! Information Channel/ Weather (Japanese)

Subscribe to content and periodically receive update information. Set Weather Indicator to check weather forecast in Standby.

 **P.6-2**

S! Quick News (Japanese)

Add news headlines, weather forecasts, etc. via S! Quick News List to scroll across Standby Window.

 **P.6-5**


e-Book Viewer/BookSurfing® (Japanese)

Download e-media, like e-books, e-comics, and e-photobooks on 841P.

 **P.6-6**

Calendar & Alarm

Add events by time/date and set Event Alarms to help manage your schedule.

 **P.11-2, P.11-6**

Media Player

Play handset/microSD Card music/video files; stream media via Yahoo! Keitai.

 **P.7-1**

Voice Recorder

Record your voice or voice memos.

 **P.11-9**

microSD Card

Extend handset internal memory or back-up handset files, etc.



 **P.8-13**

Contents

Contents	vi
Package Contents	viii
Using This Guide	viii
Safety Precautions.....	xii
Handling Precautions	xviii
Copyrights and Others.....	xxii
Specific Absorption Rate (SAR)	xxiv

1. Getting Started

USIM Card.....	1-2
Parts & Functions.....	1-4
About Battery	1-11
Handset Power On/Off.....	1-15
Manner Mode	1-16
Handset Menus.....	1-17
Standby Options.....	1-19
Private Menu	1-21
Simple Mode	1-22
Passwords.....	1-24
View Blind	1-25
My Number	1-25

2. Call

Making/Answering Voice Calls	2-2
Making/Answering Video Calls.....	2-5
International Calls	2-7
Engaged Call Functions	2-9
Call Log.....	2-10
Answer Phone.....	2-12
Optional Services	2-14

3. Text Entry

Text Entry.....	3-2
Entering Text.....	3-2
Conversion Methods (Japanese).....	3-5
Editing Text.....	3-8
User's Dictionary	3-9
Download Dictionary.....	3-9

4. Phone Book

Overview	4-2
Saving to Phone Book	4-3
Searching/Using Phone Book.....	4-6
Managing Phone Book	4-10
S! Addressbook Back-up.....	4-11
Account Details	4-14

5. Digital TV

Basics.....	5-2
Initial Setup.....	5-3
Watching TV.....	5-5
TV Links (Japanese)	5-9

6. Camera

Before Using Camera.....	6-2
Pictures/Videos	6-5
Viewing Saved Images	6-8
Magnifying Loupe.....	6-8

7. News/Entertainment

S! Information Channel/Weather (Japanese).....	7-2
S! Quick News (Japanese)	7-5
E-Books (Japanese).....	7-6

8. Media Player

Overview	8-2
Saving Music/Video	8-3
Using Media Player.....	8-4

9. Managing Files

Data Folder	9-2
Opening Files.....	9-4
Using/Editing Files.....	9-9
Managing Folders & Files	9-12
Memory Card.....	9-13

10. Connectivity

Infrared.....	10-2
SoftBank Utility Software (Japanese).....	10-5
USB (Japanese)	10-5
Location Settings.....	10-6

11. Handset Security

Changing Phone Password	11-2
Security Functions	11-2
Restricting Calls/Messages	11-5
Reset.....	11-9

12. Tools

Calendar	12-2
Alarms	12-6
Calculator	12-7
Notepad.....	12-8
Count Down Timer	12-9
Voice Recorder	12-9
Bar Code Reader.....	12-10
One Touch Guide.....	12-12

13. Messaging

Basics	13-2
Sending S! Mail & SMS.....	13-4
Receiving & Viewing Messages	13-12
Organizing/Using Messages	13-18

14. Internet

Getting Started	14-2
Using Yahoo! Keitai	14-3
Using PC Site Browser	14-5
Basic Operations.....	14-6
Using Information	14-8
Option Menu Items.....	14-13

15. S! Appli

Before Using S! Appli	15-2
Using S! Appli	15-3

16. Settings


Sound & Vibration	16-2
Display.....	16-4
Keypad.....	16-6
Manner Mode	16-7
Date & Time	16-8
Call Settings	16-9
Notification Light	16-12
Text Entry.....	16-12
Phone Book	16-13
Video Call	16-14
Camera	16-15
S! Quick News (Japanese)	16-17
Messaging	16-18
Internet.....	16-21
S! Appli.....	16-23

17. Appendix


Function List	17-2
Troubleshooting.....	17-8
Software Update	17-10
Key Assignments.....	17-12
Symbol List	17-13
Character Code List	17-14
Weather Indicator List	17-19
Memory List.....	17-20
Specifications	17-21
Index.....	17-22
Warranty & Service.....	17-29
Customer Service.....	17-30

Package Contents

□ Handset (841P)

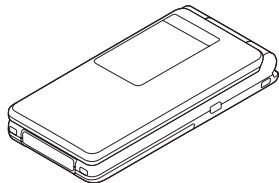

□ Battery (PMBAT1)

 

□ Quick Start Guide (Japanese)

□ Safety Precautions (Japanese)

Note

- Use SoftBank specified AC Charger (sold separately) to charge battery.
- For more information about AC Charger and accessories, please contact SoftBank Mobile Customer Center, General Information (☎ P.16-30).
- Optional battery is available for separate purchase.
- 841P accepts microSD Card (not included). Purchase microSD Card to use related functions (☞ P.8-13).

Using This Guide

Screenshots


Before reading this guide, make a note of the following:

- In this guide, SoftBank 841P User Guide, SoftBank 841P is abbreviated as 841P.
- "microSD Card" is referred to as "Memory Card" in this guide.
- Sample screenshots, etc. are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.
- Key icons use simplified labels.
- Most operation descriptions begin in Standby.
- Pressing a key for more than one second is described as "Press and hold."

Guide Symbols

Press the corresponding key to execute the function or operation indicated at the bottom of Display.


Example:

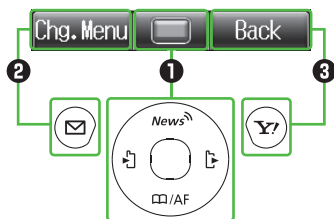

- Softkey labels vary by menu.

Multi Selector (1)

Use Multi Selector to select items, navigate menus, etc. In this guide, Multi Selector operations are indicated as shown below.

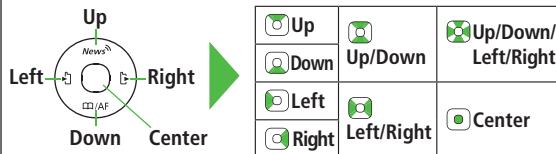

Softkeys (2 3)

In this guide, Softkey operations are indicated as shown below.

Example 2 3: [Envelope] [Chg.Menu], [Y] [Back]

- [Chg.Menu] and [Back] are Softkey label examples; Softkey labels vary by menu.

Japanese Functions & Services

When "(Japanese)" appears in a title, Japanese ability is required to use full range of the function or service.


Operation Descriptions

- The following examples are for reference only and may differ from actual operations.

Basic Operations

Operations are expressed as shown here.

Example 1:

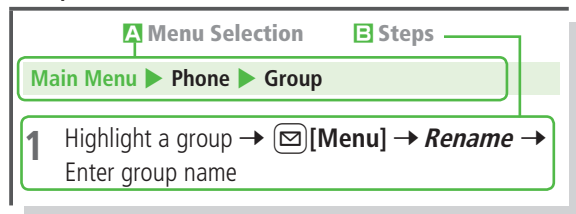

A Menu Selection

- 1 Press in Standby to open Main Menu.
- 2 Use to highlight **Phone**; then press .
- 3 Use to highlight **Group**; then press .

B Steps

- 1 Use to highlight a group; then press [**Menu**]
- 2 Use to highlight **Rename**; then press .
- 3 Enter Group name.

Example 2:

C Check Box Selection

- 1 [] → **Settings**
- 2 **Universal Settings** → **Mail Security Setting**
- 3 Enter Phone Password → **Check items** → [**OK**]

C Check Box Selection

- 1 Use to highlight an item; then press .
 changes to .
Repeat to select multiple items.
- 2 To deselect an item, use to highlight item; then press .
Check mark disappears.

Advanced Operations

For advanced features and settings, go to pages indicated under Tip.

Example:

Tip

- Operations Available during a Voice Call (☞ P.2-9)
- Making Calls from Call Log (☞ P.2-11)
- Save Entered Phone Number (☞ P.4-5)
- Making Calls from Phone Book (☞ P.4-6)
- Speed Dial (☞ P.4-8)

Settings

- Call Time & Call Cost
- End Calls by Closing Handset (☞ P.15-10)

Settings

Refer to Chapter 15 "Settings."

Abbreviated Descriptions

For advanced settings (Chapter 15), initial operations may be abbreviated or omitted.

Example:

A Abbreviated Steps

Initial steps are abbreviated.

From ► **Main Menu** ► **Media** ► **Audio or Video**
► **Playlist**

Delete Playlists

> Follow the steps below

Item	Operation/Description
One	> Highlight a Playlist → ☑ [Menu] → <i>Delete</i> → <i>One</i> → ☑ [YES]
Selected files	> ☑ [Menu] → <i>Delete</i> → <i>Selected Files</i> → Check Playlists → ☑ [OK] → ☑ [YES]

B Steps

Follow these steps after Abbreviated Steps.

Use Other Graphic Mail Settings




> In S! Mail text entry window, ☑ → Select an arrange item (See below)

C Omitted Steps







Initial steps are omitted. Start operations from specified window.

Safety Precautions

- Before use, read these safety precautions carefully and use your handset properly. Keep this guide in a safe place for future reference.
- These safety precautions contain information intended to prevent bodily injury to the user and to surrounding people, as well as damage to property, and must be observed at all times.
- SoftBank is not liable for any damages resulting from use of this product.
- These symbols indicate level of harm from failure to observe cautions or improper usage.
Make sure to understand these symbols and precautions before reading this guide.

	Danger	Great risk of death or serious injury from improper use
	Warning	Risk of death or serious injury from improper use
	Caution	Risk of injury or damage to property from improper use

- **Symbol Explanations**
Make sure to understand these symbols and precautions before reading this guide.

	Prohibited Action		Avoid Moisture
	Disassembly Prohibited		Always Dry Hands First
	Compulsory Action		Disconnect Power Source

Handset, Battery, USIM Card, Charger (sold separately) & Memory Card (not included)



Danger



Do not use or leave handset, battery or charger in locations subject to high temperature, such as near an open flame/heater, in sunlight or inside a car on an extremely hot day.

Battery may leak, overheat, explode, catch fire, or deform handset and cause damage. Part of the casing may also become hot and cause burns.



Do not use excessive force to attach battery or connect charger to handset. Battery or connector may be the wrong way around.

Battery may leak, overheat, explode or catch fire.



Do not disassemble, modify or solder handset.

May cause accidents such as fire, bodily injury, electric shock or equipment malfunction. Battery may leak, overheat, explode or catch fire. Modifying handset is a violation of Radio Law and subject to prosecution.



Do not get handset, battery and charger wet.

If handset, battery or charger is left wet or battery is charged after exposure to liquids such as water or pet urine, overheating, electric shock, fire, injury or malfunction may occur. Be mindful of location when using handset, battery and charger. Handle with care.



Use specified battery, charger (sold separately) and Desktop Holder (not included).

Battery may leak, overheat, explode or catch fire, and charger may overheat, catch fire or cause malfunction.



Warning



Do not place handset, battery or charger inside cooking appliances, such as microwave ovens or high-pressure containers, or on IH cooking heaters.

Battery may leak, overheat, explode or catch fire, and handset and charger may overheat, emit smoke, catch fire or cause malfunction.



Do not drop, throw or otherwise subject to strong force or impacts.

Battery may leak, overheat, explode, catch fire, or cause electric shock or damage to handset.



Do not allow liquids (water, pet urine, etc.) or conductive objects (pencil leads, metal pieces, necklaces, hair pins, etc.) to contact charger terminals, external port terminals or Memory Card slot.

May cause fire or malfunction triggered by short-circuit.



Keep handset off and charger disconnected near propane gas, in filling stations or places where flammable gas is generated.

Handset use in such areas may lead to fire.



If handset, battery or charger emits an unusual sound, smoke or odor, perform following steps:

1. Unplug charger from outlet.
2. Turn off handset.
3. Remove battery. (Take care to avoid burns or injuries.)

May cause fire or electric shock.



Caution



Do not place handset, battery or charger on an unstable surface.

May fall, causing injury or malfunction. Take extra precautions while vibration alert is active or during charging.



Keep handset out of the reach of young children.

May result in accidental ingestion or bodily injury.



If for use by child, guardian should teach proper handling and ensure handset is used as directed.

May result in bodily injury.

Battery



Danger

See battery label to confirm battery type.

Label	Battery Type
Li-ion 00	Lithium-ion



Do not throw battery into fire.

Battery may leak, explode or catch fire.



Do not pierce battery with a nail or other sharp object, hit it with a hammer, step on it, or subject it to strong shocks.

Battery may leak, overheat, explode or catch fire.



Do not touch terminals with metallic objects or carry/store battery with conductive objects (pencil leads, metal pieces, necklaces, hair pins, etc.).

Battery may leak, overheat, explode or catch fire.



If battery fluid gets into eyes, do not rub; flush with clean water and see a doctor immediately.

Failure to do so may cause blindness.



Warning



If battery fluid comes into contact with your skin or clothing, stop using handset immediately and rinse it off with clean water.

Battery fluid is harmful to your skin.



If battery does not charge after specified time, stop charging.

Battery may leak, overheat, explode or catch fire.



If battery emits an unusual odor, overheats, discolors or deforms, immediately remove battery and move it away as far as possible from any flame or fire. Take care to avoid burns or injuries.

Battery may leak, overheat, explode or catch fire.



Caution



Do not dispose of battery with ordinary refuse.

Place tape over the terminals to insulate battery, and take it to a SoftBank retailer or institution that handles used batteries in your area. Comply with local waste disposal regulations for recycling.

Handset



Warning



Do not use handset while driving a vehicle.

Doing so may interfere with safe driving and cause an accident. Stop your vehicle to park in a safe place before using handset. Drivers using handsets while driving are subject to prosecution.



Do not aim the infrared port at eyes when using infrared communication.

Doing so may affect eyes.



Turn off handset near high-precision electronic devices or devices using weak electronic signals.

Handset may cause these devices to malfunction.

*Electronic devices that may be affected: Hearing aids, implantable cardiac pacemakers, implantable cardioverter defibrillators, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices.



Turn off handset aboard aircraft.

Handset signal may interfere with aircraft operation.

When in-flight handset use is permitted, follow airline instructions for proper use.



If you have a weak heart, take extra precautions when setting functions such as Vibration or Ringer Volume for incoming transmissions.

May affect heart.



In a thunderstorm, immediately turn off handset and seek shelter.

There is a risk of being struck by lightning and suffering electric shock.



Caution



If handset affects car electronics, stop use.

Handset use may affect electronics in some models. In this case, stop use; could impede safe driving.



Do not place a magnetic card near or in handset.

The stored magnetic data in cash cards, credit cards, telephone cards and floppy disks, etc. may be erased.



Do not swing handset by its strap, etc.

Handset may strike you or others, or strap may be broken resulting in injury or damage to handset or other property.



Do not place your ear too close to the speaker while ringer sounds or sound files play.

May impair hearing.



Do not use One-push Open button to open handset near your or another person's face.

Handset may cause accident and injury.



Handset may become hot while used in a hot environment.

Avoid prolonged skin contact that may result in burns.



Make sure not to trap fingers or objects when opening/closing handset.

May result in injury or damage to display.



Watch TV with adequate lighting and distance from Display.

May damage eyesight.



Do not turn up the volume unnecessarily high when using earphones.

Using earphones with volume turned up for an extended period may impair hearing or injure ears.

**If skin abnormality occurs, immediately stop use and seek medical treatment.**

Handset contains metals. Handset use may cause itching, rashes, eczema or other symptoms depending on the user's physical condition.

Parts		Materials/Surface Finish
Outer case	Display side	PC+GF resin/ Acrylic UV cured coating
	Keypad side, Notification Light/Charging Indicator panel side, Battery side, Battery Cover	ABS resin/ Acrylic UV cured coating
Notification Light/Charging Indicator panel		PC resin/evaporation coating, Acrylic UV cured coating
Display panel, Camera panel		Acrylic resin/Hard coating
Hinge holder		PC+GF resin/ Acrylic UV cured coating
Keypad		PC resin/Acrylic UV cured coating
External Port cover		Elastomer resin
Charging Terminals		Phosphor bronze/ Gold plating on nickel plating
Stop pads		Acrylic urethane resin
Screws (Battery compartment)		Aluminium killed steel/ Nickel plating
Battery side screw covers		ABS resin
Battery compartment		PC resin
Battery terminals	Resin part	PPS resin
	Metal part	Beryllium copper/ Gold plating on nickel plating

Parts		Materials/Surface Finish
Battery	Battery	Resin part:PC resin Label:PET resin
	Terminals	Glass fiber reinforced epoxy board/Gold plating on nickel plating

Charger (sold separately)



Warning



Do not cover or wrap charger during charging.
May cause overheating, fire or malfunction.



Always use the specified power supply/voltage.
Using incorrect voltage may cause fire or malfunction.
AC Charger: AC 100V-240V (household AC outlet only)
In-Car Charger: DC 12V, 24V (vehicles with a negative earth only)



Use In-Car Charger in vehicles with a negative (-) earth. Do not use In-Car Charger if vehicle has a positive (+) earth.
May cause fire.



Do not use charger in thunderstorms.
There is a risk of suffering electric shock.



Do not handle charger with wet hands.
May cause electric shock or malfunction.



If In-Car Charger fuse blows, always replace it with specified fuse.
Using the incorrect fuse may cause fire or malfunction. Refer to the respective manuals for information on the correct fuse specifications.



If dust accumulates on plug, unplug charger and wipe with a dry cloth.
May cause fire.



When plugging charger into outlet, keep conductive materials (pencil leads, metal parts, necklaces, hair pins, etc.) away from Desktop Holder terminals or charger plug/terminals and plug charger firmly into outlet.
May cause electric shock, short-circuit or fire.



Unplug AC Charger during periods of disuse.
May cause electric shock, fire or malfunction.



If liquid such as water or pet urine get into charger, unplug it immediately.
May cause electric shock, smoke emission or fire.



Caution



Pull charger (not cord) to unplug charger.
Pulling on the cord may damage the cord and cause electric shock or fire.



Always unplug charger before cleaning it.
May result in electric shock.

Near Electronic Medical Equipment



Warning

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).



If you use an implantable cardiac pacemaker or cardioverter defibrillator, keep handset more than 22 cm away from the implant at all times.

Handset radio waves may affect implantable cardiac pacemaker or cardioverter defibrillator operations.



Persons using electronic medical equipment outside medical facilities should consult the vendor about possible radio wave effects.

Handset radio waves may affect electronic medical equipment operations.



Observe the following in medical facilities. Handset radio waves may affect electronic medical equipment.

- Do not take handset into operating rooms, Intensive Care Units or Coronary Care Units.
- Turn off handset inside hospital wards.
- Turn off handset even outside hospital wards (in hospital lobbies, etc.); electronic medical equipment may be in use nearby.
- Where a medical facility has specific instructions prohibiting the carrying and use of mobile phones, observe those instructions strictly.



Turn off handset in crowded places such as rush hour trains; implantable cardiac pacemakers or cardioverter defibrillators may be in use nearby.

Handset radio waves may affect implantable cardiac pacemaker or cardioverter defibrillator operations.

Handling Precautions

General Notes

- SoftBank is not liable for damages from accidental loss/alteration/repair of handset/Memory Card information (Phone Book entries, image/sound files, etc.). Back-up important information.
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- Read Memory Card manual beforehand for proper use.
- **Beware of eavesdropping.**
Digital signals reduce interception, however transmissions may be overheard. Deliberate/accidental interception of communications constitutes eavesdropping.
"eavesdropping" means radio communication is received by another receiver deliberately or accidentally.
- **Be cautious of unsafe websites. Take extra precautions especially when posting personal information on websites.**

Electromagnetic Waves

- For body worn operation, this mobile phone has been tested and meets RF exposure guidelines when used with an accessory containing no metal and positioning the handset a minimum 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

FCC Notice

- **This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:**
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
- **Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.**

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model handset as reported to the FCC when tested for use at the ear is 0.887 W/kg, and when worn on the body in a holder or carry case, is 0.643 W/kg.

Body-worn Operation; This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/> after searching on FCC ID UCE209025A.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.375 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**. In this case, the highest tested SAR value is 0.472 W/kg. As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

*The tests are carried out in accordance with international guidelines for testing.

** Please see Electromagnetic Waves on page xviii for important notes regarding body worn operation.

Declaration of Conformity

CE0168

We, Panasonic Mobile Communications Development of Europe Ltd., declare that SoftBank 841P conforms with the essential and other relevant requirements of the directive 1999/5/EC.

A declaration of conformity to this effect can be found at <http://panasonic.net/pmc/support/index.html>

- This product is only intended for sale in Japan.
- Compliance to the European RTTE directive applies to: SoftBank 841P handset, Battery (PMBAT1) and AC Charger (SoftBank ZTDAA1).

Handset Care

- **841P is not waterproof. Avoid exposure to liquids and high humidity.**
 - Do not expose handset to precipitation.
 - Air conditioned air may cause condensation, resulting in corrosion.
 - Do not put handset in damp places like bathrooms.
 - On the beach, keep handset away from sun and surf.
 - Perspiration in handset may cause malfunction.
- **If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank is not liable for any resulting damages.**
- **Use handset within temperatures of 5°C to 35°C and humidity 35% to 85%. Avoid extreme temperatures/direct sunlight.**
- **Handset may become warm during use or charging. This is not malfunction.**
- **Battery may swell as service life nears end; this is not a problem.**

- **Exposing lens to direct sunlight may damage color filter and affect image color.**
- **Soiled terminals may cause poor connection. If the terminals are dirty, use a dry cloth or cotton swab to wipe them clean.**
- **Clean handset with dry, soft cloth. Using alcohol, thinner, etc. may damage it.**
- **Avoid forceful rubbing or scratching handset Display.**
- **Do not subject handset to excessive force.**
 - Do not sit down with handset in a back pocket.
 - Do not place heavy objects on a bag with handset inside.
- **Do not remove nameplate from handset; doing so invalidates warranty.**
- **Always turn off handset before removing battery. If battery is removed while saving or sending mail, data may be altered or lost.**
- **LCD is manufactured with high precision technology, however, some pixels may appear darker/brighter.**
- **Connect only specified products to External Port.**
- **While walking, moderate earphone volume to make sounds around you audible and help avoid accidents.**
- **When holding handset in use, do not cover Speaker.**

Function Usage Limits

These functions are disabled after handset replacement/upgrade or service cancellation: Camera; Digital TV; Media Player; S! Appli. After a period of disuse, these functions may become unusable.

Mobile Camera

- Be sure to observe proper etiquette when using the camera.
- Do not expose the camera lens to direct sunlight. Concentrated sunlight through the lens may cause the handset to malfunction.
- Be sure to try taking and previewing pictures before using the camera on important occasions like wedding ceremonies.
- Do not commercially use or transfer pictures taken with the camera without the permission of the copyright holder (photographer), except for personal use.
- Do not use the camera in locations where taking photos and recording videos are prohibited.

Copyrights and Others

Right of Portrait

Portrait right is the right of an individual to refuse to be photographed by others and protects from the unauthorized publication or use of an individual's photograph by others. Right of personality is a portrait right applicable to all citizens and right of publicity is a portrait right (property right) designed to protect celebrities' interests. Be careful when taking pictures with the handset camera. Photographing, publicizing and distributing photographs of citizens and celebrities without permission are illegal.

Copyrights

Sounds, images, computer programs, databases, other copyrighted materials, their respective works and copyright holders are protected by copyright laws. Duplicated materials are limited to private use only. If duplications (including conversion of data types), modifications, transfer of duplicates or distribution on networks are made without permission of copyright holders, this constitutes "Literary Piracy" and "Infringement of Copyright Holder Rights" and a criminal action for reparations and criminal punishment may be filed. If duplicates are made using handset, please observe the copyright laws. Materials captured with handset camera are also subject to the above.

This product is licensed under the MPEG-4 patent portfolio license and AVC patent portfolio license for the personal and non-commercial use of a consumer to

(i) encode video in compliance with the MPEG-4 Visual Standard and AVC Standard ("MPEG-4/AVC Video") and/or

(ii) decode MPEG-4/AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider licensed to provide MPEG-4/AVC video.

No license is granted or implied for any other use.

Additional information may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Aplix, microJBlend and JBlend, and all Aplix- or JBlend-related trademarks and logos are trademarks or registered trademarks of Aplix Corporation in the U.S., Japan and other countries.

BookSurfing® is a registered trademark of CELSYS Inc., Voyager Japan, Inc. and INFOCITY Inc.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.



microSD Logo is a trademark.

Chaku-Uta® and Chaku-Uta Full® are registered trademarks of Sony Music Entertainment (Japan) Inc.

Machi-Uta® is a registered trademark of KDDI CORPORATION.

Powered by MascotCapsule®

MascotCapsule® is a registered trademark of HI CORPORATION
© 2010 HI CORPORATION. All Rights Reserved.

NetFront®
Mobile Client Suite

ACCESS™

This product contains NetFront Mobile Client Suite of ACCESS CO., LTD.

ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in the United States, Japan and other countries.

©2008 ACCESS CO., LTD. All rights reserved.

This software is based in part on the work of the Independent JPEG Group.

**ADOBE®
FLASH®
ENABLED**

This product contains Adobe® Flash® Lite™ Player under license from Adobe Systems Incorporated.

Copyright© 1996-2008 Adobe Macromedia Software LLC. All rights reserved.

Adobe, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

SOFTBANK, SOFTBANK's equivalent in Japanese, and the SOFTBANK logo are registered trademarks or trademarks of SOFTBANK CORP. in Japan and other countries.

S! Mail, Graphic Mail, Feeling Mail, 3G HighSpeed and COLOR LIFE are trademarks or registered trademarks of SOFTBANK MOBILE Corp.

Yahoo! and the "Yahoo!" or "Y!" logos are trademarks and/or registered trademarks of Yahoo! Inc. in the U.S.

This product is manufactured or sold under license from InterDigital Technology Corporation.

Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

The software contained in 841P is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software, and do not separate it from hardware in whole or part.

Specific Absorption Rate (SAR)

841P meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the head shall not exceed 2 W/kg*. This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

All mobile phones, prior to product launch, must be certified as compliant with government requirements as stipulated by the Radio Law.

841P has been granted Technical Regulations Conformity Certification by TELECOM ENGINEERING CENTER. Its highest SAR value is 0.566 W/kg. This value was obtained by TELECOM ENGINEERING CENTER as part of the certification process. SAR tests were conducted with handset transmitting at its highest certified power level in accordance with testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value.

This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network. Additional information on SAR can be obtained on the following Websites:

Ministry of Internal Affairs and Communications

<http://www.tele.soumu.go.jp/e/sys/ele/index.htm>

Association of Radio Industries and Businesses (ARIB)

<http://www.arib-emf.org/index02.html> (Japanese only)

* Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).

Getting Started **1**

USIM Card	1-2
About USIM Card	1-2
USIM Card Installation.....	1-3
USIM PINs.....	1-3
Parts & Functions	1-4
Handset	1-4
Key Operations in Standby	1-6
Display	1-8
About Battery	1-10
Before Charging	1-10
Battery Installation	1-12
Charging Battery	1-13
Handset Power On/Off	1-14
Manner Mode	1-15
Minding Mobile Manners.....	1-15
Manner-related Features.....	1-15
Activating Manner Mode	1-15
Activating Emission OFF Mode.....	1-16
Activating Drive Mode	1-16
Handset Menus	1-16
Main Menu	1-16
Menu Numbers	1-17
Using Keys	1-18

Standby Options	1-18
Information Window.....	1-18
Standby Window	1-19
Private Menu	1-20
Opening Private Menu	1-20
Customizing Private Menu	1-21
Simple Mode	1-21
Activating Simple Mode.....	1-22
Simple Mode	1-22
Passwords	1-23
Phone Password.....	1-23
Center Access Code.....	1-23
Call Barring Password.....	1-23
View Blind	1-24
My Number	1-24

 
USIM Card

About USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited Phone Book entry and SMS message storage. USIM must be inserted to use handset or Network services (calling, messaging, Internet, etc.).

Turn handset off before inserting/removing USIM Card.

USIM Card



- Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Do not damage, carelessly touch or short-circuit IC chip; doing so may result in loss of data or malfunction.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.
- If handset is dropped/subjected to shock, handset may return to Standby. This is not a malfunction. If **Insert USIM** appears, re-insert USIM Card properly then restart handset.

Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/handset with USIM Card inserted is lost or stolen, contact SoftBank Mobile Customer Center or Global Call Center (☎ P.16-30).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Appli may be unusable while a different or replacement USIM Card is inserted into handset.
- Returned USIM Cards are recycled.

Note


- Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.

USIM Card Installation

- Remove battery (☞ P.1-12) then follow steps below.


Inserting

- 1 With IC chip down, insert USIM Card

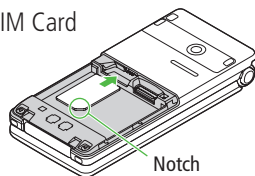

Removing

- 1 Slide out USIM Card gently

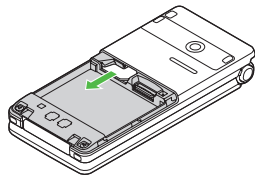

Note

- Do not force USIM Card into or out of handset; may damage handset/USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.

USIM PINs

There are two USIM Card security codes: PIN & PIN2

- PIN and PIN2 are set to 9999 by default.
- PIN/PIN2 can be changed (☞ P.10-3).

PIN	4 to 8-digit code used to prevent unauthorized handset use. <ul style="list-style-type: none"> ● When PIN Certification is ON (☞ P.10-2), PIN entry is required each time handset is turned on (with USIM Card inserted).
PIN2	Required to clear call costs or set maximum cost (☞ P.15-10).

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering the PIN Unblocking Key (PUK/PUK2) (☞ P.10-3).

- For information on PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☞ P.16-30).


Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☞ P.16-30).

1 Parts & Functions

Getting Started

Handset

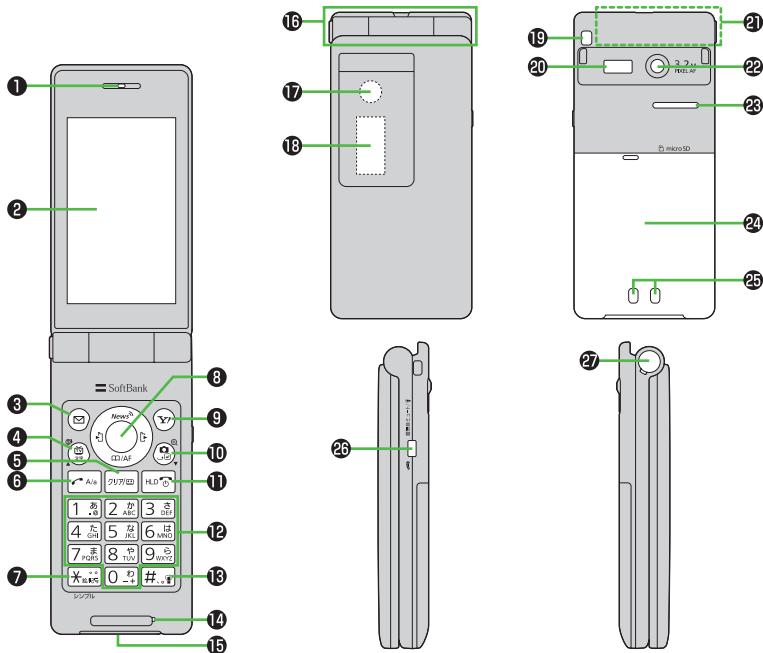

Using Microphone/Earphone
Connect Earphone Conversion Cable (sold separately) to External Port to use Microphone/Earphone. Stereo Earphone Conversion Cable (PMLAJ1) is also compatible with 841P.

- Do not press answer button on microphone/earphone when connecting. Doing so may cause microphone/earphone to malfunction. In that case, pull out earphone/microphone, and connect again.

1 Earpiece**2 Main Display****3 Mail Key**

- Open Messaging menu
- Execute Left Softkey function (↵ P.ix)

4 TV/Input Mode Key

- Activate TV
- Toggle input mode in text entry windows
- Access saved URLs

5 Clear/Memo Key

- Delete characters
- Cancel menus
- Open Answer Phone message list; Toggle Answer Phone on/off

6 Send Key

- Initiate or answer calls
- Toggle upper/lower case in text entry windows

7 * Pictograph/Symbol/Simple Mode Key

- Enter "✳"
- Access pictographs in text entry windows
- Access symbol list from pictograph list
- Toggle Simple Mode

8 Multi Selector

- Scroll up/down/left/right to navigate menus and text (↵ P.ix)
- Open/Select Standby Window (Unavailable in Simple Mode)
- Open Phone Book; set Auto Focus Lock
- Open Incoming Call Logs
- Open Outgoing Call Logs

9 Yahoo! Keitai Key

- Open Yahoo! Keitai Main Menu
- Execute Right Softkey function (↵ P.ix)

10 Camera/Line Break Key

- Activate Camera; activate Magnifying Loupe
- Enter a line break
- Toggle letters in reverse order in a text entry window

11 End/Escape & Power Key

- Power on/off (↵ P.1-15)
- End calls
- Return to Standby
- Place Call on hold

12 0 - Keypad

- Enter phone number/text

13 #/Manner Mode Key

- Enter "#"
- Toggle Manner Mode

14 Microphone**15 External Port**

- Connect AC Charger (sold separately) or other accessories here

16 Hinge**17 Notification Light/Charging Indicator**

- Flashes for incoming transmissions; flashes while Camera is active
- Lights in red for charging

18 External Display**19 Strap Eyelet****20 Infrared Port**

- Transfer data via Infrared

21 Antenna**22 Camera****23 Speaker****24 Battery Cover****25 Charging Terminals****26 Side Key**


- Press to mute ringer [Open Position]
- Open Private Menu (Unavailable while Simple Mode is active)
- Toggle View Blind on/off [Closed Position]
- Toggle External Display
- Activate/cancel Manner Mode

27 One-push Open Button (↵ P.1-6)

1

One-push Open Button

Press One-push Open Button to open handset.

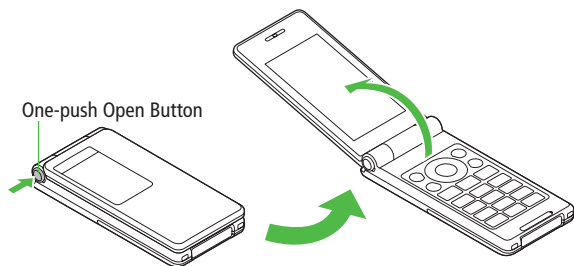



- Fold handset by hand to close. When handset does not close, open it all the way once, then close.
- Customize handset to answer/end calls, etc. by opening/closing handset (☞ P.16-11).
- Be careful not to drop handset when opening handset by One-push Open Button.

Key Operations in Standby

Press or press and hold (more than one second) a key in Standby to execute the following.

Key Operations		Functions
	Short Press	Initiate a call
	Long Press	
	Short Press ¹	Show/hide Standby Window
	Long Press (2+ sec)	Turn off power
	Short Press	Open Main Menu
	Long Press	Activate/cancel Keyguard
	Short Press	Open Answer Phone message list
	Long Press	Activate/cancel Answer Phone
	Short Press	Open Messaging Menu
	Long Press	Open S! Mail Composition window
	Short Press	Access Yahoo! Keitai
	Long Press	Open Yahoo! Keitai Menu
	Short Press ²	Activate TV
	Long Press ²	Access saved URL
	Short Press ²	Activate Camera
	Long Press ²	Activate Magnifying Loupe
	Short Press ¹	Show/select Standby Window
	Long Press ²	Open Private Menu
	Short Press	Open Phone Book
	Long Press ²	Open Phone Book entry window

Key Operations		Functions
	Short Press	Open Incoming Call Logs
	Long Press ²	Open the newest unread message ● Open Incoming Mail folder for read messages
	Short Press	Open Outgoing Call Logs
	Long Press ²	Open Sent Messages folder
①	Short Press	Enter "1"
	Long Press	Open Phone Book page "あ"; dial the number set to Speed Dial
②	Short Press	Enter "2"
	Long Press ³	Open Phone Book page "か"; dial the number set to Speed Dial
③	Short Press	Enter "3"
	Long Press ³	Open Phone Book page "さ"; dial the number set to Speed Dial
④	Short Press	Enter "4"
	Long Press ³	Open Phone Book page "た"; dial the number set to Speed Dial
⑤	Short Press	Enter "5"
	Long Press ³	Open Phone Book page "な"; dial the number set to Speed Dial
⑥	Short Press	Enter "6"
	Long Press ³	Open Phone Book page "は"; dial the number set to Speed Dial
⑦	Short Press	Enter "7"
	Long Press ³	Open Phone Book page "ま"; dial the number set to Speed Dial

Key Operations		Functions
⑧	Short Press	Enter "8"
	Long Press ³	Open Phone Book page "や"; dial the number set to Speed Dial
⑨	Short Press	Enter "9"
	Long Press ³	Open Phone Book page "ら"; dial the number set to Speed Dial
⑩	Short Press	Enter "0"
	Long Press ³	Open Phone Book page "わ"
✳	Short Press	Enter "✳"
	Long Press	Activate/cancel Simple Mode
#	Short Press	Enter "#"
	Long Press	Activate/cancel Manner Mode
□	Short Press	Open Calendar
	Long Press	Activate/cancel Drive Mode


¹ **Standby Window** setting (☞ P.16-4) applies; unavailable in Simple Mode.

² Change the assigned function as required (Key Settings: ☞ P.16-6). While Simple Mode is active, settings may return to defaults.

³ **One Touch Key setting** (☞ P.4-8) applies.

Display

Display Indicators

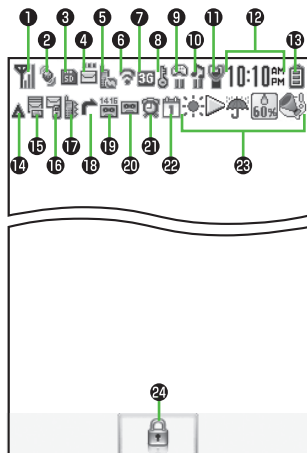

1 Signal Strength

Strong Moderate Weak Low

OUT Out-of-Range

Emission OFF Mode

(Red) Only Packet Transmission Available

2 New S! Quick News Information

Location Access

3 Memory Card

Inserted Unusable

Unsupported Write-protected

Call

Video Call

Voice Call

4 Secret Mode Active

Secret Data Only Active

Unread Message

5 Software Update (Notification/Updating/Result)

Digital TV Active

New S! Information Channel Info

6 PC Site Browser Active

Infrared Active

USB Cable Connected

7 Network Service

3G Packet Transmission Available

GSM Packet Transmission Available

Data Transmission

Packet Transmission in Progress (PC)

Dial-up Connection Established on PC

3G/GSM Packet Transmission Enabled

3G/GSM Packet Transmitting

8 Secure Content

S! Addressbook Back-up Synchronizing

Auto Sync Settings Active

9 S! Appli Active S! Appli Paused

10 Music/Video Playback

BGM Playback BGM Paused

Streaming Streaming Paused

11 Manner Mode Active

Original Manner Mode Active

Drive Mode Active

12 Time

13 **Battery Level**



14 **Roaming**



15 **Unread Message on Server**



16 **Messaging Lock Active**



17 **Mute Active**



18 **Call Forwarding or Voice Mail Active**



19 **Voice Message**



20 **Answer Phone Active**



21 **Answer Phone Full**



22 **New Message Recorded**



23 **New Message Recorded&Answer Phone Full**



24 **Alarm Set**



25 **Schedule Set** (P.12-3)



26 **Weather Indicator** (P.7-3)



27 **Multi Selector**



Keyguard Locked

Password Lock Active

Keyguard & Password Lock Active

External Display Indicators


- Upon closing handset, External Display lights up and goes out in 15 seconds.




↓ □ (Side Key)



↓ □ (Side Key)

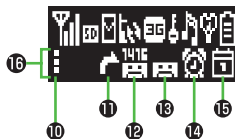

1 **Signal Strength**

 

Strong Moderate Weak Low

Out-of-Range

Emission OFF Mode

Only Packet Transmission Available

2 **Memory Card**

Inserted Unusable

Unsupported Write-protected

3 **Unread Message**

Software Update

(Notification/Updating/Result)

Digital TV Active

5 **Network Service**

3G Packet Transmission Available

GSM Packet Transmission Available

Data Transmission

Packet Transmission in Progress (PC)

Dial-up Connection Established on PC

3G/GSM Packet Transmission Enabled

3G/GSM Packet Transmitting



6 **Secure Content**

S! Addressbook Back-up Synchronizing

7 Music/Video Playback

-  BGM Playing  BGM Paused
-  Streaming  Streaming Paused

8 Manner Mode

-  Original Manner Mode
-  Drive Mode

9 Battery Level**10 Secret Mode Active**

-  Secret Data Only Active

11 Call Forwarding or Voice Mail Active**12 Voice Message****13 Answer Phone Active**







-  Answer Phone Full

-  New Message Recorded

-  New Message Recorded & Answer Phone Full

14 Alarm Set**15 Schedule Set****16 Indicators Corresponding to Information Window**

When information appears in Main Display (☞ P.1-19), Indicators corresponding to the information appear in bottom of External Display.

-  Missed Call
-  Incoming Call Notification
-  New Message
-  New Answer Phone Message
-  New Voice Mail
-  Software Update Results

About Battery


Before Charging

Charge battery before use or after a period of disuse (AC Charger sold separately).

Charging Time & Operating Time Estimates

		3G	GSM
Charging Time		150 minutes*	
Standby Time		430 hours*	340 hours*
Talk Time	Voice Call	230 minutes*	250 minutes*
	Video Call	100 minutes*	–

* Approximate value

- 3G Mode/GSM Mode:  P.2-9
- Charging time is an average measured within temperatures of 5°C to 35°C.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).

About Battery

- Clean handset, battery & charger with dry cotton swab.
- Replace battery if operating time shortens noticeably.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.

Charging

- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Move charger away from TV/radio if interference occurs.

Battery Time




- Using handset in poor conditions may shorten battery time.
 - Extreme temperatures
 - Impaired handset, battery or Charging Terminals
 - Signal is weak/handset is out-of-range
 - Handset is left mid-operation (not in Standby)
 - Playing music or using S! Appli, etc.
- Extending battery time

Example:

 - Select shorter Display backlight time; select **OFF** or shorter time for Keypad Backlight (👉 P.15-6).
 - Select **Silent** for Key Tone Volume (👉 P.15-3)

When Battery Runs Out

● Unless a Call is in Progress

A message appears and warning tone sounds. Handset power turns off automatically after two minutes; press ,  or  to cancel warning tone manually. Charge or replace battery.

- If Manner Mode is active/Warning Tone **Off**, nothing sounds.


● During a Call

A message appears and warning tone sounds via Earpiece or Speaker. After 90 seconds, call ends and handset shuts down in 30 seconds. Charge or replace battery.

Battery Strength Indicator

- Battery Strength indicator changes as remaining usage time decreases. Charge or replace battery when battery level is low (👉 P.1-9) or a message appears on Display.

Battery Voltage

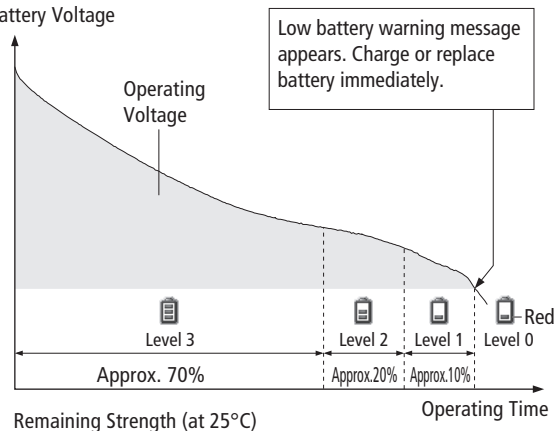


Remaining Strength (at 25°C)

Operating Time

Battery Installation


- Always turn off handset power before removing battery.

1 Press and slide to remove cover

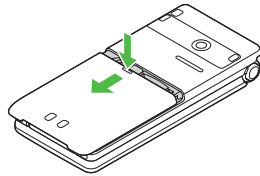


2 Insert Battery

Align battery contacts with handset pins.

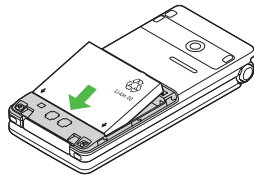


Remove Battery

Lift battery out as shown.

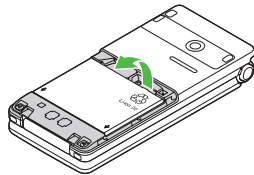


3 Replace battery cover

Cover should click into place.

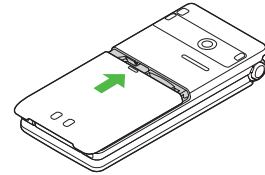

Note

- When battery is removed just after changing handset settings, changes may not take effect.
- Lithium-ion batteries are valuable and recyclable resources.  Li-ion 00
 - Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
 - To avoid fire or electric shock, do not:
 - Short-circuit battery
 - Disassemble battery


1

Getting Started

Charging Battery

Use only specified AC Charger (sold separately).

Charging Time: Approximately 150 minutes

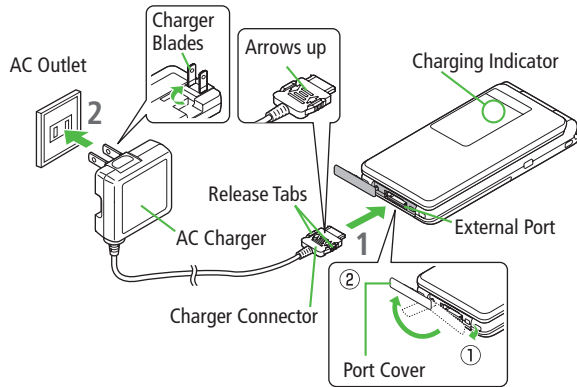

1 Connect AC Charger to handset

Insert Charger Connector (printed side up) into External Port.

2 Plug AC Charger into AC Outlet

Extend Charger Blades.

Charging Indicator illuminates and charging starts.

When charging is complete, Charging Indicator goes out.

3 When charging is complete, unplug AC Charger, then disconnect handset

Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.

Note

- For details, read AC Charger instructions.
- Alternatively, charge battery by using Desktop Holder (not included).

Handset Power On/Off

1 Press for 3+ seconds

Start-up window appears and handset enters Standby.

- Enter PIN if PIN Certification is ON (☞ P.10-2).

2 Press for 2+ seconds

Handset shuts down.

- Do not turn on handset immediately after turning off. Wait a few seconds.



Standby

The First Time Handset Powers Up...

Setup window appears.

Enter date → Enter time (24 hours)

Day of the week is set automatically.

- If unentered, 2000/01/01 00:00 is set.
- To change date and time: ☞ P.15-8

View Information Messages





At time of purchase, information messages are provided for your convenience.


>  → *Incoming Mail* → *Received* → Select a message

Note

- Standby Display takes a few moments to appear.
- If *Insert USIM* appears, clean and properly re-insert USIM Card then restart handset.
- After a period of inactivity, Display turns off.

Retrieving Network Information

When ,  or  is pressed for the first time in Standby, handset initiates Network Information retrieval; Press  to retrieve it.

- Update Network Information to use messaging, Internet, etc.
- Update Network Information manually: **Main Menu** ► **Settings** ► **Retrieve NW Info** ► 

Tip

- Change Wallpaper ● Change Clock/Calendar Style (☞ P.15-4)

Manner Mode

Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.


- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.



Manner-related Features


Manner Mode (☞ Right)	Press Manner key to mute handset tones and activate vibration for incoming transmissions.
Vibration Mode (☞ P.15-2)	Activate in public places, meetings, etc. for silent call/message alerts.
Ringer Volume (☞ P.15-2)	Mute call/message tones.
Emission OFF Mode (☞ P.1-16)	Suspend all handset transmissions.
Answer Phone (☞ P.2-12)	Use to handle incoming calls when inappropriate/unsafe to answer.
Drive Mode (☞ P.1-16)	While driving, send a voice message informing the caller that you cannot answer the call. (Handset does not ring.)

Activating Manner Mode

Press one key to mute handset tones and vibration for incoming transmissions.

- Manner Mode settings can be changed (☞ P.15-7).
- When Manner Mode is active,  appears.

- In Standby, press and hold 
 - To cancel: Press and hold  again

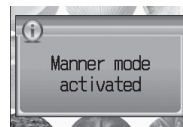

Note

- Shutter click, Auto Answer tone, and incoming tone via Earphone (**Volume 1**) sound even in Manner Mode.
- Media Player files are initially muted in Manner Mode; adjust volume in Playback window.
- When Alarm Priority is set to **Alarm prioritized** (☞ P.11-6), Alarm sounds even if Manner Mode is active.

Tip

- Set Manner Mode Type (☞ P.15-7)

Activating Emission OFF Mode

Temporarily suspend all handset transmissions; when active, all calls/messages and incoming information are blocked.

- When Emission OFF Mode is active,  appears.

Main Menu ► Settings ► Call Settings
► Emission OFF Mode


1 ON or OFF



Note

- Emission OFF Mode disables Infrared transmissions.
- Emergency numbers (110, 119, 118) cannot be dialed.

Activating Drive Mode


Handset does not ring for incoming transmission. Voice guidance informs the caller you are unavailable and handset records messages.

- When Drive Mode is active,  appears.

- In Standby, press and hold 
 - To cancel: Press and hold  again

Handset Menus

Main Menu

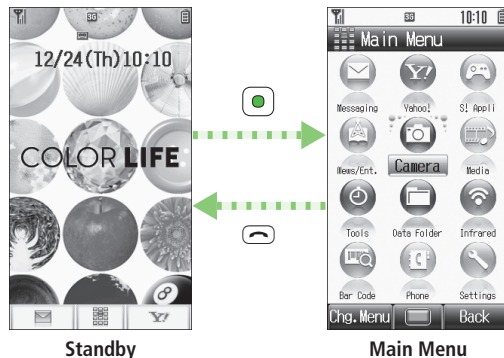



Standby

Main Menu


1 In Standby,

Main Menu appears.













- To change Main Menu Theme:  [Chg.Menu] → Select a Theme → 

2 to highlight an icon →

Selected function appears.

- To return to Standby: 

Main Menu Icons

<p>Messaging</p>  <p>Create new/view received messages</p>	<p>Yahoo! (Yahoo! Keitai)</p>  <p>Enjoy Mobile Net & PC Site browsing...</p>	<p>S! Appli</p>  <p>Download, set and use S! Appli</p>
<p>News/Ent. (News/Entertainment)</p>  <p>Use S! Quick News & e-Books</p>	<p>Camera</p>  <p>Capture images or record videos</p>	<p>Media (Media Player)</p>  <p>Use Media Player</p>
<p>Tools</p>  <p>Set Alarm or save Calendar entries...</p>	<p>Data Folder</p>  <p>Open files saved on handset/Memory Card</p>	<p>Infrared</p>  <p>Use Infrared</p>
<p>Bar Code (Bar Code Reader)</p>  <p>Scan barcodes and QR Codes to retrieve information</p>	<p>Phone</p>  <p>Access Phone Book, save contact information...</p>	<p>Settings</p>  <p>Adjust/customize handset settings</p>

Tip

Settings

- Change Display Color Theme (☞ P.15-4)
- Change Main Menu Background ● Change Main Menu Icons (☞ P.15-5)

Menu Numbers

Use keypad to select functions or menu items.

Unnumbered Menu Items

When numbers do not appear, select items as shown.

Example: Press (#) to select **Settings** from Main Menu




Main Menu Item Key Assignments

- Press (0) to open Account Details. To open Phone Book top menu, select **Phone** by pressing (☒).

Numbered Menu Items

Press key corresponding to menu number to select a menu.

Example: In Display Settings (from **Settings** Top Menu), press **(7)** to select **Themes**

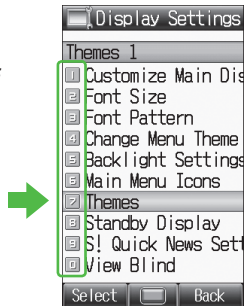

Using Keys

Press a key corresponding to a menu to open in Standby (P.1-6).

- Change or deactivate the functions assigned to **(F)**, **(C)** and **(X)** (P.15-6). While Simple Mode is active, settings may return to defaults.


Standby Options

Information Window

In Standby, Information window opens for missed calls, messages, etc.

1 to select an item

- To close Information window: , [Exit] or

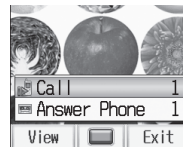

Events

Call	Missed calls (P.2-10)
Message	New messages (P.12-12) When Feeling Mail is received, a pictograph that shows emotion set by sender, and sender name, mail address or phone number appear
Answer Phone	Recorded caller messages (P.2-13)
Voice Mail	New Voice Mail messages (P.2-16)
Missed Call	If Missed Call Notification is active, Information window opens for calls missed while handset is off, out-of-range, engaged, etc. (P.2-16)
Update Results	Received software update results (P.16-10)
New S! Information Channel	Received S! Information Channel updates (P.6-2)
S! Information Channel	Failed to receive S! Information Channel updates (P.6-2)
New Weather	Received weather forecast updates (P.6-3)
Weather	Failed to receive weather forecast updates (P.6-4)

Standby Window

Access S! Quick News or Shortcuts from Standby Window.

- S! Quick News: P.6-5



S! Quick News

Show/Hide Standby Window

From Standby, press to show Standby Window; press to show/hide Standby Window. Press to deselect a shortcut icon or ticker.

- Set Standby Window On/Off: P.15-4

Changing Templates

<Default> Shortcuts & S! Quick News

Set to appear both or either S! Quick News/Shortcuts.

- 1 In Standby, → [Menu] → **Change Templates**
→ Select an item

Changing Transparency Level of Standby Window

<Default> Light

- 1 In Standby, → [Menu] → **Background of Panel** → Select a level

Adding Content & Changing Settings

Add or Set S! Quick News in Standby Window.

- 1 In Standby, → highlight ticker → [Menu]

2 Add Content

Add S! Quick News

Handset connects to the Network.

Follow onscreen instructions.

Settings

S! Quick News Settings → **Auto Refresh** or **Display Setting**

Go to P.15-17 and follow steps.

Accessing Functions from Shortcuts

- 1 In Standby, → Select an icon
The selected function name appears at top of panel.
● To deselect:
- 2 to access function



Adding Shortcuts

Add frequently used functions to Shortcuts.

- Following shortcuts are set by default:
メニューリスト (Menu List)*
各種手続き・料金 (Manage Account/Fees)*
待ちうた (Machi-Uta®)*
One Touch Guide
Pictures (Data Folder)
Alarms
Calculator
Calendar
Web Search

* Requires network connection. Available in Japanese only.

1 In Standby,  → highlight target → [Menu] → **Set Shortcut**

2 Select an item → Highlight a function, bookmark or Phone Book entry → [Entry]

■ Move Icons

> In Step 1, highlight an icon → [Menu] → **Move Shortcut** →
Select a position

■ Delete Icons


> In Step 1, highlight an icon → [Menu] → **Remove Shortcut** →


Private Menu

Save frequently used functions in Private Menu.

- Up to 12 items can be saved.
- Change preset functions as needed.


Opening Private Menu

1 In Standby, press and hold 

Private Menu appears.

- To return to Standby: [Back]

2 Select a menu

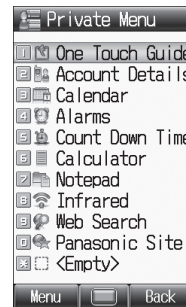


Private Menu
Window

1

Getting Started

Customizing Private Menu

- 1 In Standby, press and hold
- 2 Highlight target → [Menu] → **Set Shortcut**
- 3 Select an item
- 4 Highlight an item → [Entry]

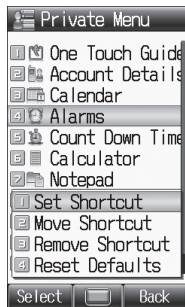

Private Menu Setting Window

■ Change Menu Order

- > After Step 2, highlight a function → [Menu] → **Move Shortcut**
→ Select a position

■ Delete Functions

- > After Step 2, highlight a function → [Menu] → **Remove Shortcut**
→

■ Reset Private Menu

- > After Step 2, [Menu] → **Reset Defaults** →


Simple Mode

Activate Simple menu to limit mode options to basic ones. Enlarge fonts in Messaging, Phone Book, Call Log and Browser menus, and maximize volume.

- Handset is limited to basic operations (☞ P.1-22).
- Font size cannot be changed.
- To change volume: ☞ P.1-22



Normal Mode Window

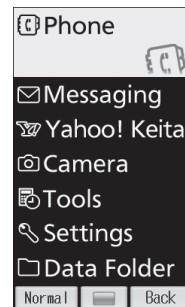

Simple Mode Window

Font Size: Large
Earpiece Volume: Volume 6

Activating Simple Mode

- 1 In Standby, press and hold → .
- To cancel: Press and hold → again

Change Earpiece Volume

> During a call, / or /

Position Clock in Standby

> In Simple Mode, **Main Menu** ► **Settings** ► **Standby Display Clock** ► **Lower Center**

Cancel Simple Menu

> In Standby, → [Normal] →

Note

- While switching between modes, other functions are not available.
- Turning off the power does not cancel Simple Mode.
- Standby Window and Private Menu is not available in Simple Mode, and Key settings temporarily return to defaults.
- Alternatively, **Main Menu** ► **Settings** ► **Phone Settings** ► **Change Simple Mode** ► .

Simple Mode

Simple Mode Menu	Page	Simple Mode Menu	Page
Phone		Tools	
View Phone Book	4-6	One Touch Guide	11-12
Create New Entry	4-3	Alarms	11-6
Mail & Call Log	2-10	Bar Code Reader	11-10
Message List	2-12	Calculator	11-7
Voice Mail	2-15	Notepad	11-8
One Touch Key	4-8	Voice Recorder	11-9
Account Details	1-24	Infrared	9-2
Messaging		Settings	
Incoming Mail	12-12	Ringer Volume	15-2
Create New S! Mail	12-4	Assign Ringtone	15-2
Drafts	12-18	Vibration Alert	15-2
Retrieve New	12-17	Wallpaper	15-4
Sent Messages	12-18	Standby Display Clock	Left
Unsent Messages	12-18	Date & Time	15-8
Create New SMS	12-8	Data Folder	
Yahoo! Keitai		View Photos	8-2
Yahoo! Keitai	13-3	View Movies	8-2
Bookmarks	13-8	Ring Songs&Tones	8-2
Saved Pages	13-8	S! Appli	8-2
Enter URL	13-4	Books	8-2
Camera		Templates	8-2
Take Photos	5-5	Memory Status	8-3
View Photos	5-8		
Record Movies	5-6		
View Movies	5-8		

Passwords

Phone Password, Center Access Code and Call Barring Password are needed for handset use.

Phone Password

<Default> 9999

4 to 8-digit number required to use/change some handset functions.

- ✖ appears for each digit entered.
- Phone Password can be changed on handset (☞P.10-2).
- If Phone Password is incorrectly entered three times, warning message appears. Turn off handset and try again.

Center Access Code

4-digit number specified at initial subscription; required to access Voice Mail via landlines or subscribe to fee-based information.

- Do not attempt to change Center Access Code. For details, contact SoftBank Mobile Customer Center, General Information (☞P.16-30).

Call Barring Password

4-digit number specified at initial subscription, required to restrict handset services (☞P.2-19).

- If entered incorrectly three times, Call Barring Password settings lock; Call Barring Password & Center Access Code must be changed. Reach SoftBank Mobile Customer Center, General Information (☞P.16-30) for details.
- Call Barring Password can be changed on handset (☞P.2-19).

Note

- Write down Phone Password, Center Access Code and Call Barring Password.
- Do not reveal Phone Password, Center Access Code and Call Barring Password. SoftBank is not liable for misuse or damages.
- For details, contact SoftBank Mobile Customer Center, General Information (☞P.16-30).

View Blind

Activate View Blind to protect Display from prying eyes.

1 Press and hold **[8]**

View Blind is set to Level 1 by default.

- To cancel: Press and hold **[8]** again

Change Level

> **Main Menu** ► **Settings** ► **Display Settings** ► **View Blind** ► **Level** ► Select a level (Highest protection: Level 3)

Note


- Alternatively, **Main Menu** ► **Settings** ► **Display Settings** ► **View Blind** ► **Settings ON/OFF**.
- View Blind cannot be activated: In Standby; in View Blind Setting; while S! Appli is active
- When S! Appli is active, View Blind is temporarily canceled. After terminating/suspending S! Appli, View Blind reactivates.

My Number

Confirm handset phone number in Account Details (☞ P.4-14). Also confirm data saved in Account Details: name, mail address, etc.

1 In Standby, **[0]** → **[0]**

Account Details appears.

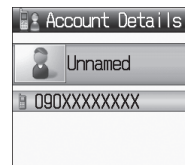

1 Getting Started

Making/Answering Voice Calls 2-2

Making Voice Calls	2-2
Outgoing Call Functions	2-2
Emergency Calls (110, 119, 118)	2-3
Answering Voice Calls	2-4
Incoming Call Functions	2-4

Making/Answering Video Calls 2-5

Note	2-5
Video Call Window	2-5
Making Video Calls	2-6
Answering Video Calls	2-6

International Calls 2-7

Calling Abroad from Japan	2-7
Calling while Abroad	2-8
Global Roaming Settings	2-9

Engaged Call Functions 2-9

Operations Available during a Voice Call	2-9
Operations Available during a Video Call	2-10

Call Log 2-10

Viewing Call Logs	2-11
Making Calls from Call Log	2-11
Call Log Functions	2-12

Answer Phone 2-12

Activating/Canceling Answer Phone	2-12
Playing Messages	2-13
Answer Phone Functions	2-13

Optional Services 2-14

Overview	2-14
Call Forwarding	2-14
Voice Mail	2-15
Call Waiting	2-17
Group Calling	2-18
Call Barring	2-19
Caller ID	2-20

Making/Answering Voice Calls

Making Voice Calls

Before Calling

- Confirm signal strength (☞ P.1-8)
- If any of these indicators appear:



→ Calls cannot be made (☞ P.1-8, P.1-9, P.16-10)

- 1 **Enter a phone number**
 - Include area code for all numbers.
- 2 **Confirm the number, then**
- 3 **to end call**

Call Time appears.



Correcting Misentries

Use to place cursor after digit(s) to delete, then press .
Press and hold to delete all digits.

Note

- Do not cover antenna area (☞ P.1-5) with hand or sticker; may weaken signal strength and cause calls/transmissions to be unavailable.

Tip

- Operations Available during a Voice Call (☞ P.2-9)
- Making Calls from Call Log (☞ P.2-11)
- Save Entered Phone Number (☞ P.4-5)
- Making Calls from Phone Book (☞ P.4-6)
- Speed Dial (☞ P.4-8)
- Settings**
 - Call Time & Call Cost (☞ P.15-10)
 - End Calls by Closing Handset (☞ P.15-11)

Outgoing Call Functions

Showing/Hiding Caller ID

- 1 Enter a phone number → [Menu]
→ *My Caller ID*
- 2 *Show* or *Hide*
 - To always show/hide Caller ID: (Caller ID: ☞ P.2-20)

Sending Touch-tone Signals

Send touch-tone signals for services such as reserving tickets, checking bank balance, etc. Save number strings to be sent as a touch-tone signal.

- 1 When entering a phone number, press and hold
→ Enter a number string

Emergency Calls (110, 119, 118)

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Coast Guard) even when some handset restrictions are active.

Calls cannot be Made in Following Cases:

- When Emission OFF Mode is *ON*
- In PIN entry window upon turning on handset (PIN Certification is *ON*)
- When Secure Remote Lock is active
- When USIM Card is not inserted

Emergency Positioning Request

When an emergency call is made from a mobile phone, location is reported to first response agencies such as the police.


- Location information may be inaccurate due to location or signal conditions. Describe location or nearby landmarks.
- Base Station Positioning System is accurate within 100 meters to 10 kilometers. Location information from distant base stations may be inaccurate.
- Function available where first response agencies have completed system installation.
- Dialing 184 before 110, 119 or 118, cancels location report. However, first responders may obtain location information for immediate and serious threats to life.
- Not available for international roaming.
- Requires no separate subscription or transmission fees.

Answering Voice Calls

When a Call Arrives...

Handset rings; Notification Light flashes.

If Caller ID is sent, number appears in Display; if saved in Phone Book, caller's name appears.

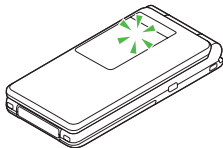

1 to talk

- To adjust volume:  or 




2 to end call

Call Time appears.

Note



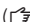



- When Caller ID is not sent, **Withheld** appears.

Tip

- Operations Available during a Voice Call ( P.2-9)
- Rejecting Calls by Call-type ● Rejecting Specific Numbers ( P.10-5)
- Settings** ● Press Any Key to Answer Calls ● Answer Calls by Opening Handset ● End Calls by Closing Handset ( P.15-11)

Incoming Call Functions

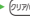Following operations are available for incoming calls.

Mute Ringtones	>  [Mute]
Place Calls on Hold	> 
Answer Phone*	> 
Call Rejection	>  [Reject]
Call Forwarding	>  [Forward] <ul style="list-style-type: none"> ● Activate Call Forwarding ( P.2-14) beforehand to forward incoming calls to a preset number. If Call Forwarding is not active, call is rejected.

* Voice Call only

Making/Answering Video Calls

Exchange video/sound with video call-compatible mobiles.


- Send Alternative Picture (still image) or video Image via Camera. By default, Outgoing Image is set to **Alternative Picture**.

Note

- Only available within 3G network coverage.
- 841P is 3G-324M compliant; calls connected via different systems may be disconnected (charges apply).
- Increasing Speaker volume may cause interference. Decrease volume.
- Handset may become warm during Video Call. This is not malfunction.
- When incoming/outgoing sound or image fails, try calling again.

Video Call Window

Example: Outgoing Video Call by Default

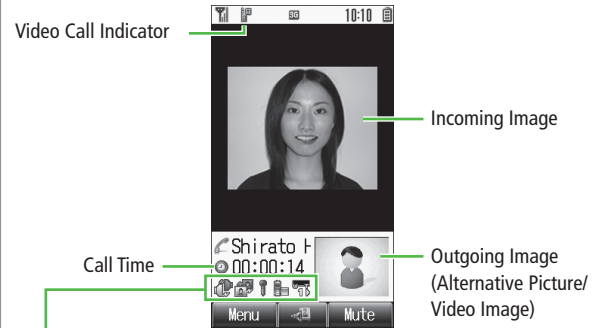

Indicators

Incoming/Outgoing Sound OK	Incoming Image OK/ Outgoing Image NG
Incoming Sound NG/ Outgoing Sound OK	Incoming/Outgoing Image NG
Incoming Sound OK/ Outgoing Sound NG	Microphone ON
Incoming/Outgoing Sound NG	Microphone OFF
Incoming/Outgoing Image OK	Video ON
Incoming Image NG/ Outgoing Image OK	Alternative Picture ON
	Zoom Level (1-25)

- Image display changes depending on settings.

Making Video Calls

Before Calling

- Confirm signal strength (☞ P.1-8)
- If any of these indicators appear:



→ Video Calls cannot be made (☞ P.1-8, P.1-9, P.16-10)

1 Enter a phone number

2 Confirm the number, then

When answered, outgoing (alternative) and incoming images appear; other party's voice sounds via Speaker.

- To adjust volume:
- To switch to Video Image: → *Video Image*



3 to end call

Note

- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (☞ P.2-10).

Tip

- Outgoing Call Functions (☞ P.2-2)
- Operations Available during a Video Call (☞ P.2-10)
- Making Calls from Call Log (☞ P.2-11)
- Save Entered Phone Numbers (☞ P.4-5)
- Making Calls from Phone Book (☞ P.4-6)

Settings ● Change Alternative Picture (☞ P.15-14)

Answering Video Calls

When a Video Call Arrives...

Handset rings; Notification Light flashes.

If Caller ID is sent, number appears in Display; if saved in Phone Book, caller's name appears.



1 or

2 Send Video Image

[YES]

Video Image is sent.



Send Alternative Picture



Alternative Picture is sent.

3 to end call



Note

- When no image is selected in Step 2, Alternative Picture is sent.
- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (P.2-10).

Tip

- Incoming Call Functions (P.2-4)
- Operations Available during a Video Call (P.2-10)
- Settings** ● Change Alternative Picture (P.15-14)

International Calls

Calling Abroad from Japan

- Application not required. For details, go to:
http://mb.softbank.jp/en/global_services/call/

- 1 Enter a phone number
- 2 [Menu] → **International Call**
Country/Area Number List appears.

- 3 Select a country/region

- 4 **Voice Call**



Video Call



Enter Country/Region Code Directly

> → Press and hold to display "+(IDD Prefix)" → Enter a country/region code → Enter a number (omit first 0) → Voice Call: /Video Call:

- International Code is set to **0046010** by default. The number can be changed if required (P.15-9).
- Do not omit leading **0** to call to Italy (country code: 39).


Calling while Abroad

- May require application to Global Roaming Service. For details, go to: http://mb.softbank.jp/en/global_services/global_roaming/

Example: When Roaming Dial Assistant is ON

- **Roaming Dial Assistant** (☞ P.15-9) is set to **ON** by default.



1 Voice Call

Enter a phone number → 

Video Call

Enter a phone number → 

2 Select an item (See below)

Item	Operation/Description
Call to Japan*	Call Japan
Call to Visited Country/Area	Call within the country/region
Call to Other Country/Area*	Call other Countries/regions > Select a country/region → Voice Call:  /Video Call: 
As is Call	Manually enter number to call Select when calling within the country/region

* Leading **0** is omitted and IDD Prefix and country/region code (e.g. **+81**) are added. (When calling Italy, leading 0 is not omitted.)

Note

- IDD Prefix and country/region code can be manually entered in Step 1. Alternatively, save IDD Prefix and country/region code in Phone Book entries.

Global Roaming Settings

■ Add to Country/Area Number List

- > In Japan: Enter a number → [Menu] → **International Call** → [Menu] → **Add** → Enter a country/region name → Enter country/region code
- > Outside Japan: Enter a number → Voice Call: / Video Call: → **Call to Other Country/Area** → [Menu] → **Add** → Enter a country/region name → Enter country/region code

■ Network Mode

<Default> Automatic

- > **Main Menu** ▶ **Settings** ▶ **Call Settings** ▶ **Optional Services**
 ▶ **International Setting** ▶ **Select Network** ▶ Select an item
 (See below)

Item	Operation/Description
Automatic	Handset automatically selects 3G network in Japan, and available network (3G or GSM) when abroad.
Manual	> Select an item <ul style="list-style-type: none"> • 3G/GSM : 3G/GSM service area in Japan or abroad. Handset selects an available network automatically. • 3G : 3G service area in Japan or abroad. • GSM : GSM service area abroad. Unavailable in Japan.

- **Automatic** is recommended.

Tip











- Change International Code
- Edit Country/Region Code
- Select Operator
- Set Operator Priority for Automatic Search
- Deactivate Roaming Dial Assistant (P.15-9)

Engaged Call Functions

Operations Available during a Voice Call

Adjust Volume	> / ● Adjust volume within one second. ● Adjusted volume is retained even after calls end or handset is turned off.
Place Call on Hold	> ● To resume call: ● Call Waiting or Group Calling subscription required to use Hold (P.2-18).
Speaker ON/OFF	Toggle Speaker or Earpiece > [Menu] → Speaker ON or Speaker OFF
Record Conversation	Record up to 60 seconds of a call > ● To end recording: ● Recorded data is saved to Ring Songs-Tones folder (P.8-2). ● Alternatively, [Menu] → Record .
Open Phone Book	> [Menu] → Phone Book → Select a Phone Book entry
Send SMS	> [Menu] → Create New SMS → Create an SMS → [Send]

Operations Available during a Video Call

Adjust Volume	<p>> </p> <ul style="list-style-type: none"> ● Adjust volume within one second. ● Adjusted volume is retained even after calls end or handset is turned off.
Speaker ON/OFF	<p>Toggle Speaker or Earpiece</p> <p>>  [Menu] → <i>Speaker ON</i> or <i>Speaker OFF</i></p>
Switch Image Priority	<p>>  [Menu] → <i>Image Priority</i> → <i>Priority Incoming</i> or <i>Priority Outgoing</i></p>
Image & Sound Settings	<p>Change Outgoing Image and sound settings</p> <p>>  → Select an item (See below)</p> <ul style="list-style-type: none"> · <i>Send Voice & Video</i> : Send video image and sound · <i>Alternative Picture</i> : Send Alternative Picture and sound · <i>Mute Voice</i> : Send video image only · <i>Alt. Picture & Mute Voice</i> : Send Alternative Picture only
Mute	<p>>  [Mute]</p> <ul style="list-style-type: none"> ●  appears. ● To cancel Mute:  [Mute OFF]
Zoom	<p>>  (zoom in) or  (zoom out)</p>
Open Phone Book	<p>>  [Menu] → <i>View Phone Book</i> → Select a Phone Book entry</p>


Call Log

Incoming and outgoing call records appear here. Use these records to call back.

All Calls: All dialed/received calls

Incoming: All received calls (up to 50 records)

Outgoing: All dialed calls (up to 50 records)

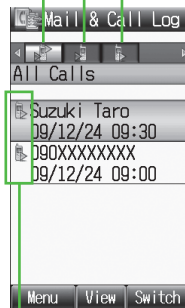

Status Indicators

 Answered Voice Call

 Missed Voice Call

 Rejected Voice Call

 Outgoing Voice Call


 Answered Video Call

 Missed Video Call

 Rejected Video Call


 Outgoing Video Call

Viewing Call Logs

- 1  → Select a Log
- 2 To view entry details, select an entry

Switch to Mail Log



> After Step 1,  [Switch]

- Mail Log:  P.12-15





Note

- Newest record appears at top of list. Names appear if saved in Phone Book.
- When a number is called more than once, only last record appears.
- Call Log records remain even if handset is turned off.
- When the maximum number of records are saved, oldest is deleted first.
- Alternatively, **Main Menu** ► **Phone** ► **Mail & Call Log**.

Tip

- Settings** ● Open Incoming Call Log for Missed Calls by Opening Handset ( P.15-11)
- Change Font Size by Function ( P.15-5)


Making Calls from Call Log





- 1  to select a Log
- 2 Highlight a record →  [Menu] → **Call**
- 3 **Voice Calls**
Voice Call
Video Calls
Video Call
International Calls
International Call → Select a country/region →
Voice Calls:  /Video Calls: 

Show/Hide Caller ID

- > In Step 3, **Show Number** or **Hide Number** →  [Menu] → **Call** →
Voice Call or **Video Call**

Call Log Functions

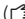


Press  [Menu] for following operations while viewing a mail/call record.

Item	Operation/Description
View	View details
Call	Make calls
Create Message*	> <i>S! Mail</i> or <i>SMS</i> → Create message (S! Mail:  From Step 4 on P.12-4/SMS:  From Step 4 on P.12-8)
Add to Phone Book	> <i>Create New Entry</i> or select an entry to add → ( From Step 2 on P.4-3)
Delete	> <i>One</i> or <i>All</i> →  [YES] (→ For <i>All</i> , enter Phone Password)

* Available for SoftBank handset numbers only.

Answer Phone


Record up to eight voice messages on handset.

- When Answer Phone is active,  appears in Standby.
- Unavailable when: handset is off or in Emission OFF Mode; **OUT** or  (red) appears. Use Voice Mail ( P.2-15).


Activating/Canceling Answer Phone

<Default> ON

- 1 Press and hold 
 - Toggles **ON/OFF**.

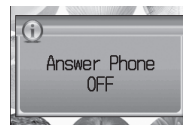

Redirect a Call to Answer Phone

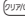- > 
- Answer Phone is activated and recording starts. Answer Phone remains active.

Note

- Alternatively, activate/cancel from **Main Menu** ► **Tools** ► **Answer Phone** ► **Settings** ► **ON/OFF**.
- When full, new messages cannot be recorded even if Answer Phone is activated. Delete old messages.
- Answer Phone does not respond to Video Calls.


Playing Messages


When a new message is recorded, Information window opens (☞ P.1-18) and  appears in Standby.

1 In Information window, **Answer Phone**

2 Select a message

Playback starts.

After playback ends, Information window and  disappear.

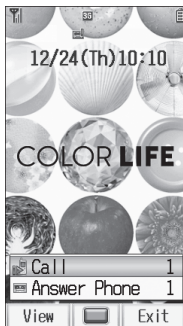

Note

- Alternatively, press  in Standby, or **Main Menu ▶ Tools ▶ Answer Phone ▶ Message List ▶** Select a message.

Answer Phone Functions

From ▶ Main Menu ▶ Tools ▶ Answer Phone

■ Set Answer Time


<Default> 18 seconds

Set time before which call is redirected to Answer Phone.

> **Settings → Answer Time** → Enter ring time

- When Answer Phone and an Optional Service (Voice Mail or Call Forwarding) are both active, function with shorter ring time takes priority. For example, if Answer Time is 18 seconds and Optional Service is 20 seconds, Answer Phone responds first. (Priority may change due to signal conditions.)
- Even if Answer Phone takes priority, call is forwarded to Voice Mail or forwarding number when Answer Phone is full.

■ Call Sender

> **Message List** → Highlight a message →  [Menu] → **Call**

■ Delete Messages

> **Message List** → Highlight a message →  [Menu] → **Delete** or **Delete All** →  [YES] → For **Delete All**, enter Phone Password

■ Save to Phone Book

> **Message List** → Highlight a message →  [Menu] → **Add to Phone Book** → **Create New Entry** or select an entry to add → (☞ From Step 2 on P.4-3)

Optional Services

Overview

- For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Call Forwarding (☞Right)	Forward unanswerable calls to a preset number when handset is off, out-of-range, etc.
Voice Mail (☞P.2-15)	Unanswered calls are forwarded to Voice Mail Center as set or when handset is off, out-of-range, engaged, etc. <ul style="list-style-type: none"> • Missed Call Notification (☞P.2-16)
Call Waiting* (☞P.2-17)	Place the current call on hold and answer a second, or alternate between calls.
Group Calling* (☞P.2-18)	Call another party during a call and alternate between calls. Add other parties to talk on up to five lines simultaneously.
Call Barring (☞P.2-19)	Restrict incoming/outgoing Voice Calls, Video Calls or SMS messages.
Caller ID (☞P.2-20)	Show or hide your number when calling.

* Separate subscription required

Call Forwarding

- Call Forwarding and Voice Mail cannot be set simultaneously.
- When forwarding Video Calls, set a destination phone that supports 3G-324M standard video calls. If not, Video Calls are not forwarded.

Activating Call Forwarding

Main Menu ▶ Settings ▶ Call Settings
▶ Optional Services ▶ Voice Mail/Call Forwarding
▶ Call Forwarding ON

- 1 Select a type
- 2 Select an item (See below)

Item	Operation/Description
Ringer Off	Forward all calls without ringing/vibrating
Ringer On	Forward missed calls

- 3 **Select from Phone Book**
Phone Book → Select an entry → Select a phone number
Direct Entry
Direct Entry → Enter a phone number
- 4 If **Ringer On** is selected in step 2, select ring time



■ Check Call Forwarding Status

> **Main Menu** ► **Settings** ► **Call Settings** ► **Optional Services** ►
Voice Mail/Call Forwarding ► **Confirm Status**

■ Cancel Call Forwarding

> **Main Menu** ► **Settings** ► **Call Settings** ► **Optional Services** ►
Voice Mail/Call Forwarding ► **Cancel All** ► 

Note

- Toll free numbers and international call numbers cannot be saved as a destination number.
- When using Call Forwarding together with Answer Phone, the function with shorter ring time takes priority. (Priority may change due to signal conditions.)
- When **Ringer On** is set, following operations are available while handset is ringing/vibrating (within ring time).
 - To answer a call: 
 - To forward a call:  **[Forward]**

Voice Mail

- Calls are forwarded to Voice Mail Center via Call Forwarding function; Call Forwarding and Voice Mail cannot be set simultaneously.
- Voice Mail is not available for Video Calls.

Activating Voice Mail

Main Menu ► **Settings** ► **Call Settings**
► **Optional Services** ► **Voice Mail/Call Forwarding**
► **Voice Mail ON**

1 Select an item (See below)

Item	Operation/Description
Ringer Off	Forward all calls without ringing/vibrating
Ringer On	Forward missed calls > Select a ring time

■ Check Voice Mail Status

> **Main Menu** ► **Settings** ► **Call Settings** ► **Optional Services** ►
Voice Mail/Call Forwarding ► **Confirm Status**

■ Cancel Voice Mail

> **Main Menu** ► **Settings** ► **Call Settings** ► **Optional Services** ►
Voice Mail/Call Forwarding ► **Cancel All** ► 

Note

- When using Voice Mail together with Answer Phone, the function with shorter ring time takes priority. (Priority may change due to signal conditions.)
- When **Ringer On** is set, following operations are available while handset is ringing/vibrating (within ring time).
 - To answer a call:
 - To forward a call: [Forward]

Checking Voice Mail Messages

Information window (P.1-18) and appear in Standby when new messages are recorded.

- 1 In Information window, select **Voice Mail**

Follow voice guidance.

Information window and disappear after messages are checked.

**View Details**

View callers' phone numbers and date/time Voice Mail messages were left before playing messages.

- Activate **Missed Call Notification** beforehand. (Right)
- > to open Incoming Call Log → Select a Voice Mail notification → View details → [Menu] → **Listen to Voice Mail**

Note

- Alternatively, follow these steps to check Voice Mail:
Main Menu ► **Settings** ► **Call Settings** ► **Optional Services** ► **Voice Mail/Call Forwarding** ► **Listen to Voice Mail**

Missed Call Notification

When Missed Call Notification function is active, Information window appears for calls missed while handset was off, out-of range, engaged etc.

- Available only when Voice Mail is active.

Main Menu ► **Settings** ► **Call Settings**
 ► **Optional Services** ► **Missed Call Notification**

1

Handset connects to the Network.

- Follow voice guidance.

When Calls are Received while Missed Call Notification is Active...

Information window appears for missed calls when handset is turned on or comes into range.

Select **Missed Call** in Information window to view Incoming Call Log.

- **Voice Mail** appears in Information window when Voice Mail messages were recorded (Left).



Call Waiting

Activating/Canceling Call Waiting

Main Menu ► Settings ► Call Settings
► Optional Services ► Call Waiting


Current status appears.




1  [Menu] → *Activate* or *Deactivate*

■ Check Call Waiting Status


> Main Menu ► Settings ► Call Settings ► Optional Services
► Call Waiting

Answering Second Call

1 When tone sounds, 

- Press  to alternate between calls.
- When the party hangs up, active call ends.
- Press  to re-engage the party on hold.
- Press  to disconnect active call.

■ Reject Second Call

> When tone sounds,  [Reject]

Note

- When Voice Mail or Call Forwarding is set to Ringer On while Call Waiting is active, unanswered calls are transferred to Voice Mail Center or the forwarding number.
- When Voice Mail or Call Forwarding is set to **Ringer Off**, Call Waiting is disabled.

Group Calling

- Separate subscription is required for this service.

Dialing New Number during a Call





- 1 Enter a phone number during a call → 

The line switches. The other line is placed on hold.


■ Use Phone Book


- > During a call,  [Menu] → *Phone Book* → Select an entry → Select a number → 

Swap Calls

- 1 During a call, 
 - Press  to toggle lines.
 - When the party hangs up, the call ends.
 - Press  to re-engage the line on hold.
 - Press  to disconnect all lines.

Connecting to Multiple Parties

- 1 While switching between two lines,  [Menu] → *Speak with All*

- Connect up to five lines simultaneously.
- Press  to disconnect all lines.


■ Add a New Party to a Call

- > Enter a number during Group Calling →  → After the party is connected,  [Menu] → *Speak with All*


■ Check Members

- > Enter a number during Group Calling →  [Menu] → *Member*

■ Talk with One Party

- > Highlight a member →  [Menu] → *Split*

■ End Calls Individually

- > Highlight a member →  [End]

Call Barring

- When Call Forwarding or Voice Mail is active, **Bar All Outgoing Calls** and **Bar All Incoming Calls** are not available. (Call Forwarding or Voice Mail takes priority.)
- Call Barring Password specified at initial subscription (☎ P.1-23) is required to change Call Barring settings.

Activating/Deactivating Call Barring

Main Menu ► Settings ► Call Settings
► Optional Services ► Call Barring

- 1 **Outgoing Calls** or **Incoming Calls** → Select an item (See below)

Item	Operation/Description
Bar All Outgoing Calls	Restrict all non-emergency calls
Bar All International Calls	Allow only domestic calls
Bar International Calls	Restrict all international calls except to Japan
Bar All Incoming Calls	Reject all calls
Bar All If Roamed	Reject calls when outside Japan

- 2 ☒ [Menu] → **ON** or **OFF**

- 3 Enter Call Barring Password

■ Check Call Barring Status

- > In Step 1, **Confirm Status** → Select an item (☎ Above)

■ Cancel All Call Barring

- > In Step 1, **Cancel All Barring** → Enter Call Barring Password

■ Change Call Barring Password

- > In Step 1, **Call Barring Password** → Enter current Call Barring Password → Enter new Call Barring Password → Reenter new Call Barring Password

Note

- Emergency numbers (110, 119, 118) are dialable when Call Barring for outgoing calls is active.
- If call is attempted when Call Barring is active, warning message appears. It may take longer to appear in some areas. Check Call Barring settings if the message does not appear.

Caller ID

<Default> Network Set

Main Menu ► Settings ► Call Settings
► Show My Number

1 Select an item

- **Network Set** Caller ID setting varies by subscription.

Note

- Alternatively, enter these numbers/symbols before the phone number to show or hide Caller ID:

Show: 1 8 6 or * 3 1 #


Hide: 1 8 4 or # 3 1 #

Text Entry

- Text Entry..... 3-2**
- Entering Text..... 3-2**
 - Entering Characters 3-2
 - Pictographs & Symbols 3-3
 - Additional Features..... 3-4
- Conversion Methods (Japanese)..... 3-5**
 - Predictive Conversion 3-5
 - Converting Hiragana to Katakana/Alphanumerics..... 3-7
 - Narrowing Down Predictive Candidates
by Number of Characters 3-7
- Editing Text..... 3-8**
 - Deleting & Replacing 3-8
 - Copy/Cut & Paste 3-8
- User's Dictionary 3-9**
 - Saving User's Dictionary Entries 3-9
- Download Dictionary..... 3-9**
 - Activating Downloaded Dictionaries..... 3-9

Text Entry

Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.

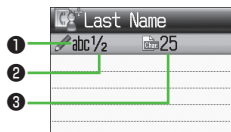

① Input Modes	Operation
漢: Kanji (Hiragana)	[F]
加: Katakana	
abc: Alphanumerics	
123: Numbers	
② Double-byte/Single-byte	Operation
1/1: Double-byte	Press and hold [F]
1/2: Single-byte	
③ Character/Byte Count	
[Char] Remaining number of enterable characters appears, regardless of input mode.	
[Byte] Remaining number of enterable byte appears.	

Note

- Follow the steps below to toggle input modes and single-/double-byte at the same time.

[Menu] → **Input Options** → **Change Input Mode**

Help

Help describes text entry operations.

> In text entry window, [Menu] → **Help** → Select an item

Entering Text

Entering Characters

Example: Enter 鈴木

- In alphanumeric mode, [F] twice to switch to kanji (hiragana) mode
す: [3] three time
ず: [C]* → [3] three times → [X]
き: [2] twice

*When the next character is on the same key, press [C] first to move cursor.

- [C] to enter Forecast List
 - To change word before converting, press [C].
 - There are four types of word suggestion list: **Forecast**, **Normal**, **E-1-Kana** and **Prediction** (P.3-5)

- [C] to select 鈴木



Other Input Functions

Enter katakana/ alphanumerics	[F] several times to select an input mode → Enter characters
Enter small kana (ㇿ, ㇾ, etc.)	Enter a character → [↶] ● Alternatively, press a key repeatedly to enter an assigned small kana.
Enter upper case characters	Enter a character → [↶] ● Alternatively, press a key repeatedly to enter an assigned upper case character.
Add ° or °	Enter a character → [✖] for ° or [✖] twice for ° ● In single-byte katakana mode, ° and ° are entered as a single-byte character.
Insert line break	[↵] to insert line breaks in text
Insert space at end of text	[␣]
Insert space within text	[#] repeatedly until single-byte space appears*, or use symbol list for double-byte or single-byte space ([↶] Right)
Toggle characters in reverse order	[↵] Example: From c → b → a → 2...

* Space cannot be entered within text in number mode by following the steps above.

Pictographs & Symbols

- Pictographs do not appear in messages sent to incompatible SoftBank handsets or e-mail addresses.
- Symbol List: [↶] P.16-13

1 Open Pictograph List

In text entry window, [✖]


Open Symbol List

In text entry window, press and hold [#]

or

[✖] in pictograph list

List Log exist first when entered pictographs/symbols/My Pictographs exist.

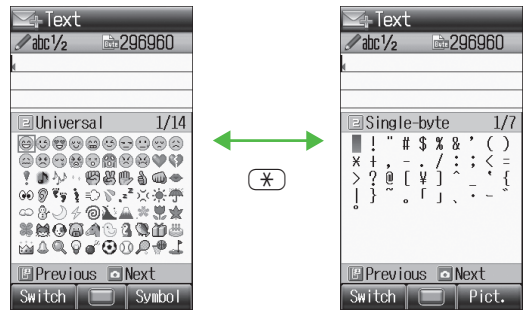




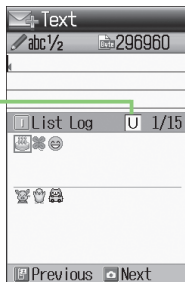
2 [✖] to select a pictograph or symbol

Pictograph/Symbol List








- In Symbol Log, single-byte symbols appear in upper half of window; double-byte symbols in lower half.
- In List Log, pictographs appear in upper half of window; My Pictograms in lower half (only in S! Mail text entry window).

Pictogram Type

-  Universal (Cross-carrier) Pictographs
-  All Pictographs
-  My Pictograms




Functions Available in Pictograph/Symbol List

Toggle pictograph types	In pictograph list,  [Switch] <ul style="list-style-type: none"> ● Toggle as follows: (List Log →) Universal¹ → Full List → My Pictogram² ● Alternatively, press 1 to 4.
Toggle Symbol types	In symbol list,  [Switch] <ul style="list-style-type: none"> ● Toggle as follows: (Symbol Log →) Single-byte → double-byte ● Alternatively, press 1 to 3.
Jump to next page	In pictograph/symbol list, 
Jump to previous page	In pictograph/symbol list, 
Toggle pictograph/symbol list	In pictograph list,  /[Symbol] In symbol list,  /[Pict.]
Close list	

¹ In S! Mail Subject field and S! Mail/SMS Text field only


² In S! Mail Text field only

Note

- Alternatively, follow the steps below to access pictograph or symbol:
 [Menu] → *Pictograph* or *Symbol*


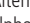

Additional Features

Emoticons

> In text entry window,  [Menu] → *Emotions* → Select an emoticon


Use Info from Phone Book/Account Details/Notepad/String Templates

> In text entry window,  [Menu] → *Insert* → Select an item (See below)

Item	Operation/Description
Phone Book Data*	> Select an entry → Select an item
Account Details*	> Select an item
Notepad	> Highlight a note →  [Set] <ul style="list-style-type: none"> ● Alternatively, in kanji (hiragana), katakana and alphanumerics (double-/single-byte) mode, press and hold  → Highlight a note →  [Set].
String Templates	Insert web and mail extensions > Select an extension

* Available Items: Last Name/First Name, Reading, Phone Number, Email Address, Address or Note.

Enter Kuten Code

> In text entry window,  [Menu] → *Input Options* → *Kuten Code* → Enter a character code (4 digits) (P.16-14)

Tip

Settings ● Change Input Font Size (P.15-12)

Conversion Methods (Japanese)

Predictive Conversion

The following suggestion lists appear while entering text or after a word is fixed.

Before Entering Text*	Forecast (Pre-text Predict)	Suggests salutations/opening words Example: こんにちは, お疲れさま, etc.
While Entering Text	Forecast	Lists likely conversions and matching conversions. Likely Conversions: わ → 私, わたし, etc. Matching Conversions: わ → 和, 輪, etc.
	Normal	Suggests only matching conversions Example: わ → 和, 輪, etc.
	E-1-Kana	Lists alphanumerics/katakana assigned to key (📄P.3-7)
After a Word is Fixed	Prediction	Suggests words likely to follow Example: 私 is fixed → です, の, は, etc.

* Available when you open Message Text window or cursor is at top of Text window. Note that handset Language must be set to **日本語**.

- Predictions change with each letter entered.
- Press [Forecast]/[Normal] to toggle Forecast List and Normal List.

Predictive Candidates

- Time Season Predict function suggests words appropriate for current season and time.
- Set word suggestions for formal or informal words. (📄P.15-13)

Note






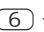


- 841P learns entered characters and suggests them for future conversions.



Tip



Settings


- Disable Learning (Kana Conversions)
- Reset Learned Words
- Change Candidate Font Size
- Hide Predictive Candidates
- Hide Context Forecast List
- Fix Entered Characters Automatically (📄P.15-12)
- Deactivate Pre-text Predict
- Deactivate Time Season Predict
- Activate Text Expression (📄P.15-13)


Example: Enter 私の鼻

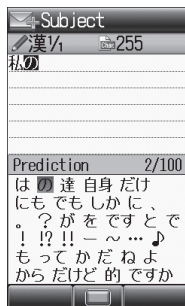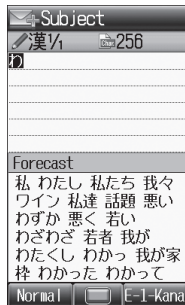- 1 In kanji (hiragana) mode,  わ is entered and Forecast List appears.
- 2  to move to Forecast List →  to select 私
私 is entered and Prediction List appears.
- 3  to move to Prediction List
→  to select の
の is entered and Prediction List appears.
- 4  → 
はな is entered and Forecast List appears.
- 5  **[Normal]**
Normal List appears.



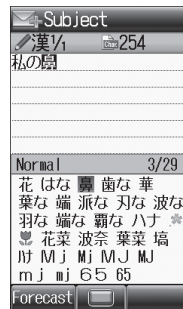

- 6  to move to Normal List
→  to select 鼻

**If the Word is Not Listed**

Press  to return to hiragana, and segment hiragana to convert separately.

Example: Segment はるか into はる and か, then convert to 春香

- ① Move cursor to る, then convert はる to 春 → 
- ② Convert か to 香 → 





Using Previously Entered Words

Enter the first one or two hiragana to access previously entered words in the list.

Converting Hiragana to Katakana/ Alphanumerics







Enter katakana and alphanumerics in kanji (hiragana) mode. Date and time can be entered quickly.

Example 1: Enter OK

Step	1	2	3	4
Key	 (3 times)	 (twice)	 [E-1-Kana]	
Display	ふ	ふに	E-1-Kana List	OK

- Highlight OK and press .

Example 2: Enter 10:30 or 10/30


Step	1	2	3
Key	   	 [E-1-Kana]	
Display	あわさわ		10/30 10:30 10月30日 etc.

- Highlight a suggestion and press .

Narrowing Down Predictive Candidates by Number of Characters



In kanji (hiragana) mode, narrow down Predictive Candidates by specifying minimum number of characters.



Example: Suggest words with a minimum of seven characters, starting with かさ

1 Enter かさ → 

2  (five times)

Word suggestions of seven or more characters appear.

- Press  to change number of characters.
- To show word suggestions of only seven characters:  [Switch]

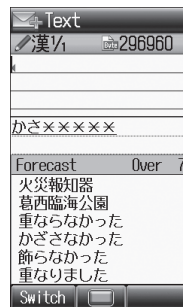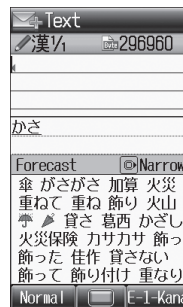

Editing Text

Deleting & Replacing

1 Delete Characters within Lines

Place cursor before a character →

A character after cursor is deleted.

- Press and hold to delete all characters after cursor.

Delete Characters from the End of Text

Place cursor at the end of text →

A character before cursor is deleted.

- Press and hold to delete all characters before cursor.

2 Enter another character

Copy/Cut & Paste

- Up to seven copied/cut entries are stored; six text entries and one Graphic Mail entry.

1 In text entry window, [Menu] → *Copy* or *Cut*

2 Select Text to Copy/Cut

Place cursor before (or after) text to select → →

Place cursor after (or before) text →

Select All

[All] →

3 Paste Text

Place cursor at target location → Press and hold

Paste Previously Copied/Cut Text

Place cursor at target location → [Menu] → *Paste*
→ Select text data

Note

- Turning off power deletes stored text data.
- Graphic Mail entry is deleted when S! Mail text entry window is closed.

User's Dictionary

Save frequently used words/phrases (up to 100 entries).
Saved words/phrases appear among word suggestions.

Saving User's Dictionary Entries

- 1 In text entry window, [Menu] → *Input Options* → *User's Dictionary*
- 2 [Create]
 - When saved items exist: [Menu] → *Create*
- 3 Enter a word → Enter reading

Edit User's Dictionary Entries

> After Step 1, highlight a word → [Menu] → *Edit* → Edit word → Edit reading

Delete User's Dictionary Entries

> After Step 1, [Menu] → *Delete* → Select an item (See below)

Item	Operation/Description
One	> []
Selected Words	> Check entries → [OK] → []
All	> [YES] → Enter Phone Password

Note

- Alternatively, **Main Menu** ▶ **Settings** ▶ **Phone Settings** ▶ **Dictionaries** ▶ **User's Dictionary**.

Download Dictionary

Download dictionaries from P-egg, a download site for 841P users (see below). Activate downloaded dictionaries to add character conversions to conversion suggestions (Japanese).

- P-egg (as of November 2009)
Main Menu ▶ **Yahoo!** ▶ **Bookmarks** ▶ **Panasonic Site (P-egg)**

Activating Downloaded Dictionaries

Main Menu ▶ **Settings** ▶ **Phone Settings** ▶ **Dictionaries** ▶ **Download Dictionary**

- 1 Select a dictionary → *ON*
 - To cancel, select *OFF*.

Change Title

> In Step 1, highlight a dictionary → [Menu] → *Rename* → Edit

View Details

> In Step 1, highlight a dictionary → [Menu] → *Property*

Delete Dictionaries

> In Step 1, (highlight a dictionary →) [Menu] → *Delete* → Select an item (See below)

Item	Operation/Description
One	> []
Selected Files	> Check dictionaries → [Delete] → [YES]
All	> [YES] → Enter Phone Password

3

Text Entry


Phone Book

Overview	4-2
Saving to Phone Book	4-3
Phone Book Entry Items.....	4-3
Creating New Entry	4-3
Other Ways to Add New Entries	4-5
Setting Groups	4-5
Searching/Using Phone Book.....	4-6
Changing Phone Book Search Method	4-6
Making Calls from Phone Book.....	4-6
Sending Messages from Phone Book.....	4-7
Quick Phone Book Search/Speed Dial.....	4-8
Using Phone Book.....	4-9
Managing Phone Book	4-10
Editing Phone Book Entries.....	4-10
Deleting Phone Book Entries.....	4-10
Copying Phone Book Data.....	4-10
Phone Book Memory Status	4-11
S! Addressbook Back-up.....	4-11
Manual Synchronization	4-12
Auto Synchronization	4-13
View Sync Log.....	4-13
Account Details	4-14
Editing Account Details.....	4-14
Account Details Functions.....	4-14

Overview

Save frequently used phone numbers and mail addresses to Phone Book.


Supplement phone numbers and mail addresses with birthday, street address, an image or notes.

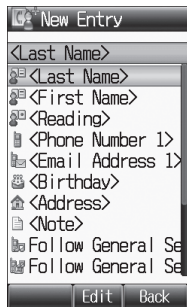

Set tones/image for each entry.



Sort entries into Groups.

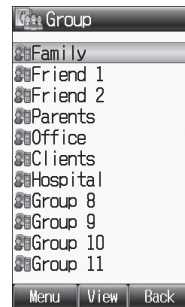

Note

● Back-up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, entries may be lost. Handset damage may also affect data recovery. SoftBank is not liable for damages from lost/altered entries.

Tip

- Phone Book Lock (☞ P.10-6)
- Memory Card Backup (☞ P.8-16)
- Send Phone Book Data via Infrared (☞ P.9-3)

Saving to Phone Book

Phone Book Entry Items

Save up to 1000 entries in handset Phone Book; 50 entries to USIM Card Phone Book.

Available entry items are as follows.

Phone Book Entry Items	Handset	USIM Card
Last Name/First Name	<input type="radio"/>	<input type="radio"/>
Reading	<input type="radio"/>	<input type="radio"/>
Phone Number	5	2
Email Address	5	1
Birthday	<input type="radio"/>	×
Address	<input type="radio"/>	×
Note	<input type="radio"/>	×
Voice Call Ringtone	<input type="radio"/>	×
Video Call Ringtone	<input type="radio"/>	×
Message Ringtone	<input type="radio"/>	×
Notification Light	<input type="radio"/>	×
Picture	<input type="radio"/>	×
Group	<input type="radio"/>	<input type="radio"/>
Secret Setting	<input type="radio"/>	×

- : Can be saved ×: Cannot be saved
- Phone Book entries in USIM Card can also be used in another SoftBank handset.

Creating New Entry


Save new entries to handset or USIM Card Phone Book.

- When saving to USIM Card Phone Book, set *Save Settings* to *USIM* or *Ask Each Time* beforehand (☞ P.15-13).

1 → [Menu] →

New Entry

- When no Phone Book entries exist: → [Create]
- When *Save Settings* is set to *Ask Each Time*: Select *Phone* or *USIM*

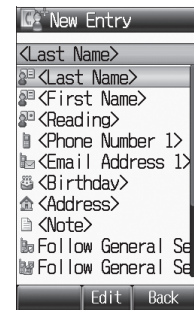

Handset Phone Book

2 Select an item (See below)

Item	Operation/Description
Last Name ¹	Save last name. For USIM Card, enter both first name and last name in Name > Enter last name
First Name ¹	Save first name > Enter first name
Reading	Automatically entered when Last Name and First Name are entered > To change Reading, [Edit] → Edit

Item	Operation/Description
Phone Number 1-5¹	> Enter phone number (→ For handset, select an icon)
Email Address 1-5¹	> Enter mail address (→ For handset, select an icon)
Birthday	> Enter birthday
Address	Enter postal code, country/region, state/province, city, street address or additional information > Select an item → Enter text → [Decide] to exit Address field
Note	> Enter note
Voice Call Ringtone	Set Incoming call/message ringtone > Select an item · Follow General Setting²
Video Call Ringtone	· Select a folder in Data Folder → Highlight a file → [Set]
Message Ringtone	
Notification Light	Set Incoming call/message light color > Follow General Setting³ or select a color
Picture	Save a still image. Captured still images can be set > Select an item · Pictures → Highlight a file → [Set] · Take Picture → to shoot → ● To delete the image: No Pictures ● Saved still image appears for incoming calls. (Saved still image may not appear while using other functions.)

Item	Operation/Description
Group	Categorize/search entries by group > Select a group ● Change group names or set ringtones for individual groups. (P.4-5)
Secret Setting	Set to show or hide saved entries > Show or Hide ● When Secret Setting is set to Hide , activate Secret Mode/Secret Data Only to open entries. (P.10-7)

¹ To save an entry, enter at least one of the fields

² General Ringtone settings apply (P.15-2)

³ General Notification Light settings apply (P.15-12)

3 [Save]

Other Ways to Add New Entries

Save currently displayed phone numbers or mail addresses to Phone Book.



1 Save Entered Phone Number

Enter a phone number →  [Menu] → **Add to Phone Book**

Save from Mail & Call Log

 → Select a Call Log → Highlight a record →  [Menu] → **Add to Phone Book**

Save from Sent/Received Messages

 [envelope icon] → **Sent Messages** or **Incoming Mail**
(→ Select a folder) → Highlight a message →  [Menu] → **Add Destination to Phone Book** or **Add Sender to Phone Book**

2 New Entry

Create New Entry → Enter details (👉 From Step 2 on P.4-3)

Add to Existing Entry

Select an existing entry → Enter details (👉 From Step 2 on P.4-3)

3 [Save]


Setting Groups

Sort entries by Group. Custom set ringtones/notifications per group.

- Handset Phone Book or USIM Card Phone Book Groups appear according to **Change View** setting.
- Assign Phone Book entries to Groups (👉 P.4-4); otherwise, entries will be automatically assigned to **Ungrouped**.


Main Menu ▶ Phone ▶ Group

1 Highlight a group →  [Menu] → **Rename** → Enter group name

- When **Change View** is set to **USIM** : Highlight a group →  [Rename]

2  [Menu] → **Sound & Notification Light**

3 Set Ringtone

Voice Call Ringtone, Video Call Ringtone or **Message Ringtone** → **Follow General Setting** or select a folder in Data Folder → Highlight a file →  [Set]
• Selecting **Follow General Setting** applies Ringtone settings (👉 P.15-2).

Set Notification Light

Notification Light → **Follow General Setting** or select a color
• Selecting **Follow General Setting** applies Notification Light settings (👉 P.15-12).

4 [Set]

■ Switch Between Handset & USIM Card

When **Change View** is set to **Phone & USIM** (☞ P.15-13), follow these steps to switch view.

> **Main Menu** ▶ **Phone** ▶ **Group** ▶ [Menu]
▶ **Change to Group(Phone)** or **Change to Group(USIM)**

■ Reset Group Setting

> Highlight a group → [Menu] → **Reset Defaults** → [OK]

Note

- Ringtones/Notification Light settings are unavailable for USIM Card Phone Book Groups.
- Ringtone/Notification Light settings for each Phone Book entry take priority.

Searching/Using Phone Book

Changing Phone Book Search Method

<Default> A-KA-SA-TA...

Search for an entry using one of these search methods:
A-KA-SA-TA-NA, Reading or Group.

Main Menu ▶ **Phone** ▶ **Settings** ▶ **Search Method**

1 Select a search method

Note

- Alternatively, for **A-KA-SA-TA...** and **Reading**, [Person] → [Menu] → **Search Method**.

Making Calls from Phone Book

- To change search method: ☞ Above

1 [Person]

2 Search Phone Book (See below)

Search Method	Operation/Description
A-KA-SA-TA...	> Select a page of the required reading ● Alternatively, enter partial reading.
Reading	> Enter partial reading
Group	> Select a group

3 Select an entry




4 **Voice Calls**

Highlight a phone number → 


Video Calls



Highlight a phone number → 

International Calls




Highlight a phone number →  [Menu] → **Call** → **International Call** → Select a country/region → Voice Call:  /Video Call: 


■ **Show/Hide Caller ID**


> In Step 4, highlight a number →  [Menu] → **Call** →

Show Number or **Hide Number** → Voice Call:  /Video Call: 

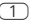■ **Open Phone Book Entries in Standby (Quick Phone Book Search)**

In Standby, press and hold  -  and  to open entries assigned to that key.

Example: "NA" page: Press and hold 

- When Search Method is set to **Group**, Group 1-10 open.
- When pressing key for page without any entry, the next page with entries appears.
- Change One Touch Key setting to Speed Dial. ( P.4-8)

Sending Messages from Phone Book

1  → Select an entry



2 **Use Mail Address**
Select a mail address

Use Phone Number*

Highlight a phone number →  [Menu] →

Create Message → **S! Mail** or **SMS**

* SoftBank handset numbers only

3 Create message (S! Mail:  From Step 4 on P.12-4/
SMS:  From Step 4 on P.12-8)

Quick Phone Book Search/Speed Dial

Set Quick Phone Book Search or Speed Dial to One Touch Key.

Use Keypad (**1-9**), (**0**) to access functions as follows.

Quick Phone Book Search	In Standby, press and hold Keypad (1-9), (0) to open entries assigned to that key. <ul style="list-style-type: none"> When Search Method is set to Group, Group 1-10 open.
Speed Dial	Set phone numbers to Keypad (1-9). Press and hold a key to dial the number assigned to that key.

Set a Function to One Touch Key

<Default> Quick Phone Book Search

Main Menu ► Phone ► One Touch Key ► One Touch Key

1 Quick Phone Book Search or Speed Dial

Saving Numbers to Speed Dial





Main Menu ► Phone ► One Touch Key ► Speed Dial









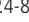
- Select a key number [**1**] - [**9**]
 - To enter phone number directly: Highlight a key number [**1**] - [**9**] → **[Edit]** → Enter number
- Select a Phone Book entry → Select a phone number



Note

- Before saving secret entries, activate Secret Mode or Secret Data Only. When Secret Mode or Secret Data Only modes are deactivated, the saved secret entries appear as **Empty**. Be careful of accidentally overwriting secret entries.

Using Phone Book



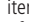

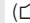
- Some functions may not be available depending on entries/entry items.
- >  → (Highlight an entry →)  [Menu] → Select an item (See below) or
- >  → Select an entry → (Highlight an item →)  [Menu] → Select an item (See below)

Item	Operation/Description
View	View details
Call	Make calls > Select an item → Operate selected item ( From Step 3 on P.2-11)
Create Message	Create New S! Mail/SMS > S! Mail or SMS → Create message (S! Mail:  From Step 4 on P.12-4/SMS:  From Step 4 on P.12-8)
Edit	> Select an item → Edit entry →  [Save] ● To delete Birthday/Address/Picture:  P.4-10
New Entry	Create new entry ( From Step 2 on P.4-3)
Send	Send Phone Book entries via S! Mail/Infrared > Attach to S! Mail or Infrared → Operate selected item (S! Mail:  From Step 2 on P.12-4/Infrared:  P.9-3)
Change View	Switch Phone Book to open > Select an item
Search Method	> Select a search method
Speed Dial	Set phone numbers to Speed Dial ( P.4-8) for easy dialing > (Select a number →) Select a key number ([1] - [9])

Item	Operation/Description
Copy to USIM/ Copy to Phone	 P.4-10
Delete	>  [YES]




Managing Phone Book

Editing Phone Book Entries

- 1  → Highlight a Phone Book entry →  [Menu] → *Edit*
- 2 Edit entry →  [Save]
 - **Delete Birthday**
> Highlight Birthday field →  [Menu] → *Clear Birthday*
 - **Delete All Items in Address Field**
> Highlight Address field →  [Menu] → *Clear Address*
 - **Delete Picture**
> Select Picture field → *No Pictures*

Deleting Phone Book Entries

Deleting a Phone Book Entry

- 1  → Highlight a Phone Book entry →  [Menu]
- 2 *Delete* → 

Deleting All Phone Book Entries



Main Menu ► Phone ► Memory Manager
► Delete All(Phone) or Delete All(USIM)

- 1  [YES] → Enter Phone Password

Copying Phone Book Data

- Entry items unsupported by USIM Card are not copied.

Copying One by One

- 1  → Highlight a phone Book entry →  [Menu] → *Copy to Phone* or *Copy to USIM*

Copying All Entries

Main Menu ► Phone ► Memory Manager ►
Copy All from USIM or Copy All to USIM

- 1 

Note

- Some entry items are not supported by USIM Card.
- While Secret Data Only is active, *Copy All from USIM* is not available.

Phone Book Memory Status

Main Menu ► Phone ► Memory Status

View handset/USIM Card Phone Book memory status.

S! Addressbook Back-up

Back up Phone Book entries to S! Addressbook (network server); synchronize handset Phone Book with S! Addressbook; restore Phone Book after accidental loss/alteration.

- Separate subscription is required for this service.

Notes

- Fully charge battery beforehand (🔋 appears).
- Transmission fees apply to synchronization, backup and restoration.
- Restoration cancels these Phone Book settings:
Ringtones, Notification Light, Picture
- Subscription to the service activates Auto Sync Settings during network information retrieval to back up edited Phone Book entries. Note that initiating network information retrieval activates Auto Sync Settings even when Auto Sync Settings are **OFF**. When contract is terminated, check if Auto Sync Settings are **OFF** (👉 P.4-13).
- **S! Addressbook is deleted upon contract termination.**
- **Addresses saved in Address field on handset Phone Book are saved to building name field in S! Addressbook.**
- **When number of characters saved in S! Addressbook exceeds maximum number of characters savable on handset Phone Book, excess characters do not appear on handset Phone Book.**

Synchronization/Back-up/Restoration

- Be careful of back-up/restoration timing or selecting a synchronization direction.
- When no handset Phone Book entries exist, selecting **Synchronize**, **Sync from Phone** or **Backup to Server** deletes S! Addressbook.
- When no S! Addressbook Back-up exist, selecting **Synchronize**, **Sync from Server** or **Restore from Server** deletes all handset Phone Book entries.

Capacity Disparities

- When the number of savable items varies between handset Phone Book and S! Addressbook, synchronization reflects lower limit.

Transfer to New Handsets

- S! Addressbook Back-up-compatible 3G Handsets: Data remains.
- Other 3G Handsets: Service subscription and data remains, but data is not accessible via handset (accessible via PCs).
- V3/V4/V5/V6/V8 Series: Service subscription is terminated and data is deleted.

Manual Synchronization

Main Menu ► Phone ► S! Addressbook Back-up
► Start Sync

- 1 → Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Synchronize	Synchronize handset Phone Book with S! Addressbook
Sync from Phone	Send edited data to S! Addressbook
Sync from Server	Receive edited data from S! Addressbook
Backup to Server	Back up handset Phone Book to S! Addressbook
Restore from Server	Restore S! Addressbook to handset Phone Book

- 3

Auto Synchronization

Main Menu ► Phone ► S! Addressbook Back-up
► Auto Sync Settings

- 1 **ON/OFF**
- 2 Enter Phone Password → **ON**
 - To cancel, select **OFF**.
- 3 Select an item (See below)

Item	Operation/Description
Weekly	Synchronize weekly at specified time of the day > Select a day → Set start time
Monthly	Synchronize monthly at specified time of the date > Enter a date → Set start time
After Editing Phone Book	Synchronize ten minutes after editing

- 4 Select a Sync type →

■ **View Auto Sync Settings**
> In Step 1, **Confirm Settings**

View Sync Log

View synchronization/back-up/restoration logs.

Main Menu ► Phone ► S! Addressbook Back-up
► Sync Log

- 1 Select a log
- **Delete Sync Log**
 - > In Step 1, (highlight a log →) [Menu] → **Delete One** or **Delete All** → (→ For **Delete All**, enter Phone Password)

Account Details





Save phone number, mail address, street address, etc. in Account Details.

Editing Account Details

- 1  → 
- 2  [Menu] → *Edit*
- 3 Select an item → Edit →  [Save]
 - Your subscribing phone number cannot be edited or deleted.

Account Details Functions

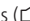In Account Details, press  [Menu] for following operations.

Item	Operation/Description
Edit	Edit Account Details ( From Step 3 above)
Send	Send details via S! Mail/Infrared > Attach to S! Mail or Infrared → Operate selected item (S! Mail:  From Step 2 on P.12-4/Infrared:  P.9-3) ● Image cannot be sent.
Reset	Reset Account Details (handset number remains) > 

Note

- Insert Account Details information to a message ( P.3-4).

Digital TV

- Basics** 5-2
- Initial Setup** 5-3
 - Channel Settings 5-4
- Watching TV** 5-5
 - Indicators 5-6
 - Program List (Japanese) 5-7
 - Data Broadcast (Japanese) 5-7
 - Functions while Viewing TV 5-8
- TV Links (Japanese)** 5-9
 - Saving TV Links 5-9
 - Opening TV Links 5-9
 - Functions Available in TV Link List 5-9

Basics

841P supports One Seg terrestrial digital TV broadcasting.

One Seg

One Seg is a digital TV broadcasting service for mobile phones.

For more information, visit The Association for Promotion of Digital Broadcasting Website:

[PC] <http://www.dpa.or.jp/>

[Handset] <http://www.dpa.or.jp/1seg/k/>

(Japanese only)

Features

Watch TV Programs (☞ P.5-5)	Watch One Seg Digital TV on handset.
View Data Broadcast (☞ P.5-7)	Access a variety of program-related information.

Precautions

- Digital TV is available only in Japan.
- Incoming calls/messages may affect TV image or audio quality while TV is activated.
- Digital TV may be disabled if USIM Card is not installed or SoftBank subscription is terminated.
- SoftBank is not liable for damages from accidental loss/alteration of handset information.
- Data saved to handset (TV Links, Channel List, etc.) cannot be restored after repairs or handset replacement. Back up important information.

Signal Reception Areas

TV signal reception may be poor in the following conditions:

- Too far from or close to broadcasting stations
- Mountain areas or near tall buildings
- In moving vehicles, underground, in tunnels, etc.
- Near high-voltage wires, neon lights, wireless base stations, railroad tracks or highways
- Areas with numerous signal obstructions or areas where signal reception is blocked

When Battery is Running Out

- Warning tone sounds and warning message appears if Digital TV is activated with low battery.
- When battery runs low while programs are on, confirmation appears.
- Watching TV while charging may shorten battery life.

Incoming Transmissions

TV pauses for incoming calls. Resume TV after call ends.

Broadcast Storage Area

Information entered in a Data Broadcast site is saved in Broadcast storage area, and used by network-affiliated TV stations.

Saved information may include personal information such as membership number, sex, age, occupation, etc.

Previously entered information may appear in Data Broadcast window or be sent to TV broadcast stations.

- Delete Information saved in Broadcast Storage Area (📄 P.16-15)

Initial Setup

Set channels for your area.

- Up to ten Channel Lists can be saved.

Main Menu ▶ TV ▶ Channel Settings ▶ Select Area

1 Select a region → Select a prefecture

2 

Note

- If manual setup fails, try automatic channel setup (📄 P.5-4).
- Handset detects a change in reception area after moving to a different area. Set Channel List for that area.

Channel Settings

Automatic Channel Setup

Main Menu ► TV ► Channel Settings

► Set from Current Location

1 

2 After channel search,  → Enter title

- If title is not entered, date (year/month/day/hour/minute) is automatically saved as title.

Using Channel List

From ► Main Menu ► TV ► Channel List

■ Set Channels

> Select a Channel List

- Channel List is set, and available channels appear.
- Select a channel to access the station.

■ Delete Channel List

> Highlight a Channel List →  [Menu] → *Delete One* → 

- Selected Channel List cannot be deleted.

■ Delete Channels from Channel List

> Highlight a Channel List →  [Menu] → *Channel Information* →

Highlight a channel →  [Menu] → *Delete One* → 

- Channels in selected Channel List cannot be deleted.

■ Edit Title

> Highlight a Channel List →  [Menu] → *Edit title* → Edit

■ Reassign a Remote Control Number (Keypad) to a Channel

> Highlight a Channel List →  [Menu] → *Channel Information* →


 [Menu] → *Set Remote Control No.* → Select a channel → Select a new remote control number →  [Complete] → 

Watching TV

- Set channels beforehand (➡ P.5-3).
- Change default view (➡ P.16-15)

1





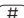


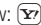

Viewer appears.

- To change view: 

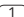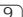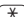

Viewer

2 Select a channel

Direct Channel Access	<p> - </p> <p> (Channel 10)</p> <p> (Channel 11)</p> <p> (Channel 12)</p>
Previous/Next Channel	<p></p>
Channel Search	<p>Press and hold </p> <ul style="list-style-type: none"> ● To stop:  [Cancel] / 

3 To end TV, →

Note


- Alternatively, **Main Menu** ► **TV** ► **Watch TV**.
- After TV pauses for incoming calls in Wide Screen, TV restarts in Normal Screen. To toggle screens, press .

Indicators

- Screenshots are provided for reference only.
Actual handset windows differ in appearance.

5

Digital TV

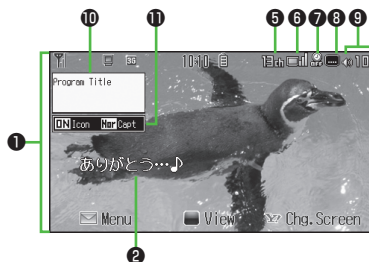

	Item	Description	Operation
①	Image	—	—
②	Captions	—	—
③	Data Broadcast	(☞ P.5-7)	—
④	Operation Mode	AV Mode Broadcast Mode	<ul style="list-style-type: none"> • Each key press toggles modes.
⑤	Channel	(☞ P.5-3)	—
⑥	Signal Strength Level	Strong ← → Weak Out of range	—
⑦	TV Off Timer	(☞ P.5-8)	—
⑧	Receiving Captions	—	—
⑨	Volume	—	<ul style="list-style-type: none"> • Adjust volume: ³ • Mute/Resume: ³ / (Side Key)
⑩	Program Title	—	/
⑪	Indicator/ Caption Setting ²	Indicators: ON/OFF Caption: Normal/Small/OFF	<ul style="list-style-type: none"> • Each key press toggles settings.
⑫	Display/Caption ¹	Display: ON/OFF Caption: ON/OFF	<ul style="list-style-type: none"> • Each key press toggles settings.

¹ Available only in Normal Screen ² Available only in Wide Screen ³ Available only in AV Mode

Program List (Japanese)

Check program schedules to view TV programs.

Main Menu ▶ TV ▶ Program List

- Confirmation appears when using Program List for first time. Follow onscreen instructions.
- See Program List Help menu for usage information.

■ View Program List while TV is Active


> [Menu] → *Program List*



- Alternatively, press  in Normal Screen.

Data Broadcast (Japanese)

- Access a variety of program-related information such as still images and videos.
- Data Broadcast is not available in Wide Screen.

1 Activate TV (AV Mode) →

 appears.

-  to select information
- To deactivate Data Broadcast Mode: 


Note

- Viewing Data Broadcast information requires no fees; however, accessing websites will incur connection fees.

Functions while Viewing TV

■ Sound Settings

> While TV is active, [Menu] → Select an item (See below)

Item	Operation/Description
Channel Information	View channel details. Select a channel to watch that station
Program Information	View current program information
Channel List	View current Channel List (☞ P.5-4)
Channel Settings	Set channels for your area (☞ P.5-3)
Add to Channel List	Add current station to Channel List >  ● Assign current station to lowest available number key.
Program List	View program list
Switch Settings	Switch screen/operation mode > Select an item · Switch Display : Change display view · Switch Operation Mode : Switch AV Mode/ Broadcast Mode in Normal Screen

Item	Operation/Description
Misc. Settings	> Select an item · TV Off Timer : Deactivate TV automatically after specified time elapses · Backlight Settings (☞ P.16-15) · Sound Settings : Set main/sub sound · Icon Always Display (☞ P.16-15)
Data Broadcasting	· Sound Effect : Turn on/off sounds from Data Broadcast/sites · Reset Confirmation Display : Show confirmation on Data Broadcast
Return to DBC*	End Data Broadcast site and return to Data Broadcast window
Tuning Service	Select a program when multiple programs are available from the same broadcasting company > Select a station or its affiliate
TV Link	Show TV Link details

* Available only when Data Broadcast Mode is on

TV Links (Japanese)

Saving TV Links

- Following function is not available in Wide Screen.

1 Switch Data Broadcast Mode on → Select a link




Follow onscreen instructions to save link.

Opening TV Links

Main Menu ► TV ► TV Link





1 Select a TV Link

- Confirmation appears when Internet access is required. Press  to proceed.
- If TV Link is expired, confirmation appears asking whether to delete link.

Functions Available in TV Link List

Main Menu ► TV ► TV Link

1  [Menu] → Select an item (See below)

Item	Operation/Description
Detailed Display	Show TV Link title, URL, summary, content type, expiration date
Number of TV Link	Show number of saved TV Links
Delete	<p>> Select an item</p> <ul style="list-style-type: none"> · <i>One</i> →  · <i>Selected Files</i> → Check TV link(s) →  [Menu] → <i>Delete</i> →  · <i>All</i> →  [YES] → Enter Phone Password

5

Digital TV

5-10