

Camera

| | |
|--|------------|
| Before Using Camera..... | 6-2 |
| Image File Formats | 6-2 |
| Notes | 6-2 |
| Camera | 6-2 |
| Camera Display Indicators..... | 6-3 |
| Pictures/Videos | 6-5 |
| Capturing Still Images..... | 6-5 |
| Recording Videos..... | 6-6 |
| Functions Available while Shooting | 6-6 |
| Viewing Saved Images | 6-8 |
| Magnifying Loupe..... | 6-8 |

Before Using Camera

841P features approximately **Two Mega Pixel CMOS Auto-focus Camera** capable of capturing still images and videos.

Image File Formats

Still images/videos are saved to **Data Folder**.

| Image Type | File Format | Save Location |
|--------------|---------------|------------------------|
| Still images | JPEG (.jpg) | Pictures (Data Folder) |
| Videos | MPEG-4 (.3gp) | Videos (Data Folder) |

- To save to Memory Card: [P.5-3](#)

Notes


- Remove dust/debris from lens cover with a soft cloth.
- Handset movement may blur images especially in dark places; hold handset firmly.
- Capturing/saving images immediately after handset has been left in a hot place may affect image quality.
- Exposing lens to direct sunlight may affect image quality.
- While Camera is active, Notification Light/Charging Indicator illuminates or flashes. Notification Light/Charging Indicator cannot be turned off.

Shutter Click

- Shutter click sounds at fixed volume even in Manner Mode.
- To change shutter click sound: [P.15-15](#)

Camera

Press **⏻** in Standby to activate Camera, or press **⏻** in Picture Preview Window to activate Video Camera; press and hold **⏻** in Standby to activate Magnifying Loupe ([P.5-8](#)).

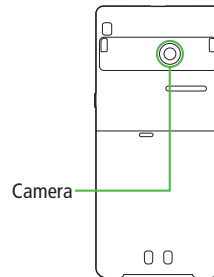

Note


- Alternatively, **Main Menu ▶ Camera ▶ Camera, Video Camera** or **Magnifying Loupe**.
- Camera is not available when battery is low.
- Incoming calls, Alarm and low battery cancel Camera. Captured images/recorded videos are saved.
- When left in preview window for three minutes, Camera is canceled and previous window returns.

Camera Display Indicators

● Images shown below are for reference only.

Picture Preview Window

● Press **[O]** to open key assignment guide.

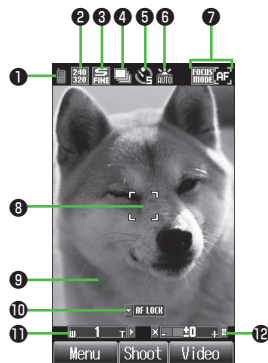


| | Item | Description | Operation |
|----|-------------------------|--|--|
| 1 | Save to | Phone Memory Card | [1] |
| 2 | Size | 1200 1600 UXGA 960 1280 SXGA 480 640 VGA 240 320 QVGA 120 160 QQVGA Wallpaper | [2] |
| 3 | Quality | Super Fine FINE Fine NORMAL Normal | [3] |
| 4 | Multi Shot (P.5-5) | Multi Shot | [4] |
| | Night Mode (P.15-15) | Night Mode | [6] |
| 5 | Self-Timer (P.5-6) | 5 seconds 10 seconds | [5] |
| 6 | White Balance (P.15-15) | Automatic Fine Cloudy Light Bulb | [8] |
| 7 | Focus Setting (P.15-15) | Auto Focus Close-up Scenery | [7] |
| 8 | Focus Guide (P.5-6) | Adjust focus automatically | — |
| 9 | Effect (P.15-15) | Normal/Sepia/Monochrome/Negative | [7] |
| 10 | Auto Focus Lock | Lock focus on the subject | [O] to set Auto Focus Lock |
| 11 | Zoom | Indicate zoom level (Level 1 to 25) | [Z] to zoom in/ [Z] to zoom out ● Long press: continuous zoom |
| 12 | Brightness | Adjust brightness (Level -2 to +2) | [#] Brighter/[*] darker |

Video Preview Window

- Press **[O]** to open key assignment guide.

6

Camera

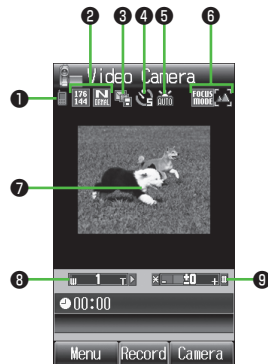

| | Item | Description | Operation | | | | | | | | |
|--------------|-------------------------|---|---|------------|------------|------|---------|--------|--------------|--|---|
| 1 | Save to | Phone Memory Card | [1] | | | | | | | | |
| 2 | Quality | <table border="1"> <tr> <td>352 / S</td> <td>Super Fine</td> </tr> <tr> <td>288 / FINE</td> <td>Fine</td> </tr> <tr> <td>176 / N</td> <td>Normal</td> </tr> <tr> <td>144 / NORMAL</td> <td></td> </tr> </table> | 352 / S | Super Fine | 288 / FINE | Fine | 176 / N | Normal | 144 / NORMAL | | [3] <ul style="list-style-type: none"> Available only when Recording Time is set to Extended Video. |
| 352 / S | Super Fine | | | | | | | | | | |
| 288 / FINE | Fine | | | | | | | | | | |
| 176 / N | Normal | | | | | | | | | | |
| 144 / NORMAL | | | | | | | | | | | |
| 3 | Recording Time | Attach to S! Mail Extended Video | [2] | | | | | | | | |
| 4 | Self-Timer (P.5-6) | 5 seconds 10 seconds | [5] | | | | | | | | |
| 5 | White Balance (P.15-16) | AUTO Automatic Fine Cloudy Light Bulb | [8] | | | | | | | | |
| 6 | Focus Setting (P.15-16) | FOCUS MODE Close-up FOCUS MODE Scenery | [9] | | | | | | | | |
| 7 | Effect (P.15-16) | Normal/Sepia/Monochrome/Negative | [7] | | | | | | | | |
| 8 | Zoom | Indicate zoom level (Level 1 to 25) | [Z] to zoom in/ [Z] to zoom out <ul style="list-style-type: none"> Long press: continuous zoom | | | | | | | | |
| 9 | Brightness | Adjust brightness (Level -2 to +2) | [#] Brighter/[*] darker | | | | | | | | |

Pictures/Videos

- Confirm battery strength (☞ P.1-9) and available memory (☞ P.15-15, P.15-16) before recording. When battery is low, video cannot be recorded.

Capturing Still Images

1 Press to activate Camera

2 Frame subject

3 [Shoot] to capture the image

Camera automatically focuses on subject before capturing image.


Shutter click sounds at fixed volume.

4 [Save]

- To return to preview window without saving the image:

5 to exit

Return to Standby.

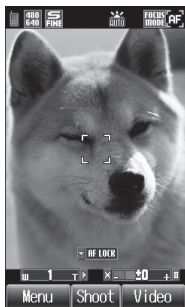

Picture Preview Window

Note

- Data Folder opens when Phone memory becomes full. Delete files; image is automatically saved.
- If save location is set to Memory Card and memory becomes full, image is saved to Phone memory automatically.

Continuous Shooting

Capture a succession of 15 still images automatically with a single press.

- Picture size is fixed to **QVGA (240x320)**.
- When **Multi Shot** is **ON**, Night Mode is set to **OFF** automatically.

1 In Picture Preview Window, (4)

2 Frame subject → [Shoot]

- Image thumbnails appear.
- To stop shooting halfway:
- To return to preview window without saving the image: [Delete] → Go to Step 1

3 To view captured images, to select an image

Full-size image appears.

- to toggle full-size images.

4 **When Viewing a Full-size Image**

[Save All] or [Save]

- Press [Save] to save the full-size image.

When Viewing Thumbnailed Images

[Menu] → **Save All Pictures** or

Save This One Only

Recording Videos

1 → to activate Video Camera

2 Frame subject

3 [Record] to start recording

Tone sounds.

4 [Stop] to end recording

Tone sounds.

- Recording stops automatically at maximum recording time.
- To return to preview window without saving the image: [Back]
- To review: **Playback**

5 To save the video, select **Save to Data Folder**

6 to exit

Return to Standby.



Video Preview Window

Note

- If Phone memory becomes full, Data Folder opens. Delete files; image is automatically saved.
- If save location is set to Memory Card, file is saved to Memory Card automatically. To delete the saved file, select **Delete**.

Functions Available while Shooting

From Camera:
Video Camera: →

Auto Focus Lock

To focus on an off-centered subject, lock focus on the subject and recompose your picture.

- Check if Focus Setting is set to **Auto Focus** (P.5-3).
- > Adjust Focus Guide to subject → → When focus is on subject, recompose your picture → [Shoot] → [Save]
- When in focus, handset sounds and Focus Guide turns green.
- To try again:

Self-Timer

- > → Frame subject → [Shoot]/[Record] (→ For Video Camera, [Stop] → [Save] or **Save to Data Folder**
- Self-Timer tone sounds. After set period of time, shutter is released and capturing starts.
- Press to toggle **5 seconds**, **10 seconds** and **OFF**.
- When Self-Timer is active, press [Cancel] to return to preview window without canceling Self-Timer.

Send Still Images via S! Mail

> Frame subject → [Shoot] → [S! Mail] → Create message
(☞ From Step 2 on P.12-4)

Send Video via S! Mail

● Set Recording Time to **Attach to S! Mail** beforehand (☞ P.5-4).
> Frame subject → [Record] → [Stop] → **Attach to S! Mail** → Create message (☞ From Step 2 on P.12-4)

Note

- Attach image files up to 290KB. Files exceeding the limit are saved to Data Folder. Resize still images to attach (☞ P.8-11).
- Images captured by handset Camera may rotate 90° on cross-carrier handsets or PC.

Set Still Images to Wallpaper

> Frame subject → [Shoot] → [W.paper]
● The image is saved to Data Folder.

Camera Settings

- Default Settings: ☞ P.15-15, P.15-16
- Available settings per image size are as follows.

Still Image

| Size | Zoom Level | Zoom Ratio* |
|-----------------|------------|-------------|
| UXGA(1200x1600) | — | — |
| SXGA(960x1280) | 1 - 2 | 1.3x |
| VGA(480x640) | 1 - 25 | 2.5x |
| QVGA(240x320) | 1 - 25 | 5.0x |
| QQVGA(120x160) | 1 - 25 | 10.0x |
| 壁紙(240x427) | 1 - 25 | 3.7x |

Video

| | Recording Time* | | Quality (Dots) | Zoom Ratio* |
|--------------------------|-----------------|-------------|------------------------|-------------|
| | Phone | Memory Card | | |
| Attach to S! Mail | 30 seconds | 30 seconds | Normal (176 x 144) | 6.8x |
| Extended Video | 160 seconds | 60 minutes | Normal (176 x 144) | 6.8x |
| | 85 seconds | 60 minutes | Fine (176 x 144) | 6.8x |
| | 30 seconds | 45 minutes | Super Fine (352 x 288) | 3.4x |

* Values are approximates.

- Video Camera zoom level: 1 - 25
- Set Night Mode to ON when capturing still images in dark places; record video in well-lit conditions.
- Pictures and Videos folders share memory with other folders in Data Folder. Files saved in other folders reduce available memory for picture/video files.
- The number of files that can be saved to Memory Card depends on the capacity of the card in use.

Viewing Saved Images

Main Menu ► Data Folder

- 1 Open Pictures
Pictures
Open Videos
Videos
- 2 Select a file



Example: Pictures

■ Open Pictures Saved on Memory Card

> After selecting *Pictures* in Step 1, *Switch to Digital Camera* → Select a folder

■ Open Videos Saved on Memory Card

> After selecting *Videos* in Step 1, *Switch to Video Camera* → Select PRL folder

Tip

- Editing Still Images (☞ P.8-11)

Magnifying Loupe

Use handset as a magnifying glass. Enlarged image appears on Display at camera's maximum zoom level. Freeze image on Display for easy viewing.

- 1 Press and hold

Magnifying Loupe is activated.

 - To adjust brightness: or
 - To adjust zoom:
 - Frame subject from as close ten centimeters. If focus detection stalls, adjust distance from subject by moving handset.
 - Press to adjust focus.
- 2 To freeze image on Display, [Still]
 - To cancel: [Back]

News/Entertainment

| | |
|---|------------|
| S! Information Channel/Weather (Japanese)..... | 7-2 |
| Registering/Canceling | 7-2 |
| Using S! Information Channel | 7-2 |
| Using Weather Indicator | 7-3 |
| Option Menu Items..... | 7-4 |
| S! Quick News (Japanese) | 7-5 |
| Registering S! Quick News Items | 7-5 |
| Opening New Information | 7-5 |
| E-Books (Japanese)..... | 7-6 |

S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear on Standby.

- Transmission fees apply for updates.
- Auto download is not available overseas.

Registering/Canceling

Main Menu ► News/Ent.

► S! Information Channel/Weather

1 Register/Cancel

Handset connects to the Network.
Follow onscreen instructions.

Using S! Information Channel

- Up to seven updates are saved.

Viewing New Information


When information arrives,  and Information window appears in Standby.

1 In Information window, **New S! Information Channel**

Information appears.

Follow onscreen instructions.

- Option Menu Items (☰ P.6-4)

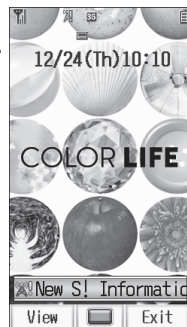

Manually Retrieve Information


Select **S! Information Channel** in Information window.

- Alternatively, Main Menu ► News/Ent.
► S! Information Channel/Weather ► Get Latest Contents.

Hide Information Window

> Main Menu ► News/Ent. ► S! Information Channel/Weather
► Missed Event settings(S! Information Channel) ► OFF

Note

- Alternatively, **Main Menu** ► **News/Ent.**
 - **S! Information Channel/Weather** ► **What's New?**
- If there is unread information in both S! Quick News and S! Information Channel,  does not appear. Only Information window appears.

Viewing Previously Received Information

Main Menu ► **News/Ent.**

► **S! Information Channel/Weather**

- 1 **History** → Select a date
 for unread news and  for read news appear.

Using Weather Indicator

Weather Indicator for current forecast area appears in Standby.

Viewing New Information

Information window appears for weather updates.


- 1 In Information window,
New Weather
Information appears.
Follow onscreen instructions.
 - Option Menu Items (☞ P.6-4)



Weather Indicator

Indicators are updated periodically.

Example)  Clear,  Rain, and thunderstorm later,

 Cloudy with occasional snow etc.

- Indicators other than the above also appear for more information.
(☞ P.16-19)

Manually Update Weather Indicator

Select **Weather** in Information window.

- Alternatively, **Main Menu** ► **News/Ent.**
 - **S! Information Channel/Weather** ► **Weather Indicator**
 - **Manual Update.**

Hide Information Window

- > **Main Menu** ► **News/Ent.** ► **S! Information Channel/Weather**
 - **Weather Indicator** ► **Missed Event settings(Weather)** ► **OFF**

Note

- Alternatively, view forecast details from **Main Menu** ► **News/Ent.**
 - **S! Information Channel/Weather** ► **Weather Indicator**
 - **Weather.**

Hiding Weather Indicator

Main Menu ► **News/Ent.**

- **S! Information Channel/Weather** ► **Weather Indicator**
- **Display Settings**

1 OFF

- When Display Settings is set to **OFF**, update is also deactivated.

Option Menu Items

Open information and press  [Menu] for these options.

| Item | Operation/Description |
|-----------------------|--|
| Forward | Go to next page |
| Text Copy | Copy page text |
| Page Operation | Jump to top/end of page |
| Select Item | View, play or save file to Data Folder (From Step 2 in Downloading Image/Sound Files: P.13-11) |
| More | Search text or enter URL |
| Yahoo! Keitai | View top menu |
| Settings | Change font size* and encoding type |

* Linked with Font Size setting in Internet option menu.

S! Quick News (Japanese)

Add news headlines, weather forecasts, etc. via S! Quick News List to scroll across Standby Window.

- Standby Window: P.1-19
- Registering or viewing S! Quick News incurs transmission fees. No fees apply for viewing ticker information. For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Auto download is not available overseas.

Registering S! Quick News Items

- Register one *News Flash*, up to four *General* news and one *Special* news.

Main Menu ▶ News/Ent. ▶ S! Quick News ▶ S! Quick News List

- 1 Register from here**
Yahoo! Keitai connects and contents list appears.
- 2 Select an item** →
Follow onscreen instructions.

Opening New Information

Viewing New Information in Standby

When new information is received, appears in Standby.

- 1** In Standby, to select ticker
Information (up to three lines) appears above ticker.
- 2** to check content
Content list appears.
- 3** Select information
Details appear.

Tip

- Settings** ● Show Only Unread Items in Standby ● Change Marquee Speed
● Image Download (P.15-17)

Opening S! Quick News List

Main Menu ► News/Ent. ► S! Quick News
 ► S! Quick News List

- 1 Select an item
Content list appears.
- 2 Select information
Detailed information appears.
- 3 To connect to the Network, select a title

■ Update Manually

> In Step 1, [Menu] → Update → One or All → 

■ View Summary

> In Step 1, highlight information → [Menu] → Summary Display

■ Delete Registered Items

> In Step 1, (highlight information →) [Menu] → Delete → One or All (→ For All, enter Phone Password)

Tip

Settings ● Automatically Update Special News ● Delete S! Quick News Information (P.15-17)

E-Books (Japanese)

Use BookSurfing® to acquire/view e-books, comics, photo books, etc.), or e-Book Viewer to view XMDF files on handset.

- BookSurfing® and e-Book Viewer are S! Appli.
- Download Content Keys (P.8-6) to read CCF/XMDF files.
- Some copy protected files have extensions different from the ones below.

| Application | File Format |
|---------------|-------------------------|
| BookSurfing® | CCF (.ccf) |
| e-Book Viewer | XMDF (.zbf, .zbk, .zbs) |

- Some PC content may not be viewable via e-Book Viewer.

1 *BookSurfing* or *e-Book Viewer*

- See application Help menu for usage information.

Note

- Launch BookSurfing®/e-Book Viewer via S! Appli, or select a file from Books in Data Folder.
- When purchasing a new handset, move CCF/XMDF files via Memory Card. However, if CCF/XMDF files are copy protected, Content Keys backup may be needed (☞ P.8-18). Some contents require another Content Key after being moved/copied to a new handset or cannot be moved/copied at all.

7

News/Entertainment

7-8

Media Player

| | |
|--|------------|
| Overview | 8-2 |
| Saving Music/Video | 8-3 |
| Downloading Music (Chaku-Uta®/Chaku-Uta Full®)/Video | 8-3 |
| Music Search | 8-3 |
| Using Media Player..... | 8-4 |
| Playback Window Indicators | 8-4 |
| Playing Music (Audio Player)..... | 8-4 |
| Playing Video (Video Player)..... | 8-6 |
| Playback Window Operations..... | 8-7 |
| Functions while Playing Files..... | 8-7 |
| Using Playlist..... | 8-8 |
| Playlist Functions..... | 8-9 |

Overview



Play music (Audio Player) or videos (Video Player) saved on handset/Memory Card.

- Playlist:  P.7-8

Notes


- Files may not play due to file support issues or Memory Card status, etc.
- When battery is low, Media Player cannot play files.
- When playing files, Notification Light flashes.
- Playback stops for incoming calls, Alarm and low battery.
- If messages are received while Media Player is active, ringtone does not sound. Ticker scrolls across Display, Notification Light flashes and handset vibrates to inform you of new messages.
- Notification Light/Charging Indicator lights during playback; playback notification light does not light.

Copy Protected Files

Copy protected files may not play, be saved or forwarded. To play a copy protected file, obtain Content Key ( P.8-6).
Confirm file expiry date or usage limitations ( P.7-8).

Saving Music Files on PCs

When saving music files to Memory Card via PC for use with 841P, observe the following guidelines:

- Copyrighted Works
 - Do not infringe on third party/intellectual property rights.
 - Memory Card music files are limited to private use.
- Save files to specified Memory Card directory ( P.8-17)

Saving Music/Video

Downloading Music (Chaku-Uta®/Chaku-Uta Full®)/Video

Access websites directly from Media Player to download music (Chaku-Uta®/Chaku-Uta Full®) or video files.

- View details (price, expiry date, etc.) on source website.

Main Menu ► Media

1 Download Music (Chaku-Uta®/Chaku-Uta Full®)

Audio → *Download Music* → 

Download Video

Video → *Download Videos* → 

Handset connects to the Network and Download site appears.
Follow onscreen instructions to download files.

Music Search

Search by artist or title to download music files.

Main Menu ► Media ► Audio ► Music Search

1

Follow onscreen instructions to download music files.

Using Media Player

Playback Window Indicators



Playback Mode Indicators



- Change playback mode: P.7-7

Note

- Titles or artist names may not appear depending on files.

Playing Music (Audio Player)

Supported File Formats

| File Format | | Extensions |
|-------------|------------------|----------------------|
| MPEG-4 File | AMR-NB | .3gp .mp4 .m4a |
| | AAC-LC | |
| | aacPlus | |
| | Enhanced aacPlus | |
| | SMC | .smc |

- Some files may not play even if format is supported.
- Some copy protected files have extensions different from the ones above.

Main Menu ▶ Media ▶ Audio

1 Select an item (See below)

| Item | Operation/Description |
|-----------|--|
| All | Select files from handset & Memory Card |
| Music | Select files from Music folder |
| Ring Song | Select files from Ring Song folder |
| Playlist | Select group of files saved to Playlist > Select a Playlist |

● Press to select files from Memory Card.

2 Select a file

Selected file plays.

● Playback Window Operations: P.7-7

3 To end, or [Back] → [NO]

● To return to Playback window:

Change Playback Position

> During playback, [Menu] → **Set Playback Position** → Enter time to start playback

Background Music

Listen to music while using other handset functions.

1 While music plays, or [Back] →

● To cancel Background Music: In Standby, →

Note

- Unavailable for some functions (S! Appl, etc.).
- While Background Music plays, volume level and playback mode settings cannot be changed.
- Alternatively, end playback from **Main Menu ▶ Media ▶ Audio ▶ Display Playback Screen** ▶ or [Back] ▶ [NO].

Playing SMC Files

Play SMC (Softbank Music Content) files; CD jackets and lyrics appear during playback.

The first jacket appears when playback starts.

- When appears, press to toggle jacket window and lyric window.
- To view next or previous jacket/lyric window, press or .

Playing Video (Video Player)

Supported File Formats

| File Format | Extensions |
|-------------|------------|
| MPEG-4 | .3gp |
| H.263 | .mp4 |

- 841P supports Sub-QCIF, QCIF, QVGA, CIF and video files recorded by SoftBank handsets to send via S! Mail.
- Playing QVGA video switches display to Full Screen (↵ Right), and image rotates 90°. Press (O) to switch to normal Playback window.
- Some files may not play even if format is supported.
- Some copy protected files have extensions different from the ones above.

Main Menu ▶ Media ▶ Video

1 Select an item (See below)

| Item | Operation/Description |
|--------------|---|
| All | Select files from handset & Memory Card |
| Video Folder | Select files from Videos folder |
| Playlist | Select group of files saved to Playlist |

- Press (C) to select files from Memory Card/Video Camera folder.

2 Select a file

Selected file plays.

- Playback Window Operations: ↵ P.7-7

3 To end, (↵)

Full Screen Playback

Press (O) to switch to Full Screen during playback. Playback window rotates 90°.

- To return to Normal Screen, press (O) again.
- Press (S) in Full Screen mode to rotate Playback window 180°. To return to Normal Screen, press (S) again.
- Last Playback window selected appears first.

Playback Window Operations

| | |
|--|--|
| Adjust Volume ¹ | |
| Replay Track | <ul style="list-style-type: none"> ● Play previous within first three seconds of a track. |
| Play Previous | twice (once, within first three seconds of a track) |
| Play Next | |
| Rewind ² | Press and hold |
| Forward ² | Press and hold |
| Pause/Resume | |
| Stop | Music: twice or → Video: or |
| View Next Jacket/Lyric ³ | |
| View Previous Jacket/Lyric ³ | |
| Switch Jacket/Lyric Display ³ | |
| Show Full Screen ⁴ | |
| Rotate Playback window 180° in Full Screen mode ⁴ | |

¹ Media Player activates at last used volume level.

² Rewind/Forward may be unavailable when playing files via other applications.

³ Supports during SMC file playback only

⁴ Supports during video playback only

Functions while Playing Files

Change Playback Mode

<Default> Play All

- Confirm playback mode settings in Playback window (Playback Mode Indicators: P.7-4).

- Media Player activates in last used mode.

> **Main Menu** ▶ **Media** ▶ **Audio** or **Video** ▶ **Playback Mode**

- ▶ Select a mode (See below)

| Item | Operation/Description |
|-----------------|--|
| Play All | Play all files in selected folder/Playlist |
| Play Once | Play selected file |
| Repeat Track | Repeat selected file |
| Continuous Play | Repeat all files in selected folder/Playlist |
| Random Play | Play selected folder/Playlist files randomly |

Options

> During playback, [Menu] → Select an item (See below)

| Item | Operation/Description |
|--|--|
| Playback/ Pause | Play or pause files |
| Playback Mode | Select playback mode (P.7-7) |
| Display Jacket/ Display Lyric¹ | Show lyric or jacket |
| Next Jacket/ Next Lyric¹ | Show next jacket or lyric |
| Previous Jacket/ Previous Lyric¹ | Show previous jacket or lyric |
| Full Screen (Video)/Normal Screen² | Select display size for video playback |
| Upside down(Full Screen)² | Rotate Full Screen Playback 180° |
| Set Playback Position | Start playback from specified point |
| Connect to URL³ | Open site link; music plays as BGM |
| Property | Show file details |
| Help | Show Playback window key assignments |

¹ Supports during SMC file playback only

² Supports video playback only

³ May not be available for some files

Using Playlist

Use Playlists to organize Data Folder music/video files. Select Ring Songs-Tones, Music or Videos folder files to create Playlist links to each file in its original folder.

Note

- A single Playlist cannot contain both music and video files, or files from both handset and Memory Card.
- Some files cannot be added to Playlist.

Creating New Playlists

- Create up to 30 Playlists on handset and Memory Card each.
- Add up to 99 files to a single Playlist.

Main Menu ► Media ► Audio or Video ► Playlist

1 [Menu] → *Create Playlist*

2 Enter a Playlist name

A new Playlist is added to top of list.

3 Select a Playlist → [Menu] →
Add

4 *Add Files to Music Playlists*

Music or *Ring Song* → Select a file

Add Files to Video Playlists

Select a file

- To playback Playlist: P.7-5, P.7-6



Playlists Window

Playlist Functions

Functions Available in Playlist Window

> Main Menu ► Media ► Audio or Video ► Playlist

► (highlight a Playlist) ► [Menu] ► Select an item (See below)

| Item | Operation/Description |
|--------------------|-------------------------------------|
| Select | Select a Playlist |
| Playback Mode | Change playback mode (P.7-7) |
| Create Playlist | Create new Playlists (Left) |
| Edit Playlist Name | Change Playlist name > Edit name |
| Delete | Delete Playlists (P.7-10) |

Change Playlist Order

> Main Menu ► Media ► Audio or Video ► Playlist

► Select a Playlist ► Highlight a file ► [Menu] ► Change Order
► Select new playback order

- The Playlist moves to above the selected order.

Deleting Playlists/Files

From ► **Main Menu** ► **Media** ► **Audio or Video** ► **Playlist**

■ Delete Playlists

> Follow the steps below

| Item | Operation/Description |
|----------------|---|
| One | > Highlight a Playlist → [Menu] → <i>Delete</i> → <i>One</i> → [YES] |
| Selected items | > [Menu] → <i>Delete</i> → <i>Selected Files</i> → Check Playlists → [OK] → [YES] |
| All | > [Menu] → <i>Delete</i> → <i>All</i> → [YES] → Enter Phone Password |

■ Delete Files in a Playlist

> Select a Playlist → Follow the steps below

| Item | Operation/Description |
|----------------|---|
| One | > Highlight a file → [Menu] → <i>Delete</i> → <i>One</i> → [YES] |
| Selected items | > [Menu] → <i>Delete</i> → <i>Selected Files</i> → Check files → [OK] → [YES] |
| All | > [Menu] → <i>Delete</i> → <i>All</i> → [YES] → Enter Phone Password |

Managing Files

| | |
|---|-------------|
| Data Folder | 9-2 |
| Data Folder Structure..... | 9-2 |
| Opening Files..... | 9-4 |
| Viewing & Playing Files..... | 9-4 |
| Copy Protected Files..... | 9-5 |
| File Display/Playback Functions..... | 9-6 |
| Options..... | 9-7 |
| Using/Editing Files..... | 9-9 |
| Using Files..... | 9-9 |
| Editing Still Images..... | 9-11 |
| Managing Folders & Files | 9-12 |
| Managing Folders/Files..... | 9-12 |
| Memory Card..... | 9-13 |
| Memory Card Installation | 9-14 |
| Formatting Memory Card..... | 9-15 |
| Viewing Memory Card Files | 9-15 |
| Handset Data Backup | 9-15 |
| PC File Transfers | 9-17 |
| Memory Card Functions..... | 9-18 |

Data Folder

Save, play and manage files downloaded from Internet, etc.

- Access websites directly from Pictures, My Pictograms, Mail Art, Ring Songs-Tones, S! Appli, Music, Videos, Books and Templates folders, and download files to handset.

Data Folder Structure

| Folder | Data | File Format | Saved to |
|------------------|---|---|--|
| Pictures | Still images captured by handset or downloaded still images, etc. | JPEG (.jpg/.jpeg/.jpe/.jfif), GIF (.gif), PNG (.png), BMP (.bmp), WBMP (.wbmp) JPEG (.jpg) saved in Digital Camera | Phone Memory Card* Digital Camera* |
| | My Pictograms folder: Downloaded My Pictograms | GIF (.gif), GPK (.gpk) | Phone Memory Card* |
| | Mail Art folder: Downloaded Mail Art files | JPEG(.jpg .jpeg .jpe .jfif)/GIF(.gif) | Phone Memory Card* |
| Ring Songs-Tones | Downloaded sound files or sounds recorded by Voice Recorder, etc. | SMAF (.mmf), SP-MIDI (.mid/.midi), Mobile XMF (.mxmf), AMR-NB (.amr), MPEG-4 (.3gp/.mp4/.m4a) | Phone Memory Card* |
| S! Appli | S! Appli (☞ P.14-1) | Java | Phone Memory Card* |
| Music | Downloaded music files, etc. | MPEG-4 (.3gp/.mp4/.m4a/.smc) | Phone Memory Card* |
| Videos | Videos recorded by handset or downloaded video files, etc. | MPEG-4 (.3gp/.mp4) | Phone Memory Card* Video Camera* |
| Books | E-comics, etc. | CCF (.ccf), XMDF (.zbf/.zbf/.zbs) | Phone Memory Card* |
| Templates | Graphic Mail Templates (☞ P.12-6) | HTML (.hmt) | Phone |

| Folder | Data | File Format | Saved to |
|-----------------|--|--------------------|-----------------------|
| Flash(R) | Downloaded Flash® image files | SWF (.swf) | Phone Memory Card* |
| | Flash(R) Ringtones folder: Downloaded Flash® sound files | | |
| Other Documents | Other files | Other format files | Phone Memory Card* |

* Available only when Memory Card is installed

- Some copy protected files have extensions different from above.

Note

- These folders can be opened from other functions.
 - **S! Appli:** **Main Menu** ► **S! Appli** (☞ P.14-1)
 - **Templates:** **Main Menu** ► **Messaging** ► **Templates** (☞ P.12-6)
- 841P does not support Progressive JPEG files.

■ View Current Memory Status

> **Main Menu** ► **Data Folder** ► **Memory Status** ► **Phone** or **Memory Card**


Opening Files

Viewing & Playing Files

Main Menu ▶ Data Folder

1 Select a folder

Pictures and Videos appear in Thumbnail view by default.

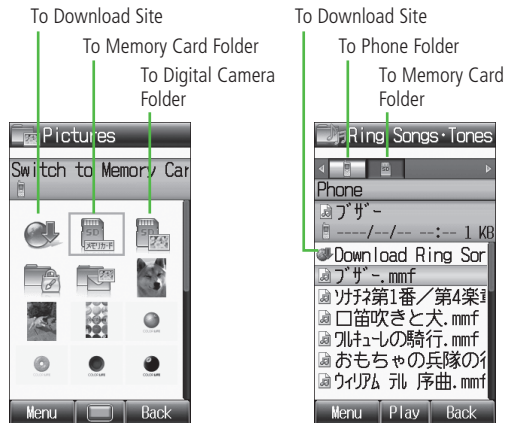

Pictures (Thumbnail)

Ring Songs-Tones (List)

2 Select a file

File appears/plays.

Change Memory View

- > In List view, to switch views, Phone, Memory Card, Digital Camera¹ or Video Camera²
- > In Thumbnail view, select (Memory Card), (Digital Camera)¹ or (Video Camera)² → To return to handset memory, select (Phone)

¹ In Pictures folder only

² In Videos folder only

Change Folder View

Select Thumbnail or List for Pictures/Videos view.

- > In Step 1, **Pictures** or **Videos** → [Menu] → **More**
→ **Change View** → **Thumbnail** or **List**

Note

- Some still images may not appear, or may be reduced in size depending on image or file size.
- 841P supports MPEG-4 and H.263 formats, and Sub-QCIF, QCIF, QVGA and CIF size. Video files that were recorded by SoftBank handsets and can be sent via S! Mail are also supported. Some files may not play even if format and size are supported.

Tip


- Playback Window Operations (☞P.7-7)
- Viewing e-Books & Documents (☞P.6-6)
- Using S! Appli (☞P.14-3)

Changing Playback Method

Main Menu ► **Data Folder** ► **Ring Songs·Tones, Music or Videos**

- 1 Highlight a file →  [Menu] → *Playback Method*
- 2 Select a method

| | |
|------------------------|--|
| Continuous Play | Repeat all files in selected folder |
| Random Play | Play all files in selected folder randomly |
| Repeat Track | Repeat selected file |

- Confirm playback method settings in Playback window (Playback Mode Indicators:  P.7-4).









Note

- When selecting Continuous Play or Random Play, playback starts from the file selected in Step 1.

Copy Protected Files

Playing/forwarding/saving may be restricted and Content Key may be required for usage.

If Content Key is expired, obtain a new Key to use file.

-  or  (Silver) appears for copy protected files requiring Content Keys.  files are accessible.  files are inaccessible.  appears on images in Thumbnail view of expired files.
- When deleting  files or folders containing  files, confirmation appears asking whether to delete corresponding Content Key. Other files requiring same Content Key may become unusable.
- See Property to confirm restrictions such as expiry term or usage limitation (Options:  P.8-7)
- 841P holds up to 1000 Content Keys. Multiple Keys may be required to use a file.

Using Copy Protected Files

- Files downloaded on 841P cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- When set as Wallpaper or Ringtone, license expiry or inserting a different USIM Card may reset default.
- Limited use files cannot be set as Wallpaper or Ringtone.

Obtaining Content Key

If Content Key is expired, a message appears when the file is opened. To obtain a new Key, press [M] [YES]. 841P connects to Content Key site.

Note

- Alternatively, obtain Content Key as follows: Highlight a file → [M] [Menu] → *More* → *Download Content Key* → [G].
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- When 1000 Content Keys have been saved, a message appears. Delete old Keys; otherwise downloads may fail (transmission fees apply).

Tip

- Back Up Content Key (P.8-18)

File Display/Playback Functions

From ▶ Main Menu ▶ Data Folder

View Still Images at Original Size

> *Pictures* → Select a file → [Z] [Zoom] → [X] to change the position

- Press [P] to return.
- Still images larger than VGA (480x640) appear at VGA (480x640).

Rotate Still Images

> *Pictures* → Select a file → [Y] [Rotate R] → [M] [Rotate L] or [Y] [Rotate R]

- Press [P] to return.

View File Properties

> Select a file → Highlight a file → [M] [Menu] → *More* → *Property*

- Available information varies by file.

Options

Highlight a file in Data Folder, and press [Menu] for the following operations.

■ Pictures

| Item | Operation/Description |
|----------------------------------|--|
| View | Open files |
| Send ¹ | Send files via S! Mail (P.8-10) or Infrared (P.9-3) |
| Send S! Mail ² | Send files via S! Mail |
| Set as ¹ | Set as wallpaper (P.8-9), Phone Book image, Main Menu Icons (P.8-10), etc. |
| Edit ¹ | Resize files, trim files, rotate files, add frame, clear shadow, etc. (P.8-11) |
| Rename | Change file names (P.8-12) |
| New Folder ¹ | Create new folders (P.8-12) |
| Move | Move files to other folders (P.8-13) |
| Copy | Copy files (P.8-13) |
| Delete | Delete files (P.8-12) |
| More | Change folder view ¹ (P.8-4), obtain Content Key ¹ (P.8-6), open Memory Card folder/Phone folder/Digital Camera folder ¹ , view file properties (P.8-6) |

¹ Picture files only

² My Pictogram/Mail Art files only

■ Ring Songs-Tones, Music, Videos

| Item | Operation/Description |
|----------------------------|---|
| Play | Play files |
| Send | Send files via S! Mail (P.8-10) or Infrared (P.9-3) |
| Set as ¹ | Set ringtone (Voice Call, Video Call and messages) (P.8-9) or save to Phone Book (P.8-10) |
| Playback Method | Select playback method (P.8-5) |
| Rename | Change file names (P.8-12) |
| New Folder | Create new folders (P.8-12) |
| Move | Move files to other folders (P.8-13) |
| Copy | Copy files (P.8-13) |
| Delete | Delete files (P.8-12) |
| More | Change folder view ² (P.8-4), obtain Content Key (P.8-6), open Memory Card folder/Phone folder/Video Camera folder ² , view file properties (P.8-6) |

¹ Ring Songs-Tones and Music only

² Videos only

■ Books

| Item | Operation/Description |
|--------------------|--|
| Play | Play files |
| Jump to Web | Connect to website from linked files |
| Send | Send files via S! Mail (📧 P.8-10) or Infrared (📡 P.9-3) |
| Rename | Change file names (📁 P.8-12) |
| New Folder | Create new folders (📁 P.8-12) |
| Move | Move files to other folders (📁 P.8-13) |
| Copy | Copy files (📁 P.8-13) |
| Delete | Delete files (📁 P.8-12) |
| More | Obtain Content Key (📁 P.8-6), open Memory Card folder/Phone folder, view file properties (📁 P.8-6) |

■ Flash(R)

| Item | Operation/Description |
|-------------------------------------|--|
| Play | Play files |
| Send | Send files via S! Mail (📧 P.8-10) or Infrared (📡 P.9-3) |
| Set as Wallpaper¹ | Set as Wallpaper (📁 P.8-9) |
| Set as² | Set ringtone (Voice Call or Video Call) (📁 P.8-9) or save to Phone Book (📁 P.8-10) |
| Rename | Change file names (📁 P.8-12) |
| New Folder | Create new folders (📁 P.8-12) |
| Move | Move files to other folders (📁 P.8-13) |
| Copy | Copy files (📁 P.8-13) |
| Delete | Delete files (📁 P.8-12) |
| More | Obtain Content Key (📁 P.8-6), open Memory Card folder/Phone folder, view file properties (📁 P.8-6) |

¹ Flash® image files only

² Flash® sound files only

Other Documents

| Item | Operation/Description |
|-------------------|--|
| Rename | Change file names (☞ P.8-12) |
| New Folder | Create new folders (☞ P.8-12) |
| Move | Move files to other folders (☞ P.8-13) |
| Copy | Copy files (☞ P.8-13) |
| Delete | Delete files (☞ P.8-12) |
| More | Open Memory Card folder/Phone folder, view file properties (☞ P.8-6) |

Using/Editing Files

Using Files

Wallpaper

From ▶ **Main Menu** ▶ **Data Folder**

Select from Pictures Folder

> *Pictures* → Highlight a file → ☑[Menu] → *Set as* → *Wallpaper*

Select from Flash(R)

> *Flash(R)* → Highlight a file → ☑[Menu] → *Set as Wallpaper*

Ringtones

From ▶ **Main Menu** ▶ **Data Folder**

Select from Ring Songs-Tones/Music Folder

> *Ring Songs-Tones* or *Music* → Highlight a file → ☑[Menu] → *Set as* → Select an item (→ For SMC file, highlight a Play Point → ☑[Set])

Select from Flash(R) Folder

> *Flash(R)* → *Flash(R) Ringtones* → Highlight a file → ☑[Menu] → *Set as* → Select an item

- Flash® Ringtones cannot be set as *Message Ringtone*.

Saving to Phone Book

From ► **Main Menu** ► **Data Folder**

■ Save a Still Image to a Phone Book Entry

- Unavailable when *Change View* is *USIM*.

> **Pictures** → Highlight a file → [Menu] → **Set as**
 → **Phone Book Picture** → Select a Phone Book entry (→ When warning message appears, [OK] → Enter file name) → [Save]

■ Save Sound/Music Files to a Phone Book Entry

> **Ring Songs-Tones** or **Music** → Highlight a file → [Menu] → **Set as** → **Add to Phone Book** (→ For SMC files, highlight a Play Point → [Set]) → Select a Phone Book entry → Select a ringtone ([Voice Call Ringtone/ [Video Call Ringtone/ [Message Ringtone]) → [Save]

■ Save Flash® Sound Files to a Phone Book Entry

> **Flash(R)** → **Flash(R) Ringtones** → Highlight a file → [Menu] → **Set as** → **Add to Phone Book** → Select a Phone Book entry → Select a ringtone ([Voice Call Ringtone/ [Video Call Ringtone]) → [Save]

Main Menu Icons

From ► **Main Menu** ► **Data Folder** ► **Pictures**
 ► Highlight a file ► [Menu] ► **Set as**
 ► **Main Menu Icons**

■ Change Background

> **Change Full Image** → [Back] → [Back]*

* Handset returns to Pictures folder top menu.

■ Change Menu Icons

> **Change Image** → Select an icon → [Back] → [Back]*

* Handset returns to Pictures folder top menu.

Sending Files via S! Mail

> **Main Menu** ► **Data Folder** ► Select a folder ► Highlight a file
 ► [Menu] ► **Send** ► **Attach to S! Mail** ► Enter information
 ► [Send]

Note

- Sounds recorded by Voice Recorder cannot be set as Ringtones.

Editing Still Images

- Edit features are not available for some file types.

Main Menu ► Data Folder ► Pictures

- 1 Highlight a file → [Menu] → *Edit*
- 2 Select an item (See below)

| Files | Operation/Description |
|---------------------------|--|
| Resize | Change image size > Select an image size → <ul style="list-style-type: none">• To start over: After selecting file size, [Back] |
| Rotate | > (When warning message appears, →) [Rotate L] or [Rotate R] → <ul style="list-style-type: none">• Images captured by handset Camera may rotate 90° on cross-carrier handsets or PC. |
| Add Frame | > Select a frame → <ul style="list-style-type: none">• To change frame: to toggle frames• Available only for Wallpaper(240x427), QQVGA(120x160) and QVGA(240x320) |
| Trimming | > Trim to preset size: Select a size → to move rectangle to crop point → > Trim to selected size: Free Size → to move [] to specify the area → → to adjust crop point → <ul style="list-style-type: none">• To start over: After setting crop point, [Back] |
| Super Clear Shadow | > (When warning message appears, →) |

3 Enter file name

Managing Folders & Files

The following operations are available in Pictures, Ring Songs-Tones, Music, Videos, Books, Flash(R) and Other Documents.

- Digital Camera, Video Camera, S! Appli, My Pictograms, Mail Art and Templates do not support new folders.
- Only names of created folders and files can be changed.
- Digital Camera and Video Camera folder names are fixed.

Main Menu ► Data Folder

- 1 Select a folder → (Highlight a folder →) [Menu] → Select an item (See below)

| Item | Operation/Description |
|--------------------------------|--|
| Open | Open folders |
| Playback Method ¹ | Select playback method (⏮ P.8-5) |
| Rename | Change folder names > Enter folder name |
| New Folder | Create new folders > Enter folder name |
| Delete | Delete folders (⏮ Right) |
| More ² | Change folder view (⏮ P.8-4), open Memory Card folder, open Digital Camera folder/Video Camera folder, open Phone folder |
| Memory Card/Phone ³ | Open Memory Card folder/Phone folder |

¹ Ring Songs-Tones, Music and Videos only

² Pictures and Videos only

³ Ring Songs-Tones, Music, Books, Flash(R) and Other Documents only

Managing Folders/Files

From ► Main Menu ► Data Folder ► Select a folder

Delete Folders/Files



> (Highlight a folder or file →) [Menu] → Delete → Select an item (See below)

| Item | Operation/Description |
|----------------|---|
| One | > [YES] (→ If confirmation appears, [YES] or [NO] → When selecting a folder, enter Phone Password) |
| Selected Files | > Check files → [Menu] → Delete → [YES] → [YES] (→ If confirmation appears, [YES] or [NO]) ● To select all files or release all checkmarks: [Menu] → Check All or Uncheck All |
| All | > [YES] → in confirmation window, [YES] or [NO] → Enter Phone Password |

- Some files may not be deleted.
- Folders including undeleted files cannot be deleted.
- Multiple folders cannot be selected.

■ Move/Copy Files

> (Highlight a file →)  [Menu] → *Move* or *Copy* → Select an item (See below) → Select a folder (→ For *Selected Files* or *All*,  [YES])

| Item | Operation/Description |
|----------------|--|
| One | Move/Copy a file |
| Selected Files | Move/Copy multiple files > Check files →  [Menu] → <i>Move</i> or <i>Copy</i> ● To select all files or release all checkmarks:  [Menu] → <i>Check All</i> or <i>Uncheck All</i> |
| All | Move/copy all the folders/files in a folder |

- Only JPEG files saved in handset memory can be moved/copied to Digital Camera folder.
- Only Video files saved in handset memory can be moved/copied to Video Camera folder.
- In Other Documents folder, copy protected files can be copied, but handset does not recognize copyright.
- Files may not be moved/copied depending on file format or data.
- Forward protected files may be moved to other folders by retrieving Network information (📄 P.1-14).
- After being copied/moved between handset and Memory Card, some files may be unusable on other SoftBank handsets or PCs, etc.


Memory Card

- 841P is compatible with up to 2 GB commercial Memory Cards (as of November 2009). For information on memory card compatibility, visit the website below (Japanese). Note that Memory Cards not listed on the website may not function properly.
 - From Yahoo! Keitai
P-egg (as of November 2009)
Main Menu ▶ Yahoo! ▶ Bookmarks
▶ Panasonic Site (P-egg)
 - From PC
<http://panasonic.jp/mobile/>
 Not all operations are guaranteed by the Memory Cards listed.
- Format new Memory Cards for use with handset (📄 P.8-15).

Note


- SoftBank is not liable for damages from accidental loss/alteration of Memory Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- Memory Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.

Memory Card Installation





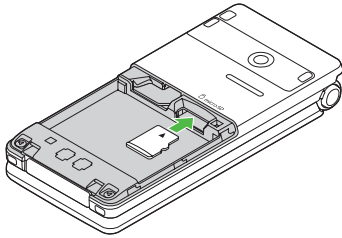

- Turn off handset before inserting/removing Memory Card.
- Battery Installation:  P.1-12

Inserting

- 1 Insert Memory Card until it clicks




Memory Card Check


When Memory Card is installed correctly,  appears. If  appears, Memory Card cannot be used. Remove Memory Card from handset, and re-insert it. If  does not disappear, check Memory Card ( P.8-18) or format Memory Card ( P.8-15). (Display Indicator:  P.1-8)

Removing

- 1 Gently push Memory Card in
 - Memory Card pops out with a light push.

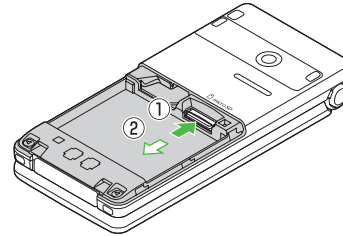

Note

- Do not remove Memory Card or battery while  flashes. Memory Card may be damaged or files lost.
- Memory Card may pop out when inserting/removing it.

Formatting Memory Card

- Formatting Memory Card deletes all saved files/data.

Main Menu ► **Settings** ► **Memory Card Manager**
 ► **Format Memory Card**

1  → Enter Phone Password

Note

- Do not turn handset power off or remove Memory Card or battery while formatting; may damage handset or Memory Card.
- Memory Cards formatted on other devices may not be used. Format Memory Card on 841P before use.
- Handset cannot format incompatible Memory Cards.
- If format fails, turn power off and remove Memory Card from handset. Reinsert Memory Card and format it again.

Viewing Memory Card Files

View files in Memory Card from Data Folder. To toggle memory views, see "Viewing & Playing Files" (☞ P.8-4).

Note

- View up to 1000 Memory Card files/folders on handset. To view hidden Memory Card files/folders, delete files, then turn handset power off and restart it. Previously hidden files appear in equal number to those that were deleted.
- Files with names over 32 alphanumeric/extensions over six alphanumeric cannot be viewed.
- Unsupported files cannot be viewed.

Handset Data Backup

Back up handset data (Phone Book, Calendar, Messages, Bookmarks, Content Keys) to Memory Card; restore handset data after accidental loss/alteration.

- Back up Content Key: ☞ P.8-18

Notes

- Backup is not available when battery is low.
- Check memory beforehand (☞ P.8-3).
- Handset transmission unavailable during backup/restoration.
- When restoring files other than Content Keys from Memory Card, the same type files are all deleted from handset before restoration. Back up files saved on handset beforehand.
- Backup files created on other SoftBank handsets may not be restored or usable on 841P.
- Settings such as Reminder, Schedule Tone and Notification Light cannot be backed up/restored.
- Schedule entries that date/time are not specified cannot be restored. Schedule entries that cannot be saved on handset (☞ P.11-3) cannot be restored.
- The initial portion of S! Mail messages are restored as complete S! Mail messages, and complete message retrieval is invalidated.
- Mail Delivery Rule for Incoming Mail folder cannot be backed up/restored.
- Depending on contents, Phone Book/Schedule entries, messages or bookmarks may not be backed up/restored, or may be altered beyond the parameters.

Backup/Restore

Main Menu ► Settings ► Memory Card Manager
 ► Memory Card Backup/Restore

- 1 Enter Phone Password
- 2 Select an item
 - For **Messaging**, select a messaging folder
- 3 **Backup**
Copy to Memory Card →

Restore

Overwrite to Phone →

→ Select a file →


- Backup date serves as file name.
 Example: "090202000.vcf" indicates that the file was backed up on 2 February 2009
- Backup files restored from Incoming Mail/Sent Messages folders are saved to Received/Sent folders.

Delete Backup Files

> In Step 3, **Overwrite to Phone** → → Highlight a file

→ [Menu] → **Delete** →

- Content Key backup files cannot be deleted.

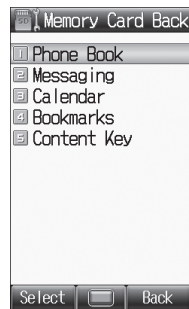

PC File Transfers

Files moved or copied from handset to Memory Card are organized as follows:

- Save files in folders by file type. See "Using Files" (☞ P.8-9) for more about files.

| | | |
|---|-------------------|------------------------------|
| DCIM | | |
| <ul style="list-style-type: none"> ● Still images saved to Memory Card ● Still images moved/copied to Digital Camera folder | | |
| PRIVATE | | |
| MYFOLDER | | |
| Utility | | |
| Calendar | Calendar.BCK | Schedule Backup files |
| Contacts | Contacts.BCK | Phone Book Backup files |
| Rights | | Content Key Backup files |
| Mail | | |
| Drafts | Drafts.BCK | Drafts Backup files |
| Inbox | Inbox.BCK | Incoming Mail Backup files |
| Outbox | Outbox.BCK | Unsent Messages Backup files |
| Sent Messages | Sent Messages.BCK | Sent Messages Backup files |

My Items

| | | |
|--------------------|---------------|--|
| Book | | E-comics, etc. |
| Bookmarks | Bookmarks.BCK | Bookmarks Backup files |
| Flash(R) | | Flash® image files |
| Flash(R) Ringtones | | Flash® sound files |
| Games and More | | SI Appli |
| Mail Art | | Mail Art |
| Music | | Sound files with .3gp/.mp4/.m4a/.smc |
| Other Documents | | Other files |
| Pictograms | | My Pictograms |
| Pictures | | Still images moved/copied from handset to Main Folder in Memory Card |
| Sounds & Ringtones | | Sound files with .3gp/.mp4/.m4a/.mid/.midi/.amr/ .mmf/.mxmf |
| Videos | | Videos moved/copied from handset to Main Folder in Memory Card |

SD_VIDEO

- Videos saved to Memory Card
 - Videos moved/copied from handset to Video Camera folder
- Some copy protected files have extensions different from above.

Note

- Handset temporary files are saved in Memory Card PRIVATE – MEIGROUP - PMC - FS_TEMP folder. All folders/files in this folder are deleted each time Memory Card is inserted into handset; do not save PC folders/files in this folder.
- Folder layers recognizable in handset are limited to the first layer of each folder (such as, Music folder) in My Items (MYFOLDER).
- When multiple folders/files with same numbers exist in DCIM folder, the folders/files cannot be viewed on handset.
- Images captured by handset Camera may rotate 90° on cross-carrier handsets or PC.

Memory Card Functions

Check Memory Card

Repair Memory Card data errors.

> **Main Menu** ▶ **Settings** ▶ **Memory Card Manager**
 ▶ **Check Memory Card** ▶ 

- Do not remove Memory Card or battery during Check Memory Card. May damage handset or Memory Card.
- It may take 30 seconds or longer to complete procedures.
- Incompatible/improperly formatted Memory Cards are not checked.
- Unrecoverable data may be deleted.

Back Up Content key

Copy Content Keys to Memory Card from handset, or to handset from Memory Card.

> **Main Menu** ▶ **Settings** ▶ **Memory Card Manager**
 ▶ **Memory Card Backup/Restore** ▶ Enter Phone Password
 ▶ **Content Key** ▶ **Copy to Memory Card** or **Copy to Phone**

- Content Keys with expiration dates or usage limits cannot be backed up.
- USIM Card inserted when Content Keys were moved to Memory Card must be inserted to move Content Keys from Memory Card.
- Some applications are not compatible with handset. Only Content Keys for compatible applications are backed up. Also, note that some keys are moved to Memory Card when backed up. Contact SoftBank Mobile Customer Center, General Information for more information (☎ P.16-30).
- Backing up Content Keys overwrites previously saved Content Key backup.

Connectivity


| | |
|---------------------------------------|-------------|
| Infrared | 10-2 |
| Before Using Infrared..... | 10-2 |
| One File Transfer..... | 10-3 |
| All Phone Book Transfers | 10-4 |
| SoftBank Utility Software | |
| (Japanese) | 10-5 |
| USB (Japanese) | 10-5 |
| Transferring Data via USB Cable..... | 10-5 |
| Data Communication via USB Cable..... | 10-5 |
| USB Charge..... | 10-6 |
| Location Settings | 10-6 |
| Positioning Lock | 10-6 |
| Sending Location Information | 10-6 |

Infrared

Before Using Infrared

Transfer Phone Book/Schedule entries, messages, bookmarks and Data Folder files wirelessly between handset and compatible devices, including PCs and other mobiles.

- 841P infrared function is based on IrMC1.1, however, some IrMC1.1-based device transmissions may not be transmitted/received within specification.
- Debris may inhibit infrared transfers; clean infrared ports with a soft cloth beforehand.
- Direct sunlight/fluorescent light may inhibit transfers.
- When data transfer is interrupted, it may take some time for process to complete.
- Align infrared ports within 20 cm of one another and make sure no objects are placed between them. Do not move the devices until transfer is complete.

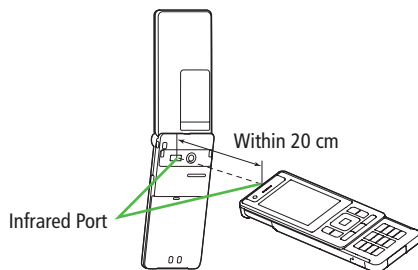

Transferable Files

| Transferable File \ Condition | One File | All Files |
|---|----------|------------|
| Phone Book (Account Details) ^{1,2} | ○ | Up to 1000 |
| Schedule entries ^{1,3} | ○ | × |
| Messages | ○ | × |
| Data Folder files | ○ | × |
| Bookmarks | ○ | × |

○: Transferable ×: Not transferable

¹ Ringtone, Notification Light, Picture and other entry settings are lost in transfers.

² Group, Secret Setting and other entry settings are also lost when one entry is transferred.

³ Entries without specified date/time cannot be received. Entries with date/time that cannot be set on 841P are not saved (☞ P.11-3).

Note

- Depending on their content, some incoming Phone Book/Schedule entries, messages or bookmarks may not be received, or may be altered beyond the parameters.
- If memory becomes full, remaining entries are truncated. (Memory List: ☞ P.16-20)
- Images captured by handset Camera may rotate 90° on cross-carrier handsets or PC.

One File Transfer

- Transferable Files: P.9-2

Sending

- 1 Highlight a file → [Menu] →
Follow the steps below

| Files | Operation/Description |
|--|---|
| Phone Book/ Account Details/ Data Folder files | > <i>Send</i> → <i>Infrared</i> |
| Messages/ Schedule entries/ Bookmarks | > <i>Send via Infrared</i> |
| SMS in Incoming Mail folder | > <i>Local Connectivity</i> → <i>Infrared</i> |

Transfer starts.

Note

- Alternatively, follow the steps below to send Account Details:
Main Menu ► **Infrared** ► **Send Account Details**.

Receiving

Main Menu ► **Infrared** ► **Infrared ON/OFF**

- 1 **ON**
 appears. Acquire signal within three minutes.
- 2 When receiving transfer request from sender, confirmation appears
File name and size appear.
- 3 → Follow the steps below

| Files | Operation/Description |
|---------------------------------|---|
| Data Folder files | > <i>Phone</i> or <i>Memory Card</i> |
| Phone Book/ Schedule entries | [Save] |
| Messages | Saved in a messaging folder automatically |
| Bookmarks | Saved in Bookmarks List automatically |

Note

- Handset receives files only in Standby.
- Infrared is canceled if no transmission is made within three minutes or handset power is turned off.

All Phone Book Transfers

Precaution


- Receiving all files overwrites all saved files including secret entries.
- Sending all Phone Book entries transfers Account Details as well. User-saved Account Details is overwritten on receiving handset (handset number remains).

Infrared Authentication Code

Infrared Authentication Code (4 digits) is required for all data transfers via Infrared. Sender and receiver must enter same Authentication Code to complete transfers.

Sending

Main Menu ► Infrared ► Send All Phone Book




- 1  → Enter Phone Password
- 2 Enter Authentication Code
Recipient must enter the same Authentication Code to start transfers.

Note

- Alternatively, **Main Menu ► Phone ► Memory Manager ► Send All Phone Book via Infrared.**

Receiving

Main Menu ► Infrared ► Infrared ON/OFF

- 1 **ON**
 appears. Acquire signal within three minutes.
- 2 When receiving transfer request from sender, confirmation appears
- 3  to accept connection request → 
- 4 Enter Phone Password
- 5 Enter Authentication Code
Transfer starts. Phone Book entries are saved in Phone Book automatically.

SoftBank Utility Software (Japanese)

Phone Book, Calendar, messages, bookmarks and Data Folder files can be transferred to a PC, edited or managed by using SoftBank Utility Software.

- For details on and downloading SoftBank Utility Software, visit <http://www.softbank.jp/mb/tr/sbu/> (Japanese)

Note

- USB cable (not included) is necessary for using SoftBank Utility Software.
- S! Appli, Templates and Other Documents cannot be backed up.
- Copy protected files may not be backed up.
- Files having the same name in a folder may not be transferred.

USB (Japanese)

Connect handset to a PC via USB cable (not included) specified by SoftBank for data transfer or data communication.

Transferring Data via USB Cable

Transfer data using SoftBank Utility Software. (☞ Left)

Data Communication via USB Cable

Use handset as a modem for Internet access by connecting handset with a PC.

- Download utility software from URL below and install on PC.
<http://panasonic.jp/mobile/support/download/841p/index.html>
- 1 Install "USB ドライバ (USB Driver)" and "Modem Wizard" from Utility Software (841P) to a PC
 - 2 Connect handset to PC via USB cable
 - Power up handset before connecting to PC via USB cable.
 - 3 Start up "841P Modem Wizard", and operate communication setup
 - "841P Modem Wizard" enables you to set up APN and dial-up easily.
For setup/starting procedures, see "841P Modem Wizard" Help.

Note

- Connecting handset to a PC or PDA for Internet access may incur high packet transmission fees.

USB Charge

Connect handset to a PC via USB cable to charge battery.

- Both PC and handset must be powered up.
- USB Charging may be slower/less effective than AC Charger.

Location Settings

Retrieve handset Location Information.

- Only available within 3G network coverage in Japan.

Emergency Positioning Request

When an emergency call is made from handset, location detected by nearby base station is reported to Emergency response agencies such as the police (☎P.2-3).

Positioning Lock

<Default> OFF

Activate Positioning Lock.

**Main Menu ▶ Settings ▶ Location Settings
▶ Positioning Lock**

- 1 **ON** → Enter Phone Password

Sending Location Information

<Default> Ask Every Time

Set whether to send location information automatically when requested.

**Main Menu ▶ Settings ▶ Location Settings ▶
Send Location Info**

- 1 Select an item → Enter Phone Password

Handset Security

| | |
|---|-------------|
| Changing Phone Password | 11-2 |
| Security Functions | 11-2 |
| USIM PINs | 11-2 |
| Keyguard | 11-3 |
| Password Lock | 11-4 |
| Secure Remote Lock | 11-4 |
| Restricting Calls/Messages | 11-5 |
| Rejecting Incoming Calls | 11-5 |
| Phone Book Lock | 11-6 |
| Messaging Lock | 11-6 |
| Secret Mode/Secret Data Only | 11-7 |
| Secret Mail Setting | 11-8 |
| Mail Security Setting | 11-8 |
| Reset | 11-9 |
| Reset Settings | 11-9 |
| All Reset | 11-9 |

Changing Phone Password

<Default> 9999

Change Phone Password as required.

- For Phone Password details: ☞ P.1-23

Main Menu ► Settings ► Security ► Change Password

- 1 Enter current 4 to 8-digit Phone Password
- 2 Enter new 4 to 8-digit Phone Password
- 3 Reenter new Phone Password

Note

- If Phone Password is incorrectly entered three times, warning message appears. Turn off handset and retry to enter.

Security Functions

USIM PINs

- For more information about PINs: ☞ P.1-3

PIN Certification

Activate to require PIN entry each time handset is turned on.

Main Menu ► Settings ► Security ► PIN Certification

- 1 *ON* or *OFF*
- 2 Enter PIN

Note

- When PIN Certification is ON :
 - Signal Indicator may take some time to appear in Standby after entering PIN.
 - Enter PIN to dial emergency numbers (110, 119, 118).

Changing PIN/PIN2

- Set PIN Certification to **ON** before changing PIN (☞ P.10-2).

Main Menu ▶ Settings ▶ Security ▶ Change PIN or Change PIN2

- 1 Enter current PIN/PIN2
- 2 Enter new PIN/PIN2
- 3 Reenter new PIN/PIN2

PIN/PIN2 Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering PIN Unblocking Key (PUK/PUK2).

- For information about PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☞ P.16-30).

- 1 In PIN lock mode, enter PUK/PUK2
- 2 Enter new PIN/PIN2
- 3 Reenter new PIN/PIN2





Note


- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled (turning off power counts as one incorrect entry). Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☞ P.16-30).

Keyguard




Lock handset keys to prevent accidental operation.

- While locked,  appears in Standby.

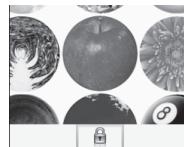- 1 In Standby, press and hold  → 
 - To cancel: In Standby,  →  [YES]



Note

- Alternatively, **Main Menu ▶ Settings ▶ Phone Settings ▶ Keyguard ▶** .
- Emergency numbers (110, 119, 118) are dialable even when Keyguard is active (Entered numbers do not appear on Display). To correct misentries, press , then re-enter number.
- When Keyguard is active, handset will not power down. Cancel Keyguard then press and hold .

Password Lock

<Default> OFF

Set Password Lock to require Phone Password after handset powers up, or after two minutes of inactivity in Standby.

- While set,  appears in Standby.

Main Menu ► Settings ► Security ► Password Lock

1 ON → 



- To cancel, select OFF.

2 Enter Phone Password

Temporary Unlock

> When  appears in Standby, enter Phone Password

Note

- Emergency numbers (110, 119, 118) are dialable even when Password Lock is active.
- When Keyguard is set to ON while Password Lock is temporarily deactivated, both Keyguard and Password Lock are activated after two minutes of inactivity in Standby. (/ appears.) To cancel both, cancel Keyguard first (➡ P.10-3).
- Turning off power does not cancel Password Lock.

Secure Remote Lock

If handset is lost or stolen, remotely lock handset from a PC or mobile. If Secure Remote Lock is active, all operations are unavailable except to turn handset on.

- For service details and user agreement/registration, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) or My SoftBank.

Accessing My SoftBank from Handset (Japanese)

For service details, visit SOFTBANK MOBILE Corp. Website.

Main Menu ► Yahoo! ► Yahoo! Keitai
► メニューリスト ► My SoftBank ► English

Follow onscreen instructions.

Restricting Calls/Messages

Rejecting Incoming Calls

Rejecting Calls by Call-type

<Default> OFF

Reject calls from unknown numbers (numbers not saved in Phone Book, blocked Caller ID, pay phones, etc.).

Main Menu ► Settings ► Call Settings
► Reject Incoming Calls

- 1 Select an item
- 2 *ON* or *OFF*

Rejecting Specific Numbers

Add numbers to Reject List to reject specific incoming calls, then set *Activate Reject List* to *ON*.

Main Menu ► Settings ► Call Settings
► Reject Incoming Calls ► Reject List

- 1 Select an item (See below)

| Item | Operation/Description |
|----------------------|--|
| Activate Reject List | Reject incoming calls from numbers in Reject List > <i>ON</i> or <i>OFF</i> |
| Edit Reject List | Add numbers to Reject List to reject specific incoming calls > [Menu] → Add → Select an item → Highlight number in Phone Book/Call Log → [Select] (For <i>Direct Entry</i> , enter number directly) |

Edit/Delete Numbers in Reject List

> In Step1, *Edit Reject List* → Highlight number → [Menu] → *Edit* or *Delete* (→ For *Delete*, [OK])

Calls from Rejected Numbers

Handset does not ring/vibrate, but Information window appears. Press [OK] to confirm.

- If call is rejected because Caller ID was not sent (Withheld), caller is instructed via voice message or Picture to send ID.



Note

- Set handset to reject all incoming calls or incoming calls while abroad (Call Barring: [P.2-19]).


Phone Book Lock

<Default> OFF

While Phone Book Lock is active, viewing Phone Book, saving new entries, changing settings, etc. are restricted.

- When Phone Book Lock is active,  appears. When Phone Book Lock and Messaging Lock are both active,  appears.

Main Menu ► Settings ► Security ► Phone Book Lock

- 1 **ON** → 
 - To cancel, select **OFF**.
- 2 Enter Phone Password



Note

- Mail & Call Log, Account Details, S! Address Book and Phone Book backup to Memory Card are available while Phone Book is active.
- When Phone Book Lock is active, only phone numbers/mail address appear for incoming communications from Phone Book entries.


Messaging Lock

[Default] OFF

While Messaging Lock is active, creating messages, viewing Messaging folders, changing settings, etc. are restricted.

- When Messaging Lock is active,  appears. When Phone Book Lock and Messaging Lock are both active,  appears.

Main Menu ► Settings ► Security ► Messaging Lock

- 1 **ON** → 
 - To cancel, select **OFF**.
- 2 Enter Phone Password

Note

- When receiving a new message while Messaging Lock is active, sender information does not appear in Standby or ticker.
- When Messaging Lock is active, Message/template backup to Memory Card, template download etc. are available, but templates cannot be edited or used for S! Mail messages.

Secret Mode/Secret Data Only

<Default> Normal Mode

Phone Book entries saved as secret data appear only when Secret Mode/Secret Data Only is active.

- Saving to Phone Book:  P.4-3

Main Menu ► Settings ► Security ► Secret Mode Setting

1 Select an item (See below)

| Item | Operation/Description |
|------------------|---|
| Secret Mode | View all data including secret Phone Book entries <ul style="list-style-type: none">● When Secret Mode is active, ■■■ appears in Standby. |
| Secret Data Only | View only secret Phone Book entries <ul style="list-style-type: none">● When Secret Data Only is active, ■■ appears in Standby. |

2 Enter Phone Password

■ Cancel Secret Mode/Secret Data Only from Standby

> 

- ■■■ or ■■ disappears.
- When Information window or Standby Window is open, press  to close, then press  again.

Note

- Only numbers/mail addresses appear for incoming communications from Secret entries in Normal Mode.
- Turning off power cancels Secret Mode/Secret Data Only.

Secret Mail Setting

<Default> Show

Hide messages to/from secret Phone Book entries.

- Even if Secret Mail Display is set to **Hide**, secret mail appears when Secret Mode/Secret Data Only is active.

- 1 [✉][✉] → **Settings** → **Universal Settings**
- 2 **Display Settings** → **Secret Mail Display**
- 3 Enter Phone Password → **Hide**

Mail Security Setting

Set handset to require Phone Password for opening messaging folders or operating Server Mail.



- 1 [✉][✉] → **Settings**
 - 2 **Universal Settings** → **Mail Security Setting**
 - 3 Enter Phone Password → Check items → [✉][OK]
- **Set/Cancel Mail Security for Folders in Incoming Mail/Sent Messages Folders**
- > [✉][✉] → **Incoming Mail** or **Sent Messages** → Highlight a folder → [✉][Menu] → **Set Mail Security** or **Cancel Mail Security** → Enter Phone Password

Reset

Reset Settings

Cancel custom settings and return handset functions to their default settings.

Main Menu ► Settings ► Security ► Reset
► Reset Settings

- 1  → 
- 2 Enter Phone Password
Handset automatically turns off and restarts.



Note

- Some default settings may not be restored.

All Reset

Cancel custom settings and return handset functions to their default settings; clear all Phone Book/Data Folder entries etc.

Main Menu ► Settings ► Security ► Reset ► All Reset

- 1  → 
- 2 Enter Phone Password
Handset automatically turns off and restarts.
- 3 Enter Date → Enter Time

Note

- Fully Charge battery (🔋) beforehand.
- Phone Password is reset to default.
- USIM Card/Memory Card files are not affected.
- Non-restorable items when deleted by All Reset:
 - Customized settings, call logs, downloaded S! Appli, etc.
- Pre-installed S! Appli, Flash®, e-Book files, Mail Art or My Pictograms deleted by user are not recovered by All Reset.

11 Handset Security

11-10

Tools

| | |
|--------------------------------------|--------------|
| Calendar | 12-2 |
| Opening Calendar | 12-2 |
| Creating Schedule Events..... | 12-2 |
| Setting Day Off..... | 12-4 |
| Viewing/Editing Schedule Events..... | 12-4 |
| Calendar Functions..... | 12-5 |
| Alarms | 12-6 |
| Setting Alarm | 12-6 |
| Calculator | 12-7 |
| Notepad | 12-8 |
| Notepad Functions | 12-8 |
| Count Down Timer | 12-9 |
| Voice Recorder | 12-9 |
| Bar Code Reader | 12-10 |
| Scanning Barcodes | 12-10 |
| Viewing/Editing Scanned Data | 12-11 |
| Using Barcode Data..... | 12-11 |
| One Touch Guide | 12-12 |

Calendar

View by day, week or month; set Alarms for events.

Opening Calendar

1

Current month appears.

- When a date with schedule events is selected, up to four events appear.
- Press or to display previous/next month calendar.
- To switch Monthly/Weekly view: P.11-5



One Month Window

Note


- Alternatively, **Main Menu** ► **Tools** ► **Calendar**.

Creating Schedule Events

Save up to 100 entries.

1

2 to highlight a date
→ [Menu] → **New Entry**

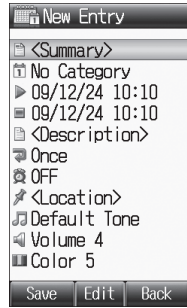

3 Select an item (See below)

| Item | Operation/Description |
|--------------------|--|
| Summary | > Enter title or content |
| Category | Select an event type; icon appears in Standby > Select a category |
| Start | > Enter date and time the schedule event starts |
| End | > Enter date and time the schedule event ends |
| Description | > Enter event description |
| Repetition | > Select a repeat type (→ Enter repeating time) |

| Item | Operation/Description |
|--------------------|---|
| Reminder | > Select an alarm type |
| Location | > Enter location |
| Schedule Tone | > Select an item <ul style="list-style-type: none"> · Default Tone · Ring Songs·Tones or Music → Highlight a file → [Set] |
| Schedule Volume | > to adjust volume |
| Notification Light | Set schedule alarm notification light color > Select a color or OFF |

4 [Save]

Schedule Icon

Selected icon in Category appears in Standby.

Example: (Meeting), (Anniversary), (Birthday)

- If nothing selected, appears.
- Icon disappears after scheduled event has passed.

Note

- Schedule events between 00:00 on 2000/01/01 and 23:59 on 2099/12/31 can be saved on handset.

At Reminder Time

Schedule Tone sounds and Notification Light flashes.

- 1 When Schedule Tone sounds, Schedule Tone stops and Schedule Event List appears.
- 2 to view details

Canceling Schedule Tone

- Press to return to Standby.
- Press [Stop] to return to previous menu.
- Press any key except for , [Stop], [View] or to cancel Schedule Tone without returning to Standby. Press to view detailed schedule.



Note

- Schedule Tone does not sound in the following cases:
 - During a call (Notification appears and handset vibrates)
 - In Manner Mode (Manner Mode settings take priority)
 - When handset power is turned off
 - For entries invalidated by Time Correction

Setting Day Off

- Day Off dates appear in red.

- 
- (Highlight a date →)  [Menu] → **Set Day Off**
- Select an item (See below)

| Item | Operation/Description |
|-----------|--|
| Weekly | > Check the dates →  [OK] |
| Today* | > Once or Yearly |
| Reset All | Reset all Day off dates >  |

* To cancel selection: **Reset Holiday**

Viewing/Editing Schedule Events

- Holidays appear in red.



-  → Select a date




Schedule Event List

- Select a schedule event

Detailed schedule appears.

- Press  to switch Schedule tab and Contents tab.
- To edit:  [Edit] → Edit selected items
(← From Step 3 on P.11-2)

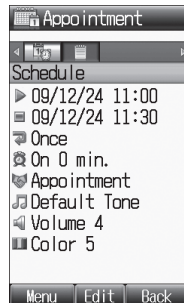

Schedule Event Details

Calendar Functions

From ▶ 

Switch Calendar View

<Default> One Month

>  [Menu] → *View Format* → *One Month* or *One Week*

- Select *One Week* view to see daily schedules.

Search Specific Day











>  [Menu] → *Go to Date* → Enter date

Set Week Start Day

>  [Menu] → *Start Week From* → Select a day

Delete Schedule Events

> Follow the steps below

| Item | Operation/Description |
|-------------------|---|
| One | > Select a date → Highlight an event →  [Menu] → <i>Delete</i> →  |
| Scheduled Events* | > Highlight a date →  [Menu] → <i>Delete</i> → <i>Day</i> →  →  |
| Past Events* | > Highlight a date →  [Menu] → <i>Delete</i> → <i>Past</i> →  →  |
| All | >  [Menu] → <i>Delete</i> → <i>All</i> →  [YES] → Enter Phone Password |

* Repetitive entries cannot be deleted.

Calendar Memory Status

>  [Menu] → *Memory Status*

Tip

- Send Schedule Data via Infrared ( P.9-3)

Alarms

When scheduled time arrives, alarm tone sounds and animation appears on Display. Notification Light illuminates.


Setting Alarm

Set up to five alarms. Alarm tone sounds at the specified time once, everyday or weekly as set.

- appears in Standby when Alarm is set.

Main Menu ► Tools ► Alarms

1 Select an Alarm

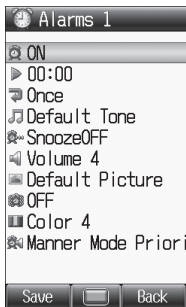

2 Select an item (See below)

| Item | Operation/Description |
|--------------|---|
| Alarm ON/OFF | Activate or cancel Alarm > ON or OFF |
| Time | > Enter time |

| Item | Operation/Description |
|---------------------|--|
| Repetition | > Select a repeat type (→ For Weekly , check days → [OK]) |
| Alarm Tone | > Select an item · Default Tone · Ring Songs-Tones or Music → Highlight a file* → [Set] |
| Set Alarm Snooze | Alarm Tone sounds for 60 seconds, repeating up to five times at specified intervals > ON or OFF (→ For ON , enter interval) |
| Alarm Volume | > to adjust volume |
| Picture | Select image to appear > Select an item · Default Picture · Pictures → Highlight a still image → [Set] |
| Set Alarm Vibration | Select Vibration type > Select pattern or OFF |
| Notification Light | Select Notification Light color > Select a color or OFF |
| Set Alarm Priority | Set Manner Mode or Alarm priority > Manner Mode Prioritized or Alarm Prioritized |

* When selecting an SMC file, highlight a Play Point → [Set]

3 [Save]

At Alarm Time

Alarm Tone sounds, Notification Light flashes and image appears on Display.

1 Press any key



Alarm stops and confirmation window appears.

(When pressing , confirmation does not appear.)



- Alarm stops automatically after 60 seconds of inactivity, and confirmation window appears.


■ Cancel/Reactivate Alarm

> Main Menu ► Tools ► Alarms ► Highlight an alarm ►  [Menu]
► Alarm ON or Alarm OFF

- Activate a canceled Alarm to apply previous settings.
-  appears for set alarms;  for unset/canceled ones.

Snooze Function

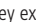If **ON**, press any key except ; confirmation appears. To cancel Alarm, press  [Stop].

- When pressing  to stop alarm, confirmation does not appear. (Snooze function is still active.)










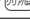


Note

- Alarm Tone does not sound in the following cases:
 - During a call (Notification appears and handset vibrates)
 - In **Manner Mode Prioritized** (Manner Mode settings take priority)
 - When handset power is turned off
 - For entries invalidated by Time Correction

Calculator

Calculates up to 10 digits.


Main Menu ► Tools ► Calculator

| Operation | Assigned key |
|----------------|--|
| Number (0 - 9) |  -  |
| + |  |
| - |  |
| x |  |
| ÷ |  |
| = |  |
| Decimal point |  |
| Clear |  or  |
| Toggle + and - |  |
| % |  |



■ Enter Negative Numbers

> Enter number, then 

- Press  to toggle negative/positive value.

Example:

-17+28.5=11.5



Notepad


Main Menu ► Tools ► Notepad

1 [Menu] → *New*

2 Enter text

New note is added to the top of the list.

- Up to 64 characters can be entered.

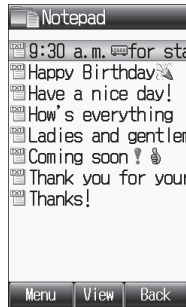

Notepads Window

Notepad Functions

From ► Main Menu ► Tools ► Notepad

Edit Notes

- > Select a note → [Edit] → Edit text
- Edited note is overwritten.

Delete Notes

- > Highlight a note → [Menu] → *Delete* → *One* or *All* → [YES] (→ For *All*, enter Phone Password)

Note Property

- > Highlight a note → [Menu] → *Property*



Insert Notes into Message Text

- > Highlight a note → [Menu] → *Send* → *Send via S! Mail* or *Send via SMS* → Enter mail address, etc. (S! Mail: From Step 2 on P.12-4/SMS: From Step 2 on P.12-8) → [Send]


Count Down Timer

Alarm Tone sounds, handset vibrates and Notification Light flashes when specified time elapses.

Main Menu ► Tools ► Count Down Timer


- 1 Enter time
- 2  [Start]
 - To pause:  [Stop]

■ Stop Alarm Tone

> When Alarm tone sounds,  to stop


- Alarm stops automatically after 30 seconds.

Note





- Incoming calls/other alarms do not interfere with timer operation. However, if timer reaches 00:00 while other functions are active, alarm does not sound.
- Alarm tone volume and vibration pattern follow Assign Ringtone ( P.15-2).


Voice Recorder

Record voice memos.

- Record for up to 60 seconds each.
- Recording conversation during a call:  P.2-9

Main Menu ► Tools ► Voice Recorder

- 1 
Recording starts.
- 2  to stop recording
 - To playback: 
- 3  [Save]
Recorded sounds are saved in Ring Songs-Tones folder.

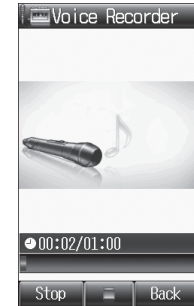

Note

- Sounds recorded by Voice Recorder cannot be set as Alarm, Ringtone or Schedule Tones.

Bar Code Reader

Scan barcodes (JAN) or QR Codes with built-in camera.
Access websites, send messages, etc. from QR Codes.

JAN Codes

JAN Code is a one-dimensional bar code denoting numerals with bars and spaces of different widths.

QR Codes

QR Code is a two-dimensional bar code containing information.

Example: SoftBank mobile phones



Scanning Barcodes

12

Tools

- Up to ten items can be saved.
- For split data, up to 16 QR Codes can be scanned at a time and saved as one item.

Main Menu ► Bar Code ► Scan Barcodes

1 Frame barcode in the center of Display

- To adjust Display brightness: or
- To zoom:
- To use Focus Lock:

2

Scanning starts, and scanned results appear when completed.

- For split data, → Repeat Step 1 and 2

3 [Save]

- To start over: → → Go to Step 2

Note

- Handset cannot read barcodes or two-dimensional codes other than JAN/QR Codes.
- Some barcodes may be unreadable.
- Barcode recognition may be slow. Hold handset steady while scanning.
- Brightness can be adjusted while scanning; however, zoom level cannot be changed.
- Saved items are automatically named "yymmdd_hhmmss" unless changed. (yy: year, mm: month, dd: day, hh: hour, mm: minute, ss: second)
- Barcodes may not be correctly read owing to scratch, dirt, damage, quality of printed material, light reflection, or QR code version.

Viewing/Editing Scanned Data

Main Menu ► Bar Code ► Saved Data List

1 View Saved Data

Select an item

Edit Title

Highlight an item → [Menu] → **Rename** → Edit title

Delete Saved Data

> In Step 1, highlight an item → [Menu] → **Delete One** → [OK]

Using Barcode Data

From ► Main Menu ► Bar Code ► Saved Data List

Use URLs/Mail Addresses/Phone Numbers

> Select an item → Follow the steps below

| Item | Operation/Description |
|--|---|
| URL (http:// or https://) | Connect to websites; add to Bookmarks (☞ P.13-8) |
| URL (rtsp://) | Streaming; add to Bookmarks |
| Mail Address | Create S! Mail (☞ P.12-4); save to Phone Book (☞ P.4-3) |
| Phone Number | Make calls; create messages* (S! Mail: ☞ P.12-4/SMS: ☞ P.12-8); save to Phone Book (☞ P.4-3) |
| Phone Book Data (MEMORY: text) | Save to Phone Book <ul style="list-style-type: none">● Save MEMORY: text only● Saved to Phone regardless of Save Settings selection |

* SoftBank handset numbers only

■ Insert Scanned Text into Messages

> Select an item → [Menu] → *Paste Data & Create Mail*
→ *S! Mail* or *SMS* → Create message (S! Mail: From Step 2 on P.12-4/SMS: From Step 2 on P.12-8)

■ Copy Text from Scanned Results

> Select an item → [Menu] → *Copy* → Follow the steps below

| Item | Operation/Description |
|---------------|--|
| All Text | > [All] → |
| Selected Text | > Place cursor before (or after) text to copy → → Place cursor after (or before) text to copy → |

One Touch Guide

Access One Touch Guide for instructions to key operations.

Main Menu ► Tools ► One Touch Guide

1 Select a function

Instructions appear.

- Press or to view previous or next information.



Example:
Magnifying Loupe

Note

- Alternatively, view from Shortcuts (P.1-19) or Private Menu (P.1-20).

Messaging

Basics 13-2

- Available Entry Items & Character Entry Limits 13-2
- Messaging Folders & Memory Status 13-3
- Customizing Handset Address 13-3

Sending S! Mail & SMS 13-4

- Sending S! Mail 13-4
- Sending SMS Messages 13-8
- Creating Messages 13-9
- Graphic Mail Functions 13-10
- Sending Messages 13-11

Receiving & Viewing Messages 13-12

- Opening New Messages 13-12
- Window Description 13-13
- Retrieving Complete S! Mail 13-14
- Opening & Saving Attachments 13-15
- Mail Log 13-15
- 3D Pictograms 13-16
- Using Server Mail 13-17
- Other Functions 13-17

Organizing/Using Messages 13-18

- Checking Messages in Messaging Folders 13-18
- Mail Delivery Rule 13-19
- Filter Spam 13-20
- Replying to Messages 13-21
- Using Mail Groups 13-21
- Organizing Messages 13-22
- Using Messages 13-24

Basics

Send messages via S! Mail or SMS.

| | |
|--|---|
| S! Mail [Separate subscription required] | Exchange text messages with SoftBank or e-mail compatible handsets, PCs, etc.; attach image or sound files etc. ● 841P is compatible with Graphic Mail (☞ P.12-6) and Feeling Mail (☞ P.12-5). |
| SMS | Exchange short text messages with SoftBank handsets. |

- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Tip

- Messaging Lock (☞ P.10-6)

Available Entry Items & Character Entry Limits

| Item | | S! Mail | | SMS | |
|------------|---------------------------|---------|---|-----|---|
| Address | E-mail address | ○ | Up to 246 single-byte alphanumerics/ Up to 20 recipients | × | — |
| | Phone number ¹ | ○ | | ○ | Up to 20 single-byte alphanumerics/ten recipients |
| Subject | | ○ | Up to 256 double-/single-byte alphanumerics | × | — |
| Text | | ○ | 30 KB ² | ○ | Up to 70 double-/single-byte alphanumerics ³ |
| Attachment | | ○ | Up to 20 files | × | — |

¹ SoftBank handset numbers only

² S! Mail Entry Limit decreases when mail attachments exceed 260 KB.


³ When **Input Character Settings** is set to **English(160characters)** (☞ P.15-21), up to 160 single-byte alphanumerics can be entered.

Note

- Send up to 300 KB including subject, message text and attachment via S! Mail. Message text character limit differs by attachment size.
- SMS messages can be converted to S! Mail (☞ P.12-8), but not in the following cases:
 - S! Mail memory is full (☞ P.12-3)
 - During a call (S! Mail messages cannot be created during a call)
- S! Mail cannot be converted to SMS.

Messaging Folders & Memory Status

Messages are organized in folders by message type.

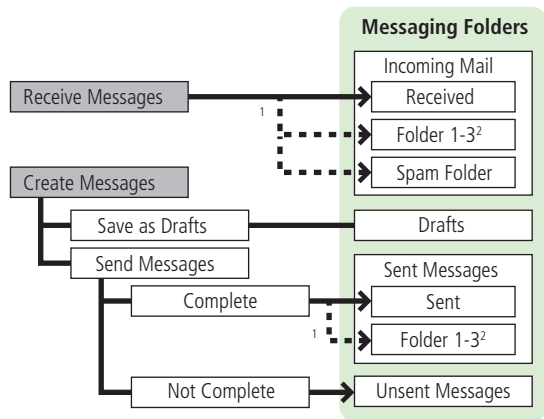

¹ Set Mail Delivery Rule to sort received messages automatically (☞ P.12-19, P.12-20).

² Add up to ten folders (☞ P.12-22).

Deleting Messages Automatically

When memory for messaging folders is low, read messages and sent messages are automatically deleted one by one. Protect important messages from unintentional deletion (☞ P.12-24), or set Auto Delete Sent Messages/Auto Delete Incoming Messages to **OFF** (☞ P.15-18, P.15-19). SMS messages saved in USIM Card are not automatically deleted.

When Messaging Memory is Full

☞ (Received Full) appears in Standby and no more new incoming messages are received. Delete old messages in Incoming Mail folder (☞ P.12-24). Retrieve new messages after deleting some SI Mail (☞ P.12-17).

View Memory Status

> ☞ → **Memory Status** → **Phone** or **USIM** (→ For **Phone**, **Outgoing** or **Incoming**)

Tip

Settings ● Mail Security Setting (☞ P.10-8)

Customizing Handset Address

Change your handset mail address (alphanumerics before @) to reduce the risk of receiving spam. Default account name is random alphanumerics.

abc123-xyz @ softbank.ne.jp
[Account] [Domain]
Name Name
(Customize here)

- For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Handset mail address cannot be changed in Emission OFF Mode.
- For operations while using Internet: ☞ P.13-6

1 ☞ [☞] → **Settings** → **Custom Mail Address**

Handset connects to the Network.
Follow onscreen instructions.

 
Sending S! Mail & SMS

Sending S! Mail

- Text Entry (☞ P.3-2)


Example: Select a Phone Book entry to send S! Mail.

1 Press and hold [✉] [✉]



Composition Window

2 Select Address field →
Phone Book

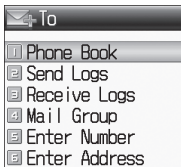

3 Select a Phone Book entry →
Select a SoftBank handset number
or mail address




4 Select Subject field →
Enter subject



5 Select Text field

6 Enter text

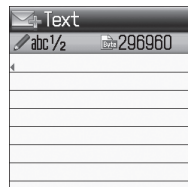

Text Entry Window

7 [Send]




Tip

- Addresses (☞ P.12-9)
- Other Functions (☞ P.12-10)
- Sending Messages (☞ P.12-11)
- **Settings** ● Request Delivery Confirmation (☞ P.15-18)

Adding Attachments

- 1 After Step 6 on page 12-4, select Attachment field
- 2 Select an item → Highlight an item → [Set]/[Select]
- 3 [Send]

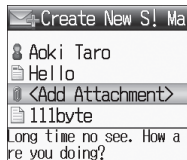

■ Attach Captured Pictures/Videos

- > For picture: After Step 1, **Launch Camera** → Frame subject → [Shoot] → [Save]
- > For video: After Step 1, **Launch Camera** → [Video] → Frame subject → [Record] → [Stop] → **Attach to S! Mail**

Note

- Some files cannot be attached depending on the file format or size.
- Some copy protected files cannot be sent.

Tip


- Attachments (P.12-9)

Sending Feeling Mail

Recipient's handset responds to your Feeling setting.


- Send Feeling Mail to compatible SoftBank handsets only.
- Ringtone, vibration and Notification Light settings vary depending on recipient's settings. (P.15-20)

- 1 After Step 6 on page 12-4, [Menu] → **Sending Options** → **Feeling Expression**

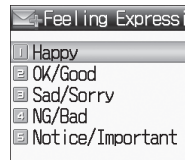

- 2 Select an item → Select an icon
Selected icon appears in Subject field.

- 3 [Send]

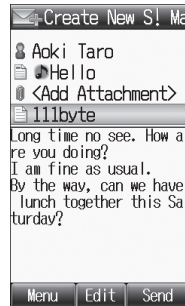


Graphic Mail

Create HTML messages; select font color/size, background color, or insert images, etc.

Example: Use various Templates to create Graphic Mail

- Change font size
- Scroll text

- 1 After Step 4 on page 12-4, [Menu] → **Insert Template** → Highlight a template → [View]
 - [Set] to set template
 - [Back] to re-select template
- 2 Select Text field → Delete "ここに文章をいれてね！"
- 3 [] to open Graphic Palette
 - Alternatively, press [Menu] → **Graphic Mail**.

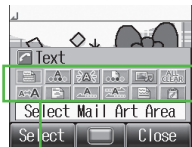

Graphic Palette

- 4 **Font Size** → select a font size
→ Enter text



- 5 **Select Mail Art Area** → Place cursor before a sentence to scroll → [Start] → Move cursor to end of sentence → [End]



Text is highlighted.

- To cancel selection (Cancel Mail Art Area): []


- 6 **Start Scrolling** → [Close]

- To preview: [Menu] → **Preview**

- 7 []

Text field preview appears.

- 8 [Send]

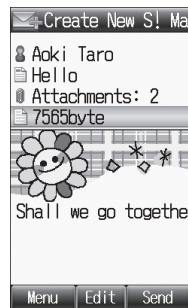

Reset Operations

- > To cancel previous operation: Close Graphic Palette → [Menu] → **Undo**
- > To reset all Graphic operations: [Reset] → **Reset All Graphic Mail** → [OK]

Note

- In Simple Mode, text in composition window appears in **Large Size** regardless of Font Size setting. When placing cursor at text, Font Size icon (A: Large Size, A: Small Size) appears. (When **Normal Size** is selected, Font Size icon does not appear.) In preview window, text appears in selected font size.

Using My Pictograms

- 1 After Step 5 on page 12-4, in a text entry window, [X] My Pictogram list appears.
 - Previously used pictographs appear first. List Log shows pictographs in upper half of window and My Pictograms in lower half.
- 2 [Switch] repeatedly until My Pictogram list appears
 - Alternatively, press [4] to open My Pictogram.
- 3 [F] or [O] to open previous/next page → Select a My Pictogram
My Pictogram is entered.
- 4 [Enter] → Enter text → [Send]

Use My Pictograms from Graphic Palette

- > In a text entry window, [Reset] → **My Pictograms** → Highlight a My Pictogram → [Set] → [Close]

Use My Pictograms Saved in Memory Card

- > In a text entry window, [Reset] → **My Pictograms** → **Switch to Memory Card** → Highlight a My Pictogram → [Set] → [Close]

Tip

- Graphic Mail Functions (P.12-10)
- Save Templates ● Download Templates via Internet (P.12-11)


Sending SMS Messages

- Text Entry (☞ P.3-2)

Example: Select a Phone Book entry to send SMS.


- 1   →
Create New SMS

Address field
Text field

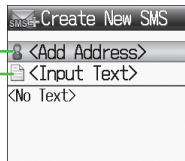

Composition Window

- 2 Select Address field →
Phone Book

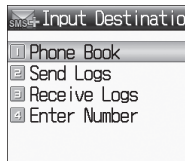

- 3 Select a Phone Book entry →
Select a SoftBank handset number




- 4 Select Text field

- 5 Enter text

- When number of entered character exceeds limit, S! Mail conversion option message appears.

- 6  [Send]

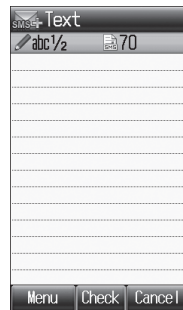

Text Entry Window

Manual Mail Conversion

> In SMS Composition window,  [Menu] → **Switch Message Type**

Tip

- Addresses (☞ P.12-9)

- Other Functions (☞ P.12-10)

- Settings**
- Request Delivery Confirmation (☞ P.15-18)
 - Set a Time Limit to Store All Sent SMS at the Center ● Change SMS Center Number ● Set Input Character to English (☞ P.15-21)

Creating Messages

Addresses

From ► Composition window, select Address field

■ Enter Address Directly

> **Enter Number** or **Enter Address*** → Enter a SoftBank handset number or mail address

* S! Mail only

■ Select Address from Send/Receive Logs

> **Send Logs** or **Receive Logs** → Select a log

■ Select S! Mail Address from Mail Group

> **Mail Group** → Highlight a Mail Group → [Select]

■ Add/Edit/Delete Address

> Follow the steps (See below)

| Item | Operation/Description |
|-------------|--|
| Add Address | > <Add Recipient> → Search/enter address → Select an address or enter directly |
| Edit | > Highlight an address → Edit address |
| Delete | > Highlight an address → [Menu] → Delete |

■ Change To/Cc/Bcc (S! Mail only)

> Highlight an address → [Menu] → **Change To/Cc/Bcc** → Select a type

Attachments

From ► After attaching a file, select Attachment field

■ Open/Play Attached Files

> Select a file

■ Add Attachments

> <Add New> → Select an item → Highlight a file/entry →

[Set]/[Select]

- To attach Account Details: <Add New> → **Account Details**
- To attach captured pictures/videos: (P.12-5)

■ Delete Attachments

> Highlight a file → [Menu] → **Delete**

Other Functions

■ Functions Available while Creating Messages

> In Composition window, [Menu] → Select an item (See below)

| Item | Operation/Description |
|--|---|
| Edit | Edit message |
| Send | Send message |
| Save as Drafts | Save message to <i>Drafts</i> without sending |
| Insert Template¹ | > Select a template |
| Save as Template¹ | Save edited template |
| Sending Options | Set options for outgoing messages (P.12-11) |
| Preview¹ | Preview S! Mail |
| 3D Preview | Message text appears in 3D animation |
| Switch Message Type² | Switch SMS to S! Mail |

¹ S! Mail only

² SMS only

Graphic Mail Functions

■ Use Other Graphic Mail Settings

> In S! Mail text entry window, [] → Select an arrange item (See below)

| Item | Operation/Description |
|-------------------------------|--|
| Select Mail Art Area | Specify text to be arranged > Place cursor before (or after) text → [Start] → Place cursor after (or before) text → [End] → Select an icon → Follow the steps for selected items ● To cancel selection: [End] → [] |
| Font Color | > Select a color |
| Start Blink | Flash text |
| Background Color | > Select a color |
| Insert Files | Insert still images, music or Flash® files; activate Camera and insert captured image Music files are sent as BGM > Select an item · Select File → Select a folder → Select a file → [Set] · Launch Camera → Frame subject → [Shoot] → [Save] ● To delete inserted music files: <i>Delete BGM</i> |
| Reset All Graphic Mail | Cancel all Graphic Mail settings > [] |
| Font Size | > Select a font size |
| Alignment | > Select a type |
| Start Scrolling | Scroll text |
| Start Swing | Swing text |

| Item | Operation/Description |
|----------------------|--|
| Insert Line | Insert separator line |
| My Pictograms | Insert My Pictograms > Highlight a My Pictogram → [Set] |

- One file of BGM or Flash®, and up to 40 types of My Pictograms or images can be inserted per Graphic Mail.
- To delete inserted images, lines, My Pictograms, etc.: Close Graphic Palette → Move cursor before images, etc. →

■ Save Edited Templates

> In S! Mail Composition window, [Menu] → *Save as Template*

■ Download Templates via Internet

> → *Templates* → *Download Templates*

- Handset connects to the Network. Follow onscreen instructions.

Sending Messages

■ Set for Sending Messages

> In composition window, [Menu] → *Sending Options* → Select an items (See below)

| Item | Operation/Description |
|---------------------------------------|--|
| Delivery Report | > <i>ON</i> ● Request Delivery Confirmation (P.15-18) |
| Set Priorities¹ | Set S! Mail priority > Select a level |
| Expiry² | Set SMS expiry time > Select a limit ● Set a Time Limit to Store All Sent SMS at the Center (P.15-21) |
| Feeling Expression¹ | (P.12-5) |

¹ S! Mail only

² SMS only

Receiving & Viewing Messages

Retrieving S! Mail Automatically


Auto Download retrieves complete messages and any attachments. Transmission fees are incurred; adjust to use. (To cancel Auto Download: P.15-19)

Opening New Messages

When a new message is received, **Message** appears and **Information window** opens in Standby.

- During handset operation, ticker appears at top of Display for incoming messages (ticker does not appear in Standby).
- Sender's information appears in Standby/ticker when message arrives.


- 1 Select **Message** in Information window

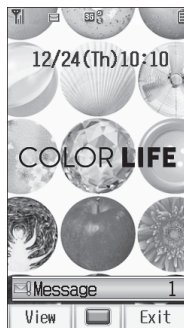

Message List Window

- 2 Select an unread message

- To view previous/next message, press .

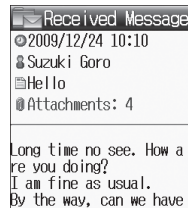

Message Window

- **Open Newest Unread Message in Standby**

> In Standby, press and hold .

- Newest message opens.

Receiving Feeling Mail

Emotion icon and sender information appear in Information window; ringtone, vibration and Notification Light respond according to sender's feeling setting.



Note

- Handset may connect to the Network via URL link in message text. Data-intensive web pages may incur high charges.
- Message tone and Notification Light may not always sound/illuminate. flashes and tone sounds to inform of a new message. During a call, signal sounds.

Tip

- Other Functions (👉 P.12-17)
 - Secret Mail Setting (👉 P.10-8)
- Settings**
- Change Ringtone
 - Change Ringer Volume
 - Change Ringtone Duration
 - Set Vibration Alert (👉 P.15-2)
 - Set Notification Light for Incoming Messages (👉 P.15-12)
 - Hide Sender Name (👉 P.15-18)
 - Feeling Mail Settings (👉 P.15-20)

Window Description

Messaging Folder Contents














Received Date & Time¹,
Sender² and S! Mail Subject
or SMS Message Text



Example: Received Folder
in Incoming Mail

- For Sent Messages, following appear:
¹ Sent date/time ² Recipient

Message Type/Status

| Message Type | Message Status |
|--|---|
|  Unread/Read S! Mail |  Attachment(s) |
|  Unread/Read S! Mail Notice |  (Gold) Protected |
|  Unread/Read SMS |  Forwarded Message |
|  Unread/Read USIM Card SMS |  Replied Message |
|  Server Mail |  New Delivery Report (Sent Messages) |
| |  SMS Concatenating |
| |  High Priority |
| |  Low Priority |


Message Contents



Number of Attachments

The number of files (images, sounds, videos, text, etc.) appears.

Note

- Status icons for forwarded/replied SMS messages saved in USIM Card do not appear.
- After retrieving complete messages, S! Mail Notice icons with  (Forwarded) or  (Replied) change to  (S! Mail).
- Messages remain protected after complete messages are retrieved via protected S! Mail Notices.


Tip

- Functions Available for Received/Sent/Draft Message List (P.12-23)
- Functions Available In Received/Sent Message Window (P.12-24)
- Settings** ● Change Font Size ● Change Message List View (P.15-18)

Retrieving Complete S! Mail

The complete message may not be downloaded during handset operations. Center sends initial portion of message as an S! Mail Notice. Manually retrieve the complete message.

- 1 At the end of message text,
There are sequels

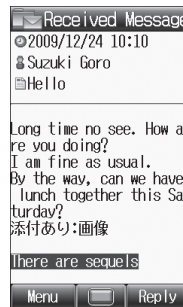

Retrieve from Message List


> In received message list,  [Menu] → *Retrieve* → *One*

Retrieve Multiple Messages

> In received message list,  [Menu] → *Retrieve* → *Selected Messages* → Check messages →  [Retrieve] → 

Opening & Saving Attachments

- 1 In Message window,
[Menu] → **Attachment List**
- 2 Select a file → [Back]
- 3 To save the file, highlight file →
[Menu] → **Save** → **Phone** or
Memory Card
 - For some music files, press [Save] →
Phone or **Memory Card**.

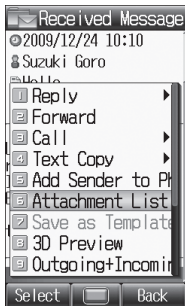

Note

- When messages are opened, attached image files appear/play automatically.
- Copy Protected Files (P.8-5)

File formats Supported by Auto Playback

- Picture files (JPEG, GIF, PNG)
- Music files (SMAF, AMR, MIDI, SP-MIDI)

Tip


- Settings** ● Open Image Files Manually ● Play Music Files Automatically
(P.15-19)

Mail Log


All Mails Logs: All sent/received messages



Receive Logs: All received messages (up to 20 records)

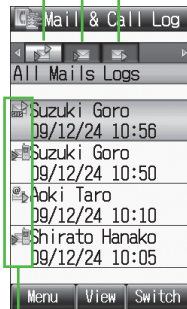Send Logs: All sent messages (up to 20 records)



Mail Type



-  Mail from Email Address
-  Mail from Phone Number
-  Received SMS
-  Mail Sent to Email Address
-  Mail Sent to Phone Number
-  Sent SMS

1  to open Call Log →  [Switch]


Mail Log appear.

2  to select a Log



3 To view entry details, select an entry

- To send a message:  → Create message (S! Mail:  From Step 4 on P.12-4/SMS:  From Step 4 on P.12-8)

Note

- Newest record appears at top of list. Names appear if saved in Phone Book.
- Mail Log records remain even if handset is turned off.
- Alternatively, **Main Menu** ► **Phone** ► **Mail & Call Log** ►  [Switch].

Tip

- Call Log Functions ( P.2-12)
- Change Font Size by Function ( P.15-5)

3D Pictograms



Message text appears in 3D animation.


- Animation unavailable for S! Mail Notice.

1 In Message window,  [Menu]


2 **3D Preview**

The first 150 characters of message text appear animated.

- To pause/resume: 
- To cancel:  [Stop]

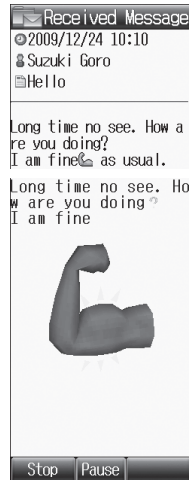

Tip

- **Settings** ● Enable 3D Pictograms when Opening Messages ● Change Font/Background Color ( P.15-18)

Using Server Mail

Retrieve mail list stored at the Center to view Server Mail.

Viewing Server Mail

- 1 [Envelope][Envelope] → *Server Mail Box*
- 2 *Mail List* → [Envelope][Update] → [Green Circle]

■ Update Server Mail List

> After Step 1, *Mail List* → [Envelope][Menu] → *Update Mail List* → [Green Circle]

Retrieving Server Mail

- 1 [Envelope][Envelope] → *Server Mail Box* → *Mail List*
- 2 (Highlight an S! Mail →) [Envelope][Menu] → *Retrieve*
- 3 *Retrieve a New Message*
One

Retrieve Multiple Message

Selected Messages → (Repeat: Select a message)*
→ [Envelope][Retrieve] → [Green Circle]

■ Retrieve All Messages

> [Envelope] → *Server Mail Box* → *Mail List* → [Envelope][Menu] → *Retrieve* → *All* → [Envelope][YES]

Tip

- Mail Security Setting (☞ P.10-8)
- Server Mail Functions (☞ Below)

Other Functions

Retrieving New Messages Manually

Retrieve S! Mail messages saved at the Center while handset is off/out-of-range.


> [Envelope] → *Retrieve New*

Viewing System Messages





⚠ indicates a problem with incoming message (e.g., undelivered attachments).

> [Envelope] → *Incoming Mail* → Select a folder → Select a message → [Envelope][Menu] → *System Message*

Server Mail Functions

From ▶  ▶ Server Mail Box

Delete Server Mail

- > **Mail List** → (Highlight Server Mail →)  [Menu]
 - **Delete Server Mail** → **One** or **Selected Files** →
 - (For **Selected Files**, Check messages →  [Delete]) → 
- To delete Server Mail using S! Mail Notice: Highlight S! Mail Notice (from Message list) →  [Menu] → **Delete** → **Delete Server Mail** → 

Delete All Server Mail

- > **Delete Server Mail All** →  [YES] → Enter Phone Password

Forward Server Mail

- > **Mail List** → Highlight an S! Mail →  [Menu]
 - **Forward Server Mail** → Select Address field → Search/enter address → Select an address or enter directly →  [Send]
- To forward Server Mail via S! Mail Notice: Highlight S! Mail Notice (from Message list) →  [Menu] → **Forward Server Mail** → Select Address field → Search/enter address → Select an address or enter directly →  [Send]
- Forwarded Server Mail messages remain in Mail List.
-  appears for forwarded Server Mail messages in Drafts, Unsent Messages and Sent Messages folders.

Sort Server Mail

- > **Mail List** →  [Menu] → **Sort** → **Date** or **From**

View Server Mail Property

- > **Mail List** → Highlight an S! Mail →  [Menu] → **Property**

Organizing/Using Messages


Checking Messages in Messaging Folders

- At time of purchase, information messages are provided for your convenience (Transmission fee does not apply).


1 → **Incoming Mail, Drafts, Sent Messages** or **Unsent Messages**

- In Incoming Mail/Sent Messages folders, select a folder then message.
- Messaging Folders:  P.12-3

2 Select a message

- To toggle previous/next messages in Received/Sent Message window: 

Open Incoming Mail Folder Directly

- > In Step 1, press and hold 
- The newest unread message opens.

Open Sent Messages Folder Directly

- > In Step 1, press and hold 

Tip

- Organizing Messages ( P.12-22)
- Using Messages ( P.12-24)

Mail Delivery Rule

Save messages that satisfy set conditions to designated folder automatically.


- Up to 10 conditions can be set per folder.
- Previously sent/received messages are not sorted.
- When same conditions are set to several folders, messages are sorted in numerical order of designated folders.

1  [envelope icon] → **Incoming Mail** or **Sent Messages**

2 Highlight a folder →  [Menu] → **Mail Delivery Rule**

3  [Menu] → Select an item (See below)

| Item | Operation/Description |
|------------------------------------|---|
| Add Sender/ Add Address | Sort messages by sender address > Search/enter address → Select sender/recipient or enter directly |
| Add Subject | Sort messages by mail subject > Enter subject ● SMS cannot be sorted by mail subject. |

- To edit saved address/subject: Select address/subject → Edit address/subject
- To delete saved address/subject: Highlight an address/subject →  [Menu] → **Delete**

4  [Set]

Re-Sort Set Folders

Re-sort messages in folders by set conditions.

> After Step 1, highlight a folder →  [Menu] → **Distribute in Folder** → 

Note

- Alternatively, **Main Menu** ► **Messaging** ► **Settings** ► **Universal Settings** ► **Mail Delivery Rule** (📖 P.15-18).

Filter Spam




Sort messages from unknown senders into Spam Folder without incoming notification. Use Safe List to receive messages from certain addresses/phone numbers and domains.

Note

- Messages from unknown senders may be sorted into Spam Folder. Be careful when deleting messages from Spam Folder.






Setting Spam Folder

<Default> OFF

- 1   → *Settings* → *Universal Settings* → *Anti-Spam Measures*
- 2 *Spam Filter* → Enter Phone Password
- 3 *ON* → 

Safe List

- Specify up to 20 addresses/phone numbers and domains (for example, @softbank.ne.jp) to receive messages from without sorting into Spam Folder.

- 1   → *Settings* → *Universal Settings* → *Anti-Spam Measures* → *Safe List*
- 2 *<No Items>*
 - When saved items exist:  [Menu] → *Add*
- 3 *Add Domains/Phone Numbers/Mail Addresses*
Input Domain, Enter Number or *Enter Address* → Enter a domain/phone number/mail address
Select from Receive Log
Receive Logs → Highlight a message →  [Select]
- 4  [Set]

Edit Saved Addresses/Numbers

> After Step 1, highlight an item →  [Edit] → Edit



Delete Addresses/Numbers


> After Step 1, (highlight an item →)  [Menu] → *Delete*

Tip

- Report Spam ( P.12-23)

Replying to Messages


- 1 In Message window,  [Reply]
 - **Re:** appears before Subject when replying to S! Mail.
Received message text is quoted.
- 2 Complete message →  [Send]

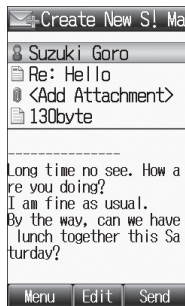

Reply without Quoting

> In Message window,  [Menu] → *To Sender* or *Reply to All*

Reply to All

> In Step 1,  [Menu] → *Reply* → *Reply to All with Quote* or *Reply to All*

Note

- Alternatively, reply to messages by selecting a message from Message List (☞ P.12-23).
- When replying/forwarding a message, words used in received message take priority in Forecast list (☞ P.3-5).

Tip

Settings

- Base Word Predictions on Received Message When Replying (☞ P.15-18)
- Quote Original Message in Reply (☞ P.15-19)

Using Mail Groups

Save mail addresses by group. Messages can be sent to specified group of recipients.

- Save up to 20 recipients per group.
- Create up to 20 groups.

Creating Mail Groups

- 1  [] → *Settings* → *S! Mail Settings* → *Mail Group Setting*

- 2 Select a group

- 3 **Select Mail Address from Phone Book**

<Empty> → Select an entry


Select Mail Address from Send/Receive Logs

Highlight <Empty> →  [Menu]


→ *Send Logs* or *Receive Logs*

→ Select an entry

Enter Mail Address Directly

Highlight <Empty> →  [Menu] → *Enter Number* or *Enter Address* → Enter phone number or mail address

- Repeat Step 3 to save addresses.

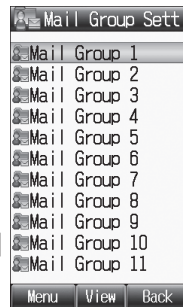

Change Group Names

> In Step 2, highlight a mail group → [Menu] → *Rename* → Edit group name

Reset Group Names

> In Step 2, highlight a mail group → [Menu] → *Reset Name* → []

Delete Saved Addresses

> After Step 2, (highlight an address →) [Menu] → *Delete* → *One* or *All* → [YES] (→ For *All*, enter Phone Password)

Send a Message to All Group Members

> In Step 2, highlight a group → [Menu] → *Create S! Mail* → Create message (From Step 4 on P.12-4)

● To select a mail group from S! Mail composition window: P.12-9

Note

- Alternatively, **Main Menu** ► **Phone** ► **Settings** ► **Mail Group Setting**.

Organizing Messages

Functions Available in Incoming Mail/Sent Messages Folders

> [Menu] → *Incoming Mail* or *Sent Messages* → (Highlight a folder →) [Menu] → Select an item (See below)

| Item | Operation/Description |
|--|--|
| Add Folder | > Enter folder name |
| Edit Folder Name* | > Edit folder name |
| Mail Delivery Rule* | Sort messages (From Step 3 on P.12-19) |
| Distribute in Folder | Re-sort messages in selected folder > [] |
| Delete Folder* | > [] → Enter Phone Password |
| Set Mail Security/Cancel Mail Security | Set/Cancel Mail Security. Set to require Phone Password for opening a folder |
| Mail Security | > Enter Phone Password |

* User Folder only

■ Functions Available from Message Lists

- > → **Incoming Mail, Drafts** or **Sent Messages** (→ Select a folder)
 → Highlight a message → [Menu] → Select an item (See below)

| Item | Operation/Description |
|--|--|
| Retrieve ¹ | Retrieve complete S! Mail |
| Edit ^{2,3} | Edit message to send (S! Mail: From Step 2 on P.12-4/SMS: From Step 2 on P.12-8) |
| Send ³ | Send message |
| Reply ¹ | > To Sender with Quote, To Sender, Reply to All with Quote or Reply to All → Create message (S! Mail: From Step 4 on P.12-4/SMS: From Step 4 on P.12-8) |
| Forward ¹ | > Select Address field → Search/enter address → Select an address or enter directly → [Send] <ul style="list-style-type: none"> ● When forwarding S! Mail Notice, select Forward or Forward Server Mail. ● Attachments are also forwarded. (Messages with copy protected attachments may not be forwardable.) |
| Call | > Select an item → Follow the steps |
| Add Destination to Phone Book ² | Save recipient address to Phone Book (Other Ways to Add New Entries: From Step 2 on P.4-5) |
| Add Sender to Phone Book ¹ | Save sender address to Phone Book (Other Ways to Add New Entries: From Step 2 on P.4-5) |
| Protect/Unprotect ^{1,2} | P.12-24) |

| Item | Operation/Description |
|----------------------------------|--|
| Move ^{1,2} | Move messages to specific folders > One or Selected Files (→ For Selected Files , check messages to move → [Move]) → Select a folder (→ For Selected Files ,) <ul style="list-style-type: none"> ● SMS saved on USIM Card cannot be moved. |
| Outgoing+Incoming ^{1,2} | Show sent/received message records > Select a sender/recipient address <ul style="list-style-type: none"> ● or appears. ● Select a record to open Message window. Press to return to previous window. |
| Mail List Display Setting | Change list view > Select an item |
| Report Spam ¹ | Report received message as Spam Mail > [Send] <ul style="list-style-type: none"> ● Change destination to report to (P.15-18). |
| Delete | P.12-24) |
| Local Connectivity ¹ | > Select an item <ul style="list-style-type: none"> · Infrared: Send SMS messages via Infrared · Copy to USIM or Copy to Phone: Copy SMS messages between USIM Card and handset |
| Send via Infrared | Send S! Mail messages via Infrared |
| Delivery Report ² | View Delivery report |
| Sort | Change display order > Select an item |
| Property | View detailed information (Subject, From, To, etc.) |

¹ Received messages only

² Sent messages only

³ Drafts/Unsent messages only

Delete Messages

> In Message List window, follow the steps (See below)

| Item | Operation/Description |
|--------------------------|--|
| Delete | > Highlight a message → [Menu] → <i>Delete</i> → <i>One</i> → [Execute] |
| Delete Selected Messages | > [Menu] → <i>Delete</i> → <i>Selected File</i> → Check messages → [Delete] → [Execute] |
| Delete All Messages | > [Menu] → <i>Delete</i> → <i>All</i> → [YES] → Enter Phone Password ● SMS saved in USIM cannot be deleted. |

Protect Messages

> In Message List window, follow the steps (See below)

| Item | Operation/Description |
|-------------------------------------|--|
| Protect/Unprotect One message | > Highlight a message → [Menu] → <i>Protect</i> or <i>Unprotect</i> → <i>One</i> |
| Protect/Unprotect Selected Messages | > (Highlight a message →) [Menu] → <i>Protect</i> or <i>Unprotect</i> → <i>Protect Selected Items</i> or <i>Unprotect Selected Items</i> → Check messages → [Execute] |








- SMS saved in USIM Card cannot be deleted.

Using Messages

Functions Available in Received/Sent Message Window

> In Received/Sent Message window, [Menu] → Select an item (See below)

| Item | Operation/Description |
|--|---|
| Retrieve ¹ | Retrieve complete S! Mail |
| Edit ² | Edit message to send (S! Mail: [Send] From Step 2 on P.12-4/SMS: [Send] From Step 2 on P.12-8) |
| Reply ¹ | > <i>To Sender with Quote</i> , <i>To Sender</i> , <i>Reply to All with Quote</i> or <i>Reply to All</i> → Create message (S! Mail: [Send] From Step 4 on P.12-4/SMS: [Send] From Step 4 on P.12-8) |
| Forward ¹ | > Select Address field → Search/enter address → Select an address or enter directly → [Send] ● When forwarding S! Mail Notice, select Forward or Forward Server Mail . ● Attachments are also forwarded. (Messages with copy protected attachments may not be forwardable.) |
| Call | > Select an item → Follow the steps |
| Text Copy | Copy address, subject or text > Select an item (→ For Address , select an address) → Copy (Copy/Cut & Paste: [Send] From Step 2 on P.3-8) |
| Add Destination to Phone Book ² | Save recipient address to Phone Book (Other Ways to Add New Entries: [Send] From Step 2 on P.4-5) |
| Add Sender to Phone Book ¹ | Save sender address to Phone Book (Other Ways to Add New Entries: [Send] From Step 2 on P.4-5) |


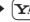



| Item | Operation/Description |
|------------------------------------|---|
| Attachment List | Show attached files |
| Save as Template | Save edited templates |
| 3D Preview | View message in 3D animation |
| Outgoing+ Incoming | Show sent/received message records > Select a sender/recipient address ●  or  appears. ● Select a record to open Message window. Press  to return to previous window. |
| Report Spam¹ | Report received message as Spam >  [Send] ● Change destination to report to ( P.15-18). |
| Font Size | > Select a size |
| Delete | ( P.12-24) |
| System Message¹ | View System Messages ( P.12-17) |
| Delivery Report² | View Delivery report |
| Property | View detailed information (Subject, From, To, etc.) |

¹ Received Message window only

² Sent Message window only

■ Use Linked Information

> In Message List window, select a message → Follow the steps (See below)

| Item | Operation/Description |
|--------------------------|--|
| Make Calls | > Select a number (highlighted) → Call → Voice Call or Video Call →  |
| Send Messages | > Select a number or address (highlighted) → Create Message → S! Mail or SMS → Create message →  [Send] ● Selecting S! Mail or SMS is not available when using addresses. |
| Add to Phone Book | > Select a number or address (highlighted) → Add to Phone Book → Create New Entry or select an existing entry → Add to Phone Book ( from Step 2 on P.4-3) |
| Access Website | > Select a URL (highlighted) → Connect with Yahoo! Keitai or Connect with PC Site Browser →  |
| Add to Bookmarks | > Select a URL (highlighted) → Add to Bookmark → <Title> → Enter a title → Select Folder field → Select a folder →  [Save] |

13

Messaging

13-26

Internet

| | |
|--|--------------|
| Getting Started | 14-2 |
| Using Yahoo! Keitai | 14-3 |
| Opening Yahoo! Keitai Main Menu | 14-3 |
| Web Search | 14-3 |
| Entering URL | 14-4 |
| Using Access Histories | 14-4 |
| Exiting Mobile Internet | 14-4 |
| Using PC Site Browser | 14-5 |
| Opening Menu | 14-5 |
| Web Search | 14-5 |
| Entering URL | 14-5 |
| Using Access Histories | 14-5 |
| Exiting Internet | 14-5 |
| Basic Operations..... | 14-6 |
| Using Cursor | 14-6 |
| Text Entry & Item Selection | 14-7 |
| Using Information | 14-8 |
| Bookmarks & Saved Pages..... | 14-8 |
| Managing Bookmarks & Saved Pages | 14-9 |
| Bookmarks/Saved Pages Functions..... | 14-10 |
| Downloading Image/Sound Files | 14-11 |
| Using Number, Address or URL..... | 14-11 |
| Streaming | 14-12 |
| Option Menu Items..... | 14-13 |

Getting Started

Access Yahoo! Keitai Mobile Internet and PC sites.

"Yahoo! Keitai" is both a SoftBank Mobile Internet service and the SoftBank Mobile Internet portal.

View PC Internet websites via PC Site Browser.

Internet

Yahoo! Keitai

- View Mobile Internet Websites (☞ P.13-3)
- Download image/sound files, etc. (☞ P.13-11)
- Video/Music Streaming (☞ P.13-12)
- Register SI Quick News (☞ P.6-5)

PC Sites

- View PC Sites (☞ P.13-5)
- Download still images (☞ P.13-11)

Note

- Separate subscription is required for Network access.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Video Calls cannot be received while connecting to the Network.

Cache Memory

Retrieved information is temporarily saved in Cache Memory.

When full, oldest is deleted first.

- Previously viewed pages may load from Cache Memory. To view the latest, update information (☞ P.13-13).
- Cached items with expiry dates are deleted upon expiry.
- Information remains even after handset is disconnected from the Network or handset power is turned off.

Tip

Settings

- Clear Cache ● Delete Cookies (☞ P.15-22)
- Initialize Browser (☞ P.15-23)

SSL/TLS

SSL (Secure Sockets Layer) and TLS (Transport Layer Security) are encryption protocols for secure Internet transmissions of important/sensitive information such as credit card numbers.

Server certificates are saved on handset (☞ P.15-22).

Notes

When a security notice appears, subscribers must decide for themselves whether or not to open the page.
SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co., Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust Systems Co., Ltd. cannot be held liable for any damages associated with the use of SSL and TLS.

Tip

● Security Settings (☞ P.15-22)

Using Yahoo! Keitai

Opening Yahoo! Keitai Main Menu

Select Yahoo! Keitai Main Menu items to access websites.

Main Menu ► Yahoo!

1 Yahoo! Keitai

Handset connects to the Network.

2 Select a menu item

- Repeat Step 2 as required.
- Basic Operations: ☞ P.13-6

Note

- Shortcut: In Standby, press [Y] [Y/!]

Web Search

Main Menu ► Yahoo! ► Web Search

1 Enter text

Entering URL

Enter URLs (addresses beginning with "http://" or "https://") directly to access websites, or open previously viewed pages using URL histories.

- Up to 20 URL histories are stored.

Main Menu ► Yahoo! ► Enter URL


1 Enter URL Directly

Direct Entry → Enter URL

Use URL History

URL History List →

Select a URL

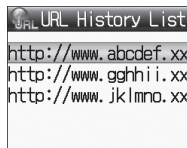

URL History List Window

■ Edit URL Histories

> In Step 1, **URL History List** → Highlight URL → [Menu] → **Edit** → Edit URL

■ Delete URL Histories

> In Step 1, **URL History List** → (Highlight URL →) [Menu] → **Delete** → **One** or **All** → [YES]

Using Access Histories

Open previously viewed pages using access histories.

- Up to 100 access histories are stored. (The number of savable histories varies depending on data amount.)

Main Menu ► Yahoo! ► History

1 Select a history



History Window

■ Delete Access Histories

> In Step 1, (Highlight URL →) [Menu] → **Delete** → **One** or **All** → [YES] (→ For **All**, enter Phone Password)

Exiting Mobile Internet




Note

- Closing handset does not affect active browser.

Using PC Site Browser

Opening Menu

View PC websites using PC Site Browser.

- When PC Site Browser is active,  appears.
- Some pages may not be viewable.
- Viewing PC websites may incur high charges.

Main Menu ► Yahoo! ► PC Site Browser

1 *Homepage* →  [OK] →  [YES] /  [NO]

2 Select a menu item
Repeat Step 2 as required.

Tip

Settings ● Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai (☞ P.15-21)

Web Search

Follow same operation accessed from Yahoo! Keitai.

Main Menu ► Yahoo! ► PC Site Browser ► Web Search

- Follow Step 1 of same operation accessed from Yahoo! Keitai. (☞ P.13-3)

Entering URL

Follow same operation accessed from Yahoo! Keitai.

Main Menu ► Yahoo! ► PC Site Browser ► Enter URL

- Follow Step 1 of same operation accessed from Yahoo! Keitai. (☞ P.13-4)

Using Access Histories

Follow same operation accessed from Yahoo! Keitai.

Main Menu ► Yahoo! ► PC Site Browser ► History

- Follow Step 1 of same operation accessed from Yahoo! Keitai. (☞ P.13-4)

Exiting Internet












1  → 

Note

- Closing handset does not affect active browser.

Basic Operations

Using Cursor



| | |
|---|--|
| Move Cursor | Use cursor to select underlined menu items.  to move right  to move left  to move to previous line  to move to next line |
| Scroll Pages | Scroll bar appears on right side or at bottom of Display when page content continues beyond view.  scroll up/down  scroll left/right  scroll page up by a screenful  scroll page down by a screenful ● To scroll continuously, press and hold above keys. |
| Move to previous page/ next page | Previously viewed pages are temporarily saved in Cache Memory ( P.13-2).  [Back] : Return to previous page  [Menu] → Forward : View next page ● Some web pages may not appear after performing the steps above. |

When Authentication is Required

Some pages require user authentication for access. If required, enter user ID or password.

Tip


Settings

- Change Font Size
- Scroll Unit
- Images Off
- Sounds Off ( P.15-21)
- Delete User ID or Password Entered when Authentication is Required ( P.15-22)

Text Entry & Item Selection

Enter text or select items to send information.

Example:

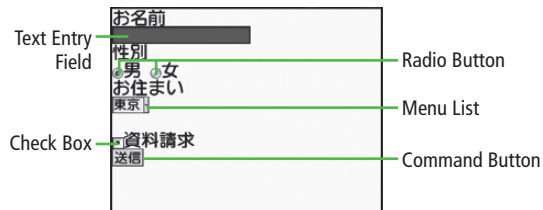

- Actual web pages may differ in appearance.

| | |
|-------------------------|---|
| Text Entry Field | Highlight field → → Enter text → ● Enter previously entered text (input memory). [Menu] → <i>Insert</i> → <i>Input Memory</i> → Select input memory |
| Menu List | Highlight field → Menu list appears. Highlight an item → Selected items are highlighted. |
| Radio Button | Highlight → When selected, appears. |
| Check Box | Highlight → When selected, appears. Press again to cancel selection. |
| Command Button | Highlight the button → Corresponding command is executed. |

Tip

Settings ● Delete Input Memory (🔗 P.15-22)

Using Information

Bookmarks & Saved Pages

Bookmark websites or save page content to Saved Pages.

- Some copy protected materials cannot be saved.

| | |
|-------------|---|
| Bookmarks | Save links to websites. Handset connects to the Network to open the link. |
| Saved Pages | Save page content. Handset opens saved pages without connecting to the Network. |

Saving Web Pages

1 Open a web page → [Menu] → **Bookmarks** or **Saved Pages** → **Add**

2 **Save Bookmarks**

Select title → Edit title → [Save]

- To save to folders: Select Folder → Select a folder (Not selectable when no folders exist in Bookmarks.)

Save Saved Pages

Edit title

Viewing Bookmarks & Saved Pages

Main Menu ► Yahoo! (► PC Site Browser)

1 **Bookmarks** or **Saved Pages** → Select an item

Example: Yahoo! Keitai Browser



Bookmarks List Window



Saved Pages List Window

■ **Open Bookmarks/Saved Pages while Online**

> Open a web page → [Menu] → **Bookmarks** or **Saved Pages** → **List**

Note

- Create folders in Bookmarks List to organize Bookmarks (☞ P.13-9).

Tip

- Sending Bookmarks via Infrared (☞ P.9-3)
- Save URLs to Bookmarks ● Send Bookmark URLs via S! Mail (☞ P.13-10)

Managing Bookmarks & Saved Pages

Follow the steps below to open Bookmarks or Saved pages list:

■ Yahoo! Keitai

Main Menu ► Yahoo! ► Bookmarks or Saved Pages

■ PC Site Browser

Main Menu ► Yahoo! ► PC Site Browser
► Bookmarks or Saved Pages

Note

- Panasonic site bookmark cannot be edited/deleted.
- When a different USIM Card is inserted, Saved Pages do not appear or title name cannot be changed.

Creating New Bookmark Folders

- Folders cannot be created within existing folders.

- 1 In Bookmarks list window, [Menu] → **Create**
- 2 **Folder** → Enter title

■ Move Bookmarks to Folder

> In Step 1, highlight a bookmark → [Menu] → **Move to** → Select a folder

■ Edit Folder Title

> In Step 1, highlight a folder → [Menu] → **Edit** → Edit folder title

Editing Bookmark Titles/URLs

- 1 In Bookmark list window, highlight a bookmark → [Menu] → **Edit**
- 2 Select a title/URL
- 3 Edit title/URL → [Save]

Renaming Saved Pages

- 1 In Saved Pages list window, highlight an item → [Menu] → **Rename**
- 2 Edit title

Tip

●Delete Bookmarks/Folders ●Delete Saved Pages ●Reorder Bookmarks/Folders (P.13-10)

Bookmarks/Saved Pages Functions

From ► **Main Menu** ► **Yahoo!** (► **PC Site Browser**)
► **Bookmarks** or **Saved Pages**

■ Save URLs to Bookmarks

> [Create]* → **Bookmark** → <Title> → Enter Title → <URL> → Enter URL → When saving to a folder, select Folder → Select a folder → [Save]

* When saved items exist: [Menu] → **Create**

■ Delete Bookmarks/Folders

> Highlight a bookmark/folder → [Menu] → **Delete** → Follow the steps below

| Item | Operation/Description |
|----------------|--|
| One | > [] |
| Selected Files | > Check bookmarks/folders → [Delete] → [] |
| All | > [YES] → Enter Phone Password |

- Panasonic site bookmark cannot be edited/deleted.

■ Delete Saved Pages

> (Highlight a saved page →) [Menu] → **Delete** → Follow the steps below

| Item | Operation/Description |
|----------------|--------------------------------------|
| One | > [] |
| Selected Files | > Check saved pages → [Delete] → [] |
| All | > [YES] → Enter Phone Password |

■ Reorder Bookmarks/Folders

> Highlight a bookmark/folder → [Menu] → **Reordering** → [] to select new order

■ Send Bookmark URLs

> Highlight a bookmark → [Menu] → **Send Bookmark** → **S! Mail** or **SMS** → Create message (S! Mail: [] From Step 2 on P.12-4/ SMS: [] From Step 2 on P.12-8)

Downloading Image/Sound Files

Save images, sounds, etc. to Data Folder or Memory Card.

- For PC Site Browser, only still images can be saved.

- 1 Open a web page →  [Menu] → **Select item**
- 2 Select a file
File details appear.
- 3  [Save] → **Phone** or **Memory Card**
Available menu items vary by saved content.




Note

- 841P does not support Progressive JPEG files.
- Do not remove/install Memory Card while saving files to it.
- Do not turn handset power off while downloading or saving files.
Files may be damaged.
- Some copy protected files may not be saved.

Using Number, Address or URL






Use linked numbers, addresses or URLs to make calls, send messages, access websites, or save them directly to Phone Book.

- 1 Open a web page containing phone numbers, mail addresses or URLs
- 2 **Phone Number**
Select a phone number → Select an item (See below)

| Item | Operation/Description |
|------------|---|
| Voice Call | Make a Voice Call >  |
| Video Call | Make a Video Call >  |
| Phone Book | Save number to Phone Book ( From Step 2 on P.4-5) |

E-mail Address

Select an address → Select an item (See below)
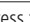
| Item | Operation/Description |
|------------|---|
| S! Mail | Create S! Mail ( From Step 4 on  P.12-4) |
| SMS | Create SMS ( From Step 4 on  P.12-8) |
| Phone Book | Save mail address to Phone Book ( From Step 2 on P.4-5) |

URL

Select URL

Handset connects to the Network.




Streaming

- Supported by compatible files on Yahoo! Keitai sites only.
- Streaming files cannot be saved.

Main Menu ► Yahoo! ► Yahoo! Keitai


1 Open a web page → Select a file

Media Player activates and streaming starts.

- To pause:  →  to resume
- Playback Window Operations:  P.7-7
(Replay Track, Play Previous and Play Next are unavailable)

2 or [Back] to exit

Note

- Streaming requires a continuous Network connection. Network remains connected even during a pause (Transmission fees apply).
- Streaming indicator appears ( P.1-8).
- Paused streams may stop after three minutes of inactivity.
- When roaming abroad, streaming may be unavailable or not be performed properly.

Incoming Voice Calls while Streaming

Incoming call pauses an active stream.

- Video Calls cannot be received while streaming.

Option Menu Items

In Yahoo! Keitai, press  [Menu] for these options:

- Some functions may not be available depending on web pages.

| Item | Operation/Description |
|---|--|
| Forward | Go to next page (➡ P.13-6) |
| Bookmarks | View Bookmarks list, add bookmarks, or access web pages |
| Saved Pages | View Saved Pages list or save page content to Saved Pages |
| Text Copy | Copy page text |
| Reload Page | Refresh page information |
| Small Screen/ PC Screen ¹ | Toggle display size |
| Page Operation | Frame In/Frame Out : Select full screen frame Jump to Top : Jump to top of page Jump to Bottom : Jump to end of page Zoom In/Out ¹ : Zoom page in/out |
| Select Item | View, play or save file to Data Folder (Downloading Images/Sounds: ➡ From Step 2 on P.13-11) |
| More | Web Search : Search text in Internet Search in this page : Search text within page History : Open previously viewed pages Send Bookmark : Send URL via S! Mail/SMS Enter URL : Enter URL directly or select URL from URL History list to open site Property : View page details or electronic certificates for secure pages Flash(R) Menu : Playback/pause Flash® files |

| Item | Operation/Description |
|--|------------------------------------|
| To PC Site Browser ² / Change Browser ¹ | Toggle Yahoo! Keitai/PC site |
| Yahoo! Keitai ² / Homepage ¹ | View top menu |
| Settings ² /PC Site Browser Settings ¹ | Change font size and encoding type |

¹ PC Site Browser only

² Yahoo! Keitai only

14

Internet

14-14

S! Appli

| | |
|------------------------------------|-------------|
| Before Using S! Appli | 15-2 |
| Downloading S! Appli..... | 15-2 |
| Using S! Appli..... | 15-3 |
| Activating S! Appli..... | 15-3 |
| Terminate/Suspend & Resume..... | 15-3 |
| Managing Applications..... | 15-4 |

Before Using S! Appli

S! Appli are Java™-based applications designed to run on SoftBank handsets. Download games and other real-time applications for use on handset.

- Separate subscription required to use downloaded applications (not required for pre-installed S! Appli).
- For usage on pre-installed applications, see Help menu for each S! Appli.

Note

- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Network S! Appli

Network S! Appli requires Network connection.

- Transmission fees apply.

License Information

> [Main Menu](#) ▶ [S! Appli](#) ▶ [Information](#)

Downloading S! Appli

Download up to 100 S! Appli file to handset/Memory Card.

[Main Menu](#) ▶ [S! Appli](#) ▶ [S! Appli List](#)

1 *Download S! Appli*

Handset connects to the Network, and download site appears.

2 Select an S! Appli

Properties appear.

3 Follow onscreen instructions

4 Select a save location

Downloaded S! Appli is saved to Data Folder automatically.

- Download may take some time.

5 [YES] to activate

Downloaded S! Appli starts.


- To exit: [NO]


Using S! Appli

Activating S! Appli


Main Menu ► S! Appli ► S! Appli List

1 Select an S! Appli

S! Appli starts and  appears.


- See application Help menu for usage information.
- Confirmation appears when selecting Network S! Appli.
- For a Memory Card S! Appli, press  to select **Memory Card** tab before Step 1.

Note

- Alternatively, **Main Menu ► Data Folder ► S! Appli ►** Select an S! Appli.
- Incoming transmissions pause S! Appli.
- View Blind ( P.1-24) is temporarily canceled while an S! Appli is active. To reactivate View Blind, terminate or pause S! Appli.

Tip

Settings


- Change Volume ● Backlight On/Off ● Deactivate Vibration
- Suspend S! Appli after Set Period of Inactivity ● Update S! Appli Information on Memory Card from Another Handset ( P.15-23)

Terminate/Suspend & Resume

Terminating/Pausing S! Appli

1 While running an S! Appli, 

2 **Terminate** or **Suspend**

 appears for a suspended application.

Resuming/Terminating Paused S! Appli

Main Menu ► S! Appli ► S! Appli List

1 **Resume** or **Terminate**

Resumed application starts from paused point.

Managing Applications

Moving S! Appli between Handset and Memory Card

Main Menu ► S! Appli ► S! Appli List

- 1 Highlight an S! Appli → [Menu] → **Move**
 - Some S! Appli may not be moved to Memory Card.

Deleting S! Appli

Main Menu ► S! Appli ► S! Appli List

- 1 Highlight an S! Appli → [Menu] → **Delete** → 
 - Some pre-installed S! Appli may not be deleted.

Viewing S! Appli Properties

Main Menu ► S! Appli ► S! Appli List

- 1 Highlight an S! Appli → [Menu] → **Property**

Set Security Level while Running S! Appli

- Security Level cannot be set for some S! Appli.

Main Menu ► S! Appli ► S! Appli List

- 1 Highlight an S! Appli → [Menu] → **Permission**
- 2 Select an item (See below)

| Item | Operation/Description |
|-----------------------|----------------------------------|
| Network Access | Connect to the Network |
| Auto Invocation | Activate S! Appli |
| Multimedia Recording | Activate Camera |
| Data Reading Access | Read data in Data Folder |
| Data Rewriting Access | Write/delete data in Data Folder |
| Location Access | Retrieve Location information |

- 3 **Always Allowed, Ask First Time***, **Ask Every Time** or **Not Allowed**

* Confirmation appears the first time application is activated.

Settings

| | |
|--|--------------|
| Sound & Vibration | 16-2 |
| Ringtones..... | 16-2 |
| Warning Tone & Key Tone | 16-3 |
| Display | 16-4 |
| Display Settings..... | 16-4 |
| Main Menu | 16-5 |
| Font | 16-5 |
| Backlight..... | 16-6 |
| Keypad | 16-6 |
| Manner Mode | 16-7 |
| Date & Time | 16-8 |
| Call Settings | 16-9 |
| International (Global Roaming)..... | 16-9 |
| Call Time & Call Cost..... | 16-10 |
| Making & Receiving Calls | 16-11 |
| Notification Light | 16-12 |
| Text Entry | 16-12 |
| Conversion..... | 16-12 |
| Conversion during Message Text Entry | 16-13 |
| Phone Book | 16-13 |
| Video Call | 16-14 |
| Function Menus..... | 16-14 |
| Engaged Video Call Settings | 16-14 |

| | |
|--|--------------|
| Camera | 16-15 |
| Camera Settings | 16-15 |
| Video Camera Settings..... | 16-16 |
| S! Quick News (Japanese) | 16-17 |
| Display Settings..... | 16-17 |
| Auto Update/Deleting Information | 16-17 |
| Messaging | 16-18 |
| Universal Settings..... | 16-18 |
| S! Mail Settings..... | 16-19 |
| Feeling Mail Settings | 16-20 |
| SMS Settings | 16-21 |
| Internet | 16-21 |
| Browser Display Settings..... | 16-21 |
| Memory Manager & Reset | 16-22 |
| Security Settings..... | 16-22 |
| Reset..... | 16-23 |
| S! Appli | 16-23 |

Settings Sound & Vibration

Ringtones

From ▶ Main Menu ▶ Settings ▶ Sound Settings

| Setting/Operation | Default |
|---|----------------|
| <p>■ Change Ringtone (Voice Call or Video Call)^{1 2 3}</p> <p>> <i>Assign Ringtone</i> → <i>Voice Call</i> or <i>Video Call</i> → Select a folder in Data Folder → Highlight a tone → [Set]</p> | ブザー.mmf |
| <p>■ Change Ringtone (Message or S! Quick News)^{1 2}</p> <p>> <i>Assign Ringtone</i> → <i>Message</i> or <i>S! Quick News</i> → Select a folder in Data Folder → Highlight a tone → [Set]</p> | 効果音 (キラキラ).mmf |
| <p>■ Change Ringer Volume (Voice Call, Video Call or Message)⁴</p> <p>> <i>Ringer Volume</i> → <i>Voice Call, Video Call</i> or <i>Message</i> → Adjust volume</p> | Volume 3 |
| <p>■ Change Ringer Volume (S! Quick News)</p> <p>> <i>Ringer Volume</i> → <i>S! Quick News</i> → Adjust volume</p> | Silent |
| <p>■ Change Ringtone Duration (Message or S! Quick News)</p> <p>> <i>Ringtone Duration</i> → <i>Message</i> or <i>S! Quick News</i> → Enter ring time</p> | 5 seconds |

■ Set Vibration Alert (Voice Call, Video Call, Message or S! Quick News)⁵

> *Vibration Alert* → *Voice Call, Video Call, Message* or *S! Quick News* → Select a vibration pattern

OFF

¹ Files recorded by Voice Recorder cannot be set for ringtones.

² When unique tones for each Phone Book entry or group are set (☞ P.4-4, P.4-5), Phone Book settings take priority.

³ If a Voice Call is received while streaming/downloading, default ringtone may sound.

⁴ Same setting applies to sound effects from: Web pages, messages and S! Information Channel. When *Escalating Tone* is set, volume sounds at **Volume 6** (setting may not apply to some content).

⁵ Avoid placing handset on unstable surface when Vibration Alert is active/ while charging battery; cancel Vibration Alert before charging battery.

■ Pre-installed Ringtones

| Title | Composer |
|------------------|----------------------------|
| ブザー | Original Tone |
| ソナチネ第1番/第4楽章 | WOLFGANG AMADEUS MOZART |
| 口笛吹きと犬 | PRYOR ARTHUR |
| ワルキューレの騎行 | WAGNER RICHARD WILHELM |
| おもちゃの兵隊の行進 | JESSEL LEON |
| ウィリアム テル 序曲 | ROSSINI GIOACCHINO ANTONIO |
| 騎士たちの踊り OP 64-13 | PROKOFEV SERGEJ S |
| トリッチ・トラッチ・ポルカ | STRAUSS JUN JOHANN |
| 効果音 (運命交響曲) | VAN BEETHOVEN LUDWIG |
| 効果音 (水滴の音) | Original Tone |
| 効果音 (キラキラ) | Original Tone |
| 効果音 (電子音) | Original Tone |
| 効果音 (英語) | Original Tone |
| 効果音 (ショート) | Original Tone |
| 効果音 (ゲーム音) | Original Tone |
| 効果音 (黒電話) | Original Tone |
| Happy/うれしい | Original Tone |
| OK/Good | Original Tone |
| 悲しい/ごめんなさい | Original Tone |
| NG/Bad | Original Tone |
| 注目/重要 | Original Tone |

Names of composers given above conform to JASRAC Website.

Warning Tone & Key Tone

From ► Main Menu ► Settings ► Sound Settings

| Setting/Operation | Default |
|---|---------|
| ■ Set Warning Tone Off > <i>Warning Tone</i> → OFF | ON |
| ■ Change Key Tone > <i>Key Tone</i> → <i>Select Tone Type</i> → Select a tone | Tone 1 |
| ■ Change Key Tone Volume > <i>Key Tone</i> → <i>Tone Volume</i> → Adjust volume | Silent |

Settings Display

Display Settings

From ► Main Menu ► Settings

| Setting/Operation | Default |
|--|-------------------------------|
| <p>■ Change Wallpaper</p> <p>> Display Settings → Customize Main Display → Internal Display → Select a folder in Data Folder → Highlight an image → [Set]</p> | COLOR LIFE.jpg |
| <p>■ Change Outgoing/Incoming Call/Message Image</p> <p>> Display Settings → Customize Main Display → Select an item → Select a folder → Select an image</p> | Default Picture |
| <p>■ Change Battery/Antenna Indicator¹</p> <p>> Display Settings → Customize Main Display → Select an icon type → Select a pattern</p> | Pattern 1 |
| <p>■ Change Display Color Theme</p> <p>> Display Settings → Themes → Select a pattern</p> | Themes 1 |
| <p>■ Set Interface Language</p> <p>> Phone Settings → 言語選択 → English or 日本語</p> | Automatic ² |
| <p>■ Change Clock/Calendar Style</p> <p>> Display Settings → Standby Display → Clock/Calendar Display → Select a clock/calendar type</p> | Standard Clock (Upper Center) |
| <p>■ Show Operator Name in Standby</p> <p>> Display Settings → Standby Display → Operator Name → ON</p> | OFF |

■ Set Standby Window On/Off³

> Display Settings → Standby Display
→ Standby Window → ON (Always) or OFF

ON (Manually)

¹ Regardless of setting, battery indicator appears in Pattern 1 while handset is off.

² **Automatic** applies USIM Card language.

³ S! Quick News Display Settings (☞ P.15-17)

Main Menu

From ► Main Menu ► Settings ► Display Settings

| Setting/Operation | Default |
|--|---------------|
| ■ Change Main Menu Theme ¹ > <i>Change Menu Theme</i> → Select a menu → | Normal Menu 1 |
| ■ Change Main Menu Background > <i>Main Menu Icons</i> → <i>Change Full Image</i> → Highlight an image → [Set] | – |
| ■ Change Main Menu Icons > <i>Main Menu Icons</i> → <i>Change Image</i> → (Repeat: Select an icon → Highlight an image → [Set]) | – |
| ■ Reset Main Menu Icons ² > <i>Main Menu Icons</i> → <i>Reset Defaults</i> → | – |

¹ While changing theme, other functions are unavailable. For approximately 30 seconds after process is complete, calls/messages may be blocked.

² When Menu Theme is **Normal Menu 2**, Menu Theme setting returns to default after resetting Main Menu icons.

Font

From ► Main Menu ► Settings ► Display Settings

| Setting/Operation | Default |
|--|---------|
| ■ Change Font Size by Function > <i>Font Size</i> → Select an item → Select a size | Normal |
| ■ Set Menu Font Sizes Collectively > <i>Font Size</i> → <i>Collective Setting</i> → <i>Set to Large</i> or <i>Set to Small</i> ¹ | – |
| ■ Change Font Style ² > <i>Font Pattern</i> → Select a pattern | Font 1 |

¹ When **Set to Small** is set, font size for Phone Book, Message List and Mail & Call Log is **Normal**.

² Font Pattern returns to Font 1 while S! Appli is active.

Backlight














From ► **Main Menu** ► **Settings** ► **Display Settings**
 ► **Backlight Settings**

| Setting/Operation | Default |
|--|------------|
| ■ Adjust Brightness > Internal Display → Brightness → Select a brightness level | Level 3 |
| ■ Change Display Backlight Time* > Internal Display → Backlight Time → Select a duration | 15 seconds |
| ■ Set Key Backlight Time/OFF > Key Backlight Time → Select a duration or OFF | 15 seconds |

* Backlight duration for calls remains unchanged at 5 seconds.

Settings Keypad

From ► **Main Menu** ► **Settings** ► **Phone Settings**
 ► **Key Settings**

| Setting/Operation | Default |
|--|-----------|
| ■ Change Functions Assigned to  ,  ,  in Standby* > Customization → Select a key & operation → Select an item → Select a function | (☞ P.1-6) |
| ■ Disable Functions Assigned to  ,  ,  in Standby > Customization → Select a key & operation →  [Menu] → Invalidate →  | - |
| ■ Reset Functions Assigned to  ,  ,  in Standby > Customization →  [Menu] → Reset Defaults →  | - |
| ■ Hide Confirmation when Pressing Bookmark Key > Access Confirm → OFF | ON |

* Key functions are set to default while Simple Mode is active.

Settings Manner Mode

From ► Main Menu ► Settings ► Manner Mode Settings

| Setting/Operation | Default |
|---|---------|
| ■ Set Manner Mode Type* > Select a mode ● When Manner , Drive or Original Manner is set, an indicator appears in Standby (☞ P.1-8). | Normal |
| ■ Personalize Individual Mode Settings > Highlight a mode → ☑ [Menu] → Edit → Select an item → Edit | — |

* Manner Mode and Drive Mode can be activated/deactivated in Standby (☞ P.1-15, P.1-16).

■ Default Settings by Mode

| Normal | Manner | Drive | Original Manner |
|--|-----------|--------|-----------------|
| Assign Ringtone (Voice Call/Video Call) | | | |
| ブザー.mmf | — | — | ブザー.mmf |
| Assign Ringtone (Message/S! Quick News) | | | |
| 効果音 (キラキラ).mmf | — | — | 効果音 (キラキラ).mmf |
| Ring Volume (Voice Call/Video Call/Message) | | | |
| Volume 3 | — | — | Volume 3 |
| Ring Volume (S! Quick News) | | | |
| Silent | — | — | Silent |
| Ringtone Duration (Message/S! Quick News) | | | |
| 5 sec | 5 sec | 5 sec | 5 sec |
| Key Tone (Tone Type) | | | |
| Tone 1 | — | Tone 1 | Tone 1 |
| Key Tone (Tone Volume) | | | |
| Silent | — | Silent | Silent |
| Warning Tone | | | |
| ON | — | OFF | ON |
| Vibration Alert (Voice Call/Video Call/Message) | | | |
| OFF | Pattern 1 | OFF | OFF |
| Vibration Alert (S! Quick News) | | | |
| OFF | OFF | OFF | OFF |
| Answer Phone | | | |
| ON | ON | * | ON |

* When Drive Mode is active, Answer Phone activates automatically, and cannot be set to OFF.

Settings Date & Time

From ► **Main Menu** ► **Settings** ► **Phone Settings**
 ► **Date & Time**

| Setting/Operation | Default |
|---|------------|
| Change Date and Time¹ > <i>Home Clock</i> → <i>Date & Time</i> → Enter date → Enter time | — |
| Deactivate Automatic Time Correction via Yahoo! Keitai² > <i>Time Correction</i> → <i>Automatic Correction</i> → OFF | ON |
| Correct Time Manually > <i>Time Correction</i> → <i>Manual Correction</i> → <input type="checkbox"/> | — |
| Set Local Time (Home Clock) > <i>Home Clock</i> → <i>Home Area</i> → Select a city | Tokyo |
| Activate Daylight Savings Time (Home Clock) > <i>Home Clock</i> → <i>Daylight Savings Time</i> → ON | OFF |
| Set Time for a Second Time Zone (Away Clock) > <i>Away Clock</i> → <i>Set Time Zone</i> → Select a city | Tokyo |
| Activate Daylight Savings Time (Away Clock) > <i>Away Clock</i> → <i>Daylight Savings Time</i> → ON | OFF |
| Display Away Clock in Standby > <i>Select Clock</i> → <i>Away Clock</i> | Home Clock |
| Set 12 Hour Time Format > <i>Display Pattern</i> → <i>Time</i> → 12 hour | 24 hour |

Change Date Format

> *Display Pattern* → *Date* → Select a date format

YY/MM/DD

¹ Date & Time Settings effective on handset: from 00:00 on 2000/01/01 to 23:59 on 2099/12/31

² Time Correction may invalidate Schedule/Alarm entries.

Settings Call Settings

International (Global Roaming)

From ▶ Main Menu ▶ Settings ▶ Call Settings
▶ Optional Services ▶ International Setting

| Setting/Operation | Default |
|---|-----------|
| <p>■ Change International Code¹</p> <p>> International Code → Enter Phone Password → Enter International Code</p> | 0046010 |
| <p>■ Edit Country/Region Code</p> <p>> Country/Area Number List → Select a country/region → Edit country/region name → Edit country/region code</p> | – |
| <p>■ Add Country/Region Code</p> <p>> Country/Area Number List → [Menu] → Add → Enter country/region name → Enter country/region code</p> | – |
| <p>■ Delete Country/Region Code</p> <p>> Country/Area Number List → Highlight a country/region → [Menu] → Delete → [YES]</p> | – |
| <p>■ Select Operator</p> <p>> Select Operator → Select Auto/Manual → Manual → Select an operator</p> | Automatic |

■ Set Operator Priority for Automatic Search²

> **Select Operator** → **Set Priority** → [Menu] → **Add, Insert, Edit** or **Delete**

- **Add**: new network appears at the end of the list; place cursor at the end of the list beforehand.
- **Insert**: new network appears above selected one.

■ Deactivate Roaming Dial Assistant³

> **Roaming Dial Assistant** → **OFF**

ON
(Active)







¹ In Standby, press [Power] → Press and hold [Call] (+ appears) to enter International Code automatically. (+ indicates International Code.)

² Available operators vary by network conditions.

³ When Roaming Dial Assistant is set to **OFF**, follow the same steps as making Voice Call/Video Call within Japan and Calling abroad from Japan (☞ P.2-2, P.2-6, P.2-7).

Call Time & Call Cost

From ► **Main Menu** ► **Settings** ► **Call Settings**
 ► **Call Time & Cost**

| Setting/Operation | Default |
|---|---------|
| View Total Call Charge for Outgoing Calls > <i>All Calls</i> (→ To reset,  →  → Enter PIN2) | - |
| View Total Call Time for Outgoing Calls¹ > <i>Total Call Time</i> (→ To reset,  → ) | - |
| Display Call Charge² > <i>Display Cost</i> → <i>ON</i> | OFF |
| Set Charge Limit^{3 4} > <i>Set Cost Limit</i> →  [Menu] → <i>Edit</i> → Enter PIN2 → Enter charge limit | - |
| View Remaining Cost > <i>Remaining</i> | - |
| Enter Currency Denomination and Price per Unit of Call Time > <i>Currency Setting</i> →  → Enter PIN2 → Enter three letter abbreviation for the designated currency → Enter value | - |

- ¹ For Group Calling, total length of all calls made from handset remains.
- ² May not be available depending on subscription; if not, Charge Limit setting is also unavailable.
- ³ If charge limit is set below the value set in All Calls, outgoing calls are blocked. Reset All Calls or change charge limit to a higher value.
- ⁴ Emergency numbers (110, 119, 118) are dialable even when the limit is reached.

Making & Receiving Calls

From ► Main Menu ► Settings ► Call Settings

| Setting/Operation | Default |
|--|---------|
| <p>■ Press Any Key to Answer Calls¹</p> <p>> Any Key Answer → ON</p> | OFF |
| <p>■ Answer Calls by Opening Handset</p> <p>> Clamshell Control → Open-to-Answer Call → ON</p> | OFF |
| <p>■ End Calls by Closing Handset²</p> <p>> Clamshell Control → Close-to-End Call → ON</p> | OFF |
| <p>■ Open Incoming Call Log for Missed Calls by Opening Handset³</p> <p>> Clamshell Control → Open-to-Display Missed Call → ON</p> | OFF |
| <p>■ Activate Auto Answer when Using Handsfree Devices⁴</p> <p>> Auto Answer → ON</p> | OFF |
| <p>■ Adjust Volume</p> <p>> Ear Volume → Adjust volume</p> | Level 4 |

¹ Valid Keys: , 0 - 9, *, #, , ,

(Unavailable while a call is on hold)

² Unavailable during a call using Earphone. Yahoo! Keitai cannot be canceled by closing handset even if Close-to-End Call is active.

³ Available only when the first information received on handset is Missed Call.

⁴ Handset beeps and call connects after seven seconds. When Auto Answer and Answer Phone (P.2-12) are active, one with shorter Answer Time takes priority. When Auto Answer and Voice Mail, **Ringer Off** (P.2-15) are both active, Voice Mail takes priority.

Settings Notification Light

From ► **Main Menu** ► **Settings** ► **Phone Settings**
► **Notification Light**

| Setting/Operation | Default |
|--|---------|
| ■ Set Notification Light for Voice Calls* > <i>Voice Call</i> → Select a color or <i>OFF</i> | Color 5 |
| ■ Set Notification Light for Video Calls* > <i>Video Call</i> → Select a color or <i>OFF</i> | Color 5 |
| ■ Set Notification Light for Incoming Messages* > <i>Message</i> → Select a color or <i>OFF</i> | Color 2 |
| ■ Set Notification Light for Voice Calls in Progress > <i>In Conversation</i> → Select a color | OFF |
| ■ Set Notification Light for S! Quick News > <i>S! Quick News</i> → Select a color or <i>OFF</i> | Color 2 |
| ■ Set Notification Light for Clamshell Closing > <i>Clamshell Closing</i> → Select a color or <i>OFF</i> | Color 6 |
| ■ Turn Off Notification Light for Data Transfer > <i>Data Transfer</i> → <i>OFF</i> | ON |

● When highlighting a color, Notification Light illuminates.

* Phone Book entry Notification Light (☞ P.4-4, P.4-5) takes priority over this setting.

Settings Text Entry

Conversion

From ► Text entry widow, [Menu] ► **Input Options**

| Setting/Operation | Default |
|--|-----------|
| ■ Disable Learning (Kana Conversions) > <i>Learning</i> → Enter Phone Password → <i>OFF</i> or <i>OFF in Secret Mode</i> | ON |
| ■ Reset Learned Words > <i>Reset Learned Words</i> → [YES] → Enter Phone Password | — |
| ■ Change Input Font Size > <i>Input Size</i> → <i>Large</i> or <i>Small</i> | Normal |
| ■ Change Candidate Font Size > <i>Candidate Display Size</i> → <i>Large</i> or <i>Small</i> | Normal |
| ■ Hide Predictive Candidates > <i>Prediction Setting</i> → <i>OFF</i> | ON (Show) |
| ■ Hide Context Forecast List > <i>Context Prediction</i> → <i>OFF</i> | ON (Show) |
| ■ Fix Entered Characters Automatically > <i>Character Set Time</i> → Select a speed | OFF |

Conversion during Message Text Entry


From ► Main Menu ► Messaging ► Settings
► Universal Settings ► Text Predict

| Setting/Operation | Default |
|--|---------------|
| ■ Deactivate Pre-text Predict > <i>Pre-text Predict</i> → OFF | ON |
| ■ Deactivate Time Season Predict > <i>Time Season Predict</i> → OFF | ON |
| ■ Activate Text Expression > <i>Text Expression</i> → <i>Written Language</i> or <i>Colloquialism</i> | Normal Phrase |

Settings Phone Book

From ► Main Menu ► Phone ► Settings

| Setting/Operation | Default |
|---|---------|
| ■ Change Save Location for New Entry > <i>Save Settings</i> → <i>USIM</i> or <i>Ask Each Time</i> | Phone |
| ■ Open USIM Card Phone Book* > <i>Change View</i> → <i>USIM</i> or <i>Phone & USIM</i> | Phone |
| ■ Change Font Size > <i>Font Size</i> → <i>Phone Book</i> or <i>Mail & Call Log</i> → <i>Large</i> | Normal |

* Depending on the save location setting (Save Settings:  Above), selecting **Phone** or **USIM** may prompt a **Change save location as well?** confirmation to appear.

Settings Video Call

Function Menus

From ▶ Main Menu ▶ Settings ▶ Call Settings
▶ Video Call

| Setting/Operation | Default |
|--|-------------------------|
| ■ Change Outgoing Image and Sound Settings ¹ > <i>Video & Voice Setting</i> → Select an item | Alternative Picture |
| ■ Change Display Backlight Brightness ¹ > <i>Display Backlight</i> → <i>Brightness</i> → Select a level | Level 3 |
| ■ Change Display Backlight Duration ¹ > <i>Display Backlight</i> → <i>Backlight Time</i> → <i>Follow General Setting</i> ² or <i>Always OFF</i> | Always ON |
| ■ Change Incoming Video Image Quality ¹ > <i>Incoming Video Quality</i> → <i>Motion Prioritized</i> or <i>Quality Prioritized</i> | Standard |
| ■ Change Alternative Picture > <i>Alternative Picture</i> → Highlight a file → [Set] | TV コール 代替画像 1.bmp |
| ■ Switch Speaker OFF ¹ > <i>Loud Speaker</i> → OFF | ON |

¹ To change settings during a call: ⏏ P.2-10, Right

² Display Backlight Time setting (⏏ P.15-6) applies.

Engaged Video Call Settings

From ▶ During a Video Call, [Menu] → Settings

| Setting/Operation | Default |
|---|-----------|
| ■ Change Brightness > <i>Display Backlight</i> → <i>Brightness</i> → Select a level | Level 3 |
| ■ Change Backlight Duration > <i>Display Backlight</i> → <i>Backlight Time</i> → <i>Follow General Setting</i> [*] or <i>Always OFF</i> | Always ON |
| ■ Change Incoming Image Quality > <i>Incoming Video Quality</i> → <i>Motion Prioritized</i> or <i>Quality Prioritized</i> | Standard |
| ■ Adjust Color Tone to Lighting Conditions > <i>White Balance</i> → Select an environment | Automatic |

^{*} Display Backlight Time setting (⏏ P.15-6) applies.




Settings Camera

- Change settings before capturing images. (☞ P.5-3, P.5-4)

Camera Settings

From ► Main Menu ► Camera ► Camera ► [Menu]

| Setting/Operation | Default |
|--|--------------|
| <ul style="list-style-type: none"> ■ Switch Camera Mode > <i>Change Camera Mode</i> → <i>Bar Code Reader</i> or <i>Magnifying Loupe</i> | – |
| <ul style="list-style-type: none"> ■ Change Image Size > <i>Size</i> → Select a size | VGA(480x640) |
| <ul style="list-style-type: none"> ■ Change Image Quality > <i>Quality</i> → Select an item | Super Fine |
| <ul style="list-style-type: none"> ■ Change Focus Setting > <i>Focus Setting</i> → <i>Close-up</i> or <i>Scenery</i> | Auto Focus |
| <ul style="list-style-type: none"> ■ Capture Images in Low Light Conditions > <i>Night Mode</i> → ON | OFF |
| <ul style="list-style-type: none"> ■ Capture 15 Images Sequentially > <i>Multi Shot</i> → ON | OFF |
| <ul style="list-style-type: none"> ■ Change Color for Images > <i>Effect</i> → Select an item | Normal |

| | |
|--|-----------|
| <ul style="list-style-type: none"> ■ Adjust Color Balance According to Lighting Conditions > <i>White Balance</i> → Select an item | Automatic |
| <ul style="list-style-type: none"> ■ Set Self-Timer > <i>Self-Timer</i> (☞ P.5-6) | OFF |
| <ul style="list-style-type: none"> ■ Change Shutter Click Sound > <i>Shutter Sound</i> → Select a pattern | Pattern 1 |
| <ul style="list-style-type: none"> ■ Change Save Location > <i>Save to</i> → <i>Memory Card</i> | Phone |
| <ul style="list-style-type: none"> ■ Save Captured Images Automatically > <i>Auto Image Saving</i> → ON | OFF |
| <ul style="list-style-type: none"> ■ View Memory Status > <i>Available Memory</i> →  to select a size ● Shows savable number of still image files for the selected size/quality. ● Press  [Quality] to toggle image quality. | – |
| <ul style="list-style-type: none"> ■ Reset Settings to Defaults > <i>Reset Defaults</i> →  | – |
| <ul style="list-style-type: none"> ■ Show Key Operation List > <i>Key Operation List</i> | – |

Video Camera Settings

From ► **Main Menu** ► Camera ► Video Camera
 ► [Menu]

| Setting/Operation | Default |
|---|----------------------|
| Change Image Quality* > <i>Quality</i> → Select an item | Normal (176x144) |
| Extend Recording Time > <i>Recording Time</i> → <i>Extended Video</i> | Attach to S! Mail |
| Change Focus Setting > <i>Focus Setting</i> → <i>Close-up</i> | Scenery |
| Change Color for Images > <i>Effect</i> → Select an item | Normal |
| Adjust Color Balance According to Lighting Conditions > <i>White Balance</i> → Select an item | Automatic |
| Set Self-Timer > <i>Self-Timer</i> (📷 P.5-6) | OFF |
| Change Save Location > <i>Save to</i> → <i>Memory Card</i> | Phone |
| Save Recorded Videos Automatically > <i>Auto Image Saving</i> → <i>ON</i> | OFF |

| | |
|--|---|
| View Memory Status > <i>Available Memory</i> → <i>Extended Video</i> or <i>Attach to S! Mail</i> ● Shows total recordable time and maximum recordable time per file at the set recording time/quality. ● When <i>Extended Video</i> is set, press [Quality] to toggle recording video quality. | - |
| Reset Settings to Defaults > <i>Reset Defaults</i> → | - |
| Show Key Operation List > <i>Key Operation List</i> | - |

* Available only when Recording Time is set to Extended Video.

Settings S! Quick News (Japanese)

Display Settings

From ► Main Menu ► Settings ► Display Settings
► S! Quick News Settings

| Setting/Operation | Default |
|---|---------------|
| ■ Show Only Unread Items in Standby > <i>Unread/Read Setting</i> → <i>Unread</i> | Unread + Read |
| ■ Change Marquee Speed > <i>Marquee Speed</i> → <i>Fast</i> or <i>Slow</i> | Medium |
| ■ Image Download > <i>Image Display</i> → <i>ON</i> | OFF |

Auto Update/Deleting Information

From ► Main Menu ► News/Ent. ► S! Quick News
► Settings

| Setting/Operation | Default |
|--|-------------------|
| ■ Change Update Interval or Disable News Flash Auto Update ^{1,2} > <i>Auto Refresh</i> → <i>News Flash</i> → Select update frequency or <i>OFF</i> | 1 hour |
| ■ Disable General News Auto Update (Once a day) ^{1,2} > <i>Auto Refresh</i> → <i>General</i> → <i>OFF</i> | ON ^{1,2} |
| ■ Automatically Update Special News > <i>Auto Refresh</i> → <i>Special</i> → <input checked="" type="radio"/> → <i>ON</i> | OFF ³ |
| ■ Delete S! Quick News Information > <i>Del S! Quick News List</i> → <input checked="" type="checkbox"/> [YES] → Enter Phone Password | - |

¹ If calls are in progress at update time, auto update does not occur until next update.

² Video Calls are rejected during auto update.

³ Retrieving Network Information may change setting to *ON*.

Settings Messaging

Universal Settings

From ► Main Menu ► Messaging ► Settings
 ► Universal Settings

| Setting/Operation | Default |
|--|-----------------------------------|
| <ul style="list-style-type: none"> Hide Sender Name > Display Settings → Display New Mail → Without Sender Name | With Sender Name |
| <ul style="list-style-type: none"> Open Incoming Mail Folder Automatically by Opening Handset for New Messages¹ > Display Settings → Clamshell Control → ON | OFF (Not open) |
| <ul style="list-style-type: none"> Change Font Size > Display Settings → Font Size → Large or Small | Normal |
| <ul style="list-style-type: none"> Change Message List View² > Display Settings → Mail List Display Setting → Select an item | Name+Subject |
| <ul style="list-style-type: none"> Enable 3D Pictograms when Opening Messages > Display Settings → 3D Pictograms → 3D Picto Auto Play → Always Display or Display only Unread | OFF |
| <ul style="list-style-type: none"> Change Font/Background Color > Display Settings → 3D Pictograms → Color Settings → Select a color | White |
| <ul style="list-style-type: none"> Change Anti-Spam Measures Setting > Anti-Spam Measures → Spam Report Address → [Edit] → Edit recipient address → [OK] | stop@meiwaku.softbankmobile.co.jp |

| | |
|--|-----|
| <ul style="list-style-type: none"> Reset Anti-Spam Measures > Anti-Spam Measures → Spam Report Address → [Menu] → Reset to Default | - |
| <ul style="list-style-type: none"> Filter Messages by Sender/Recipient > Mail Delivery Rule → Incoming Mail or Sent Messages → Select a folder → [Menu] → Add Sender or Add Address → Select a search/entry method → Select or enter sender/address | - |
| <ul style="list-style-type: none"> Filter Messages by Subject > Mail Delivery Rule → Incoming Mail or Sent Messages → Select a folder → [Menu] → Add Subject → Enter subject | - |
| <ul style="list-style-type: none"> Request Delivery Confirmation (Available when Messaging to SoftBank Handset Numbers) > Delivery Report → ON | OFF |
| <ul style="list-style-type: none"> Base Word Predictions on Received Message When Replying > Learning from Received Message → OFF | ON |
| <ul style="list-style-type: none"> Require Password to Access Messages/Server Mail > Mail Security Setting → Enter Phone Password → Check items → [OK] | OFF |
| <ul style="list-style-type: none"> Set Auto Delete Off (For Drafts or Sent/Unsent Messages) > Auto Delete → Auto Delete Sent Messages → OFF | ON |

| | |
|---|----|
| <p>■ Set Auto Delete Off (For Incoming Mail) > <i>Auto Delete</i> → <i>Auto Delete Incoming Messages</i> → <i>OFF</i></p> | ON |
|---|----|

¹ Available only when the first information received on handset is Message.

² When **Name+Subject+Preview** or **Name+Subject** is set, Name+Preview appears for SMS.

S! Mail Settings

From ► **Main Menu** ► **Messaging** ► **Settings**
 ► **S! Mail Settings**

| Setting/Operation | Default |
|--|----------------------------|
| <p>■ Set S! Mail Download Condition (within Japan) > <i>Incoming Options</i> → <i>Home Auto Settings</i> → <i>From Numbers Only</i> or <i>Manual Retrieval</i></p> | Auto Download All |
| <p>■ Retrieve S! Mail Manually while Abroad > <i>Incoming Options</i> → <i>Roaming Auto Settings</i> → <i>Manual Retrieval</i></p> | Auto Download |
| <p>■ Quote Original Message in Reply > <i>Quote Message</i> → <i>OFF</i></p> | ON |
| <p>■ Open Image Files Manually > <i>Attachment Auto-play</i> → <i>Images</i> → <i>OFF</i></p> | ON (Open automatically) |
| <p>■ Play Music Files Automatically* > <i>Attachment Auto-play</i> → <i>Sounds</i> → <i>ON</i></p> | OFF |

* When multiple sound files are attached, the first file plays.

Feeling Mail Settings

Set handset response for new Feeling Mail.

From ▶ Main Menu ▶ Messaging ▶ Settings
▶ S! Mail Settings ▶ Feeling Expression

| Setting/Operation | Default |
|--|-------------------|
| <p>Hide Information</p> <p>> Information Display Settings → OFF</p> | ON |
| <p>Deactivate Notification Light</p> <p>> Notification Light Patterns → Settings ON/OFF → OFF</p> | ON |
| <p>Notification Light Color</p> <p>> Notification Light Patterns → Select an item → Select a color¹</p> | (See chart below) |
| <p>Deactivate Vibration</p> <p>> Vibration Patterns → Settings ON/OFF → OFF</p> | ON |
| <p>Vibration Pattern</p> <p>> Vibration Patterns → Select an item → Select a pattern</p> | — |
| <p>Ringtone</p> <p>> Message Ringtone → Settings ON/OFF → ON</p> | OFF |
| <p>Change Ringtone²</p> <p>> Message Ringtone → Select an item → Select a folder in Data Folder → Highlight a tone → [Set]</p> | — |

¹ When highlighting a color, Notification Light illuminates.

² Set a ringtone for each preset feeling

Default Settings

| Emotion | Notification Light | Vibration | Message Ringtone |
|----------------------|--------------------|-----------|--------------------|
| Happy | Color 6 | Pattern 1 | Happy/ うれしい.mmf |
| OK/Good | Color 2 | Pattern 1 | OK/Good.mmf |
| Sad/Sorry | Color 1 | Pattern 2 | 悲しい/ごめ んなさい.mmf |
| NG/Bad | Color 3 | Pattern 2 | NG/Bad.mmf |
| Notice/ Important | Color 4 | Pattern 3 | 注目/重要.mmf |

- When sender is saved in Phone Book, Phone Book settings take priority in the following case (P.4-4).

- Message Ringtone is set to a ringtone other than

Follow General Setting

- Notification Light is set to a color other than

Follow General Setting

SMS Settings

From ► **Main Menu** ► Messaging ► Settings
 ► SMS Settings

| Setting/Operation | Default |
|---|-------------------------------|
| ■ Set a Time Limit to Store All Sent SMS at the Center¹ > <i>Expiry</i> → <i>Maximum</i> (depending on Server setting) or select a limit | Depends on USIM Card settings |
| ■ Change SMS Center Number² > <i>Message Center</i> → Enter SMS Center number | +8190665 19300 |
| ■ Set Input Character to English > <i>Input Character Settings</i> → <i>English(160characters)</i> | Japanese (70characters) |

¹ When recipient handset is off or out-of-range, SMS are stored at the Center, and delivered when recipient handset detects signal.

² Changing Message Center number may disable SMS.

Settings Internet

Browser Display Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Settings

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser
 ► PC Site Browser Settings

| Setting/Operation | Default |
|---|-------------|
| ■ Change Font Size > <i>Font Size</i> → <i>Large</i> or <i>Small</i> | Normal |
| ■ Scroll Unit > <i>Scroll Unit</i> → <i>Whole Screen</i> or <i>Half Screen</i> | Single Line |
| ■ Images Off > <i>Downloads</i> → <i>Display Images</i> → <i>OFF</i> | ON |
| ■ Sounds Off > <i>Downloads</i> → <i>Play Sounds</i> → <i>OFF</i> | ON |
| ■ Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai* > <i>Warning Messages</i> → <i>Activate PC Site Browser</i> or <i>Switch To Yahoo! Keitai</i> → <i>OFF</i> | ON (Show) |

* PC Site Browser only

Memory Manager & Reset

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Settings

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser
► PC Site Browser Settings

| Setting/Operation | Default |
|---|---------|
| ■ Clear Cache > <i>Memory Manager</i> → <i>Clear Cache</i> → <input type="radio"/> | - |
| ■ Delete Cookies > <i>Memory Manager</i> → <i>Delete Cookies</i> → <input type="radio"/> | - |
| ■ Delete User ID or Password Entered when Authentication is Required > <i>Memory Manager</i> → <i>Delete Certificates</i> → <input type="radio"/> | - |
| ■ Delete Input Memory > <i>Memory Manager</i> → <i>Delete Input Memory</i> → <input type="radio"/> | - |

Security Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Settings ► Security

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser
► PC Site Browser Settings ► Security

| Setting/Operation | Default |
|---|--------------------|
| ■ Set Auto Send Off for Manufacturer's Number (for Authentication) > <i>Manufacture Number</i> → <i>OFF</i> | ON (Send) |
| ■ Set Not to Send Referer Information > <i>Send Referer</i> → <i>OFF</i> | ON (Send) |
| ■ Select whether or Not to Allow Cookies to be Stored on handset > <i>Cookies</i> → <i>OFF</i> or <i>Ask Every Time</i> | ON (Save) |
| ■ Select whether or Not to Run Scripts in Yahoo! Keitai¹ > <i>Script</i> → Select an item | Ask before Connect |
| ■ Select whether or Not to Run Scripts in PC Site Browser² > <i>Script</i> → Select an item | ON (Run) |
| ■ View Electronic Certificates Issued by Certificate Authorities > <i>Root Certificates</i> → Select an item | - |

| Setting/Operation | Default |
|---|---------------------|
| ■ Select whether or Not to Retain Authentication Information > <i>Certificate Retention</i> → <i>Always Keep</i> or <i>Not Keep</i> | Keep while Browsing |

¹ Yahoo! Keitai Browser only

² PC Site Browser only

Reset

Yahoo! Keitai

From ► **Main Menu** ► **Yahoo!** ► **Settings**

PC Site Browser

From ► **Main Menu** ► **Yahoo!** ► **PC Site Browser**
 ► **PC Site Browser Settings**

| Setting/Operation | Default |
|--|---------|
| ■ Initialize Browser > <i>Initialized Browser</i> → <input type="checkbox"/> → Enter Phone Password | — |
| ■ Reset Browser Settings > <i>Reset Defaults</i> → <input type="checkbox"/> [YES] → Enter Phone Password | — |

Settings S! Appli

From ► **Main Menu** ► **S! Appli** ► **S! Appli Settings**

| Setting/Operation | Default |
|--|-------------------------|
| ■ Change Volume > <i>Volume</i> → Adjust volume | Volume 4 |
| ■ Backlight On/Off > <i>Display Backlight</i> → <i>Always ON</i> or <i>Always OFF</i> | Follow General Setting* |
| ■ Deactivate Vibration > <i>Vibration</i> → <i>OFF</i> | ON |
| ■ Suspend S! Appli after Set Period of Inactivity > <i>Auto Suspend Timer</i> → Select a duration | Not Suspended |
| ■ Update S! Appli Information on Memory Card from Another Handset > <i>Synchronize Memory Card</i> | — |

* Display Backlight Time setting (☞ P.15-6) applies.

16

Settings

16-24