

Appendix

Function List	17-2
Troubleshooting.....	17-8
Warning Signs	17-10
Software Update	17-10
Updating Software Manually.....	17-10
Updating Software Automatically.....	17-11
Key Assignments.....	17-12
Symbol List	17-13
Character Code List	17-14
Weather Indicator List.....	17-19
Memory List.....	17-20
Specifications	17-21
Index.....	17-22
Warranty & Service.....	17-29
Warranty	17-29
After-Sales Service.....	17-29
Customer Service.....	17-30


Function List


From Main Menu, press key corresponding to a menu number for direct access. (☞ P.1-17)


Example: To select S! Mail Settings in Messaging menu:


1 first column **0** second column **3** third column


1 (Messaging) → **0** (Settings) → **3** (S! Mail Settings)


 Messaging		
	Menu Number/Function Name	Page
1	Messaging	–
1	Incoming Mail	P.12-12
2	Create New S! Mail	P.12-4
3	Retrieve New	P.12-17
4	Drafts	P.12-18
5	Templates	P.12-6
6	Sent Messages	P.12-18
7	Unsent Messages	P.12-18
8	Server Mail Box	–
	1 Mail List	P.12-17
	2 Delete Server Mail All	P.12-18
9	Create New SMS	P.12-8
0	Settings	–
	1 Custom Mail Address	P.12-3
	2 Universal Settings	P.15-18
	3 S! Mail Settings	P.15-19
	4 SMS Settings	P.15-21
*	Memory Status	–
	1 Phone	P.12-3
	2 USIM	P.12-3

 Yahoo! (Yahoo! Keitai)		
	Menu Number/Function Name	Page
2	Yahoo!	–
1	Yahoo! Keitai	P.13-3
2	Bookmarks	P.13-8
3	Saved Pages	P.13-8
4	Web Search	P.13-3
5	Enter URL	–
	1 Direct Entry	P.13-4
	2 URL History List	P.13-4
6	History	P.13-4
7	PC Site Browser	–
	1 Homepage	P.13-5
	2 Bookmarks	P.13-8
	3 Saved Pages	P.13-8
	4 Web Search	P.13-5
	5 Enter URL	P.13-5
	6 History	P.13-5
	7 Yahoo! Keitai	P.13-3
	8 PC Site Browser Settings	P.15-21
8	Settings	–
	1 Font Size	P.15-21
	2 Scroll Unit	P.15-21
	3 Downloads	P.15-21
	4 Memory Manager	P.15-22
	5 Security	P.15-22
	6 Initialized Browser	P.15-23
	7 Reset Defaults	P.15-23

 S! Appli		
Menu Number/Function Name		Page
3	S! Appli	–
1	S! Appli List	–
	Tab 1 Phone	P.14-2
	Tab 2 Memory Card	P.14-2
2	S! Appli Settings	–
1	Volume	P.15-23
2	Display Backlight	P.15-23
3	Vibration	P.15-23
4	Auto Suspend Timer	P.15-23
5	Synchronize Memory Card	P.15-23
3	Information	P.14-2

 News/Ent. (News/Entertainment)		
Menu Number/Function Name		Page
4	News/Ent.	–
1	S! Information Channel/Weather	–
1	What's New?	P.6-3
2	History	P.6-3
3	Register/Cancel	P.6-2
4	Get Latest Contents	P.6-2
5	Missed Event settings(S! Information Channel)	P.6-2
6	Weather Indicator	P.6-3
2	S! Quick News	–
1	S! Quick News List	P.6-5
2	Settings	P.15-17
3	BookSurfing	P.6-6
4	e-Book Viewer	P.6-6


 Camera		
Menu Number/Function Name		Page
5	Camera	–
1	Camera	P.5-5
2	Video Camera	P.5-6
3	Bar Code Reader	P.11-10
1	Scan Barcodes	P.11-10
2	Saved Data List	P.11-11
4	Magnifying Loupe	P.5-8

 Media (Media Player)		
Menu Number/Function Name		Page
6	Media	–
1	Audio	–
1	All	P.7-5
2	Music	P.7-5
3	Ring Song	P.7-5
4	Playlist	P.7-5
5	Display Playback Screen	P.7-5
6	Playback Mode	P.7-7
7	Download Music	P.7-3
8	Music Search	P.7-3
2	Video	–
1	All	P.7-6
2	Video Folder	P.7-6
3	Playlist	P.7-6
4	Display Playback Screen	–
5	Playback Mode	P.7-7
6	Download Videos	P.7-3


Tools		
Menu Number/Function Name		Page
7	Tools	—
1	Alarms	P.11-6
2	Calendar	P.11-2
3	Calculator	P.11-7
4	Notepad	P.11-8
5	Count Down Timer	P.11-9
6	Answer Phone	—
1	Message List	P.2-13
2	Settings	P.2-12
7	Voice Recorder	P.11-9
8	Bar Code Reader	P.11-10
1	Scan Barcodes	P.11-10
2	Saved Data List	P.11-11
9	Software Update	—
1	Software Update	P.16-10
2	Regular Updates	P.16-11
3	Update Result	P.16-11
0	One Touch Guide	—
1	Display New Messages	P.11-12
2	Calendar	P.11-12
3	Speed Dial	P.11-12
4	Simple Mode	P.11-12
5	Set as Wallpaper	P.11-12
6	Private Menu	P.11-12
7	View Blind	P.11-12
8	Manner	P.11-12
9	Magnifying Loupe	P.11-12
0	Create New Phone Book	P.11-12


7	0	*	Keyguard	P.11-12
		#	Drive	P.11-12
			Yahoo! Keitai Menu*	P.11-12
			Create Message*	P.11-12
			Key Customization*	P.11-12


* Direct access unavailable

 Data Folder		
Menu Number/Function Name		Page
8	Data Folder	–
1	Pictures	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
	Tab 3 Digital Camera	P.8-2
2	Ring Songs-Tones	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
3	S! Appli	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
4	Music	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
5	Videos	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
	Tab 3 Video Camera	P.8-2
6	Books	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
7	Templates	P.8-2
8	Flash(R)	–
	Tab 1 Phone	P.8-3
	Tab 2 Memory Card	P.8-3
9	Other Documents	–
	Tab 1 Phone	P.8-3
	Tab 2 Memory Card	P.8-3

8	0	Memory Status	–
	1	Phone	P.8-3
	2	Memory Card	P.8-3

 Infrared		
Menu Number/Function Name		Page
9	Infrared	–
1	Infrared ON/OFF	P.9-3
2	Send Account Details	P.9-3
3	Send All Phone Book	P.9-4

 Bar Code (Bar Code Reader)		
Menu Number/Function Name		Page
*	Bar Code	–
1	Scan Barcodes	P.11-10
2	Saved Data List	P.11-11

 Phone		
Menu Number/Function Name		Page
Phone		
1	Phone Book	P.4-6
2	Create New Entry	P.4-3
3	Mail & Call Log	–
	Tab 1 All Calls/All Mails Logs	P.2-10, P.12-15
	Tab 2 Incoming/Receive Logs	P.2-10, P.12-15
	Tab 3 Outgoing/Send Logs	P.2-10, P.12-15
4	Group	P.4-5
5	Account Details	P.1-24, P.4-14
6	One Touch Key	–
	1 One Touch Key	P.4-8
	2 Speed Dial	P.4-8
7	S! Addressbook Back-up	–
	1 Start Sync	P.4-12
	2 Auto Sync Settings	P.4-13
	3 Sync Log	P.4-13
8	Memory Manager	–
	1 Copy All from USIM	P.4-10
	2 Copy All to USIM	P.4-10
	3 Delete All (Phone)	P.4-10
	4 Delete All (USIM)	P.4-10
	5 Send All Phone Book via Infrared	P.9-4

9	Settings	–
	1 Save Settings	P.15-13
	2 Change View	P.15-13
	3 Search Method	P.4-6
	4 Font Size	P.15-13
	5 Mail Group Setting	P.12-21
	0 Memory Status	P.4-11


- Number in first column is not available for Phone Book.

 Settings		
Menu Number/Function Name		Page
#	Settings	—
1	Sound Settings	—
1	Assign Ringtone	P.15-2
2	Ringer Volume	P.15-2
3	Ringtone Duration	P.15-2
4	Warning Tone	P.15-3
5	Vibration Alert	P.15-2
6	Key Tone	P.15-3
2	Display Settings	—
1	Customize Main Display	P.15-4
2	Font Size	P.15-5
3	Font Pattern	P.15-5
4	Change Menu Theme	P.15-5
5	Backlight Settings	P.15-6
6	Main Menu Icons	P.15-5
7	Themes	P.15-4
8	Standby Display	P.15-4
9	S! Quick News Settings	P.15-17
0	View Blind	P.1-24
3	Phone Settings	—
1	言語選択	P.15-4
2	Date & Time	P.15-8
3	Dictionaries	P.3-9
4	Notification Light	P.15-12
5	Keyguard	P.10-3
6	Key Settings	P.15-6
7	Change Simple Mode	P.1-22

#	4	Security	—
1	1	Password Lock	P.10-4
2	2	Phone Book Lock	P.10-6
3	3	Messaging Lock	P.10-6
4	4	Secret Mode Setting	P.10-7
5	5	Reset	P.10-9
6	6	PIN Certification	P.10-2
7	7	Change PIN	P.10-3
8	8	Change PIN2	P.10-3
9	9	Change Password	P.10-2
5	5	Call Settings	—
1	1	Optional Services	P.2-14
2	2	Call Time & Cost	P.15-10
3	3	Video Call	P.15-14
4	4	Reject Incoming Calls	P.10-5
5	5	Emission OFF Mode	P.1-16
6	6	Show My Number	P.2-20
7	7	Any Key Answer	P.15-11
8	8	Clamshell Control	P.15-11
9	9	Auto Answer	P.15-11
0	0	Ear Volume	P.15-11
6	6	Manner Mode Settings	P.15-7
7	7	Location Settings	—
1	1	Positioning Lock	P.9-6
2	2	Send Location Info	P.9-6
8	8	Memory Card Manager	—
1	1	Format Memory Card	P.8-15
2	2	Check Memory Card	P.8-18
3	3	Memory Card Backup/Restore	P.8-16
9	9	Retrieve NW Info	P.1-14

Troubleshooting

Handset does not turn on

- Was  pressed for more than three seconds?
- Is battery level sufficient?
- Is battery inserted properly? (☞ P.1-12)





Handset functions do not work after turning power on

- Does PIN entry window appear?
PIN Certification is **ON**. Enter PIN. (☞ P.10-2)

Insert **USIM** or **INVALID USIM** appears when handset is turned on or operations attempted

- Is USIM Card inserted correctly? (☞ P.1-3)
- Unusable USIM Card may be inserted (☞ P.1-2).
- USIM Card IC chip may be dirty.
Wipe with a clean cloth, then insert USIM Card correctly.





Keypad does not respond

- Does  appear in Standby?
Keyguard is active (☞ P.10-3).
Cancel Keyguard.
- Does  appear in Standby?
Password Lock is active (☞ P.10-4).
Cancel Phone Password.
- Does  /  appear in Standby?
Keyguard and Password Lock are both active (☞ P.10-3, P.10-4).
Cancel Keyguard, and then cancel Password Lock.

Display is blurred

- Adjust display brightness (☞ P.15-6)
- Is View Blind active?
Cancel View Blind (☞ P.1-24)

Outgoing calls or Video Calls will not connect or message and Internet connections are unavailable

- Does **OUT**  (red) appear?
Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.
- Does  appear?
Cancel Emission OFF Mode (☞ P.1-16).
- Are you using handset overseas?
Set international settings (e.g. select operator) to use abroad (☞ P.2-9, P.15-9).
- Does  or  appear?
Messaging Lock is active (☞ P.10-6).
Deactivate Messaging Lock.

Outgoing calls will not connect

- Is area code entered?
- Is restricting outgoing calls in Call Barring? (☞ P.2-19)

Outgoing calls will not connect or busy signal sounds

- Did you enter area code?



Call is interrupted or disconnected

- Does **OUT** appear? Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.



Display clock is reset

- Replacing battery does not reset Display clock; however, if battery is removed for long periods, the clock may be reset. Set Date & Time (☞ P.15-8) or Retrieve NW Info (☞ P.1-14) again.

Calls cannot be made via a Phone Book entry

- Entry may be saved as Secret.
Activate Secret Mode or Secret Data Only (☞ P.10-7).
- Does  or  appear?
Phone Book Lock is active (☞ P.10-6).
Deactivate Phone Book Lock.

Phone Book entry names do not appear in Call Log or message lists

- Phone Book may not activate immediately after powering handset on.
Phone Book entry information/settings are unavailable during this time.
Return to Standby and retry later.
- Does  or  appear?
Phone Book Lock is active (☞ P.10-6).
Deactivate Phone Book Lock.

Handset response differs from Phone Book entry settings

- Phone Book may not activate immediately after powering handset on.
Phone Book entry information/settings are unavailable if calls are received during this time. Ringer and Illumination follow general settings.

Battery Operating Time is greatly reduced

- Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time Estimates" (☞ P.1-10) and "Battery Time" (☞ P.1-11).

Cannot charge battery

- Is AC Charger (sold separately) firmly connected to handset or Desktop Holder (not included)? (☞ P.1-13)
- Is AC Charger securely plugged into an outlet?
- Is battery installed in handset correctly? (☞ P.1-12)
- Is handset correctly mounted in Desktop Holder?
- Make sure handset, battery, Desktop Holder and AC Charging terminals are clean.
- Is ambient temperature between +5°C and +35°C?
Otherwise, battery may not reach full charge.
- When charging battery during a call/data transmission, Notification Light/Charging Indicator may go out due to handset temperature increase. When handset temperature returns to normal level, Notification Light/Charging Indicator illuminates again.
- Battery may need to be replaced.




Handset/accessories feel warm

- AC Charger/Desktop Holder may warm during charging.
Handset may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if handset is held against skin for long periods.

Note


- If you did not find the remedy to your problem here, please contact SoftBank Mobile Customer Center (☞ P.16-30).

Warning Signs

Problem	Causes and Remedies
OUT appears	Handset is out-of-range. Move to a location where signal is strong.
 appears	Keyguard is active (☞ P.10-3). Cancel Keyguard to use keys. Answer calls even if Keyguard is active.
 appears	Password Lock is active (☞ P.10-4). Cancel Password Lock to use handset. Answer calls even if Password Lock is active.
 appears	Keyguard and Password Lock are both active (☞ P.10-3, P.10-4). Cancel Keyguard, and then cancel Password Lock to use keys. Answer calls even if Keyguard and Password Lock are both active.
Low battery message appears and battery alarm tone sounds	Battery is low. Charge (☞ P.1-13) or replace battery (☞ P.1-12).


Software Update

Check for 841P software updates and download as required. Choose to begin update or schedule update.

- Transmission fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery beforehand. Even if  appears, low battery message may appear. In this case, charge battery until Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Do not remove battery during the update. Update will fail.
- Other functions are not available during Software Update.
- The update may take some time.

Updating Software Manually

Main Menu ▶ Tools ▶ Software Update
▶ Software Update

1  → Follow onscreen instructions

Follow onscreen instructions.

After download is complete, handset

automatically turns off and restarts before Software Update begins.


After Software Update is complete, handset

automatically turns off and restarts before

information appears for successful update.

(This process takes approximately

30 seconds.)

 **Software Update**
Software has been
successfully
updated

Updating Software Automatically

Main Menu ► Tools ► Software Update ► Regular Updates

1 → Follow onscreen instructions

- Internet connection required for updates (transmission fees do not apply for updates). For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Update Results

In Information window, Select


Update Results

- In Standby, **Main Menu ► Tools**
 - Software Update
 - Update Results




Scheduled Update

Follow onscreen instructions for setup.

Confirmation appears at scheduled update time. Press  or wait ten seconds for update to start.

- Software Update will not start while handset is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.

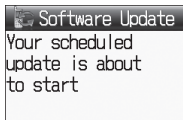

Note

- Software Update failure may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance (☎ P.16-30).
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup, as appropriate, of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Update may temporarily cancel Keyguard.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Key Assignments

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double-/Single-byte]	Alphanumerics [Double-/Single-byte]	Numbers [Double-/Single-byte]
①	あいうえおあいうえお ¹	アイウエオアイウエオ ¹	. / @ - : ■ ¹ ■ ² _ 1	1
②	かきくけこ ²	カキクケコ ²	a b c A B C 2	2
③	さしすせそ ³	サシスセソ ³	d e f D E F 3	3
④	たちつとっ ⁴	タチツテトツ ⁴	g h i G H I 4	4
⑤	なにぬねの ⁵	ナニヌネノ ⁵	j k l J K L 5	5
⑥	はひふへほ ⁶	ハヒフヘホ ⁶	m n o M N O 6	6
⑦	まみむめも ⁷	マミムメモ ⁷	p q r s P Q R S 7	7
⑧	やゆよゃゅょ ⁸	ヤユヨャュョ ⁸	t u v T U V 8	8
⑨	らりるれろ ⁹	ラリルレロ ⁹	w x y z W X Y Z 9	9
⑩	わをんわー ⁰	ワワン ⁰ ー ⁰	0	0
				[Press and hold] + ¹
✳	📷 ³ /Pictograph List		Pictograph List	✳
	[Press and hold] Notepad List			[Press and hold] P (pause) ⁴
#	、。?!・ (Single-byte Space)		, . ? ! ' - & () ¥ (Space)	#
	[Press and hold] Symbol List			

¹ Appears when entering single-byte character. ³ Appears after entering characters


² Appears when entering double-byte character. ⁴ Available only when entering phone numbers in Phone Book, etc.

● Press and hold numeric keys (⑩ to ⑨) to enter single-byte numbers assigned to each key (In Kanji/Hiragana input mode, all characters must be converted beforehand). To enter +, press and hold ⑩ in single-byte number mode.

● To toggle input modes: 

● To toggle double-byte/single-byte: Press and hold 

● To toggle upper/lower letter: After entering hiragana, katakana or alphanumerics, 

● To insert a line break: 

Character Code List

First Three Digits	Last Digit	Character	Meaning
010	0	0	0
010	1	1	1
010	2	2	2
010	3	3	3
010	4	4	4
010	5	5	5
010	6	6	6
010	7	7	7
010	8	8	8
010	9	9	9
011	0	0	0
011	1	1	1
011	2	2	2
011	3	3	3
011	4	4	4
011	5	5	5
011	6	6	6
011	7	7	7
011	8	8	8
011	9	9	9
012	0	0	0
012	1	1	1
012	2	2	2
012	3	3	3
012	4	4	4
012	5	5	5
012	6	6	6
012	7	7	7
012	8	8	8
012	9	9	9
013	0	0	0
013	1	1	1
013	2	2	2
013	3	3	3
013	4	4	4
013	5	5	5
013	6	6	6
013	7	7	7
013	8	8	8
013	9	9	9
014	0	0	0
014	1	1	1
014	2	2	2
014	3	3	3
014	4	4	4
014	5	5	5
014	6	6	6
014	7	7	7
014	8	8	8
014	9	9	9
015	0	0	0
015	1	1	1
015	2	2	2
015	3	3	3
015	4	4	4
015	5	5	5
015	6	6	6
015	7	7	7
015	8	8	8
015	9	9	9
016	0	0	0
016	1	1	1
016	2	2	2
016	3	3	3
016	4	4	4
016	5	5	5
016	6	6	6
016	7	7	7
016	8	8	8
016	9	9	9
017	0	0	0
017	1	1	1
017	2	2	2
017	3	3	3
017	4	4	4
017	5	5	5
017	6	6	6
017	7	7	7
017	8	8	8
017	9	9	9
018	0	0	0
018	1	1	1
018	2	2	2
018	3	3	3
018	4	4	4
018	5	5	5
018	6	6	6
018	7	7	7
018	8	8	8
018	9	9	9
019	0	0	0
019	1	1	1
019	2	2	2
019	3	3	3
019	4	4	4
019	5	5	5
019	6	6	6
019	7	7	7
019	8	8	8
019	9	9	9
020	0	0	0
020	1	1	1
020	2	2	2
020	3	3	3
020	4	4	4
020	5	5	5
020	6	6	6
020	7	7	7
020	8	8	8
020	9	9	9
021	0	0	0
021	1	1	1
021	2	2	2
021	3	3	3
021	4	4	4
021	5	5	5
021	6	6	6
021	7	7	7
021	8	8	8
021	9	9	9
022	0	0	0
022	1	1	1
022	2	2	2
022	3	3	3
022	4	4	4
022	5	5	5
022	6	6	6
022	7	7	7
022	8	8	8
022	9	9	9
023	0	0	0
023	1	1	1
023	2	2	2
023	3	3	3
023	4	4	4
023	5	5	5
023	6	6	6
023	7	7	7
023	8	8	8
023	9	9	9
026	0	0	0
026	1	1	1
026	2	2	2
026	3	3	3
026	4	4	4
026	5	5	5
026	6	6	6
026	7	7	7
026	8	8	8
026	9	9	9
031	0	0	0
031	1	1	1
031	2	2	2
031	3	3	3
031	4	4	4
031	5	5	5
031	6	6	6
031	7	7	7
031	8	8	8
031	9	9	9
032	0	0	0
032	1	1	1
032	2	2	2
032	3	3	3
032	4	4	4
032	5	5	5
032	6	6	6
032	7	7	7
032	8	8	8
032	9	9	9
033	0	0	0
033	1	1	1
033	2	2	2
033	3	3	3
033	4	4	4
033	5	5	5
033	6	6	6
033	7	7	7
033	8	8	8
033	9	9	9
034	0	0	0
034	1	1	1
034	2	2	2
034	3	3	3
034	4	4	4
034	5	5	5
034	6	6	6
034	7	7	7
034	8	8	8
034	9	9	9
035	0	0	0
035	1	1	1
035	2	2	2
035	3	3	3
035	4	4	4
035	5	5	5
035	6	6	6
035	7	7	7
035	8	8	8
035	9	9	9
036	0	0	0
036	1	1	1
036	2	2	2
036	3	3	3
036	4	4	4
036	5	5	5
036	6	6	6
036	7	7	7
036	8	8	8
036	9	9	9
037	0	0	0
037	1	1	1
037	2	2	2
037	3	3	3
037	4	4	4
037	5	5	5
037	6	6	6
037	7	7	7
037	8	8	8
037	9	9	9
038	0	0	0
038	1	1	1
038	2	2	2
038	3	3	3
038	4	4	4
038	5	5	5
038	6	6	6
038	7	7	7
038	8	8	8
038	9	9	9
039	0	0	0
039	1	1	1
039	2	2	2
039	3	3	3
039	4	4	4
039	5	5	5
039	6	6	6
039	7	7	7
039	8	8	8
039	9	9	9
040	0	0	0
040	1	1	1
040	2	2	2
040	3	3	3
040	4	4	4
040	5	5	5
040	6	6	6
040	7	7	7
040	8	8	8
040	9	9	9
041	0	0	0
041	1	1	1
041	2	2	2
041	3	3	3
041	4	4	4
041	5	5	5
041	6	6	6
041	7	7	7
041	8	8	8
041	9	9	9
042	0	0	0
042	1	1	1
042	2	2	2
042	3	3	3
042	4	4	4
042	5	5	5
042	6	6	6
042	7	7	7
042	8	8	8
042	9	9	9
043	0	0	0
043	1	1	1
043	2	2	2
043	3	3	3
043	4	4	4
043	5	5	5
043	6	6	6
043	7	7	7
043	8	8	8
043	9	9	9
044	0	0	0
044	1	1	1
044	2	2	2
044	3	3	3
044	4	4	4
044	5	5	5
044	6	6	6
044	7	7	7
044	8	8	8
044	9	9	9
045	0	0	0
045	1	1	1
045	2	2	2
045	3	3	3
045	4	4	4
045	5	5	5
045	6	6	6
045	7	7	7
045	8	8	8
045	9	9	9
046	0	0	0
046	1	1	1
046	2	2	2
046	3	3	3
046	4	4	4
046	5	5	5
046	6	6	6
046	7	7	7
046	8	8	8
046	9	9	9
047	0	0	0
047	1	1	1
047	2	2	2
047	3	3	3
047	4	4	4
047	5	5	5
047	6	6	6
047	7	7	7
047	8	8	8
047	9	9	9
048	0	0	0
048	1	1	1
048	2	2	2
048	3	3	3
048	4	4	4
048	5	5	5
048	6	6	6
048	7	7	7
048	8	8	8
048	9	9	9

First Three Digits	Last Digit	First Three Digits	Last Digit	First Three Digits	Last Digit	First Three Digits	Last Digit	First Three Digits	Last Digit
0	1	0	1	0	1	0	1	0	1
232	【	270	察別撤贊	320	飽心珍身尋	347	審申診壬	354	啄濁
233	珪携繫鴉傑候建	271	刺屍官紫資寺次	311	尋眞真辛甚	348	寢深親刃勒	349	坦坦筆斷
234	卦型敬罪丟云倦憲煥見元眩	272	使子施施詔字	312	須炊瑞梧	350	吹逐板	350	堅厲端彈
235	珪携繫鴉傑候建	273	耳軸濕溼社尺惹腫脹	313	罔粹崇顏摺世	351	厨翠高雀寸	351	單串短燴
236	珪携繫鴉傑候建	274	耳軸濕溼社尺惹腫脹	314	世成生近戚赤窈占泉線毋閃腥	352	瀨政盛醒斥跡節宣淺	352	單串短燴
237	珪携繫鴉傑候建	275	耳軸濕溼社尺惹腫脹	315	性性請借齊折先袿穿羨錢緒	353	是星聖靜析切絕川潛	353	單串短燴
238	珪携繫鴉傑候建	276	耳軸濕溼社尺惹腫脹	320	選全	354	謾晴製稅糧拙舌戰	354	單串短燴
239	珪携繫鴉傑候建	277	耳軸濕溼社尺惹腫脹	321	秋蹴十叔術循遵緒徐	355	制晴製稅糧拙舌戰	355	單串短燴
240	珪携繫鴉傑候建	278	耳軸濕溼社尺惹腫脹	322	秀豐任重熟駿純淨	356	是星聖靜析切絕川潛	356	單串短燴
241	珪携繫鴉傑候建	279	耳軸濕溼社尺惹腫脹	323	洲襲仕統整舜屠哩叙	357	謾晴製稅糧拙舌戰	357	單串短燴
242	珪携繫鴉傑候建	280	耳軸濕溼社尺惹腫脹	324	拾衆什統整舜屠哩叙	358	謾晴製稅糧拙舌戰	358	單串短燴
243	珪携繫鴉傑候建	281	耳軸濕溼社尺惹腫脹	325	商尚昇涉稱裝鐘場壹	359	謾晴製稅糧拙舌戰	359	單串短燴
244	珪携繫鴉傑候建	282	耳軸濕溼社尺惹腫脹	326	唱庄昭悅笑詔糠壤蒸	360	謾晴製稅糧拙舌戰	360	單串短燴
245	珪携繫鴉傑候建	283	耳軸濕溼社尺惹腫脹	327	唱庄昭悅笑詔糠壤蒸	361	謾晴製稅糧拙舌戰	361	單串短燴
246	珪携繫鴉傑候建	284	耳軸濕溼社尺惹腫脹	328	唱庄昭悅笑詔糠壤蒸	362	謾晴製稅糧拙舌戰	362	單串短燴
247	珪携繫鴉傑候建	285	耳軸濕溼社尺惹腫脹	329	唱庄昭悅笑詔糠壤蒸	363	謾晴製稅糧拙舌戰	363	單串短燴
248	珪携繫鴉傑候建	286	耳軸濕溼社尺惹腫脹	330	唱庄昭悅笑詔糠壤蒸	364	謾晴製稅糧拙舌戰	364	單串短燴
249	珪携繫鴉傑候建	287	耳軸濕溼社尺惹腫脹	331	唱庄昭悅笑詔糠壤蒸	365	謾晴製稅糧拙舌戰	365	單串短燴
250	珪携繫鴉傑候建	288	耳軸濕溼社尺惹腫脹	332	唱庄昭悅笑詔糠壤蒸	366	謾晴製稅糧拙舌戰	366	單串短燴
251	珪携繫鴉傑候建	289	耳軸濕溼社尺惹腫脹	333	唱庄昭悅笑詔糠壤蒸	367	謾晴製稅糧拙舌戰	367	單串短燴
252	珪携繫鴉傑候建	290	耳軸濕溼社尺惹腫脹	334	唱庄昭悅笑詔糠壤蒸	368	謾晴製稅糧拙舌戰	368	單串短燴
253	珪携繫鴉傑候建	291	耳軸濕溼社尺惹腫脹	335	唱庄昭悅笑詔糠壤蒸	369	謾晴製稅糧拙舌戰	369	單串短燴
254	珪携繫鴉傑候建	292	耳軸濕溼社尺惹腫脹	336	唱庄昭悅笑詔糠壤蒸	370	謾晴製稅糧拙舌戰	370	單串短燴
255	珪携繫鴉傑候建	293	耳軸濕溼社尺惹腫脹	337	唱庄昭悅笑詔糠壤蒸	371	謾晴製稅糧拙舌戰	371	單串短燴
256	珪携繫鴉傑候建	294	耳軸濕溼社尺惹腫脹	338	唱庄昭悅笑詔糠壤蒸	372	謾晴製稅糧拙舌戰	372	單串短燴
257	珪携繫鴉傑候建	295	耳軸濕溼社尺惹腫脹	339	唱庄昭悅笑詔糠壤蒸	373	謾晴製稅糧拙舌戰	373	單串短燴
258	珪携繫鴉傑候建	296	耳軸濕溼社尺惹腫脹	340	唱庄昭悅笑詔糠壤蒸	374	謾晴製稅糧拙舌戰	374	單串短燴
259	珪携繫鴉傑候建	297	耳軸濕溼社尺惹腫脹	341	唱庄昭悅笑詔糠壤蒸	375	謾晴製稅糧拙舌戰	375	單串短燴
260	珪携繫鴉傑候建	298	耳軸濕溼社尺惹腫脹	342	唱庄昭悅笑詔糠壤蒸	376	謾晴製稅糧拙舌戰	376	單串短燴
261	珪携繫鴉傑候建	299	耳軸濕溼社尺惹腫脹	343	唱庄昭悅笑詔糠壤蒸	377	謾晴製稅糧拙舌戰	377	單串短燴
262	珪携繫鴉傑候建	300	耳軸濕溼社尺惹腫脹	344	唱庄昭悅笑詔糠壤蒸	378	謾晴製稅糧拙舌戰	378	單串短燴
263	珪携繫鴉傑候建	301	耳軸濕溼社尺惹腫脹	345	唱庄昭悅笑詔糠壤蒸	379	謾晴製稅糧拙舌戰	379	單串短燴
264	珪携繫鴉傑候建	302	耳軸濕溼社尺惹腫脹	346	唱庄昭悅笑詔糠壤蒸	380	謾晴製稅糧拙舌戰	380	單串短燴
265	珪携繫鴉傑候建	303	耳軸濕溼社尺惹腫脹			381	謾晴製稅糧拙舌戰	381	單串短燴
266	珪携繫鴉傑候建	304	耳軸濕溼社尺惹腫脹						
267	珪携繫鴉傑候建	305	耳軸濕溼社尺惹腫脹						
268	珪携繫鴉傑候建	306	耳軸濕溼社尺惹腫脹						
269	珪携繫鴉傑候建	307	耳軸濕溼社尺惹腫脹						
		308	耳軸濕溼社尺惹腫脹						
		309	耳軸濕溼社尺惹腫脹						
		310	耳軸濕溼社尺惹腫脹						