

# Camera

<b>Before Using Camera.....</b>	<b>6-2</b>
Image File Formats .....	6-2
Notes .....	6-2
Camera .....	6-3
Camera Display Indicators.....	6-4
<b>Pictures/Videos .....</b>	<b>6-6</b>
Capturing Still Images (Camera Mode) .....	6-6
Recording Videos (Video Camera Mode).....	6-7
Functions Available while Shooting .....	6-7
<b>Focus Functions .....</b>	<b>6-11</b>
Changing Focus Settings.....	6-11
Auto Focus Lock .....	6-12
<b>Viewing Saved Images .....</b>	<b>6-12</b>

## Before Using Camera

942P features approximately 8.1 Mega Pixel CMOS Auto-focus Camera capable of capturing still images and videos.

- Use Variety Photo Viewer (🔗 P.10-24) for viewing still images or slideshow.

### Image File Formats

Still images/videos are saved to Data Folder.

Image Type	File Format	Save Location
Still images	JPEG (.jpg)	Data Folder (Pictures)
Videos	MPEG-4 (.3gp), ASF (.asf)	Data Folder (Videos)

- To save to microSD Card, change Storage setting (🔗 P.18-17, P.18-18).

### Notes

- Remove dust/debris from lens cover with a soft cloth.
- Handset movement may blur images especially in dark places; hold handset firmly.
- Capturing/saving images immediately after handset has been left in a hot place may affect image quality.
- Exposing lens to direct sunlight may affect image quality.
- While Camera is active, Photo light illuminates or flashes. Photo light cannot be turned off.

### Shutter Click



Shutter click sounds at fixed volume even in Manner Mode.

- To change shutter click sound: 🔗 P.18-17, P.18-18

## Camera

Press  in Standby to activate Camera. Press and hold  to activate Video Camera. Use Flash when shooting in dark locations.



### Note

- Alternatively, to activate Camera:
  - From **Main Menu** ► **Camera** ► **Camera** or **Video Camera**
  - Press and hold 
  - Open handset to Horizontal Open Position from Standby (Horizontal View:  P.18-14)
- Camera is not available when battery is low.
- Incoming calls, Alarm and low battery cancel Camera. Captured images/recorded videos are retained. Save data when Camera restarts.
- When left in Viewfinder for three minutes, Camera is canceled and previous window returns.



## Camera Display Indicators

- Images shown below are for reference only.
  
### ■ Camera Mode

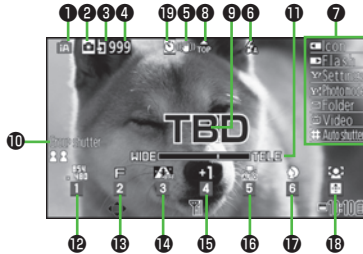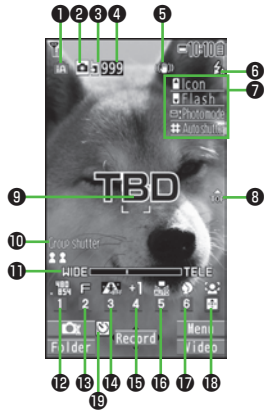

### ■ Video Camera Mode

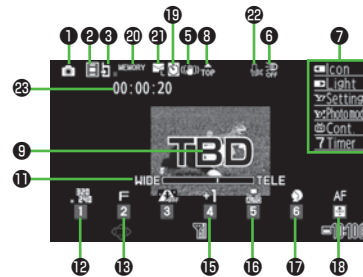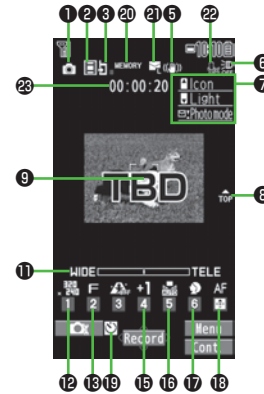  

Item	Description	Operation
1 Photo mode (👉 P.6-9)	Intelligent Auto  Normal  Scene  My original set. (For Scene/My original set., indicators may vary depending on setting.)	Press and hold   → Select a mode (→ For Scene/My original set., select an item)
2 CHG Camera-mode	Camera mode  Video camera mode  Action mode (Auto/ Auto bracket/Manual) (Cont. shooting set.: 👉 P.6-6)	[Video/Cont./Camera] ● Toggle Action mode (👉 P.6-10)
3 Storage setting	Phone  microSD Card	(9)
4 No. of frames	Show number of remaining frames	—
5 Img. stabilizer	Correct camera shake	(👉 P.18-17, P.18-18)
6 Flash setting (Still image)	Auto  Forced ON  Always light ON  Forced OFF	
Photo light setting (Action/Video)	ON  OFF	
7 Key Guidance	Show key operation guidance	—
8 Top indicator	Indicate vertical direction	—
9 Focus Guide	Auto focus guide  AF tracking guide	—
10 Auto shutter <sup>1</sup> (👉 P.6-7)	Love shutter (Sweetheart)  Love shutter (Friends)  Group shutter (Group)	(#)
11 Zoom bar	Indicate zoom level (👉 P.6-8)	zoom in/out ● Long press: continuous zoom
12 Image size <sup>2</sup>	Show image size (👉 P.6-8)	(1) → Select a size
13 Image quality <sup>2</sup>	Normal  Fine  Super fine	(2) → Select a mode
14 High sensitiv. <sup>2</sup>	ON  OFF	(3) → Select ON/OFF
15 Brightness <sup>2</sup>	Adjust brightness (Level -3 to +3)	(4) → Select a level
16 White balance <sup>2</sup>	Auto  Fine  Cloudy  Light bulb  Fluorescent light	(5) → Select a mode
17 Scene <sup>2</sup>	Portrait  Sports  Food  Scenery  Night mode Backlight  Character  Snow  Sunset  Pet	(6) → Select a scene
18 Focus <sup>2</sup> (👉 P.6-11)	Face Detection  AF Auto  Close-up  Landscape  AF tracking	(7) → Select a mode
19 Auto timer	(👉 P.6-7)	(7) → Toggle ON/OFF
20 Memory capacity bar	Indicate memory status (appears in red when memory is full)	—
21 File size setting	Mail restrict'n(S)  Mail restrict'n(L)  Long time	(👉 P.18-18)
22 Movie type set	Record video without audio	(👉 P.18-18)
23 Recordable time	Indicate recordable time	—


<sup>1</sup> Key Guidance appears when Photo mode is set to **Intelligent Auto** and Auto shutter is not set.

<sup>2</sup> Alternatively, → to highlight an item → to select a setting



## Pictures/Videos

- Confirm battery strength (☞ P.1-11) and memory (☞ P.18-17, P.18-18) before recording. When battery is low, video cannot be recorded.
- Captured images and videos are automatically saved to Data Folder. To select save location each time, turn **Auto save set** to **OFF** (☞ P.18-17, P.18-18).
- Operation descriptions are based on Portrait View.

### Note


 


- For capturing images by , press firmly.

## Capturing Still Images (Camera Mode)

- 1  or press and hold   
Picture Viewfinder appears.
- 2 Frame subject










Picture Viewfinder










- 3  [Record],  or  to capture the image  
Shutter click sounds at fixed volume.  
Image is automatically saved.
  - When **Focus** is set to **Face Detection, Auto** or **AF tracking**,  
Camera automatically focuses on subject before capturing image.
- 4  to exit  
Return to Standby.

## Continuous Shooting

Capture a succession of up to 20 still images automatically with a single press.

- Number of captured images differs depending on image size and Continuous shooting setting (☞ P.6-10).
- 1 In Picture Viewfinder,  [Video] →  [Cont.]  
 appears (Indicators vary by Action mode).
  - 2 Frame subject → ,  or   
Images are automatically saved.
    - When **Focus** is set to **Auto**, Camera automatically focuses on subject before capturing image.
    - To stop shooting halfway: 

## Recording Videos (Video Camera Mode)

- Press and hold .  
Video Viewfinder appears.
- Frame subject
- ,  or  to start recording.  
Tone sounds and  appears.
  - When **Focus** is set to **Face Detection** or **Auto**, Camera automatically focuses on subject before recording begins. During recording, auto focus functions regardless of Focus setting.
- ,  or  to end recording.  
Tone sounds.  
Video is automatically saved.
  - Recording stops automatically at maximum recording time.
-  to exit.  
Return to Standby.









 






Video Viewfinder

### Note

- Alternatively,  → [Video] to activate Video Camera

## Functions Available while Shooting

 **From** ▶ Camera mode:   
 Action mode:  ▶ [Video] ▶ [Cont.]  
 Video camera mode: Press and hold 




- Auto Timer**
  - > [Menu] → **Auto timer** → **ON** → Enter time (seconds) → ,  or  (→ For video, ,  or )
  - Auto timer tone sounds. After set period of time, shutter is released and recording starts.
  - When Auto timer is active, [Quit] or  to return to Viewfinder without canceling Auto timer.
  - Auto timer is not available when **Cont. shooting set.** is set to **Manual**.

### Auto Shutter (Camera Mode Only)




 
 
Shutter automatically releases upon detecting number of people or distance between people (When Photo mode is set to **Intelligent Auto** or **Focus** is set to **Face Detection**).


> [Menu] → **Auto shutter** → Select an item (See below)

Item	Operation/Description
<b>OFF</b>	Cancel Auto shutter setting
<b>Love shutter</b>	Shutter releases when two faces move close together. > <b>Friends</b> or <b>Sweetheart</b> <ul style="list-style-type: none"> <li>When <b>Sweetheart</b> is set, distance between two faces is closer than <b>Friends</b>.</li> </ul>
<b>Group shutter</b>	Camera detects up to five faces. When more people are in frame, Auto timer activates and shutter releases in three seconds. > Select number of people

- Alternatively, capture still images by ,  or  even when Auto shutter is set (Auto timer activates for Group shutter.).


















## Zoom












 


>  (zoom in) or  (zoom out) to adjust zoom →  [Record],  
 or  (📷)

- For continuous zoom: Press and hold 
- Zoom is available during video recording.
- Zoom may change image quality.

- Maximum zoom levels per image size are as follows.

Maximum zoom levels in Horizontal Open Position are indicated in ( ) if different from those in Normal Position.

Camera mode	Size	Zoom level	Zoom Ratio*
Camera (High sensitiv.: OFF)	 8M	1-21	2.6x
	 6M Wide	1-21	2.6x
	 5M	1-21	2.6x
	 3M	1-21	2.6x
	 2M Wide	1-21	2.6x
	 2M	1-21	2.6x
	 Stand-by	1-21	2.6x
	 VGA	1-21	2.6x
	 QVGA	1-31	5.1x
	 QCIF	1-31	8.5x
Camera (High sensitiv.: ON)	 Sub-QCIF	1-31	12.8x
	 2M	1-21	2.6x
	 Stand-by	1-21	2.6x
	 VGA	1-21	2.6x
	 QVGA	1-31	5.1x
	 QCIF	1-31	8.5x
	 Sub-QCIF	1-31	12.8x


Camera mode	Size	Zoom level	Zoom Ratio*
Continuous shooting	 VGA	1-21	2.6x
	 QVGA	1-31	5.1x
	 QCIF	1-31	8.5x
	 Sub-QCIF	1-31	12.8x
Video camera (Img. stabilizer: Auto)	 VGA	1-21	1.9x
	 HVGA Wide	1-21	1.9x
	 QVGA	1-31	2.9 (3.8)x
	 QCIF	1-31	5.2 (6.4)x
	 Sub-QCIF	1-31	7.2 (9.6)x
	Video camera (Img. stabilizer: OFF)	 VGA	1-21
 HVGA Wide		1-21	2.6x
 QVGA		1-31	3.8 (5.1)x
 QCIF		1-31	7.0 (8.5)x
 Sub-QCIF		1-31	9.6 (12.8)x

\* Values are approximates.



## ■ Use Flash/Photo Light

Select a Flash/Photo Light setting.

> In Picture Viewfinder,  [Menu] → **Flash setting** → Select an item (See below)



Item	Operation/Description
<b>Auto</b>	Flash goes off automatically in low-light situations.
<b>Forced ON</b>	Flash always goes off when capturing images.
<b>Always light ON</b>	Photo Light illuminates.
<b>Forced OFF</b>	Flash/Photo Light is disabled.

> In Continuous Shooting/Video Viewfinder,  [Menu] → **Photo light set.** → **ON** or **OFF**

- Flash/Photo light is not available when battery is low.
- When Camera is ended while a setting other than **Forced OFF** is set, Flash setting is changed to **Auto** next time Camera activates. When **Forced OFF** is set, setting remains.
- Even if **Forced OFF** (Flash setting) or **OFF** (Photo light set.) is set, Photo light illuminates or flashes when Camera is active or during shooting.
- When Photo mode is set to **Intelligent Auto**, **Forced ON** cannot be set.
- When using flash, maintain an appropriate distance from subject of 40 to 100 cm.
- When image is captured at close range or your hand is too close to Flash/Photo Light, image color and brightness may differ in appearance from actual subject.

## ■ Set Photo Mode According to Scene

>  [Menu] → **Photo mode** → Select an item (See below)

Item	Operation/Description
<b>Intelligent Auto</b>	Automatically switch Photo mode according to occasion (in Camera mode) <ul style="list-style-type: none"> <li>● Indicator is animated when mode changes (Example:  Close-up).</li> <li>● Mode does not change after Auto Focus Lock. Cancel Auto Focus Lock.</li> </ul>
<b>Normal</b>	Capture an image in normal mode
<b>Scene</b>	Adjust brightness and color tone according to scene > Select an item
<b>My original set.</b>	(  P.6-10)

## Change Continuous Shooting Settings

> [Menu] → **Cont. shooting set.** → Select an item (See below)

Item	Operation/Description
<b>Action mode</b>	> Select an item <ul style="list-style-type: none"> <li>· <b>Auto</b>: Capture multiple still images automatically*</li> <li>· <b>Manual</b>: Capture one by one manually</li> <li>· <b>Auto bracket</b>: Capture nine different still images automatically</li> </ul>
<b>Shot interval</b>	Select an interval when <b>Action mode</b> is set to <b>Auto</b> > Select an interval
<b>Shot number</b>	Set number of images when <b>Action mode</b> is set to <b>Auto</b> or <b>Manual</b> > Select a number

\* Savable number of images is as follows:

- VGA (480×640): 4
- QVGA (240×320): 5 to 10
- QCIF (144×176): 5 to 20
- Sub-QCIF (96×128): 5 to 20

## Save as Original Setting

> Press and hold [Save] → **Photo mode MyOriginal** → Follow the steps (See below)

Item	Operation/Description
<b>Save setting</b>	> Highlight a setting → [Save] (→ <b>YES</b> ) → Edit title
<b>Open setting</b>	> Select a setting
<b>Edit title</b>	> Highlight a setting → [Edit] → Edit title
<b>View detail</b>	> Highlight a setting → [Detail]
<b>Delete setting</b>	> Highlight a setting → [Delete] → <b>YES</b>

- Save up to three settings each in Camera mode and Action mode.

## Focus Functions

### Changing Focus Settings

<Default> Camera mode/Video camera mode: **Face Detection**  
Action mode: **Auto**


Select a focus setting to suit the subject/occasion  
(Unavailable when Photo mode is set to Intelligent Auto).

- Face Detection: Focus locks on faces  
(Camera mode/Video camera mode only)
- Auto: Auto focus
- Close-up: Focus for close-ups
- Landscape: Focus on distant landscapes
- AF tracking: Focus on moving subject (Camera mode only)

1 In Picture/Video Viewfinder, 

2  to select an item → 





#### Note





- Camera focuses on subject at a distance of over 10 cm.
- When Photo mode is set to **Intelligent Auto**, toggle current focus setting and AF tracking by .
- While Camera is focusing, Focus sound is heard in the following situations:
  - When Focus setting is set to **AF tracking**
  - When Photo mode is set to **Intelligent Auto**
  - During video recording

#### Face Detection

- Detect up to five faces within 2.5 meters.
- Show yellow Focus Guide when a face is detected.
- Automatically focus on one face when more than one is detected (Focus guide turns yellow once focus is on the face.).
- Faces may not be detected in following conditions:
  - Face is tilted.
  - A part of face is covered by glasses, hat, mask or shadow.
  - Face is too small, big or dark for screen.
  - Face is at edge of screen.
  - Subject or handset moves too fast.
- Shoot with Auto focus if detection fails.





 


 



 

#### AF Tracking

Position AF tracking guide on subject and press . Yellow AF tracking guide appears and tracks moving subject while adjusting focus and exposure for subject. During AF tracking, press  [**Record**],  or  to lock focus on subject and capture an image.

- Alternatively, press  halfway to lock focus, then  to capture an image
- To cancel AF tracking:  or 
- When Camera is unable to track subject (e.g. when subject is out of Viewfinder), AF tracking is canceled.
- Depending on situation, AF tracking may track unintended subject.
- AF tracking is not available when Auto shutter is in use or certain image size is set.

## Auto Focus Lock

Bring focus on subject at center of display automatically.  
Lock focus on subject, and recompose your picture.

- 1 In Picture/Video Viewfinder, ,  or  halfway
  - ① When in focus, handset sounds.
  - ② Focus Guide turns green, and focus is locked.
    - When out of focus, Focus Guide turns red.
    - To cancel focus locked by  or : 
    - To cancel focus locked by : Release finger from 
- 2 Determine composition
- 3 Capture image in selected camera mode (Camera mode:  P.6-6/Action mode:  P.6-6/Video camera mode:  P.6-7)
  - In Step 1, press  halfway to lock focus, then press  firmly to shoot.

## Viewing Saved Images

Main Menu ► Camera

- 1 **Open Pictures**  
*Pictures*  
**Open Videos**  
*Videos*
- 2 Select a folder
- 3 Select a file



Example: Pictures

- **Open Pictures Saved on microSD Card**  
> In Step 1, *Pictures* →  [microSD] → Select a folder
- **Open Videos Saved on microSD Card**  
> In Step 1, *Videos* →  [microSD] → Select a folder
- **Check Still Images in Picture Viewfinder**  
> In Picture Viewfinder,  [Folder]  
● To return to Picture Viewfinder: 

### Tip


- Editing Still Images ( P.10-11)

# Mobile Widget

<b>Mobile Widget (Japanese) .....</b>	<b>7-2</b>
<b>Using Widgets.....</b>	<b>7-2</b>
Pasting Widgets to Standby .....	7-2
Activating Widgets.....	7-3
Downloading Widgets .....	7-4
Arranging Widgets in Standby.....	7-4

## Mobile Widget (Japanese)

Paste widgets to Standby to access information or tools from Standby.

- Activating Mobile Widget enables Touchpad. Touchpad Indicators illuminate (Touchpad Operations:  P.1-23, P.1-24).

### Network Widget

Some widgets may periodically connect to network, incurring packet transmission fees.



- While widgets appear in Standby, updated information for some widgets may be automatically retrieved. During transmission, other functions (e.g. Video Calls) may be disabled.

### Show/Hide Widget

> In Standby, 

### Tip

#### Settings

- Set Touchpad to Activate for Web Browser/Mobile Widget ( P.18-7)
- Deactivate Auto Update ● Activate Auto Roaming Abroad
- Hide Confirmation when Roaming Abroad ● Forbid Sending/Receiving Cookies ● Delete Cookies ● Change Pointer Speed ( P.18-19)

## Using Widgets

### Pasting Widgets to Standby

Paste up to five widgets per sheet. Select from four sheets and organize sheets by theme.

1 


Widget List appears.

2 Highlight a widget →  [Paste] → Select a sheet

3  to move to target location → 

### Delete Widgets from Standby Display

> Main Menu ▶ Widget ▶ Settings ▶ Delete Content




 

▶ Select a sheet ▶ Check Contents to delete ▶  [Release] ▶ YES

#### Note

- Alternatively, Main Menu ▶ Widget ▶ Widget Contents or Main Menu ▶ Data Folder ▶ Widget to select widgets
- When saving widgets from microSD to Standby, do not remove microSD Card.

## Activating Widgets

### Selecting Widgets in Standby



- 1 In Standby (widgets shown),  Pointer (  ) appears.
  - To disable pointer:  or 
- 2  to move pointer → Select a widget  
Follow onscreen instructions.

#### Toggle Sheets

> In Standby,  → [Back] or [Forward]



### Selecting Widgets from Widget List

- 1  Widget List appears.
- 2 Select a widget → 



Widget List

#### Move Widgets in List

>  → Highlight a widget → [Move] →  to determine a target location → [OK]

## Downloading Widgets

### Main Menu ► Widget

#### 1 *Widget Store*

Handset connects to the Network, and download site appears. Follow onscreen instructions.

#### Installing Widgets

Some widgets may require you to install them manually; follow steps below:




> In download completion window,  [Menu] → *Install*



- Once installation is completed, widgets appear in Widget List. Widget folder in Data Folder includes widgets that are not yet installed.

#### Note

- Alternatively, **Main Menu ► Widget ► Widget Contents ► Download Widget ► YES** or **Main Menu ► Data Folder ► Widget ► Download Widget ► YES** to download

## Arranging Widgets in Standby

- 1 In Standby,  →  to move pointer to a widget →  [Operate]
- 2 Select an item (See below)

Item	Operation/Description
Move	>  to move to a target location → 
Delete frm Standby	> <i>YES</i>
Forward	Move overlapping widget to foreground
Rear	Move overlapping widget to background
Reload	Update widget



# News/Entertainment

<b>S! Information Channel/Weather (Japanese).....</b>	<b>8-2</b>
Registering/Canceling .....	8-2
Using S! Information Channel .....	8-2
Using Weather Indicator .....	8-3
Option Menu Items.....	8-4
<b>S! Quick News (Japanese) .....</b>	<b>8-4</b>
Registering S! Quick News Items .....	8-4
Opening New Information .....	8-5
<b>E-Books (Japanese).....</b>	<b>8-6</b>
<b>Blogging .....</b>	<b>8-7</b>
Saving Blog Details.....	8-7
Posting to Blogs .....	8-7
Blogging Functions.....	8-8

## S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear on Standby.

- Transmission fees apply for updates.
- Auto download is not available overseas.

### Registering/Canceling

Main Menu ► News/Entertainment ► S! Info Ch./Weather

#### 1 Register/Cancel → YES

Handset connects to the Network.  
Follow onscreen instructions.

### Using S! Information Channel

- Up to seven updates are saved.

### Viewing New Information

 
When information arrives,  and Event Indicator appear in Standby.

1 In Standby,  →  to move pointer → Select Event Indicator

2  [Select]

Follow onscreen instructions.

- Option Menu Items (☞ P.8-4)

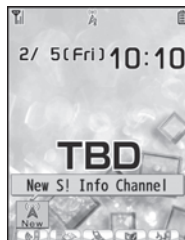

### Manually Retrieve Information

Select Event Indicator "Failed to download"

- Alternatively, Main Menu ► News/Entertainment ► S! Info Ch./Weather ► Get Latest Contents ► YES

### Delete Information

> Main Menu ► News/Entertainment ► S! Info Ch./Weather ► Highlight What's New? ►  [Menu] ► Delete ► YES

#### Note

- Alternatively, Main Menu ► News/Entertainment ► S! Info Ch./Weather ► What's New? to retrieve information
- If there is unread information in both S! Quick News and S! Information Channel,  does not appear. Only Event Indicator appears.


### Viewing Previously Received Information

Main Menu ► News/Entertainment ► S! Info Ch./Weather

1 History → Select a date

 for unread news and  for read news appear.

### Delete History

> Main Menu ► News/Entertainment ► S! Info Ch./Weather ► History ► (Highlight a history) ►  [Menu] ► Delete or Delete all ► YES (► For Delete all, enter Phone Password)

## Using Weather Indicator

Weather Indicator for current forecast area appears in Standby.

### Viewing New Information

Event Indicator and Weather Indicator appear for weather updates.

1 In Standby,  →  to move pointer → Select Event Indicator or Weather Indicator

2  [Select]

Information appears.  
Follow onscreen instructions.

- Option Menu Items (☞ P.8-4)



### Weather Indicator

Indicators are updated periodically.

Example:  Clear,  Rain later thunderstorm,  
 Cloudy with occasional snow, etc.

- See Weather Indicator List (☞ P.19-24) for a complete list of indicators.

### Manually Update Weather Indicator

Select Event Indicator "*Failed to download*"

- Alternatively, **Main Menu** ▶ News/Entertainment  
▶ S! Info Ch./Weather ▶ Weather Indicator ▶ Manual Update  
▶ YES

### Hide Event Indicator

- > **Main Menu** ▶ News/Entertainment ▶ S! Info Ch./Weather  
▶ Weather Indicator ▶ Missed Event Settings ▶ OFF

#### Note

- Alternatively, view forecast details from **Main Menu**  
▶ News/Entertainment ▶ S! Info Ch./Weather  
▶ Weather Indicator ▶ Weather

### Hiding Weather Indicator


- Main Menu** ▶ News/Entertainment ▶ S! Info Ch./Weather  
▶ Weather Indicator ▶ Display Settings

#### 1 OFF

- When Display Settings is set to **OFF**, update is also deactivated.

## Option Menu Items

Open information and press  [Menu] for these options.

Item	Operation/Description
Forward	Go to next page
Text Copy	Copy page text
Select File	View, play or save file to Data Folder (From Step 2 in Downloading Image/Sound Files:  P.15-11)
Jump in this page	Jump to top/end of page
Yahoo! Keitai	View top menu
Font Size*	Change character size
Exit viewing this	Exit content

\* Linked with Font Size setting in Internet option menu.

## S! Quick News (Japanese)

Add news headlines, weather forecasts, etc. via S! Quick News List to scroll across Standby Window.

- Registering or viewing S! Quick News incurs transmission fees. No fees apply for viewing ticker information. For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Auto download is not available overseas.

### Registering S! Quick News Items

- Register a total of up to five items for *Quick* and *General* news and one item for *Special* news.

Main Menu ► News/Entertainment ► S! Quick News  
► S! Quick News List

#### 1 Add News → YES

Yahoo! Keitai connects and contents list appears.




#### 2 Select an item

Follow onscreen instructions.

## Opening New Information

### Viewing New Information in Standby

When new information is received,  appears in Standby.

- 1 In Standby,  →  to move pointer → Select ticker
- 2  [Select]  
Content list appears.
- 3 Select information  
Details appear.

#### Tip

- Settings** ● Show Only Unread Items in Standby ● Change Marquee Speed  
● Hide S! Quick News ● Image Download ( P.18-19)

## Opening S! Quick News List

**Main Menu** ► **News/Entertainment** ► **S! Quick News**  
► **S! Quick News List**

- 1 Select an item  
Content list appears.
- 2 Select information  
Detailed information appears.
- 3 To connect to the Network, select a title → **YES**

#### Update Manually

> In Step 1,  [Menu] → **Update** or **All Update** → **YES**

#### View Summary

> In Step 1, highlight information →  [Menu] → **Summary Display**

 
#### Delete Registered Items

> In Step 1, (highlight information →)  [Menu] → **Delete** or **All Delete** → **YES** (→ For **All Delete**, enter Phone Password)

#### Note

- Alternatively, **Main Menu** ► **News/Entertainment**  
► **S! Quick News** ► **Settings** ► **Del S! Quick News List**  
► **YES** to delete all information

#### Tip

- Settings** ● Automatically Update S! Quick News List ● Delete S! Quick News Information ( P.18-20)

## E-Books (Japanese)

Use **Digital Media Viewer**, **BookSurfing®** or **e-Book Viewer** to acquire/view e-books, comics, photo books, etc. on handset.

- Digital Media Viewer, BookSurfing® and e-Book Viewer are S! Appli.
- Download Content Keys (👉 P.10-5) to read BMO/CCF/XMDF files.
- Some copy protected files have extensions different from the ones below.

Application	File Format
Digital Media Viewer	BMO (.bmo)
BookSurfing®	CCF (.ccf)
e-Book Viewer	XMDF (.zbf, .zbk, .zbs)

- Some PC contents may not be viewable via e-Book Viewer.

Main Menu ► News/Entertainment

### 1 *Digital Media Viewer*, *BookSurfing* or *e-Book Viewer*

- See application Help menu for usage information.

#### Note

- Launch each viewer via S! Appli, or select a file from Books in Data Folder.
- When purchasing a new handset, move BMO/CCF/XMDF files via microSD Card. However, if BMO/CCF/XMDF files are copy protected, Content Keys backup may be needed (👉 P.10-24). Some contents require another Content Key after being moved/copied to a new handset or can not be moved/copied at all.

# Blogging

Save blog details to update or view blogs.

- Save up to 20 blog details.

## Saving Blog Details

Main Menu ► News/Entertainment ► Post Blog

1 [New] → Select an item (See below)

Item	Operation/Description
<b>Service name</b>	Save a blog service name > Enter a service name
<b>Blogger address</b>	Save a mail address for posting to a blog by mail > Enter a mail address
<b>Mail title</b>	Save a title to enter automatically when posting to a blog by mail > Enter a title
<b>Yahoo! Keitai URL</b>	Save a URL for posting to a blog from Yahoo! Keitai > Enter a mail address
<b>PC Site Browser</b>	Save a URL for posting to a blog from PC Site Browser > Enter a mail address

2 [Finish]

## Posting to Blogs

Main Menu ► News/Entertainment ► Post Blog

1 **Post by Mail**  
Highlight an entry → [Post] → Compose a message (☞ From Step 4 on P.14-4) → [Send]

**Post from Yahoo! Keitai/PC Site Browser**  
Highlight an entry → [To site] → *By Yahoo! Keitai* or *By PC Site Browser* → **YES**


Handset connects to the Network and website appears.  
Follow onscreen instructions.

■ **Post Images to Blogs**  
> While captured image is open, or from Data Folder, select an image → [Menu] → *Post blog\** → Follow Step 1 above  
\* When *Post blog* does not appear in sub menu, function is unavailable (e.g. when sub menu is opened from [Folder] in Picture Viewfinder).  
● Set **Auto save set** (☞ P.18-17) in Camera menu to **OFF** to capture and post images directly.

## Blogging Functions


From ► Main Menu ► News/Entertainment ► Post Blog

### ■ Edit Entries

> Highlight an entry →  [Edit] → Edit

### ■ Delete Entries

> Highlight an entry →  [Menu] → *Delete* →  
Select an item (See below)

Item	Operation/Description
Delete this	> <i>YES</i>
Delete selected	> Check entries →  [Finish] → <i>YES</i>
Delete all	> Enter Phone Password → <i>YES</i>



# Music Player

<b>Overview .....</b>	<b>9-2</b>
<b>Saving Music .....</b>	<b>9-2</b>
Downloading Chaku-Uta Full® .....	9-3
Saving Music Files by Using SD Audio .....	9-3
Transferring WMA Files .....	9-4
<b>Using Music Player .....</b>	<b>9-5</b>
Playback Window Indicators .....	9-5
Playing Music .....	9-6
Playback Window Operations.....	9-7
Functions while Playing Files.....	9-8
Chaku-Uta Full®/WMA List.....	9-9
Using Play List .....	9-10
Play List .....	9-11

## Overview

### Play music saved on handset/microSD Card.

- Play List: [☞ P.9-10](#)

### Notes

- Files may not play due to file support issues or microSD Card status, etc.
- When playback starts with low battery, confirmation appears. When battery is low during playback, confirmation appears.
- Playback pauses for incoming calls or Alarm. Playback resumes after calls are received or Alarm sounds.

### Music Illumination

- Notification Light illuminates when playback starts. When playback starts during charging, Music Illumination lights before Charging Indicator.
- To turn off light, set **Music** to **OFF** in Notification Light setting ([☞ P.18-10](#)).

### Tip

- Use Bluetooth® Device for Listening to Music ([☞ P.11-10](#))

## Saving Music

### Save Music to play on Music Player.

<b>Download Chaku-Uta Full®</b> ( <a href="#">☞ P.9-3</a> )	Open site link to download and save songs ----- Supported file format: SMC, MPEG-4 (MPEG-4 AAC, MPEG-4 AAC+ (HE-AAC), Enhanced aacPlus)
<b>Save Music via SD Audio</b> ( <a href="#">☞ P.9-3</a> )	Save music CD songs via PC to microSD Card in AAC format ----- Supported file formats: MPEG-2 AAC, MPEG-2 AAC+SBR
<b>Save WMA files</b> ( <a href="#">☞ P.9-4</a> )	Save Windows Media® Audio (WMA) files in PC to microSD Card via Windows Media® Player ----- Supported file formats: WMA

- Some files may not play even if format is supported.

### Copy Protected Files

Copy protected files may not play, be saved or forwarded.

To play a copy protected file, obtain Content Key ([☞ P.10-5](#)).

Confirm file expiry date or usage limitations (Music info: [☞ P.9-8](#)).

## Saving Music Files on PCs

When saving music files for use with 942P, observe the following guidelines:

- Copyrighted Works
  - Do not infringe on third party/intellectual property rights.
  - Music files are limited to private use.
- Obtain software to convert file format.
  - Refer to websites providing software.
  - Performance of some software types is not guaranteed.

## Downloading Chaku-Uta Full®

Access websites directly from Music Player to download Chaku-Uta Full® files.

- View details (price, expiry date, etc.) on source website.

Main Menu ► Data Folder ► Music ► Main Folder

### 1 Download Music → YES

Handset connects to the Network and Download site appears.

- Follow onscreen instructions to download files.

## Saving Music Files by Using SD Audio

### Note


- Saving music files requires following:
  - 942P
  - microSD Card (commercial item)
  - USB cable (not included)
  - PC (Windows® XP, Windows Vista®)
  - Software for PC (commercial item)Panasonic brand "SD-Jukebox" is recommended. Purchase SD-Jukebox from website below:  
<http://club.panasonic.jp/mall/sense/> (Japanese only)
- Music CD to save

Main Menu ► Settings ► Connectivity ► USB Mode  
► microSD Mode

- 1 Connect handset to a PC via USB cable
- 2 Activate SD-Jukebox on PC
- 3 Set a music CD on PC
- 4 Save music files to micro SD Card
  - See SD-Jukebox manual for usage information.
  - After saving, release USB cable from handset.

## Transferring WMA Files

### Transfer WMA files from PC to microSD Card via Windows Media® Player. Up to 1000 files can be saved per microSD Card.

- Use PC with Windows Media® Player installed.
- When using Windows Media® Player 10 (10.00.00.3802 or later)/11 on Windows® XP, use Windows® XP Service Pack 2 or later.
- When using Windows Vista®, use Windows Media® Player 11.
- Insert microSD Card into handset before preparing USB cable (Transferring Data via USB Cable:  P.11-17)



Main Menu ► Settings ► Connectivity ► USB Mode  
► MTP Mode

#### 1 Connect handset to a PC via USB cable

Follow Windows Media® Player operations to transfer WMA files from PC to microSD Card.

 
- Refer to Windows Media® Player Help for operations.
- Terminate all software applications before disconnecting USB cable.

#### Note

- Do not remove microSD Card while transferring files to microSD Card. Files may be damaged.
- WMA files overwrite existing files with same name in handset when copied from PC. To check file names, refer to Windows Media® Player Help.
- 942P may not recognize WMA files saved to a microSD on a different handset. Handset may not recognize WMA files from PCs if **USB Mode** is set to **MTP Mode**. Delete WMAudio and WMSystem folders in My Items (MY FOLDER) on microSD, or format microSD Card ( P.10-20) via PC. Formatting microSD deletes all saved files.
- To play WMA files on handset, save files to WMFile ( P.10-22) on microSD Card and play the files from PC Movies folder in Data Folder.

# Using Music Player

## Playback Window Indicators

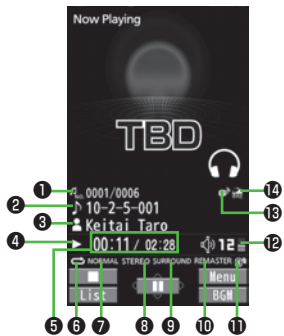

Item	Description
1	File Number/Total Number
2	Title
3	Artist
4	Status
5	Elapsed Time/Total Time
6	Play Mode Indicators
7	Equalizer Setting
8	Stereo/Monaural
9	Listening Setting
10	Remaster Setting ON
11	Bluetooth® Device Connected
12	Volume
13	Lyric
14	URL

## Playing Music

### 1 Press and hold

Player Menu window appears.

- Last playback window appears.

 [Menu] → **Player menu** to show Player Menu window.



Player Menu Window




### 2 Select a category (See below)

Item	Operation/Description
All Tracks	Select files from handset & microSD Card
Play List	Select group of files saved to Play List
Artist	Select files from Artist folder
Album	Select files from Album folder
Genre	Select files from Genre folder

 
- ★ appears for currently/previously played Play List.

### 3 Select a file

Selected file plays.

- ★ appears for currently/previously played file.
- Playback Window Operations:  P.9-7
- To end playback,  [  ]

#### Note

- Alternatively, play music from **Main Menu** ► **Tools** ► **Music Player**
- mp4/3gp files in Ring Songs&Tones folder can also be played in Music Player.
- Missed Call/New Message Notification Tone ( P.18-8) is unavailable during playback while handset closed.

## Changing Play Mode

### 1 Press and hold

Player Menu window or Playback window appears.

### 2 [Menu] → **Play mode setting**

### 3 Select an item (See below)

Item	Operation/Description
Normal	Play all files in selected category/Play List
Play only one	Play selected file
Repeat one	Repeat selected file
Repeat all	Repeat all files in selected category/Play List
Random	Play selected category/Play List files randomly
Random play&repeat	Repeat selected category/Play List files randomly

## Background Music

Listen to music while using other handset functions.

- 1 While music plays, [BGM]
- 2 To end, in Standby → **End player**

### Note

- Some functions cannot operate simultaneously.
- Volume or play mode change is not available during Play Background.

## Playing Chaku-Uta Full®/WMA Files as Demo

Main Menu ► Data Folder ► Music

- 1 Select an item (See below)

Item	Operation/Description
Main Folder	View Chaku-Uta Full® list > Select a folder ● To view file list in handset/microSD Card: [Phone/microSD]
WMA	View WMA list

- [Change] to toggle display views in Chaku-Uta Full® and WMA list.
- 2 Select a Chaku-Uta Full® or WMA file  
Demonstration playback starts.


## Playback Window Operations

Adjust Volume	or
Play Previous*	or press and hold ● When playback time is over three seconds, previous file plays from beginning.
Play Next*	or press and hold
Fast-rewind	Press and hold
Fast-forward	Press and hold
Pause/Resume	[  /  ]
Stop	[  ]
View Next Jacket/Lyric	
View Previous Jacket/Lyric	
Toggle Jacket/Lyric Display	
Toggle Playlist/Playback Window*	[List/Player]
Play Background*	[BGM]
Toggle Remaster On/Off ( P.9-8)	
Toggle Sound Effect (Listening) Modes ( P.9-8)	
Toggle Equalizer Modes ( P.9-8)	

\* Not available for playback as a demo

## Functions while Playing Files



### ■ Set Sound Effect

> While playing file,  [Menu] → *Sound effect* → Select an item (See below)

Item	Operation/Description
<b>Remaster</b>	Complement sound from earphone or Bluetooth® device to bring close to original sound > <b>ON</b> or <b>OFF</b>
<b>Listening</b>	Add listening effect to sound from earphone or Bluetooth® device > Select an item <ul style="list-style-type: none"> <li>· <b>Surround-sound</b>: Reproduce natural and stereophonic sound</li> <li>· <b>Natur 1 or Natur 2</b>: Complement sound specific to earphone to reproduce natural sound</li> <li>· <b>OFF</b>: Turn off Listening setting</li> </ul>
<b>Equalizer</b>	Change quality of sound from earphone or Bluetooth® device > Select an item <ul style="list-style-type: none"> <li>· <b>Normal</b>: Reproduce normal sound</li> <li>· <b>H. BASS1</b>: Enhance low-pitched sound</li> <li>· <b>H. BASS2</b>: Enhance low-pitched sound even more</li> <li>· <b>Train</b>: Minimize sound leakage</li> </ul>

### ■ Functions Available in Playback Window

> While playing file,  [Menu] → Select an item (See below)

Item	Operation/Description
<b>Player menu</b>	Show Player menu
<b>Play mode setting</b>	Change play mode (  P.9-6)
<b>Sound effect</b>	(  Left)
<b>Music info</b>	Show song title, artist and playback time
<b>Connect to Website</b>	Open site link > <b>YES</b>
<b>Display Image</b>	Show jacket
<b>Display lyric</b>	Show lyric
<b>Previous image/ Previous lyric</b>	Show previous jacket or lyric
<b>Next image/ Next lyric</b>	Show next jacket or lyric



## Chaku-Uta Full®/WMA List

From ▶ Main Menu ▶ Data Folder ▶ Music

### ■ Confirm Memory Status


>  [Menu] → *Memory Status*


### ■ Functions Available in Chaku-Uta Full® Folder List


 



> *Main Folder* → Highlight a folder →  [Menu] → Select an item  
(See below)

Item	Operation/Description
Add folder	> Enter folder name
Edit folder name	> Enter folder name
Delete folder	> Enter Phone Password → <b>YES</b>
Memory Status	> Confirm memory status/total files

### ■ Functions Available in Chaku-Uta Full®/WMA File List

> *Main Folder* or *WMA* (→ Select a folder) → Highlight a file →  [Menu] → Select an item (See below)

Item	Operation/Description
Set as ring tone (Fullsong ring tone) <sup>1</sup>	Set Chaku-Uta Full® as ringtone > <b>Fullsong ring tone</b> → Select an item
Set as ring tone (Point ring tone) <sup>1</sup>	Set a segment of Chaku-Uta Full® as ringtone > <b>Point ring tone</b> → Select a segment → Select an item ● To confirm segment:  [Play]
Music info	Show song title, artist and playback time
Move <sup>1</sup>	> Select a storage

Item	Operation/Description
Move to microSD <sup>1</sup>	Move a Chaku-Uta Full® to microSD Card
Add folder <sup>1</sup>	> Enter folder name
Multiple-choice <sup>1</sup>	Select multiple Chaku-Uta Full® files > Check Chaku-Uta Full® files →  [Menu] → <b>Delete, Move</b> or <b>Send Ir data</b> → Operate selected item
Connect to Website <sup>1</sup>	Open site link > <b>YES</b>
Display image	Show jacket
Memory Status	Memory status/total number of files appears
DEL all licenses <sup>2</sup>	Delete all WMA licenses > Enter Phone Password → <b>YES</b>
Delete this	> <b>YES</b>
Delete all	Delete all files in folder > Enter Phone Password → <b>YES</b>
Attach to message <sup>1</sup>	Attach file to S! Mail/PC Mail (  From Step 2 on P.14-4)
Send Ir data <sup>1</sup>	(  P.11-3)
IC transmission <sup>1</sup>	(  P.11-5)
Take contents key <sup>1</sup>	(  P.10-5)

<sup>1</sup> Chaku-Uta Full® files only

<sup>2</sup> WMA files only

## Using Play List

Use **Play List** to organize **Data Folder** music files.  
Select **Music folder** files to create **Play List** links to each file in its original folder.

### Creating New Play Lists

- Save up to 30 Play Lists with up to 100 songs per list.
- Music files saved on microSD Card are also savable.

#### 1 Press and hold **[W]**

Player Menu window or Playback window appears.

- When Playback window appears, **[Menu]** → **Player menu** to show Player Menu window

#### 2 **Play List** → **[Menu]** →

**Create play list** → Select a category and show file list → Check files to save to Play List →

**[Finish]**



#### 3 Enter a Play List name

### Note

- Create WMA Play Lists (using Windows Media® Player) or SD Audio Play Lists (using SD-Juke Box) on PC. Maximum number of Play Lists to create and songs to save is as follows:  
WMA Play Lists: 100 Play Lists; 250 songs per list  
SD Audio Play Lists: 99 Play Lists; 99 songs per list

### Playing Songs from Play List

#### 1 Press and hold **[W]**

Player Menu window or Playback window appears.

 
- When Playback window appears, **[Menu]** → **Player menu** to show Player Menu window

#### 2 **Play List** → Select a Play List

- To play back selected Play List from the beginning: **[Play]**

#### 3 Select a file

Selected file plays back.

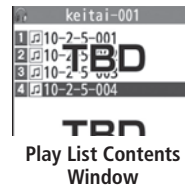

### Note

- mp4/3gp files in Ring Songs&Tones folder can also be added to Play List.

## Play List

Press and hold (▶) [Menu] ▶ **Player menu**  
▶ **Play List**

### ■ Functions Available in Play List Window

> (Highlight a Play List) [Menu] → Select an item (See below)

Item	Operation/Description
<b>Player menu</b>	Open Player menu
<b>Play mode setting</b>	Change play mode (▶ P.9-6)
<b>Create play list</b>	Create a new Play List (▶ P.9-10)
<b>Copy play list</b>	Copy Play List > Enter a Play List name
<b>Edit pl. list name</b>	Edit Play List name > Edit Play List name
<b>Add</b>	Add files to Play List > Select a category, and open a Play List → Check files to add →  [Finish]
<b>Delete play list</b>	> Select an item → Operate selected item

### ■ Functions Available in Play List Contents Window

> Select a Play List → (Highlight a file) → [Menu] → Select an item (See below)

Item	Operation/Description
<b>Player menu</b>	Open Player menu
<b>Play mode setting</b>	Change play mode (▶ P.9-6)
<b>Music info</b>	Show song title, artist and playback time
<b>Add</b>	Add files to Play List > Select a category, and show contents window → Check files to add →  [Finish]
<b>DEL from play list</b>	Delete files from Play List > Select an item → Operate selected item
<b>Order to play</b>	> Select a file from Play List to change playing order →  to change order →  [Select] ● Repeat steps above to change order →  [Set]
<b>Add to play list</b>	Add files to another Play List > <b>Add one</b> or <b>Add some</b> (→ For <b>Add some</b> , check files →  [Finish]) → Select a Play List
<b>Display image</b>	Show jacket

**9**

**Music Player**

9-12

# Managing Files

<b>Data Folder</b> .....	<b>10-2</b>
Data Folder Structure .....	10-2
<b>Opening Files</b> .....	<b>10-4</b>
Viewing & Playing Files .....	10-4
Copy Protected Files .....	10-5
Options .....	10-6
<b>Using/Editing Still Images</b> .....	<b>10-11</b>
Editing Still Images .....	10-11
Creating Animations .....	10-12
Saving Still Images to Phone Book .....	10-13
<b>Playing Videos</b> .....	<b>10-13</b>
Playing Videos/PC Movies .....	10-13
Playing Videos Recorded on HDD Recorder .....	10-14
File Playback Functions .....	10-15
<b>Managing Folders/Files</b> .....	<b>10-16</b>
Managing Folders .....	10-16
Using Play List .....	10-17

<b>microSD Card</b> .....	<b>10-18</b>
microSD Card Installation .....	10-19
Format microSD Card .....	10-20
Viewing microSD Card Files .....	10-20
Handset Data Backup .....	10-21
PC File Transfers .....	10-22
microSD Card Functions .....	10-23
<b>Variety Photo Viewer</b> .....	<b>10-24</b>
Viewing Still Images .....	10-24
Slideshow .....	10-26

## Data Folder

Save, play and manage files downloaded from Internet, etc.


- Save still images/videos captured by Camera, downloaded data or data copied/moved from SoftBank handset to microSD Card.

### Data Folder Structure

Folder		Function/Saved Data	File Format <sup>1</sup>	
Pictures <sup>2</sup>	Download Pictures	Connect to download site	JPEG, GIF (.gif including Interlaced GIF), GIF Pictogram Package File (.gpk), SWF (.swf Flash Animation), PNG (.png including Interlaced PNG)	
	Variety Photo Viewer	Activate Variety Photo Viewer		
	Main Folder	Downloaded still images, etc.		
	Camera	Still images captured by Camera, etc.		
	My Pictograms	Download My Pict.		Connect to download site
		お気に入り		Downloaded pictograms, etc.
		顔文字, 装飾, etc.		Preinstalled pictograms
	Mail Art	Mail Art (download)		Connect to download site
Pre-installed	Preinstalled still images			
Original Animation	Display still images continuously			
Ring Songs&Tones <sup>2</sup>	DL Ring Songs&Tones	Connect to download site	SMF, SP-MIDI, AMR, SMAF and MPEG-4 formatted files (.mid, .midi, .amr, .mmf, .3gp, .mp4)	
	Main Folder	Downloaded ring songs/tones, etc.		
	Pre-installed	Preinstalled ring songs/tones		
	Voice Announce	Data recorded by Voice Announce		
	Play List	Play back Play List		
S! Appli <sup>2</sup>	Download S! Appli	Connect to download site	—	
Widget <sup>2</sup>	Download Widget	Connect to download site	WGT (.wgt), SWGT (.swgt)	
Music	Main Folder <sup>2</sup>	Download Music	MP4, SMC, WMA (.3gp, .mp4, .smc, .wma)	
		Initial Folder		Downloaded Chaku-Uta Full <sup>®</sup>
	WMA <sup>3</sup>	WMA Files transferred from PC		

Folder		Function/Saved Data	File Format <sup>1</sup>
<b>Videos<sup>2</sup></b>	Download Videos	Connect to download site	MP4 (including .mp4, .3gp, SDV), ASF (.asf)
	Main Folder	Downloaded video files, etc.	
	Camera	Video files recorded by Camera	
	Pre-installed	Pre-installed video files	
	BD/DVD Recorder <sup>3</sup>	Videos transferred from HDD Recorder	
	Play List	Play back Play List	
<b>PC Movies</b>	Position Memory	Play back video files from saved resume position	WMA (.wma), WMV (.wmv), ASF (.asf)
	microSD <sup>3</sup>	PC movie files saved from PCs	
	Position Memory	Play PC movie files from a saved resume position	
<b>TV</b>	Play History	Select a file from playback history	JPEG (.jpg)
	Image	Still images recorded by Digital TV	
	Video <sup>3</sup>	Programs recorded on handset	
<b>Lifestyle-Appli</b>	Position Memory	Play back video files from saved resume position	TOD (.tod), MOI (.moi), MAI (.mai), PGI (.pgi)
	Download	Connect to download site (Osaifu-Keitai <sup>®</sup> : ☞ P.13-9)	–
<b>Books<sup>2</sup></b>	Download Books	Connect to download site	CCF (.ccf), XMDF (.zbf, .zbx, .zbs), BMO (.bmo)
<b>Customized Screen<sup>2</sup></b>	Customized Screen	Connect to download site	CUSR (.xcsf)
<b>Templates</b>	Download Templates	Connect to download site	–
<b>Font</b>	Download Font	Connect to download site	MTF (.mtf)
	Main Folder	Downloaded fonts	
	Pre-installed	Pre-installed fonts	
<b>Other Documents<sup>2</sup></b>	Main Folder	Incompatible files attached to mail <sup>4</sup>	–

<sup>1</sup> Some copy protected files have extensions different from above.

<sup>2</sup> When microSD Card is installed, press  [microSD] in Folder list to view data saved in microSD Card.

<sup>3</sup> Available only when microSD Card is inserted.

 
<sup>4</sup> Some attachment files cannot be saved in Other Documents.

## Opening Files


### Viewing & Playing Files

#### Main Menu ► Data Folder

- 1 Select a folder
  - In Folder List, press  to toggle handset folder and microSD Card folder.

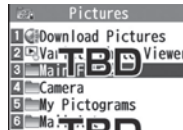

Pictures Folder

- 2 Select a folder → Select a file  
File appears/plays.
  - To toggle list/thumbnail view:  
 [Change]



Still Image List Window








#### When Shortcut to a Download Site is Selected

Handset connects to a download site on Internet.

#### Enlarge Still Images

- > Main Menu ► Data Folder ► Pictures ► Select a folder ► Select a file ►  [Menu] ► Display size ► Fit in display

#### Operations while Playing Files from Ring Songs&Tones




 




Stop	 [Stop]
Volume	 /  / 
Attach to messages	 [   ]



## Copy Protected Files

Playing/forwarding/saving may be restricted and Content Key may be required for usage.

If Content Key is expired, obtain a new Key to use file.

-  or  appears for copy protected files requiring Content Keys.  files are accessible.  files are inaccessible.  appears on images in Thumbnail view of expired files (Original icon appears for Books folder).
- When deleting  files or folders containing  files, confirmation appears asking whether to delete corresponding Content Key. Other files requiring same Content Key may become unusable.
- See File Properties to confirm restrictions such as expiry term or usage limitation (Options:  P.10-6)
- 942P holds up to 1000 Content Keys. Multiple Keys may be required to use a file.
- Interrupted playback (by incoming calls or Alarm) of copy protected WMA files with limited usage in Data Folder is also counted as one usage.


### Using Copy Protected Files

- Files downloaded on handset cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- When set as wallpaper or ringtone, settings may return to defaults if license has expired or different USIM Card is inserted.
- Limited use files cannot be set as wallpaper or ringtone.

 
### Obtaining Content Key

If Content Key is expired, a message appears when the file is opened. To obtain a new Key, select **YES**. Handset connects to Content Key site.

#### Note

- Alternatively, obtain Content Key as follows: Highlight a file →  [Menu] → **Take contents key** → **YES**
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- When 1000 Content Keys have been saved, a message appears. Delete old Keys; otherwise downloads may fail (Connection fees apply).

#### Tip








- Back Up Content Key ( P.10-24)



## Options

Highlight a file in Data Folder →  [Menu] for the following operations.


- Some functions may not be available depending on files.

### Pictures

Item	Operation/Description
<b>Edit picture</b>	Edit files (  P.10-11)
<b>Display picture</b>	Open files
<b>Set display*</b>	Set as wallpaper, Phone Book image, Menu Icons, etc. > Select an item ● ★ appears for item.
<b>Picture info</b>	Show file name, file size, etc.
<b>Attach to message</b>	Attach files to S! Mail/PC Mail (  From Step 2 on P.14-4)
<b>Graphic mail</b>	Add selected files to Graphic Mail (  P.14-9)
<b>Post blog</b>	Post file on a blog (  P.8-7)
<b>Send Ir data</b>	Send files via Infrared (  P.11-3)
<b>IC transmission</b>	Send files via IC transmission (  P.11-5)
<b>Add shortcut icon</b>	Create shortcuts (  P.1-25)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Move to microSD</b>	Move files to microSD Card
<b>Positioning</b>	Set where to paste files in Standby > Select a position
<b>Edit file name</b>	Edit file names
<b>Move</b>	Move files to other folders




 
Item	Operation/Description
<b>Slideshow</b>	Show files in a folder continuously. Select display speed > <b>Normal</b> or <b>Slow</b>
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use →  [Menu] → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order
<b>Pictures/ File names</b>	Toggle list views ● Alternatively,  [Change] to toggle
<b>Take contents key</b>	Connect to site for Content Key

\* Before setting a file as Video Call related item (except for Incoming/ Outgoing Video Calls), set **Select Images to Original** (Change Outgoing Image:  P.18-13).

To set a file as Menu Icon related item, set **Menu Icons to Customize** ( P.18-4).

- If incoming calls arrive or handset is turned off while My Pictograms package file (.gpk) is being uncompressed, some pictograms in package file may not open. Retry uncompressing.

### Tip

- Enlarge Still Images ( P.10-4)
- Editing Still Images ( P.10-11)
- Creating Animations ( P.10-12)
- Saving Still Images to Phone Book ( P.10-13)

## ■ Ring Songs&Tones

Item	Operation/Description
<b>Edit file name</b>	Edit file names
<b>Play melody</b>	Play back files
<b>Set as ring tone</b>	<ul style="list-style-type: none"> <li>&gt; Set as ringtone</li> <li>● ★ appears for item.</li> </ul>
<b>Add shortcut icon</b>	Create shortcuts (☞ P.1-25)
<b>Attach to message</b>	Attach files to S! Mail/PC Mail (☞ From Step 2 on P.14-4)
<b>Send Ir data</b>	Send files via Infrared (☞ P.11-3)
<b>IC transmission</b>	Send files via IC transmission (☞ P.11-5)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Song-Tone info</b>	Show titles, file names, etc.
<b>Memory Status</b>	Show memory information
<b>Delete</b>	<ul style="list-style-type: none"> <li>&gt; Select a type               <ul style="list-style-type: none"> <li>· <b>Delete this</b> → <b>YES</b></li> <li>· <b>Delete select</b> → Check files to delete → ☑[Finish] → <b>YES</b></li> <li>· <b>Delete all</b> → Enter Phone Password → <b>YES</b></li> </ul> </li> </ul>
<b>Sort</b>	Change display order of files > Select an order
<b>Move</b>	Move files to other folders
<b>Move to microSD</b>	Move files to microSD Card
<b>Take contents key</b>	Connect to site for Content Key

## ■ Widget

Item	Operation/Description
<b>Paste on Stand-by</b>	(☞ P.7-2)
<b>Widget Information</b>	Show file names, sizes, etc.
<b>Attach to message</b>	Attach files to S! Mail/PC Mail (☞ From Step 2 on P.14-4)
<b>Send Ir data</b>	Send files via Infrared (☞ P.11-3)
<b>IC transmission</b>	Send files via IC transmission (☞ P.11-5)
<b>Move to microSD</b>	Move files to microSD Card
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use → ☑[Menu] → Select an item

## ■ S! Appli/Lifestyle-Appli

Item	Operation/Description
<b>Start</b>	Activate S! Appli or Lifestyle-Appli
<b>Security level</b>	Set security level (☞ P.16-4)
<b>S! Appli info</b>	Show file names, file sizes, etc.
<b>Add shortcut icon</b>	Create shortcuts (☞ P.1-25)
<b>Move to microSD</b>	Move files to microSD Card (Lifestyle-Appli cannot be moved)
<b>Delete</b>	Delete files > <b>YES</b>

## ■ Music

- See "Functions Available in Chaku-Uta Full®/WMA File List" (☞ P.9-9)

## ■ Videos

Item	Operation/Description
<b>Register</b>	Set as ringtones, Standby Display or Start-up display
<b>Video info</b>	Show titles, file names, etc.
<b>Attach to message</b>	Attach files to S! Mail/PC Mail (☞ From Step 2 on P.14-4)
<b>Post blog</b>	Post file on a blog (☞ P.8-7)
<b>Send Ir data</b>	Send files via Infrared (☞ P.11-3)
<b>IC transmission</b>	Send files via IC transmission (☞ P.11-5)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Move to microSD</b>	Move files to microSD Card
<b>Move</b>	Move files to other folders

Item	Operation/Description
<b>Add shortcut icon</b>	Create shortcuts (☞ P.1-25)
<b>Edit file name</b>	Edit file names
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use → ☞ [Menu] → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order
<b>Listing</b>	Change list view <ul style="list-style-type: none"> <li>● ☞ [Change] to toggle views</li> </ul>
<b>Take contents key</b>	Connect to site for Content Key

## ■ PC Movies

Item	Operation/Description
<b>Contents info</b>	Show titles, file names, etc.
<b>Move</b>	Move files to other folders
<b>Copy</b>	Copy files to other folders
<b>Multiple-choice</b>	Select multiple files to use > Check files to use →  [Menu] → Select an item
<b>Comment view</b>	Show descriptions
<b>Memory Status</b>	Show memory information
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>

## ■ TV



- See Pictures folder for still images.

Item	Operation/Description
<b>Edit title</b>	> Enter titles
<b>Video info</b>	Show titles, channel names, etc.
<b>Add shortcut icon</b>	Create shortcuts (📄 P.1-25)
<b>Delete</b>	> Select an item <ul style="list-style-type: none"> <li>· <b>Delete this</b> → <b>YES</b></li> <li>· <b>Delete selected</b> → Check files to delete →  [Finish] → <b>YES</b></li> <li>· <b>Delete all</b> → Enter Phone Password → <b>YES</b></li> </ul>
<b>Memory Status</b>	Show memory information
<b>Listing</b>	Change list view <ul style="list-style-type: none"> <li>●  [Change] to toggle views</li> </ul>



## ■ Books

Item	Operation/Description
<b>Play</b>	Play back files
<b>Connect to Website</b>	Open site link
<b>Book info</b>	Show file names, file sizes, etc.
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Move to microSD</b>	Move files to microSD Card
<b>Add folder</b>	Add folders
<b>Edit file name</b>	Edit file names
<b>Move</b>	Move files to other folders
<b>Take contents key</b>	Connect to site for Content Key
<b>Delete</b>	Delete files > <b>YES</b>



## ■ Customized Screen

Item	Operation/Description
<b>Preview</b>	Preview files
<b>Collective Setting</b>	Set Customized Screen all at once
<b>File info</b>	Show titles, file names, etc.
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Move to microSD</b>	Move files to microSD Card
<b>Edit file name</b>	Edit file names
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use →  <b>[Menu]</b> → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order
<b>Listing</b>	Change list view ●  <b>[Change]</b> to toggle views
<b>Take contents key</b>	Connect to site for Content Key
<b>Connect to Website</b>	Open site link

## ■ Templates

Item	Operation/Description
<b>Compose S! Mail</b>	Send files via S! Mail (  P.14-5)
<b>Edit title</b>	Edit titles
<b>Template info</b>	Show title and file size
<b>Delete this</b>	> <b>YES</b>
<b>Delete selected</b>	> Check files to delete →  <b>[Finish]</b> → <b>YES</b>
<b>Delete All</b>	> Enter Phone Password → <b>YES</b>

## ■ Font

Item	Operation/Description
<b>Set</b>	Apply selected font
<b>File info</b>	Show file names, file sizes, etc.
<b>Edit title</b>	Edit titles
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use →  <b>[Menu]</b> → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order
<b>Listing</b>	Change list view ●  <b>[Change]</b> to toggle views

## Other Documents

Item	Operation/Description
<b>File info</b>	Show file names, file sizes, etc.
<b>Attach to message</b>	Attach files to S! Mail/PC Mail (✉ From Step 2 on P.14-4)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Edit file name</b>	Edit file names
<b>Move</b>	Move files to other folders
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use →  [Menu] → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order

### Note

- Titles of mp4/3gp Ring Songs&Tones files and Videos/Music/Customized Screen files appear in respective lists. Files without titles appear with file names (created when files are saved to handset). Titles cannot be changed; edited file names may not appear in lists.

## Using/Editing Still Images

### Editing Still Images

- Edit features are not available for all file types.

**Main Menu** ► **Data Folder** ► **Pictures**

1 Select a folder → Select a file → [Menu] → **Edit picture**

2 [Menu] → Select an item (See below)

Item	Operation/Description
<b>Marker stamp</b>	<p>&gt; Select a stamp →  to move stamp →  [Put]</p> <ul style="list-style-type: none"> <li>Following options are available when positioning a stamp:           <ul style="list-style-type: none"> <li>To rotate or scale up/down:  [Menu] → Select an item</li> <li>To start over:  [Cancel]</li> <li>To add:  [Add]</li> </ul> </li> </ul>
<b>Frame</b>	<p>&gt; Select a frame</p> <ul style="list-style-type: none"> <li>To rotate 180 degrees:  [Menu] → <b>180° rotation</b></li> <li>To change frame: </li> <li>To return to frame list:  [Cancel]</li> </ul>
<b>Character stamp</b>	<p>&gt; Enter text →  to move text →  [Put]</p> <ul style="list-style-type: none"> <li>To change content/color/font/size: When positioning stamp,  [Menu] → Operate selected item</li> <li>To start over:  [Cancel] after positioning</li> </ul>

Item	Operation/Description
Fit in screen	Change image size to Standby (480 x 854) > <b>YES</b>
Change size	> Select a size ● To start over:  [Cancel]
Trim away	> Specify a size →  to specify area →  [Set] ● To start over: After specifying area,  [Cancel]
Retouch	> Select an item ● To start over:  [Cancel]
Rotate	> <b>90° to right</b> , <b>90° to left</b> or <b>180°</b> ● To start over:  [Cancel]
Brightness	>  to adjust brightness
Attach to message <sup>1 2</sup>	Attach edited file to S! Mail/PC Mail >  [Set] → Compose message ( From Step 2 on P.14-4) ● Alternatively,  [] to attach image to a message
Post blog <sup>1 2</sup>	Post on a blog >  [Set] → Post on a blog ( P.8-7)
Save <sup>1</sup>	Overwrite/rename to save edited files

<sup>1</sup> Available after other editing operations.

<sup>2</sup> File is automatically saved.

3 [Set] → [Save]

4 **YES** (Overwrite) or **NO** (Save as)

## Creating Animations

### Saving Original Animation

Main Menu ► Data Folder ► Pictures ► Original Animation

- 1 <New> → <1st> - <20th>
- 2 Select a folder → Select a file  
● Repeat Step 2.
- 3 [Finish]

### Functions Available in Original Animation List

In Original Animation list, press [Menu] for following operations.


Item	Operation/Description
Edit title	> Enter title
Org. animation	Add more files to an Original Animation ( Above)
Display picture	Play back an Original Animation ● Alternatively, select an Original Animation from list to play back.
Set display	Set an Original Animation as Standby display, etc. > Select item to set Original Animation as
Picture info	View item set for <b>Set display</b>
Release animation	Cancel a saved Original Animation > <b>YES</b>



## Saving Still Images to Phone Book

- Savable sizes:
  - Standby (480 x 854) or smaller in JPEG or GIF format (up to 300 Kbytes)
  - VGA (640 x 480) or smaller in PNG format
- Save images to up to 100 Phone Book entries.
- Still images cannot be saved to USIM Card Phone Book entries.

Main Menu ► Data Folder ► Pictures

1 Select a folder → Select a file →  [Menu] →  
**Set display** → **Phone Book**

2 **New Entry**  
**New** → Enter details (→ From Step 2 on P.4-3) →  
 [Finish]

### Add to Existing Entry

**Add** → Select entry →  [Finish] → **YES**

## Playing Videos

### Playing Videos/PC Movies

Main Menu ► Data Folder

#### 1 Play Videos

**Videos** → Select a folder → Select a file




















#### Play PC Movies


 


**PC Movies** → **microSD** → Select a file

- To toggle file list views:  [Change]

#### ■ Playback Operations

- Some operations are not available depending on files.
- Operation descriptions are based on Normal Position.

Adjust Volume	 or 
Play Previous	 <ul style="list-style-type: none"><li>● Starts from beginning when playback time is over three seconds.</li></ul>
Play Next	
Fast-rewind <sup>1</sup>	Press and hold 
Fast-forward <sup>1</sup>	Press and hold 
Playback Position <sup>2</sup>	 repeatedly
Change Speed	 [  /  /  /  ]
Mute/Resume	 [  /  ]
Pause/Resume	 [  /  ]
Play Frame by Frame <sup>1</sup>	While pausing,  [Frame] <ul style="list-style-type: none"><li>● Play back frame by frame</li></ul>

<b>Toggle Views</b>	 <ul style="list-style-type: none"> <li>● Toggle: Portrait View → Landscape View (fit to Display size) → Full-size Landscape View<sup>2</sup></li> </ul>
<b>Toggle Remaster On/Off</b> (↗ P.9-8)	
<b>Toggle Sound Effect (Listening) Modes</b> (↗ P.9-8)	
<b>Toggle Equalizer Modes</b> (↗ P.9-8)	

<sup>1</sup> Videos only

<sup>2</sup> May be unavailable depending on image size.

## Playing Videos Recorded on HDD Recorder

### Transfer programs recorded on HDD recorder to microSD Card via USB cable (not included) for playback on handset.







 















 
- Set **USB Mode** to **microSD Mode** before connecting handset to HDD recorder (↗ P.11-17).
- For details about transferring videos, see HDD recorder manuals.
- Use Earphone Microphone for stereo sound. Use a Bluetooth® device for wireless audio output (↗ P.11-10).


 


**Main Menu** ▶ **Data Folder** ▶ **Videos** ▶ **BD/DVD Recorder**

- 1 Select a file

## Functions Available in Video Window

- Some functions may be unavailable depending on the file type.
- Operation descriptions are based on Portrait View.

<b>Adjust Volume</b>	 or 
<b>Play Previous Chapter</b>	 <ul style="list-style-type: none"> <li>● When three seconds into the chapter, playback returns to beginning of current chapter.</li> </ul>
<b>Play Next Chapter</b>	
<b>Skip (Forward)</b>	While playing/pausing, press and hold  <ul style="list-style-type: none"> <li>● Skip about 30 seconds forward.</li> </ul>
<b>Skip (Rewind)</b>	While playing/pausing, press and hold  <ul style="list-style-type: none"> <li>● Skip about 10 seconds backward.</li> </ul>
<b>Fast-rewind</b>	 <ul style="list-style-type: none"> <li>● To play back:  </li> <li>● Play back at normal speed during 10x fast-forward. Play back at 10x speed during 30x fast-forward.</li> </ul>
<b>Fast-forward</b>	 <ul style="list-style-type: none"> <li>● To play back:  </li> <li>● Play back at normal speed during 10x fast-rewind. Play back at 10x speed during 30x fast-rewind.</li> </ul>
<b>Playback Position</b>	 repeatedly
<b>Change Speed</b>	  /  / 
<b>Mute/Resume</b>	 /  / 
<b>Pause/Resume</b>	 / 
<b>Play Frame by Frame</b>	While pausing,  [Frame] <ul style="list-style-type: none"> <li>● Play back frame by frame</li> </ul>

<b>Toggle Views</b>	 <ul style="list-style-type: none"> <li>● Toggle: Portrait View → Landscape View (fit to Display size) → Full-size Landscape View</li> </ul>
<b>Toggle Remaster On/Off</b> (⌨ P.9-8)	
<b>Toggle Sound Effect (Listening) Modes</b> (⌨ P.9-8)	
<b>Toggle Equalizer Modes</b> (⌨ P.9-8)	

## File Playback Functions

### ■ Play Back from a Resume Position

Resume playback (videos/PC Movies) from a saved position.

> **Main Menu** ▶ **Data Folder** ▶ **Videos** or **PC Movies**

▶ **Position Memory** ▶ Select an item


- Save a resume position: ⌨ Right
- **Marker to resume** is a resume position automatically saved when a call arrives, alarm goes off, battery runs low, or playback is terminated.



### ■ Play Back from Play History (PC Movies Only)


> **Main Menu** ▶ **Data folder** ▶ **PC Movies** ▶ **Play History**

▶ Select a record

### ■ Functions Available in Video/PC Movie Playback Window

- Some operations are not available depending on files.
- > While playback is paused,  **[Menu]** → Select an item (See below)

Item	Operation/Description
<b>Normal play</b> <sup>1</sup>	Play at normal speed
<b>Slow</b> <sup>1</sup>	Play at slow speed
<b>Quick View (1.25x)</b> <sup>1</sup>	Play 1.25 times faster than normal
<b>Quick View(2x)</b> <sup>1</sup>	Play at double speed
<b>Fast</b> <sup>2</sup>	Forward
<b>Rewind</b> <sup>2</sup>	Rewind
<b>Stop</b>	Return to Videos/PC Movies List window
<b>Position to play</b>	Start playback from specified point >  to highlight a play point →  <b>[Set]</b>
<b>Connect to Website</b> <sup>1</sup>	Open site link > <b>YES</b>
<b>Sound effect</b>	<b>Remaster, Listening</b> or <b>Equalizer</b> (⌨ P.9-8)
<b>Contents info</b> <sup>2</sup>	Show title, file name, etc.
<b>Position memory</b>	Save resume position > Select a resume position ● To play back from a saved position: ⌨ Left
<b>Mail/blog</b> <sup>1</sup>	Attach file to a message to send or post on a blog > Select an item · <b>Attach to message</b> (⌨ From Step 2 on P.14-4) · <b>Post blog</b> (⌨ Step 1 on P.8-7)

Item	Operation/Description
<b>Register (Ringtones)</b> <sup>1</sup>	Set as ringtone > <b>Ringtones</b> → Select a type ● ★ appears for item set as ringtone.
<b>Register (Stand-by Display/Start-up Window)</b> <sup>1</sup>	Save a file as Standby Display or Start-up Window > Select an item → <b>YES</b>
<b>Video info</b> <sup>1</sup>	Show title, file name, etc.
<b>Send Ir data</b> <sup>1</sup>	Send file via Infrared (☞ P.11-3)
<b>IC transmission</b> <sup>1</sup>	Send file via IC transmission (☞ P.11-5)
<b>Add shortcut icon</b> <sup>1</sup>	Create a shortcut (☞ P.1-25)
<b>Description</b> <sup>2</sup>	Show file information > <b>The words view</b> or <b>Description view</b>
<b>Copy URL</b> <sup>2</sup>	Copy URL
<b>Display size</b>	Select a display size > <b>Actual size</b> or <b>Fit in display</b>
<b>Change to full</b> <sup>1</sup>	Toggle: Portrait View → Landscape View (fit to Display size) → Full-size Landscape View <sup>3</sup> ● To toggle views: 

<sup>1</sup> Video files only

<sup>2</sup> PC movie files only

<sup>3</sup> May be unavailable depending on image size.


## Managing Folders/Files

### Managing Folders

The following operations are available in Pictures, Music, Books, Videos, Ring Songs&Tones and Other Documents.

#### Main Menu ► Data Folder

- 1 Select a folder →  [Menu] → Select an item (See below)

Item	Operation/Description
<b>Add folder</b>	Create user folders
<b>Edit folder name</b>	Edit user folder names
<b>Delete folder</b>	Delete a user folder > Enter Phone Password → <b>YES</b> → <b>YES</b>
<b>Folder security</b> <sup>1</sup>	Hide files in folder unless Phone Password is entered > Enter Phone Password → <b>YES</b>  appears for folder. ● To cancel: Repeat the step
<b>Delete all image</b> <sup>2</sup>	> Enter Phone Password → <b>YES</b> → <b>YES</b>
<b>Edit Play List</b> <sup>3</sup>	Edit Play Lists
<b>Release Play List</b> <sup>3</sup>	Cancel edited Play Lists > <b>YES</b>

Item	Operation/Description
<b>Select storage</b> <sup>4</sup>	Specify folders on microSD Card to save files to > <b>YES</b> ● Folders cannot be specified when saving Books files.
<b>Memory Status</b> <sup>5</sup>	View memory capacity/number of saved files

<sup>1</sup> Pictures/Videos folders only

<sup>2</sup> Pictures folder only

<sup>3</sup> Play List folder in Ring Songs&Tones folder only

<sup>4</sup> microSD Card only

<sup>5</sup> Music folder only



## Using Play List

Use **Play List** to organize Data Folder Ring Songs&Tones/ Videos files.

Select Ring Songs&Tones, Music or Videos folder files to create Play List links to each file in its original folder.

### Creating Ring Songs&Tones Play Lists

Main Menu ► Data Folder ► Ring Songs&Tones

- 1 Highlight **Play List** →  [Menu] → **Edit Play List**
- 2 Select a number → Select a folder → Select a file
  - Repeat Step 2.
- 3  [Finish]

#### ■ Play Back Play List


> Main Menu ► Data Folder ► Ring Songs&Tones ► Play List

- Files are played back in the saved order.

#### ■ Delete a File

> After Step 1, select a file → **Release this**

#### ■ Delete All Files


> In Step 1,  [Menu] → **Release Play List** → **YES**

#### Note

- mp4/3gp files cannot be added to Play List except in Music Player Play List.

## Creating Video Play Lists


Main Menu ► Data Folder ► Videos ► Play List

- 1 Select a Play List
- 2 Select a number → Select a folder → Select a file
  - Repeat Step 2.
- 3  [Finish]




### ■ Play Back Play Lists

- > Main Menu ► Data Folder ► Videos ► Play List ► Highlight a Play List →  [Play]
- Files are played back in the saved order.

### ■ Delete Files

- > After Step 1, (highlight a file →)  [Menu] → *Delete this* or *DEL all from list* → YES

### ■ Change Order

- > After Step 1,  [Menu] → *Oder to play* → Select a file → Select a target →  [Finish] →  [Finish]

## microSD Card

- 942P is compatible with up to 2 GB commercial microSD Cards and up to 16 GB commercial microSDHC Cards (as of December 2009). For information on memory card compatibility, visit the website below (Japanese). Note that microSD Cards not listed on the website may not function properly.
  - From Yahoo! Keitai  
P-egg (as of December 2009)  
Main Menu ► Yahoo! ► Bookmarks  
► Panasonic Site (P-egg)
  - From PC  
http://panasonic.jp/mobile/  
Not all operations are guaranteed by the microSD/microSDHC Cards listed.
- Format new microSD/microSDHC Cards for use with handset (☞ P.10-20).

### Note

 
- SoftBank is not liable for damages from accidental loss/alteration of microSD Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- microSD Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.

## microSD Card Installation




- Turn off handset before inserting/removing microSD Card.
- Battery Installation: [☞ P.1-15](#)

### Inserting

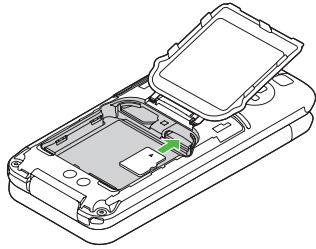- 1 Insert microSD Card until it clicks




#### microSD Card Check

 
When microSD Card is installed correctly,  appears. If  appears, microSD Card cannot be used. Remove microSD Card from handset, and re-insert it. If  does not disappear, execute Check microSD ([☞ P.10-23](#)) or format microSD Card ([☞ P.10-20](#)).  
(Display Indicator: [☞ P.1-10](#))

## Removing

- 1 Push microSD Card in
  - microSD Card pops out with a light push.

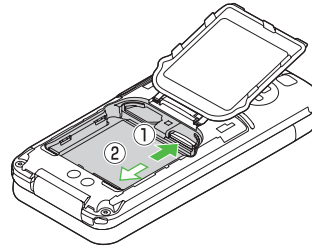

#### Note

- Do not turn off handset or remove battery/microSD Card while  flashes. microSD Card may be damaged or files lost.
- microSD Card may pop out when inserting/removing it.

## Format microSD Card

- Formatting microSD Card deletes all saved files/data.

Main Menu ► Tools ► microSD Backup

- 1 [Menu] → *microSD format*
- 2 Enter Phone Password → *YES*

### Note

 
- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- microSD Cards formatted on other devices may not be used. Format microSD Card on 942P before use.
- Handset cannot format incompatible microSD Cards.
- If format fails, turn power off and remove microSD Card from handset. Reinsert microSD Card and format it again.

## Viewing microSD Card Files

View Phone Book entries, Calendar events, Tasks, mail messages, Notepads and Bookmarks backed up on microSD Card.

Main Menu ► Tools ► microSD Backup

- 1 Select a category

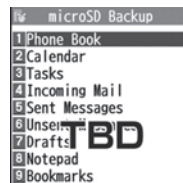

Category List

- 2 Select a file

Backup date appears as file name.



File List

- 3 Select a data



Data List



Detailed Data

### Note

- If messages on microSD Card do not appear correctly, copy messages to handset (☞ P.10-21) and execute *Charset Conversion* (☞ P.14-23).



## Handset Data Backup

Back up handset data (Phone Book, Calendar, Tasks, Messages, Notepad, Bookmarks, Content Keys) to microSD Card; restore handset data after accidental loss/alteration.

- Back up Content Key: P.10-24

### Backing up to microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Highlight a category → [Menu] → **Copy to microSD** (→ For **Bookmarks**, select an item)
- 2 Enter Phone Password → **YES**  
All files of selected category are backed up to microSD Card.

#### ■ One File Backup

> Open a file → [Menu] → **Copy to microSD** → **YES**

### Restoring from microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Select a category

## 2 Restore One Item

Select a file → Highlight an item → [Menu] → **Add to phone**

### Restore One File

Highlight a file → [Menu] → **Add to phone** or **Overwrite to phone** → Enter Phone Password

### Restore All Files

[Menu] → **Add all to phone** or **Overwr. all to ph.** → Enter Phone Password

## 3 YES

#### Note

- Note that **Overwrite to phone** or **Overwr. all to ph.** erases all files of same category on handset.
- Video files of 100 MB or larger cannot be moved from microSD to handset.
- Files of 10 MB or larger except for Videos/Books files (BMO files) cannot be moved/copied from microSD to handset.
- Data backed up in other SoftBank handsets may not be restored in 942P depending on type and size.

#### Tip

- Delete Items from microSD Card ● View microSD Card Memory Capacity ( P.10-23)

## PC File Transfers

### Folder Structure

Files moved or copied from handset to microSD Card are organized as follows:

- Save files in folders by file type.

<b>DCIM</b>		
● Still images saved to microSD Card		
<b>PRIVATE</b>		
<b>MYFOLDER</b>		
<b>Utility</b>		
Calendar	Calendar.BCK	Calendar Backup files
Contacts	Contacts.BCK	Phone Book Backup files
Rights		Content Key Backup files
Tasks	Tasks.BCK	Tasks Backup files
Memo	Memo.BCK	Notepad Backup files
<b>Mail</b>		
Drafts	Drafts.BCK	Drafts Backup files
Inbox	Inbox.BCK	Incoming Mail Backup files
Outbox	Outbox.BCK	Unsent Messages Backup files
Sent Messages	Sent Messages.BCK	Sent Messages Backup files
<b>My Items</b>		
Book		E-comics, etc.
Bookmarks	Bookmarks.BCK	Bookmarks Backup files
Flash(R)		Flash® files

Games and More	S! Appli
Music	Sound files with .3gp, .mp4, .smc
Other Documents	Other files
Pictograms	My Pictograms
Pictures	Still images moved/copied from handset to Main Folder in microSD Card
Sounds & Ringtones	Sound files of: up to 10 MB with .3gp, .mp4, up to 300 KB with .mid, .midi, .amr
Videos	Videos moved/copied from handset to Main Folder in microSD Card
Widget	Widget contents
WMFile*	PC movie files saved from PC to microSD Card

### SD\_VIDEO

- Videos saved to microSD Card
- Videos recorded from Digital TV or transferred from HDD recorder.

- Some copy protected files have extensions different from above.
- When moving/copying videos from microSD Card to handset, file format or file size may change.

\* if WMFile does not appear in My Items (MYFOLDER), create and save a folder titled WMFile.


## Using Data on microSD Card

With a microSD Card inserted, connect handset with a PC via USB cable (not included) to read/write data from/onto microSD Card.

Following equipment is required:

- Connector Cable: USB cable
- PC: PC with USB port (Universal Serial Bus Specification Rev 1.1/2.0 compliant)
- Compatible Operating Systems: Windows® XP, Windows Vista® (Japanese version in each)

Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode  
▶ microSD Mode

- 1 Connect handset to PC via USB cable while handset is on
  - PC recognizes microSD Card.
  -  appears in Standby (handset).

### Note

- Even if incoming call arrives, reading/writing data continues during calls. After calls, check indicators on PC to see if reading/writing is complete.
- File names saved in microSD Card may not properly appear if changed on PC.

## microSD Card Functions

### Restore microSD Card items (Check microSD)

Use Check microSD to repair microSD Card data errors.

> Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu]  
▶ Check microSD ▶ YES

- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- It may take 30 seconds or longer to complete Check microSD depending on data volume on microSD Card.
- Handset cannot check incompatible or unformatted microSD Cards.
- Handset may delete files and folders that fail to be restored.

### Delete Items from microSD Card

> Main Menu ▶ Tools ▶ microSD Backup ▶ Select a category  
▶ (Highlight a file →)  [Menu] ▶ Delete this or Delete all  
(▶ For Delete all, enter Phone Password) ▶ YES

- Content Key cannot be deleted.

### View microSD Card Memory Capacity

> Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu]  
▶ microSD info

## ■ Back Up Content Key

Copy Content Keys to microSD Card from handset or to handset from microSD Card.

> **Main Menu** ► **Settings** ► **Security** ► **Content Key**

► **Copy to microSD** or **Copy from microSD** ► Enter Phone Password

- Content Keys with expiration dates or usage limits cannot be backed up.
- USIM Card inserted when Content Keys were moved to microSD Card must be inserted to move Content Keys from microSD Card.
- Some applications are not compatible with handset. Only Content Keys for compatible applications are backed up. Also, note that some keys are moved to microSD Card when backed up. Contact SoftBank Mobile Customer Center, General Information for more information (☎ P.19-34).
- Backing up Content Keys overwrites previously saved Content Key backup.

## Variety Photo Viewer

View still images in **Pictures folder (Data Folder)** using **Variety Photo Viewer**. Slideshow is also available.

- Variety Photo Viewer is available in Horizontal Open Position only.
- Only JPEG files are supported by Variety Photo Viewer.

### Viewing Still Images

**Main Menu** ► **Data Folder** ► **Pictures**

#### 1 *Variety Photo Viewer*

Folder list appears.



Folder List

#### 2 Select a folder

File list appears.



File List

- 3 Select a file  
File image appears.



Image Window

- To zoom in/out: [Zoom]/[Return]
- To view previous/next file: (For Touchpad operations, slide from left to right for previous file or right to left for next file)

### Operation Guide

> [Guide]

### Toggle Icons On/Off

> [Icon]

#### Note

- Copy protected files are not viewable.
- Connect handset to a TV ( P.11-18) and view images using Variety Photo Viewer.

## Available Operations

### From Folder/List Window

In folder/file list window, press [FUNC] for following operations. Follow onscreen instructions.

Item	Operation/Description
Slideshow	Start slideshow ( P.10-26)
Kisekae*	Change theme for folder list

\* Folder list window only

### From Image Window

In Image Window, press [FUNC] for following operations. Follow onscreen instructions.

Item	Operation/Description
Slideshow	Start slideshow ( P.10-26)
Zoom	Enlarge to 200%
Rotate	Each press rotates image 90° clockwise
Attach to S! Mail	Send file via S! Mail ( From Step 2 on P.14-4)
Post blog	Post file to a blog ( P.8-7)
Effect	Set slideshow effects
Delete	Delete file

#### Note

- Some files may not appear right side up when posted to a blog.

### Face Zoom

Face Zoom is available when a face is detected.

> In Image Window, [FaceZoom]

- When more than one face is detected, each press zooms in on another face.

## Touchpad Operations

### Use Touchpad operations in Variety Photo Viewer.

- Touchpad: ⇨ P.1-23
- **Scroll Page/Screen**
  - Slide left/right to scroll files in File List.
  - Slide left/right to scroll images in Image Window.



### ■ Zoom

Slide up/down to zoom in/out from Image Window.



## Slideshow

View files in succession.

Main Menu ▶ Data Folder ▶ Pictures  
▶ Variety Photo Viewer

### 1 View All Images

📷[FUNC] → *Slideshow*

### View Selected Folder


Select a folder → 📷[FUNC] → *Slideshow*

Slideshow starts.

#### Note

- Press and hold 📷 in Standby from Horizontal Open Position to show files in all folders.

## Slideshow Operations

Press  during slideshow to pause and open menu. Follow onscreen instructions.



### ■ Change Slideshow Settings

Pause slideshow and select **Settings**. Follow onscreen instructions.

Item	Operation/Description
<b>Time</b>	Set slide display time
<b>Effect</b>	Set transition effects
<b>Face zoom</b>	Zoom in on faces
<b>Random</b>	Shuffle files
<b>Repeat</b>	Repeat slideshow

#### Note

- Face zoom may be unavailable depending on file type.

# 10

## Managing Files



# Connectivity

<b>Infrared</b> .....	<b>11-2</b>
Before Using Infrared.....	11-2
One/Multiple File Transfer .....	11-3
All File Transfers.....	11-3
<b>IC Transmission</b> .....	<b>11-4</b>
One File Transfer.....	11-5
All File Transfers.....	11-5
<b>Bluetooth®</b> .....	<b>11-6</b>
Before Using Bluetooth® .....	11-6
Using Bluetooth® .....	11-7
Suspending Bluetooth® Functions .....	11-8
Placing Bluetooth® Devices on Standby for Connection.....	11-9
Sending/Receiving Phone Book .....	11-9
Bluetooth® Functions.....	11-10

 
<b>Wi-Fi</b> .....	<b>11-11</b>
Before Using Wi-Fi.....	11-11
Enabling/Disabling Wi-Fi.....	11-12
Registering/Connecting to Access Points .....	11-12
Functions Available for Wi-Fi.....	11-15
<b>SoftBank Utility Software (Japanese)</b> .....	<b>11-16</b>
<b>USB (Japanese)</b> .....	<b>11-17</b>
Setting USB Mode .....	11-17
Transferring Data via USB Cable.....	11-17
Data Communication via USB Cable.....	11-17
<b>AV Output</b> .....	<b>11-18</b>
Connecting Handset to TV .....	11-18

## Infrared

### Before Using Infrared

Transfer Phone Book/Calendar events, messages, bookmarks and Data Folder files wirelessly between handset and compatible devices, including PCs and other mobiles.

- 942P infrared function is based on IrMC1.1, however, some IrMC1.1-based device transmissions may not be transmitted/received within specification.
- Debris may inhibit infrared transfers; clean infrared ports with a soft cloth beforehand.
- Direct sunlight/fluorescent light may inhibit transfers.
- Align infrared ports within 20 cm of one another and make sure no objects are placed between them. Do not move the devices until transfer is complete.

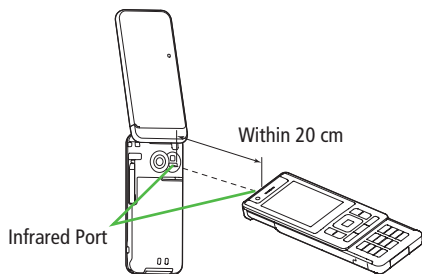

### Transferable Files

Transferable file	Condition	One file	All files
Phone Book (Account Details)		○	Up to 1000
Calendar events <sup>1</sup>		○	Up to 1000
Tasks		○	Up to 100
Received message		○	Up to 3000
Sent message		○	Up to 1000
Drafts		○	Up to 10
Notepad		○	Up to 20
Ring Songs&Tones		○	—
Still image <sup>2 3</sup>		○	—
Video <sup>3</sup>		○	—
Bookmark (Yahoo! Keitai, PC Site Browser)		○	Up to 100 each
Widget <sup>3</sup>		○	—

○: Transferable      —: Not transferable

<sup>1</sup> Saved Holidays/Memorial days not transferable

<sup>2</sup> Including Flash<sup>®</sup> files

<sup>3</sup> Multiple files transferable

#### Note

- Following files cannot transfer:
  - Files prohibited for transfers from 942P
  - Phone Book entries and SMS on USIM Card
- If memory becomes full, remaining entries are truncated (Memory List: [P.19-25](#)).

## One/Multiple File Transfer

- Transferable Files: P.11-2

### Sending

- 1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	>  [Menu] → <i>Send Ir data</i> → <i>Send phonebook</i>
Account Details	>  [Ir]
Messages	>  [Menu] → <i>Send Ir data</i> → <i>Send This</i>
Bookmarks	>  [Menu] → <i>Send to ExtnlDvcs</i> → <i>Send Ir data</i> → <i>Send This</i>
Still Images/ Videos/ Widgets	>  [Menu] → <i>Send Ir data</i> • To send multiple files:  [Menu] → <i>Multiple-choice</i> → Select files to send →  [Menu] → <i>Send Ir data</i>
Other Files	>  [Menu] → <i>Send Ir data</i>

## 2 YES

### Receiving

Main Menu ► Tools ► Receive via Infrared ► Receive

- 1 When a file is received, **YES**  
Send files from sender side within 30 seconds.
  - To receive subsequent files, select **YES**.

## All File Transfers

### Precaution

- Receiving all files overwrites all saved files including secret/protected files.
- Sending all Phone Book entries transfers Account Details as well. User-saved Account Details is overwritten on receiving handset (handset number remains).

### Session Number

Session number (4 digits) is required for all file transfers via Infrared and IC transmission. Sender and recipient must enter same Session number to complete transfers.

### Sending

- 1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	[Menu] → <i>Send Ir data</i> → <i>Send all phonebook</i>
Messages	[Menu] → <i>Send Ir data</i> → <i>Send All</i>
Bookmarks	[Menu] → <i>Send to ExtnlDvcs</i> → <i>Send Ir data</i> → <i>Send All</i>
Other Files	[Menu] → <i>Send all Ir data</i>

- 2 Enter Phone Password → Enter Session number → **YES**

Recipient must enter the same Session number to start transfers.

## Receiving


Main Menu ► Tools ► Receive via Infrared ► Receive All

 
- 1 Enter Phone Password → Enter same Session number as sender's → **YES** → **YES**

Saved files are deleted, and transfer starts.

## IC Transmission

Exchange files with another IC compatible handset using reader/writer function.

- Type of files and transfer conditions are same as those for infrared file transfer (☞ P.11-2).  
Multiple file transfer is not available.
- IC transmission is not available when **IC Card Lock** (☞ P.13-12) is activated.
- When receiving data, end all active functions.
- If there is difficulty in file transfer, move a  logo close to or away from the other logo or move each side up, down, left, or right.
- Data cannot be sent during charging battery.



Align  logos of both handsets

## One File Transfer

### Before Receiving a File

- **Receive IC Datum** is set to **ON** by default. When **Receive IC Datum** is **OFF**, One File Transfer is unavailable.
- To set **Receive IC Datum** on:  
**Main Menu** ► **Tools** or **S! Appli** ► **Osaifu-Keitai**  
► **IC Card Settings** ► **Receive IC Datum** ► **ON** or **OFF**

### Sending

- 1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	> ☎ [Menu] → <i>IC transmission</i> → <i>Send phonebook</i>
Account Details	> @ [ICtrans]
Messages	> ✉ [Menu] → <i>IC Transmission</i> → <i>Send This</i>
Bookmarks	> 📌 [Menu] → <i>Send to Extn/Dvcs</i> → <i>IC transmission</i> → <i>Send This</i>
Other Files	> 📁 [Menu] → <i>IC transmission</i>

- 2 **YES**

### Receiving

- 1 Align 🔄 logo on sender side with 942P (recipient) → **YES**

## All File Transfers

- Precautions/Session number (📄 P.11-3)

### Sending

- 1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	> ☎ [Menu] → <i>IC transmission</i> → <i>Send all phonebook</i>
Messages	> ✉ [Menu] → <i>IC Transmission</i> → <i>Send All</i>
Bookmarks	> 📌 [Menu] → <i>Send to Extn/Dvcs</i> → <i>IC transmission</i> → <i>Send All</i>
Other Files	> 📁 [Menu] → <i>AllIC transmission</i>

- 2 Enter Phone Password → Enter Session number → **YES**

Recipient must enter the same Session number to start transfers.

### Receiving

- 1 Align 🔄 logo on sender side with 942P (recipient)
- 2 **YES** → Enter Phone Password → Enter same Session number as sender's  
Saved files are deleted. Transfer starts.

## Bluetooth®

Connect handset to Bluetooth® devices to use functions below.

Function	Device	Description
<b>Handsfree Calls</b> (☞ P.11-10)	Headsets Handsfree devices	Talk handsfree on handset
<b>Wireless Playback</b> (☞ P.11-10)	Audio devices	Play back sounds (Digital TV/ Video) or music (Music Player) wirelessly from external speaker
<b>Internet Connection</b> (☞ P.11-10)	PC	Use handset as a modem for wireless internet connection.
<b>Sending/Receiving Phone Book</b> (☞ P.11-9)	PC Handsets	Send/receive Phone Book entries wirelessly

### Tip

#### Settings

- Stop Ringtone Output to Headset/Handsfree Device
- Continue Calls on Handset when Bluetooth® is Disconnected from Headset/Handsfree Device
- Always Make Calls from Handset even when Headset is Connected
- Always Use Handsfree Device to Make/Receive Calls (☞ P.18-20)

## Before Using Bluetooth®

### Bluetooth® Specifications

<b>Version</b>	Bluetooth® specification Ver.2.0+EDR
<b>Supported Profiles<sup>1</sup></b>	HSP: Headset Profile HFP: Hands-Free Profile A2DP: Advanced Audio Distribution Profile AVRCP: Audio/Video Remote Control Profile DUNP: Dial-up Networking Profile OPP: Object Push Profile
<b>Output</b>	Bluetooth® Power Class2
<b>Frequency Bands<sup>2</sup></b>	2.4GHz (2.402GHz-2.480GHz)
<b>Communication Distance<sup>3</sup></b>	Approximately ten meters

<sup>1</sup> Bluetooth® connections are available with compatible devices supporting the same profile.

<sup>2</sup> Bluetooth® operates in the 2.4 GHz unlicensed frequency band. Depending on other devices in use in the spectrum, Bluetooth® connection may slow down/terminate, or range may decrease.

<sup>3</sup> Affected by distance between devices, obstructions, signal conditions, handset status, etc.

## Notes

- Bluetooth® connection is not guaranteed with all Bluetooth® devices.
- Establish connections with certified Bluetooth® devices that meet the specification standards developed by Bluetooth® SIG.
- Due to the unique characteristics/specifications of a certified Bluetooth® device, connections or transfers may fail; procedures, displayed results or operations may vary from those described in the manual.
- When data transfer is interrupted, it may take some time for process to complete.
- Noise may interfere with wireless or handsfree conversations depending on the status of connected devices or signal conditions.
- For details about headset/handsfree devices, see the device manuals.
- Bluetooth® and Wi-Fi are not simultaneously available.

### Radio Wave Interference with Wi-Fi Devices

Bluetooth® and Wi-Fi devices (IEEE802.11b/g) share the same frequency band (2.4GHz). Use of both devices in close proximity may cause interference, affecting transmission speed, clarity or connection quality. If interference occurs:

- Maintain at least 10 m between Bluetooth® and Wi-Fi devices.
- Turn off Wi-Fi device when using Bluetooth® device within a 10 m radius.

## Using Bluetooth®

**Pair Bluetooth® devices with handset beforehand to establish connections for different Bluetooth® functions.**

### Searching & Pairing Devices

**Search other Bluetooth® devices.**

**Paired devices appear in Search&Paired Device list.**

- Bluetooth® Passkey is not necessary for paired devices.
- Search up to 20 Bluetooth® devices at one time; pair with up to ten Bluetooth® devices.
- Place Bluetooth® devices on standby for connection.

Main Menu ► Tools ► Bluetooth ► Search&Paired Device

#### 1 **YES\***

Device search starts and names of found devices appear.



- To search again:  [Search]



\* If there are already paired devices in list, select a device → Select a function

#### 2 Select a device → **YES** → Enter Phone Password

#### 3 Select text entry field → Enter Bluetooth® Passkey

#### 4 Select a Bluetooth® function

Handset connects to Bluetooth® device. When complete,  flashes in blue. After no Bluetooth® connection is made for a certain time,  appears in black and Power saver mode starts.

- When Bluetooth® device can connect to multiple services, confirmation appears asking whether to connect to another service.
- While connected,  (Blue) appears. While in Standby,  (Gray) appears.
- When **Dial-up** is selected, handset stands by for connection requests from other Bluetooth® devices.
- **Dial-up** can be selected regardless of profile types.

### Bluetooth® Passkey

Bluetooth® Passkey (1 to 16 digits) is required to connect Bluetooth® devices; sender and recipient must input the same code to complete file transfers.

- Bluetooth® Passkey is not necessary for paired devices.

### Search&Paired Device List

#### 1 Device Type

 
Indicators appear for different types of devices.

#### 2 Device Name

Device names appear. When no names are found, Bluetooth® addresses appear.

#### 3 Connection Status

: Connected : Not connected : Not found : Not paired

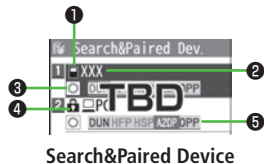


### 4 Protection

Indicator appears when registered contents are protected.

### 5 Profile Status

Indicators appear to show profile status.

Icon	Letter Color	Background Color	Frame Color	Status
	Blue	Gray	–	Not connected (Not paired)
	Blue	Gray	Blue	Not connected (Paired)
	White	Green	–	Connected
	Green	White	Green	Standby for connection
	White	Light green	–	Preferred device
	Gray	Gray	–	Not supported

### Tip

**Settings** ● Set Duration to Search for Bluetooth® Devices (☞ P.18-20)

## Suspending Bluetooth® Functions

Suspend all Bluetooth® functions connected or on standby for connection, and disable Bluetooth®.

Main Menu ► Tools ► Bluetooth

### 1 Bluetooth OFF → YES

- To return to standby for previously connected function:  
**Bluetooth ON**



## Placing Bluetooth® Devices on Standby for Connection

Main Menu ► Tools ► Bluetooth ► Accept Registered

- 1 Check functions to be on standby for connection →  
☑[Finish]
  - To uncheck, select functions to remove check marks.

## Sending/Receiving Phone Book

### Sending

- 1 Open Phone Book → ☑[Menu] →  
*Send to Bluetooth*
- 2 **One File Transfer**  
*Send phonebook* → Select a recipient device  
**All File Transfer**  
*Send all phonebook* → Select a recipient device →  
Enter Phone Password
- 3 **YES**

### Receiving

Main Menu ► Tools ► Bluetooth ► Receive via Bluetooth

- 1 **One File Transfer**  
*Receive* → **YES**

#### All File Transfer

*Receive All* → Enter Phone Password → **YES** → **YES**

- If memory becomes full, remaining entries are truncated (Memory List: ☞ P.19-25).

#### Tip

#### Settings

- Set Authentication/Encryption to Send Phone Book Entries
- Enter Password when Sending All Phone Book Entries (☞ P.18-20)

## Bluetooth® Functions

From ► Main Menu ► Tools ► Bluetooth

### ■ Functions Available in Search&Paired Device Window

> **Search&Paired Device** → [Menu] → Select an item (See below)

Item	Operation/Description
<b>Register devices</b>	> Enter Phone Password → Pair devices (☞ From Step 3 on P.11-7)
<b>Preferred device</b>	Set a preferred Bluetooth® device for incoming calls <ul style="list-style-type: none"> <li>● Available only for headset function compatible Bluetooth® devices.</li> <li>● To cancel, perform same operation.</li> </ul>
<b>Protect/release</b>	Protect/cancel devices. Protection prevents devices from being deleted or overwritten
<b>Change device name</b>	> Enter a device name
<b>Delete</b>	> <b>YES</b>
<b>Description</b>	Show device name, Bluetooth® address, device class and supported profile
<b>Add shortcut icon</b>	Create shortcuts (☞ P.1-25)

### ■ Use Bluetooth® Headsets for Calls

> **Search&Paired Device** → Select a device → **Headset** or **Hands-free**  
→ **YES** → Make/receive a call using Bluetooth® device

### ■ Use Bluetooth® Device for Listening to Music

> **Search&Paired Device** → Select a device → **Audio** → Watch Digital TV or play back videos or music

- Digital TV/Video sounds are played only by A2DP profile compatible Bluetooth® devices compliant with SCMS-T copyright protection standard.

### ■ Use Handset as Modem for Internet Access from PCs

> **Search&Paired Device** → Select a device → **Dial-up**

- Handset waits for dial-up connection.
- Refer to a manual for Bluetooth® device for details.  
Download utility software (942P) "Modem Wizard" from website below to PC and install software.  
<http://panasonic.jp/mobile/support/download/942p/index.html>
- To establish a dial-up connection, see Help on "Modem Wizard."
- Connecting handset to a PC or PDA for Internet access may incur high packet transmission charges.

### ■ Place Bluetooth® Device on Standby for Dial-up

> **Dialup Rgstry Standby** → Enter Phone Password → **YES** → Select Bluetooth® Passkey text box → Enter Bluetooth® Passkey

## Wi-Fi

Use wireless LAN (Wi-Fi) for Internet connection via home/public Wi-Fi networks enabling high-speed internet access.


- 942P Wi-Fi function supports IEEE802.11b/g.
- Separate subscription is required.
- For details on available access points and public wireless LAN, visit <http://panasonic.jp/mobile/softbank/942p/function/wifi.html>

### Before Using Wi-Fi

#### Notes

**Wi-Fi connection may automatically switch to 3G depending on signal condition. Note that packet transmission fees are incurred.** (To set confirmation to appear when switching:

 P11-16)

- Wi-Fi connection is not guaranteed with all Wi-Fi devices.
- Bluetooth® and Wi-Fi are not simultaneously available.
- S! Mail/SMS function unavailable via Wi-Fi.
- Accidental data loss/information leakage may occur during Wi-Fi transmission. Use security settings ( P.11-14).
- Wi-Fi is disconnected when Backlight turns off; turn Backlight on to re-connect to the network.
- Wi-Fi is not available while abroad.

### Radio Wave Interference with Bluetooth® Devices

Bluetooth® and Wi-Fi devices (IEEE802.11b/g) share the same frequency band (2.4GHz). Radio wave interference occurs if Bluetooth® and Wi-Fi devices are used in close proximity, causing low transmission speed, noise or poor connection. If interference occurs, take the following measures:

- Keep 10 m or more between Bluetooth® and Wi-Fi devices.
- Turn off Bluetooth® device when using Wi-Fi device within a radius of less than 10 m.

## Getting Started

### Checking Information

- Access point information varies by access point.
- Security information may be required.



### Access Point Registration/Connection

Complete access point registration/connection.



### Starting Transmission

Transmission is enabled once handset comes into Wi-Fi range.

- Wi-Fi status indicators: P.11-13

## Enabling/Disabling Wi-Fi

1 Press and hold

Wi-Fi status indicator appears ( P.11-13).

### Note

- Alternatively, switch Wi-Fi on/off from **Main Menu** ► **Tools** ► **Wi-Fi** ► **ON/OFF**

## Registering/Connecting to Access Points

Following methods are available for registering/connecting to access points.

<b>Search/Setting</b>	Search access points for registration/connection.
<b>Manual Setting</b>	Manually register/connect to access points.
<b>AOSS</b>	Use AOSS™ (AirStation™ One-Touch Secure System) for registration/connection. For AOSS™-compatible access points, press AOSS button on access point device for automatic setup.
<b>BB mobilepoint</b>	Register to BB mobilepoint and set as access point. <ul style="list-style-type: none"> <li>● The BB mobilepoint profile is saved to handset by default. For details on BB mobilepoint, visit <a href="http://tm.softbank.jp/english/consumer/wlan/index.html">http://tm.softbank.jp/english/consumer/wlan/index.html</a></li> </ul>

- Register up to 10 access points.
- User ID and password is required for connecting to pre-registered access points (Public Wi-Fi Setting: P.11-14).
- For setting/operating access point devices, refer to device manual.
- **Wi-Fi connection is not available when access point channel is set to 12-14 ch and stealth mode.**

### Note

- Alternatively, search and register access point from **Main Menu** ► **Tools** ► **Wi-Fi** ► **Access Point Search**. Registration is available after connection.
- Pre-registered access points may be deleted from Profile List if another USIM Card is inserted. BB mobile point can be easily reconfigured ( P.11-15).

## Access Point Search

Main Menu ► Tools ► Wi-Fi ► Profile Lists/Settings

### 1 [Menu] → New Profile → Search&Setting

Select **YES** when prompted to turn Wi-Fi **ON**.

List of available access points appears.

- To search again: [Search]

### 2 Select an access point

### 3 [Store] → YES

Handset registers access point.

### 4 [CNCT] → YES

Handset connects to access point.

## Access Point List

### Wi-Fi Status Indicators

Wi-Fi ON (out of range)

\* Wi-Fi ON (within range)

\* During Wi-Fi transmission

\* Number of blue arches indicates signal strength.

### 1 Access Point Name

Detected SSID (ESSID) appears.

Access point name appears for a registered access point.

### 2 Registered Networks

✓: Registered (not connected)

 
✗: Registered (connected)

### 3 Signal Strength

Signal status appears.

### 4 Security Status

Security status appears.

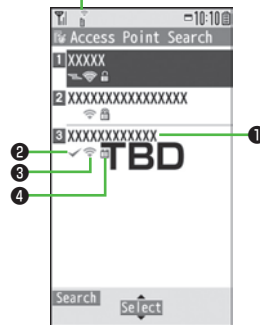




Access Point List


## Manual Registration/Connection


Check respective access point information (SSID, security/encryption type, encryption key) in advance. For details on access point devices, refer to respective manuals.

Main Menu ► Tools ► Wi-Fi ► Profile Lists/Settings

- 1  [Menu] → **New Profile** → **Manual Setting**
- 2 Highlight an item (See below) →  [Edit]

Item	Operation/Description
<b>Profile Name</b>	> Enter an access point name
<b>SSID</b>	> Enter the same SSID (ESSID) as access point
<b>IP Setting</b>	Set IP address and DNS server > <b>IP Address Setting</b> or <b>DNS Server Setting</b> →  [Edit] → <b>Automatically</b> or <b>Manually</b> (→ For <b>Manually</b> , edit respective items)
<b>Security Setting</b>	Set security/encryption method according to access point > Select a security type <ul style="list-style-type: none"> <li>• <b>WEP</b> → Enter WEP key → Select an encryption type → Enter encryption key</li> <li>• <b>WPA/WPA2-PSK</b> or <b>WPA2-PSK</b> → Select an encryption type → Select an encryption method → Enter encryption key</li> </ul> <ul style="list-style-type: none"> <li>● To cancel security setting: <b>Non</b></li> </ul>




<b>Public W-Fi Setting</b>	Set public wireless LAN on/off > <b>ON</b> or <b>OFF</b> (→ For <b>ON</b> , select <b>ID</b> or <b>Password</b> →  [Edit] → Enter ID or password) <ul style="list-style-type: none"> <li>● Connection with all public wireless LAN services is not guaranteed.</li> </ul>
----------------------------	--

- 3  [Store] → **YES**  
Handset registers access point.
- 4  [CNCT] → **YES**  
Handset connects to access point.

## Registration/Connection Using AOSS™

- For details on access point device operations, refer to access point device manual.

### Main Menu ► Tools ► Wi-Fi ► Profile Lists/Settings




 
 




-  [AOSS]
  - Select **YES** to register/connect to an access point after disconnecting from registered access point.
- Press AOSS button at access point  
Press within 120 seconds.  
Confirmation appears when setting is complete.
-  [Store] → **YES**  
Handset registers access point.
-  [CNCT] → **YES**  
Handset connects to access point.

## Functions Available for Wi-Fi

### Functions Available in Profile List/Setting Window

> Main Menu ► Tools ► Wi-Fi ► Profile Lists/Settings

►  [Menu] ► Select an item (See below)

Item	Operation/Description
<b>Connect</b>	Connect to a registered access point > <b>YES</b>
<b>Change Priority</b>	Change priority for registered access points > Select an access point →  to move to target →  →  [Finish]
<b>New Profile</b>	> Select an item <ul style="list-style-type: none"> <li>· <b>AOSS</b> ( From Step 2 (Left))</li> <li>· <b>Search&amp;Setting</b> ( From Step 2 on P.11-13)</li> <li>· <b>Manual Setting</b> ( From Step 2 on P.11-14)</li> </ul>
<b>New BB mobilepoint</b>	Enter user ID/password to register BB mobilepoint > Select an item →  [Edit] → Enter user ID/password →  [Store]
<b>Edit</b>	> Edit items
<b>Copy</b>	Copy registered access point
<b>Delete</b>	> Select an item <ul style="list-style-type: none"> <li>· <b>Delete this</b> → <b>YES</b></li> <li>· <b>Delete selected</b> → Check access points →  [Finish]</li> <li>· <b>Delete all</b> → Enter Phone Password → <b>YES</b></li> </ul>

### View Connection Status

> Main Menu ► Tools ► Wi-Fi ► Connection Status

- To update status:  [Update]

## ■ Set Confirmation to Appear when Switching between Wi-Fi and 3G

<Default> OFF

> Main Menu ▶ Tools ▶ Wi-Fi ▶ Wi-Fi/3G Switch Conf.  
▶ Switch to Wi-Fi or Switch to 3G ▶ ON

## ■ View MAC Address

> Main Menu ▶ Tools ▶ Wi-Fi ▶ MAC Address

## SoftBank Utility Software (Japanese)

Phone Book, Calendar, Tasks, messages, Bookmarks, Notepads and Data Folder can be transferred to a PC, edited or managed by using SoftBank Utility Software.

- For details on and downloading SoftBank Utility Software, visit <http://www.softbank.jp/mb/r/sbu/> (Japanese)

### Note

- USB cable (not included) is necessary for using SoftBank Utility Software.
- S! Appli, PC Movies, TV, Lifestyle-Appli, Books, Customized Screen, Templates, Font and Other Documents cannot be backed up.
- Copy protected files may not be backed up.
- Set **USB Mode** to **Communication Mode** (☞ P.11-17).



## USB (Japanese)

Connect handset to a PC via USB cable (not included) specified by SoftBank for data transfer or data communication.

### Setting USB Mode

<Default> Communication Mode

Main Menu ► Settings ► Connectivity ► USB Mode

1 Select an item (See below)

Item	Operation/Description
Communication Mode	Packet transmission, 64K data transmission, data transfer and calls with USB handsfree compatible devices are available (☞ P.11-16)
microSD Mode	Read/write data on microSD Card (☞ P.10-23)
MTP Mode	Transfer/delete music data via Windows Media® Player on PC (☞ P.9-4)

### Transferring Data via USB Cable

- Transfer data using SoftBank Utility Software (☞ P.11-16).
- Transferring data in microSD Mode (☞ P.10-23)

### Data Communication via USB Cable

Use handset as a modem for Internet access by connecting handset with a PC.

- Download utility software from URL below and install on PC.  
<http://panasonic.jp/mobile/support/download/942p/index.html>

- 1 Install "USB ドライバ (USB Driver)" and "Modem Wizard" from Utility Software (942P) to a PC
- 2 Set handset to **Communication Mode** (☞ Left), and connect handset to PC via USB cable
  - Power up handset before connecting to PC via USB cable.
- 3 Start up "Modem Wizard", and operate communication setup
  - "Modem Wizard" enables you to set up APN and dial-up easily. For setup/starting procedures, see "Modem Wizard" Help.

#### Note

- Connecting handset to a PC or PDA for Internet access may incur high packet transmission fees.

 
## AV Output

View the following on a TV set or other devices using a SoftBank-specified Video Output Cable (not included): Video Call images, Digital TV images, still images/videos saved on 942P.

- View AV-output-compatible S! Appli on TV.

### Connecting Handset to TV

- To use Video Output Cable (not included), Stereo Earphone Conversion Cable (not included) is required.

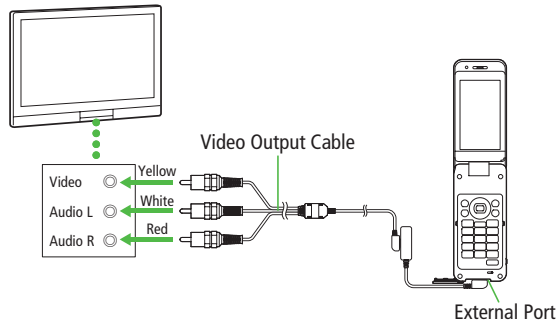

- 1 Open External Port Cover
- 2 Connect Video Output Cable to handset using Stereo Earphone Conversion Cable
  - To connect Video Output Cable to Stereo Earphone Conversion Cable: P.1-4

- 3 Connect Video Output Cable to video/audio input terminal on TV set
- 4 Open an image file on handset
  - To toggle image size:

#### Note

- Some images cannot be displayed on TV.
- Display size setting is not available for some TV sets.

11

Connectivity

# Handset Security

<b>Changing Phone Password .....</b>	<b>12-2</b>
<b>Security Functions .....</b>	<b>12-2</b>
USIM PINs .....	12-2
Keyguard .....	12-4
Privacy Key Lock .....	12-4
Personal Data Lock .....	12-5
Secure Remote Lock .....	12-7
Key Pad Dial Lock .....	12-8
Side-keys Guard .....	12-9
Additional Lock Functions .....	12-9
<b>Restricting Calls/Messages .....</b>	<b>12-9</b>
Hiding Call Logs and Sent/Received Address List .....	12-9
Secret Mode/Secret Data Only .....	12-10
Setting Secret Mail .....	12-11
Mail Security .....	12-11
Call Restrictions .....	12-12
Delaying Ringtone .....	12-12
Rejecting Unknown Callers .....	12-13
Rejecting Calls without Caller ID .....	12-13
<b>Reset .....</b>	<b>12-13</b>
Reset Settings .....	12-13
All Reset .....	12-14

## Changing Phone Password

<Default> 9999

### Change Phone Password as required.

- For Phone Password details:  P.1-32

Main Menu ► Settings ► Security  
► Change Phone Password

- 1 Enter current 4-8-digit Phone Password
- 2 Enter new 4-8-digit Phone Password → **YES**

## Security Functions

### USIM PINs

- For more information about PINs:  P.1-3

#### Note

- Emergency numbers (110, 119, 118) are not dialable in PIN/PIN2, PUK/PUK2 entry window.

### PIN Authentication

Activate to require PIN entry each time handset is turned on.

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → ***PIN Authentication***
- 2 ***ON*** or ***OFF***
- 3 Enter PIN

## Changing PIN/PIN2

- Set **PIN Authentication** to **ON** before changing PIN (☞ P.12-2).

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **Change PIN** or **Change PIN2**
- 2 Enter current PIN/PIN2
- 3 Enter new PIN/PIN2
- 4 Reenter new PIN/PIN2

## PIN Lock & Cancellation (PUK/PUK2)

**PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering PIN Unlocking Key (PUK/PUK2).**

- For information about PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☞ P.19-34).

- 1 In PIN lock mode, enter PUK/PUK2
- 2 Enter new PIN/PIN2
- 3 Reenter new PIN/PIN2

### Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled (turning off power counts as one incorrect entry). Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☞ P.19-34).

## Keyguard

<Default> OFF


Lock handset keys to prevent accidental operation except when turning power on/off or answering incoming calls.

- While set,  appears in Standby.

1 In Standby, press and hold 

- To cancel Keyguard, repeat operation.

### While Keyguard is Active

- Emergency numbers (110, 119, 118) are dialable. Entered numbers do not appear on Display. Once numbers are dialed, Keyguard is canceled.
- Press  to disable Calendar event tone or Alarm.
- Keyguard can be canceled even during a call.

#### Note

- Turning off power does not cancel Keyguard.

## Privacy Key Lock

<Default> OFF

Set Privacy Key Lock to require Phone Password for using handset except for turning handset on/off and answering calls.

- While locked,  appears in Standby.

Main Menu ► Settings ► Security ► Privacy Key Lock

1 Enter Phone Password

- To cancel Privacy Key Lock, enter Phone Password in Standby. If Phone Password is incorrectly entered five times, handset turns off.

### While Privacy Key Lock is Active

- Emergency numbers (110, 119, 118) are dialable.
- Only phone numbers appear on Display for incoming calls.
- Message ringtones or Alarm tones are disabled.
- Calendar event tone or Alarm is disabled.
- S! Quick News and some Internal Display indicators do not appear. They appear after Privacy Key Lock is canceled.

#### Note

- Turning off power does not cancel Privacy Key Lock.

## Personal Data Lock

Set Personal Data Lock to prevent others from reading or tampering with your personal information in Phone Book or Data Folder. Activate to require Phone Password for accessing personal data.

### Locked Functions/Data

- S! Appli
- Phone Book search/saving/setting
- Memory Manager/ Memory Status (Phone Book)
- Account Details
- Notepad
- Calendar
- Tasks
- Shortcuts
- Event Indicators
- Camera/Video Camera
- Variety Photo Viewer
- Lifestyle Appli
- microSD Backup
- Answer Phone
- Voice Recorder
- Customized Screen
- Voice Announce
- Dictionary
- Post blog
- Wi-Fi
- S! Mail/SMS/PC Mail
- Yahoo! Keitai viewing/setting
- PC Site Browser viewing/setting
- Bookmarks/ Saved Pages
- BookSurfing®/e-Book Viewer
- Mobile Widget
- S! Quick News
- S! Information Channel/Weather
- Content Key obtaining/backup
- Voice Dial
- S! GPS Navi
- Data Folder\*
- Music Player
- Digital TV
- Bar Code Reader
- Receive via Infrared/Bluetooth®
- IC Data transmission
- Alarm
- Reset Settings/All Reset
- Software Update

\* Font setting is available.

## Activating/Canceling Personal Data Lock

<Default> Deactivate


- While locked,  appears in Standby.

Main Menu ► Settings ► Security ► Personal Data Lock

### 1 Enter Phone Password → *Activate/Deactivate*

- To cancel Personal Data Lock, repeat operation. If Timer Lock at Close is set, password entry is requested when handset is opened.

### Canceling Personal Data Lock Temporarily

When Phone Password is entered,  disappears and disabled functions become temporarily available.

- Once handset returns to Standby while no functions are active, Personal Data Lock is active again.
- Some functions remain unavailable. Deactivate Personal Data Lock to use the following:
  - Receiving IC data
  - Reject unknown

### Note

- While Personal Data Lock is set, some indicators do not appear in Standby. They appear after lock is canceled.
- Turning off power does not cancel Personal Data Lock.

## Customizing Personal Data Lock

Enable/disable Alarm, incoming message notification, etc. while Personal Data Lock is active.

Main Menu ► Settings ► Security ► Personal Data Lock

- 1 Enter Phone Password → **Customize** → Select an item (See below)

Item	Operation/Description
Alarm Tone	Enable/disable Alarms (Calendar, TV timer, or other alerts) or TV Timer Recording. > Select an item → <b>Accept</b> (Enable) or <b>Not Accept</b> (Disable)
Incoming Call Act	Show/hide Event Indicator (incoming messages) or Phone Book entry information (incoming calls). > Select an item <ul style="list-style-type: none"> <li>· <b>Incoming Message</b> → <b>Accept</b> (Show indicator) or <b>Not Accept</b> (Hide indicator)</li> <li>· <b>Phone Book Available</b> → <b>Accept</b> (Show Phone Book Entry information) or <b>Not Accept</b> (Hide information)</li> </ul>


Display/Tone	Enable/disable Display settings, ringtones or indicators. > Select an item <ul style="list-style-type: none"> <li>· <b>Internal Display</b> → <b>Accept</b> (Enable Display Settings) or <b>Not Accept</b> (Disable)</li> <li>· <b>Ring Tones</b> → <b>Accept</b> (Enable Sound Settings) or <b>Not Accept</b> (Disable)</li> <li>· <b>! Quick News</b> → <b>Accept</b> (Show information) or <b>Not Accept</b> (Hide information)</li> <li>· <b>! Info Ch./Weather</b> → <b>Accept</b> (Show indicators) or <b>Not Accept</b> (Hide indicators)</li> <li>· <b>Widget Contents</b> → <b>Accept</b> (Show widgets) or <b>Not Accept</b> (Hide widgets)</li> </ul>
--------------	--

## Activating Personal Data Lock when Closing Handset

<Default> OFF

Set Timer Lock at Close to automatically activate Personal Data Lock when specified time has elapsed after handset is closed.

Main Menu ► Settings ► Security ► Timer Lock at Close

- 1 Enter Phone Password
- 2 **Personal Data Lock** → Select a time  
Confirmation appears asking whether to activate Lock OFF at Open.
  - While set,  appears in Standby.
  - When **OFF** is selected, setting is canceled.



## Showing Personal Data Lock OFF Window when Opening Handset

<Default> OFF

Main Menu ► Settings ► Security ► Lock OFF at Open

1 Enter Phone Password

2 *Personal Data Lock* → ON

### Note

- When Timer Lock at Close and Lock OFF at Open are both active, canceling Personal Data Lock when opening handset temporarily cancels lock. However, lock activates again when specified time elapses after closing handset.

## Secure Remote Lock

If handset is lost or stolen, remotely lock handset from a PC or mobile. If Secure Remote Lock is active, all operations are unavailable except to turn handset on.

- For service details and user agreement/registration, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) or My SoftBank.

## Accessing My SoftBank from Handset (Japanese)

For service details, visit SOFTBANK MOBILE Corp. Website.

Main Menu ► Yahoo! ► Menu List ► My SoftBank  
► English

Follow onscreen instructions.

### Note

- Emergency numbers (110, 119, 118) are dialable even while Secure Remote Lock is set.

## Showing Messages during Secure Remote Lock

<Default> OFF

Set Display message to appear when Secure Remote Lock is active.

- Use preset message or create a message.

Main Menu ► Settings ► Security ► Lock Message

1 Enter Phone Password

2 **Display Setting** → ON

### ■ Save Lock Messages

> After Step 1, **Message** → Enter a message

## Key Pad Dial Lock

<Default> Deactivate

Allow dialing only from Phone Book entries and lock dialing with keypad. Unauthorized use of handset can be prevented.

- While locked,  appears in Standby.

### ■ Unavailable Operations

- Dialing with keypad
- Phone Book (saving, editing, deleting, copying from microSD Card, and sending/receiving via Infrared, IC transmission and Bluetooth®)
- Sending S! Mail/SMS (manually entering addresses)

### ■ Available Operations

- Dialing from Phone Book or Voice Dial
- Dialing from Redial, Outgoing Call Logs, Incoming Call Logs, Sent address, or Received address (only phone numbers/mail addresses saved in Phone Book)

Main Menu ► Settings ► Security ► Key Pad Dial Lock

1 Enter Phone Password

- To cancel Key Pad Dial Lock, repeat operation.

### Note

- Emergency numbers (110, 119, 118) are dialable even while Key Pad Dial Lock is set.

## Side-keys Guard

<Default> OFF

Set Side-keys Guard to disable side key operations while handset is closed.



Main Menu ► Settings ► Phone Settings  
► Side-keys Guard

### 1 ON

While Side-keys Guard is set,  appears in Standby.

- To activate side key operations while handset is closed, select **OFF**.

#### Note

- When **Menu Icons** is set to **Basic** or **Customize**, press  in Standby  
→ Press and hold  to toggle **ON/OFF**.

## Additional Lock Functions

### ■ IC Card Lock

Deactivate Osaifu-Keitai® functions (📖P.13-12).

### ■ Remote Lock

Deactivate Osaifu-Keitai® functions remotely (📖P.13-12).

## Restricting Calls/Messages

### Hiding Call Logs and Sent/Received Address List

<Default> ON

Main Menu ► Settings ► Incoming Settings ► Call Logs

- 1 Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Incoming	Show/hide Incoming Call Logs/Received address list
Outgoing	Show/hide Redial/Outgoing Call Logs/Sent address list

### 3 OFF

#### Note

- While Incoming Call Logs is **OFF**, Answer Phone (Voice Calls) does not play. Selecting Missed Call indicator does not show Incoming Call Logs.

## Secret Mode/Secret Data Only



<Default> Deactivate

Phone Book entries and calendar events saved as secret data appear only when Secret Mode/Secret Data Only is active.

- Set Phone Book or Calendar events as secret data (Phone Book: P.4-7, 4-8 / Calendar events: P.13-5)

### Main Menu ► Settings ► Security

1 Select an item (See below)

Item	Operation/Description
Secret Mode	View all data including secret data <ul style="list-style-type: none"> <li>● While set,  appears in Standby.</li> </ul>
Secret Data Only	View only secret data <ul style="list-style-type: none"> <li>● While set,  flashes in Standby.</li> </ul>

2 Enter Phone Password  
For Secret Data Only, number of saved secret data appears.

### Cancel Secret Mode/Secret Data Only

> In Standby,  or follow Step 1 above

-  disappears.
- When widgets are shown,  to hide and press  again.

### Cancel Secret Mode/Secret Setting

> In Phone Book/Calendar event window,  [Menu] → *Release secret*

**Note**

- Select whether to save data edited/saved in Secret Mode as secret data. Data saved/edited in Secret Data Only are saved as secret data.
- Turn off handset to cancel secret setting.

### Tip


**Settings** ● Disable Learning for Secret Mode/Secret Data Only (P.18-11)

## Setting Secret Mail


<Default> ON

Hide messages to/from secret Phone Book entries.

- Even if Secret Mail Display is set to **OFF**, secret mail appears when Secret Mode/Secret Data Only is active.

- 1  → **Settings**
- 2 **Universal Settings** → **Secret Mail Display**
- 3 Enter Phone Password
- 4 **OFF**



### Note

- When both Spam Filter and Secret Mail Display are set, messages from Phone Book entries saved as secret mode are sorted into Spam Folder (Safe List:  P.14-18).




## Mail Security

Set handset to require Phone Password for opening mail boxes or operating Server Mail.

-  appears for set mail boxes and Server Mail box.



- 1  → **Settings**
- 2 **Universal Settings** → **Mail Security**
- 3 Enter Phone Password → Check items →  [Finish]


■ **Set/Cancel Mail Security by Folder (Incoming Mail or Sent/Unsent)**

- >  → **Incoming Mail** or **Sent/Unsent** → Highlight a folder →  [Menu] → **Mail Security** → Enter Phone Password
-  appears for set folders.

## Call Restrictions

Reject/accept/forward calls from specified phone numbers, or restrict calling unspecified phone numbers.

- 1  → Search Phone Book
- 2 Select an entry →  [Menu] → **Restrictions**
- 3 Enter Phone Password
- 4 Select an item (See below)


Item	Operation/Description
<b>Restrict Dialing</b>	Allow calls only to specified numbers
<b>Call Rejection</b>	Reject specified numbers
<b>Call Acceptance</b>	Accept from specified numbers only
<b>Call Forwarding</b>	Automatically forward specified numbers ● Set destination numbers (Call Forwarding:  P.2-17)

- To cancel, repeat operation.

### View/Cancel Phone Book Restrictions

- > **Main Menu** ► **Phone** ► **Restrictions** ► Enter Phone Password  
► Select an item\* ► Select a Phone Book entry ► Select a number  
► **YES**

\* ★ appears for set item.

- Highlight an item,  [Menu] → **Release Settings** → **YES** to cancel restriction on all specified numbers.

### Note

- Missed call indicator appears in Standby for calls from rejected numbers.

## Delaying Ringtone

<Default> OFF

Delay ringtone/vibration for Voice/Video Calls from unknown numbers.

- Main Menu** ► **Settings** ► **Incoming Settings**  
► **Ring Time Settings** ► **Ring Starting Time**

- 1 **ON** → Enter start time

### Hide Missed Call Records (Disconnected during Ringtone Delay)

- > **Main Menu** ► **Settings** ► **Incoming Settings**  
► **Ring Time Settings** ► **Missed Calls Display** ► **Not Display**

## Rejecting Unknown Callers

<Default> Accept

Main Menu ► Settings ► Security ► Reject Unknown

- 1 Enter Phone Password → **Reject**

## Rejecting Calls without Caller ID

<Default> Accept

Reject calls without Caller ID or from pay phones.

Main Menu ► Settings ► Security ► Call Setting w/o ID

- 1 Enter Phone Password
- 2 Select an item → **Reject**

## Reset

### Reset Settings

Cancel custom settings and return handset functions to their default settings.

Main Menu ► Settings ► Security ► Reset Settings

- 1 Enter Phone Password → **YES**

#### Note

- Some default settings may not be restored.
- Reset Settings cancels Navi Appli settings in S! GPS Navi. Set a Navi Appli to activate from **Select Navi Appli** (☞ P.18-27).

## All Reset

Cancel custom settings and return handset functions to their default settings; clear all Phone Book/Data Folder entries etc.

Main Menu ► Settings ► Security ► All Reset

- 1 Enter Phone Password → **YES** → **YES**  
Handset automatically turns off and restarts.

### Note

- Fully charge battery (🔋) beforehand.
- Phone Password is reset to default.
- USIM Card/microSD Card files are not affected.
- Data transmission settings (set via PC) are not affected.
- Non-restorable items when deleted by All Reset:
  - Customized settings, Call Logs, downloaded S! Appli, etc.



# Tools

<b>Calendar</b> .....	<b>13-2</b>
Opening Calendar .....	13-2
Creating Calendar Events .....	13-2
Saving Holidays/Memorial Days .....	13-3
Viewing/Editing Calendar Event Details .....	13-4
Calendar Functions .....	13-4
<b>Tasks</b> .....	<b>13-5</b>
Saving a Task .....	13-5
Using Tasks .....	13-6
<b>Alarms</b> .....	<b>13-6</b>
Alarm Tone .....	13-6
Setting Alarm .....	13-7
<b>Calculator</b> .....	<b>13-8</b>
<b>Notepad</b> .....	<b>13-8</b>
Saving a Note .....	13-8
Notepad Functions .....	13-9
<b>OsaiFu Keitai®</b> .....	<b>13-9</b>
Downloading Lifestyle-Appli .....	13-10
Activating Lifestyle-Appli .....	13-10
Reader/Writer Transactions .....	13-11
IC Card Lock .....	13-12

<b>Dictionary (Japanese)</b> .....	<b>13-13</b>
<b>Sound Recorders</b> .....	<b>13-14</b>
Voice Recorder .....	13-14
Voice Announce .....	13-14
<b>Bar Code Reader</b> .....	<b>13-15</b>
Scanning Barcodes .....	13-15
Viewing/Editing Scanned Data .....	13-16
Using Scanned Data .....	13-16

# Calendar

View by day, week or month; set Alarms for events.

## Opening Calendar

Main Menu ▶ Tools ▶ Calendar

Current month appears.

- When a date with Calendar events is selected, number of AM and PM events and up to three contents appear.
- Press [Prev.] or [Next] to show previous/next month calendar.
- To switch Monthly/Weekly view: P.13-4



 
Monthly View

## Creating Calendar Events

Save up to 1000 entries.

Main Menu ▶ Tools ▶ Calendar

- 1 to highlight a date → [New] → *Schedule*

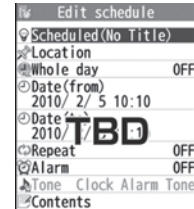

- 2 Select an item (See below)

Item	Operation/Description
Select icon/ Edit summary	> Select an icon → Edit subject
Edit location	> Enter location
Whole day setting	> <i>OFF</i> or <i>ON</i> • When <i>ON</i> is set, Alarm goes off at 0:00 a.m.
Date (from)	> Enter start date and time
Date (to)	> Enter end date and time
Repeat	> Select a repeat type → (For <i>Select day</i> , check days → [Finish])
Alarm	> Select an Alarm type (→ For <i>ON/Set time</i> , enter time) • Alarm Tone: P.13-6
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone
Contents	> Enter event description


### 3 [Finish]

#### Calendar Event Indicators

Following indicators appear in Calendar Window.

- (Blue): Morning event
- (Orange): Afternoon event
- (Underscore): Event that lasts for two days or longer

● Following indicators appear on Display.

-  : Alarm
-  : Monthly
-  : Daily
-  : Yearly
-  : Weekly

#### Note

- Calendar events between 00:00 on 2000/01/01 and 23:59 on 2037/12/31 can be saved on handset.
- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (➔ P.12-6).

## Saving Holidays/Memorial Days

Save up to 100 entries (one entry a day) each for Holidays or Memorial days.

Main Menu ► Tools ► Calendar

- 1 (Highlight a date →) [New] → *Holidays* or *Memorial days*
- 2 Select an item (See below)




Item	Operation/Description
Date setting	> Enter a date
Repeat	> Select a repeat type <ul style="list-style-type: none"><li>● <b>1 time</b> does not repeat Holidays/Memorial days events.</li></ul>
Edit holiday/anniversary	> Enter description

### 3 [Finish]

#### Indicators

Holidays appear in red.

Memorial days are marked with a red circle.

- Following indicators appear in Calendar/Calendar Event List Window:
  -  : Holidays
  -  : Memorial days
  -  : Yearly repeat

## Viewing/Editing Calendar Event Details

Main Menu ► Tools ► Calendar

1  to select a date

 


Calendar Event List




2 Select an event

Detailed schedule appears.


- To edit:  [Edit] → Edit selected item  
(Schedule:  From Step 2 on P.13-2/  
Holiday, Anniversary:  From Step 2 on  
P.13-3)

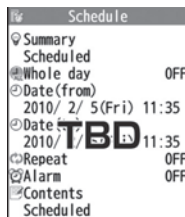



Calendar Event Details

   Item	Operation/Description
Weekly display/ 1 Month	Toggle Monthly/Weekly view
Icon display	Entries in category of selected icon appear > Select an icon
No. of schedules	Display number of saved Schedule, Holiday or Anniversary entries
Add shortcut icon	Create a shortcut (  P.1-25)
Send all Ir data	(  P.11-3)
All IC transmission	(  P.11-5)
Delete past	Delete past entries/items, prior to highlighted date > Select a category to delete → YES
Delete all	> Enter Phone Password → Select an item → YES
Reset holidays	Restore deleted Holidays > YES

### Functions Available in Calendar Events List/Details

 - > Select a date (→ Select a Schedule, Holiday or Anniversary) →  [Menu] → Select an item (See below)

Item	Operation/Description
New	Create a new entry (  P.13-2, P.13-3)
Edit	Edit selected item (  Left)
Copy	Copy an entry to another day > Enter date and time to copy an entry to
Calendar display	Switch from Icon display to Calendar display


13

Tools

## Calendar Functions

From ► Main Menu ► Tools ► Calendar

### Functions Available in Calendar Window

- > Highlight a date →  [Menu] → Select an item (See below)

Item	Operation/Description
New	Create a new entry (  P.13-2, P.13-3)

Item	Operation/Description
Icon display	Entries in category of selected icon appear > Select an icon
Set secret mode/ Release secret	Activate/deactivate Secret Mode > <b>YES</b> (→ For <i>Set secret mode</i> , enter Phone Password) ● Secret entries appear only in <i>Secret Mode</i> or <i>Secret Data Only</i> (↗ P.12-10).
Compose message	Insert event date and details to message text (↗ From Step 2 on P.14-4)
Send Ir data	(↗ P.11-3)
Send all Ir data	(↗ P.11-3)
IC transmission	(↗ P.11-5)
AllIC transmission	(↗ P.11-5)
Copy to microSD	Copy an entry to microSD Card > <b>YES</b> ● To display data on microSD Card: ↗ P.10-20
Delete this	> <b>YES</b>
Delete past	Delete past entries/items, prior to highlighted date > Select a category to delete → <b>YES</b>
Delete select	> Check entries to delete → [Finish] → <b>YES</b>

## Tasks

Make quick notes of task to manage in Task list.

### Saving a Task

Main Menu ▶ Tools ▶ Tasks

- 1 [New] → Select an item (See below)
  - To check saved Tasks, select a Task. To edit, press [Edit] in detail window.

Item	Operation/Description
Edit Tasks	> Enter content
Due date	> Select how to enter due date → Enter due date ● Select <b>No date</b> to enter none.
Priority	> Select a priority level
Category	> Select a category
Alarm	> Select an Alarm type (→ For <i>ON/Set time</i> , enter time) ● Alarm Tone: ↗ P.13-6
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone

 








- 2 [Finish]
  - When content is not entered, Tasks cannot be saved.

#### Note

- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (↗ P.12-6).

## Using Tasks

In Tasks window, press  [Menu] for following operations.

Item	Operation/Description
New	Create a new entry (  P.13-5)
Edit	Edit an entry (  P.13-5)
Change status	Change status indicator shown in Tasks list > Select a status (→ For <b>Completion</b> , select an item → Enter Completion date) ● Overdue status indicator turns red.
Show by category	> Select a category
Sort/Filter	Sort list by due date, entry order, status, etc. > Select a condition
Add shortcut icon	Create a shortcut (  P.1-25)
Send Ir data	(  P.11-3)
Send all Ir data	(  P.11-3)
IC transmission	(  P.11-5)
AllIC transmission	(  P.11-5)
Copy to microSD	Copy a Task to microSD Card > <b>YES</b> ● To display data on microSD Card:  P.10-20
Delete this	> <b>YES</b>
Delete select	> Check entries →  [Finish] → <b>YES</b>
Delete completed	Delete an entry in <b>Completion</b> status > <b>YES</b>
Delete all	> Enter Phone Password → <b>YES</b>

## Alarms

### Alarm Tone

When scheduled time arrives, alarm tone sounds and Notification Light illuminates.

- For Calendar events and Tasks, alarm message and animation corresponding to selected icon appear on Display.


### To Stop Alarm Tone for Calendar Events, Tasks or Alarm

Press any key.

### Missed Alarm

"Missed alarm" Event Indicator appears in Standby for alarms missed during Privacy Key Lock, Personal Data Lock or Infrared transmission once locks are canceled or transmission ends. Select indicator to view content.

### Note

- When one or more Alarms are set to the same time, alarm sounds in the order of : "Alarm" → "Timer Recording" → "Tasks" → "Calendar" → "Timer Watching"  
 For Tasks, "Missed alarm" indicator appears.
- If alarms are set for more than one Calendar event, press  [Next] when alarm sounds to toggle Calendar event entries.

 
## Setting Alarm

Set up to 12 alarms. Alarm tone sounds at the specified time once, everyday or weekly as set.

- appears in Standby when Alarm is set.

### Main Menu ▶ Tools ▶ Alarms

- 1 Highlight an Alarm → [Edit]

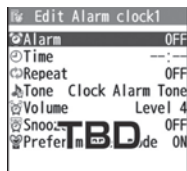

- 2 Select an item (See below)

Item	Operation/Description
Alarm	Activate or cancel Alarm > <b>ON</b> or <b>OFF</b>
Time	> Set Alarm time
Repeat	> Select a repeat type (→ For <b>Select day</b> , check days →  [Finish])
Tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone
Volume	>  to set Alarm tone volume
Snooze	When Snooze is set to <b>ON</b> , Alarm tone sounds for 60 seconds, repeating up to six times at five minute intervals. > <b>ON</b> or <b>OFF</b> (→ For <b>OFF</b> , enter time)
Prefer manner mode	Set Manner Mode or Alarm priority. > <b>ON</b> or <b>OFF</b>

## 3 [Finish]

### Alarm Indicators

- Following indicators appear:  
 : Repeats daily    : Repeats weekly

### Cancel & Reactivate Alarm

- > In Step 1 (highlight an Alarm), [Menu] → Select an item → **YES**
- Cancel or reactivate an alarm entry as required.
- Highlight an entry → to reactivate/cancel Alarm.

### Snooze Function

If **ON**, press any key; Snooze window appears. To cancel Alarm, press .

#### Note

 
- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (👉 P.12-6).

# Calculator

- Calculates up to 10 digits.

Main Menu ► Tools ► Calculator

Operation	Assigned key
Number (0 - 9)	0 - 9
+	
-	
x	
÷	
=	
Decimal point	
%	
Clear	

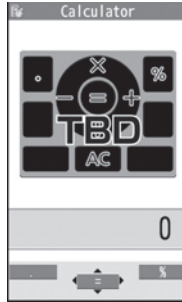


# Notepad

- Save up to 20 notes.

## Saving a Note

Main Menu ► Tools ► Notepad

 - 1 *<Not Recorded>*
  - Select a saved note to view content.  
 [Edit] to edit.
- 2 Enter text
  - Up to 256 double-byte or 512 single-byte characters can be entered.

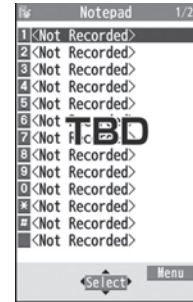


Notepads Window

13

Tools

 
Example:


 


 

 


$-17+28.5=11.5$





## Notepad Functions

In Notepad list window, press  [Menu] for following operations.

Item	Operation/Description
Edit	Edit a saved note
Compose message	Insert Notepad text to message (  From Step 2 on P.14-4)
Edit schedule	Copy a note to Schedule to create a Calendar event > <b>Schedule</b> → Save a new note (  From Step 2 on P.13-2)
Add shortcut icon	Create a shortcut (  P.1-25)
Send Ir data	(  P.11-3)
Send all Ir data	(  P.11-3)
IC transmission	(  P.11-5)
AllIC transmission	(  P.11-5)
Copy to microSD	Copy a note to microSD Card > <b>YES</b> ● To display data on microSD Card:  P.10-20
Notepad Info	Display entry date, latest modified date and category of note
Category	> Select a category ● When no category applies, select <b>None</b> .
Delete this	> <b>YES</b>
Delete selected	> Check notes →  [Finish] → <b>YES</b>
Delete all	> Enter Phone Password → <b>YES</b>

## Osaifu Keitai®

"Osaifu-Keitai®" is a range of IC Card-based services used by Osaifu-Keitai® compatible handsets. Make purchases using e-money or e-ticketing. Hold handset up to a reader/writer to pay for your purchase.

### Osaifu-Keitai® Terms

<b>Osaifu-Keitai®</b>	A contactless IC Card technology to read/write data by holding an IC card up to a reader/writer
<b>IC Card</b>	An IC chip embedded in Osaifu-Keitai®-compatible handsets
<b>Lifestyle-Appli</b>	Applications to use Osaifu-Keitai®. Some applications are preinstalled.

### Precautions

- Data saved in IC Card vary by service content and usage history. Procedures to delete IC Card data vary by Lifestyle-Appli. Contact Osaifu-Keitai® service providers for details.
- SoftBank is not liable for damages from accidental loss or alteration of IC Card data or settings.
- IC Card data can be misused if your Osaifu-Keitai® compatible handset is lost or stolen. SoftBank is not liable for any resulting damages.
- Downloading Lifestyle-Appli and using applications may incur high packet transmission charges.

## Getting Started

### Downloading Lifestyle-Appli

Download Lifestyle-Appli via Internet website.



### Registration/Settings

Activate Lifestyle-Appli to complete registration or customize settings.

- Make deposit into account, check payment records or balance, etc.

#### Note

- Keep a copy of service passwords/customer service contact, etc. in a separate place.

## Downloading Lifestyle-Appli


Main Menu ► Tools ► Osaifu-Keitai ► Lifestyle-Appli

- 1 **Download** → **YES**
- 2 Select a Lifestyle-Appli
  - Lifestyle-Appli is saved to Data Folder.

## Activating Lifestyle-Appli

- Lifestyle-Appli cannot be activated during a call or while another S! Appli is active.

Main Menu ► Tools ► Osaifu-Keitai ► Lifestyle-Appli

- 1 Select a Lifestyle-Appli
- 2 To exit,  → **Stopped**


#### Note

 
- Alternatively, **Main Menu** ► **S! Appli** ► **Osaifu-Keitai** ► **Lifestyle-Appli**  
or  
**Main Menu** ► **Data Folder** ► **Lifestyle-Appli**

## Reader/Writer Transactions



- Complete registration/settings and charge your account beforehand.
- There is no need to activate a Lifestyle-Appli during transaction.

### 1 Hold logo up to reader/writer

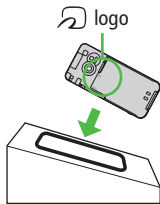- When IC Card Notification Light is **ON**, Notification Light illuminates ( P.18-10).
- Hold handset parallel to reader/writer. Try moving handset around if recognition is slow.
- Check scan result on reader/writer display.
- Osaifu-Keitai® can be used during a call or Internet transmission (May require extra time.).



### Note

- Data may be unreadable if a metal object, etc. is between  logo and reader/writer.
- Even though Osaifu-Keitai® is available while handset is off, Lifestyle-Appli does not activate. However, if battery is left uncharged after warning tone sounds, Osaifu-Keitai® may become disabled. Charge battery beforehand.
- When handset is held up to reader/writer, handset may show a message or vibrate depending on service. S! Appli, Messaging or Internet may also activate automatically. To avoid such cases, set the functions not to activate during transactions ( P.18-26).

### Tip

#### Settings

- Disable Handset Response to Commands from Reader/Writer ( P.18-26)

## IC Card Lock

### Activating IC Card Lock

<Default> OFF

- While set,  appears in Standby.
- 1 Press and hold  → Enter Phone Password
    - Repeat the step as required to unlock.

**Note**

- Alternatively, **Main Menu** ► **Tools** ► **Osaifu-Keitai** ► **IC Card Settings** ► **IC Card Lock** or **Main Menu** ► **Settings** ► **Security** ► **IC Card Lock**



## Remote Lock

<Default> OFF

- Save up to three phone numbers to enable Remote Lock.

### Main Menu ► Tools ► Osaifu-Keitai ► IC Card Settings ► Remote Lock

- 1 Enter Phone Password → **ON**
- 2 Select an item (See below)

Item	Operation/Description
<b>Numbers to Permit</b>	Save numbers to activate Remote Lock >> <Not Recorded> → Enter phone numbers →  [Return] • To save numbers from Phone Book/Incoming Call Logs or to use a payphone number:  [Menu] → <b>Refer to</b> or <b>Payphone</b>
<b># of Incoming Call</b>	Specify the number of incoming calls for activating IC Card Lock > Enter a number

- 3  [Set]

## Activating Remote Lock

- ① Call 942P from one of the specified numbers (Send Caller ID)
- ② Hang up after 942P receives the call
- ③ Repeat ①-② until specified number of incoming calls is reached (within three minutes)
  - After specified number of incoming calls, IC Card Lock is set and a message informs you IC Card Lock is activated.

### Note

- When setting IC Card Lock, call 942P from the same specified phone number. Incoming calls from different phone numbers cannot be counted.
- Specified incoming calls may not be counted when Call Forwarding is active.
- Remote Lock is not available when ring time for Answer Phone is set to 0 or Driving Mode is active.
- When Answer Phone activates, counted number of incoming calls are reset.

## Dictionary (Japanese)

Use **ケータイTOOL<辞書>** to access dictionaries (学研 辞スバ 英和・和英辞書 and 学研 国語辞書).

- ケータイTOOL<辞書> is an S! Appli.

Main Menu ▶ Tools ▶ Dictionary



### 1 Read 免責 (disclaimer) → OK

ケータイTOOL<辞書> activates.

- To disable 免責:  
Uncheck **アプリ起動時に常に表示する**。(Always show disclaimer when accessing dictionaries)

### 2 → Enter a word

Search results appear.


 
- To scroll pages: 
- To switch dictionaries: (1)/(3)  
(In Horizontal Open Position: (1)/(7))
- To search again:  [戻る]  
(In Horizontal Open Position: (戻))

### 3 Select a word

Definition appears.

### 4 To end, → Stopped

### Note

- While Dictionary application is active, press  [メニュー] for useful functions.
- Word search is available while composing messages or viewing sent/received messages or website contents ( P.14-8, P.14-23, P.15-13).

## Sound Recorders

### Voice Recorder

Set recorded sounds for ringtones.

- Record for about 60 seconds each.

Main Menu ► Tools ► Sound Recorders ► Voice Recorder

#### 1 YES

Recording starts.

#### 2 [Stop] / / (→ OK) to stop recording

Recorded sounds are saved in Ring Songs&Tones folder.

### Voice Announce

Set recorded sound for on hold tone/holding tone, Alarm, Calendar event alarm, Tasks alarm, ringtones, Answer Phone message, Timer Watching (Digital TV), Ring Songs&Tones Play List.

- Record only one item for about 15 seconds.
- Select **Voice Announce** in individual window to set Voice Announce as specific tone.

Main Menu ► Tools ► Sound Recorders ► Voice Announce

#### 1 Record

Recording starts.

Tone beeps five seconds before recording ends.

#### 2 [Stop] to end recording

Tone beeps twice and previous screen returns.

- To play back: **Play**
- To delete: **Erase** → YES

## Bar Code Reader

Scan barcodes (JAN) or QR Codes with built-in camera. Access websites, send messages, etc. from QR Codes.

### JAN Codes

JAN Code is a one-dimensional bar code denoting numerals with bars and spaces of different widths.

### QR Codes

QR Code is a two-dimensional bar code containing information.

Example: SoftBank mobile phones



## Scanning Barcodes

- Up to five items can be saved.
- For split data, up to 16 QR Codes can be scanned at a time and saved as one item.

Main Menu ► Tools ► Bar Code Reader ► Scan Barcodes

### 1 Frame barcode in the center of Display

- To adjust Display brightness: [Menu] → *Brightness* → Adjust to -3 (dark) - +3 (light)
- To zoom:
- To use Focus Lock:

### 2 [Start]

Scanning starts, and scanned results appear when completed.

- For split data, *OK* → Repeat Step 1 and 2
- To use scanned data: Step 2 on P.13-16

### 3 [Menu] → *Save result* → *OK*

- To start over: → *YES*

#### Note

- Handset cannot read barcodes or two-dimensional codes other than JAN/QR Codes.
- Some barcodes may be unreadable.
- Barcode recognition may be slow. Hold handset steady while scanning.
- Barcodes may not be correctly read owing to scratch, dirt, damage, quality of printed material, light reflection, or QR code version.

## Viewing/Editing Scanned Data

Main Menu ► Tools ► Bar Code Reader  
► Saved Data List

- 1 **View**  
Select an item

### Edit Title

Highlight an item → [Menu] → *Edit title* → Edit

### Delete Saved Data

► In Step 1, (highlight an item →) [Menu] → *Delete* → *Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) → *YES*

## Using Scanned Data

Main Menu ► Tools ► Bar Code Reader  
► Saved Data List

- 1 Select an item
- 2 [Menu] → Select an item (See below)

Item	Operation/Description
Save result	Save scanned results
Display list	Display Saved Data List
Internet	Access website > <i>Yahoo! Keitai</i> or <i>PC Site Browser</i> → <i>YES</i> ● Alternatively, select the URL.
Compose message	Insert address to message recipient field ( From Step 4 on P.14-4) ● Alternatively, select the address.
Dialing	Call selected phone number > Select a dialing method → <i>Dial</i> ● Alternatively, select phone number to dial.
Add to Phone Book	Save scanned results to Phone Book ( From Step 2 on P. 4-5)
Add bookmark	Save URL to Bookmark > <i>YES</i> →  [OK]
Copy	Copy selected characters to another place ( From Step 2 on P.3-10)



# Messaging

## Basics ..... 14-2

- Available Entry Items & Character Entry Limits ..... 14-2
- Messaging Folders & Memory Status ..... 14-3
- Customizing Handset Address ..... 14-3

## Sending S! Mail & SMS ..... 14-4

- Sending S! Mail ..... 14-4
- Sending SMS Messages ..... 14-7
- Creating Messages ..... 14-8
- Graphic Mail Functions ..... 14-9
- Sending Options ..... 14-10

## Receiving & Viewing Messages ..... 14-11

- Opening New Messages ..... 14-11
- Window Description ..... 14-12
- Retrieving Complete S! Mail ..... 14-13
- Opening & Saving Attachments ..... 14-13
- Showing Sent/Received Mail Address ..... 14-14
- Using Server Mail ..... 14-14
- Retrieving/Viewing Messages ..... 14-15

## Organizing/Using Messages ..... 14-16

- Checking Messages in Messaging Folders ..... 14-16
- Auto-sort ..... 14-16
- Filter Spam ..... 14-17
- Replying to Messages ..... 14-18
- Using Mail Groups ..... 14-19
- Sent/Received Address ..... 14-20
- Organizing Messages ..... 14-20
- Using Messages ..... 14-22

## PC Mail ..... 14-24

- Messaging Folders ..... 14-24
- PC Mail Account Setup ..... 14-25
- Sending PC Mail ..... 14-25
- Retrieving/Viewing PC Mail ..... 14-26
- PC Mail Functions ..... 14-26

## Basics

Send messages via S! Mail, SMS or PC Mail.

<b>S! Mail</b> [Separate subscription required]	Exchange text messages with SoftBank or e-mail compatible handsets, PCs, etc.; attach image or sound files etc. <ul style="list-style-type: none"><li>● 942P is compatible with Graphic Mail (👉 P.14-5)</li><li>● Send/receive up to 2 MB messages.</li></ul>
<b>SMS</b>	Exchange short text messages with SoftBank handsets.
<b>PC Mail</b> [Setup required] (👉 P.14-24)	Send/receive messages via PC mail account.

- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

### Operations while Using PC Mail

Setting PC Mail accounts creates account folders in Messaging Folders. S! Mail/SMS operations may change as a result (👉 P.14-24).

#### Note

- Messaging functions are also available in Horizontal Open Position. Switching Normal Position to Horizontal Open Position may end active screen.

## Available Entry Items & Character Entry Limits

Item		S! Mail/PC Mail	SMS
Address	E-mail address	<input type="radio"/> Up to 246 single-byte alphanumerics/ Up to 20 recipients	<input type="radio"/> –
	Phone number <sup>1,2</sup>	<input type="radio"/> Up to 21 single-byte alphanumerics/Up to 1 recipient	<input type="radio"/> –
Subject		<input type="radio"/> Up to 256 double-byte/ Up to 512 single-byte alphanumerics	<input type="radio"/> –
Text		<input type="radio"/> 30 KB	<input type="radio"/> Up to 70 double-/single-byte alphanumerics <sup>3</sup>
Attachment		<input type="radio"/> <sup>4,5</sup>	<input type="radio"/> –

<sup>1</sup> SoftBank handset numbers only

<sup>2</sup> Phone numbers cannot be used for PC Mail address.

<sup>3</sup> When text entry mode is set to **English (160char.)** (👉 P.18-23), up to 160 single-byte alphanumerics can be entered.

<sup>4</sup> Up to 2 MB S! Mail including subject, message text and attachment. Message size is changeable (Create Msg. Size: 👉 P.18-22)

<sup>5</sup> Up to 1 MB PC Mail including subject, message text and attachment.

 
#### Note

- Character limit varies with attachment size.
- Change message type while creating a message (👉 P.14-9).

## Messaging Folders & Memory Status

Messages are organized in folders by message type.

- PC Mail Folders: ☞ P.14-24

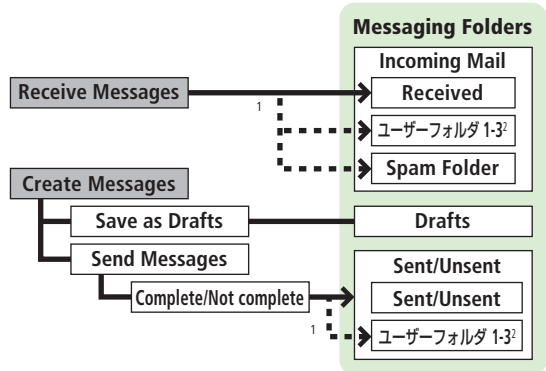

<sup>1</sup> Set Auto-sort messages to specified folders or Spam Folder automatically (☞ P.14-16, P.14-17).  
<sup>2</sup> Add up to ten folders (☞ P.14-20).

### Deleting Messages Automatically

When memory for messaging folders is low, old messages are automatically deleted one by one. Protect important messages from unintentional deletion (☞ P.14-21), or set message deletion settings to **OFF** (☞ P.18-22). Messages in Drafts and SMS on USIM Card are not deleted automatically.

### When Messaging Memory is Full

☑ (Received Full) appears in Standby and no more new incoming messages are received. Delete old messages in Incoming Mail folder (☞ P.14-22), then retrieve new messages (☞ P.14-15).

### View Memory Status

> ☑ → *Memory Status*

### Tip

- Mail Security (☞ P.12-11)

## Customizing Handset Address

Change your handset mail address (alphanumerics before @) to reduce the risk of receiving spam. Default account name is random alphanumerics.

abc123-xyz @ softbank.ne.jp  
[ Account ] [ Domain ]  
Name Name  
(Customize here)

- For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Handset mail address cannot be changed in Offline Mode.
- For operations while using Internet: ☞ P.15-6

1 ☑ → *Settings* → *Custom Mail Address*

 
Handset connects to the Network.  
Follow onscreen instructions.

## Sending S! Mail & SMS

### Sending S! Mail


- Text entry (☞ P.3-2)

Example: Select a Phone Book entry to send S! Mail.

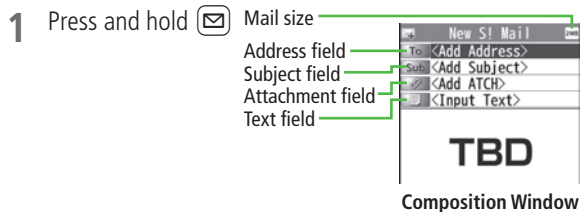

- 2 Select Address field →  
**Phone Book**
- 3 Select a Phone Book entry →  
Select a SoftBank handset number  
or mail address

 


- Press  to toggle tabs if both mail addresses and phone numbers are saved.

- 4 Select Subject field →  
Enter subject

- 5 Select Text field

- 6 Enter text

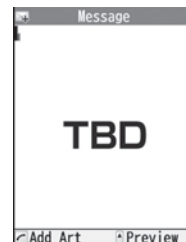

Text Entry Window

- 7  [Send]




#### Note

- Alternatively,  → **Create New** to open Composition window.

#### Tip






 



- Addresses ● Additional Functions (☞ P.14-8)
- Sending Options (☞ P.14-10)
- Settings ● Request Delivery Confirmation (☞ P.18-21)
- Set Reply-to Address ● Set Signature (☞ P.18-22)

## Adding Attachments

 - 1 After Step 6 on P.14-4, select Attachment field
- 2 Select a folder in Data Folder → Select a file
- 3  [Send]



### ■ Attach Captured Pictures/Videos

- After Step 1, **Activate Camera** → **Photo mode** or **Video mode** →  
 Frame subject →  [Record],  or  (→ For video,  
 [Stop],  or  →  [Save],  or 

#### Note

- Some files can not be attached depending on the file format or size.
- Some copy protected files can not be sent.
- Attachments exceeding size limit are automatically compressed (Width and height of compressed images may change.). If the compressed file still exceeds maximum size, message cannot be sent.
- Ring Songs&Tones, Music and Videos files cannot be attached directly from microSD Card. Move files to handset before attaching to messages.







### Tip

 
- Attachments (👉 P.14-8)
- Settings ● Set Attachment Size (👉 P.18-21)

## Graphic Mail

Create HTML messages; select font color/size, background color, or insert images, etc.


Example: Use various Templates to create Graphic Mail.


- Change font size
  - Scroll text
- 1 After Step 4 on P.14-4,  [Menu] → **Load Template** → Highlight a template →  [View] → 
    -  to return to Template list.
  - 2 Select Text field → Delete "ここに文章をいれてね！"
  - 3  → **Font Size**
    - Alternatively,  [Menu] → **Set Graphic Mail** to open Graphic Palette

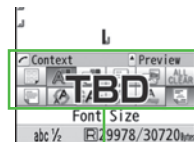

Graphic Palette


4 Select a font size → Enter text

5  → *Select area*

6 Place cursor before a sentence to scroll →  [Start] → Move cursor to end of sentence →


 [End]

Text is highlighted.

- To cancel selection: 

7 *Set Scrolling* →  [Exit]

8  to preview → 

- Alternatively,  [Menu] → *Preview* to view text field

9  →  [Send]



### Reset Operations



> To cancel previous operation: Close Graphic Palette →  [Menu] → *Undo*

> To reset all Graphic Mail operations:  → *Graphic all reset* → YES → YES

### Use Mail Art

> In text entry window,  → *Mail Art* → Select an item →  [Exit]

### Use Files Saved in microSD Card

> In text entry window,  → *Insert files* → *File Select* → Select a folder →  [microSD] → Select a folder → Select a file

### Tip

- Use Other Graphic Mail Settings ( P.14-9)
- Download Templates via Internet ( P.14-10)

## Sending SMS Messages

- Text entry (☞ P.3-2)

**Example: Select a Phone Book entry to send SMS.**



**Create New SMS**

Address field

 
 
Text field



**Composition Window**



**Phone Book**

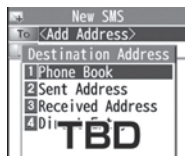

Select a SoftBank handset number



- When number of entered character exceeds limit, S! Mail conversion option message appears.



**Text Entry Window**

### Note

- When a single-byte text message including | {} [] ^ is sent or a draft including such text is edited, some characters may be cut out of text field.

### Tip

- Addresses ●Additional Functions (☞ P.14-8)
- Settings ●Request Delivery Confirmation (☞ P.18-21)
- Change SMS Center Number ●Set Input Character to English (☞ P.18-23)

## Creating Messages

### Addresses

**From** ► Composition window, select Address field

#### ■ Enter Address Directly

- > S! Mail: **Address Input** or **Phone Number Input** → Enter a mail address/SoftBank handset number
- > SMS: **Direct Entry** → Enter a SoftBank handset number

#### ■ Select Address from Sent Address/Received Address Logs

- > **Sent Address** or **Received Address** → Select a log

#### ■ Select S! Mail Address from Mail Group

- > **Mail Group** → Select a Mail Group

#### ■ Add/Edit/Delete Address

- > Follow the steps (See below)

Item	Operation/Description
Add recipients*	> <Not entered> → Search/enter address → Select an address or enter directly
Edit	> Select an address → <b>Edit</b> (For SMS: <b>Direct Entry</b> ) → Edit address
Delete*	> Highlight an address → [X] [Menu] → <b>Delete receiver</b> → <b>YES</b>

\* S! Mail only

#### ■ Change To/Cc/Bcc (S! Mail only)

- > Highlight an address → [X] [Menu] → **Destination types** → Select a type

## Attachments

**From** ► After attaching a file, select Attachment field

#### ■ Open/Play Attached Files

- > Select a file

#### ■ Add Attachments

- > [X] [Menu] → **Add Attached Files** → Select a folder → Select a file → [X] [Finish]
- To capture still images or videos to attach: [X] P.14-5

#### ■ Delete Attachments

- > Highlight a file → [X] [Menu] → **Del Attached Files** → **YES**

## Additional Functions




#### ■ Look Up Words from Text Entry Window

- > In S! Mail text entry window, [X] [Menu] → **Look up in dict.**
  - Move cursor before/after word → [Start] → [X] to highlight the word → [End] → Read disclaimer → **OK**
  - Dictionary operations: [X] P.13-13



## ■ Functions Available in Composition Window

> In Composition window,  [Menu] → Select an item (See below)


Item	Operation/Description
Send	Send message
Preview	Preview message
Save as Drafts	Save message to Drafts box without sending
Attached files <sup>1</sup>	View attached file list
Load Template <sup>1</sup>	> Select a template
Save Template <sup>1</sup>	Save edited template > <b>YES</b>
Add Signature <sup>1</sup>	Add signature ● Create and save signature beforehand (  P.18-22).
Send Settings <sup>1</sup>	(  P.14-10)
Image Compression <sup>1</sup>	Set image compression size for attachment > Select a size or <b>OFF</b>
Create Msg. Size <sup>1</sup>	<b>300KB</b> or <b>2MB</b>
Confirm Delivery <sup>2</sup>	(  P.14-10)
Input character <sup>2</sup>	Select character input mode > <b>Japanese</b> or <b>English</b>
Change mail type	Switch mail type > Select an item








<sup>1</sup> S! Mail only

<sup>2</sup> SMS only


## Graphic Mail Functions

### ■ Use Other Graphic Mail Settings

> In S! Mail text entry window,  → Select an arrange item (See below)

Item	Operation/Description
Insert files	Insert still images, music or Flash® files; activate Camera and insert captured image Music files are sent as BGM > Select an item <ul style="list-style-type: none"> <li>· <b>File Select</b> → Select a file type → Select a folder → Select a file</li> <li>· <b>Camera</b> → Frame subject →  [Record] →  [Save] <ul style="list-style-type: none"> <li>● To delete inserted music files: <b>Delete BGM</b> → <b>YES</b></li> </ul> </li> </ul>
Font Color	> Change font color
Background color	> Change background color
Insert Lines	Insert separator line
Mail Art	Insert Mail Art > Select a file
Graphic all reset	Cancel all Graphic Mail Settings > <b>YES</b>
Select area	Specify text to be arranged > Place cursor before/after text →  [Start] →  to highlight area →  [End] → Select other items → Follow the steps for selected items <ul style="list-style-type: none"> <li>● To cancel selection:  [End] → </li> </ul>
Font Size	> Change font size

Item	Operation/Description
Select	Flash text
Blinking	
Set Scrolling	Scroll text
Set Swinging	Swing text
Alignment	> Select a type

- One file of music or Flash®, and up to 40 types of My Pictograms or images can be inserted per Graphic Mail.
- To delete inserted images, lines, Mail Art, etc.: Close Graphic Palette → Move cursor before images, etc. → 
- Ring Songs&Tones or Music files cannot be inserted directly from microSD Card. Move files to handset beforehand.

#### ■ Save Edited Templates


> In S! Mail Composition window,  [Menu] → *Save Template* → **YES**

#### ■ Download Templates via Internet

>  → *Templates* → *Download Templates* → **YES**

- Handset connects to the Network. Follow onscreen instructions.

## Sending Options

**From** ► Composition window,  [Menu]

#### ■ Confirm Delivery

> (For S! Mail, *Send Settings* →) *Confirm Delivery* → **ON**

- Request Delivery Confirmation ( P.18-21)

#### ■ Notify Recipients of Message Priority Level (S! Mail only)

> *Send Settings* → *Priority* → Select a level

#### ■ Set Reply-to Address (S! Mail only)

> *Send Settings* → *Set Reply-To* → **ON**

- Specify reply-to address beforehand ( P.18-22)

# Receiving & Viewing Messages

## Retrieving S! Mail Automatically

Auto Download retrieves up to 1 MB messages. Transmission fees are incurred; adjust to use. (To disable Auto Download/limit message size for Auto Download: P.18-22)

## Opening New Messages

When a new message is received, and Event Indicator appear in Standby.

- 1 Select indicator
  - Newest message appears.
  - to show previous/next message.



Message Window

### Note

- Handset may connect to the Network via URL link in message text. Data-intensive web pages may incur high charges.
- Message tone and Notification Light may not always sound/illuminate.
  - ☑ flashes and tone sounds to inform of a new message.
- Event Indicator disappears even when an unread message other than latest message is selected.

 
### Tip

- Retrieving/Viewing Messages ( P.14-15)
- Setting Secret Mail ( P.12-11)
- Settings
  - Change Ringtone
  - Change Ringer Volume
  - Set Message Ringtone Duration
  - Set Vibration Alert ( P.18-2)
  - Set Notification Light by Incoming Type (Voice/Video Calls or Messages) ( P.18-10)
  - Limit Maximum Incoming Message Size
  - Limit Auto-retrieval by Message Type ( P.18-22)

## Window Description

### Messaging Folder Contents

Received Date & Time<sup>1</sup>,  
Sender<sup>2</sup> and S! Mail Subject  
(For SMS, Message Text)

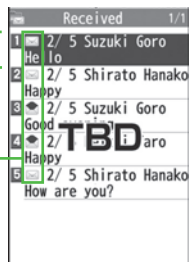


Example: Received Folder  
in Incoming Mail

- For Sent/Unsent box, following appear:
  - <sup>1</sup> Sent date/time
  - <sup>2</sup> Recipient

### Message Type/Status

 Message Type	Message Status
/  Unread/Read S! Mail	Attachments
/  Unread/Read S! Mail Notice	(Silver) Protected
/  Unread/Read SMS	Forwarded Message
/  Unread/Read USIM Card SMS	Replied Message
Forwarded Server Mail	Sending failed (Sent/Unsent Message)
	New Delivery Report (Sent/Unsent Message)
	High Priority
	Low Priority

### Message Contents

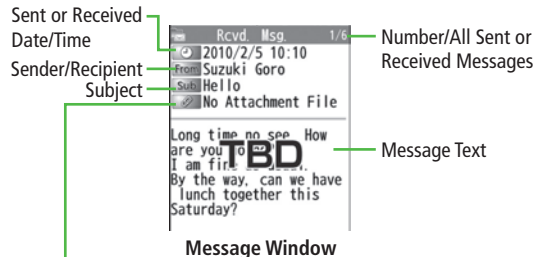

Message Window

### Number of Attachments

The number of files (images, sounds, videos, text, etc.) appears.

### Note

- Status indicators for forwarded/replied SMS messages (saved in USIM Card) do not appear.
- After retrieving complete messages, S! Mail Notice icons with (Forwarded) or (Replied) change to / (S! Mail).
- Messages remain protected after complete messages are retrieved via protected S! Mail Notices.
- If messages on microSD Card do not appear correctly ( P.10-20), copy messages to handset ( P.10-21) and execute **Charset Conversion** ( P.14-23).

### Tip

- Functions Available from Message Lists ( P.14-21)
- Functions Available in Received/Sent Message Window ( P.14-22)

**Settings** ● Change Font Size ( P.18-21)

## Retrieving Complete S! Mail

The complete message may not be downloaded during handset operations. Center sends initial portion of message as an S! Mail Notice. Manually retrieve the complete message.

- 1 Select **continue (xxxKB)** at end of S! Mail Notice

- (xxxKB) is an estimated Server Mail size; may differ from actual message size.



### Retrieve from Message List

 
> In received message list, [Menu] → **Retrieve** → **This one**

### Retrieve Multiple Messages

> In received message list, [Menu] → **Retrieve** → **Selected** → Check messages → [Finish] → **YES**

## Opening & Saving Attachments

- 1 In Message window, [Menu] → **Attached files**
- 2 Select a file  
File plays or shows.
- 3 After viewing, [Save] → **Attached files window returns.**
- 4 To save the file, highlight file → [Save] → **YES** → Select a folder

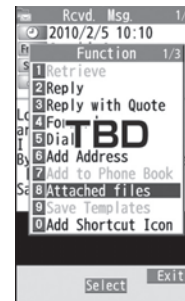

### Note

- When messages are opened, attached image files appear/play automatically.
- (Silver) appears with file requiring a Content Key. If Content Key has expired, warning appears when opening a file. Acquire new Content Key (P.10-5).
- Incompatible files are saved to Other Documents in Data Folder. Some files may not be saved to handset.

### File Formats Supported by Auto Playback

- Image files (JPEG, GIF, PNG)
- Music files (SMAF, AMR, SMF, SP-MIDI)

### Tip

- Settings** • Play Attached Music Files Automatically (P.18-22)


## Showing Sent/Received Mail Address


### 1 Sent Address

Press and hold 

### Received Address






Press and hold 

 **SMS** : SMS (successfully sent)

 **S! MAIL** : S! Mail (successfully sent)

- To show Redial/Incoming Call Logs:  **[Change]**

### 2 To view entry details, select an entry

- To send S! Mail/SMS to recipient shown:  → Mail composition operation (S! Mail:  From Step 4 on P.14-4 or SMS:  From Step 4 on P.14-7)
- To save to Phone Book:  **[Store]** → Operation for saving to Phone Book ( From Step 2 on P.4-5)

### Tip

- Sent/Received Address ( P.14-20)

## Using Server Mail

Retrieve mail list stored at the Center to view Server Mail.

### Viewing Server Mail List

1  → *Server Mail*

2 *Retrieve Mail List* → **YES**

### Update Server Mail List

> After Step1, *Retrieve Mail List* →  **[Update]** → **YES**

### Retrieving Server Mail


1  → *Server Mail* → *Retrieve Mail List*

- If no Server Mail is in the list, **YES** → **OK**

2 **Retrieve a New Message**

Select an S! Mail

### Retrieve Multiple Messages

 **[Menu]** → *Retrieve* → *Retrieve Selected* →

Check messages →  **[Finish]** → **YES**

### Retrieve All Messages

>  → *Server Mail* → *Retrieve All*

## Deleting Server Mail

1 [Envelope] → *Server Mail* → *Retrieve Mail List*

2 [Y] [Menu] → *Del Server Mail*

3 **Delete a Message**  
*Delete This* → *YES*

### Delete Multiple Messages

*Delete Selected* → Check messages → [Envelope] [Finish]  
→ *YES*

### Delete All Messages

> [Envelope] → *Server Mail* → *Delete All* → Enter Phone Password → *YES*

### Tip

- Mail Security (☞ P.12-11)
- Server Mail Functions (☞ Right)

## Retrieving/Viewing Messages

### Manually Retrieving New Messages

Retrieve S! Mail messages saved on Server while handset is off/out-of-range.

> [Envelope] → *Retrieve New*

### Server Mail functions

[From] [Envelope] Server Mail

#### Forward Server Mail

> *Retrieve Mail List* → Highlight an S! Mail → [Y] [Menu] →  
*Fwd Server Mail* → Select Address field → Search/enter address →  
Select an address or enter directly → [Envelope] [Send]

- To forward Server Mail from S! Mail Notice: In Message list, highlight S! Mail Notice → [Y] [Menu] → *Forward* → *Fwd Server Mail* → *<Add Address>* → Select/enter an address → [Envelope] [Send]
- Forwarded S! Mail cannot be deleted from Server Mail List.
- [Envelope] appears for Server Mail saved to Drafts or Sent/Unsent after forwarded.

#### Sort Server Mail

> *Retrieve Mail List* → [Y] [Menu] → *Sort* → Select a condition

#### View Server Mail Information

> *Retrieve Mail List* → Highlight a message → [Y] [Menu] →  
*Mail Information*

#### View Server Mail Memory


> *Server Mail Memory*

# Organizing/Using Messages

## Checking Messages in Messaging Folders


- At time of purchase, information message is provided for your convenience (Transmission fee does not apply).

### 1 → Incoming Mail, Drafts, Sent/Unsent

- **NEW** appears for unread messages in Incoming Mail folder.
- **?** appears for draft or unsent messages in Drafts or Sent/Unsent folder.
- In Incoming Mail or Sent/Unsent folder, select a folder then message.
- Messaging Folders:  P.14-3



### 2 Select a message

- To toggle previous/next messages in Received/Sent Message window: 

#### Tip

- Functions Available in Incoming Mail or Sent/Unsent Folder ( P.14-20)
- Functions Available from Message Lists ( P.14-21)

## Auto-sort

Save messages that satisfy set conditions to designated folder automatically.

- Previously sent/received messages are not sorted.
- Sent/received messages are sorted by subject if both address and subject match sort condition applied to specific folder. Messages with no subject are sorted by address.
- Either address or mail subject can be specified per folder.

### 1 → Incoming Mail or Sent/Unsent

### 2 Highlight a folder → [Menu] → Auto-sort Setting

### 3 [Menu] → Select an item (See below)

Item	Operation/Description
<b>Add Address</b>	Sort messages by address > Search/enter address → Select/enter an address ● Save up to 10 addresses per folder.
<b>Add Subject</b>	Sort messages by mail subject > Enter a subject ● Save one subject per folder. ● SMS cannot be sorted by mail subject.
<b>Add Group</b>	Sort messages by Group in Phone Book > Select a group ● Save up to 10 groups per folder.
<b>Add Mail group</b>	Sort messages by Mail Group > Select a Mail Group ● Save up to 10 Mail Groups per folder.



### ■ Edit Sort Conditions


> After Step 2, highlight an item →  [Edit] → Edit address, subject or Mail Group

### ■ Change Auto-sort List View

Switch Name view or Address view for Auto-sort.


> After Step 2,  [Menu] → *Display the List* → *Name* or *Address*

### ■ Delete Auto-sort Settings

> After Step 2, (highlight an item →  [Menu] → *Delete* or *Delete All* (→ For *Delete All*, enter Phone Password) → *YES*

### ■ Re-sort Set Folders

> To re-sort messages in a specific folder: In Step 2, highlight a folder →  [Menu] → *Re-sort in This* → *YES*

> To re-sort messages in all folders: After Step 1 →  [Menu] → *Sort in All* → *YES*

## Filter Spam


Sort messages from unknown senders into Spam Folder without incoming notification. Use Safe List to receive messages from certain addresses/phone numbers and domains.

### Note

- Messages from secret Phone Book entries may be sorted into Spam Folder. Be careful when deleting messages from Spam Folder.


## Setting Spam Folder

<Default> OFF


- 1  → *Settings* → *Universal Settings* → *Anti-Spam Measures*
- 2 *Spam Filter* → Enter Phone Password
- 3 *ON* → *YES*

## Safe List

- Specify up to 20 addresses and domains (for example, @softbank.ne.jp) to receive messages from without sorting into Spam Folder.

1  → **Settings** → **Universal Settings** → **Anti-Spam Measures** → **Safe List**

### 2 Add Addresses

 [Menu] → **Add Address** → **Received Address** or **Direct Entry** → Select or enter an address

### Add Domains


 [Menu] → **Add Domain** → Enter a domain

3  [Finish]

### ■ Edit Saved Addresses

> After Step 1, highlight an address →  [Edit] → Edit address


### ■ Delete Addresses

 
> After Step 1, (highlight an address →)  [Menu] → **Delete** or **Delete All** (→ For **Delete All**, enter Phone Password) → **YES**

### Tip

- Report Spam (🔗 P.14-23)


## Replying to Messages

- 1 In Message window,  [Reply]
- **Re:** appears before Subject when replying to S! Mail. Received message text is quoted.

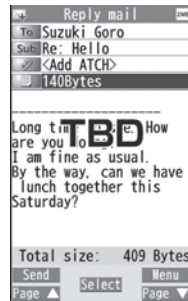

- 2 Complete message →  [Send]

### ■ Reply without Quoting

> In Step 1,  [Menu] → **Reply** → **Reply to Sender** or **Reply to All** → **Compose S! Mail** or **Compose SMS**

- Selectable items differ by mail type.

### Note

- Alternatively, reply from Message List window without opening messages (🔗 P.14-20)

### Tip

- Quote Original Message in Reply (🔗 P.18-21)

## Using Mail Groups

Save mail addresses by group. Messages can be sent to specified group of recipients.

- Save up to 20 recipients per group.
- Create up to 20 groups.

### Creating Mail Groups

Main Menu ► Phone ► Settings ► Mail Group

1 Select a group to save

2 Enter Mail Address Directly

Highlight <Not stored> →

✉ [Edit] → Enter mail address

Select Mail Address from Phone

 
Book or Sent/Received Address Logs

Highlight <Not stored> →

⌘ [Menu] → Look-up address

→ Select an item → Select an entry

- Repeat Step 2 to save mail addresses.

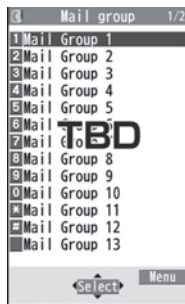

Mail Group List

### Change Group Names

> In Step 1, highlight a Mail Group → ⌘ [Menu] →  
*Edit group name* → Edit name

### Reset Group Names

> In Step 1, highlight a Mail Group → ⌘ [Menu] →  
*Reset group name* → YES

### Edit Mail Addresses

> After Step 1, highlight a mail address → ✉ [Edit] → Edit

### Delete Saved Mail Addresses





> After Step 1, (highlight a mail address →) ⌘ [Menu] →  
*Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) →  
YES

 




### Send a Message to All Group Members

> In Step 1, highlight a Mail Group → ✉ [✉]

- To select a Mail Group from S! Mail Composition window: 📄 P.14-8

## Sent/Received Address

- > Sent address logs: Press and hold  → Highlight an address →  [Menu] → Select an item (See below)
- > Received address logs: Press and hold  → Highlight an address →  [Menu] → Select an item (See below)

Item	Operation/Description
<b>Character size</b>	Toggle font sizes
<b>Add to Phone Book</b>	Save selected mail address/number to Phone Book (  From Step 2 on P.4-5)
<b>Add shortcut icon</b>	Create a shortcut (  P.1-25) Select a shortcut in Standby to open Composition window with selected mail address/number in Address field
<b>Compose message</b>	Create a message to selected address/phone number (  From Step 4 on P.14-4)
<b>Compose SMS</b>	Create SMS to selected phone number (  From Step 4 on P.14-7)
<b>Dialing</b>	> Select a dialing method → <i>Dial</i>
<b>Dialed calls<sup>1</sup></b>	Show Redial logs
<b>Received calls<sup>2</sup></b>	Show Incoming Call Logs
<b>Delete this</b>	> <b>YES</b>
<b>Delete selected</b>	> Check logs to be deleted →  [Finish] → <b>YES</b>
<b>Delete all</b>	> Enter Phone Password → <b>YES</b>


<sup>1</sup> Sent address logs only

<sup>2</sup> Received address logs only

## Organizing Messages

### ■ Functions Available in Incoming Mail or Sent/Unsent Folder

- >  → *Incoming Mail* or *Sent/Unsent* → (Highlight a folder) →  [Menu] → Select an item (See below)

Item	Operation/Description
<b>Add folder</b>	Add up to 10 user folders to each of Incoming Mail and Sent/Unsent folders > Enter folder name
<b>Edit folder name*</b>	> Edit folder name
<b>Auto-sort Setting*</b>	> Sort messages (  From Step 3 on P.14-16)
<b>Re-sort in This</b>	Re-sort messages in selected folder > <b>YES</b>
<b>Sort in All</b>	Re-sort messages in all folders > <b>YES</b>
<b>Sort folder*</b>	Sort user folders > Select a target location
<b>Mail Security</b>	Set to require Phone Password for opening a folder > Enter Phone Password ● To cancel: repeat the step
<b>Delete folder*</b>	> Enter Phone Password → <b>YES</b>

\* ユーザーフォルダ only

## ■ Functions Available from Message Lists

> → *Incoming Mail, Drafts* or *Sent/Unsent* (→ Select a folder) → Highlight a message → [Menu] → Select an item (See below)

Item	Operation/Description
<b>Edit</b> <sup>1 2</sup>	Edit message to send (S! Mail:  From Step 2 on P.14-4/SMS:  From Step 2 on P.14-7)
<b>Send</b> <sup>2</sup>	Send Drafts
<b>Retrieve</b> <sup>3</sup>	Retrieve complete S! Mail > <i>This one</i> or <i>Selected</i> (→ For <i>Selected</i> , check messages →  [Finish] → <b>YES</b> )
<b>Reply</b> <sup>3</sup>	Reply without quoting message > <i>Reply to Sender</i> or <i>Reply to All</i> → Select an item → Compose a message (S! Mail:  From Step 4 on P.14-4/SMS:  From Step 4 on P.14-7) ● Selectable items differ by mail type.
<b>Reply with Quote</b> <sup>3</sup>	Quote received message to reply > <i>Reply to Sender</i> or <i>Reply to All</i> → Select an item → Compose a message (S! Mail:  From Step 4 on P.14-4/SMS:  From Step 4 on P.14-7) ● Selectable items differ by mail type.

Item	Operation/Description
<b>Forward</b> <sup>3</sup>	> <i>Forward</i> or <i>Fwd Server Mail</i> → Select Address field → Search/enter address → Select an address or enter directly →  [Send] ● Forward Server Mail ( P.14-15) ● When forwarding S! Mail, <b>Fw:</b> appears before Subject. Dotted line appears in the first line of Text field. ● Attachments are also forwarded (Messages with copy protected attachments may not be forwardable.).
<b>Dial</b>	> Select an item → Make a call/compose a message/add to Phone Book
<b>Add Address</b> <sup>1 3</sup>	Save addresses to Phone Book > Select phone number or mail address → <b>YES</b> ( From Step 2 on P.4-5)
<b>Protect/Unprotect</b> <sup>3</sup>	Protect received/sent messages > <i>This one</i> or <i>Selected</i> (→ For <i>Selected</i> , check messages →  [Finish]) ● To unprotect, repeat the step. ● SMS saved in USIM Card cannot be deleted.
<b>Unread/Read</b> <sup>3</sup>	Switch status to Unread/Read
<b>Move</b> <sup>1 3</sup>	Move messages to specific folders > <i>Move This</i> or <i>Move Selected</i> (→ For <i>Move Selected</i> , check messages →  [Finish] → <b>YES</b> ) → Select a folder ● SMS saved in USIM Card cannot be moved.

Item	Operation/Description
<b>Delete</b>	<ul style="list-style-type: none"> <li>&gt; Select an item → Operate selected item</li> <li>● If messages are received while selecting multiple messages, message deletion may fail.</li> </ul>
<b>Confirm Delivery<sup>1</sup></b>	View Delivery report
<b>Send Ir data</b>	(☞ P.11-3)
<b>IC Transmission</b>	(☞ P.11-5)
<b>Copy to microSD</b>	Copy messages to microSD Card > <b>YES</b>
<b>Copy to USIM/ Copy to Phone<sup>3</sup></b>	Copy SMS to USIM Card/handset > <b>YES</b>
<b>Move to USIM/Move to Phone<sup>3</sup></b>	Move SMS to USIM Card/handset > <b>YES</b>
<b>Sort</b>	Change display order > Select a display order
<b>Mail Information</b>	View detailed information (Subject, From, To, etc.)
<b>Mail history<sup>1,3</sup></b>	Show up to 1000 sent/received mail records > Select a sender/recipient address <ul style="list-style-type: none"> <li>● ☞ or ☞ appears.</li> <li>● Select a record to show Message window. (☞) to return to previous window.</li> </ul>

<sup>1</sup> Sent messages only

<sup>2</sup> Drafts only

<sup>3</sup> Received messages only

## Using Messages

### Functions Available in Received/Sent Message Window

> In Message window, (☞)[Menu] → Select an item (See below)

Item	Operation/Description
<b>Retrieve<sup>1</sup></b>	Retrieve complete S! Mail
<b>Edit<sup>2</sup></b>	Edit message to send (S! Mail: ☞ From Step 2 on P.14-4/SMS: ☞ From Step 2 on P.14-7)
<b>Reply<sup>1</sup></b>	Reply without quoting message > <b>Reply to Sender</b> or <b>Reply to All</b> → Select an item → Compose a message (S! Mail: ☞ From Step 4 on P.14-4/SMS: ☞ From Step 4 on P.14-7) ● Selectable items differ by mail type.
<b>Reply with Quote<sup>1</sup></b>	Quote received message to reply > <b>Reply to Sender</b> or <b>Reply to All</b> → Select an item → Compose a message (S! Mail: ☞ From Step 4 on P.14-4/SMS: ☞ From Step 4 on P.14-7) ● Selectable items differ by mail type.
<b>Forward<sup>1</sup></b>	> <b>Forward</b> or <b>Fwd Server Mail</b> ● Forward Server Mail (☞ P.14-15)
<b>Dial</b>	> Select an item → Make a call/compose a message/add to Phone Book
<b>Add Address</b>	Save addresses to Phone Book > Select phone number or mail address → <b>YES</b> (☞ From Step 2 on P.4-5)

Item	Operation/Description
<b>Add to Phone Book</b>	Save highlighted phone number/mail address to Phone Book > <b>YES</b> (☞ From Step 2 on P.4-5)
<b>Attached files</b>	Show attached files
<b>Save Templates</b>	Save edited templates > <b>YES</b>
<b>Add Shortcut Icon</b>	Create a shortcut (☞ P.1-25) Select a shortcut in Standby to open Composition window with selected mail address/number in Address field
<b>Copy</b>	Copy address, subject or text Select an item → Copy (☞ After Step 2 on P.3-10)
<b>Look up in dict.</b>	Look up a word in dictionary > Move cursor before/after text →  [Start] →  to highlight target area →  [End] → Read disclaimer → <b>OK</b> ● Dictionary operations (☞ P.13-13)
<b>Font Size</b>	> Select a size
<b>Scroll Unit</b>	Change scroll unit > Select an item
<b>Charset Conversion<sup>1</sup></b>	Convert characters when not properly shown > Select an item
<b>Delete</b>	> Select an item → Operate selected item
<b>Confirm Delivery<sup>2</sup></b>	View Delivery report
<b>Mail Information</b>	View detailed information (Subject, From, To, etc.)
<b>Send Ir data</b>	(☞ P.11-3)
<b>IC Transmission</b>	(☞ P.11-5)

Item	Operation/Description
<b>Copy to microSD</b>	Copy messages to microSD Card > <b>YES</b>
<b>Copy to USIM or Copy to Phone<sup>1</sup></b>	Copy SMS to USIM Card/handset > <b>YES</b>
<b>Move to USIM or Move to Phone<sup>1</sup></b>	Move SMS to USIM Card/handset > <b>YES</b>
<b>Report Spam<sup>1</sup></b>	Report received mail as Spam >  [Send] ● Change destination to report to (☞ P.18-21).
<b>Mail history</b>	Show up to 1000 sent/received mail records > Select a sender/recipient address ●  or  appears. ● Select a record to show Message window. (☞) to return to previous window.

<sup>1</sup> Received Message window only

<sup>2</sup> Sent Message window only

## PC Mail

Send/receive messages via PC mail account. Set PC mail account in advance.

- Set Yahoo! Mail address: ☞ P.14-25

### Notes

- Receiving PC Mail for the first time after setting PC mail account may incur high packet transmission fees.
- Using auto-receive settings may incur high packet transmission fees. Be careful when using handset abroad.
- Checking for new messages may slow down other functions.
- Checking for new messages incurs packet transmission fees even when no new messages are received.
- Single-byte katakana and pictographs are not supported in PC Mail.

### Using S! Mail/SMS with PC Mail

S! Mail/SMS operations may change after PC mail account setup.

 
Example:

- To create S! Mail: Press and hold ☑ → **S! Mail**
- To attach files to S! Mail: Highlight a file → **Attach to message** → **S! Mail**
- To view received messages: ☑ → **Incoming Mail** → **S! Mail/SMS** → Select a folder → Select a message

## Messaging Folders

PC Mail folders are added in Incoming Mail and Sent/Unsent folders once account setup is complete.

- Create up to three PC Mail folders.
- PC Mail is not sorted as Spam Mail.

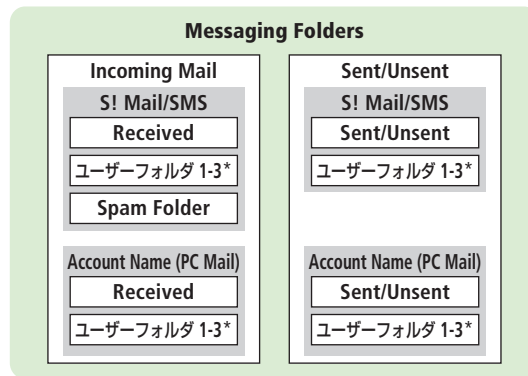

\* Add up to 10 ユーザーフォルダ (user folders): ☞ P.14-20

### Note

- Functions available in S! Mail/SMS (Auto-sort Setting, Mail Security, etc.) are also available in PC Mail (Some unavailable functions do not appear in menu).



## PC Mail Account Setup

### Set up accounts to use PC Mail.

- Set up to three PC mail accounts.
- Check ISP information in advance.
- PC Mail services may not be available depending on services, settings, contract details for PC mail account.
- **Set Quick Yahoo Mail** is available for setting your Yahoo! account.

1 [Envelope] → **Settings** → **PC Mail Settings** → **Account Settings**

2 <Not Recorded> → Select an item (See below)

Item	Operation/Description
Account Name	> Enter an account name
Incoming Options	> Select an item → Enter/select an item <ul style="list-style-type: none"><li>● <b>User Name, Password</b> and <b>Receiving Server</b> are required.</li></ul>
Sending Options	> Select an item → Enter/select an item <ul style="list-style-type: none"><li>● <b>Mail Address</b> and <b>Sender Server</b> are required.</li></ul>

- To confirm settings: In Incoming Options/Sending Options window, [Confirm] → [Next]
- After information is entered in Incoming Options/Sending Options, [Next] to return to Account Settings window.

3 [Envelope][Finish] → **OK**

- To retrieve new messages immediately, select **YES**

### Quick Yahoo! Mail Address Setup

> After Step 1, **Set Quick Yahoo Mail** → **YES** or **NO**

- Follow onscreen instructions.

### Set Default Account

> After Step 1, highlight an account → [Menu] → **Default account**

- ★ appears for selected account.

### Delete Account

> After Step 1, highlight an account → [Menu] → **Delete account**

→ Enter Phone Password → **YES**

### Tip

- Reset All Incoming Message Logs ● Delete All Server Mail (P.14-26)

## Sending PC Mail

 
- Default account (Above) is automatically selected.

1 Press and hold [Envelope] → **PC Mail**

Account field

PC Mail Composition window appears.

2 Compose a message and send (After Step 2 on P.14-4)

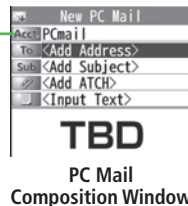

### Change Account

> After Step 1, select Account field → Select an account



### Note

- Alternatively, open PC Mail Composition window from [Envelope] → **Create New PC Mail**

## Retrieving/Viewing PC Mail

- If auto-retrieve setting is on, open new PC Mail from Event Indicator:  
☞ P.14-11

### PC Mail Indicators

-  Unread/read PC Mail
-  Unread/read PC Mail (notice only)

#### Note

- When Center sends initial portion of PC Mail, manually retrieve the complete message.

## Retrieving PC Mail by Account

- 1  → **Retrieve New** → Select an account

## Viewing Previously Retrieved PC Mail

- 1  → **Incoming Mail** → Select an account →  
Select a message

### Tip


- Settings** ● Disable Auto-retrieval for New Messages ● Set Auto-retrieval Interval for New Messages ● Automatically Retrieve New Messages while Abroad ● Disable Auto-retrieval between Set Time Period (☞ P.18-23)

## PC Mail Functions


### Attach Image/Music Files

- > Highlight a file →  [Menu] → **Attach to message** → **PC Mail** → Compose a message and send (☞ After Step 2 on P.14-4)

### Reset All Incoming Message Logs

- >  → **Settings** → **PC Mail Settings** → **Account Settings** → Select an account → **Server Maintenance** → **Reset Mail Log** → **YES**

### Delete All Server Mail

- >  → **Settings** → **PC Mail Settings** → **Account Settings** → Select an account → **Server Maintenance** → **Delete All** → Enter Phone Password → **YES**

#### Note

- If over 10001 messages are on your PC mail server, retrieving/deleting messages from that PC Mail account is disabled.

# Internet

<b>Getting Started .....</b>	<b>15-2</b>
<b>Using Yahoo! Keitai .....</b>	<b>15-3</b>
Opening Yahoo! Keitai Menu .....	15-3
Entering URL .....	15-4
Using Access Histories .....	15-4
Exiting Mobile Internet .....	15-4
<b>Using PC Site Browser .....</b>	<b>15-5</b>
Opening Menu .....	15-5
Entering URL .....	15-5
Using Access Histories .....	15-5
Exiting Internet .....	15-5
<b>Basic Operations.....</b>	<b>15-6</b>
Using Cursor .....	15-6
Text Entry & Item Selection .....	15-7
<b>Using Information .....</b>	<b>15-8</b>
Bookmarks & Saved Pages .....	15-8
Managing Bookmarks & Saved Pages .....	15-9
Bookmarks/Saved Pages Functions.....	15-10
Downloading Image/Sound Files .....	15-11
Using Number, Address or URL.....	15-11
Streaming .....	15-12
<b>Option Menu Items.....</b>	<b>15-13</b>

## Getting Started

Access Yahoo! Keitai Mobile Internet and PC sites.

"Yahoo! Keitai" is both a SoftBank Mobile Internet service and the SoftBank Mobile Internet portal.

View PC Internet websites via PC Site Browser.

### Internet

#### Yahoo! Keitai

- View Mobile Internet Websites (☞ P.15-3)
- Download image/sound files, etc. (☞ P.15-11)
- Movies/Music Streaming (☞ P.15-12)
- Register SI Quick News (☞ P.8-4)

#### PC Sites

- View PC Sites (☞ P.15-5)
- Download still images (☞ P.15-11)

- Separate subscription is required for Network access.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

### Connecting Via Wi-Fi

Access the Internet via Wi-Fi. Once connection setup is complete, handset automatically connects to that Wi-Fi network when within range.

- Wi-Fi: ☞ P.11-11
- Switch to 3G from Wi-Fi: ☞ P.15-13

#### Note

- Video Calls cannot be received while connecting to the Network.

### Cache Memory

Retrieved information is temporarily saved in Cache Memory.

When full, oldest is deleted first.

- Previously viewed pages may load from Cache Memory. To view the latest, update information (☞ P.15-13).
- Cached items with expiry dates are deleted upon expiry.
- Information remains even after handset is disconnected from the Network or handset power is turned off.

#### Tip

#### Settings

- Clear Cache ● Delete Cookies (☞ P.18-24)
- Initialize Browser (☞ P.18-25)

## SSL/TLS

SSL (Secure Sockets Layer) and TLS (Transport Layer Security) are encryption protocols for secure Internet transmissions of important/sensitive information such as credit card numbers.

Server certificates are saved on handset (☞ P.18-25).

### Notes

When a security notice appears, subscribers must decide for themselves whether or not to open the page. SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co.,Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust Systems Co., Ltd. cannot be held liable for any damages associated with the use of SSL and TLS.

### Tip

**Settings** ● Security Settings (☞ P.18-25)

## Using Yahoo! Keitai

### Opening Yahoo! Keitai Menu

Select Yahoo! Keitai Menu items to access websites.

Main Menu ► Yahoo!

- 1 Open Top Menu  
*Yahoo! Keitai*
- 2 Open Menu List  
*Menu List*

Select a menu item

- Repeat Step 2 as required.
- Basic Operations: ☞ P.15-6

### Note

- Shortcut: In Standby, press 

## Entering URL

Enter URLs (addresses beginning with "http://" or "https://") directly to access websites, or open previously viewed pages using URL histories.

- Up to 20 URL histories are stored.

### Main Menu ► Yahoo! ► Enter URL

 
#### 1 Enter URL Directly

**Direct Entry** → Enter URL

#### Use URL History

**URL History List** →

Select a URL



**TBD**  
URL History List  
Window

#### ■ Delete URL Histories

> In Step 1, **URL History List** → (Highlight a URL →) [Menu] → **Delete** or **Delete All** → YES

## Using Access Histories

Open previously viewed pages using access histories.

- Up to 100 access histories are stored (The number of savable histories varies depending on data amount.).

### Main Menu ► Yahoo! ► History

#### 1 Select a history



History Window

#### ■ Delete Access Histories

> In Step 1, (highlight a history →) [Menu] → **Delete** or **Delete All** → YES (→ For **Delete All**, enter Phone Password)

#### ■ Show Access History URLs

> In Step 1, highlight a history → [Menu] → **Display URL**

## Exiting Mobile Internet



#### 1 [End Call] → YES

#### Note

- Closing handset does not affect active browser.

## Using PC Site Browser

### View PC websites using PC Site Browser.

- When PC Site Browser is active,  appears.
- Some pages may not be viewable.
- Viewing PC websites may incur high charges.
- Opening PC Site Browser enables Touchpad. Touchpad Indicators illuminate (Touchpad operations:  P.1-23, P.1-24).

### Opening Menu

Main Menu ► Yahoo! ► PC Site Browser

#### 1 *Homepage*



Confirmation appears. Select **NO**.

- To show confirmation each time: **YES**

#### 2 Select a menu item



Repeat Step 2 as required.

#### Note

- Alternatively, press  in Yahoo! Keitai Menu to switch to PC Site Browser Menu. To return to Yahoo! Keitai Menu, press  again.

#### Tip


#### Settings

- Set Touchpad to Activate for Web Browser/Mobile Widget ( P.18-7)
- Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai ( P.18-24)

### Entering URL

Follow same operation accessed from Yahoo! Keitai.

 
Main Menu ► Yahoo! ► PC Site Browser ► Enter URL

- Follow Step 1 of same operation accessed from Yahoo! Keitai ( P.15-4).

### Using Access Histories

Follow same operation accessed from Yahoo! Keitai.

Main Menu ► Yahoo! ► PC Site Browser ► History

- Follow Step 1 of same operation accessed from Yahoo! Keitai ( P.15-4).

### Exiting Internet

1  → **YES**











#### Note

- Closing handset does not affect active browser.

## Basic Operations

### Using Cursor

- Operation descriptions are based on Portrait View.

<b>Move Cursor</b>	Use cursor to select underlined menu items.  to move right  to move left  to move to previous line  to move to next line
<b>Scroll Pages</b>	Scroll bar appears on right side or at bottom of Display when page content continues beyond view.  scroll up/down  scroll left/right  scroll page up by a screenful  scroll page down by a screenful <ul style="list-style-type: none"> <li>● To scroll continuously, press and hold above keys.</li> </ul>
<b>Move to previous page/ next page</b>	Previously viewed pages are temporarily saved in Cache Memory (☞ P.15-2).  <b>[Back]</b> : Return to previous page  <b>[Menu]</b> → <b>Forward</b> : View next page <ul style="list-style-type: none"> <li>● Some web pages may not appear after performing the steps above.</li> </ul>

- Touchpad operations (☞ P.1-23, P.1-24)

### When Authentication is Required

Some pages require user authentication for access.  
If required, enter user ID or password.

#### Note

- While page is open, press and hold  to switch to Digital TV.

#### Tip

#### Settings

 
- Font Size
  - Scroll Unit
  - Images Off
  - Sound Off
  - Delete
- User ID or Password Entered when Authentication is Required  
(☞ P.18-24)



## Text Entry & Item Selection

Enter text or select items to send information.

Example:

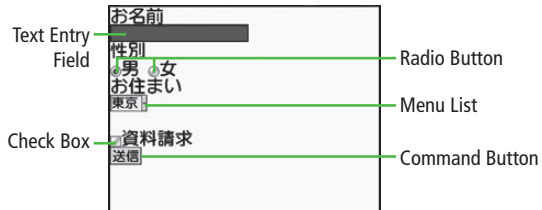

- Actual web pages may differ in appearance.

<b>Text Entry Field</b>	Highlight field → <input type="text"/> → Enter text → <input type="text"/>
<b>Menu List</b>	Highlight field → <input type="text"/> Menu list appears. Highlight an item → <input type="text"/> Selected items are highlighted.
<b>Radio Button</b>	Highlight <input type="radio"/> → <input checked="" type="radio"/> When selected, <input checked="" type="radio"/> appears.
<b>Check Box</b>	Highlight <input type="checkbox"/> → <input checked="" type="checkbox"/> When selected, <input checked="" type="checkbox"/> appears. Press <input checked="" type="checkbox"/> again to cancel selection.
<b>Command Button</b>	Highlight the button → <input type="button"/> Corresponding command is executed.

## Using Information


### Bookmarks & Saved Pages

Bookmark websites or save page content to Saved Pages.

- Some copy protected materials cannot be saved.

Bookmarks	Save links to websites. Handset connects to the Network to open the link.
Saved Pages	Save page content. Handset opens saved pages without connecting to the Network.

### Saving Web Pages

 
 
- 1 Open a web page →  [Menu] → **Bookmarks** or **Saved Pages** → **Add**
- 2 Select title → Edit title
- 3 **OK** → **OK**

## Viewing Bookmarks & Saved Pages

Main Menu ► Yahoo! (► PC Site Browser)

- 1 **Bookmarks** or **Saved Pages** → Select an item


Example: Yahoo! Keitai Browser

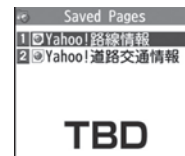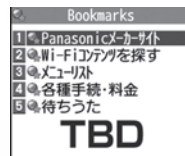

Bookmarks List Window

Saved Pages List Window

### Open Bookmarks/Saved Pages in Web Page

- Open a web page →  [Menu] → **Bookmarks** or **Saved Pages** → **View List**

#### Note

- Create folders in Bookmarks/Saved Pages List to organize Bookmarks/Saved Pages (☞ P.15-9).

#### Tip

- Send Bookmarks via Infrared (☞ P.11-3)
- Send Bookmarks via IC Transmission (☞ P.11-5)
- Add Bookmark Shortcuts to Standby ● Save URLs to Bookmarks
- Send Bookmark URLs (☞ P.15-10)

## Managing Bookmarks & Saved Pages

Follow the steps below to open Bookmarks or Saved Pages list:

### ■ Yahoo! Keitai

Main Menu ► Yahoo! ► Bookmarks or Saved Pages

### ■ PC Site Browser

Main Menu ► Yahoo! ► PC Site Browser  
► Bookmarks or Saved Pages

#### Note

- When a different USIM Card is inserted, Saved Pages do not appear or title name cannot be changed.

## Creating New Bookmarks/Saved Pages Folders

- Folders cannot be created within existing folders.

### 1 Bookmarks

In Bookmarks list window, [Y] [Menu] →  
**Create New** → **Folders** → Enter title

### Saved Pages

In Saved Pages list window, [Y] [Menu] →  
**New Folder** → Enter title

### ■ Move Bookmarks/Saved Pages to Folder

- ① Before moving to folders, set **Sort** to **Saved/Used Order** or **Saved/Moved Order** (☞ P.15-10)
- ② In Bookmarks/Saved Pages list window (☞ P.15-8), highlight a bookmark/saved page → [Y] [Menu] → **Move to** → Select a folder → Select a destination

### ■ Edit Folder Title

- > In Bookmarks/Saved Pages list window (☞ P.15-8), highlight a folder → [Y] [Menu] → **Edit** → Edit folder title

## Editing Bookmark Titles/URLs

1 In Bookmarks list window, highlight a bookmark → [Y] [Menu] → **Edit**

2 Edit title/URL

## Renaming Saved Pages

1 In Saved Pages list window, highlight a saved page → [Y] [Menu] → **Edit**

2 Edit title

#### Tip

- Delete Bookmarks/Saved Pages/Folders
- Display Bookmark/Saved Page URLs
- Change Bookmarks/Saved Pages/Folders Display Order
- Sort Bookmarks/Saved Pages/Folders (☞ P.15-10)


## Bookmarks/Saved Pages Functions

**From** ► **Main Menu** ► **Yahoo!** (► **PC Site Browser**)  
► **Bookmarks** or **Saved Pages**

### ■ Add Bookmark Shortcuts to Standby





> Highlight a bookmark →  [Menu] → *Add shortcut icon* → **YES**

### ■ Save URLs to Bookmarks

>  [Menu] → *Create New* → *Bookmarks* → Enter a title/URL → **OK**

### ■ Delete Bookmarks/Saved Pages/Folders

> Follow the steps below

Item	Operation/Description
Delete	> Highlight a bookmark, saved page or folder →  [Menu] → <i>Delete</i> → <b>YES</b>
Delete Selected Items	Select items to delete >  [Menu] → <i>Delete selected</i> → Check items to delete →  [Delete] → <b>YES</b>
Delete All	>  [Menu] → <i>Delete All</i> → <b>YES</b> → Enter Phone Password

### ■ Display Bookmark/Saved Page URLs

> Highlight a bookmark/saved page →  [Menu] → *Display URL*

### ■ Change Bookmarks/Saved Pages/Folders Display Order




> Highlight a bookmark/saved page/folder →  [Menu] → *Move to* →  to select a position

- Before changing order, set **Sort** ( Right) to **Saved/Used Order** or **Saved/Moved Order**.

### ■ Sort Bookmarks/Saved Pages/Folders

>  [Menu] → *Sort* → Select a condition

### ■ Send Bookmark URLs

> Highlight a bookmark →  [Menu] → *Send URL* → *S! Mail* or *SMS* → Create a message (S! Mail:  From Step 2 on P.14-4/SMS:  From Step 2 on P.14-7)

## Downloading Image/Sound Files

Save images, sounds, etc. to Data Folder or microSD Card.

- For PC Site Browser, only still images can be saved.


1 Open a web page →  [Menu] → **Select File**

2 Select a file

File details appear.

3 **Save** → **YES**

Available menu items vary by saved content.

- Save location is determined by **Save Settings** ( P.18-24).  
However, save location may change depending on situations. Check confirmation when download is complete.

### Note

- Do not remove/install microSD Card while saving files to it.
- Do not turn handset power off while downloading or saving files. Files may be damaged.
- Some copy protected files may not be saved.
- Videos selected from web pages play while being downloaded.
- Files 10 MB and larger are saved to microSD Card regardless of settings.


## Using Number, Address or URL

Use linked numbers, addresses or URLs to make calls, send messages, access websites, or save directly to Phone Book.

1 Open a web page containing phone numbers, mail addresses or URLs




2 **Phone Number**

Select a phone number → Select an item (See below)

Item	Operation/Description
Voice call	Make a Voice Call
Video call	Make a Video Call
Select image	Select outgoing image
Add to Phone Book	Save a number to Phone Book (  From Step 2 on P.4-5)

**E-mail Address**

Select an address → Select an item (See below)

Item	Operation/Description
Compose S! Mail	Create S! Mail (  From Step 4 on P.14-4)
Compose SMS	Create SMS (  From Step 4 on P.14-7)
Add to Phone Book	Save mail address to Phone Book (  From Step 2 on P.4-5)

**URL**

Select URL


 
Handset connects to the Network.

## Streaming











- Supported by compatible files on Yahoo! Keitai sites only.
- Streaming files cannot be saved.

### Main Menu ► Yahoo! ► Yahoo! Keitai

1 Open a web page → Select a file  
Streaming starts.

2  or  to exit

### Engaged Streaming Operations

Mute/Release Mute	  / 
Pause/Resume*	  / 
Volume	 / 
Set Playback Position*	 to start playback from specified point
Toggle Views	 ● Toggle: Portrait View → Landscape View (Fit to Display size) → Full-size Landscape View

\* Not available during playback for live events such as live sports programs

### Note

- Streaming requires a continuous Network connection. Network remains connected even during a pause (Transmission fees apply).
- Paused streams may stop after three minutes of inactivity.
- Pausing playback while streaming via Wi-Fi (handset closed) may end streaming after 10 seconds.
- When roaming abroad, streaming may be unavailable or not be performed properly.

### Incoming Voice Calls while Streaming

Incoming call pauses an active stream.

- Video Calls cannot be received while streaming.

## Option Menu Items

In Yahoo! Keitai, press **[Menu]** for these options:

- Some functions may not be available depending on web pages.

Item	Operation/Description
<b>Forward</b>	Go to next page (⇨ P.15-6)
<b>Bookmarks</b>	View Bookmarks list, add bookmarks, or add bookmark shortcuts to Standby
<b>Saved Pages</b>	View Saved Pages list or save page content to Saved Pages
<b>Text Copy</b>	Copy page text
<b>Reload Page</b>	Refresh page information
<b>Enter URL</b>	Enter URL directly or use URL History to access pages
<b>Select File</b>	View, play or save file to Data Folder (Downloading Image/Sound Files: ⇨ From Step 2 on P.15-11)
<b>Handy Functions</b>	<p><b>Switch PC Browser<sup>1</sup>/Switch Browser<sup>2</sup>:</b> Toggle Yahoo! Keitai/PC site</p> <p><b>Connect to Wi-Fi/Connect to 3G:</b> Toggle Wi-Fi/3G connection</p> <p><b>Internet Search:</b> Search text in Internet</p> <p><b>Look up in dict.:</b> Look up specified text in dictionary</p> <p><b>Search In Page:</b> Search text within page</p> <p><b>Jump in this page:</b> Jump to top/end of page</p> <p><b>Send URL:</b> Send URL via S! Mail/SMS</p> <p><b>History:</b> Open previously viewed pages</p> <p><b>Expand/Shrink<sup>2</sup>:</b> Zoom page in/out</p> <p><b>Set Display Range<sup>2</sup>:</b> Specify displayed area of page</p> <p><b>Flash(R) Menu:</b> Playback/pause Flash<sup>®</sup> files</p> <p><b>Properties:</b> View page details or server certificates for secure pages</p>

Item	Operation/Description
<b>Yahoo! Keitai/ Home Page<sup>2</sup></b>	View top menu
<b>Settings</b>	<p><b>Font Size:</b> Change font size</p> <p><b>Encoding:</b> Change encoding type</p> <p><b>Pointer:</b> Set Pointer<sup>2</sup></p>
<b>Switch screen<sup>2</sup></b>	Toggle between Small Screen and PC Screen
<b>Exit Browser</b>	Exit Browser

<sup>1</sup> Yahoo! Keitai only

<sup>2</sup> PC Site Browser only

Internet

**15**

15-14