

Special VCR Features (continued)

Weak Signal Display ON/OFF

When "ON" is selected, picture is displayed even when broadcast signal is weak or nonexistent.


1




Display MAIN MENU.

Press ACTION*.

2

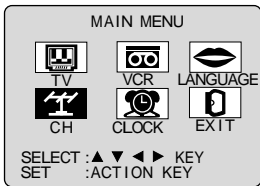


Display SET UP CH screen.

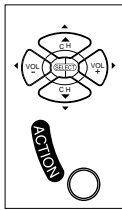


- 1) Press ▲▼◀▶ to select "CH."
- 2) Press ACTION to display.

3

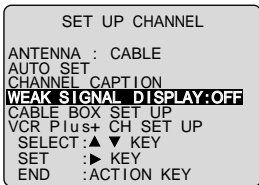

Select WEAK SIGNAL DISPLAY.

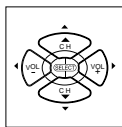

- 1) Press ▲▼ to select.
- 2) Press ▶ to set "ON" or "OFF."

Notes

- "ON" = Picture is displayed regardless of signal condition, and may not always be clearly visible.
- "OFF" = Screen turns solid blue when signal is absent or weak.
- If unit is connected to equipment which has blue back feature, selecting "ON" will have no effect on the other equipment.

4





Return to the normal screen.

Press ACTION twice.

VCR Lock

All operations are prohibited except Timer recording and tape eject. Useful for families with small children.

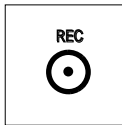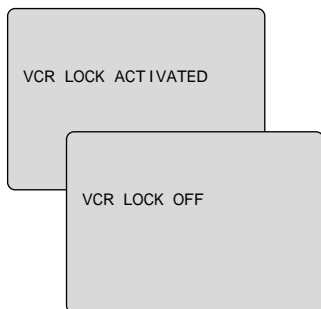


To turn "ON."

In stop mode, hold down REC on the unit without a cassette inserted for 7 seconds.

To turn "OFF."


Repeat above with or without cassette.

- VCR Lock is canceled automatically after about 24 hours if clock is set.

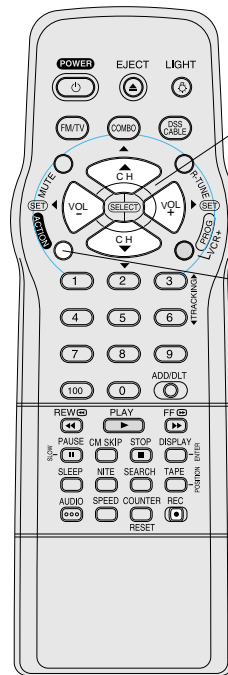

- 1 ACTION
- 2 SET
- 3 SELECT
- 4 ▲:CH UP
▼:CH DOWN
▶:VOL UP
◀:VOL DOWN

Model PV-C2060 unit is shown here.

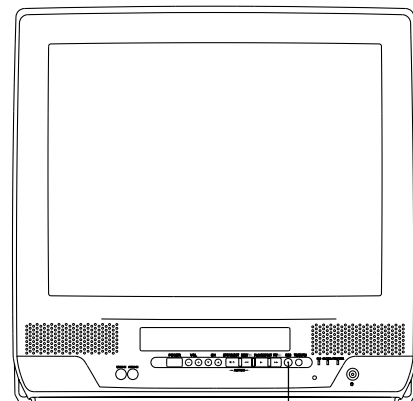


REC

Copy Your Tapes (Dubbing)


Important: if the remote control POWER, CH Up/Down, NUMBERED keys, ACTION, PROG/VCR+, DISPLAY, SEARCH, R-TUNE, FM/TV, or ADD/HLT button does not work when pressed, press COMBO button on the remote and try the button again.

Connections you'll need to make.

<Model PV-C2060 unit is shown here.>

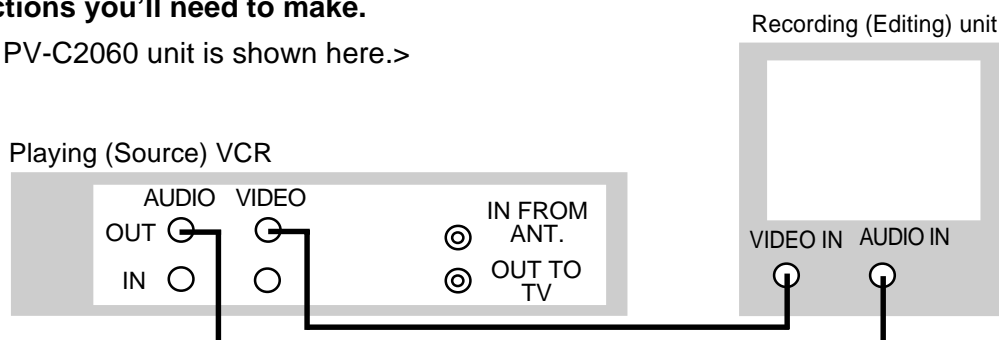

<Model PV-C2080 unit is shown here.>

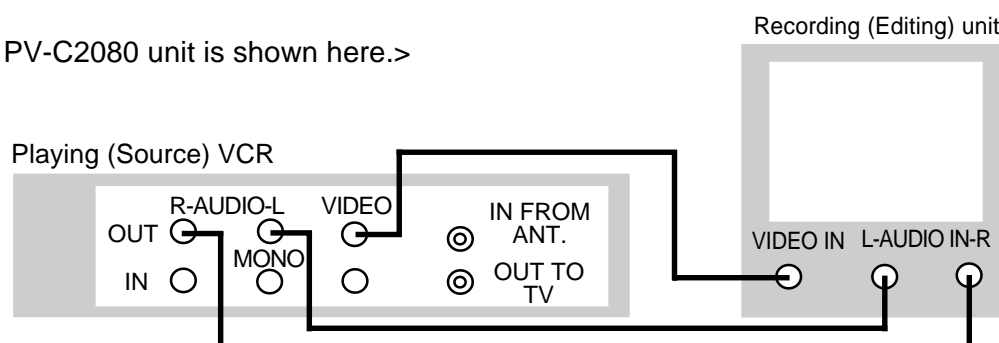

Playback (Source) VCR

Recording (Editing) unit

1 **Insert pre-recorded tape.**

Insert blank tape with record tab.
 • Dubbing tapes protected with Copy Guard will have poor quality results.

2 _____

Select "LINE" mode.
 See "Selecting Input Mode" section on page 13.

3 **Put in Standby mode.**
 Press PLAY then PAUSE at starting point.

Put in Standby mode.
 Press REC, then PAUSE/SLOW immediately.

4 **Start dubbing.**
 Press PLAY.

Start dubbing.
 Press PAUSE/SLOW.

5 **Stop dubbing.**
 Press STOP/EJECT.

Stop dubbing.
 Press STOP.

Caution


• Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.


Advanced Operation


FM Radio


FM Radio Setup

1  **Display FM radio mode.**
Press FM/TV* on the remote or TIMER/FM twice on the unit.

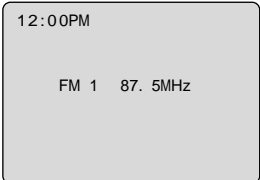
2  **Select the FM number.**
Press a NUMBERED key (1~9.)

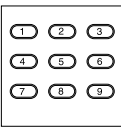

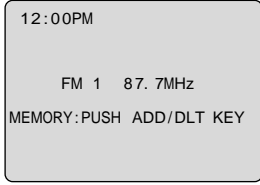3  **Set the radio station.**

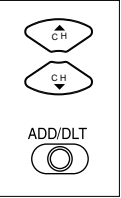

1) Press CH ▲▼ to select the desired radio station. (Each press changes frequency 200 kHz.)
2) Press ADD/HLT to set.

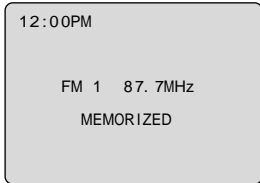

Quick Station Scan
Hold down CH ▲ or ▼ for a few seconds, then release to scan for FM stations in your area.
• To cancel, press CH ▲ or ▼ while in search mode.


To Make Corrections, select station with a NUMBERED key, then do step 3 again.


To exit FM mode, press FM/TV on the remote or TIMER/FM twice on the unit.

FM ANTENNA Setup

Make sure FM tuning is done correctly (See FM Radio Setup.)

a  **Display MAIN MENU.**
Press ACTION.

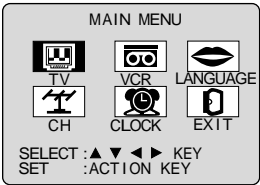b  **Display SET UP TV screen.**

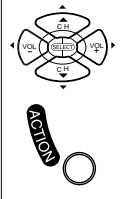


1) Press ▲▼◀▶ to select "TV."
2) Press ACTION to display.


FM Radio is ...

This unit has an FM radio with built-in antenna, 9 station preset, and a band range of 87.5 ~ 108.1 MHz. You can even set the On-Timer (page 20) to wake up to your favorite radio station.

Model PV-C2060 unit is shown here.

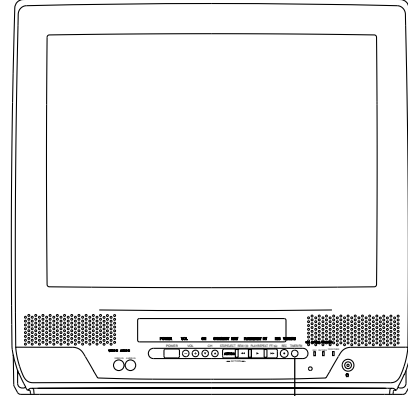


1 TIMER/FM

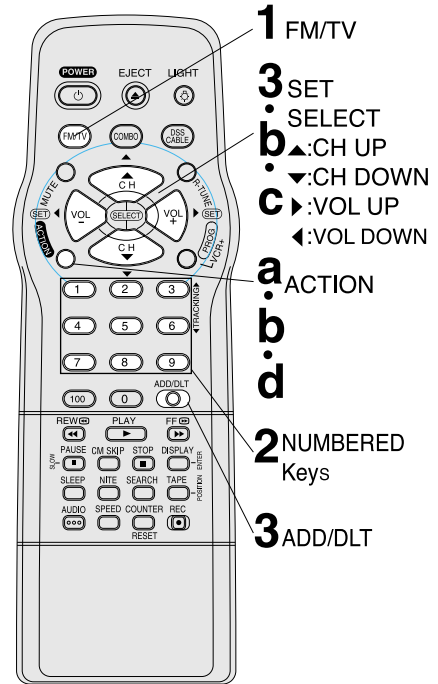


Continued on the next page...

*Important: if the remote control POWER, CH Up/Down, NUMBERED keys, ACTION, PROG/VCR+, DISPLAY, SEARCH, R-TUNE, FM/TV, or ADD/HLT button does not work when pressed, press COMBO button on the remote and try the button again.

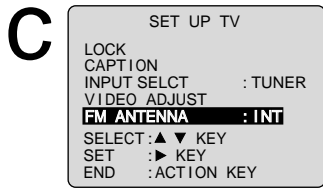


<For Model PV-C2060 only>

Select FM ANTENNA.

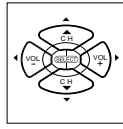


- 1) Press ▲▼ to select.
- 2) Press ► to select "INT (INTERNAL)" or "EXT (EXTERNAL)" whichever sounds the best.

 - For cable TV users → "INT"
- For antenna users → "EXT"




End setup.
Press ACTION twice to exit.

Model PV-C2060 unit is shown here.

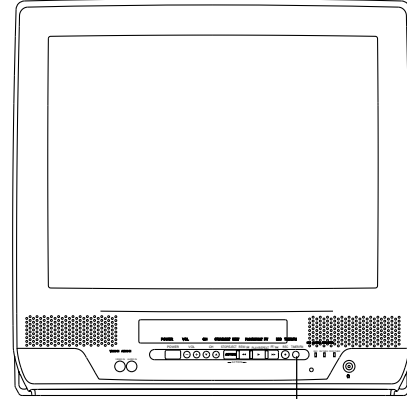


A TIMER/FM

 Using FM Radio




Display FM radio mode.

Press FM/TV on the remote or TIMER/FM twice on the unit.

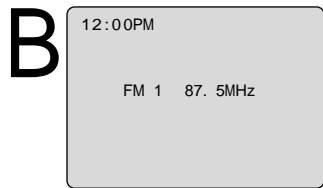

Select the FM number.

 


Press a NUMBERED key (1~9) to select a preset station (see steps 2 and 3 on the previous page.)

To cancel, press FM/TV on the remote or TIMER/FM twice on the unit.

Notes

Once stations are set, the selected station and current time are displayed when FM Radio mode is entered. To remove time, press DISPLAY. If DISPLAY is pressed, the unit status screen appears.


To select Audio Mode for FM Radio

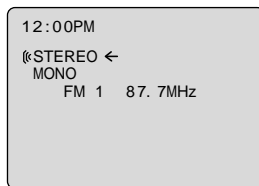

Select "STEREO" or "MONO."



Press AUDIO repeatedly in FM Radio mode.

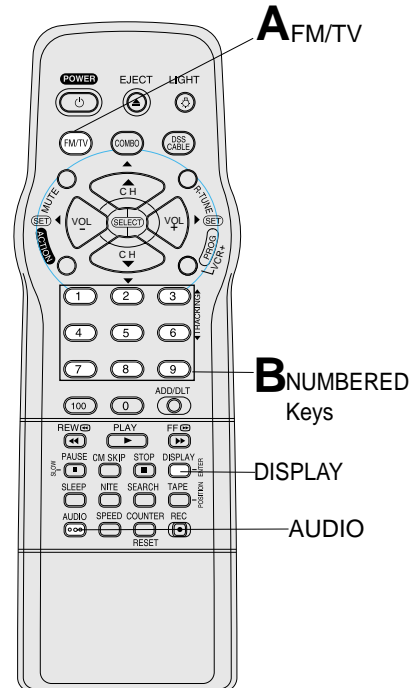

Advanced Operation

Notes

- FM radio cannot be recorded on a Video cassette.
- You may get better reception by repositioning the unit.
- You cannot select FM Radio mode during playback or record, or while a blue back (PROG, ACTION, MENU) screen is displayed.


FM Transmitter

FM Transmitter is ...


a feature whereby this unit's sound signal can be heard on your FM Radio. First, tune your radio to a frequency (93 ~ 97, 99 ~ 103 MHz) that is not being broadcast on by a radio station. Then, set this unit to the same carry frequency (see below.) Now, fine-tune your radio so the sound comes in clearly.

FM Transmitter Carry Frequency Setup


1  **Display MAIN MENU.**
Press ACTION*.

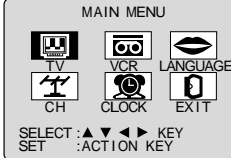2  **Display SET UP TV screen.**

- 1) Press $\blacktriangle\blacktriangleright\blacktriangleleft$ to select "TV".
- 2) Press ACTION to display.

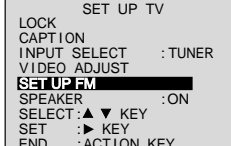
3  **Select SET UP FM.**

- 1) Press $\blacktriangle\blacktriangledown$ to select.
- 2) Press \blacktriangleright to display.

4  **Select SET UP FM TRANSMITTER.**

- 1) Press $\blacktriangle\blacktriangledown$ to select.
- 2) Press \blacktriangleright to display.


• When step 4 is done, FM TRANSMITTER is automatically set to "ON."

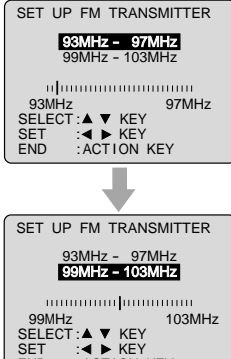5  **Set the Carry Frequency.**

- 1) Press $\blacktriangle\blacktriangledown$ to select the desired frequency range. (93-97 or 99-103MHz)
- 2) Press $\blacktriangleleft\blacktriangleright$ to select the Carry Frequency.
- 3) Press ACTION to set. (Then screen in step 4 is redisplayed.)


• The selector bar returns to center position when frequency range is switched.

To Make Corrections, select frequency with CH $\blacktriangle\blacktriangledown\blacktriangleleft\blacktriangleright$, then repeat step 5.

6  **End setup**
Press ACTION three times.


36

<For Model PV-C2080 only>

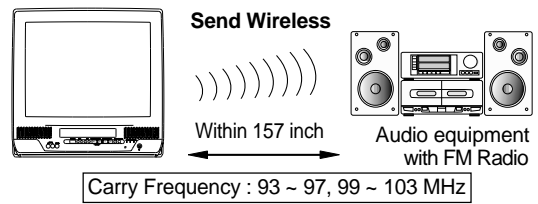


FM Transmitter ON/OFF

1 Do "FM Transmitter Carry Frequency" steps 1~3. (See left.)


2  **Select SET UP FM TRANSMITTER.**

- 1) Press $\blacktriangle\blacktriangledown$ to select.
- 2) Press \blacktriangleright to set "ON" or "OFF."

3  **End setup**
Press ACTION three times.

Speaker with FM Transmitter ON/OFF

1 Do "FM Transmitter Carry Frequency" steps 1~3. (See left.)

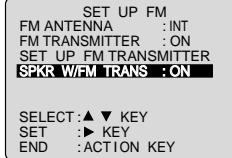2  **Select Speaker with Transmitter.**


- 1) Press $\blacktriangle\blacktriangledown$ to select.
- 2) Press \blacktriangleright to set "ON" or "OFF."

If you select...

- "ON" → Internal Speaker ON with Transmitter
- "OFF" → Internal Speaker MUTE with Transmitter

Notes

- This operation has effect only when "FM TRANSMITTER : ON" (see above.)
- If "SPKR W/FM TRANS : OFF", the MUTE and VOLUME key will not function.

3  **End setup**
Press ACTION three times.

Notes

- The Carry Frequency shown by the selector bar is a guide only. Please listen to the sound and adjust accordingly.
- The unit will transmit sound when unit power is on and "FM TRANSMITTER : ON" is selected.
- When unit power is turned off, "FM TRANSMITTER" returns to "OFF" setting.
- Please put your FM Radio within 157 inch of the unit.
- Interference occurs when you select CATV channels 95, 96, or 97, while FM Transmitter is operating.
- FM Transmitter will not work in FM Radio Mode.

For assistance, call 1-800-211-PANA(7262)

Picture Adjustment

Important: if the remote control POWER, CH Up/Down, NUMBERED keys, ACTION, PROG/VCR+, DISPLAY, SEARCH, R-TUNE, FM/TV, or ADD/HLT button does not work when pressed, press COMBO button on the remote and try the button again.


1




Display MAIN MENU.

Press ACTION.

2

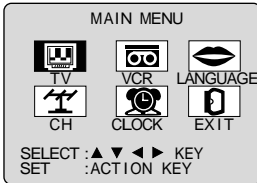


Display SET UP TV screen.

 


- 1) Press ▲▼◀▶ to select "TV."
- 2) Press ACTION to display.

3

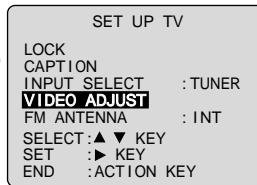


Display VIDEO ADJUST screen.

 


- 1) Press ▲▼ to select.
- 2) Press ▶ to display.

<For Model PV-C2060 only>


4

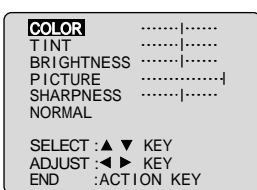

Adjust desired item.

 

- 1) Press ▲▼ to select an item. (See below right.)
- 2) Press ◀▶ to adjust.

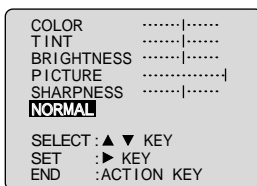

To Reset Picture Controls.


Press ▲▼ and ▶ to select and set "NORMAL."
All controls return to their factory settings.

5



End setup.

Press ACTION three times to exit.

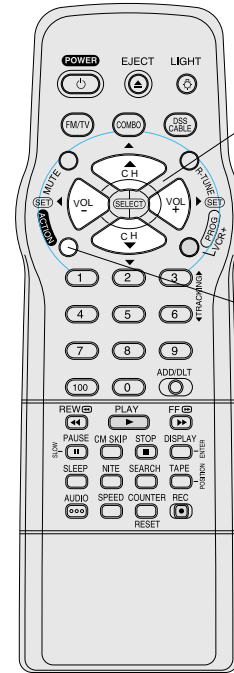

- 2 SET
- 3 SELECT
- 4 ▲:CH UP
- ▼:CH DOWN
- ▶:VOL UP
- ◀:VOL DOWN
- 1 ACTION
- 2
- 5

Advanced Operation

Picture Adjustment

- **COLOR Control**
Adjust color intensity.
- **TINT Control**
Adjust for natural flesh tones.
- **BRIGHTNESS Control**
Adjust picture brightness.
- **PICTURE Control**
Adjust picture intensity by adjusting both contrast and color level in the proper balance.
- **SHARPNESS Control**
Adjust picture sharpness.