

AT1601 User Manual

Panasonic

Since this device is always used with vehicle, it is not sold to general end users separately. Therefore there is no user manual of this device by alone. The following statements must be described on the User manual of the vehicle.

FCC ID: ACJ932AT1601

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE).

Product Description

For radio broadcast reception and Bluetooth hands free phone system or audio.

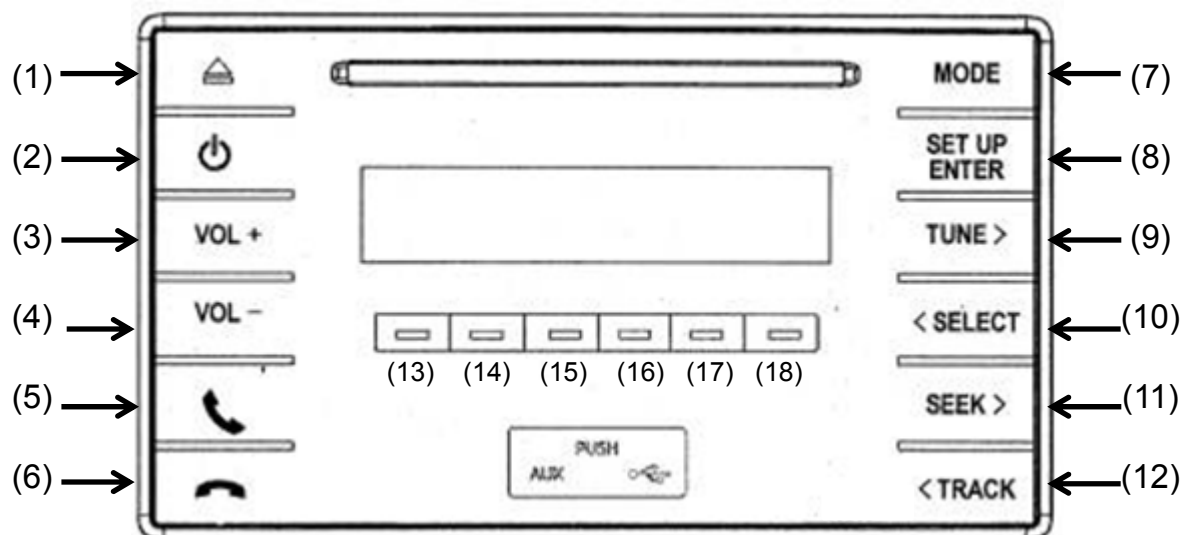

- (1) CD Eject (Push)
- (2) Power ON/OFF (Push)
- (3)(4) Volume Control (Push)
- (5) Off Hook in Hands Free mode (Push)
- (6) On Hook in Hands Free mode (Push)
- (7) Mode Switching (Push)
- (8) Setup Mode (Push)
- (9)(10) Manual Tuning in Radio mode (Push)
- (11)(12) Automatic Tuning in Radio mode (Push)
- (13)-(18) Station Preset (Push)

About Bluetooth

Hands Free mode

- The mode is changed into a hands-free mode by pushing(5).
- It changes into the last mode of Audio by pushing(6) at hands free mode.

Registration of Bluetooth telephone (Initial setting)

- Push (8) then choose "Bluetooth" → "Pairing" .
- During Pass Key indication, input 4 to 8 codes into a Bluetooth Telephone. It is registered afterwards.

Connection OK : "Phone is connected"

Connection NG : "Bluetooth connection failed"

Each command is carried out by pushing (8).