


# Panasonic

Wireless Phone




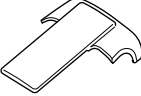
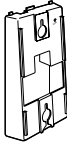
## Operating Instructions

Model No. KX-TD7895

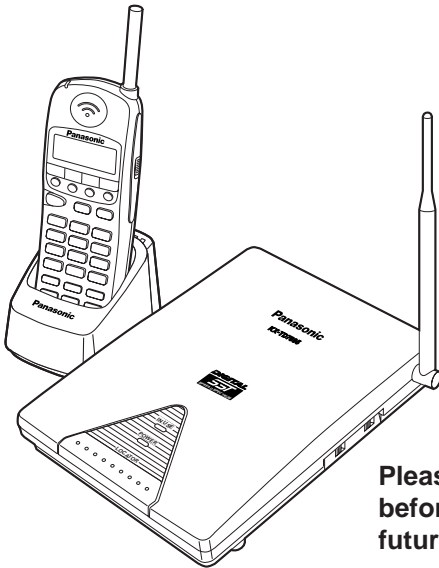

Please read this Operating Instructions before using the unit and keep this for future reference.

### Accessories (Included)

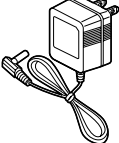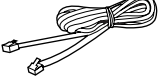Handset . . . . . One	Base Unit . . . . . One	Charging Unit . . . . . One
AC Adaptor . . . . . Two	Telephone Line Cord . . . . . One	Battery (PSPT3HRAAU) . . . . . One
		
		Handset Clip . . . . . One
		Wall Mounting Plate . . . . . One
		
		

### NOTE:


- The KX-TD7895 can be connected to a single line telephone for home use. This is called **SLT** mode.  
The KX-TD7895 can be connected to Electronic Modular Switching System (Panasonic KX-T, KX-TA or KX-TD series). This is called **EMSS** mode.  
The functions described in **EMSS** is available only when KX-TD7895 is connected to the system.
- To order accessories, call toll free **1-800-332-5368**.

**Thank you for purchasing a Panasonic Telephone.**

## FOR BEST PERFORMANCE

### Noise


Calls are transmitted between the base unit and the handset using wireless radio waves. For maximum distance and noise free operation, the recommended base unit location is:

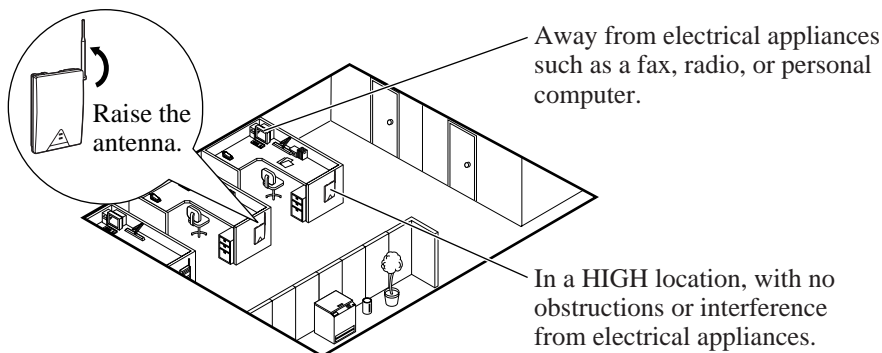


- Wireless telephones, except for the 900 MHz telephone, can be used together.

### Operating Distance

The handset should always be at least 3 m away from the base unit.

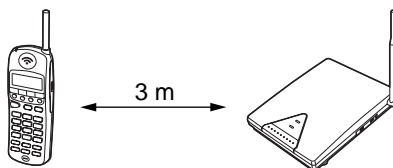

When using more than 2 base units, the distance between one unit and others must be at least 3 m, or else proper radio transmission cannot be obtained.

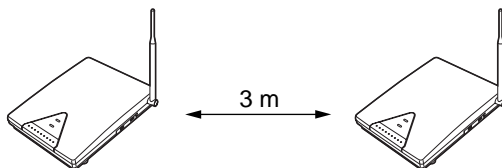

### Battery Charging

You must charge the battery for about 5 hours before initial use.

When charging is completed, the charge indicator of the handset turns green from red.

# CONTENTS

<b>Location of Controls and Connection</b> .....	<b>4</b>
Handset .....	4
Base Unit .....	6
<b>Getting Started</b> .....	<b>7</b>
Battery .....	7
Before using KX-TD7895 in EMSS mode .....	9
Power ON/OFF .....	10
Liquid Crystal Display (LCD) .....	11
Controlling the Volume .....	12
<b>Making Calls</b> .....	<b>14</b>
Calling (EMSS) .....	14
Calling (SLT) .....	14
Dialing the last number you dialed (Last Number Redial) .....	15
Speed Dialing .....	16
One-touch Dialing .....	17
<b>Receiving Calls</b> .....	<b>18</b>
Receiving (EMSS) .....	18
Receiving (SLT) .....	19
<b>During a Conversation</b> .....	<b>20</b>
Placing a call on hold .....	20
Three-party Conversation (Conference) .....	20
Transferring a call .....	21
<b>Message Waiting</b> .....	<b>22</b>
Leaving a call notification .....	22
Call back when you receive a notification .....	23
<b>Useful Features</b> .....	<b>24</b>
Forwarding your calls (Call Forwarding [FWD]) .....	24
Preventing others from disturbing you (Do Not Disturb [DND]) .....	25
Flash .....	26
Key Lock .....	26
<b>Programming</b> .....	<b>27</b>
PBX Station Programming .....	27
Handset Programming .....	28
Vibrator and Ringer .....	29
Ringer Pattern Selection .....	29
Auto Answer .....	30
Key Click Tone Set .....	30
Up/Down Key Assignment .....	31
Automatic Flexible Key Selection .....	31
Back Light .....	32
Auto Talk .....	32
Any Key Answer .....	32
Flexible Key Name Set .....	33
Handset Programming Data Default Set .....	34
<b>Others</b> .....	<b>35</b>
Wall Mounting .....	35
Installing the Handset Clip .....	36
Locating the Handset From the Base Unit .....	36
<b>Troubleshooting</b> .....	<b>37</b>
<b>Important Safety Instructions</b> .....	<b>38</b>
<b>Features List</b> .....	<b>43</b>

# LOCATION OF CONTROLS AND CONNECTION

## HANDSET

### Ringing/Charge Indicator

- Flashes green when an incoming call is received.
- Turns red when charging (except when receiving a call).

### Headset Jack

Connect a headset to talk in the hands-free.\*

### Volume Control Button

Used to select the ringer/receiver volume, or select the display of Flexible key.



### TALK Button

Used to make a call.



### AUTO/STORE Button

Used for System Speed Dialing or storing program changes.



### INTERCOM Button

Used to make or receive intercom calls.



### FUNCTION/KEYLOCK Button

Used to enter Function mode, access features by pressing additional keys or lock/unlock the key in idle status.

OFF

### OFF Button

Used to end calls or exit the programming mode.

### Flexible CO Buttons (F1 through F12)

Used to seize a CO line or access several features.

XFER CLR

### TRANSFER/CLEAR Button

Used to clear incorrect digits while dialing, and transfer a call to another extension.

SELECT INFO

### INFO/SELECT Button

Used to refresh the LCD or select an item in programming mode.

HOLD


### HOLD Button

Used to place a call on hold.


REDIAL

### REDIAL Button

Used to redial the last dialed number.

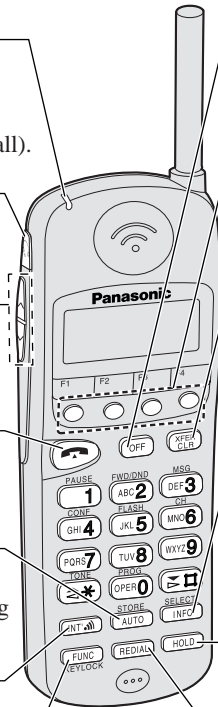


### To use the headset

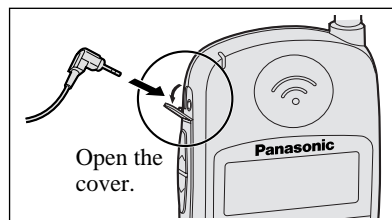

\* The headset is optional.  
Please use only Panasonic KX-TCA80, KX-TCA87 or KX-TCA90 headset.  
To order, call toll free 1-800-332-5368.

# LOCATION OF CONTROLS AND CONNECTION

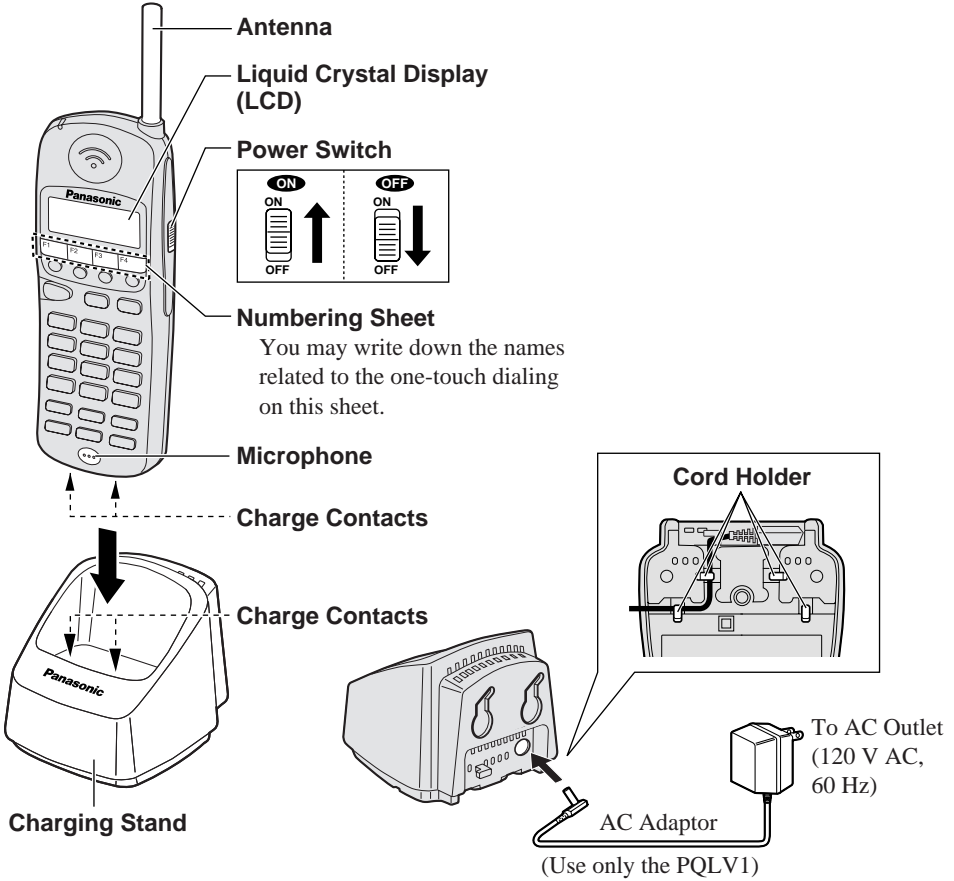


## ► Combination Keys

<b>PROG (Program)</b>	<b>FUNC</b> ► <b>PROG OPER 0</b>	Used to enter the programming mode.
<b>PAUSE</b>	<b>FUNC</b> ► <b>PAUSE 1</b>	Used to insert a pause in numbers.
<b>FWD/DND</b> <b>EMSS</b>	<b>FUNC</b> ► <b>FWD/DND ABC 2</b>	Used to set Call Forwarding or Do Not Disturb (DND) features.
<b>MSG (Message)</b> <b>EMSS</b>	<b>FUNC</b> ► <b>MSG DEF 3</b>	Used to leave a notification to the called party or call back the message sender (Message Waiting).
<b>CONF (Conference)</b> <b>EMSS</b>	<b>FUNC</b> ► <b>CONF GHI 4</b>	Used to establish a three party conversation.
<b>FLASH</b>	<b>FUNC</b> ► <b>FLASH JKL 5</b>	Used to disconnect current call and make another call.

# LOCATION OF CONTROLS AND CONNECTION

## BASE UNIT

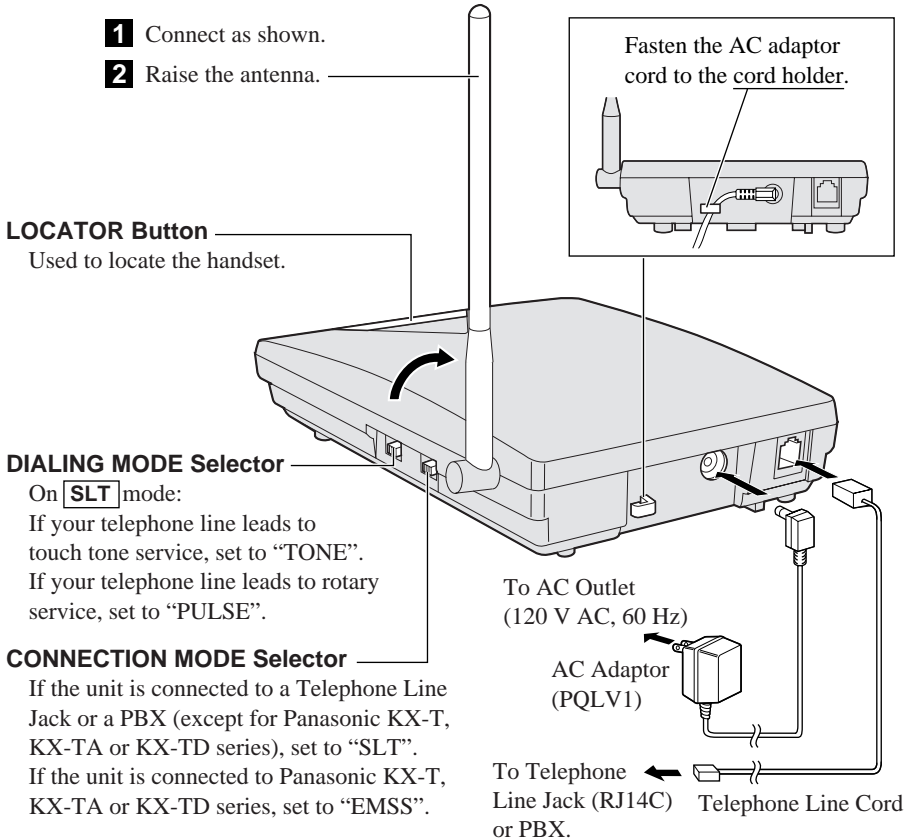

THE AC OUTLET POWER SOCKET SHOULD BE LOCATED NEAR THIS EQUIPMENT AND BE EASILY ACCESSIBLE.


### NOTE:

- Use ONLY Panasonic AC ADAPTOR PQLV1. The adaptor must remain connected at all times.
- The AC adaptor may feel warm. This is normal.
- The unit will not function during a power failure.
- This unit cannot be connected in parallel with a single line telephone.
- If the unit does not operate after connecting the AC Adaptor to the AC Outlet, disconnect the AC Adaptor once and re-insert it.

# GETTING STARTED

## BATTERY

### ▶ Installing

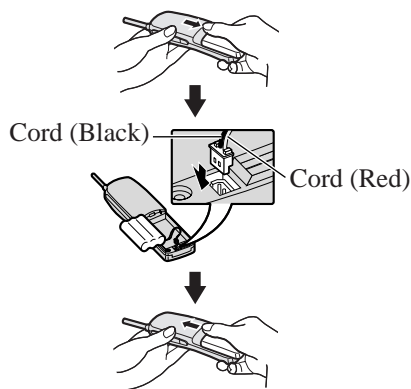

**1** Open the battery cover.

**2** Connect the battery cord and install the battery.

**3** Close the cover.

### ▶ Charging

You need to charge the battery before initial use and when the battery strength becomes low.

Put the handset with the battery in the charging stand (see page 5).

Charge the battery for **about 5 hours**. When charging is completed, the charge indicator turns green from red.

### ▶ Standard Battery Life

If your Panasonic battery is fully charged [at 25 °C (77 °F)]:


In Talk mode	Up to about 5 hours
In Stand-by mode	Up to about 7 days

#### NOTE:

- Time to recharge the battery:
  - when beep tones sound every 15 seconds,
  - when BATT-LOW indicator flashes.
- When the battery strength becomes low, a call gets hang up within 3 minutes.
- If the charge indicator is green, even before charging the battery, remove the battery and reinsert it after 5 seconds.
- The battery is used even while the handset's power is OFF.
- Battery life may vary depending on usage conditions and ambient temperature.
- Please use only Panasonic PSPT3HRAAU battery (see page 1).


# GETTING STARTED

## ► Replacing

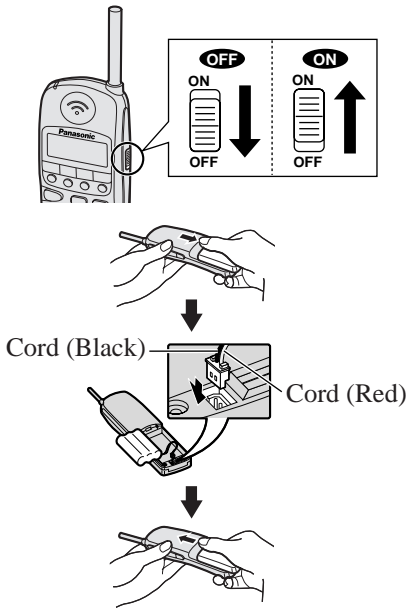

- 1** Set the **POWER** switch to “OFF” to prevent memory loss.
- 2** Open the battery cover and remove the used battery.
- 3** Connect a new battery cord and install a new battery.
- 4** Close the cover.
- 5** Set the **POWER** switch to “ON.”

### NOTE:

 - Time to replace a new battery even the used battery is fully charged:
  - when beep tones sound every 15 seconds,
  - when battery low indicator (  ) is displayed.
- If you do not replace the battery within 5 minutes, memories (e.g., Redial data in SLT mode, Flexible key position — F1–F4/F5–F8/F9–F12 and one-touch dialing programming) may be lost.
- If you change the battery while on the phone, hold the call first.

### CAUTION:

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Dispose of used batteries according to the manufacturer’s instructions.


The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.



# GETTING STARTED

## BEFORE USING KX-TD7895 IN EMSS MODE

This unit does not have speaker phone and monitor features. Therefore please take care of the following contents before using KX-TD7895 in EMSS mode. Please refer to your PBX manual for more information.

 
Alternative Calling — Ring/Voice	This unit cannot receive alternative voice call. Please inform another extension user not to use voice calling.
Live Call Screening (LCS)	<b>Hands-free Mode:</b> LCS hands-free mode is not available on this unit. <b>Please set to private mode only, by station programming.</b> To change the setting, please refer to your PBX manual. <b>Private Mode:</b> In this mode, the user can monitor or answer the call. 1) To monitor the call Press  when hearing alert tone. 2) To answer the call Press LCS key* when monitoring the call or hearing alert tone. * The LCS key has to be assigned on a Flexible Key before using this feature.
Parallel Connection	This unit cannot be connected in parallel with a single line telephone in EMSS mode. If the parallel connection mode of the PBX port is set to “Parallel ON (SLT ringing is enabled)”, please set to “ <b>Parallel OFF (SLT ringing is disabled)</b> ”. Please refer to your PBX manual for more information.

# GETTING STARTED

## POWER ON/OFF

### ▶ Power ON

- 1 Turn the **POWER** switch to “ON”.



The LCD shows the date and time of PBX or your extension number (EMSS mode only).


TUE MAY16 12:00P  
F1 F2 F3 F4

10 seconds later →

F1 F2 F3 F4

### ▶ Power OFF

- 1 Turn the **POWER** switch to “OFF”.

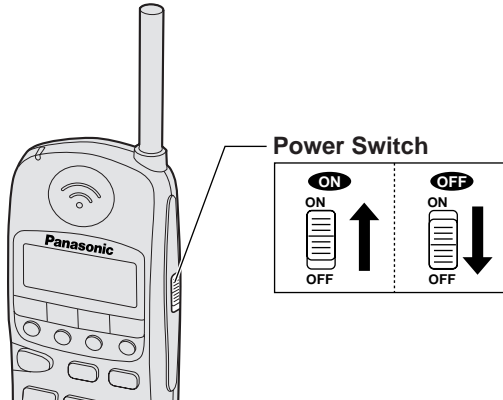

- If the following display appears, send the unit to your nearest authorized service center.


Need Repair N

(N=1 – 3)






# GETTING STARTED
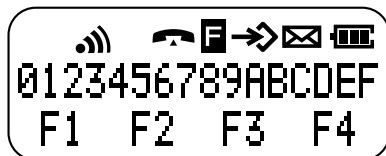
## LIQUID CRYSTAL DISPLAY (LCD)





The display has 2 lines with 16 characters per line, and symbols to show information are shown below.




### ► Description of Symbols

-  Intercom Indicator
-  In idle status
-  In the Function mode
-  In the Programming mode
-  Message Waiting notification  
(You have a message.)

*The battery strength:*


-  fully charged
-  medium
-  low
-  needs to be charged

### NOTE:

- **EMSS**: When you press  in on-hook status, the LCD shows the date and time of PBX or your extension number for 10 seconds (**On-hook display**).  
How to change the LCD depends on your PBX. Please refer to your PBX manual for more information.


1. Press .

The date and time (day/month/time) of PBX are displayed.

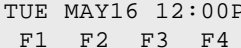


2. Press .

Your extension number is displayed.

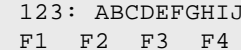


3. Press .

The date and time (day/month/time) of PBX are displayed.

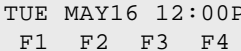

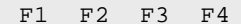

4. The PBX information disappears after 10 seconds.




## CONTROLLING THE VOLUME

### ► Ringer Volume




The ringer volume has three levels (Low/Middle/High). Moreover, you can select the Step Ringer mode, Vibrator mode or Off mode. [**Default: Middle**]

**1** Press  or  repeatedly to select the desired mode.

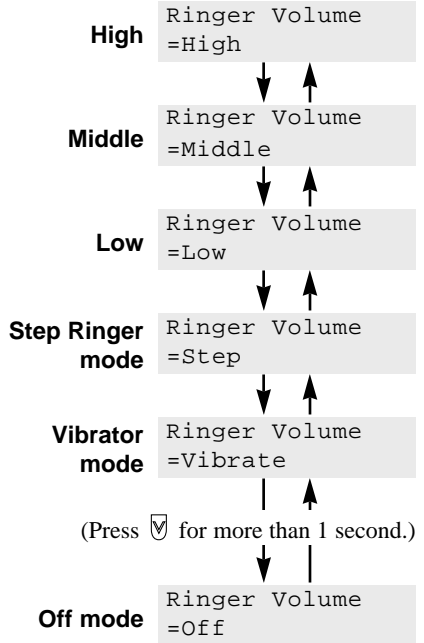- **Step Ringer mode:**  
Rings progressively louder.
- **Vibrator mode:**  
Does not ring but vibrates.
- **Off mode:**  
Does not ring or vibrate.  
Only the indicator flashes green.



### NOTE:

- If  and  are set to “F-Key Select”, press  first (see page 31).
- If you select Vibrator mode, the display shows “Vibrate” while on-hook.

If you select Off mode, the display shows “Ringer OFF” while on-hook.

This is not available:

- when FWD/DND is set,
- while display shows your extension number or time,
- while display shows duration time after finishing the conversation,
- **EMSS**: when you set Auto Answer “On” with the headset.

- When charging, the handset rings for incoming calls (except Off mode).
- **Vibrator and Ringer mode** (vibrates several times and then rings) is also available (see page 29).

Vibrate			
F1	F2	F3	F4



Ringer OFF			
F1	F2	F3	F4


## ► Receiver/Headset Volume

The receiver/headset volume has three levels (Low/Middle/High). This can be changed during a conversation. **[Default: Middle]**




**Receiver volume:** except when using a headset

**Headset volume:** when using a headset

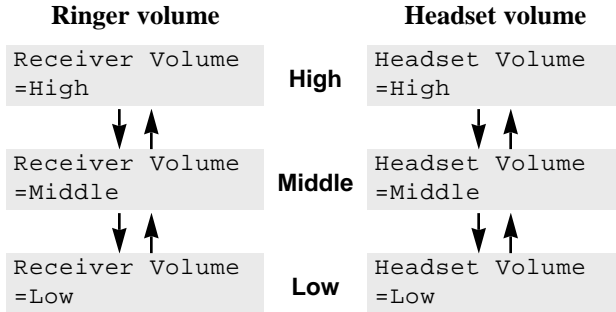- 1 Press  or  repeatedly during a conversation.



### NOTE:

 
- If  and  are set to “F-Key Select”, press  first (see page 31).

# MAKING CALLS

 
## CALLING **EMSS**


### ► Intercom Calling


**1** Press  or .





 **2** Dial the extension number, then talk.




**3** To hang up, press .





### ► Outside Dialing, Line Access

 
**1** Press <sup>F1-F12</sup>  (**Flexible CO**), or press  then line access number.




**2** Dial the phone number, then talk.

 


**3** To hang up, press .

 



## CALLING **SLT**


 
**1** Press .



**2** Dial the phone number, then talk.

 



  

**3** To hang up, press .




# MAKING CALLS





## NOTE:

- **EMSS**: You can also enter the phone number first and then press ,  or . (**Predialing**)

Predialing is not available for 10 seconds after pressing .


Press  before dialing in the following cases:

 
- while display shows your extension number or time,
- while display shows duration time after finishing the conversation.


- **EMSS**: When you press , proprietary telephone is displayed (**LCD Refresh**) while idle.
- **SLT**: When you need to set to “TONE” mode during a call, press .
- Inserting a pause prevents misdialing. A pause can be inserted when you predial or while storing a number for memory dialing. To insert a pause, press  then .


## DIALING THE LAST NUMBER YOU DIALED (LAST NUMBER REDIAL)


This unit saves the last number you dialed.


**1** Press .



**2** Press .

 

**3** To hang up, press .

 

# MAKING CALLS

## SPEED DIALING SLT

You can call by pressing the dialing buttons assigned as the Speed Dialing buttons.

### ▶ Storing

**1** Press FUNC and PROG OPER 0.

**2** Press SELECT INFO.

**3** Press STORE AUTO.

**4** Enter speed dialing number (OPER 0 - WXYZ 9).

**5** Enter a phone number (up to 24 digits).

• The valid characters are OPER 0 - WXYZ 9, ☎\*, ☎□,

Pause Button (FUNC ▶ PAUSE 1) and

Flash Button (FUNC ▶ FLASH JKL 5).

• To clear all digits, press XFER CLR.

**6** Press STORE AUTO.

**7** To store another number, press HOLD then repeat steps **4** through **6**.

**8** To exit, press OFF.

→  
Select F-Key  
F1 F2 F3 F4

Auto 1

0123456789  
Auto 1

→  
0123456789  
Auto 1 Stored

F1 F2 F3 F4

### ▶ Dialing

**1** Press ☎.

**2** Press AUTO.

**3** Dial a speed dialing number (OPER 0 - WXYZ 9).

1  
F1 F2 F3 F4

0123456789  
F1 F2 F3 F4



# MAKING CALLS

## ONE-TOUCH DIALING **SLT**

You can call by pressing  $F1-F12$  (Flexible CO), or assigned as the One-touch Dialing buttons.

### ► Storing

**1** Press and .

**2** Press .

**3** Press .

→  
Select F-Key  
F1 F2 F3 F4

**4** Press or until the desired  $F1-F12$  (Flexible CO) appears.

→  
Select F-Key  
F5 F6 F7 F8

**5** Press the desired  $F1-F12$  (Flexible CO), or .

F5

- To select another Flexible Key, press , or .

**6** Enter a phone number (up to 24 digits).

- The valid characters are —, , , .

F5 123

Pause Button ( ) and

Flash Button ( .

- To clear all digits, press .

**7** Press .

→ 123  
F5 Stored

**8** To store another number, press then repeat steps **4** through **7**.

**9** To exit, press .

F1 F2 F3 F4

### ► Dialing

**1** Press .

**2** Press an available one-touch button ( $F1-F12$ , or .

- You can omit by pressing  $F1-F12$  or (Full one-touch dialing).

# RECEIVING CALLS

## RECEIVING EMSS

When you receive a call, the handset rings or vibrates and the call indicator flashes green.

### ▶ **Auto Talk**

Lift up the Handset (**Auto Talk**).

- Available when “Auto Talk” is set to “On” in Handset Programming (see page 32).


### ▶ **Any Key Answer**

 
Press any button (**Any Key Answer**).

- Available when “Any Key Answer” is set to “On” in Handset Programming (see page 32).



### ▶ **Intercom Incoming Call**


**1** Press  or .


**2** To hang up, press .



### ▶ **CO Incoming Call**

 **1** Press the flashing <sup>F1-F12</sup>  (Flexible CO) or .

**2** To hang up, press .




### ▶ **Auto Answer**

When you put a headset, it answers calls automatically.

 
- Available when “Auto Answer” is set to “On” in Handset Programming (see page 30).

# RECEIVING CALLS


## RECEIVING SLT

**1** Press .

0:00:00			
F1	F2	F3	F4

**2** To hang up, press .

### NOTE: \_\_\_\_\_


- **EMSS**:  (Message Waiting notification) means that a call has been received. To call back, see page 23.
- **SLT**: When you receive a call, “Receiving” is displayed.
- When you receive an intercom call, the extension number and name of the receiving call appear on the display.
- When you receive a CO call, the CO line number or name of the receiving call appears on the display.

Receiving			
F1	F2	F3	F4
123: ABCDEFGHIJ			
F1	F2	F3	F4
CO01: 1234567890			
F1	F2	F3	F4

# DURING A CONVERSATION

## PLACING A CALL ON HOLD

### ▶ Holding

**1** Press .

### ▶ Retrieving a call on hold

**1** **EMSS**: Press  or .

**SLT**: Press .

## THREE-PARTY CONVERSATION (CONFERENCE) **EMSS**

The following operations are available when you connect to KX-TD500. If you connect to another system, refer to Features List (pages 43–46) or the connecting system manual.

 
**1** Press  then  during a conversation.



**2** Dial the third party's number.



**3** Press  then  after the third party answers.




# DURING A CONVERSATION

## TRANSFERRING A CALL EMSS

### ▶ Transferring a call to an extension

 **1** Press XFER  
CLR holding the line.



**2** Dial the extension number.



**3** Press OFF.




### ▶ Transferring a call to an outside party

 — This feature must be enabled by PBX Programming.


**1** Press XFER  
CLR holding the line.



**2** Press <sup>F1-F12</sup>○ (Flexible CO) or enter line access number, and dial the phone number.



**3** Press OFF.

 

# MESSAGE WAITING

## LEAVING A CALL NOTIFICATION EMSS

When the called extension is busy or does not answer, you can leave a notification to have the called extension call you back. The following operations are available when the unit is connected to KX-TD500. If the unit is connected to another system, refer to Features List (pages 43–46) or the connecting system manual.


### ▶ To leave a notification when the called extension is busy or does not answer

- 1 Press FUNC then MSG  
DEF**3**.  
(Confirmation tone sounds.)

MW at Ext101  
F5 F6 F7 F8


- 2 Press OFF.

### ▶ To cancel a notification


- 1 Press .
- 2 Press PQRS**7** OPER**0** OPER**0**.
- 3 Dial an extension number.
- 4 Press OFF.

# MESSAGE WAITING

## CALL BACK WHEN YOU RECEIVE A NOTIFICATION **EMSS**

 
 
 (Message Waiting Notification) on the display tells you that a call has been received. The following operations are available when the unit is connected to KX-TD500. If the unit is connected to another system, refer to Features List (pages 43–46) or the connecting system manual.

### ► To call back


**1** Press .

**2** Press  then .

**3** An extension number is displayed and the unit calls back automatically.




### ► To clear all notifications

**1** Press .

**2** Press   .

**3** Dial your own extension number.


**4** Press .

# USEFUL FEATURES

## FORWARDING YOUR CALLS (CALL FORWARDING [FWD]) EMSS

Specified calls to your telephone are automatically forwarded to another preset extension. The following operations are available when the unit is connected to KX-TD500. If the unit is connected to another system, refer to Features List (pages 43–46) or the connecting system manual.


### ▶ Setting


**1** Press .


**2** Press  then .


**3** Select the desired feature.


Dial  ▶ extension number. — **All Calls**


Dial  ▶ extension number. — **Busy**


Dial  ▶ extension number. — **No Answer**

 
Dial  ▶ extension number. — **Busy/No Answer**

Dial  , line access number (0/9)


▶ phone number ▶ . — **To an outside line**

Dial  ▶ your own extension number. — **Follow Me**


**4** Press .




 
### ▶ Canceling


**1** Press .

**2** Press  then .

**3** Dial . — **To cancel**

 Dial  ▶ your extension number. — **To cancel Follow Me**

**4** Press .



### NOTE:

- If FWD is set, the display flashes “FWD/DND” in idle status. Except:
  - while LCD shows your extension number or time,
  - while LCD shows duration time after finishing the conversation.





# USEFUL FEATURES

## PREVENTING OTHERS FROM DISTURBING YOU (Do Not Disturb [DND]) EMSS


Your extension can shut out any calls. The following operations are available when the unit is connected to KX-TD500. If unit is connected to another system, refer to Features List (pages 43–46) or the connecting system manual.


### ▶ Setting

- 1 Press .
- 2 Press FUNC then <sup>FWD/DND</sup>  
ABC **2**.
- 3 Press 1.
- 4 Press OFF.

  
Do Not Disturb  
F1 F2 F3 F4

### ▶ Canceling

- 1 Press .
- 2 Press FUNC then <sup>FWD/DND</sup>  
ABC **2**.
- 3 Press OPER **0**.
- 4 Press OFF.

  
FWD/DND Cancel  
F1 F2 F3 F4

### NOTE:

- If DND is set, “FWD/DND” is displayed in the idle status. Except:
  - while LCD shows your extension number or time,
  - while LCD shows duration time after finishing the conversation.

# USEFUL FEATURES

## FLASH **EMSS**

You can disconnect the current call and make another call.

- 1 Press **FUNC** then **FLASH JKL 5** when hearing any tone, dialing or talking.
- 2 Make another call.

### NOTE:

- **SLT**: This operation functions as a hooking signal which is used to access special features offered by a PBX or Central Office (e.g., Call Waiting).

## KEY LOCK

You can lock the buttons while on-hook.

### ▶ Setting (Key Lock ON)

- 1 Press **FUNC KEYLOCK** for 1 second.

Keylock ON  
F1 F2 F3 F4


### ▶ Canceling (Key Lock OFF)

- 1 Press **FUNC KEYLOCK** for 1 second.

Key Unlocked  
F1 F2 F3 F4

### NOTE:

- In Key Lock mode, only **FUNC KEYLOCK** works in this status.

However, you can answer a call by pressing **INT**,  or flashing **F1-F12** and press any key when the unit is not in idle status.

- You cannot set/cancel Key Lock:

— while LCD shows your extension number or time,

— while LCD shows duration time after finishing the conversation.

Press **OFF** before pressing **FUNC KEYLOCK** in these cases.

## PBX STATION PROGRAMMING EMSS

You can program certain features of PBX by your handset. The possible programmings vary according to your PBX system. For details, please refer to your PBX manual. You cannot make/receive a call during programming. The programming mode is canceled when there are pause over 30 seconds.

### ▶ To enter PBX Station Programming mode

**1** Press FUNC and PROG  
OPER0.

**2** Press SELECT  
INFO.

**3** Press STORE  
AUTO.

➔

Handset Program  
F1 F2 F3 F4

➔

Station Program  
F1 F2 F3 F4

➔

PT-PGM Mode  
F1 F2 F3 F4

### ▶ To exit PBX Station Programming mode

**1** Press OFF.

## HANDSET PROGRAMMING

You can change the default settings or programming of handset.

The programming mode is canceled:

- when you receive a call,
- when there are pause over 30 seconds.

### ► To enter Handset Programming mode

**1** Press **FUNC** and **PROG OPER 0**.

**2** Press **STORE AUTO**.

**3** Select the menu by pressing **⇐\*** or **⇒□**.

→
Handset Program
F1 F2 F3 F4
Vibrator&Ringer
=Off
Ringer Pattern
=1

#### The programming variations are:

- Vibrator and Ringer (page 29)
- Ringer Pattern Selection (page 29)
- Auto Answer (page 30)
- Key Click Tone Set (page 30)
- Up/Down Key Assignment (page 31)
- Automatic Flexible Key Selection (page 31)
- Back Light (page 32)
- Auto Talk (page 32)
- Any Key Answer (page 32)
- Flexible Key Name Set (page 33)
- Handset Programming Data Default Set (page 34)

### ► To exit Handset Programming mode

**1** Press **OFF**.

F1 F2 F3 F4


## VIBRATOR AND RINGER

When you receive a call, your handset vibrates 4 times then rings.




[Default: Off]

**1** Enter Handset Programming mode and select “Vibrator&Ringer”.

Vibrator&Ringer  
=Off

**2** To select “On” or “Off”, press .

Vibrator&Ringer  
=On

 


**3** To program other items, press  or .  
or  
To exit, press .

## RINGER PATTERN SELECTION




You have 6 ringer types (1 through 6). [Default: 1]

**1** Enter the Handset Programming mode and select “Ringer Pattern”.

Ringer Pattern  
=1

**2** To select the desired ringer pattern,  
press  – ,  
or  
press  repeatedly.

Ringer Pattern  
=2

**3** To program other items, press  or .  
or  
To exit, press .

## AUTO ANSWER EMSS

When you put a headset, the handset answers calls automatically.

[Default: Off]

- 1 Enter the Handset Programming mode and select “Auto Answer”.

Auto Answer  
=Off

- 2 To select “Off” or “On”, press SELECT INFO.

Auto Answer  
=On

- 3 To program other items, press ⇨\* or ⇨□.  
or  
To exit, press OFF.

### NOTE:

- This function is available when handset is equipped with headset.
- When this feature is set to “On”, “Auto Answer ON” is displayed in idle status.

Auto Answer ON  
F1 F2 F3 F4

## KEY CLICK TONE SET

You can turn off the key tone which sounds by pressing. [Default: On]

- 1 Enter the Handset Programming mode and select “Key Click”.



Key Click  
=On

- 2 To select “On” or “Off”, press SELECT INFO.

Key Click  
=Off


- 3 To program other items, press ⇨\* or ⇨□.  
or  
To exit, press OFF.

## UP/DOWN KEY ASSIGNMENT




You can select the  and  key function as “Volume” key or “F-Key Select” key. **[Default: Volume]**

- 1 Enter the Handset Programming mode and select “Vol Key Assign”.







 




Vol Key Assign  
=Volume

- 2 To select “Volume” or “F-Key Select”, press .

Vol Key Assign  
=F-Key Select

- 3 To program other items, press \* or .
- or
- To exit, press .

### NOTE:

 
- By pressing  before /,
  - / work as “F-Key Select” key, even if / are assigned as “Volume” key.
  - / work as “Volume” key, even if / are assigned as “F-Key Select” key.

## AUTOMATIC FLEXIBLE KEY SELECTION




When you make or receive a call, the green F-Key is displayed. **[Default: Off]**

- 1 Enter the Handset Programming mode and select “Auto FKey Select”.

Auto FKey Select  
=Off

- 2 To select “On” or “Off”, press .





Auto FKey Select  
=On

- 3 To program other items, press \* or .
- or
- To exit, press .

# PROGRAMMING





## BACK LIGHT

You can turn off the LCD and keypad back lights to save battery. **[Default: On]**

- 1** Enter the Handset Programming mode and select “Back Light”.  
Back Light =On
- 2** To select “On” or “Off”, press .  
Back Light =Off
- 3** To program other items, press \* or .  
or  
To exit, press .





## AUTO TALK

You can answer a call just lift up the handset from the charging stand. **[Default: On]**

- 1** Enter the Handset Programming mode and select “Auto Talk”.  
Auto Talk =On
- 2** To select “On” or “Off”, press .  
Auto Talk =Off
- 3** To program other items, press \* or .  
or  
To exit, press .

## ANY KEY ANSWER

You can answer a call by pressing any key. **[Default: Off]**

- 1** Enter the Handset Programming mode and select “Any Key Answer”.  
Any Key Answer =Off
- 2** To select “Off” or “On”, press .  
Any Key Answer =On
- 3** To program other items, press \* or .  
or  
To exit, press .



## FLEXIBLE KEY NAME SET

You can name the 12 F-keys (three characters max per key).

[Default: FXX (XX = 1-12)]

**1** Enter the Handset Programming mode and select “F-Key Name Set”.

```
F-Key Name Set
F1 F2 F3 F4
```

**2** To show a F-Key you want to name, press  $\nabla$  or  $\blacktriangle$ .

```
F-Key Name Set
F5 F6 F7 F8
```

**3** To choose the F-Key, press  $F1-F12$  or  $\text{SELECT INFO}$ .

```
F-Key Name Set
F1 =F1
```

**4** Press  $\text{XFER CLR}$ .

```
F-Key Name Set
F1 =
```

**5** Enter a name (up to 3 characters).  
(Refer to the Character Combination Table below.)

```
F-Key Name Set
F1 =C
```

**6** To store the name, press  $\text{STORE AUTO}$ .  
→ the next F-Key is displayed.

```
F-Key Name Set
F1 =CO1 Stored
```

**7** To name the next F-Key, repeat steps **3** through **6**.

**8** To program other items, press  $\text{NEXT}$  or  $\text{PREV}$ .  
or  
To exit, press  $\text{OFF}$ .

### ► Character Combination Table

Numbered buttons can be also used as letters and symbols for character input keys. Use  $\text{NEXT}$  (Next) or  $\text{PREV}$  (Previous) to move the cursor to change or enter a character.

	Pressing times								
Keys	1	2	3	4	5	6	7	8	9
1	.	,	:	1					
2	A	B	C	a	b	c	2		
3	D	E	F	d	e	f	3		
4	G	H	I	g	h	i	4		
5	J	K	L	j	k	l	5		
6	M	N	O	m	n	o	6		
7	P	Q	R	S	p	q	r	s	7
8	T	U	V	t	u	v	8		
9	W	X	Y	Z	w	x	y	z	9
0	(space)	-	*	#	&	\$	( )	0	

### NOTE:

- Space × 3 is not acceptable.

## HANDSET PROGRAMMING DATA DEFAULT SET

All of the following settings can be returned to the default settings at a time.

<All>

- Handset Program
- Ringer/Receiver Volume
- SLT Station Program

<Handset Program>

- Vibrator and Ringer
- Ringer Pattern Selection
- Auto Answer
- Key Click Tone Set
- Up/Down Key Assignment
- Automatic Flexible Key Selection
- Back Light
- Auto Talk
- Any Key Answer
- Flexible Key Name Set

- 1** Enter the Handset Programming mode and select “Clear Ready?”.

```
Clear Ready?  
=All
```

- 2** To select the desired item, press <sup>SELECT</sup> .

```
Clear Ready?  
=Handset Program
```


- 3** To confirm, press <sup>STORE</sup> .

## WALL MOUNTING


The base unit and the charging stand can be mounted on a wall.

### ▶ Base Unit

- 1** Drill 2 holes spaced 8.4 cm (3.3 inches) apart and drive 2 screws.
- 2** Insert the tabs of the wall mounting plate (included) into the openings of the base unit, then push it in the direction of the arrow.

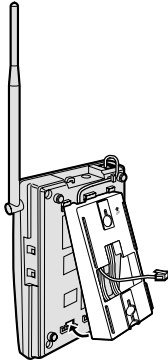


- 3** Mount the base unit on the wall.

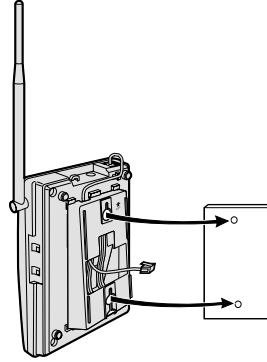


### ▶ Charging Stand

- 1** Connect the charging stand to a power outlet using the AC adaptor.

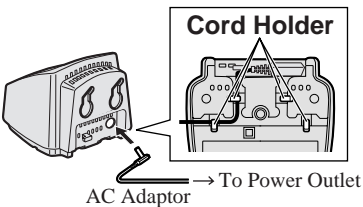

- 2** Drive screws using the wall template beside.

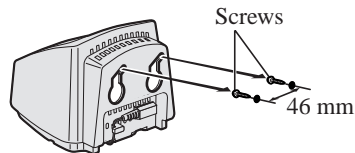


- 3** Mount the charging stand securely on the screws.




## INSTALLING THE HANDSET CLIP

You can hang the handset on your belt or pocket by attaching the handset clip.

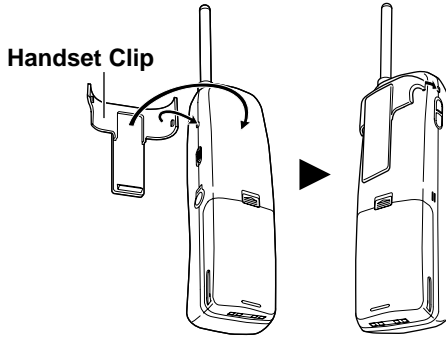

## LOCATING THE HANDSET FROM THE BASE UNIT


You can find a missing handset. Also, you may locate a person at the handset from the base unit by emitting beep tones for 60 seconds. Locating is not available if the handset is in use.

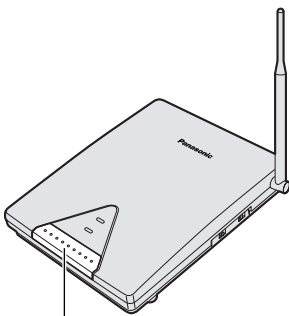


LOCATOR Button

- 1 Press **LOCATOR** button on the base unit.

The **IN USE** indicator flashes and the handset beeps.

To stop the beeping,  
press **LOCATOR** button again  
or  
press .

# TROUBLESHOOTING

 Trouble	Remedy
The unit does not work.	<ul style="list-style-type: none"> <li>• Set the POWER switch to “ON.”</li> <li>• The unit was not connected properly (see pages 5 and 6).</li> <li>• The handset battery is weak. Charge the battery fully.</li> </ul>
Sound flutters or fades.	<ul style="list-style-type: none"> <li>• You are too far from the base unit. Approach the base unit.</li> <li>• Raise the antenna of the base unit.</li> </ul>
Noise occurs.	<ul style="list-style-type: none"> <li>• Place the base unit away from office equipment such as computers.</li> <li>• Approach the base unit.</li> </ul>
I am encountering interference from another unit.	<ul style="list-style-type: none"> <li>• Set the handset and the base unit away from other electrical appliances.</li> </ul>
The handset does not ring.	<ul style="list-style-type: none"> <li>• Set the POWER switch to “ON.”</li> <li>• Change the ringer volume level.</li> </ul>
Beep tones sound every fifteen seconds during a conversation.	<ul style="list-style-type: none"> <li>• Charge the battery fully, or replace the new handset battery.</li> </ul>
I charged the battery for 5 hours, but the beep tones sound every 15 seconds and battery low indicator (  ) flashes after a few telephone calls.	<ul style="list-style-type: none"> <li>• Clean the battery charge contacts and charge once more.</li> <li>• It is time to change the battery. Replace with a new one.</li> </ul>
I cannot use the unit during a power failure.	<ul style="list-style-type: none"> <li>• The unit will not function during a power failure.</li> </ul>
I cannot store a phone number into memory.	<ul style="list-style-type: none"> <li>• Do not pause for over 30 seconds while storing.</li> </ul>
While operating the unit, the AC adaptor feels warm. While charging the battery, the unit feels warm.	<ul style="list-style-type: none"> <li>• These are normal conditions.</li> </ul>
I cannot make a call from a paralleled single line telephone.	<ul style="list-style-type: none"> <li>• A single line telephone cannot be connected in parallel with this unit in EMSS mode (see page 9).</li> </ul>

## IMPORTANT SAFETY INSTRUCTIONS

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from AC outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near water, for example, near a bathtub, washbowl, kitchen sink, or the like.
5. Place this unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
10. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
11. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized servicenter when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
12. Unplug this unit from the AC outlet and refer servicing to an authorized servicenter when the following conditions occur:
  - A. When the power supply cord or plug is damaged or frayed.
  - B. If liquid has been spilled into the unit.
  - C. If the unit has been exposed to rain or water.
  - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized servicenter.
  - E. If the unit has been dropped or physically damaged.
  - F. If the unit exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
14. Do not use this unit to report a gas leak, when in the vicinity of the leak.

## SAVE THESE INSTRUCTIONS

# IMPORTANT SAFETY INSTRUCTIONS

## CAUTION

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) specified.
2. Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
5. Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

## WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

## FCC Information

If requested by the telephone company, inform them as follows.

- FCC Registration No.:  
(found on the bottom of the unit)
- Ringer Equivalence: 0.2B
- The particular telephone line to which the equipment is connected.

This unit must not be connected to a coin operated line. If you are on a party line, check with your local telephone company.

## Ringer Equivalence Number (REN):

The REN is useful in determining the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

In the event terminal equipment causes harm to the telephone network, the telephone company should notify the customer, if possible, that service may be stopped. However, where prior notice is impractical, the company may temporarily cease service providing that they:

- a) Promptly notify the customer.
- b) Give the customer an opportunity to correct the problem with their equipment.
- c) Inform the customer of the right to bring a complaint to the Federal Communication Commission pursuant to procedures set out in FCC Rules and Regulations Subpart E of Part 68.

# IMPORTANT SAFETY INSTRUCTIONS

The Telephone Company may make changes in its communications facilities, equipment, operations, or procedures, where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in FCC Part 68.

If such changes can be reasonably expected to render any customer terminal equipment incompatible with telephone company communications facilities, or require modification or alteration of such terminal equipment, or otherwise materially affect its use or performance, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service.

When programming emergency numbers and/or making test calls to emergency numbers:

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities in the off-peak hours, such as early morning hours or late evenings.

## **CAUTION:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

## **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Some wireless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the wireless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the wireless telephone further away from the TV or VCR. This will often reduce or eliminate interference.



## IMPORTANT SAFETY INSTRUCTIONS

**Environment** — Do not place the unit in rooms where the temperature is less than 5 °C (41 °F) or greater than 40 °C (104 °F). Allow 10 cm (4") clearance around the unit for proper ventilation. Avoid excessive smoke, dust, mechanical vibration, shock, or direct sunlight. Keep away magnetic cards, such as bank cards, telephone cards etc. from the handset, as the magnet in the handset may cause the data on the card's magnetic strip to be erased.

**Medical** — consult the manufacturer of any personal medical devices, such as pacemakers, to determine if they are adequately shielded from external RF (radio frequency) energy. (The unit operates in the frequency range of 905MHz to 925MHz and the power output level can range from 0.001 watts to 0.1 watts.) Do not use the unit in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF (radio frequency) energy.

**Routine care** — wipe the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder. When you leave the unit unused for a long period of time, unplug the AC adaptor from the outlet.

**If there is any trouble** — disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your unit repaired by one of the authorized Panasonic Factory Servicenters. If the known working phone does not operate properly, consult your telephone company.

# IMPORTANT SAFETY INSTRUCTIONS

## Hearing Aid Compatibility

This telephone provides magnetic coupling for hearing aids.

## Privacy of communications

Privacy of communications may not be ensured when using this phone.

## For Product Service

- Panasonic Servicenters are listed in the servicenter directory.
- Call 1-800-211-PANA (7262) for the location of an authorized servicenter.

## When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.

Symptom

---



 
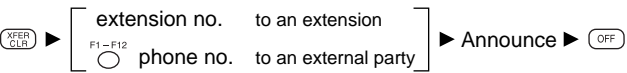
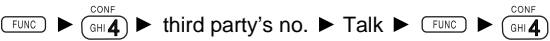






---

- Send the unit to an authorized servicenter, prepaid and adequately insured.
- Do not send your unit to the Panasonic Consumer Electronics Company listed on the back cover or to executive or regional sales offices. These locations do not repair consumer products.
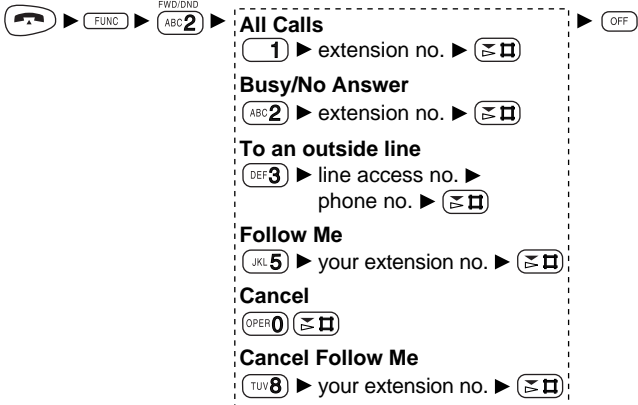
# FEATURES LIST


The features of the KX-TA624, KX-TD816/1232/308, KX-TD500 and KX-T336 are listed below. For more information, please refer to your PBX manual.

## For the KX-TA624

Desired Function	Operation
Call Forwarding	 <p>The diagram shows the sequence for Call Forwarding: a handset icon, a 'FUNC' button, a 'FWD/DND' label above a '2' button, and an 'OFF' button. A dashed box contains the following steps: 'All Calls' with a '1' button and extension number; 'Busy/No Answer' with an 'ABC 2' button and extension number; 'To an outside line' with a 'DEF 3' button, line access number, and phone number; 'Follow Me' with a 'JKL 5' button and extension number; 'Cancel' with an 'OPER 0' button; and 'Cancel Follow Me' with a 'TUV 8' button and extension number.</p>
Call on Hold	<p><b>Holding</b></p>  <p><b>To retrieve a call on hold</b></p>  <p>The diagram shows a 'HOLD' button and a sequence of 'F1-F12' buttons, an 'INT.' button, and a 'Talk' button.</p>
Call Transfer	 <p>The diagram shows an 'XFER CLR' button, a sequence of 'F1-F12' buttons, an extension number, a 'phone no.' field, and an 'Announce' button with an 'OFF' button.</p>
Conference	 <p>The diagram shows a 'FUNC' button, a 'CONF' label above a '4' button, 'third party's no.', 'Talk', another 'FUNC' button, and a 'CONF' label above a '4' button.</p>
Do Not Disturb (DND)	 <p>The diagram shows a handset icon, 'FUNC', 'FWD/DND' label above a '2' button, a '4' button, 'to set', 'OPER 0', 'to cancel', a button with a checkmark, and an 'OFF' button.</p>
Message Waiting	<p><b>To leave a notification</b></p>  <p>The diagram shows 'FUNC', 'MSG' label above a '3' button, and 'OFF'.</p> <p><b>To cancel a notification</b></p>  <p>The diagram shows a handset icon, extension no., 'FUNC', 'MSG' label above a '3' button, 'FUNC', 'MSG' label above a '3' button, and 'OFF'.</p> <p><b>To check a message</b></p>  <p>The diagram shows 'FUNC', 'MSG' label above a '3' button.</p> <p><b>To call back</b></p>  <p>The diagram shows a handset icon, 'FUNC', 'MSG' label above a '3' button, and 'Talk'.</p> <p><b>To clear all notifications</b></p>  <p>The diagram shows a handset icon, 'PQRS 7', 'OPER 0', 'OPER 0', a button with a checkmark, and 'OFF'.</p>


# FEATURES LIST

## For the KX-TD816/1232/308

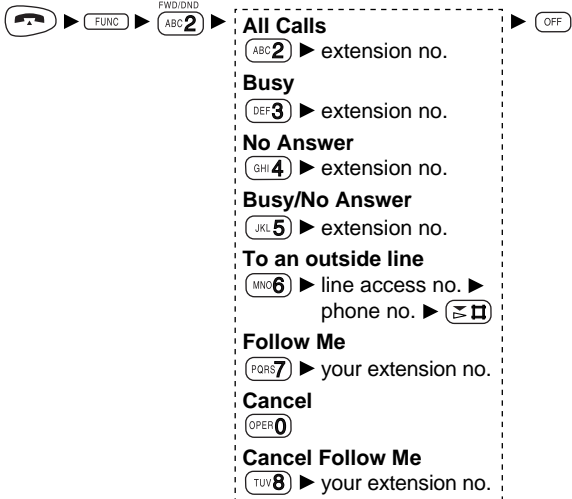Desired Function	Operation
Call Forwarding	 <p>  ► <b>FUNC</b> ► <b>FWD/DND</b> <b>ABC 2</b> ► <b>All Calls</b> ► <b>OFF</b>  <b>ABC 2</b> ► extension no.  <b>Busy</b>  <b>DEF 3</b> ► extension no.  <b>No Answer</b>  <b>GHI 4</b> ► extension no.  <b>Busy/No Answer</b>  <b>JKL 5</b> ► extension no.  <b>To an outside line</b>  <b>MNO 6</b> ► line access no. ► phone no. ►    <b>Follow Me</b>  <b>PQRS 7</b> ► your extension no.  <b>Cancel</b>  <b>OPER 0</b>  <b>Cancel Follow Me</b>  <b>TUV 8</b> ► your extension no.         </p>
Call on Hold	<p><b>Holding</b></p> <p><b>HOLD</b></p> <p><b>To retrieve a call on hold</b></p> <p> <b>F1-F12</b> ► <b>Talk</b></p> <p><b>INT</b> </p>
Call Transfer	<p><b>XFER CLR</b> ► <b>extension no.</b> to an extension ► <b>Announce</b> ► <b>OFF</b></p> <p><b>F1-F12</b> <b>phone no.</b> to an external party</p>
Conference	<p><b>FUNC</b> ► <b>CONF</b> <b>GHI 4</b> ► third party's no. ► <b>Talk</b> ► <b>FUNC</b> ► <b>CONF</b> <b>GHI 4</b></p>
Do Not Disturb (DND)	<p> ► <b>FUNC</b> ► <b>FWD/DND</b> <b>ABC 2</b> ► <b>1</b> to set ► <b>OFF</b></p> <p><b>OPER 0</b> to cancel</p>
Message Waiting	<p><b>To leave a notification</b></p> <p><b>FUNC</b> ► <b>MSG</b> <b>DEF 3</b> ► <b>OFF</b></p> <p><b>To cancel a notification</b></p> <p> ► <b>PQRS 7</b> <b>OPER 0</b> <b>OPER 0</b> ► extension no. ► <b>OFF</b></p> <p><b>To check a message</b></p> <p><b>FUNC</b> ► <b>MSG</b> <b>DEF 3</b></p> <p><b>To call back</b></p> <p> ► <b>FUNC</b> ► <b>MSG</b> <b>DEF 3</b> ► <b>Talk</b></p> <p><b>To clear all notifications</b></p> <p> ► <b>PQRS 7</b> <b>OPER 0</b> <b>OPER 0</b> ► your extension no. ► <b>OFF</b></p>


# FEATURES LIST

## For the KX-TD500

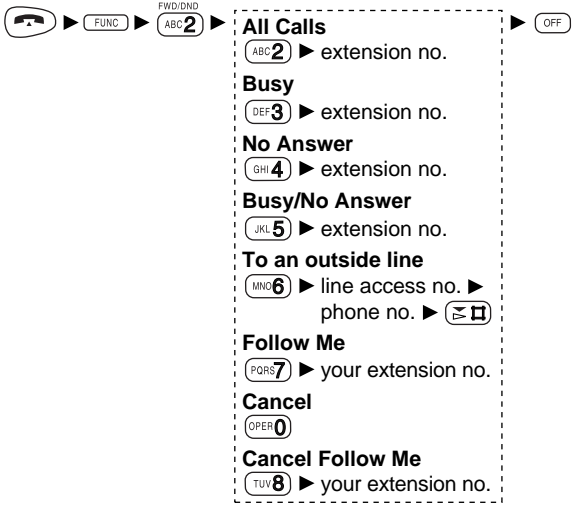Desired Function	Operation
Call Forwarding	 <p>The diagram shows the sequence of button presses for Call Forwarding: a telephone handset icon, a 'FUNC' button, an 'FWD/DND' button with 'ABC 2' on it, and an 'OFF' button. A dashed box encloses the following options:</p> <ul style="list-style-type: none"> <li><b>All Calls</b>: (ABC 2) ► extension no.</li> <li><b>Busy</b>: (DEF 3) ► extension no.</li> <li><b>No Answer</b>: (GHI 4) ► extension no.</li> <li><b>Busy/No Answer</b>: (JKL 5) ► extension no.</li> <li><b>To an outside line</b>: (MNO 6) ► line access no. ► phone no. ► [≡] [□]</li> <li><b>Follow Me</b>: (PQRS 7) ► your extension no.</li> <li><b>Cancel</b>: (OPER 0)</li> <li><b>Cancel Follow Me</b>: (TUV 8) ► your extension no.</li> </ul>
Call on Hold	<p><b>Holding</b></p> <p>[HOLD]</p> <p><b>To retrieve a call on hold</b></p> <p>[F1-F12] [INT.] ► Talk</p>
Call Transfer	<p>[XFER CLR] ► [ extension no. to an extension F1-F12 phone no. to an external party ] ► Announce ► [OFF]</p>
Conference	<p>[FUNC] ► [CONF GHI 4] ► third party's no. ► Talk ► [FUNC] ► [CONF GHI 4]</p>
Do Not Disturb (DND)	<p>[Handset] ► [FUNC] ► [FWD/DND ABC 2] ► [ 1 to set OPER 0 to cancel ] ► [OFF]</p>
Message Waiting	<p><b>To leave a notification</b></p> <p>[FUNC] ► [MSG DEF 3] ► [OFF]</p> <p><b>To cancel a notification</b></p> <p>[Handset] ► [PQRS 7] [OPER 0] [OPER 0] ► extension no. ► [OFF]</p> <p><b>To check a message</b></p> <p>[FUNC] ► [MSG DEF 3]</p> <p><b>To call back</b></p> <p>[Handset] ► [FUNC] ► [MSG DEF 3] ► Talk</p> <p><b>To clear all notifications</b></p> <p>[Handset] ► [PQRS 7] [OPER 0] [OPER 0] ► your extension no. ► [OFF]</p>

# FEATURES LIST

## For the KX-T336

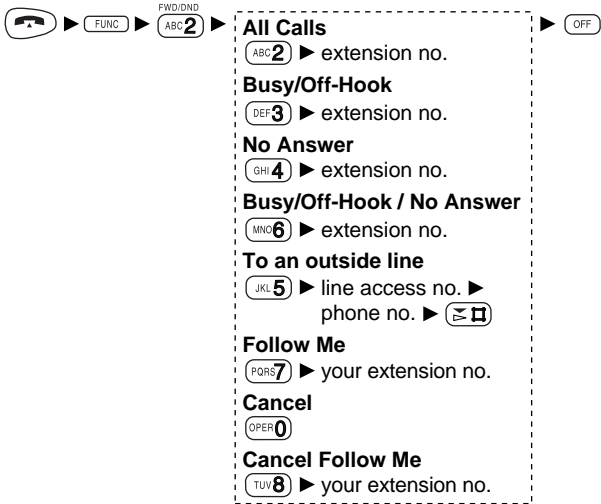Desired Function	Operation
Call Forwarding	 <p><b>All Calls</b>            ABC 2 ► extension no.</p> <p><b>Busy/Off-Hook</b>            DEF 3 ► extension no.</p> <p><b>No Answer</b>            GHI 4 ► extension no.</p> <p><b>Busy/Off-Hook / No Answer</b>            MNO 6 ► extension no.</p> <p><b>To an outside line</b>            JKL 5 ► line access no. ►            phone no. ► ☎</p> <p><b>Follow Me</b>            PQRS 7 ► your extension no.</p> <p><b>Cancel</b>            OPER 0</p> <p><b>Cancel Follow Me</b>            TUV 8 ► your extension no.</p>
Call on Hold	<p><b>Holding</b>      <b>To retrieve a call on hold</b></p> <p>HOLD      F1 - F12            ○ ► Talk</p>
Call Transfer	<p>XFER CLR ► [ extension no. to an extension            F1 - F12            ○ phone no. to an external party ] ► Announce ► OFF</p>
Conference	<p>FUNC ► CONF GHI 4 ► third party's no. ► Talk ► FUNC ► CONF GHI 4</p>
Do Not Disturb (DND)	<p>Phone icon ► FUNC ► FWD/DND ABC 2 ► [ 1 to set            OPER 0 to cancel ] ► OFF</p>
Message Waiting	<p><b>To leave a notification</b>            FUNC ► MSG DEF 3 ► OFF</p> <p><b>To cancel a notification</b>            Phone icon ► ☎ (WXYZ 9) ► extension no. ► OFF</p> <p><b>To check a message</b>            FUNC ► MSG DEF 3</p> <p><b>To call back</b>            Phone icon ► FUNC ► MSG DEF 3 ► Talk</p> <p><b>To clear all notifications</b>            Phone icon ► ☎ (WXYZ 9) ► your extension no. ► OFF</p>

**For your future reference**

SERIAL NO. \_\_\_\_\_  
(found on the bottom of the unit)

DATE OF PURCHASE \_\_\_\_\_

NAME OF DEALER \_\_\_\_\_

DEALER'S ADDRESS \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

DEALER'S TEL. NO. \_\_\_\_\_

**Panasonic Consumer Electronics Company,  
Division of Matsushita Electric Corporation of America**  
One Panasonic Way, Secaucus, New Jersey 07094

**Panasonic Sales Company,  
Division of Matsushita Electric of Puerto Rico, Inc.**  
Ave. 65 de Infantería, Km.9.5, San Gabriel Industrial Park  
Carolina, Puerto Rico 00985

**Copyright:**

This manual is copyrighted by Kyushu Matsushita Electric Co., Ltd. (KME).  
Under the applicable copyright laws, this manual may not be reproduced in any  
form, in whole or part, without the prior written consent of KME and its licensee.

© 2000 Kyushu Matsushita Electric Co., Ltd. All Rights Reserved.