

Panasonic

Model No. **KX-TG210-B**
KX-TG210-S

Pulse-or-tone dialing capability

OPERATING INSTRUCTIONS

Contents:

Location of Controls	2
Connection	4
Battery Charge	5
Selecting the Dialing Mode	6
Making/Answering Calls	7
Simultaneous Keypad Dialing	9
Remote Speakerphone	10
Speed Dialer	11
Important Safety Instructions	12
FCC and Other Information	14

PLEASE READ BEFORE USE AND SAVE.

Charge the battery for about 15 hours before initial use.

Battery Charge

To power the handset, charge the battery.

Place the handset on the base unit for about 15 hours before initial use.

- The IN USE/CHARGE indicator lights.

■ Recharge

When the RECHARGE indicator flashes or the unit beeps intermittently, recharge the battery.

- **Clean the handset and the base unit charge contacts with a soft dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** If not, the battery may not charge properly.
- If the battery is fully charged, you do not have to place the handset on the base unit until the RECHARGE indicator flashes. This will maximize the battery life.
- The battery cannot be overcharged.

Making/Answering Calls

■ To make a call with the handset

- 1 Press **TALK**.
 - The TALK indicator lights.
 - 2 Dial a telephone number.
 - 3 To hang up, press **TALK** or place the handset on the base unit.
 - The TALK indicator light goes out.
- If an alarm tone sound in step 1, move closer to the base unit or place the handset on the base unit. Then try again.
 - **If you misdial:** Press **FLASH** firmly, then dial again.
 - **To redial the last number:** Press **TALK**, then press **REDIAL**.
 - **To select the receiver volume:** Press **LOUD** while talking. Each time you press the button, the volume level will change from MEDIUM (preset) to HIGH to LOW.
 - **To put a call on hold:** Press **HOLD**.
 - **To release the hold:** From the handset, press **TALK**. From the base unit, press **SP-PHONE**.

■ To answer a call with the handset

If the handset is off the base unit, press **TALK**.

If the handset is on the base unit, just lift up.

- **Any Key Talk:** You can also answer a call by pressing any dialing button 0 to 9, * or #.
- **Adjusting the ringer volume:** The TALK indicator light must be off.
 - To select **HIGH (preset)** or **LOW**, press **RINGER** briefly. Each time you press the button briefly, the selected volume rings and the ringer volume will change.
 - To turn the ringer **OFF**, press and hold **RINGER** until 2 beeps sound.
 - To turn the ringer **ON**, press **RINGER** briefly. The ringer sounds at the HIGH level.
- **Selecting the ringer tone (2 types):** When the TALK indicator light is off, press **RINGER** then press * within 5 seconds. The selected ringer tone sounds. Each time you press * within 5 seconds, the ringer tone will change.

Simultaneous Keypad Dialing

You can use the base unit like a standard telephone. After pressing **TALK** to make a call with the handset near the base unit, you can also dial using the base unit keypad.

- 1 Handset:
Press **TALK**.
- 2 Base unit:
Dial a telephone number while hearing a dial tone with the handset.
 - When the other party answers, talk using the handset.
- 3 Handset:
To hang up, press **TALK** or place the handset on the base unit.

Speed Dialer

You can store up to 20 phone numbers; 10 in the handset and 10 in the base unit. The dialing buttons (0 to 9) function as memory stations.

- Numbers stored in the handset can only be dialed by the handset, and vice versa.

■ To store a number in the handset

- 1 Press **PROGRAM**.
 - The TALK indicator flashes.
- 2 Enter a phone number up to 16 digits.
- 3 Press **AUTO**.
- 4 Press a memory station number (0 to 9).
 - To store other numbers, repeat steps 1 through 4.

■ To dial a stored number in the handset

- 1 Press **TALK**.
- 2 Press **AUTO**.
- 3 Press the memory station number (0 to 9).
 - The stored number is dialed.

■ To store a number in the base unit

- 1 Press **PROGRAM**.
 - The IN USE/CHARGE indicator flashes.
- 2 Enter a phone number up to 16 digits.
- 3 Press **AUTO**.
- 4 Press a memory station number (0 to 9).
 - To store other numbers, repeat steps 1 through 4.

■ To dial a stored number in the base unit

- 1 Press **SP-PHONE**.
- 2 Press **AUTO**.
- 3 Press the memory station number (0 to 9).
 - The stored number is dialed.

CAUTION:

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) specified.
2. Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
5. Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the cordless telephone further away from the TV or VCR. This will often reduce or eliminate interference.