

Panasonic

Model No. **KX-TG210-B**
KX-TG210-S

Pulse-or-tone dialing capability

OPERATING INSTRUCTIONS

Contents:

Location of Controls	2
Connection	4
Battery Charge	5
Selecting the Dialing Mode	6
Making/Answering Calls	7
Simultaneous Keypad Dialing	9
Remote Speakerphone	10
Speed Dialer	11
Important Safety Instructions	12
FCC and Other Information	14


PLEASE READ BEFORE USE AND SAVE.

Charge the battery for about 15 hours before initial use.


Please read IMPORTANT SAFETY INSTRUCTIONS on pages 12-13 before use. Read and understand all instructions.

Location of Controls

■ Handset

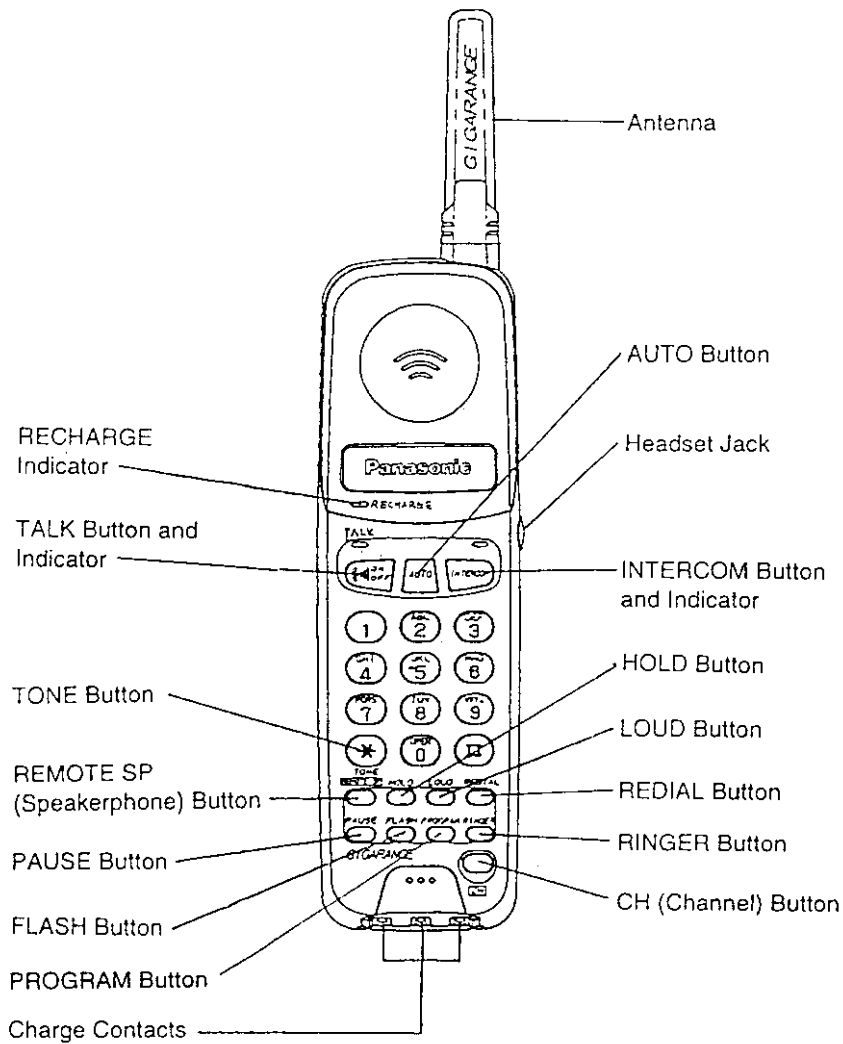


■ Base unit

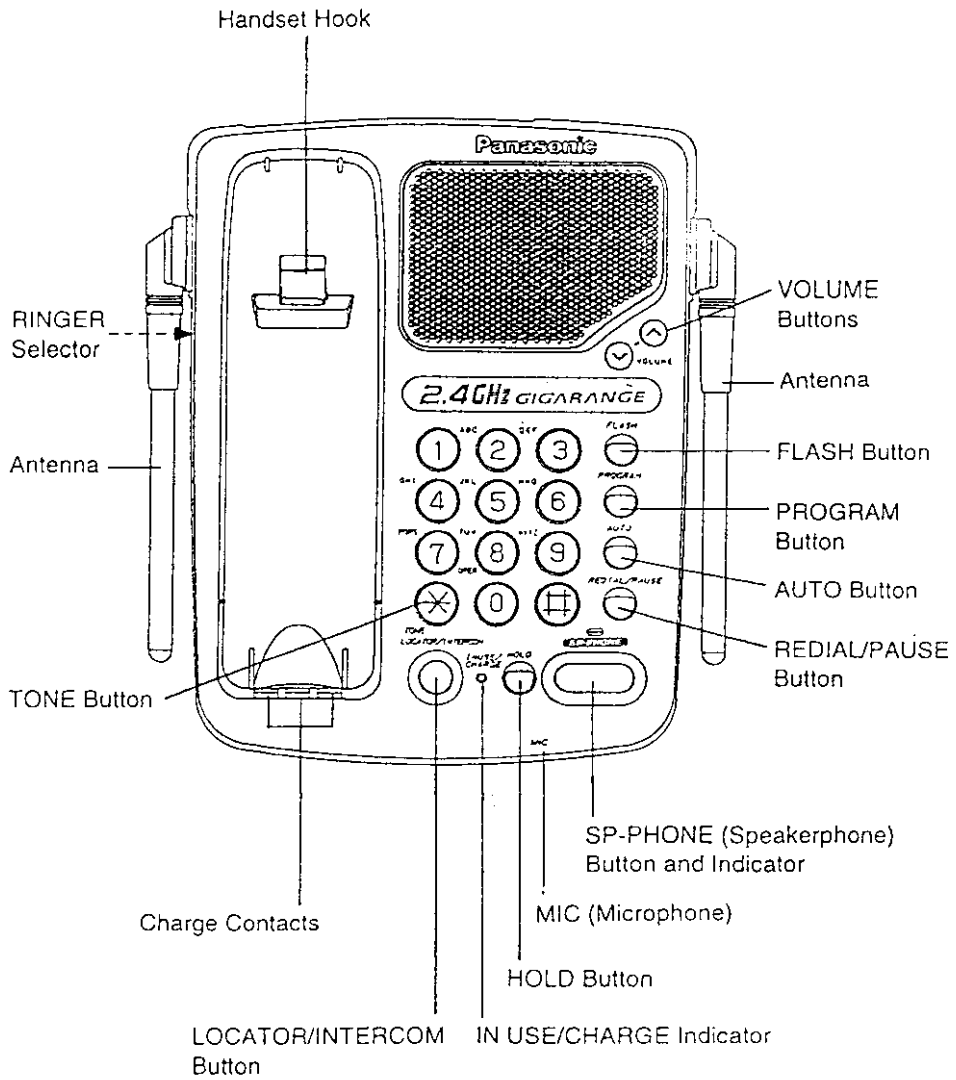

Connection

USE ONLY WITH Panasonic AC ADAPTOR KX-A11. The adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)

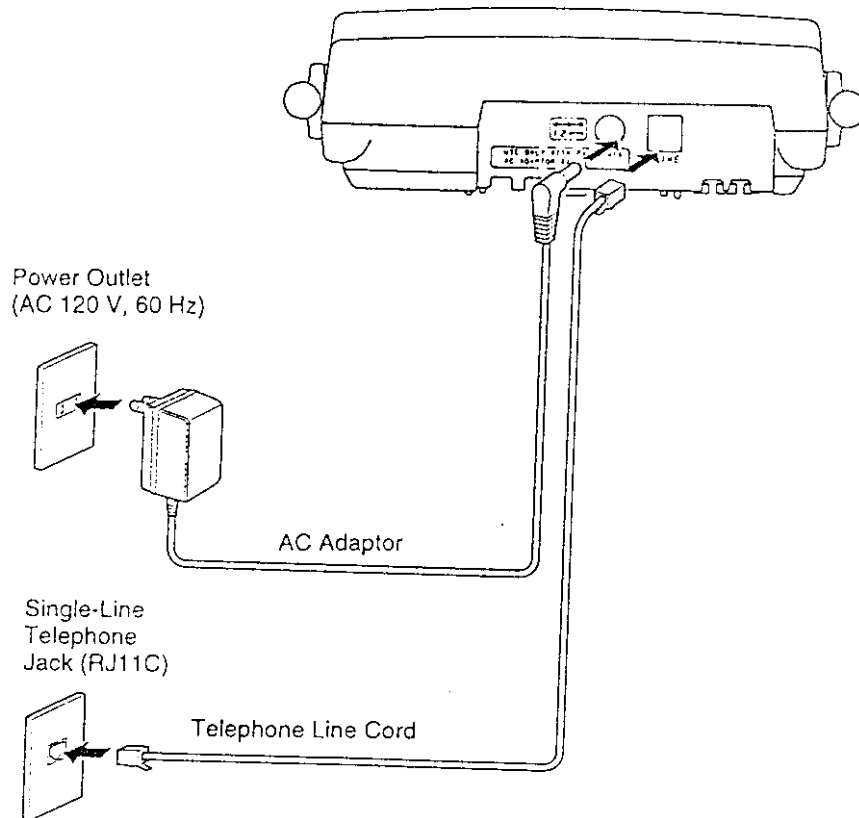

Battery Charge

To power the handset, charge the battery.

Place the handset on the base unit for about 15 hours before initial use.

- The IN USE/CHARGE indicator lights.

■ Recharge

When the RECHARGE indicator flashes or the unit beeps intermittently, recharge the battery.

- **Clean the handset and the base unit charge contacts with a soft dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** If not, the battery may not charge properly.
- If the battery is fully charged, you do not have to place the handset on the base unit until the RECHARGE indicator flashes. This will maximize the battery life.
- The battery cannot be overcharged.

Selecting the Dialing Mode

You can program the dialing mode by using the handset near the base unit. If you have touch tone service, set to TONE. If rotary or pulse service is used, set to PULSE.

The TALK and SP-PHONE indicator lights must be off before programming.

- 1 Press **PROGRAM**.
 - The TALK indicator flashes.
- 2 Press **AUTO**.
- 3 To select PULSE, press # twice.
OR
To select TONE, press * twice.
- 4 When finished, press **PROGRAM**.

Making/Answering Calls

■ To make a call with the handset

- 1 Press **TALK**.
 - The TALK indicator lights.
 - 2 Dial a telephone number.
 - 3 To hang up, press **TALK** or place the handset on the base unit.
 - The TALK indicator light goes out.
- If an alarm tone sound in step 1, move closer to the base unit or place the handset on the base unit. Then try again.
 - **If you misdial:** Press **FLASH** firmly, then dial again.
 - **To redial the last number:** Press **TALK**, then press **REDIAL**.
 - **To select the receiver volume:** Press **LOUD** while talking.
Each time you press the button, the volume level will change from MEDIUM (preset) to HIGH to LOW.
 - **To put a call on hold:** Press **HOLD**.
 - **To release the hold:** From the handset, press **TALK**.
From the base unit, press **SP-PHONE**.



■ To answer a call with the handset

If the handset is off the base unit, press **TALK**.

If the handset is on the base unit, just lift up.

- **Any Key Talk:** You can also answer a call by pressing any dialing button 0 to 9, *, or #.
- **Adjusting the ringer volume:** The TALK indicator light must be off.
 - To select **HIGH (preset)** or **LOW**, press **RINGER** briefly. Each time you press the button briefly, the selected volume rings and the ringer volume will change.
 - To turn the ringer **OFF**, press and hold **RINGER** until 2 beeps sound.
 - To turn the ringer **ON**, press **RINGER** briefly. The ringer sounds at the HIGH level.
- **Selecting the ringer tone (2 types):** When the TALK indicator light is off, press **RINGER** then press * within 5 seconds. The selected ringer tone sounds. Each time you press * within 5 seconds, the ringer tone will change.

■ **To make a call with the base unit**

- 1 Press **SP-PHONE**.
 - The indicator lights.
 - 2 Dial a telephone number.
 - 3 Talk into the **MIC** (microphone).
 - 4 To hang up, press **SP-PHONE**.
 - The indicator light goes out.
-
- **If you misdial:** Press **FLASH** firmly, then dial again.
 - **To redial the last number:** Press **SP-PHONE**, then press **REDIAL/PAUSE**.
 - **To adjust the speaker volume (12 levels):** To increase, press **VOLUME** .
To decrease, press **VOLUME** .
 - **To put a call on hold:** Press **HOLD**.
 - **To release the hold:** From the base unit, press **SP-PHONE**.
From the handset, press **TALK** or lift the handset off the base unit.

■ **To answer a call with the base unit**

Press **SP-PHONE**, then talk into the **MIC** (microphone).

- **To select the base unit ringer volume:** Set the **RINGER** selector to **HIGH**, **LOW**, or **OFF**. When set to **OFF**, the base unit will not ring.

Simultaneous Keypad Dialing

You can use the base unit like a standard telephone. After pressing **TALK** to make a call with the handset near the base unit, you can also dial using the base unit keypad.

- 1 Handset:
Press **TALK**.
- 2 Base unit:
Dial a telephone number while hearing a dial tone with the handset.
 - When the other party answers, talk using the handset.
- 3 Handset:
To hang up, press **TALK** or place the handset on the base unit.

Remote Speakerphone

You can switch a call with the handset to the speakerphone easily.

- 1 Handset:
During a call with the handset, press **REMOTE SP.**
 - The call switches to the base unit.
 - The INTERCOM indicator flashes.
 - The SP-PHONE indicator lights.

- 2 Base unit:
Talk into the **MIC.**

- 3 Base unit:
To hang up, press **SP-PHONE.**
 - The indicator lights go out.
 - You can also hang up by pressing **REMOTE SP.**

Speed Dialer

You can store up to 20 phone numbers; 10 in the handset and 10 in the base unit. The dialing buttons (0 to 9) function as memory stations.

- Numbers stored in the handset can only be dialed by the handset, and vice versa.

■ To store a number in the handset

- 1 Press **PROGRAM**.
 - The TALK indicator flashes.
- 2 Enter a phone number up to 16 digits.
- 3 Press **AUTO**.
- 4 Press a memory station number (0 to 9).
 - To store other numbers, repeat steps 1 through 4.

■ To dial a stored number in the handset

- 1 Press **TALK**.
- 2 Press **AUTO**.
- 3 Press the memory station number (0 to 9).
 - The stored number is dialed.

■ To store a number in the base unit

- 1 Press **PROGRAM**.
 - The IN USE/CHARGE indicator flashes.
- 2 Enter a phone number up to 16 digits.
- 3 Press **AUTO**.
- 4 Press a memory station number (0 to 9).
 - To store other numbers, repeat steps 1 through 4.

■ To dial a stored number in the base unit

- 1 Press **SP-PHONE**.
- 2 Press **AUTO**.
- 3 Press the memory station number (0 to 9).
 - The stored number is dialed.

Important Safety Instructions

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from AC outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near water, for example, near a bathtub, washbowl, kitchen sink, or the like.
5. Place this unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
10. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
11. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized servicenter when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
12. Unplug this unit from the wall outlet and refer servicing to an authorized servicenter when the following conditions occur:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized servicenter.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
14. Do not use this unit to report a gas leak, when in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

CAUTION:

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) specified.
2. Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
5. Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

FCC and Other Information

If requested by the telephone company, inform them as follows:

FCC Registration No. (found on the bottom of the unit)

Ringer Equivalence 0.2B

The particular telephone line to which the equipment is connected.

This unit must not be connected to a coin operated line.

If you are on a party line, check with your local telephone company.

Ringer Equivalence No. (REN):

The REN is useful in determining the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

In the event terminal equipment causes harm to the telephone network, the telephone company should notify the customer, if possible, that service may be stopped. However, where prior notice is impractical, the company may temporarily cease service providing that they:

- (a) Promptly notify the customer.
- (b) Give the customer an opportunity to correct the problem with their equipment.
- (c) Inform the customer of the right to bring a complaint to the Federal Communication Commission pursuant to procedures set out in FCC Rules and Regulations Subpart E of Part 68.

The Telephone Company may make changes in its communications facilities, equipment, operations or procedures, where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in FCC Part 68.

If such changes can be reasonably expected to render any customer terminal equipment incompatible with telephone company communications facilities, or require modification or alteration of such terminal equipment, or otherwise materially affect its use or performance, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service.

When programming emergency numbers and/or making test calls to emergency numbers:

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities in the off-peak hours, such as early morning hours or late evenings.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the cordless telephone further away from the TV or VCR. This will often reduce or eliminate interference.

- This cordless telephone is designed for use in the United States of America. Sale or use of this product in other countries may violate local laws.
- Ce téléphone sans fil est conçu pour être utilisé aux États-Unis d'Amérique. La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale.
- Este teléfono sin cordón fue elaborado para uso en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir violación de la legislación local.
- このコードレス電話機は、日本国外での使用を目的として設計されており、日本国内での使用は法律違反となります。従って、当社では日本国内においては原則として修理などのサービスは致しかねます。

For product service

- Panasonic Servicenters are listed in the servicenter directory.
- Call 1-800-211-PANA(7262) for the location of an authorized servicenter.

When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.

Symptom _____

- Send the unit to an authorized servicenter, prepaid and adequately insured.
- Do not send your unit to the Panasonic Consumer Electronics Company listed below or to executive or regional sales offices. These locations do not repair consumer products.

For your future reference

Serial No. _____ Date of purchase _____
 (found on the bottom of the unit)
 Name and address of dealer _____

**Panasonic Consumer Electronics Company,
 Division of Matsushita Electric Corporation of America
 One Panasonic Way, Secaucus, New Jersey 07094**

**Panasonic Sales Company,
 Division of Matsushita Electric of Puerto Rico, Inc.
 Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park
 Carolina, Puerto Rico 00985**

Printed in Japan