

不正規事項、質問事項ををPDF上に赤書きしております。  
不正規は、後ほど修正しますのでご了承下さい。

# Panasonic<sup>®</sup>

## Operating Instructions

Digital Corded/Cordless Answering System

Model No. **KX-TG6671**  
**KX-TG6672**



Model shown is KX-TG6671.

***Before initial use, see “Getting Started” on page 8.***

**Thank you for purchasing a Panasonic product.**

Please read these operating instructions before using the unit and save them for future reference.

**Consulte “Guía Rápida Española”, página 48.**

This unit is compatible with Caller ID. You must subscribe to the appropriate service offered by your service provider/telephone company.

For assistance, visit our Web site: <http://www.panasonic.com/help> for customers in the U.S.A. or Puerto Rico.

**Please register your product: <http://www.panasonic.com/prodreg>**

## Table of Contents

<b>Introduction</b>		<b>Useful Information</b>	
Model composition .....	3	Wall mounting .....	41
Accessory information .....	3	Error messages .....	42
<b>Important Information</b>		Troubleshooting .....	42
For your safety .....	5	FCC and other information .....	46
Important safety instructions .....	6	<b>Guía Rápida Española</b>	
For best performance .....	6	Guía Rápida Española .....	48
Other information .....	6	<b>Appendix</b>	
Specifications .....	6	Customer services .....	53
<b>Getting Started</b>		Warranty (For United States and Puerto Rico) .....	54
Setting up .....	8	<b>Index</b>	
Note when setting up .....	9	Index .....	56
Intelligent eco mode .....	9		
Controls .....	10		
Belt clip .....	11		
Display .....	11		
Initial settings .....	12		
<b>Making/Answering Calls</b>			
Making calls .....	14		
Answering calls .....	15		
Useful features during a call .....	15		
<b>Shared Phonebook</b>			
Shared phonebook .....	18		
Speed dial .....	20		
<b>Programming</b>			
Programmable settings .....	21		
Special programming .....	26		
Registering a unit .....	27		
<b>Caller ID Service</b>			
Using Caller ID service .....	29		
Caller list .....	30		
<b>Answering System</b>			
Answering system .....	32		
Turning the answering system on/off .....	32		
Greeting message .....	32		
Listening to messages using the base unit .....	33		
Listening to messages using the handset .....	33		
Remote operation .....	34		
Answering system settings .....	35		
<b>Voice Mail Service</b>			
Voice mail service .....	37		
<b>Intercom/Locator</b>			
Intercom .....	39		
Handset locator .....	39		
Transferring calls, conference calls .....	39		

## Model composition


Series	Model No.	Base unit	Handset	
		Part No.	Part No.	Quantity
KX-TG6671 series	KX-TG6671	KX-TG6671	KX-TGA660	1
	KX-TG6672	KX-TG6671	KX-TGA660	2

## Accessory information

### Supplied accessories

No.	Accessory item/Order number	Quantity	
		KX-TG6671	KX-TG6672
①	AC adaptor/PNLV226Z	2	3
②	Telephone line cord/PQJA10075Z	1	1
③	Wall mounting adaptor/PNKL1034Z1	1	1
④	Corded handset/PNLXP1010Z	1	1
⑤	Corded handset cord/PQJA212V	1	1
⑥	Rechargeable batteries/HHR-4DPA	2	4
⑦	Handset cover* <sup>1</sup> /PNYNTGA660BR	1	2
⑧	Belt clip/PNKE1098Z1	1	2
⑨	Charger/PNLC1017ZB	1	2

<sup>2</sup>\*<sup>4</sup> The handset cover comes attached to the handset.

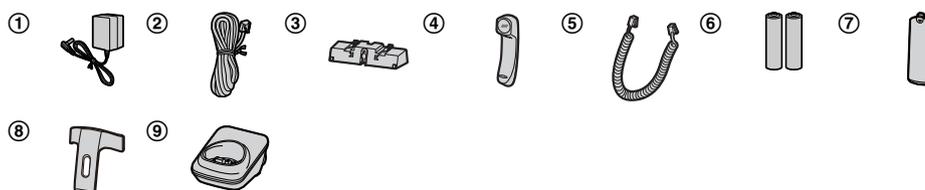

\*<sup>1</sup> The wall mounting adaptor comes attached to the base unit.

## Introduction

### Additional/replacement accessories

Please contact your nearest Panasonic dealer for sales information (page 53).

Accessory item	Order number
Rechargeable batteries	HHR-4DPA*1 ● To order, please call 1-800-332-5368 or visit <a href="http://www.panasonic.com/batterystore">http://www.panasonic.com/batterystore</a>
	Battery type: – Nickel metal hydride (Ni-MH) – 2 x AAA (R03) size for each handset
Headset	KX-TCA60, KX-TCA93, KX-TCA94, KX-TCA400, KX-TCA430
T-adaptor	KX-J66
Range extender	KX-TGA405*2

\*1 Replacement batteries may have a different capacity from that of the supplied batteries.

\*2 By installing this unit, you can extend the range of your phone system to include areas where reception was previously not available. This product can be purchased online. Please visit our Web site:  
<http://www.panasonic.com/RangeExtender>

### Expanding your phone system

#### Optional handset feature overview

You can expand your phone system by registering optional handsets (6 max.) to a single base unit.

- Optional handsets may be a different color from that of the supplied handsets.

Feature	KX-TGA660	KX-TGA410	KX-TGA659
Handset			
Display size	1.8 inches	1.8 inches	1.9 inches
Button size	Large	Large	Extra large

## Important Information

### For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

#### WARNING

##### Power connection

- Use only the power source marked on the product.
- Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact the Panasonic Call Center at 1-800-211-PANA (1-800-211-7262).
- Unplug from power outlets and never touch the inside of the product if its casing has been broken open.
- Never touch the plug with wet hands. Danger of electric shock exists.

##### Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- Do not allow the AC adaptor or telephone line cord to be excessively pulled, bent or placed under heavy objects.

##### Operating safeguards

- Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners.
- Do not disassemble the product.
- Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use.
- Do not excessively pull the corded handset cord from the base unit. This may cause the base unit to fall, resulting in injury.

##### Medical

- Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The product operates in

the frequency range of 1.92 GHz to 1.93 GHz, and the RF transmission power is 115 mW (max.).)

- Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

#### CAUTION

##### Installation and location

- Never install telephone wiring during an electrical storm.
- Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
- This cordless handset is unable to make calls when:
  - the handset batteries need recharging or have failed.
  - there is a power failure.

##### Battery

- We recommend using the batteries noted on page 4. **USE ONLY rechargeable Ni-MH batteries AAA (R03) size.**
- Do not mix old and new batteries.
- Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed.
- Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
- Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
- Only use a compatible charger to charge the batteries. Do not tamper with the charger. Failure to follow these instructions may cause the batteries to swell or explode.

##### Attention:



A nickel metal hydride battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY (1-800-822-8837) for information on how to recycle this battery.

## Important Information

### Important safety instructions

When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

#### SAVE THESE INSTRUCTIONS

### For best performance

#### Base unit location/avoiding noise

The base unit and other compatible Panasonic units use radio waves to communicate with each other.

- For maximum coverage and noise-free communications, place your base unit:
  - at a convenient, high, and central location with no obstructions between the cordless handset and base unit in an indoor environment.
  - away from electronic appliances such as TVs, radios, personal computers, wireless devices, or other phones.
  - facing away from radio frequency transmitters, such as external antennas of mobile phone cell stations. (Avoid putting the base unit on a bay window or near a window.)
- Coverage and voice quality depends on the local environmental conditions.
- If the reception for a base unit location is not satisfactory, move the base unit to another location for better reception.

#### Environment

- Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors.
- The product should be kept free from excessive smoke, dust, high temperature, and vibration.
- The product should not be exposed to direct sunlight.
- Do not place heavy objects on top of the product.
- When you leave the product unused for a long period of time, unplug the product from the power outlet.
- The product should be kept away from heat sources such as heaters, kitchen stoves, etc. It should not be placed in rooms where the temperature is less than 0 °C (32 °F) or greater than 40 °C (104 °F). Damp basements should also be avoided.
- The maximum calling distance may be shortened when the product is used in the following places: Near obstacles such as hills, tunnels, underground, near metal objects such as wire fences, etc.

- Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.

#### Routine care

- **Wipe the outer surface of the product with a soft moist cloth.**
- Do not use benzine, thinner, or any abrasive powder.

### Other information

**CAUTION:** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

#### Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product.

#### Notice

- This product is designed for use in the United States of America. Sale or use of this product in other countries may violate local laws.
- Cet appareil est conçu pour être utilisé aux États-Unis d'Amérique. La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale.
- Este producto está diseñado para usarse en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir violación de la legislación local.
- 本產品專為美國使用而設。若在其他國家銷售或使用，可能會違反當地法例。
- この製品は、日本国外での使用を目的として設計されており、日本国内での使用は法律違反となります。従って、当社では日本国内においては原則として修理などのサービスは致しかねます。

#### ENERGY STAR

As an ENERGY STAR® Partner, Panasonic has determined that this product meets the ENERGY STAR guidelines for energy efficiency. ENERGY STAR is a U.S. registered mark.



### Specifications

- **Standard:**  
DECT 6.0 (Digital Enhanced Cordless Telecommunications 6.0)

電気ご担当者さま  
数値等のご確認、お  
願います。

- **Frequency range:**  
1.92 GHz to 1.93 GHz
- **RF transmission power:**  
115 mW (max.)
- **Power source:**  
120 V AC, 60 Hz
- **Power consumption:**  
**Base unit:**  
Standby: Approx. 0.8 W  
Maximum: Approx. 1.5 W  
**Charger:**  
Standby: Approx. 0.1 W  
Maximum: Approx. 2.0 W
- **Operating conditions:**  
0 °C – 40 °C (32 °F – 104 °F), 20 % – 80 % relative air  
humidity (dry)

**Note:**

- Design and specifications are subject to change  
without notice.
- The illustrations in these instructions may vary slightly  
from the actual product.

## *Important Information*

## Getting Started



### Setting up

#### Connections

- Use only the supplied Panasonic AC adaptor PNLV226.

#### ■ Base unit


Wall mounting adaptorを外すイラストを追加します。添付参照

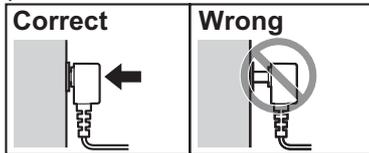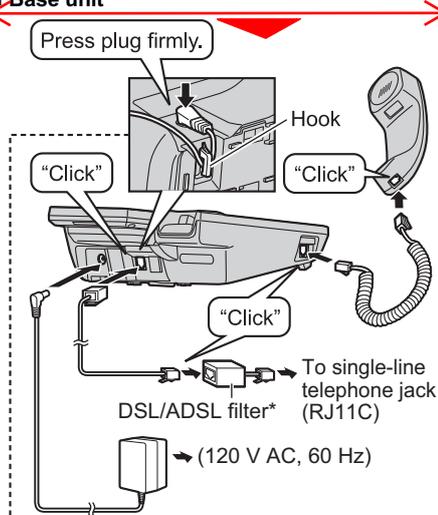

据え置き用にWall mounting adaptorを再度取り付けるイラストを追加します。添付のイラストを修正中


\*DSL/ADSL filter (not supplied) is required if you have DSL/ADSL service.

#### ■ Charger

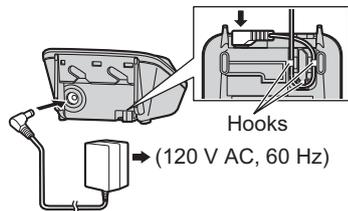

### Battery installation

- USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.
- Confirm correct polarities ( $\oplus$ ,  $\ominus$ ).

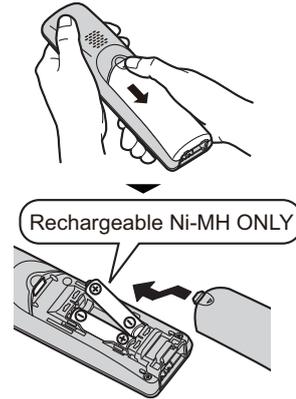


- When the date and time setting is displayed, see page 12.

### Battery charging

Charge for about 7 hours.

- When the batteries are fully charged, the charge indicator goes off and "Fully charged" is displayed.

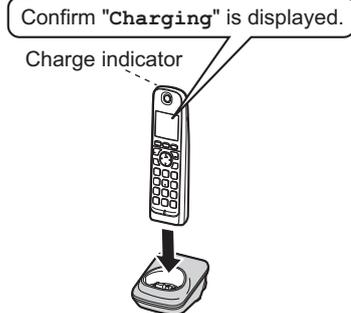

## Note when setting up

### Note for connections

- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.

### During a power failure

The base unit will work as a standard telephone using power from the telephone line, so you can make and answer outside calls with the corded handset. However, this operation may not work properly depending on area or telephone line's condition. The base unit speakerphone and the cordless handset will not function during a power failure.

### Note for battery installation

- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted on page 4, 5.
- Wipe the battery ends (⊕, ⊖) with a dry cloth.
- Avoid touching the battery ends (⊕, ⊖) or the unit contacts.

### Note for battery charging

- It is normal for the handset to feel warm during charging.
- Clean the charge contacts of the handset and charger with a soft and dry cloth once a month. Clean more often if the unit is exposed to grease, dust, or high humidity.

### Battery level

Icon	Battery level
	High
	Medium
	Low
	Needs charging.
	Empty

### Panasonic Ni-MH battery performance (supplied batteries)

Operation	Operating time
In continuous use	13 hours max.*1
Not in use (standby)	11 days max.*1

\*1 If Eco mode is on.

### Note:

- Actual battery performance depends on usage and ambient environment.
- Even after the batteries are fully charged, the handset can be left on the charger without any ill effect on the batteries.
- The battery level may not be displayed correctly after you replace the batteries. In this case, place the handset on the charger and let it charge for at least 7 hours.

## Intelligent eco mode


This feature automatically reduces handset power consumption by suppressing handset transmission power when the handset is close to the base unit.

- When this feature is activated, **ECO** is displayed.
- Eco mode is turned off when the clarity booster is activated (page 16).

## Getting Started

### Controls

#### Base unit

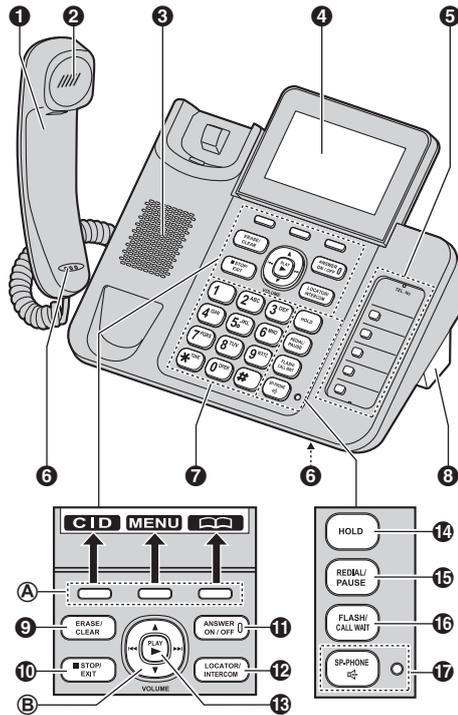

- 1 Corded handset
- 2 Receiver
- 3 Speaker
- 4 Display\*1
- 5 Speed dial buttons
- 6 Microphone
- 7 Dial keypad (☒: TONE)
- 8 Wall mounting adaptor\*2
- 9 [ERASE] [CLEAR]
- 10 [■] (STOP) (EXIT)
- 11 [ANSWER ON/OFF]  
ANSWER ON/OFF indicator
- 12 [LOCATOR] [INTERCOM]
- 13 [▶] (PLAY)  
Message indicator
- 14 [HOLD]

- 15 [REDIAL] [PAUSE]
- 16 [FLASH] [CALL WAIT]
- 17 [☎] (SP-PHONE: Speakerphone)  
SP-PHONE indicator

- \*1 The display can be moved back and forth to select the desired angle.
- \*2 The wall mounting adaptor is attached to the base unit for desk stand use. If you want to mount the base unit on a wall, remove the wall mounting adaptor once, then attach it again in the position for wall mounting use (page 41).

#### Control type


##### A Soft keys

The base unit features 3 soft keys. By pressing a soft key, you can select the feature shown directly above it on the display.

##### B Navigator key

- [▲], [▼], [◀], or [▶]: Scroll through various lists and items.
- VOLUME ([▲] or [▼]): Adjust the speaker volume while talking.
- [◀]/[▶]: Repeat/skip messages during playback.

**Handset**

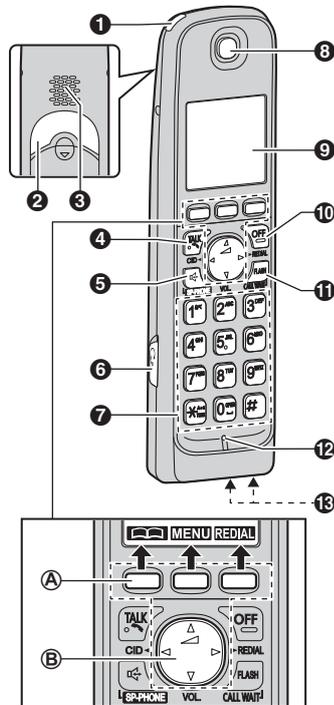

- ❶ Charge indicator
  - Ringer indicator
  - Message indicator
  - ❷ Nonslip pad
    - Nonslip pad offers support when you cradle the handset between your shoulder and ear.
  - ❸ Speaker
  - ❹ [TALK]
  - ❺ [SP-PHONE: Speakerphone]
  - ❻ Headset jack
  - ❼ Dial keypad [TONE]
  - ❽ Receiver
  - ❾ Display
  - ❿ [OFF]
  - ⓫ [FLASH] [CALL WAIT]
  - ⓬ Microphone
  - ⓭ Charge contacts
- Control type  
 Ⓐ Soft keys

The handset features 3 soft keys. By pressing a soft key, you can select the feature shown directly above it on the display.

Ⓑ Navigator key

- [▲], [▼], [◀], or [▶]: Scroll through various lists and items.
- VOL. (Volume: [▲] or [▼]): Adjust the receiver or speaker volume while talking.
- [◀] CID (Caller ID): View the caller list.
- [▶] REDIAL: View the redial list.

**Belt clip**

■ To attach



■ To remove



**Display**

**Base unit display items**

Item	Meaning
🔕	Ringer volume is off. (page 15)
<del>PRIV</del> PRIV. (黒文字)	Call sharing mode is off. (page 24)
In use	Answering system is being used by a handset.
Line in use	Someone is using the line.
☎	Answering system answers calls with a greeting message and caller messages are not recorded. ("Selecting <b>Greeting only</b> ", page 36)

**Handset display items**

Item	Meaning
📶	Within base unit range
📶	Out of base unit range

## Getting Started

Item	Meaning
	The line is in use. <ul style="list-style-type: none"> <li>When flashing: The call is put on hold.</li> <li>When flashing rapidly: An incoming call is now being received.</li> </ul>
<b>ECO</b>	Eco mode is on. (page 9)
<b>EQ</b>	Equalizer is set. (page 16)
	Speakerphone is on. (page 14)
	Ringer volume is off. (page 23)
<b>ZzZ</b>	Silent mode is on. (page 26)
<b>PRV</b>	Call sharing mode is off. (page 24)
	Alarm is on. (page 26)
<b>1</b>	Handset number
	Battery level
	Blocked call (page 27)
<b>BOOST</b>	Clarity booster is on. (page 16)
<b>In use</b>	Answering system is being used by the base unit or another handset.
<b>Line in use</b>	Someone is using the line.

## Initial settings

### ■ Direct command code:

Programmable settings can be accessed by pressing **[MENU]**, **[#]** and then the corresponding code on the dial keypad (page 21).

Example: Press **[MENU][#][1][0][1]**.

### ■ Symbol meaning:

Symbol	Meaning
	Perform with the base unit.
	Perform with the handset.
<b>Example:</b> <b>[↕]: "off"</b>	Press <b>[▼]</b> or <b>[▲]</b> to select the words in quotations.

親機でも操作が可能な言語設定[1][1][0]に変更します。

## Date and time

### Important:

- When you install the batteries for the first time, the handset may prompt you to set date and time. First press **[SELECT]**, then proceed to step 2.

### Handset

- [MENU][#][1][0][1]**
- Enter the current month, date, and year by selecting 2 digits for each.  
**Example:** July 15, 2011  
**[0][7][1][5][1][1]**
- [OK]**
- Enter the current hour and minute (12-hour clock format) by selecting 2 digits for each.  
**Example:** 9:30  
**[0][9][3][0]**
- [AM/PM]:** Select "**AM**" or "**PM**".
- [SAVE] → [OFF]**

### Note:

- When English is selected as the display language, 12-hour clock format is used. When Spanish is selected, 24-hour clock format is used.
- The date and time may be incorrect after a power failure. In this case, set the date and time again.

## Display language

You can select either "**English**" or "**Español**" as the display language. The default setting is "**English**".

### Base unit / Handset

- [MENU][#][1][1][0]**
- [↕]:** Select the desired setting. → **[SAVE]**
- Proceed with the operation for your unit.  
**Base unit:** **[■]** (EXIT)  
**Handset:** **[OFF]**

## Voice guidance language

You can select either "**English**" or "**Español**" as the voice guidance language of the answering system. The default setting is "**English**".

 **Handset**

- 1 **[MENU]#112**
- 2 **[↕]**: Select the desired setting.
- 3 **[SAVE] → [OFF]**

---

**Dialing mode**

If you cannot make calls, change this setting according to your telephone line service. The default setting is “**Tone**”.

“**Tone**”: For tone dial service.

“**Pulse**”: For rotary/pulse dial service.

 **Handset**

- 1 **[MENU]#120**
- 2 **[↕]**: Select the desired setting.
- 3 **[SAVE] → [OFF]**

## Making/Answering Calls

### Making calls

#### Using the base unit

- 1 Dial the phone number.
  - To correct a digit, press **[CLEAR]**.
- 2 Lift the corded handset.
- 3 When you finish talking, place the corded handset on the cradle.

#### Note:

- You can also dial the phone number after lifting the corded handset.

#### Using the speakerphone

- 1 During a conversation with the corded handset, press **[☎]** to turn on the speakerphone.
  - You can place the corded handset on the cradle.
  - Speak into the base unit microphone.
  - Speak alternately with the other party.
- 2 When you finish talking, press **[☎]**.

#### Note:

- For best performance, use the speakerphone in a quiet environment.
- To switch to the receiver, lift the corded handset.

#### Making a call using the redial list

The last 10 phone numbers dialed are stored in the redial list (each 48 digits max.).

- 1 **[REDIAL]**
- 2 **[↕]**: Select the desired phone number.
- 3 Lift the corded handset.

#### Erasing a number in the redial list

- 1 **[REDIAL]**
- 2 **[↕]**: Select the desired phone number. → **[ERASE]** (soft key)
- 3 **[↕]**: “Yes” → **[SELECT]**
- 4 **[■]** (EXIT)

#### Using the handset

- 1 Lift the handset and dial the phone number.
  - To correct a digit, press **[CLEAR]**.
- 2 Press **[☎]** or **[CALL]**.

- 3 When you finish talking, press **[OFF]** or place the handset on the charger.

#### Using the speakerphone

- 1 Dial the phone number and press **[☎]**.
  - Speak alternately with the other party.
- 2 When you finish talking, press **[OFF]**.

#### Note:

- For best performance, use the speakerphone in a quiet environment.
- To switch back to the receiver, press **[☎]**/**[☎]**.

#### Making a call using the redial list

The last 5 phone numbers dialed are stored in the redial list (each 48 digits max.).

- 1 **[REDIAL]** or **[▶] REDIAL**
  - If there is a new message in the voice mail or answering system, **[REDIAL]** is not displayed.
- 2 **[↕]**: Select the desired phone number.
- 3 **[☎]**

#### Erasing a number in the redial list

- 1 **[REDIAL]** or **[▶] REDIAL**
- 2 **[↕]**: Select the desired phone number. → **[ERASE]**
- 3 **[↕]**: “Yes” → **[SELECT]**
- 4 **[OFF]**

#### Adjusting the receiver or speaker volume

##### Base unit / Handset

Press **[▲]** or **[▼]** repeatedly while talking.

#### Pause (for PBX/long distance service users)

A pause is sometimes required when making calls using a PBX or long distance service. When storing a calling card access number and/or PIN in the phonebook, a pause is also needed (page 19).

**Example:** If you need to dial the line access number “9” when making outside calls with a PBX:

## Making/Answering Calls

### Base unit / Handset

- 1 **[9]** → **[PAUSE]**
- 2 Dial the phone number.
- 3 Proceed with the operation for your unit.  
**Base unit:** Lift the corded handset.  
**Handset:** **[↶]**

#### Note:

- A 3.5 second pause is inserted each time **[PAUSE]** is pressed. Repeat as needed to create longer pauses.

## Answering calls

### Using the base unit

When a call is being received, the SP-PHONE indicator flashes rapidly.

- 1 Lift the corded handset or press **[↶]** when the unit rings.
- 2 When you finish talking, place the corded handset on the cradle. When the speakerphone is used, press **[↶]**.

### Using the handset

When a call is being received, the ringer indicator flashes rapidly.

- 1 Lift the handset and press **[↶]** or **[↷]** when the unit rings.
  - You can also answer the call by pressing any dial key from **[0]** to **[9]**, **[\*]**, or **#[**. (**Any key answer feature**)
- 2 When you finish talking, press **[OFF]** or place the handset on the charger.

#### Auto talk

You can answer calls simply by lifting the handset off the charger. You do not need to press **[↶]**. To turn this feature on, see page 24.

## Adjusting the ringer volume

### Base unit / Handset

- **While the unit is ringing for an incoming call:**  
Press **[▲]** or **[▼]** repeatedly to select the desired volume.

- To turn the ringer off, press and hold **[▼]** until the unit beeps. (Base unit)

#### ■ Programming the volume beforehand:

- 1 **[MENU]** **#[160]**
- 2 **[↕]**: Select the desired volume. → **[SAVE]**
- 3 Proceed with the operation for your unit.  
**Base unit:** **[■]** (EXIT)  
**Handset:** **[OFF]**

#### Note for base unit:

- Even when the ringer volume is set to off, the base unit still rings for intercom calls (page 39).

## Temporary ringer off

While the unit is ringing for a call, you can turn the ringer off temporarily by pressing **[⊘]**.

## Useful features during a call

### Hold

This feature allows you to put an outside call on hold.

#### Base unit

- 1 Press **[HOLD]** during an outside call.
  - If you are using the corded handset, you can place it on the cradle.
- 2 To release hold, lift the corded handset or press **[↶]**.
  - A handset user can take the call by pressing **[↶]**.

#### Handset

- 1 Press **[MENU]** during an outside call.
- 2 **[↕]**: "Hold" → **[SELECT]**
- 3 To release hold, press **[↶]**.
  - Another user can take the call by lifting the corded handset or pressing **[↶]** on the handset.

#### Note for base unit and handset:

- If a call is kept on hold for more than 9 minutes, an alarm tone starts to sound and the ringer indicator on the handset flashes rapidly. After 1 additional minute on hold, the call is disconnected.

## Making/Answering Calls

- If another phone is connected to the same line, you can also take the call by lifting its handset.
- While an outside call is on hold, the SP-PHONE indicator on the base unit flashes.

### Mute

While mute is turned on, you can hear the other party, but the other party cannot hear you.

 Base unit /  Handset

- 1 Press **[MUTE]** during conversation.
  - **[MUTE]** flashes.
- 2 To return to the conversation, press **[MUTE]** again.

#### Note:

- **[MUTE]** is a soft key visible on the display during a call.

### Flash

 Base unit /  Handset

**[FLASH]** allows you to use the special features of your host PBX such as transferring an extension call, or accessing optional telephone services.

#### Note:

- To change the flash time, see page 24.

### For call waiting or Call Waiting Caller ID service users

To use call waiting or Call Waiting Caller ID, you must first subscribe with your service provider/telephone company.

This feature allows you to receive calls while you are already talking on the phone. If you receive a call while on the phone, you will hear a call waiting tone.

**If you subscribe to both Caller ID and Call Waiting with Caller ID services**, the 2nd caller's information is displayed on the base unit or handset that is in use after you hear the call waiting tone.

 Base unit /  Handset

- 1 Press **[CALL WAIT]** to answer the 2nd call.
- 2 To switch between calls, press **[CALL WAIT]**.

#### Note:

- Please contact your service provider/telephone company for details and availability of this service in your area.

### Temporary tone dialing (for rotary/pulse service users)

You can temporarily switch the dialing mode to tone when you need to access touch-tone services (for example, answering services, telephone banking services, etc.).

 Base unit /  Handset

Press **[TONE]** before entering access numbers which require tone dialing.

### Handset clarity booster

This feature can improve sound clarity when the handset is used in an area where there may be interference. During an outside call, this feature is turned on automatically when necessary.

- When this feature is turned on, **[BOOST]** is displayed.

### Handset equalizer

This feature clarifies the voice of the person you are talking to, producing a more natural-sounding voice that is easier to hear and understand.

 
 
 
- 1 Press **[MENU]** while talking.
- 2 **[↕]**: "Equalizer" → **[SELECT]**
- 3 **[↕]**: Select the desired setting.
- 4 Press **[OK]** to exit.

#### Note:

- When this feature is activated, **[EQ]** is displayed while talking.
- Depending on the condition and quality of your telephone line, this feature may emphasize existing line noise. If it becomes difficult to hear, turn this feature off.
- This feature is not available while using the speakerphone.

### Call share

You can join an existing outside call.



---

## Making/Answering Calls

### Base unit

To join the conversation, lift the corded handset when the handset is on an outside call.

### Handset

To join the conversation, press [] when the other unit is on an outside call.

#### **Note for base unit and handset:**

- A maximum of 4 parties (including 1 outside party) can join a conversation using 3 extensions. **(4-way conference)**
- To prevent other users from joining your conversations with outside callers, turn call sharing mode off (page 24).

## Shared Phonebook

### Shared phonebook

The shared phonebook allows you to make calls without having to dial manually. The base unit and any handset registered to the base unit can use the shared phonebook. You can add 100 names and phone numbers to the shared phonebook, and assign each phonebook entry to the desired group.

#### Important:

- Only 1 person can access the shared phonebook at a time.
- Caller ID subscribers can use group ringer tone features (page 29).

### Adding entries

#### Handset

- 1 [📞] → [ADD]
- 2 Enter the party's name (16 characters max.). → [OK]
- 3 Enter the party's phone number (24 digits max.). → [OK]
- 4 [↕]: Select the desired group. → [SELECT]  
2 times
  - To add other entries, repeat from step 2.
- 5 [OFF]

#### Character table for entering names

While entering characters, you can switch between uppercase and lowercase by pressing [X] (A→a).

Key	Character
[1]	& ' ( ) * , - . / 1
[2]	A B C 2 a b c 2
[3]	D E F 3 d e f 3
[4]	G H I 4 g h i 4
[5]	J K L 5 j k l 5
[6]	M N O 6 m n o 6

Key	Character
[7]	P Q R S 7 p q r s 7
[8]	T U V 8 t u v 8
[9]	W X Y Z 9 w x y z 9
[0]	_ 0
[#]	#

- To enter another character that is located on the same dial key, first press [▶] to move the cursor to the next space.
- If you do not press any dial key within 5 seconds after entering a character, the character is fixed and the cursor moves to the next space.
- \_ in the above table represents a single space.

#### Erasing the character or number

Press [◀] or [▶]. → [CLEAR]

- Press and hold [CLEAR] to erase all characters or numbers.

### Groups

Groups can help you find entries in the phonebook quickly and easily. When adding an entry to the phonebook, you can assign it to one of 9 groups. You can change the names of groups assigned for phonebook entries ("Friends", "Family", etc.) and then search for phonebook entries by group. The group ringer tone feature is available for Caller ID subscribers (page 29).

#### Changing group names

The default group name is "Group 1" to "Group 9".

#### Handset

- 1 [📞] → [MENU]
- 2 [↕]: "Group" → [SELECT]
- 3 [↕]: Select the desired group. → [SELECT]
- 4 [↕]: "Group name" → [SELECT]
- 5 Edit the name (10 characters max.; page 18). → [SAVE]
- 6 [OFF]

## Shared Phonebook

### Finding and calling from a phonebook entry

 Base unit /  Handset

#### Scrolling through all entries

- 1 
- 2 : Select the desired entry.
- 3 Proceed with the operation for your unit.  
**Base unit:** Lift the corded handset.  
**Handset:** 

#### Searching by first character

- 1 
- 2 Press the dial key ( – ) which contains the character you are searching for (page 18).
  - Press the same dial key repeatedly to display the first entry corresponding to each character located on that dial key.
  - If there is no entry corresponding to the character you selected, the next entry is displayed.
- 3 : Scroll through the phonebook if necessary.
- 4 Proceed with the operation for your unit.  
**Base unit:** Lift the corded handset.  
**Handset:** 

or 

#### Searching by group

- 1  → **[GROUP]**
- 2 : Select the group you want to search. → **[SELECT]**
  - If you select “All groups”, the unit ends the group search.
- 3 : Select the desired entry.
- 4 Proceed with the operation for your unit.  
**Base unit:** Lift the corded handset.  
**Handset:** 

#### Editing entries

 Handset

- 1 Find the desired entry (page 19). → **[EDIT]**
- 2 Edit the name if necessary (16 characters max.; page 18). → **[OK]**
- 3 Edit the phone number if necessary (24 digits max.). → **[OK]**

- 4 : Select the desired group (page 18). → **[SELECT]** 2 times
- 5 **[OFF]**

#### Erasing entries

 Base unit /  Handset

#### Erasing an entry

- 1 Find the desired entry (page 19).
- 2 **[ERASE]** (soft key) → : “Yes” → **[SELECT]**
- 3 Proceed with the operation for your unit.  
**Base unit:**  (EXIT)  
**Handset:** **[OFF]**

#### Erasing all entries

- 1  → **[MENU]**
- 2 : “Erase all” → **[SELECT]**
- 3 : “Yes” → **[SELECT]**
- 4 : “Yes” → **[SELECT]**
- 5 Proceed with the operation for your unit.  
**Base unit:**  (EXIT)  
**Handset:** **[OFF]**

Base unit  
1  → **[ERASE]** (soft key)  
2 : “Yes” → **[SELECT]**  
3 : “Yes” → **[SELECT]**  
Handset

#### Chain dial

This feature allows you to dial phone numbers in the phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the phonebook, without having to dial manually.

 Base unit /  Handset

- 1 Proceed with the operation for your unit.  
During an outside call:  
**Base unit:**   
**Handset:** **[MENU]** → : “Phonebook” → **[SELECT]**
- 2 : Select the desired entry.
- 3 Press **[CALL]** to dial the number.

#### Note:

- When storing a calling card access number and your PIN in the phonebook as one phonebook entry, press **[PAUSE]** to add pauses after the number and PIN as necessary (page 14).

## Shared Phonebook

- If you have rotary/pulse service, you need to press **[TONE]** before pressing **[MENU]** on the base unit or **[MENU]** on the handset in step 1 to change the dialing mode temporarily to tone. When adding entries to the phonebook, we recommend adding **[TONE]** to the beginning of phone numbers you wish to chain dial (page 18).

## Speed dial

You can assign 1 phone number from the phonebook to each of the 5 speed dial buttons.

 Base unit

### Assigning a phonebook entry to a speed dial button

- 1 Find the desired entry (page 19).
- 2 Press the speed dial button you want to assign to. → **[SELECT]**
  - If **“Overwrite”** is displayed, the button you selected has a phone number already assigned to it. To overwrite with the currently selected phone number, go to step 3. To select another button, press **[BACK]**, then repeat this step.
- 3 **[SELECT]** → **[■]** (EXIT)

#### Note:

- In step 2, you can also press **[MENU]**. → **[↕]**: **“Speed dial”** → **[SELECT]** → **[↕]**: Select the desired speed dial button. → **[SELECT]**
- If a speed dial button has already been assigned, **“✓”** is displayed next to the button in step 2.

### Making a call using a speed dial button

- 1 Press the desired speed dial button.
- 2 Lift the corded handset.

#### Note:

- In step 1, if no phone number is stored to the speed dial button, you can assign a number by pressing **[MENU]** and continue from step 1,


“Assigning a phonebook entry to a speed dial button”, page 20.

### Canceling a speed dial assignment

- 1 Press the desired speed dial button. → **[ERASE]** (soft key)
- 2 **[↕]**: **“Yes”** → **[SELECT]**

### Index card

Use the index card to record the names/phone numbers stored to the speed dial buttons.

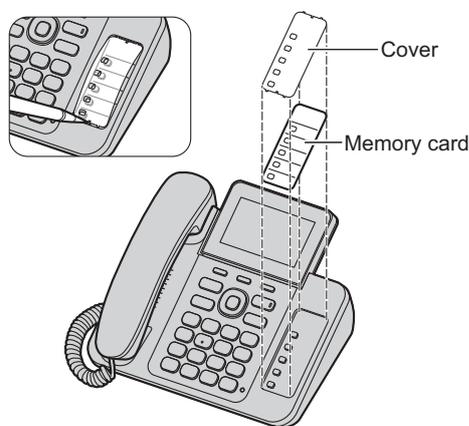

## Programmable settings

You can customize the unit by programming the following features.  
To access the features, there are 2 methods.

### Base unit / Handset

Proceed with the operation for your unit.  
Base unit: Press [v],[A], [D>], or [D<<] to select the desired main menu. → [SELECT]

#### ■ Scrolling through the display menus

Handset:

- 1 [MENU]
- 2 Press [v] or [A] to select the desired main menu. → [SELECT]
- 3 Press [v] or [A] to select the desired item from the next sub-menus. → [SELECT]
- 4 Press [v] or [A] to select the desired setting. → [SAVE]
  - This step may vary depending on the feature being programmed.
  - To exit the operation, press [■] (EXIT) on the base unit or **press [OFF]** on the handset.

#### ■ Using the direct command code

- 1 [MENU] → Enter the desired code.  
Example: Press [MENU][#][\*][0][0]. [\*][\*][0]
- 2 Select the desired setting. → [SAVE]
  - This step may vary depending on the feature being programmed.
  - To exit the operation, press [■] (EXIT) on the base unit or [OFF] on the handset.

#### Note:

- In the following table, <> indicates the default settings.
- In the following table,  indicates the reference page number.
- Display menu order and sub-menu may vary depending on your model.

## Display the menu tree and direct command code table

### Base unit

Main menu:  "Caller list"

Base unitのメニューアイコンは、白黒反転いたします。

Operation	Code	
Viewing the caller list.	#213	30

Main menu:  "Phonebook"

Operation	Code	
Viewing and erasing the phonebook entry.	#280	19

アイコン  
作成中

Main menu:  "Answering device"

Sub-menu 1	Sub-menu 2	Settings	Code	
Screen call	-	<On> Off	#310	32
Answer on	-	-	#327	32
Answer off	-	-	#328	32

## Programming

Main menu:  "Ringer volume"\*1

Operation	Code	
Adjusting the ringer volume.	#160	15

Main menu:  "Initial setting"

Sub-menu 1	Sub-menu 2	Settings	Code	
LCD contrast (Display contrast)	–	Level 1–6 <3>	#145	–
Caller ID edit (Caller ID number auto edit)	–	<On> Off	#214	30
Change language (Display)	Display –	<English> Español	#110	12

Main menu:  "Customer support"\*2

Operation	Code	
Displaying customer support Web address.	#680	–

\*1 Ringer volume cannot be turned off for intercom calls and paging.

\*2 The base unit can display the Internet address where you can download the operating instructions or get further information for this product, using your computer.

## Handset

Main menu:  "Caller list"

Operation	Code	
Viewing the caller list.	#213	30

Main menu:  "Answering device"

Sub-menu 1	Sub-menu 2	Settings	Code	
Play new msg. (msg.: message)	–	–	#323	33
Play all msg.	–	–	#324	33
Erase all msg.*1	–	–	#325	34
Greeting	Record greeting*1	–	#302	32
	Check greeting	–	#303	33
	Pre-recorded*1 (Reset to pre-recorded greeting)	–	#304	33
Settings	Ring count*1	2–7: 2–7 rings <4 rings> 0: Toll saver	#211	35
	Recording time*1	1: 1 min 3:<3 min> 0: Greeting only*2	#305	36
	Remote code*1	<111>	#306	34
	Screen call	1:<On> 0: Off	#310	32

## Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
Answer on* <sup>1</sup>	–	–	#327	32
Answer off* <sup>1</sup>	–	–	#328	32

Main menu: “V.M. access” (V.M.: Voice mail)

Operation	Code	
Listening to voice mail messages.	#330	37

Main menu: “Intercom”

Operation	Code	
Paging the desired unit.	#274	39

Main menu: “Set date & time”

Sub-menu 1	Sub-menu 2	Settings	Code	
Date and time* <sup>1</sup>	–	–	#101	12
Alarm	–	1: Once 2: Daily 0:<Off>	#720	26
Time adjustment* <sup>1, *3</sup>	–	1:<Caller ID auto> 0: Manual	#226	–

Main menu: “Initial setting”

Sub-menu 1	Sub-menu 2	Settings	Code	
Ringer setting	Ringer volume* <sup>4</sup> (Handset)	0–6: Off–6 <6>	#160	15
	Ringer tone* <sup>5, *6, *7</sup> (Handset)	1–5: Tone 1–5 <Tone 1> 6–0: Melody 1–5	#161	–
	Silent mode – On/Off	1: On 0:<Off>	#238	26
	Silent mode – Start/End	<11:00 PM/06:00 AM>	#237	26
Set date & time	Date and time* <sup>1</sup>	–	#101	12
	Alarm	1: Once 2: Daily 0:<Off>	#720	26
	Time adjustment* <sup>1, *3</sup>	1:<Caller ID auto> 0: Manual	#226	–
Talking Caller ID	Handset	1:<On> 0: Off	#162	29
	Base unit* <sup>1</sup>	1: On 0:<Off>	#*162	
Handset name	–	–	#104	26

## Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
Call block <sup>*1</sup>	–	–	#217	26
	Block w/o num <sup>*1, *2</sup> (Block calls without phone number)	1:<On> 0:<Off>	#240	27
Voice mail	Store VM access# <sup>*1</sup> (VM: Voice mail)	–	#331	37
	VM tone detect <sup>*1</sup>	1:<On> 0: Off	#332	37
Message alert	–	1:<On> 0: Off	#340	36
LCD contrast (Display contrast)	–	1–6: Level 1–6 <3>	#145	–
Key tone <sup>*8</sup>	–	1:<On> 0: Off	#165	–
Caller ID edit (Caller ID number auto edit)	Handset	1:<On> 0: Off	#214	30
	Base unit <sup>*1</sup>	1:<On> 0: Off	#*214	
Auto talk <sup>*9</sup>	–	1: On 0:<Off>	#200	15
Set tel line	Set dial mode <sup>*1</sup>	1: Pulse 2:<Tone>	#120	13
	Set flash time <sup>*1, *10</sup>	0: 900 ms 1:<700 ms> 2: 600 ms 3: 400 ms 4: 300 ms 5: 250 ms *: 200 ms #: 160 ms 6: 110 ms 7: 100 ms 8: 90 ms 9: 80 ms	#121	16
	Set line mode <sup>*1, *11</sup>	1: A 2:<B>	#122	–
Call sharing <sup>*1</sup>	–	1:<On> 0: Off	#194	16
Registration	Register handset	–	#130	27
	Deregistration <sup>*2</sup>	–	#131	28
Change language	Display (Handset)	1:<English> 2: Español	#110	12
	Voice prompt <sup>*1</sup>	1:<English> 2: Español	#112	12

Main menu:  "Customer support"<sup>\*12</sup>

Operation	Code	
Displaying customer support Web address.	#680	–

\*1 If you program these settings using one of the handsets, you do not need to program the same item using another handset.

## Programming

- \*2 This menu is not displayed when scrolling through the display menus. It is only available in direct command code.
- \*3 This feature allows the unit to automatically adjust the date and time each time caller information including date and time is received.  
To turn this feature on, select "**Caller ID auto**". To turn this feature off, select "**Manual**". (Caller ID subscribers only)  
To use this feature, set the date and time first (page 12).
- \*4 Ringer volume cannot be turned off for alarm, intercom calls, and paging.
- \*5 If you subscribe to a distinctive ring service (such as IDENT-A-RING), select a tone (tone 1 to 5). If you select a melody, you cannot distinguish lines by their ringers.
- \*6 If you select one of the melody ringer tones, the ringer tone continues to play for several seconds even if the caller has already hung up. You may either hear a dial tone or no one on the line when you answer the call.
- \*7 The preset melodies in this product are used with permission of © 2009 Copyrights Vision Inc.
- \*8 Turn this feature off if you prefer not to hear key tones while you are dialing or pressing any keys, including confirmation tones and error tones.
- \*9 If you subscribe to a Caller ID service and want to view the caller's information after lifting up the handset to answer a call, turn off this feature.
- \*10 The flash time depends on your telephone exchange or host PBX. Contact your PBX supplier if necessary. The setting should stay at "**700 ms**" unless pressing [**FLASH**] fails to pick up the waiting call.
- \*11 Generally, the line mode setting should not be changed. This setting automatically maintains receiver volume at the proper level depending on the current telephone line condition. Set the line mode to "**A**" if telephone line condition is not good.
- \*12 The handset can display the Internet address <http://www.panasonic.com/help> where you can download the operating instructions or get further information for this product, using your computer.

## Programming

### Special programming

#### Alarm

An alarm sounds at the set time for 3 minutes once or daily. Alarm can be set for each handset.

##### Important:

- Set the date and time beforehand (page 12).

##### Handset

- 1 **[MENU]** **#** **7** **2** **0**
- 2 **[↕]**: Select the desired alarm option. → **[SELECT]**

<b>Off</b>	Turns alarm off. Go to step 7.
<b>Once</b>	An alarm sounds once at the set time.
<b>Daily</b>	An alarm sounds daily at the set time. Go to step 4.

- 3 Enter the desired month and date. → **[OK]**
- 4 Set the desired time.
- 5 **[AM/PM]**: Select “**AM**” or “**PM**”. → **[OK]**
- 6 **[↕]**: Select the desired alarm tone. → **[SELECT]**
  - We recommend selecting a different ringer tone from the one used for outside calls.
- 7 **[SELECT]** → **[OFF]**
  - When the alarm is set, **Ⓢ** is displayed.

##### Note:

- To stop the alarm, press **[OFF]** or place the handset on the charger.
- When the handset is in use, the alarm will not sound until the handset is in standby mode.

#### Silent mode

Silent mode allows you to select a period of time during which the handset will not ring for outside calls. This feature is useful for time periods when you do not want to be disturbed, for example, while sleeping. Silent mode can be set for each handset.

##### Important:

- Set the date and time beforehand (page 12).
- We recommend turning the base unit ringer off (page 15) in addition to turning the silent mode on.

- If you have set the alarm, the alarm sounds even if the silent mode is turned on. (Handset)

#### Turning silent mode on/off

##### Handset

- 1 **[MENU]** **#** **2** **3** **8**
- 2 **[↕]**: Select the desired setting. → **[SAVE]**
  - If you select “**Off**”, press **[OFF]** to exit.
- 3 Enter the desired hour and minute you wish to start this feature.
- 4 **[AM/PM]**: Select “**AM**” or “**PM**”. → **[OK]**
- 5 Enter the desired hour and minute you wish to end this feature.
- 6 **[AM/PM]**: Select “**AM**” or “**PM**”.
- 7 **[SAVE]** → **[OFF]**
  - When the silent mode is set, **zzz** is displayed.

#### Changing the start and end time

##### Handset

- 1 **[MENU]** **#** **2** **3** **7**
- 2 Continue from step 3, “Turning silent mode on/off”, page 26.

#### Changing the handset name

Each handset can be given a customized name (“Bob”, “Kitchen”, etc.). This is useful when you make intercom calls between handsets. You can also select whether or not the handset name is displayed in standby mode. The default setting is “**No**”. If you select “**Yes**” without entering any handset name, “**Handset 1**” to “**Handset 6**” is displayed.

##### Handset

- 1 **[MENU]** **#** **1** **0** **4**
- 2 Enter the desired name (max. 10 characters; see the character table, page 18).
  - If not required, go to step 3.
- 3 **[SAVE]**
- 4 **[↕]**: Select the desired setting. → **[SELECT]** 2 times
- 5 **[OFF]**

#### Call block (Caller ID subscribers only)

This feature allows the unit to reject calls when:

- the unit receives a call from a phone number stored in the call block list as unwanted (“Storing unwanted callers”, page 27).
- the unit receives a call without phone number (“Blocking incoming calls without phone number”, page 27).

When a call is received, the unit rings for a short time while the caller is being identified. If the phone number matches an entry in the call block list, the unit sends out a busy tone to the caller, and then disconnects the call.

### Important:

- When the unit receives a call from a number that is stored in the call block list or a call without a recognized phone number, the call is logged in the caller list (page 30) with  after the call is disconnected.

### Storing unwanted callers

You can store up to 30 phone numbers in the call block list.

### Important:

- We recommend storing 10 digits (including an area code). If only 7 digits are stored, all numbers that have the same last 7 digits will be blocked.

### Handset

#### ■ From the caller list:

- 1  CID
- 2 : Select the entry to be blocked.
  - To edit the number, press **[EDIT]** repeatedly until the phone number is shown in the 10-digit format.
- 3 **[SAVE]**
- 4 : “Call block” → **[SELECT]**
- 5 : “Yes” → **[SELECT]**
- 6 Edit the phone number if necessary (24 digits max.).
- 7 **[SAVE]** → **[OFF]**

#### ■ By entering phone numbers:

- 1 **[MENU]** → **[ADD]**
- 2 Enter the phone number (24 digits max.).
  - To erase a digit, press **[CLEAR]**.
- 3 **[SAVE]** → **[OFF]**

### Blocking incoming calls without phone number

You can reject a call when no phone number is provided, such as a call just showing “Out of area”.

### Handset

- 1 **[MENU]**
- 2 : Select the desired setting. → **[SAVE]** → **[OFF]**

### Viewing/editing/erasing call block numbers

### Handset

- 1 **[MENU]**
- 2 : Select the desired entry.
  - To exit, press **[OFF]**.
- 3 **To edit a number:**  
**[EDIT]** → Edit the phone number. → **[SAVE]** → **[OFF]**  
**To erase a number:**  
**[ERASE]** → : “Yes” → **[SELECT]** → **[OFF]**

### Note:

- When editing, press the desired dial key to add, **[CLEAR]** to erase.
- When viewing, “Block w/o num” is displayed if the blocking incoming calls without phone number feature is turned on. To turn the feature off: **[ERASE]** →  → **[SAVE]** → **[OFF]**

## Registering a unit

### Operating additional units

#### Additional handsets

Up to 6 handsets can be registered to the base unit.

### Important:

- See page 4 for information on the available model.

### Registering a handset to the base unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit, re-register the handset.

## Programming

---

- 1 Handset:**  
[MENU]#130
- 2 Base unit:**  
Press and hold [LOCATOR] for about 5 seconds until the registration tone sounds.
  - If all registered handsets start ringing, press [LOCATOR] again to stop, then repeat this step.
  - The next step must be completed within 90 seconds.
- 3 Handset:**  
Press [OK], then wait until a long beep sounds.

### Note:

- While registering, “**Base in registering**” is displayed on all registered handsets.
- When you purchase an additional handset, refer to the additional handset’s installation manual for registration.

---

### Deregistering a handset

A handset can cancel its own registration to the base unit, or other handsets registered to the same base unit. This allows the handset to end its wireless connection with the system.

- 1 [MENU]#131**
  - All handsets registered to the base unit are displayed.
- 2 [↕]:** Select the handset you want to cancel.  
→ [SELECT]
- 3 [↕]:** “Yes” → [SELECT]
- 4 [OFF]**

## Using Caller ID service

### Important:

- This unit is Caller ID compatible. To use Caller ID features, you must subscribe to a Caller ID service. Contact your service provider/telephone company for details.

### Caller ID features

#### Base unit / Handset

When an outside call is being received, the caller's name and phone number are displayed.

Caller information for the last 50 callers is logged in the caller list from the most recent call to the oldest.

- If the unit cannot receive caller information, the following is displayed:
  - “**Out of area**”: The caller dials from an area which does not provide a Caller ID service.
  - “**Private caller**”: The caller requests not to send caller information.
  - “**Long distance**”: The caller makes a long distance call.
- If the unit is connected to a PBX system, caller information may not be properly received. Contact your PBX supplier.

### Missed calls

#### Base unit / Handset

If a call is not answered, the unit treats it as a missed call. The display shows “**Missed call**”. This lets you know if you should view the caller list to see who called while you were away.

### Note:

- Even when there are unviewed missed calls, “**Missed call**” disappears from the standby display if the following operation is performed by one of the units:
  - A handset is replaced on the charger.
  - Pressing **[OFF]** on a handset.
  - Pressing **[■]** (EXIT) on the base unit.

### Phonebook name display

When caller information is received and it matches a phone number stored in the phonebook, the stored name in the phonebook is displayed and logged in the caller list.

## Talking Caller ID

#### Base unit / Handset

This feature lets you know who is calling without looking at the display.

To use this feature, you must:

- subscribe to a Caller ID service of your service provider/telephone company.
- turn this feature on (page 23).

When caller information is received, the handsets and base unit announce the caller's name or phone number received from your service provider/telephone company following every ring.

The unit announces in English only.

- Name pronunciation may vary. This feature may not pronounce all names correctly.
- Caller ID service has a limit of how many characters can be displayed. If the caller's name is too long:
  - the handset may not be able to display or announce the entire name.
  - the base unit may not be able to display or announce the entire name.
- The announcement is heard at the same level as the ringer volume (page 15, 23).
- If you turn on the answering system and set the number of rings “**2 rings**” (page 35), the unit does not announce the caller information. If “**Toll saver**” is selected and there is a new message, the unit does not announce the caller information.
- When you receive a call while on the phone, the 2nd caller's name is not announced even if you subscribe to both Caller ID and Call Waiting with Caller ID services.

### Phonebook name announcement

When caller information is received and it matches a phone number stored in the phonebook, the stored name in the phonebook is announced.

## Ringer ID

This feature can help you identify who is calling by using different ringer tones for different groups of callers. When adding an entry to the phonebook, you can assign it to the desired group (page 18).

When a call is received from a caller assigned to a group, the ringer you selected for that group rings after caller information is displayed. If you select “**Current ringer**” (default), the unit uses the

## Caller ID Service

ringer tone you selected on page 23 when calls from this group are received.

### Handset

- 1 [M] → [MENU]
- 2 [D]: "Group" → [SELECT]
- 3 [D]: Select the desired group. → [SELECT]
- 4 [D]: Select the current setting of the ringer ID. → [SELECT]
- 5 [D]: Select the desired ringer tone. → [SAVE]
- 6 [OFF]

## Caller list

### Important:

- Only 1 person can access the caller list at a time.
- Make sure the unit's date and time setting is correct (page 12).

## Viewing the caller list and calling back

### Base unit / Handset

- 1 Proceed with the operation for your unit.  
**Base unit:** [CID]  
**Handset:** [←] CID
- 2 Press [v] to search from the most recent call, or [▲] to search from the oldest call.
- 3 Proceed with the operation for your unit.  
**Base unit:**
  - To call back, lift the corded handset.
  - To exit, press [■] (EXIT).**Handset:**
  - To call back, press [↶].
  - To exit, press [OFF].

### Note:

- If the entry has already been viewed or answered, "✓" is displayed, even if it was viewed or answered using another unit.
- In step 2, if ► is displayed, not all of the information is shown. To see the remaining information:

#### Base unit:

Press [▶▶]. To return to the previous screen press [◀◀].

#### Handset:

Press [▶]. To return to the previous screen, press [◀].

Base unit: In step 2, if "..." is displayed, not all of the name information is shown. Handset:

ソフトご担当者さま親機に"..."が表示されるのは、名前情報が長い場合のみでしょうか。上記の記載案で、問題ないでしょうか。

## Editing a caller's phone number before calling back

You can edit a phone number in the caller list by removing its area code and/or the long distance code "1".

### Base unit / Handset

- 1 Proceed with the operation for your unit.  
**Base unit:** [CID]  
**Handset:** [←] CID
- 2 [D]: Select the desired entry.
- 3 Press [EDIT] repeatedly until the phone number is shown in the desired format.
  - ① Local phone number  
**Example:** 321-5555
  - ② Area code – Local phone number  
**Example:** 555-321-5555
  - ③ 1 – Area code – Local phone number  
**Example:** 1-555-321-5555
- 4 Proceed with the operation for your unit.  
**Base unit:** Lift the corded handset.  
**Handset:** [↶]

## Caller ID number auto edit feature

### Base unit / Handset

Once you call back an edited number, the unit which was used to call back remembers the area code and format of the edited number. The next time someone calls from the same area code, caller information is customized by the unit as follows:

- When the call is being received, the Caller ID number is displayed in the same format as the edited number.
- After the call has ended, the caller's phone number is displayed in the same format as the edited number, when reviewed from the caller list.

For example, you can use this feature to set the unit to ignore the area code of callers in your area, so that you can call these local numbers using caller information without dialing the area code. To activate this feature, you must edit an entry in the caller list, then call that number. After that, phone numbers from that caller's area code are edited automatically.

This feature can be set for each unit (page 24). The default setting is "On".

**Note:**

- Phone numbers from the 4 most recently edited area codes are automatically edited.
- If you move to another area, you can turn this feature off to erase previously edited area codes. To use this feature again, turn it on and reprogram the area codes you want to edit once again.

### Erasing selected caller information

**Base unit / Handset**

- 1 Proceed with the operation for your unit.  
**Base unit:** [CID]  
**Handset:** [←] CID
- 2 [↕]: Select the desired entry.
- 3 [ERASE] (soft key) → [↕]: “Yes” → [SELECT]
- 4 Proceed with the operation for your unit.  
**Base unit:** [■] (EXIT)  
**Handset:** [OFF]

### Erasing all caller information

**Base unit / Handset**

- 1 Proceed with the operation for your unit.  
**Base unit:** [CID]  
**Handset:** [←] CID
- 2 [ERASE] (soft key) → [↕]: “Yes” → [SELECT]
- 3 Proceed with the operation for your unit.  
**Base unit:** [■] (EXIT)  
**Handset:** [OFF]

### Storing caller information to the phonebook

**Base unit**

- 1 [CID]
- 2 [↕]: Select the desired entry.
  - To edit the number, press [EDIT] repeatedly until the phone number is shown in the desired format.
- 3 [SAVE] → [↕]: “Yes” → [SELECT]
- 4 [■] (EXIT)

**Note:**

- If you stored caller information to the phonebook using the base unit, the entry is automatically assigned to group 1.

**Handset**

- 1 [←] CID
- 2 [↕]: Select the desired entry.
  - To edit the number, press [EDIT] repeatedly until the phone number is shown in the desired format.
- 3 [SAVE]
- 4 [↕]: “Phonebook” → [SELECT]
- 5 Continue from step 2, “Editing entries”, page 19.

## Answering System

### Answering system

The answering system can answer and record calls for you when you are unavailable to answer the phone.

You can also set the unit to play a greeting message but not to record caller messages by selecting “**Greeting only**” as the recording time setting (page 36).

#### Important:

- Only 1 person can access the answering system (listen to messages, record a greeting message, etc.) at a time.
- When callers leave messages, the unit records the day and time of each message. Make sure the date and time have been set correctly (page 12).

### Memory capacity (including your greeting message)

The total recording capacity is about 18 minutes. A maximum of 64 messages can be recorded.

#### Note:

- When message memory becomes full:
  - “**Messages full**” is shown on the base unit and handset display.
  - The ANSWER ON/OFF indicator on the base unit flashes rapidly if the answering system is turned on.
  - If you use the pre-recorded greeting message, the unit automatically switches to another pre-recorded greeting message asking callers to call again later.
  - If you recorded your own greeting message, the same message is still announced to callers even though their messages are not recorded.

### Turning the answering system on/off

#### Base unit

Press [**ANSWER ON/OFF**] to turn on/off the answering system.

#### Handset

- 1 To turn on:  
[MENU]#327  
To turn off:  
[MENU]#328
- 2 [OFF]

#### Note for base unit and handset:

- When the answering system is turned on, the ANSWER ON/OFF indicator on the base unit lights up.

### Call screening

#### Base unit / Handset

While a caller is leaving a message, you can listen to the call through the unit's speaker. To adjust the speaker volume, press [▲] or [▼] repeatedly. You can answer the call by lifting the corded handset from the base unit or pressing [↶] on the handset.

Call screening can be set for each unit. The default setting is “On”.

- 1 [MENU]#310
- 2 [↕]: Select the desired setting. → [SAVE]
- 3 Proceed with the operation for your unit.  
Base unit: [■] (EXIT)  
Handset: [OFF]

### Greeting message

When the unit answers a call, a greeting message is played to callers.

You can use either:

- your own greeting message
- a pre-recorded greeting message

### Recording your greeting message

#### Handset

- 1 [MENU]#302
- 2 [↕]: “Yes” → [SELECT]
- 3 After a beep sounds, hold the handset about 20 cm (8 inches) away and speak clearly into the microphone (2 minutes max.).
- 4 Press [STOP] to stop recording.
- 5 [OFF]

## Answering System

### Using a pre-recorded greeting message

The unit provides 2 pre-recorded greeting messages:

- If you erase or do not record your own greeting message, the unit plays a pre-recorded greeting asking callers to leave a message.
- If the message recording time (page 36) is set to “**Greeting only**”, callers’ messages are not recorded and the unit plays a different pre-recorded greeting message asking callers to call again.

### Resetting to a pre-recorded greeting message

If you want to use a pre-recorded greeting message once you record your own greeting message, you need to erase your own greeting message.

#### Handset

- 1 [MENU]#304
- 2 [YES] → [OFF]

### Playing back the greeting message

#### Handset

- 1 [MENU]#303
- 2 [OFF]

### Listening to messages using the base unit

When new messages have been recorded:

- [▶] on the base unit flashes.
- “**New message**” is displayed.

Press [▶].

- If new messages have been recorded, the base unit plays back new messages.
- If there are no new messages, the base unit plays back all messages.

### Operating the answering system during playback

Key	Operation
[▲] or [▼]	Adjust the speaker volume

Key	Operation
[◀◀]	Repeat message*1
[▶▶]	Skip message
[PAUSE]	Pause message To resume playback, press [▶].
[■] (STOP)	Stop playback
[ERASE]	Erase currently playing message

\*1 If pressed within the first 5 seconds of a message, the previous message is played.

### Calling back (Caller ID subscribers only)

If caller information was received for the call, you can call the caller back while listening to a message.

Lift the corded handset during playback.

- To edit the number before calling back, press [EDIT] repeatedly until the phone number is shown in the desired format (page 30).

### Erasing all messages

Press [ERASE] 2 times while the unit is not in use.

### Listening to messages using the handset

When new messages have been recorded:

- “**New message**” is displayed.
- The message indicator on the handset flashes slowly if the message alert feature is turned on (page 36).

#### 1 To listen to new messages: [PLAY]

or

[MENU]#323

- If there are no new messages in the answering system, [PLAY] is not displayed.

#### To listen to all messages:

[MENU]#324

#### 2 When finished, press [OFF].

#### Note:

- To switch to the receiver, press [↶].

## Answering System

### Operating the answering system

[MENU] → [↕]: “Answering device” → [SELECT]

Key	Operation
[▲] or [▼]	Adjust the receiver/speaker volume (during playback)
[1] or [◀]	Repeat message (during playback)* <sup>1</sup>
[2] or [▶]	Skip message (during playback)
[3]	Enter the “Settings” menu
[4]	Play new messages
[5]	Play all messages
[6]	Play greeting message
[7][6]	Record greeting message
[8]	Turn answering system on
[PAUSE]	Pause message* <sup>2</sup>
[9] or [STOP]	Stop recording Stop playback
[0]	Turn answering system off
[X][4]* <sup>3</sup>	Erase currently playing message
[X][5]	Erase all messages
[X][6]	Reset to a pre-recorded greeting message

\*<sup>1</sup> If pressed within the first 5 seconds of a message, the previous message is played.

\*<sup>2</sup> To resume playback:  
[↕]: “Playback” → [SELECT]

\*<sup>3</sup> You can also erase as follows:  
[ERASE] → [↕]: “Yes” → [SELECT]

### Calling back (Caller ID subscribers only)

If caller information is received for the call, you can call the caller back while listening to a message.

- 1 Press [PAUSE] during playback.
- 2 [↕]: “Call back” → [SELECT]

### Editing the number before calling back

- 1 Press [PAUSE] during playback.
- 2 [↕]: “Edit & Call” → [SELECT]

- 3 Press [EDIT] repeatedly until the phone number is shown in the desired format (page 30). → [↶]

### Erasing all messages

- 1 [MENU][#][3][2][5]
- 2 [↕]: “Yes” → [SELECT] → [OFF]

### Remote operation

Using a touch-tone phone, you can call your phone number from outside and access the unit to listen to messages or change answering system settings. The unit's voice guidance prompts you to press certain dial keys to perform different operations.

### Remote access code

A 3-digit remote access code must be entered when operating the answering system remotely. This code prevents unauthorized parties from listening to your messages remotely. The default setting is “111”.

#### Important:

- To prevent unauthorized access to this product, we recommend that you regularly change the remote code.

#### Handset

- 1 [MENU][#][3][0][6]
- 2 Enter the desired 3-digit remote access code.
- 3 [SAVE] → [OFF]

### Deactivating remote operation

Press [X] in step 2 on “Remote access code”, page 34.

- The entered remote access code is deleted.

### Using the answering system remotely

- 1 Dial your phone number from a touch-tone phone.
- 2 After the greeting message starts, enter your remote access code.
- 3 Follow the voice guidance prompts as necessary or control the unit using remote commands (page 35).

- 4 When finished, hang up.

### Voice guidance

■ **When the English voice guidance is selected**

During remote operation, the unit's voice guidance starts and prompts you to press **[1]** to perform a specific operation, or press **[2]** to listen to more available operations.

■ **When the Spanish voice guidance is selected**

To start the voice guidance, press **[9]**. The voice guidance announces the available remote commands (page 35).

**Note:**

- If you do not press any dial keys within 10 seconds after a voice guidance prompt, the unit disconnects your call.

### Remote commands

You can press dial keys to access certain answering system functions without waiting for the voice guidance to prompt you.

Key	Operation
<b>[1]</b>	Repeat message (during playback)* <sup>1</sup>
<b>[2]</b>	Skip message (during playback)
<b>[4]</b>	Play new messages
<b>[5]</b>	Play all messages
<b>[9]</b>	Stop playback* <sup>2</sup> Start voice guidance* <sup>3</sup>
<b>[0]</b>	Turn answering system off
<b>[*]4</b>	Erase currently playing message
<b>[*]5</b>	Erase all messages
<b>[*]#</b>	End remote operation (or hang up)

\*1 If pressed within the first 5 seconds of a message, the previous message is played.

\*2 For English voice guidance only

\*3 For Spanish voice guidance only

### Turning on the answering system remotely

If the answering system is off, you can turn it on remotely.

- 1 Dial your phone number from a touch-tone phone.
- 2 Let the phone ring 15 times.
  - A long beep is heard.
- 3 Enter your remote access code within 10 seconds after the long beep.
  - The greeting message is played back.
  - You can either hang up, or enter your remote access code again and begin remote operation (page 34).

## Answering system settings

### Number of rings before the unit answers a call

You can change the number of times the phone rings "**Ring count**" before the unit answers calls. You can select 2 to 7 rings, or "**To11 saver**".

The default setting is "**4 rings**".

"**To11 saver**": The unit's answering system answers at the end of the 2nd ring when new messages have been recorded, or at the end of the 5th ring when there are no new messages. If you call your phone from outside to listen to new messages (page 34), you know that there are no new messages when the phone rings for the 3rd time. You can then hang up without being charged for the call.

#### Handset

- 1 **[MENU]#211**
- 2 **[↓]**: Select the desired setting. → **[SAVE]**  
→ **[OFF]**

### For voice mail service subscribers

If you subscribe to a flat-rate service package that includes Caller ID, call waiting, voice mail, and unlimited local/regional/long distance calls, please note the following:

- To use the voice mail service provided by your service provider/telephone company rather than the unit's answering system, turn off the answering system (page 32).
- To use this unit's answering system rather than the voice mail service provided by your service provider/telephone company, please contact your service provider/telephone company to deactivate your voice mail service.

## Answering System

If your service provider/telephone company cannot do this:

- Set this unit's "Ring count" setting so that this unit's answering system answers calls before the voice mail service of your service provider/telephone company does. It is necessary to check the number of rings required to activate the voice mail service provided by your service provider/telephone company before changing this setting.
- Change the number of rings of the voice mail service so that the answering system can answer the call first. To do so, contact your service provider/telephone company.

### Caller's recording time

You can change the maximum message recording time allowed for each caller. The default setting is "3 min".

#### Handset

- 1 **[MENU]** **#** **3** **0** **5**
- 2 **[↕]**: Select the desired setting. → **[SAVE]**  
→ **[OFF]**

### Selecting "Greeting only"

You can select "Greeting only" which sets the unit to announce a greeting message to callers but not record messages.

Select "Greeting only" in step 2 on "Caller's recording time", page 36.

#### Note:

- When you select "Greeting only":
  - If you do not record your own message, the unit will play the pre-recorded greeting-only message asking callers to call again later.
  - If you use your own message, record the greeting-only message asking callers to call again later (page 32).

### Message alert

You can select whether or not the message indicator on the handset flashes slowly when new messages are recorded. The default setting is "On".

#### Important:

- If you stored the voice mail access number (page 37), the message indicator also flashes

for newly recorded voice mail messages (page 37).

#### Handset

- 1 **[MENU]** **#** **3** **4** **0**
- 2 **[↕]**: Select the desired setting. → **[SAVE]**  
→ **[OFF]**

#### Note:

- While message alert is on, battery operating time is shortened (page 9).

## Voice mail service

Voice mail is an automatic answering service offered by your service provider/telephone company. After you subscribe to this service, your service provider/telephone company's voice mail system answers calls for you when you are unavailable to answer the phone or when your line is busy. Messages are recorded by your service provider/telephone company, not your telephone. Please contact your service provider/telephone company for details of this service.

### Important:

- To use the voice mail service provided by your service provider/telephone company rather than the unit's answering system, turn off the answering system (page 32). For details, see page 35.
- You need to store the voice mail access number to activate the message alert feature (page 36) for voice mail service.

## Storing the voice mail (VM) access number

In order to listen to your voice mail messages, you must dial your service provider/telephone company's voice mail access number. Once you have stored your voice mail access number, you can dial it automatically (page 37).

### Handset

- 1 **[MENU]** **#** **3** **3** **1**
- 2 Enter your access number (24 digits max.). → **[SAVE]** → **[OFF]**

### Note:

- When storing your voice mail access number and your mailbox password, press **[PAUSE]** to add pauses (page 14) between the access number and the password as necessary. Contact your service provider/telephone company for the required pause time.

### Example:

1-222-333-4444	PPPP	8888
VM access number	Pauses	Password

## To erase the voice mail access number

### Handset

- 1 **[MENU]** **#** **3** **3** **1**
- 2 Press and hold **[CLEAR]** until all digits are erased. → **[SAVE]** → **[OFF]**

## Voice mail (VM) tone detection

### Base unit / Handset

Your service provider/telephone company sends special signals (sometimes called "voice mail tones" or "stutter tones") to the unit to let you know you have new voice mail messages. If you hear a series of dial tones followed by a continuous dial tone after you lift the corded handset or press **[hook]** on the handset, you have new voice mail messages. Soon after you hang up a call or after the phone stops ringing, your unit checks the phone line to see if new voice mail messages have been recorded.

Turn this feature off when:

- You do not subscribe to voice mail service.
  - Your service provider/telephone company does not send voice mail tones.
  - Your phone is connected to a PBX.
- If you are not sure which setting is required, contact your service provider/telephone company.

## Turning VM tone detection on/off

The default setting is "On".

### Handset

- 1 **[MENU]** **#** **3** **3** **2**
- 2 **[↕]**: Select the desired setting. → **[SAVE]** → **[OFF]**

## Listening to voice mail messages

The unit lets you know that you have new voice mail messages in the following ways:

- "New Voice Mail" is displayed on the base unit and handset if message indication service is available.
- The message indicator on the handset flashes slowly if the message alert feature is turned on ("Message alert", page 36).

## Voice Mail Service

---

### Base unit

To listen to voice mail messages, you have to dial your voice mail access number manually.

### Handset

- 1 **[VM]**  
or  
**[MENU]#330**
  - The speakerphone turns on.
  - If there are no new messages in the voice mail, **[VM]** is not displayed.
- 2 Follow the pre-recorded instructions.
- 3 When finished, press **[OFF]**.

#### **Note for base unit and handset:**

- If the base unit and handset still indicate there are new messages even after you have listened to all new messages, turn it off by pressing and holding **[#]** until the base unit or handset beeps.
- If your voice mail service uses voice mail tones and a message is over 3 minutes long, the unit may not indicate new messages.
- If your voice mail service uses voice mail tones, the tones are heard from any phone connected to the same line. If you want to use another phone to listen to voice mail messages, you have to dial your access number manually.

## Intercom

Intercom calls can be made:

- between the base unit and a handset
- between handsets

### Note:

- If you receive an outside call while talking on the intercom, you hear 2 tones.
  - To answer the call with the base unit, place the corded handset on the cradle, then lift it again. If the speakerphone is used, press [📞] 2 times.
  - To answer the call with the handset, press [OFF], then press [↶].
- When paging unit(s), the paged unit(s) beeps for 1 minute.

## Making an intercom call

### Base unit

- 1 Press [INTERCOM].  
**When 2 or more handsets are registered:**
  - To page a specific handset, enter the handset number.
  - To page all handsets, press [0] or wait for a few seconds.
    - Lift the corded handset if needed.
    - To stop paging, press [INTERCOM].
- 2 When you finish talking, press [INTERCOM] or place the corded handset on the cradle.

### Handset

- 1 [MENU] → [INT]
- 2 [↕]: Select the desired unit. → [SELECT]
  - To stop paging, press [OFF].
- 3 When you finish talking, press [OFF].

## Answering an intercom call

### Base unit

- 1 Lift the corded handset or press [INTERCOM] to answer the page.
- 2 When you finish talking, place the corded handset on the cradle or press [INTERCOM].

### Handset

- 1 Press [↶] to answer the page.
- 2 When you finish talking, press [OFF].

## Handset locator

You can locate a misplaced handset by paging it.

- 1 **Base unit:** Press [LOCATOR].
  - All registered handsets beep for 1 minute.
- 2 To stop paging:  
**Base unit:**  
 Press [LOCATOR].  
**Handset:**  
 Press [↶], then press [OFF].

## Transferring calls, conference calls

Outside calls can be transferred or a conference call with an outside party can be made:

- between the base unit and a handset
- between 2 handsets

### Base unit

- 1 During an outside call, press [INTERCOM].  
**When 2 or more handsets are registered:**
  - To page a specific handset, enter the handset number.
  - To page all handsets, press [0] or wait for a few seconds.
- 2 Wait for the paged party to answer.
  - If paged party does not answer, press [INTERCOM] to return to the outside call.
- 3 **To complete the transfer:**  
 Place the corded handset on the cradle.
  - The outside call is being routed to the handset.**To establish a conference call:**  
 Press [CONF].
  - To leave the conference, place the corded handset on the cradle. The other 2 parties can continue the conversation.
  - To put the outside call on hold, press [HOLD]. To resume the conference, press [CONF].

### Handset

- 1 During an outside call, press [INT] to put the call on hold.
- 2 [↕]: Select the desired unit. → [SELECT]
- 3 Wait for the paged party to answer.
  - If the paged party does not answer, press [↶] to return to the outside call.

## Intercom/Locator

---

### 4 To complete the transfer:

Press **[OFF]**

- The outside call is being routed to the destination unit.

**To establish a conference call:**

**[MENU] →**

**[↕]: "Conference" → [SELECT]**

- To leave the conference, press **[OFF]**. The other 2 parties can continue the conversation.
- To put the outside call on hold: **[MENU] → [↕]: "Hold" → [SELECT]**  
To resume the conference: **[MENU] → [↕]: "Conference" → [SELECT]**

---

### Answering a transferred call

#### Base unit

Lift the corded handset or press **[📞]** to answer the page.

#### Handset

Press **[📞]** to answer the page.

**Note for base unit and handset:**

- After the paging party disconnects, you can talk to the outside caller.

## Useful Information

### Wall mounting


The base unit can be mounted on a wall by changing the wall mounting adaptor's position.

#### Note:

- Make sure that the wall and the fixing method are strong enough to support the weight of the unit.

### Base unit

- 1 To remove the wall mounting adaptor, push down the release levers (1). Remove the adaptor (2).
- 2 Turn the adaptor 180 degrees from the desk stand position to the wall mounting position.
- 3 Connect the AC adaptor and telephone line cord. Tuck the telephone line cord inside the wall mounting adaptor, then push it in the direction of the arrow.
  - The word "UP" should face upward.

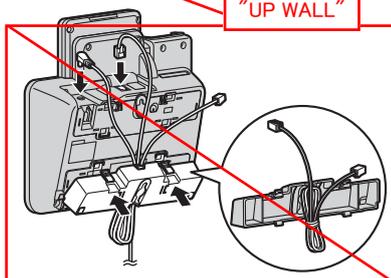


添付イラスト追加

添付イラスト追加


添付イラストに変更

- 4 Mount the unit on a wall then slide down to secure in place.

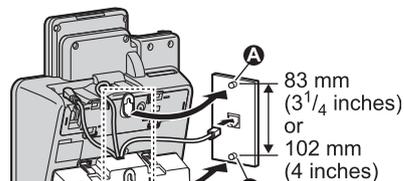


TELコード削除  
します

Wall phone plate

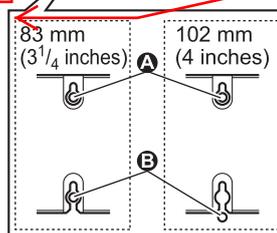

### Charger

Drive the screws (not supplied) into the wall.

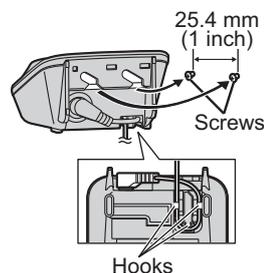

## Useful Information

### Error messages

Display message	Cause/solution
Base no power or No link. Re-connect base AC adaptor.	<ul style="list-style-type: none"><li>• The handset has lost communication with the base unit. Move closer to the base unit and try again.</li><li>• Unplug the base unit's AC adaptor to reset the unit. Reconnect the adaptor and try again.</li><li>• The handset's registration may have been canceled. Re-register the handset (page 27).</li></ul>
Busy	<ul style="list-style-type: none"><li>• The called unit is in use.</li><li>• Other units are in use and the system is busy. Try again later.</li><li>• The handset you are using is too far from the base unit. Move closer and try again.</li></ul>
Call phone company for your access #	<ul style="list-style-type: none"><li>• You have not stored the voice mail access number. Store the number (page 37).</li></ul>
Check tel line	<ul style="list-style-type: none"><li>• The supplied telephone line cord has not been connected yet or not connected properly. Check the connections (page 8).</li></ul>
Error!!	<ul style="list-style-type: none"><li>• Recording was too short. Try again.</li></ul>
Invalid	<ul style="list-style-type: none"><li>• There is no handset registered to the base unit matching the handset number you entered.</li><li>• The handset is not registered to the base unit. Register the handset (page 27).</li></ul>
Requires subscription to Caller ID.	<ul style="list-style-type: none"><li>• You must subscribe to a Caller ID service. Once you receive caller information after subscribing to a Caller ID service, this message will not be displayed.</li></ul>
Use rechargeable battery.	<ul style="list-style-type: none"><li>• A wrong type of battery such as Alkaline or Manganese was inserted. Use only the rechargeable Ni-MH batteries noted on page 4,5.</li></ul>

### Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the base unit's AC adaptor, then reconnect the base unit's AC adaptor. Remove the batteries from the handset, and then insert the batteries into the handset again.

#### General use

Problem	Cause/solution
The handset does not turn on even after installing charged batteries.	<ul style="list-style-type: none"><li>• Place the handset on the charger to turn on the handset.</li></ul>
The unit does not work.	<ul style="list-style-type: none"><li>• Make sure the batteries are installed correctly (page 8).</li><li>• Fully charge the batteries (page 8).</li><li>• Check the connections (page 8).</li><li>• Unplug the base unit's AC adaptor to reset the unit. Reconnect the adaptor and try again.</li><li>• The handset has not been registered to the base unit. Register the handset (page 27).</li></ul>

## Useful Information

Problem	Cause/solution
I cannot hear a dial tone.	<ul style="list-style-type: none"><li>• The base unit's AC adaptor or telephone line cord is not connected. Check the connections.</li><li>• Disconnect the base unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your service provider/ telephone company.</li></ul>
The indicator on the handset flashes slowly.	<ul style="list-style-type: none"><li>• New messages have been recorded. Listen to the new messages (page 33).</li><li>• New voice mail messages have been recorded. Listen to the new voice mail messages (page 37).</li></ul>

### Programmable settings

Problem	Cause/solution
The display is in a language I cannot read.	<ul style="list-style-type: none"><li>• Change the display language (page 12).</li></ul>
I cannot register a handset to a base unit.	<ul style="list-style-type: none"><li>• The maximum number of handsets (6) is already registered to the base unit. Cancel unused handset registrations from the base unit (page 28).</li></ul>

### Battery recharge

Problem	Cause/solution
The handset beeps and/or  flashes.	<ul style="list-style-type: none"><li>• Battery charge is low. Fully charge the batteries (page 8).</li></ul>
I fully charged the batteries, but –  still flashes, –  is displayed, or – the operating time seems to be shorter.	<ul style="list-style-type: none"><li>• Clean the battery ends (<math>\oplus</math>, <math>\ominus</math>) and the charge contacts with a dry cloth and charge again.</li><li>• It is time to replace the batteries (page 8).</li></ul>

### Making/answering calls, intercom

Problem	Cause/solution
 is displayed.	<ul style="list-style-type: none"><li>• The handset is too far from the base unit. Move closer.</li><li>• The base unit's AC adaptor is not properly connected. Reconnect AC adaptor to the base unit.</li><li>• The handset is not registered to the base unit. Register it (page 27).</li></ul>
Noise is heard, sound cuts in and out.	<ul style="list-style-type: none"><li>• You are using the base unit or handset in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference.</li><li>• Move closer to the base unit.</li><li>• If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details.</li></ul>
The handset does not ring.	<ul style="list-style-type: none"><li>• The ringer volume is turned off. Adjust the ringer volume (page 15).</li><li>• Silent mode is turned on. Turn it off (page 26).</li></ul>

### Useful Information

Problem	Cause/solution
The base unit does not ring.	<ul style="list-style-type: none"> <li>The ringer volume is turned off. Adjust the ringer volume (page 15).</li> </ul>
I cannot make a call.	<ul style="list-style-type: none"> <li>The dialing mode may be set incorrectly. Change the setting (page 13).</li> <li>The handset is too far from the base unit. Move closer and try again.</li> </ul>
I cannot make long distance calls.	<ul style="list-style-type: none"> <li>Make sure that you have long distance service.</li> </ul>

### Caller ID/Talking Caller ID

Problem	Cause/solution
Caller information is not displayed.	<ul style="list-style-type: none"> <li>You must subscribe to Caller ID service. Contact your service provider/telephone company for details.</li> <li>If your unit is connected to any additional telephone equipment such as a Caller ID box or cordless telephone line jack, plug the unit directly into the wall jack.</li> <li>If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details.</li> <li>The name display service may not be available in some areas. Contact your service provider/telephone company for details.</li> <li>Other telephone equipment may be interfering with this unit. Disconnect the other equipment and try again.</li> </ul>
Caller information is displayed or announced late.	<ul style="list-style-type: none"> <li>Depending on your service provider/telephone company, the unit may display or announce the caller's information at the 2nd ring or later.</li> <li>Move closer to the base unit.</li> </ul>
Caller information is not announced.	<ul style="list-style-type: none"> <li>The base unit or handset's ringer volume is turned off. Adjust it (page 15, 23).</li> <li>The Talking Caller ID feature is turned off. Turn it on (page 23).</li> <li>The number of rings for the answering system is set to "2 rings" or "Toll saver". Select a different setting (page 35).</li> <li>If the base unit and another handset are having an intercom call, your handset does not announce caller information.</li> </ul>
The caller list/incoming phone numbers are not edited automatically.	<ul style="list-style-type: none"> <li>The Caller ID number auto edit feature is turned off. Turn it on and try again (page 24).</li> <li>You need to call back the edited number to activate Caller ID number auto edit.</li> </ul>
I cannot dial the phone number edited in the caller list.	<ul style="list-style-type: none"> <li>The phone number you dialed might have been edited incorrectly (for example, the long distance "1" or the area code is missing). Edit the phone number with another pattern (page 30).</li> </ul>
Time on the unit has shifted.	<ul style="list-style-type: none"> <li>Incorrect time information from incoming Caller ID changes the time. Set the time adjustment to "Manual" (off) (page 23).</li> </ul>

## Useful Information

Problem	Cause/solution
The 2nd caller's information is not displayed during an outside call.	<ul style="list-style-type: none"><li>• In order to use Caller ID, call waiting, or Call Waiting Caller ID (CWID), you must first contact your service provider/telephone company and subscribe to the desired service. After subscribing, you may need to contact your service provider/telephone company again to activate this specific service, even if you already subscribed to both Caller ID and Call Waiting with Caller ID services (CWID).</li></ul>

### Answering system

Problem	Cause/solution
The unit does not record new messages.	<ul style="list-style-type: none"><li>• The answering system is turned off. Turn it on (page 32).</li><li>• The message memory is full. Erase unnecessary messages (page 33).</li><li>• The recording time is set to "Greeting only". Change the setting (page 36).</li><li>• If you subscribe to a voice mail service, messages are recorded by your service provider/telephone company, not your telephone. Change the unit's number of rings setting or contact your service provider/telephone company (page 35).</li></ul>
I cannot operate the answering system.	<ul style="list-style-type: none"><li>• Someone is using the unit. Wait for the other user to finish.</li><li>• A caller is leaving a message. Wait for the caller to finish.</li><li>• The handset is too far from the base unit. Move closer.</li></ul>
I cannot operate the answering system remotely.	<ul style="list-style-type: none"><li>• The remote access code is not set. Set the remote access code (page 34).</li><li>• You are entering the wrong remote access code. If you have forgotten your remote access code, enter the remote access code setting to check your current code (page 34).</li><li>• Press each key firmly.</li><li>• The answering system is turned off. Turn it on (page 35).</li></ul>

### Liquid damage

Problem	Cause/solution
Liquid or other form of moisture has entered the base unit/handset.	<ul style="list-style-type: none"><li>• Disconnect the AC adaptor and telephone line cord from the base unit. Remove the batteries from the handset and leave to dry for at least 3 days. After the base unit/handset are completely dry, reconnect the AC adaptor and telephone line cord. Insert the batteries and charge fully before use. If the unit does not work properly, contact an authorized service center.</li></ul>

#### Caution:

- To avoid permanent damage, do not use a microwave oven to speed up the drying process.

## Useful Information

電気ご担当者さま  
数値等のご確認、お  
願います。

### FCC and other information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:ACJ-----.

If requested, this number must be provided to the telephone company.

- Registration No. .... (found on the bottom of the unit)
- Ringer Equivalence No. (REN).....0.1B
- Ringer Equivalence No. (REN: Under a power failure).....0.1B

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with the product. It is designed to be connected to a compatible modular jack that is also compliant.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for the product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact a Factory Service Center or other Authorized Servicer. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This equipment is hearing aid compatible as defined by the FCC in 47 CFR Section 68.316.

When you hold the phone to your ear, noise might be heard in your Hearing Aid. Some Hearing Aids are not adequately shielded from external RF (radio frequency) energy. If noise occurs, use an optional headset accessory or the speakerphone option (if applicable) when using this phone. Consult with your audiologist or Hearing Aid manufacturer about the availability of Hearing Aids which provide adequate shielding to RF energy commonly emitted by digital devices.

#### WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call.
- 2) Perform such activities in the off-peak hours, such as early morning or late evenings.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

#### CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio

## Useful Information

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the cordless telephone further away from the TV or VCR. This will often reduce or eliminate interference.

### FCC RF Exposure Warning:

- This product complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- To comply with FCC RF exposure requirements, the base unit must be installed and operated 20 cm (8 inches) or more between the product and all person's body (excluding extremities of hands, wrist and feet).
- This product may not be collocated or operated in conjunction with any other antenna or transmitter.
- The handset may be carried and operated with only the specific provided belt-clip. Other non-tested belt-clips or similar body-worn accessories may not comply and must be avoided.

 
 
### Notice

- FCC ID can be found inside the battery compartment or on the bottom of the units.

### Compliance with TIA-1083 standard:

Telephone handsets identified with this logo have reduced noise and interference when used with T-Coil equipped hearing aids and cochlear implants.













**Guía Rápida Española**




## **Guía Rápida Española**

   
 
 
 
 
 
スペイン語版が出来上がり次第、取り込みます。











**Guía Rápida Española**

   

    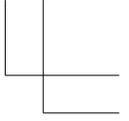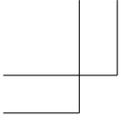

  

**Guía Rápida Española**

    

## Customer services

### ***Customer Services Directory (United States and Puerto Rico)***

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

**<http://www.panasonic.com/help>**

or, contact us via the web at:

**<http://www.panasonic.com/contactinfo>**

You may also contact us directly at: 1-800-211-PANA (1-800-211-7262),  
Monday - Friday 9 am to 9 pm; Saturday - Sunday 10 am to 7 pm, EST.

TTY users (hearing or speech impaired users) can call 1-877-833-8855.

### ***Accessory Purchases (United States and Puerto Rico)***

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

**<http://www.pstc.panasonic.com>**

or, send your request by E-mail to:

**[npcparts@us.panasonic.com](mailto:npcparts@us.panasonic.com)**

You may also contact us directly at:  
1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)  
(Monday - Friday 9 am to 9 pm, EST.)

Panasonic Service and Technology Company  
20421 84th Avenue South, Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks.)

TTY users (hearing or speech impaired users) can call 1-866-605-1277.

## Appendix

### Warranty (For United States and Puerto Rico)

PANASONIC CORPORATION OF NORTH AMERICA  
One Panasonic Way, Secaucus, New Jersey 07094

#### Panasonic Telephone Products Limited Warranty

##### Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Corporation of North America (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Parts	Labor
One (1) Year	One (1) Year

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" Limited Warranty period, there will be no charge for parts. You must mail-in your product prepaid during the Limited Warranty period. This Limited Warranty excludes both parts and labor for batteries, antennas, and cosmetic parts (cabinet). This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers products purchased as new.

##### Ship-In Service

For assistance in the continental United States and Puerto Rico in obtaining repairs please ship the product prepaid to:

**PSTC (Panasonic) Exchange Center,**  
**4900 George McVay Drive, Suite B Door #12, McAllen, TX 78503**  
[panacare@us.panasonic.com](mailto:panacare@us.panasonic.com)

When shipping the unit carefully pack in a padded shipping carton, include all accessories, and send it prepaid. Include a letter detailing the complaint, a return address and provide a day time phone number where you can be reached. P.O. Boxes are not acceptable. Keep the tracking number for your records. A copy of valid registered receipt is required under the 1 year parts and labor Limited Warranty.

For Limited Warranty service for headsets if a headset is included with this product please follow instructions above.

**IF REPAIR IS NEEDED DURING THE LIMITED WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.**

**Limited Warranty Limits And Exclusions**

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, bug infestation, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY.** (As examples, this excludes damages for lost time, lost calls or messages, cost of having someone remove or re-install an installed unit if applicable, travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.**

**When you ship the product**


- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom.
- Send the unit to PSTC (Panasonic) Exchange Center, prepaid and adequately insured.
- Do not send your unit to Panasonic Corporation of North America listed on the back cover or to executive or regional sales offices. These locations do not repair consumer products.

## Index

### Index


- # 4-way conference: 17
- A** Additional handset: 27
  - Alarm: 26
  - Answering calls: 15
  - Answering system
    - Call screening: 32
    - Erasing messages: 33, 34, 35
    - Greeting message: 32
    - Greeting only: 36
    - Listening to messages: 33, 34
    - Number of rings: 35
    - Recording time: 36
    - Remote access code: 34
    - Remote operation: 34
    - Ring count: 35
    - Toll saver: 35
    - Turning on/off: 32, 34, 35
  - Auto talk: 15
- B** Battery: 8, 9
  - Belt clip: 11
  - Booster (Clarity booster): 16
- C** Call block: 26
  - Call share: 16, 24
  - Call waiting: 16
  - Call Waiting Caller ID: 16
  - Caller ID number auto edit: 30
  - Caller ID service: 29
  - Caller list: 30
  - Caller list edit: 30
  - Chain dial: 19
  - CID (Caller ID): 30
  - Conference calls: 39
  - Control type: 10, 11
  - Customer support: 22, 24
- D** Date and time: 12
  - Dialing mode: 13
  - Direct command code: 21
  - Display
    - Contrast: 22, 24
    - Language: 12
- E** Eco mode: 9
  - Equalizer: 16
  - Error messages: 42
- F** Flash: 16, 24
- G** Groups: 18, 29
- H** Handset
  - Deregistration: 28
  - Locator: 39
  - Name: 26
  - Registration: 27
  - Hold: 15
- I** Intercom: 39
- K** Key tone: 24
- L** Line mode: 24
- M** Making calls: 14
  - Missed calls: 29
  - Mute: 16
- P** Pause: 14
  - Phonebook: 18
- R** Redialing: 14
  - Ringer ID: 29
  - Ringer tone: 23, 29
  - Rotary/pulse service: 16
- S** Silent mode: 26
  - Speed dial: 20
  - SP-PHONE (Speakerphone): 14
- T** Talking caller ID: 29
  - Temporary tone dialing: 16
  - Time adjustment: 23
  - Transferring calls: 39
  - Troubleshooting: 42
  - TTY: 53
- V** VM (Voice mail): 37
  - Voice guidance language: 12
  - Voice mail: 35, 37
  - Volume
    - Receiver: 14
    - Ringer (Base unit): 15
    - Ringer (Handset): 15, 23
    - Speaker: 14
- W** Wall mounting: 41

Power failure: 9

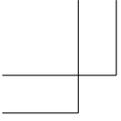



**Notes**


 
---



---

 
 


57




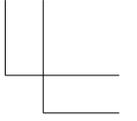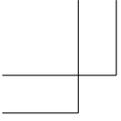

**Notes**

   
 

---



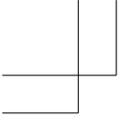

**Notes**

 ---

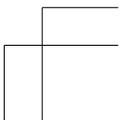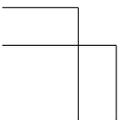

# IMPORTANT!

If your product is not working properly. . .

- ① Reconnect AC adaptor to the base unit.
- ② Check if telephone line cord is connected.
- ③ Use rechargeable Ni-MH batteries.  
(Alkaline/Manganese/Ni-Cd batteries CANNOT be used.)
- ④ Read **troubleshooting** page in the **Operating Instructions**.



Visit our Web site: <http://www.panasonic.com/help>

- FAQ and troubleshooting hints are available.

#### For your future reference

We recommend keeping a record of the following information to assist with any repair under warranty.

Serial No. (found on the bottom of the base unit)	Date of purchase
Name and address of dealer	

Attach your purchase receipt here.

Panasonic Corporation of North America  
One Panasonic Way, Secaucus, New Jersey 07094

© Panasonic System Networks Co., Ltd. 2011

Printed in Malaysia



\*TG6671\*

PNQX3144ZA TT0611MG0