


First-time Operation

11 Setup the wireless display

- ① Set the battery pack in the wireless display.

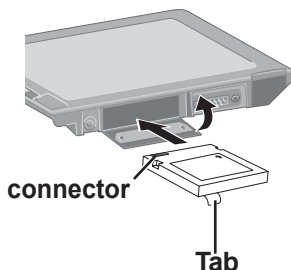

CAUTION

Be sure to insert the battery pack as illustrated.

- ② Connect the wireless display to a power outlet and turn the wireless display on.
The following screen is displayed.

<Wireless display screen>

Select network type.

AdHoc	Infrastructure	Cancel
-------	----------------	--------

- ③ Select [AdHoc].
The following screen is displayed.

<Wireless display screen>

Change setting on host PC to the following value, reboot the host PC, then select "Connect" below.

Wireless LAN card
Network Type : AdHoc
 SSID : cfvdw07-43411
 Encryption : disable

TCP/IP
IP Address : 10.57.148.205
 NetMask : 255.0.0.0


MeiWDS
 Password : wdsp

Connect	Cancel
---------	--------

This screen is a sample.


To the computer

(☞ Page 14)

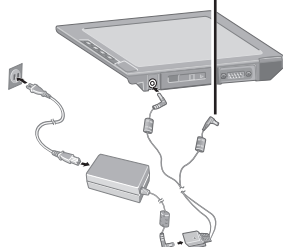


CAUTION

Do not select [Connect] until step ⑨ is completed.

- ④ Select  on the taskbar of the external display, then select [Configuration]. The following screen is displayed.

<External display screen>

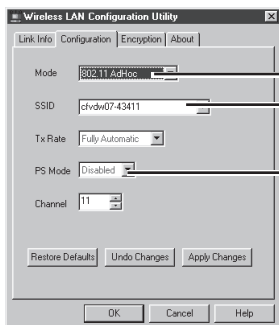

Set to [802.11.AdHoc].

Match the settings of the computer with the information displayed on <Wireless display screen> of the step ③.


This screen is a sample.

NOTE

If there is no input from a key or an external mouse for a certain interval of time, the power to the wireless display may be turned off automatically. In this case, turn on the wireless display and then start the procedure from step ③.

- ⑤ Select [Apply Changes], then select [OK].
- ⑥ Select [Start] - [Settings] - [Control Panel] - [Network] - [TCP/IP→PRISM2 IEEE 802.11 PC CARD Adapter] - [Properties] - [IP Address]. The following screen is displayed.

<External display screen>

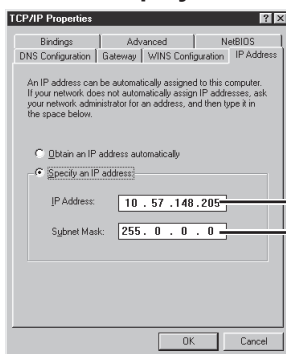


Match the settings of the computer with the information displayed on <Wireless display screen> of the step ③.

This screen is a sample.

- ⑦ Select [OK], then select [OK].
- ⑧ Restart the computer.
- ⑨ Select [Connect] on <Wireless display screen> of the step ③.


First-time Operation

- ⑩ Select  on the taskbar, select [Password]:
The following screen is displayed.

 


- ⑪ Input [wdsp], then select [OK].
The wireless display can be used.

<When using except default settings>


- ⑫ Select  on the taskbar, select [Run Setup Utility].
The following screen is displayed.

<External display screen>



- ⑬ Input [wdsp], then select [OK].
The following screen is displayed.


<Step 1>

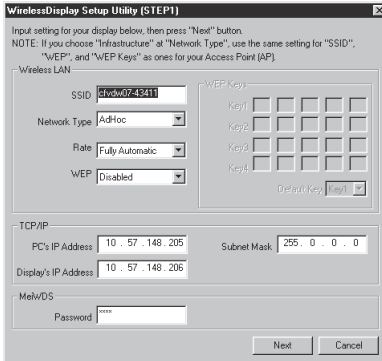



This screen is a sample.

- ⑭ Set the necessary items, select [Next].
The following screen is displayed.

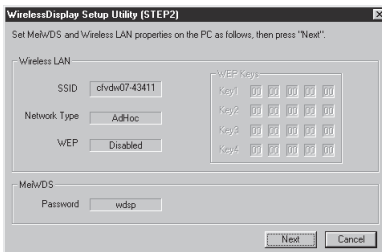
<Step 2>



This screen is a sample.

- ⑮ Select  on the taskbar, set the parameters in [Wireless LAN].
Ignore although you attempt a reconnection on the wireless display side and are unsuccessful.
- ⑯ Select  on the taskbar, select [Password].
Set the password by following **<Step 2>** screen.
- ⑰ Select [Next] at the **<Step 2>** screen.
The following screen is displayed.

<Step 3>

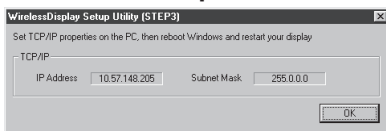

This screen is a sample.

- ⑱ Select [Start] - [Settings] - [Control Panel] - [Network] - [TCP/IP→PRISM2 IEEE 802.11 PC CARD Adapter], set the parameters by following the above **<Step 3>** screen, then select [OK].
Ignore although you attempt a reconnection on the wireless display side and are unsuccessful.
- ⑲ Restart the computer.