Panasonic



Basic Owner's Manual Manuel d'utilisation Fonctions de base Instrucciones básicas de funcionamiento

Digital Wireless Stereo Headphones Casque d'écoute stéréo sans fil numérique

> Cascos auriculares estéreo inalámbricos digitales

> > Bluetooth

TQBM0147

Model No. RP-HTX80B

Thank you for purchasing this product. Please read these instructions carefully before using this product, and save this manual for future use

Nous vous remercions d'avoir arrêté votre choix sur cet appareil

ndé de lire attentivement ce manuel avant d'utiliser l'annareil et de le conserver nour

Le agradecemos haber adquirido este producto. Lea cuidadosamente estas instrucciones antes de usar este producto, y guarde este manual para usarlo en el futuro.





Panasonic Corporation of North America http://shop.panasonic.com

Panasonic Canada Inc. 5770 Ambler Drive Mississaura Ontario I 4W 2T3

© Panasonic Corporation 2017

Register online at http://shop.panasonic.com/support (U.S. customers only)

If you have any questions, visit

ttp://shop.panasonic.com/support In Canada:

r Сапаца: ww.panasonic.ca/english/support

Pour toute question, visitez :

English
More detailed operating instruct
are available in "Operating
Instructions (PDF format)". o read it, download it from the

Français
More detailed operating instructions are ava
"Operating Instructions (PDF format)".
To read it, download it from the website.

Click the desired language.

Spanior fore detailed operating instructions are available in Operating Instructions (PDF format)". o read it, download it from the website.

English

Accessories

der accessories, refer to "Limited Warranty" on the

To order accessories, contact the dealer from whom you have made your purchase.

Please check and identify the supplied accessories

1 x USB charging cord

Accessories

Please check and identify the sunnlied accessories

☐ 1 x USB charging cord

Please check and identify the supplied accessories.

English

Safety precautions

For California Residents California Proposition 65 Warning

WARNING

This product contains a chemical know the State of California to cause cancer birth defects or other reproductive harm

For the U.S.A. and Canada only



A lithium ion battery that is recyclable powers the product you have pure Please call 1-800-8-BATTERY for

THE FOLLOWING APPLIES ONLY IN THE U.S.A. AND CANADA

AND CANADA.

This device compiles with Part 15 of FCC Rules and Indu.

Canada's licence-exempt RSSs. Operation is subject to to

following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including

C: 216A-RPHTX80B

C: 216.APHTX80B
This transmitter must not be co-located or operated in conjunction with any other antenian or transmitter.

This equament complies with FCDC radiation exposure limits have exposured interplaced by FCDC radiation exposure limits from the property of the p

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

This equipment has been tested and found to comply with the mits for a Class B digital device, pursuant to Part 15 of the FC

Rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

owever, there is no guarantee that interference will not occur i property interes in oguarantee untermerence will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be tetermined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

Reorient or relocate the receiving antenna.

increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from

Any unauthorized changes or modifications to this equipment

ould void the user's authority to operate this device This device complies with Part 15 of the FCC Rules. Operation subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any ause narmiul interierence, and (2) this device must accep nterference received, including interference that may caus

sponsible Party: Panasonic Corporation of North America port Contact: http://shop.panasonic.com/support

ECC CAUTION

Maintenance

Specifications

Operating humidity range

Supported profiles

Clean this unit with a dry and soft cloth.

Any changes or modifications not expressly approved by the party esponsible for compliance could void the user's authority to perate this equipment.

THE FOLLOWING APPLIES ONLY IN CANADA.

Use only the recommended accessories

Do not remove covers.
 Do not repair this unit by yourself. Refer servicing to qualified service personnel.

quantimes service personner.

Avoid using or placing this unit near sources of heat.

Do not use while operating a motorized vehicle. It may create a traffic hazard and is largeal in many reare.

Do not listen with this unit at high volume in places where you need to hear sounds from the surrounding environment for safety, such as at railrad crossings, and construction sides.

Bo at Indication

B Allergies

- Discontinue use if you experience discomfort with the speakers or any other parts that directly contact your skin.

- Continued use may cause rashes or other allergic reactions.

Do not use solvents including benzine, thinner, alcohol, kitchen detergent, a chemical wiper, etc. This might cause the exterior case to be deformed or the coating to come off.

Charging time*2 (25 °C (77 °F)) Approx. 2.5 hours harging temperature range 10 °C to 35 °C (50 °

It may be shorter depending on the operati Time taken to recharge from empty to full.

(Internal battery: 3.7 V (Li-polymer 430 mAh)) Approx. 20 hours

35%RH to 80%RH

A2DP, AVRCP, HSP, HFP

WARNING Pour commander des accessoires, contacter le revendeur chez qui vous avec réalisé votre achat. o reduce the risk of fire, electric shock or product damage Do not expose this unit to rain, moisture, dripping or splashing.

Do not place objects filled with liquids, such as vases, on

Accessories

1 x USB charging cord

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, refer to "Customer Services Directory" on the rear page if you reside in the U.S.A., or refer to "WARRANITY SERVICE" on the

The unit does not respond. This unit can be reset when all operations are rejected. To reset the unit, press and hold [0/h] ($\frac{h}{h}$) for 10 seconds or more. (The pairing device information will not be deleted.)

Cannot charge the unit.

- Make Rume the computer is turned on and is not on standby or sleep

mode.

Is the USB port you are currently using working properly? If your por computer has other USB ports, unplug the connector from its current part plug it into one of the other ports.

If the measures mentioned above are not applicable, unplug the USB.

If the measures mentioned above are not applicable, unplug the USB.

If the charge time and operating nime become shortened, the battery may have run down. (Number of charging times of the installed battery. Approximately 500.

ED does not light during charging. / Charging takes longer.
Is the USB charging cord (supplied) connected firmly to the USB

is the USB charging cord (supplied) connected firmly to the USB terminal of the computer? (Rear page, [3])

Make sure to charge in a room temperature between 10 °C and 35 °C. The power does not turn on.

Is the unit being charged? The power cannot be turned ON during charging. (→ Rear page, □)

The device cannot be connected.

• Delete the pairing information for this unit from the Bluetooth[®] device, then pair them again. (→ Rear page, □)

The device cannot be connected.

• Delete the pairing information for this unit from the Bluetooth® device, then pair them again. (→ Rear page, □)

Make sure that the unit and the Bluetooth® device are

correctly. (→ Rear page, [5])
Check if music is playing on the Bluetooth® device.

Make sure that the unit is turned on and the volume is not set too low Pair and connect the Bluetooth® device and the unit again. (→ Rear

 Pair and connect the Bluetootn⁻ cevice and are use opening.
 Check if the Bluetooth[®] compasible device supports "A2DP" profile. For details on profiles, see "Listening to music" (→ Rear page, □). Also refer to the operating manual for the Bluetooth[®] compatible device. ow volume. Increase the volume of the unit. (→ Rear page, 国)

Sound from the device is cut off. / Sound quality is bad.
Sound may be disrupted if signals are blocked. Do not fully

unit with the palm of your hand, etc.

The device may be out of the 10 m communication range. Move the device closer to this unit.

device closer to this unit.

Remove any obstacle between this unit and the device.

Switch off any wireless LAN device when not in use.

A communication problem may arise if the battery is not fully charged.

Charge the unit. (**Rear page, [])

calling device to the unit if it is set to the issuedon character process.

(*) Rear page, [ii])

If the volume of the other person's voice is too low, increase the volume of both the unit and the Bluetooth® enabled phone.

Cannot make a phone call.

Check if the Bluetooth[®] compatible device supports "HSP" or "HFP" profile. For details on profiles, see "Listening to music" and "Making a phone call" in "Operating Instructions ("DF format)". Also refer to the operating manual for the Bluetooth[®] enabled phone.

The serial number of this product can be found on the speake reference.
MODEL NUMBER RP-HTX80B
SERIAL NUMBER

User memo:

DATE OF PURCHASE TELEPHONE NUMBER

Français

Safety precautions

Pour les résidents de la Californie rertissement : California Proposition

AVERTISSEMENT

Ce produit contient un produit chimique qui selon l'état de la Californie, peut causer un

cancer, des anomalies congénitales or d'autres problèmes liés à la reproduction. (Pour les États-Unis seulement)

Uniquement pour les États-Unis et le Canada



L'appareil que vous vous êtes procuré e alimenté par une batterie au lithium-ion. Pour des renseignements sur le recyclaq de la batterie, veuillez composer le 1-800-8-BATTERY.

CE QUI SUIT NE S'APPLIQUE QU'AUX ÉATS-UNIS ET AU CANADA

EATS-UNIS ET AU CANADA.
Le présent appareil est conforme à la partie 15 des règles de la CCC et aux normes CNR d'industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée sux deux conditions sulvantes :

1) l'appareil ne doit pas produire de brouillage, et

c) l'utilisateur de l'appareil doit accepter tout brouillage idioélectrique subi, même si le brouillage est susceptible d'en

radiodéctrique subl. même si le brouillage est susceptible d'en compromettre le fonctionnement. FC DID ACHEN-HTXGGB.

CE 24A-PR-HTXGGB compression de l'exposition aux rayonnements éconnées pour un environnement non contrôlé et responsements éconnées pour un environnement non contrôlé et responsements éconnées pour un environnement non contrôlé et responsements éconnées pour un environnement non contrôlé et et les ingressi d'extrecte d'exposition aux lifequences et le singressi d'exposition aux lifet entre et le singressi d'exposition d'exposition aux lifet entre exposition d'exposition d'exposition aux lifet entre exposition d'exposition d'exposition aux lifet entre exposition d'exposition d'exposition d'exposition aux lifet entre exposition d'exposition d'exp et les iignes directrices d'exposition aux riequences adioélectriques (RF) CNR-102 de l'IC. Cet équipement émet ur energie RF très faible qui est considérée conforme sans évaluation du débit d'absorption spécifique (DAS).

CE QUI SUIT NE S'APPLIQUE QU'AU CANADA.

■ Unit WARNING:

To reduce the risk of fire, electric shock or product dat Do not expose this unit to rain, moisture, dripping or

splashing.
Do not place objects filled with liquids, such as vases, on

Use only the recommended accessories Do not remove covers. Do not repair this unit by yourself. Refer servicing to

qualified service personnel. Avoid using or placing this unit near sources of heat.

- Avous using or piscing this unit near sources of heat.
 - Do not use white operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
 - Do not listen with this unit at high volume in places where you need to hear sounds from the surrounding environment for safety, such as at railroad crossings, and construction sites.

Allergies

■ Precautions for listening with the Headphones Do not use your headphones at a high volume. Hearing experts advise against continuous extended play.

1 you experience a ringing in your ears, reduce volume or

discontinue use.

Do not use while operating a motorised vehicle. It may create a traffic hazard and is illegal in many areas.

You should use extreme caution or temporarily discontinue use in potentially hazardous situations.

nnay receive radio interierenci

ncrease separation between this unit and the mobile telephone

Maintenance

Clean this unit with a dry and soft cloth. urean this unit with a dry and soft cloth.

Do not use solvents including benzine, thinner, alcohol, kitchen detergent, a chemical wiper, etc. This might cause the exterior case to be deformed or the coating to come off.

Specifications

Power supply	DC 5 V, 500 mA (Internal battery: 3.7 V (Li-polymer 430 mAh))					
Operating time*1	Approx. 20 hours					
Charging time ^{*2} (25 °C (77 °F))	Approx. 2.5 hours					
Charging temperature range	10 °C to 35 °C (50 °F to 95 °F)					
Operating temperature range	0 °C to 40 °C (32 °F to 104 °F)					
Operating humidity range	35%RH to 80%RH (no condensation)					
Mass (Weight)	Approx. 190 g (X.X oz)					

■ Bluetooth [®] section	
Frequency band	2402 MHz to 2480 MHz
Supported profiles	A2DP, AVRCP, HSP, HFP
Supported codec	SBC
*1 It may be shorter depend	ing on the operating conditions

Cannot charge the unit.

Make sure the computer is turned on and is not on standby or sleep

Approximately 500.2.

EBD does not light during charging. / Charging takes longer.

Is the USB charging cord (supplied) connected firmly to the USB terminal of the computer? (**P Rear page. [3])

Make sure to charge in a room temperature between 10 °C and 35 °C.

hase sale to charge in a room temperature between 10°C and 35. The power does not turn on.

Is the unit being charged? The power cannot be turned ON during charging. (♣ Rear page, [□])

The device cannot be connected.

Delete the pairing information for this unit from the Bluetooth® device then pair them again. (→ Rear page, □)

Pair and connect the suberpools upware devices upware and page. [3]

Check if the Bluebooth® compatible device supports "AZDP" profile. For details on profiles, see "Listening to music" (→ Rear page, [3]). Also refer to the operating manual for the Bluebooth® compatible device.

ncrease the volume on the Bluetooth" device. und from the device is cut off. I Sound quality is bad. sound may be disrupted if signats are blocked. Do not fully cover this intil the palm of your hand, etc. the device may be out of the 10 m communication range. Move the

Communication problem may arise if the battery is not fully charged. Charge the unit. (→ Rear page, □)

You cannot hear the other person.

Note such that the unit and the Blushooth enabled phone are turned on.

Note such that the unit and the Blushooth enabled phone are connected.

*P Rear page, 10

Check the audio settings of the Blushooth enabled phone. Switch the calling device to the unit if it is set the Blushooth* enabled phone.

*P Rear page, 10

*The volume of the other person's voice is too low, increase the volume.

Cannot make a phone call.

Check if the Bluetooth® compatible device supports "HSP" or "HFP"

profile. For details on profiles, see "Listening to music" and "Making a phone call" in "Operating Instructions (PDF format)". Also refer to the operating manual for the Bluetooth® enabled phone.

Low volume.

Increase the volume of the unit. (→ Rear page, □)

It is relume on the Bluetooth® device.

device closer to this unit.

Remove any obstacle between this unit and the device.

Switch off any wireless LAN device when not in use.

of both the unit and the Bluetooth® enabled phor

JMÉRO DE MODÈLE RP-HTX80B

UMÉRO DE SÉRIE

Delete the pairing information for this unit from the Bluetooth[®] device, then pair them again. (→ Rear page, □)

The device cannot be connected

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the remedies indicated do not solve the problem consult your dealer for instructions. Safety precautions

LO QUE SIGUE SE APLICA SOLAMENTE EN LOS

Español

The unit does not respond.

This unit can be reset when all operations are rejected. To reset the unit, press and hold (\$\delta || \mathbb{O}|| \mat ESTADOS UNIDOS Y EL CANADÁ.

Este dispositivo cumple con la(s) norma(s) para dispositivos exentos de licencia RSS de Industry Canada. El funcionamie

exentos de nicerica RSS de industry Caradad. El está sujeto a las dos siguientes condiciones: (1) este dispositivo no puede producir interferent (2) este dispositivo debe aceptar cualquier interfi incluyendo aquellas que puedan ocasionar un fu deseado del mismo.

ID ECC: AC LEPP-HTY80B

mode.

** In the USB port you are currently using working properly? If your computer has other USB ports, unplug the connector from its current port and plug it into one of the other posts.

** If the measures mentioned above are not applicable, unplug the USB charging cost and plug it in again.

** If the charge time and operating time become shortened, the battlery may have not look, (Number of charging times of the installed battery. C: 216A-RPHTX80B I.c. ZIONENTIA DE Este transmisor no debe colocarse o hacerse funcionar junto co otra antena o transmisor Esta dispositivo cumple los límites de exposición a la radiación da la FCC/IC establecidos para un entorno no controlado, así como las directrices de exposición a radio frecuencia (RF) de la FCC/. Ja RSS-1/C2 de las reglas de exposición a radio frecuencia (RF) la RSS-1/C2 de las reglas de exposición a radio frecuencia (RF)

eta anuino presenta nivelas muy haine de enernía RF que se

specífica de absorción (SAR). LOS SIGUIENTES PUNTOS SOLO SON APLICABLES A LOS EE.UU.

Nota FCC: No sound.

• Makes sure that the unit and the Bluetooth® device are connected correctly. (**) Roar page, (**)

• Check if music is playing on the Bluetooth® device.

• Makes sure that the unit is turned on and the volume is not set too low.

• Pair and connect the Bluetooth® device and the unit again. (**) Rear

Nota FCC:
Los ersayos restrizados con este equipo han demostrado que cumple con los limites para dispositivos digitales de Clase B. conforme a la Parte To de las reglas FCC. Estato limites están desendos para proporcionar una potección. Estato limites están diseridados para proporcionar una potección de la compositiva de la conforma del conforma de la conforma del conforma de la co leterminada. Si este equipo ocasiona interferencias dañinas e a recepción de radio o televisión, lo que puede determinarse Low volume.

Increase the volume of the unit. (→ Rear page, □)

Increase the volume on the Bluetooth® device.

la recepción de radio o idevisalon, lo que puede determinarse apagando y encendidro el equipo, el usuario deber al intentar que fligura a continuación:

Recinerar cambra de lugar la entera receptora.

Incrementar la separación entre el equipo y el receptor.

Incrementar la separación entre el equipo y el receptor.

Incrementar la separación entre el equipo y el receptor.

Incrementar la separación entre el equipo y el receptor.

Consultar con el proveedor o con un técnico de radio/TV esperimentado para otdener ayudo.

Cualquier cambio o modificación no autorizados que se realice en el equipo anulará la capacidad del usuario para hacer A communication problem may arise if the battery is not fully charged. Charge the unit. (Rear page,)

funcionar este dispositivo.

Este dispositivo cumple la Parte 15 de las reglas FCC. El funcionamiento está sujeto a las dos siguientes condiciones: (1 este dispositivo no puede producir interferencias y (2) este dispositivo debe aceplar cualquier interferencia, incluyendo aquellas que puedan ocasionar un funcionamiento no deseado

Parte responsable: Panasonic Corporation of North America Two Riverfront Plaza, Newark, NJ 07102-

PRECAUCIÓN FCC:

Cualquier cambio o modificación no autorizados que se realice en el equipo anulará la capacidad del usuario para hacer funcionar este dispositivo.

WARNING Fo reduce the risk of fire, electric shock or product damag Do not expose this unit to rain, moisture, dripping or

splashing.
Do not place objects filled with liquids, such as vases, o

Use only the recommended accessories Do not remove covers.
 Do not repair this unit by yourself. Refer servicing to

qualified service personnel.

- Avoid using or placing this unit near sources of heat.

- Avoid using or placing this unit near sources of heat.

- On ont use while operating a motivated vehicle. It may create a traffic hazard and is illegal in many areas.

- On the control of the service of the control o

■ Allergies

■ Precautions for listening with the Headphones Do not use your headphones at a high volume. Hearing experts advise against continuous extended play.

If you experience a ringing in your ears, reduce volume or

discontinue use.

Do not use while operating a motorised vehicle. It may create a traffic hazard and is illegal in many areas.

You should use extreme caution or temporarily discontinue use in potentially hazardous situations. This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please

Clean this unit with a dry and soft cloth.

Do not use solvents including benzine, thinner, alcohol, kitchen detergent, a chemical wiper, etc. This might cause the exterior case to be deformed or the coating to come off.

Power supply	DC 5 V. 500 mA					
	(Internal battery: 3.7 V					
	(Li-polymer 430 mAh))					
Operating time ⁻¹	Approx. 20 hours					
Charging time*2 (25 °C (77 °F))	Approx. 2.5 hours					
Charging temperature range	10 °C to 35 °C (50 °F to 95 °F)					
Operating temperature range	0 °C to 40 °C (32 °F to 104 °F)					
Operating humidity range	35%RH to 80%RH					
	(no condensation)					
Mass (Weight)	Approx. 190 g (X.X oz)					

Biuetooth Section	
Frequency band	2402 MHz to 2480 MHz
Supported profiles	A2DP, AVRCP, HSP, HFP
Supported codec	SBC

1 It may be shorter depending on the operating conditions 2 Time taken to recharge from empty to full.

Troubleshooting

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the remedies indicated do not solve the problem, consult your dealer for instructions.

The unit does not respond.

This unit can be reset when all operations are rejected. To reset the unit press and hold [0,b]([0]) for 10 seconds or more. (The pairing device information will not be deleted.) all operations are rejected. To reset the unit.

Cannot charge the unit. Make sure the computer is turned on and is not on standby or sleep

mode.

Is the USB port you are currently using working properly? If your computer has other USB ports, unplug the connector from its current port

and plug it into one of the other ports.

If the measures mentioned above are not applicable, unplug the USB change coard, and plug it in again.

If the measures mentioned above are not applicable, unplug the USB change coard and plug it in again.

If the charge time and operating time become shortened, the battery may have reg undown. Quamber of charging times of the installed battery.

Approximately 500.)

LED does not light during charging. / Charging takes longer.

*A the IISB Abarnian cord (supplied) connected firmly to the USB

Is the USB charging cord (supplied) connected firmly to the USB terminal of the computer? (→ Rear page, □)
 Make sure to charge in a room temperature between 10 °C and 35 °C.

The power does not turn on.

Is the unit being charged? The power cannot be turned ON during charging. (Rear page,)

The device cannot be connected Delete the pairing information for this unit from the Bluetooth[®] device, then pair them again. (→ Rear page, □)

The device cannot be connected.

• Delete the pairing information for this unit from the Bluetooth® device, then pair them again. (→ Rear page, □)

No sound.

• Make sure that the unit and the Bluetooth® device are connected correctly. (**) Rear page, [3]

• Check if music is playing on the Bluetooth® device.

• Nake sure that the unit is turned on and the volume is not set too low.

• Pair and connect the Bluetooth® device and the unit again. (**) Rear

Pair and connect the Bluetooth[®] compatible device supports *AZDP* profile. For details on profiles, see "Listening to music" (**) Roar page, (■). Also refer to the operating manual for the Bluetooth[®] compatible device.

Increase the volume on the Bluetooth¹⁰ device. solund from the device is cut off. / Sound quality is bad. Sound may be disrupted if signals are blocked. Do not fully cover this unit with the palm of your hand, etc. The device may be out of the 10 m communication range. Move the

device closer to this unit.

Remove any obstacle between this unit and the device.

Switch off any wireless LAN device when not in use.

You cannot hear the other person.

You cannot hear the other person.

Check if the unit and the Bluedom[®] enabled phone are furned on.

Check if the unit and the Bluedom[®] enabled phone are connected.

Check the sudo settings of the Bluedom[®] enabled phone. Switch the

Check the sudo settings of the Bluedom[®] enabled phone. Switch the

Check the sudo settings of the Bluedom[®] enabled phone.

If the volume of the other persons valor is to low, increase the volume
of both the unit and the Bluedom[®] enabled phone.

of both the unit and the Blueboth* enables proces.

Cannot make a phone cail.

Check if the Blueboth* compatible device supports "HSP" or "HFP" profile. For details on profiles, see "Listening to music" and "Making a phone cail in "Operating Instructions (PDF format)". Also refer to the operating manual for the Blueboth* enabled phone.

número de serie de este producto puede encon tayoz. Retire la almohadilla derecha para el oído

nótelo en el espacio suministrado abajo y guárdelo para futura MODELO RP-HTX80B NÚMERO DE SERIE

Anotaciones del usuario:

FECHA DE ADQUISICIÓN NOMBRE DEL CONCESIONARIO DIRECCIÓN DEL CONCESIONA NÚMERO DE TELÉFONO

Información útil (Solo para los países de

América Latina)

Atención al Cliente

Obtenga información de productos y asistencia operativa; localide el distribuidor o Centro de Servicio más cercano; compre estos y accesorios a través de nuestro Sitio Web para

http://www.lar.panasonic.com

demás puede contactarnos directamente a través de uestro Contact Center:

800-PANA (800-7262) 01-8000-94PANA (01-8000-947562) 1800-PANASONIC (1800-726276) 800-PANA (800-7262737) 800-PANA (800-72627) 1-801-811-PANA (1-801-811-PANA (1-801-811-7262) Colombia Ecuador Costa Rica El Salvado

809-200-8000

Para obtener información en la República de México contáctenos a través de:

atencion.clientes@mx.panasonic.com


800-390-602 Desde teléfono celular: 797-5000 800-PANA-800 (800-7262-800) Uruguay Perú 0-800-PANA (0-800-7262) 0-800-00-PAN (0-800-00726) Paraguay 0810-321-PANA (0810-321-7262)


email:

O a través de los siguientes números telefónico

01800-VIP-PANA (01800-847-7262) - Interior (55) 5000-1200 - México D.F. y Area Metropolitan

Directorio de Atención al Cliente

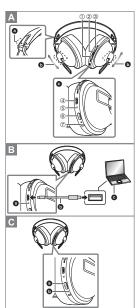

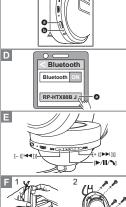

English

A Part names

Raised dot indicating the left side
This allows you to adjust the housing position of the headphones.

[-([◄◄])] button ②[►/**II/**^] button [-([►►])] button ④Charning terming § Microphone (() () button (1) b

()/I: Standby/ON hereafter referred to as "LED"

B Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect this unit to a computer (6) using the USB

Charging cord (supplied) (©).

The LED (©) lights in red when charging is in progress. When charging is completed, the LED will go out.

Charging will take approximately 2.5 hours from empty state to fully charged.

The power cannot be turned on while charging.

Do not use any other USB charging coofs except the supplied one.
When the battery level is low during use of the unit, the blue blinking LED will change to red. A beep will sound every 1 minute.
When the battery runs out, the power will turn or.

C Turning the power on/off Press and hold [①/l] (图)] (图) of this unit for approx.

3 seconds until the LED (blue) (6) blinks.

• A beep will sound, and the LED (blue) will blink slowly. To turn the power off

ress and hold [0//] (8) for approximately 3 seconds. A beep ress and notice (の) (多) (o) approximately 3 seconds. A beep will sound and the power will be turned off.

• 本機と関uetooth[®]機器を接続していない場合、本機の操作を終えてから約5分後に電子音が鳴って自動的に電源が切れます。(Auto

D Connecting a Bluetooth® device

■ Bluetooth® pairing
I in the power-off state, press and hold [₼//] (③)] of this unit until the LED blinks in blue and red atternately.

2 Select *RP17ASB** (⑤) from the Bluetooth* evice's menu.
If prompted for a passkey, input the passkey "0000 (four zeros)"

When the LED (blue) blinks twice every approx 2 seconds pairing (registration) is completed. (Connection established)

■ Connecting a paired Bluetooth® device

Connecting a paired siluetoom - device
Turn on this unit. "Pairing (Registration) this unit with the
Bluetooth device for connection". (-> above)
When the LED (blue) blinks twice every approx. 2 seconds,
pairing (registration) is completed. (Connection established)

Using the headphones

Connect the Bluetooth® device and the unit. Listening to music

Select and play the music on the Bluetooth $^{\!\otimes}$ device.

・The selected music is output to the speakers of the unit.

Remote controlling ("AVRCP"対応のBluetooth[®]機器のみ

(Operation example) Play / Pause: Press [▶/**1**1/\$]. Increase the volume: Press [+ ([▶▶|])].

Decrease the volume: Press [- ([|◄◄])]. Forward to the start of next track:

Return to the start of press and hold [+ ([I►])] for approximately 2 seconds.

Return to the start of press and hold [-([I◄])] for approximately 3 according to the start of press and hold [-(I◄]).

Making a phone call Press [►/II/\$] on the unit and answer the incoming call.

3 Press [▶/II/^] to end the phone call.

Reject a call / Change the call device: Press [▶/II/^] twice

quickly, (HFP only) You can have the Bluetooth® enabled phone make phone calls by using the microphone of the unit and an app of the Bluetooth® enabled phone. (→ below, "Using a voice control app")

Press and hold [>/II/1] of this unit for approx. 3 seconds.

■ Restoring to the factory settings

1 While the unit is turned off, press and hold [₺/i] (₺)] for at least 5 seconds until the LED starts blinking alternately in

2 While the LED is blinking alternately in blue and red, press and hold [+ ([▶►!])] and [- ([!◄◄])] at the same time for at least 5 seconds.

 The default settings will be restored after the LED (blue) blinks fast and the unit turns off

F To remove the battery when disposing of this unit

The following instructions are not intended for repairing purposes but for the disposal of this unit. This unit is not restorable once disassembled. When disposing of this unit, take out the battery installed in this unit and recycle it.

mble after the battery runs out. sassembled parts out of reach of children.

Regarding the handling of used batteries

■ Batteries

■ Batteries

- Do not heat or expose to flame.

- Do not leave the battery(es) in a car exposed to direct sunlight for a long period of time with doors and windows closed.

- Battery mishandling can cause electrolyte leakage which can damage items the leaked fluid comes into contact with. If

electrolyte leaks from the battery, consult your dealer. Wash thoroughly with water if electrolyte comes in contact with any part or your body. When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disp

Remove the left ear pad.

Remove the 4 screws, and lift and flip the part 6.

3 Cut off the wires one by one with scissors, and remove the

Troubleshooting (→ Front page)

Troubleshooting (→ Front page)

■ Batteries

Español

Français

A Part names

①[- ([|◄◄])] button ②[►/II/^] button ③[+ ([►►])] button ④Charoing termina

Turning the power on/off

To turn the power off

■ Bluetooth® pairing

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

• The power cannot be turned on while charging.
Do not use any other USB charging cords except the supplied one.
When the battery level is low during use of the unit, the blue blinking LED will change to red. A beep will sound every 1 minute.
When the battery runs out, the power will turn off.

Press and hold [⊕//] (♠)] (♠) of this unit for approx. 3 seconds until the LED (blue) (♠) blinks.

• A beep will sound, and the LED (blue) will blink slowly.

D Connecting a Bluetooth® device

Press and hold [O/I] (3)] for approximately 3 seconds. A beep

Press and noil (Un) (**3**) for approximately 3 seconds. A beep will sound and the power will be turned off.

- 本機とBluetooth[®]機器を接続していない場合、本機の操作を終えてから約5分後に電子音が鳴って自動的に電源が切れます。(Autopower off)

■ Bluetooth* pairing

In the power-off state, press and hold [♠] [♠] |♠ blue unit until the LED blinks in blue and red alternately.

Select "RP-HTX80B" (♠) from the Bluetooth* device's menu.

If prompted for a passkey, input the passkey '0000 (four zeros)'

When the LED (blue) blinks twice every approx. 2 seconds.

■ Connecting a paired Billetooth - Sevice

1 Turn on this unit.

2 Perform steps 2 of "Pairing (Registration) this unit with the Billetooth device for connection". (→ above)

When the LED (blue) blinks twice every approx. 2 seconds, pairing (registration) is completed. (Connection established)

■ Connecting a paired Bluetooth® device

Connect the Bluetooth® device and the unit.

Decrease the volume: Press [- ([|◄◄1))].

Select and play the music on the Bluetooth® device.

・The selected music is output to the speakers of the unit.

■ Remote controlling ("AVRCP"対応のBluetooth[®]機器のみ

Press [►/II/^].

Press [+ ([▶▶|])]

Press [►/I/5] on the unit and answer the incoming call.

3 Press [▶/■/^) to end the phone call.
Reject a call / Change the call device: Press [▶/■/^) twice

culckly. (HFP only) You can have the Bluetooth® enabled phone make phone calls by using the microphone of the unit and an app of to Bluetooth® enabled phone. (**) below, "Using a voice control app")

Press and hold [>/II/\) of this unit for approx. 3 seconds.

■ Restoring to the factory settings

1 While the unit is turned off, press and hold [₼//] (�//)] for at least 5 seconds until the LED starts blinking alternately in

F To remove the battery when disposing of this unit

The following instructions are not intended for repairing purposes but for the disposal of this unit. This unit is not repaired to the disposal of this unit.

semble after the battery runs out. disassembled parts out of reach of children.

or your body.

When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposit Remove the left ear pad.

3 Cut off the wires one by one with scissors, and remove the

2 Remove the 4 screws, and lift and flip the part a.

Regarding the handling of used batteries

When disposing of this unit, take out the battery installed in this unit and recycle it.

Press and hold [+ ([▶►]))] for approximately 2 seconds.

Press and hold [- ([◄◄])) for approximately 2 seconds.

E Using the headphones

Listening to music

(Operation example)

Increase the volume:

Forward to the start of

Return to the start of

Making a phone call

fast and the unit turns off.

Play / Pause:

Connect this unit to a computer (6) using the USB

B Charging

Right (R) side

A Part names

Raised dot indicating the left side This allows you to adjust the housing position of the headphones. aised dot indicating the left side This allows you to adjust the housing position of the headphones. @Right (R) side

- ([|◄◄]))] button ②(▶/II/\$)] button ((▶▶|))] button ④(Charning terminal) ⑤ Microphone ⑥(₾//](⑥)) button*1

DLED indicator light*2

*1 (b/l: Standby/ON
*2 hereafter referred to as "LED"

B Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect this unit to a computer (6) using the USB charging cord (supplied) (a).

The LED (a) lights in red when charging is in progress. When charging is completed, the LED will go out.

Charging will take approximately 2.5 hours from empty state to fully

charging cord (supplied) (a).

The LED (a) lights in red when charging is in progress. When charging is completed, the LED will go out.

Charging will take approximately 2.5 hours from empty state to fully

The power cannot be turned on while charging.

Do not use any other USB charging cords except the supplied one. When the battery level is low during use of the unit, the blue blinking LED will change to red. A beep will sound every 1 minute. When the battery runs out, the power will turn of the control of

C Turning the power on/off

Press and hold [₼/l] (♠)] (♠) of this unit for approx. 3 seconds until the LED (blue) (♠) blinks.

• A beep will sound, and the LED (blue) will blink slowly.

To turn the power off ress and hold [�/l] (**8**)] for approximately 3 seconds. A beep ill sound and the power will be turned off.

Press and notic (July 1) for approximately 3 seconds. A beep will sound and the power wile be turned off. 本機の操作を終えてから約5 分後に電子音が鳴って自動的に電源が切れます。(Autopower off)

D Connecting a Bluetooth® device

■ Bluetooth® pairing

■ Bluetootn "pairing

I in the power-off state, press and hold [₺/ii] (₺)] of this unit
until the LED blinks in blue and red alternately.

Select "RP-HTX80B" (₺) from the Bluetooth device's menu.

If prompted for a passkey, input the passkey '0000 (four zeros)' When the LED (blue) blinks twice every approx. 2 seconds.

■ Connecting a paired Bluetooth® device

■ Connecting a paired Billetoom* device

1 Turn on this unit.

2 Perform steps 2 of "Pairing (Registration) this unit with the Billetooth* device for connection". (→ above)

- When the LED (blue) blinks twice every approx. 2 seconds, pairing (registration) is completed. (Connection established)

E Using the headphones

Connect the Bluetooth® device and the unit. ■ Listening to music

Select and play the music on the Bluetooth® device

・The selected music is output to the speakers of the unit.

■ Remote controlling ("AVRCP"対応のBluetooth[®]機器のみ)

(Operation example)

Play / Pause: Press [►/II/\$]. Increase the volume: Press [+ ([▶▶1])

Decrease the volume: Press [- ([|◀◀])] Forward to the start of Press and hold [+ ([▶▶|])] for approximately 2 seconds. Press and hold [– ([◄◄])] for Return to the start of

Making a phone call

Press [>/II/\$] on the unit and answer the incoming call.

Press [▶/|||/^s] to end the phone call.

Reject a call / Change the call device: Press [▶/|||/^s] twice

quickly. (HFP only) You can have the Bluetooth® enabled phone make phone calls by using the microphone of the unit and an app of the Bluetooth® enabled prione. (→ below, "Using a voice control app")

Press and hold [/II/] of this unit for approx. 3 seconds

■ Restoring to the factory settings

1 While the unit is turned off, press and hold [①/l] (③)] for at least 5 seconds until the LED starts blinking alternately in blue and red.

While the LED is blinking alternately in blue and red, press and hold [* ([►►])] and [- ([:◄◄])] at the same time for at least 5 seconds. While the LED is blinking alternately in blue and red, press and hold [+ ([▶▶|])] and [- ([!◄◄])] at the same time for at least 5 seconds. The default settings will be restored after the LED (blue) blinks econds. ult settings will be restored after the LED (blue) blinks.

F To remove the battery when disposing of this unit

The following instructions are not intended for repairing purposes but for the disposal of this unit. This unit is not restorable once disassembled. When disposing of this unit, take out the battery installed in this unit and recycle it.

Regarding the handling of used batteries

■ Satteries

- Do not head or expose to flame.
- Do not lead or expose to flame.
- Do not lead or leave the battery(les) in a car exposed to direct surllight for a long period of time with doors and windows closed.
- Battery mishandling can cause electrolyte leakage which can damage lems the elaked fluid comes into contact with. If electrolyte leaks from the battery, consult your dealer. Wash thoroughly with walfer fleetchopt comes in contact with any part

■ satteres

Do not heat or expose to flame.

Do not heat or expose to flame.

Do not heat or expose to flame.

Do not heat or lime with doors and windows closed.

Battery mishandling can cause electrolyte leakage which can disamage litems the leaked flut domes into contact with. If electrolyte leaks from the battery, consult your dealer. Wash throughly will water if electrolyte comes in contact with any part throughly so that the dealer throughly will wait if electrolyte comes in contact with any part to the content of the c r your body. Vhen disposing of the batteries, please contact your local uthorities or dealer and ask for the correct method of disp

Remove the left ear pad. 2 Remove the 4 screws, and lift and flip the part 6.

3 Cut off the wires one by one with scissors, and remove the

Troubleshooting (→ Front page)

Limited Warranty (ONLY FOR U.S.A.)

The Bluetooth® word mark and logos are registered trademarks of the Bluetooth SIG, Inc. and any use of such marks by Panasonio

pration is under license.
trademarks and trade names are those of their respective

Other system names and product names appearing in this documen in general the registered trademarks or trademarks of the respective

developer companies. Note that the TM mark and [®] mark do not appear in this document.

leveloper companies. Note that the TM mark and [®] mark do not appear in this document.

corporation is under licerise. Other trademarks and trade names are those of their respective owners

Other system names and product names appearing in this documen in general the registered trademarks or trademarks of the respective

Panasonic Products Limited Warranty

Limited Warranty Coverage (For USA Only)
If your product does not work properly because of a defect in
materials or workmanship, Panasonic Corporation of North
America (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, (b) replace it Other trademarks and trade names are those of their respective owners. with a new or a refurbished equivalent value product, or (c) Other system names and product names appearing in this document are in general the registered trademarks or trademarks of the respective refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor			
Headphones/Earphones/ Headset	1 Year	Not Applicable			
All included Accessories	90 Days	Not Applicable			
During the "Labor" warrant	y period there will	be no charge for			

labor. During the "Parts" warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States. This warranty is extended only to the original purchaser of a new product which

Mail-In Service--Online Repair Request

Online Repair Request To submit a new repair request and for quick repair status visit

our Web Site at http://shop.panasonic.com/support

When shipping the unit, carefully pack, include all supplied accessories listed in the Owner's Manual, and send it prepaid adequately insured and packed well in a carton box. When shipping Lithium Ion batteries please visit our Web Site at http://shop.panasonic.com/support as Panasonic is committed on the most up to date information. Include a letter ling the complaint, a return address and provide a day phone number where you can be reached. A valid regis eipt is required under the Limited Warranty

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF CHASE, CUSTOMER WILL BE CHARGED FOR THE AIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF

L'EUNIGNAIRE.

L'Inited Warranty Limits and Exclusions
This warranty ONLY COVERS failures due to defects in materials or workmanshe, and ODE SNOT COVER formal materials or workmanshe, and ODE SNOT COVER formal materials or workmanshe, and ODE SNOT COVER damages which occurred in shipment, or failures which are caused by products or subjected by the warrantic or failures which are caused by products or subjected by the warrantic or efailures which are caused products and subject do the warrant in the control of the control of

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSCOUENTAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF

OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.
(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not

other memory of recorded content. In entern sisted are not ALL EXPRESS AND IMPLED WARRANTES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY. Some states do not allow the exclusion of limitation of incidents or consequental damages, or limitations on how long air implied warranty lasts, so the exclusions may not apply to you. The warranty less you specific legal fights and you may also the warranty less you specific legal fights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to:

Consumer Affairs Department Panasonic Corporation of North America 661 Independence Pkwv Chesaneake VA 23320

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY

Shop **Accessories!**

for all your Panasonic gear

http://shop.panasonic.com/support

Get everything you need to get the most out of your Panasonic products Accessories & Parts for your Camera, Phone, A/V

products, TV, Computers & Networking, Personal Care, Home Appliances, Headphones, Batteries, Backup Chargers & more

Customer Services Directory For Product Information, Operating Assistance, Parts, Owner's Manuals, Dealer and Service info

go to http://shop.panasonic.com/support

For the hearing or speech impaired TTY: 1- 877-833-8855

As of June 2015

Limited Warranty (ONLY FOR CANADA)

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

PANASONIC PRODUCT - LIMITED WARRANTY PRODUIT PANASONIC - GARANTIE LIMITÉE

EXCHANGE PROGRAM

Panasonic Canada Inc. warrants this product to be free from or defects in material and workmanship under normal use and for a period as stated below from the date of original purchase agrees to, at its option either (a) repair your product with new or refurbished parts., (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refurbin will be made by Panasonic decision to repair, replace or refurbin will be made by Panasonic

Accessories							One (1) year									
		_										_				

This warranty is given only to the original purchaser, or the person for whom it was purchased as a gift, of a Panasonic brand product mentioned above sold by an authorized Panasonic dealer in Canada and purchased and used in Canada and purchased and used in Sin and which product was person sold "as is", and which product was purchased and sold "as is", and which product was purchased and sold "as is", and which product was purchased and sold "as is", and which product was purchased and sold "as is "and which product was purchased and sold "as is "and which product was purchased and sold "as is "and which product was purchased and sold "as is "and which product was purchased and sold "as is "and which product was purchased and sold "as is "as is "as it was purchased and sold "as is "as it was purchased and sold "as it was purchased and "as it was purchased an Canada, which product was not sold "as is", and which product was delivered to you in new condition in the original packaging.

IN ORDER TO BE ELIGIBLE TO RECEIVE WARRANTY SERVICE HEREUNDER, A PURCHASE RECEIPT OR OTHER PROOF OF DATE OF ORIGINAL PURCHASE, SHOWING AMOUNT PAID AND PLACE OF PURCHASE IS

LIMITATIONS AND EXCLUSIONS

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by Panasonic Canada Inc., or failures which result from accidents, misuse. abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or lic commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Authorized Servicer, or damage that is attributable to acts of God.

Dry cell batteries are also excluded from coverage under this

THIS EXPRESS LIMITED WARRANTY IS IN LIFTLOF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR ARISING OUT OF ANY BREACH OF ANY EAPHESS OF IMPLIED WARRANTY, (As examples, this warranty excludes damages for lost time, travel to and from the Authorized Servicer, loss of or damage to media or images, data or othe memory or recorded content. This list of items is not exhaustiv

In certain instances, some jurisdictions do not allow the In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusions may not be applicable. This warranty gives you specific legal rights and you may have other rights which vary depending on your province or territory.

WARRANTY SERVICE

For product operation, repairs and information assistance, please visit our Support page:
www.panasonic.ca/english/support

IF YOU SHIP THE PRODUCT TO A SERVICENTRE Carefully pack and send prepaid, adequately insured and preferably in the original carton.
Include details of the defect claimed, and proof of date of

Certificat de garantie limitée (Pour le Canada seulement)

Panasonic Canada Inc.

5770, Ambler Drive, Mississauga (Ontario) L4W 2T3

PROGRAMME DE REMPLACEMENT

Panasonic Canada Inc. garantit que ce produit est exempt de défauts de matériaux et de main-d'œuvre dans un contexte d'utilisation nomise pendant la pénde néquier ci-après à defactuelle pendant la pénde néquier ci-après à défectuelle, accepte, à sa discrétion, de (a) réparer le produit avec des pièces noverse ou remises a neuf. (D) remplacer le produit par un produit neuf ou remis à neuf d'une valeur quivalente ou (C) rembourser le pris d'achet. La décision de réparer, remplacer ou rembourser appartient à Panasonic Camada Inc.

La présente garantie n'est fournie qu'à l'acheteur original d'un des produits de marque Panasonic indiqués plus haut, ou à la personne l'ayant reçu en cadeau, vendu par un détaillant Panasonic agréé au Canada et utilisé au Canada. Le produit ne doit pas avoir été "vendu tel quel" et doit avoir été livré à l'état neuf dans son emballage d'origine.

POUR ÊTRE ADMISSIBLE AUX SERVICES AU TITRE DE LA PRÉSENTE GARANTIE, LA PRÉSENTATION D'UN REÇU D'ACHAT OU DE TOUTE AUTRE PIÈCE JUSTIFICATIVE DE LA DATE D'ACHAT ORIGINAL. INDIQUANT LE MONTANT PAYÉ ET LE LIEU DE L'ACHAT, EST REQUISE

RESTRICTIONS ET EXCLUSIONS

RESTRICTIONS ET EXCLUSIONS

La présente grantine COUVRE SEULEMENT les défaillances attribuables à un défaut des matériaux ou à un vice de fabrication et Ne COUVRE PAS l'auxen ormaile n'ile adhiraction et Ne COUVRE PAS l'auxen ormaile n'ile adhiraction et Ne COUVRE PAS l'auxen perdair le transport, les YoN NON PLUS se dommages sebre perdair le transport, les Passonic Canada he. n'i celles résultant d'un accident, d'un usage abustion un impropre, de neiglemen, d'une mauntention inadéquate, d'une mauvaite application, d'une alteration, d'une installation ou de réglages impropres, d'un manuraite réglage surficience, d'une manufaction, de la surfiession temporaire, de la fourtier, d'une modification, de la surfiession temporaire, de la fourtier, d'une modification, de la referenciaci (dans un hôtel, un bureau, un restaurant ou tout autre usage par affaires ou en hociation, d'une régrandion d'une reparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre usage par affaires ou en hociation, d'une réparation autre d'une autre autre d'une autre a

Les piles sèches sont également exclues de la présente

CETTE GARANTIE LIMITÉE ET EXPRESSE REMPLACE TOUTE AUTRE GARANTIE, EXPRESSE OU IMPLICITE, INCLUANT LES GARANTIES IMPLICITES DU CARACTÈRE ADÉQUAT POUR LA COMMERCIALISATION ET UN USAGE PARTICULIER. PANASONIC CANADA INC. N'AURA D'OBLIGATION EN AUCUNE CIRCONSTANCE POUR TOUT DOMMAGE DIRECT, INDIRECT OU CONSÉCUTIF RÉSULTANT DE L'UTILISATION DE CE PRODUIT OU CONSÉCUTIF DÉCOULANT DE TOUTE DÉCOULANT DE TOUTE DÉCOULANT DE TOUTE DÉCOULANT DE TOUTE DE C DÉCOULANT DE TOUTE DÉROGATION À UNE GARANTIE EXPRESSE OU IMPLICITE. (À titre d'exemples, cette garantie exclut les dommages relatifs à une perte de temps, le transpor jusqu'à et depuis un centre de service agréé, la perte ou la détérioration de supports ou d'images, de données ou de tout autre contenu en mémoire ou enregistré. Cette liste n'est pas exhaustive et n'est fournie qu'à des fins explicatives.)

Certaines juridictions ne reconnaissent pas les exclusions ou limitations de dommages indirects ou consécutifs, ou les exclusions de garanties implicites. Dans de tels cas, les limitations stipulées ci-dessus peuvent ne pas être applicables La présente garantie vous confère des droits précis; vous pourriez aussi avoir d'autres droits pouvant varier selon votre

province ou territoire de résidence SERVICE SOUS GARANTIE

Pour tout renseignement sur les produits, réparation ou assistance technique, veuillez visiter notre page Soutien : www.panasonic.ca/french/support

EXPÉDITION D'UN PRODUIT À UN CENTRE DE SERVICE Emballez soigneusement, de préférence dans son carton d'origine, et expédiez, franco de port, suffisamment assuré. Accompagnez le tout d'une description de la défectuosité présumée et d'une pièce justificative de la date d'achat original.