

Where used:

2015.0 Figo/Ka B562 Variants:

(CDS, CDU)

Owner's Manual (2017XX) (CDU) - 26-02-2018

Owner's Manual (2018XX) (CDS) - Brazil, 28-05-2018

Owner's Manual (2017XX) (CDU) - Mexico, 26-02-2018

Owner's Manual (2018XX) (CDS) - Argentina, 28-05-2018


Owner's Manual (2017XX) (CDU) - South Africa, 26-02-2018


Audio System

AUDIO UNIT - VEHICLES WITH: AM/FM/BLUETOOTH (G194841)

Note: Depending on your vehicle option package, your system may look different from what you see here.

WARNING

 Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

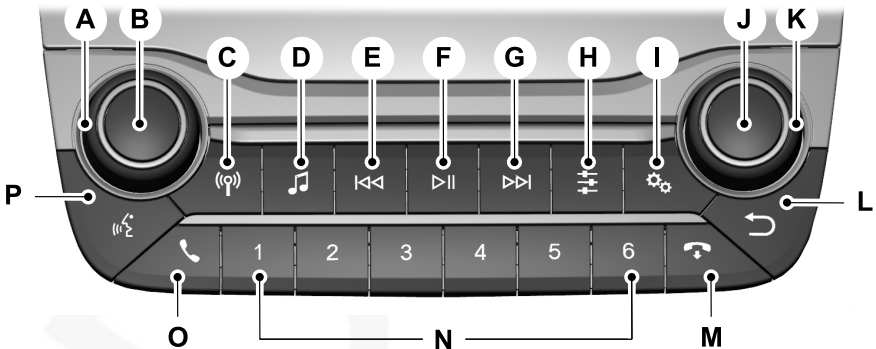

E264245

- A Volume.
- B Power.
- C Radio.
- D Media.
- E Seek Down and Previous Track.
- F Pausing or Playing Media.

Audio System

- G Seek Up and Next Track.
- H Sound Settings.
- I System Settings.
- J OK Button.
- K TUNE.
- L Previous Screen.
- M End phone call.
- N Number block.
- O Answer or make phone call.
- P Voice recognition.

Volume

Turn the control to adjust the volume.

Power

Press to switch the system on and off.

Radio

Press the button to select radio mode. Repeatedly press the button, or rotate the right-hand rotary control to scroll through the available radio sources.

Media

Press the button to select media mode. Repeatedly press the button, or rotate the right-hand rotary control to scroll through the available media sources.

Seek Down and Previous Track

In radio mode, select a frequency band and press this button. The system stops at the first station down the band. Press and hold the button to move quickly, then release to stop at the previous available station.

In media mode, press the button to select the previous track. Press and hold the button to move quickly backward through the current track.

Note: *Bluetooth mode do not support this feature.*

Pausing or Playing Media

In radio mode, press the button to mute the signal. Press the button again to restore the signal.

In media mode, press the button to pause playback. Press the button again to resume playback.

Seek Up and Next Track

In radio mode, select a frequency band and press this button. The system stops at the first station up the band. Press and hold the button to move quickly, then release to stop at the next available station.

In media mode, press the button to select the next track. Press and hold the button to move quickly forward through the current track.

Note: *Bluetooth mode do not support this feature.*

Sound Settings

Press the button to adjust the sound settings. You can also activate and set the sensitivity of the adaptive or speed compensated volume.

Audio System

System Settings

Press to access various system settings such as clock, bluetooth pairing.

OK Button

Press the button to confirm menu selection. In radio mode, press to mute the station. In media mode, press to either play or pause a track.

Tune

In radio mode, turn to search the frequency band in individual increments. Press to mute the station. In media mode, turn to select a new track.

Previous Screen

Press to return to the previous screen.

End Phone Call

Press to end an active phone call.

Number Block

In radio mode, store and recall your favorite radio stations. To store a radio station, tune to the station, then press and hold a preset button until sound returns.

Answer or Make Phone Call

Press to make a call from a recent call list, contact list or dial a number.

Using a Cell Phone



You can make a phone call from the below options on the display;

Menu
Recent Calls
Contacts
Keypad

Dial a Number

Menu	Action
Keypad	Select the menu using the OK button.
	Select numbers using the tuning control and OK button.
	Select phone option on the display or press phone button on the radio bezel.

Voice Recognition

This system allows you to use the voice recognition features of your phone and focus on your driving. Press and hold the voice control button.

Note: *This only works when connected via Bluetooth.*

Connecting a Bluetooth Device



Press the button. Select Bluetooth and follow the instructions on the screen.

Note: *When pairing a new device, you can choose to download contacts, set this as the primary device and enable Emergency Assistance if available.*

Selecting a Radio Source



Press the button to display the available radio sources. Repeatedly press the button to scroll to the preferred radio source.

Press the OK button.


Station Presets

To store a radio station, press and hold one of the numeric preset buttons.

Note: *Six presets can be stored for each radio source.*

Audio System

Changing Stations

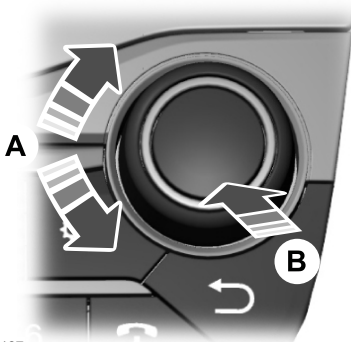

E267127

A Manual Tuning.

B Station Name Tuning.

Note: You can change between auto or manual tuning with the rotary control using the system settings.

Automatically Changing Stations



Press the button to search for the next radio station.



Press the button to search for the previous radio station.

Selecting a Station from the List

Press the OK button to view available stations.

Traffic Information Control (if

Equipped)

Many stations that broadcast on the FM waveband have a TP code to signify that they carry traffic program information.

Turning TA (traffic announcement) On and Off (if

Equipped)



Press the button. Select TA.

If you are listening to a station that broadcasts traffic information, TP also displays. Otherwise, the unit searches for a traffic program.

Traffic information broadcasts automatically interrupt normal radio or USB playback and appear in the display.

If you select a non-traffic station using a preset button, the audio unit remains on that station unless you switch TA off, then on again.

Note: TA is disabled by default.

Note: If TA is on and you select a preset or manual tune to a non-TA station, you do not hear a traffic announcement.

Note: When you are listening to a non-TA station and switch traffic announcement on and off again, a TP seek occurs.