

Panasonic

Video Cassette Recorder

NV-FJ630PMP
NV-SJ430PMP



Operating Instructions
Instrucciones de funcionamiento



SUPER DRIVE

VQT9630

Before attempting to connect, operate or adjust this product, please read these instructions completely.

Dear Customer

Thank you for purchasing this Panasonic Video Cassette Recorder.

We strongly suggest that you carefully study the Operating Instructions before attempting to operate the VCR, and that you note the listed precautions.

CVC (Crystal View Control) Indicator

The crystal view control function ensures that you always obtain the optimum picture quality so that you get the best picture automatically. While the VCR is turned on, the CVC indication is always displayed to show that the Crystal View Control is activated.

Longrun Head System

This longrun head system enables approximately 8,000 hours of recording/playback with high quality images. Newly developed head cylinder with narrower head windows and tapered cylinder design effectively protects heads from dust and prevents head clogging. Plus, "Alumina" Head Cleaner further enhanced cleaning efficiency.

- Based on in-house tests with Panasonic video cassettes. Actual head life may vary according to conditions of use, tape type, temperature, humidity, etc.

The serial number of this product can be found on the rear panel. No others have the same serial number as yours. You should record the number and other vital information here and retain this book as a permanent record of your purchase to aid identification in case of theft.

Date of Purchase _____



Dealer purchased from _____

Dealer Address _____


Dealer Phone No. _____

Model No. **NV-FJ630PMP/
NV-SJ430PMP**


Serial No. _____

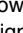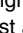Press **POWER**  (**POWER** ) to switch the VCR from on to standby mode or vice versa. In standby mode, the VCR is still connected to the main AC power.

Plug in Auto Tuning

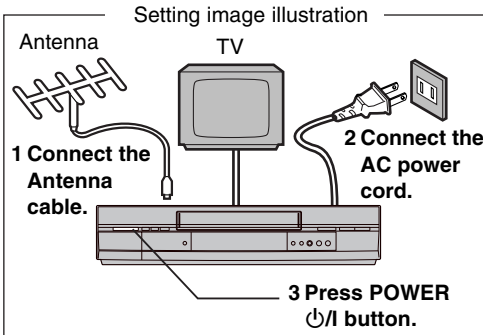

On Screen display

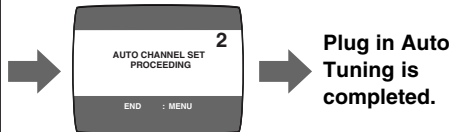

All broadcasting stations that can be received in the area are automatically tuned and stored in memory.

- Do not turn off the VCR halfway. (See pages 11–14.)

Contents

As this equipment gets hot during use, operate it in well ventilated place; do not install this equipment in a confined space such as a book case or similar unit.

WARNING

TO REDUCE THE RISK OF FIRE
ELECTRIC SHOCK OR PRODUCT
DAMAGE, DO NOT EXPOSE THIS
EQUIPMENT TO RAIN, MOISTURE,
DRIPPING OR SPLASHING AND
ENSURE THAT NO OBJECTS FILLED
WITH LIQUIDS, SUCH AS VASES,
SHALL BE PLACED ON THE
EQUIPMENT.

FOR YOUR SAFETY

■ DO NOT REMOVE OUTER COVER.

To prevent electric shock, do not remove cover.

No user serviceable parts inside. Refer servicing to qualified service personnel.

IMPORTANT

Your attention is drawn to the fact that recording of pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

ACCESSORIES

- 1 pc. Infrared Remote Controller
- 1 pc. Coaxial Cable
- 2 pcs. "R6" size Batteries
- 1 pc. Power Plug Adaptor

Surge Absorber

For added protection for this product, these models are equipped with new surge absorbing circuit which prevents damage due to power surges caused by induced lightning.

- This function may not be effective for surges by direct lightning.

Before Use

Controls and Connection Sockets	4
Infra-red Remote Controller	6
• Installing the Batteries	7

Setting Up

Connections	8
Tuning the TV to your VCR	11
• Plug in Auto Tuning	11
Storing TV Broadcasts in your VCR	13
Setting the Remote Controller for Operation of your TV	15
Setting the Clock of your VCR	16
Settings Using the On Screen Display	17
• To Select the Desired Language	20

Basic Operations

Playback	21
• Jet Search	22
• Other Playback Functions	22
Manual Recording	24
• One-Touch Recording (OTR)	26
• Direct Recording	26

Advanced Operations

Timer Recording	27
• 4-Key Programming	27
Search Functions	30
• Jet Navigator	30
• Time Stamp Function	32
• VHS Index Search System	33
• Intro-Jet Scan	33
Editing	34
• Assembly Editing	34
Other Functions	35
• Other Automatic Functions	35


Helpful Hints

Before Requesting Service	36
Usage Precautions	38
Specifications	40


Controls and Connection Sockets

This section describes in detail the function of each button, switch and connection socket.

NV-FJ630PMP

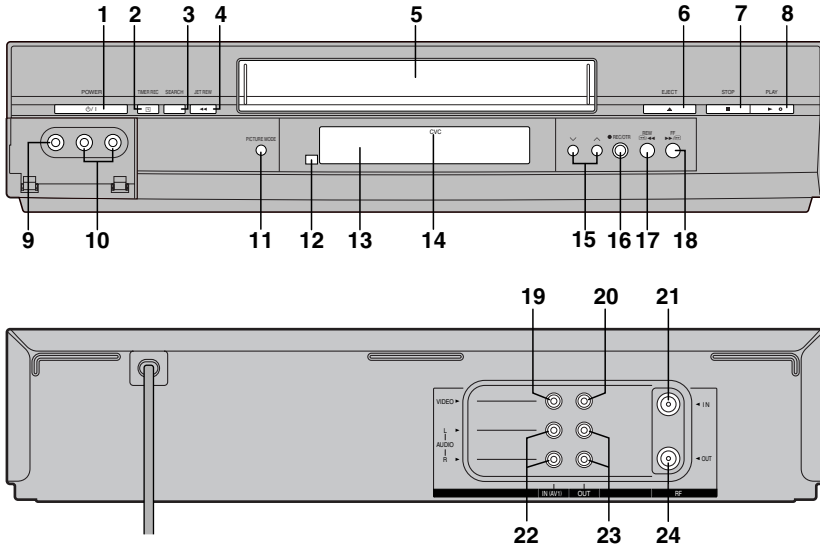

NV-SJ430PMP

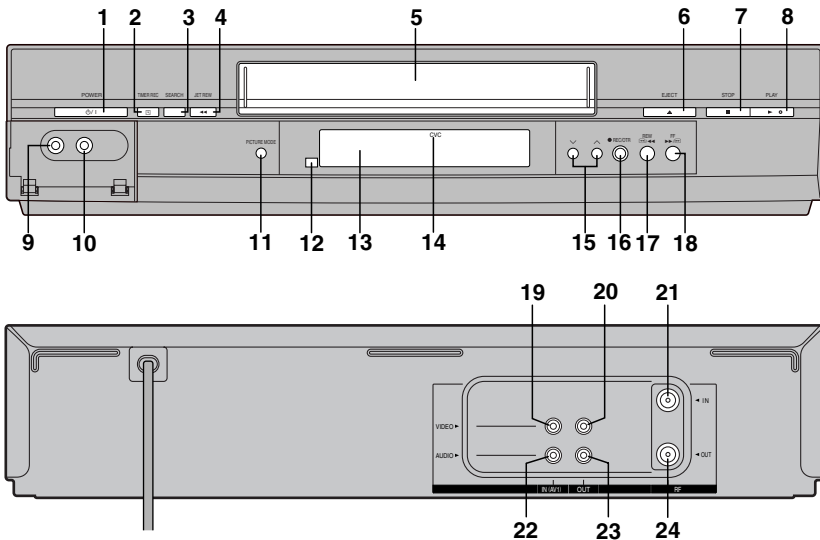


FRONT

- 1 POWER / I (POWER) (☞ 11)
- 2 TIMER REC (TIMER) (☞ 27)
- 3 SEARCH (☞ 33)
- 4 JET REW (☞ 22)
- 5 Cassette Compartment (☞ 21)
- 6 EJECT (☞ 12)
- 7 STOP (☞ 21, 24)
- 8 PLAY (☞ 21)
- 9 VIDEO IN (AV2) (☞ 34)
- 10 AUDIO IN (AV2) (☞ 34)
- 11 PICTURE MODE (☞ 18, 23)
- 12 Infra-red Remote Control Receiver Window
- 13 Display
- 14 CVC Indicator (☞ 2)
- 15 (☞ 12, 35)
- 16 REC/OTR (☞ 26)
- 17 REW (REWIND) (☞ 21)
- 18 FF (FAST FORWARD) (☞ 21)

REAR

- 19 VIDEO IN (AV1) (☞ 34)
- 20 VIDEO OUT (☞ 9)
- 21 RF IN (☞ 8)
- 22 AUDIO IN (AV1) (☞ 8, 34)
- 23 AUDIO OUT (☞ 8, 9)
- 24 RF OUT (☞ 8)

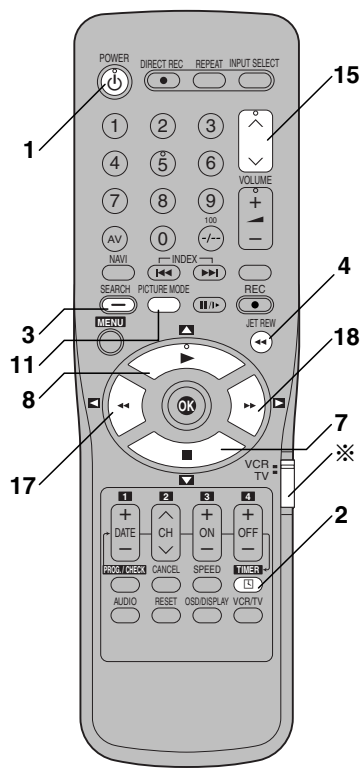


※ Set VCR/TV switch to VCR for using POWER , the and buttons.

Infra-red Remote Controller

The remote control unit for this VCR is a universal remote controller. As such, some of its buttons are not used to operate this VCR.

VCR OPERATION

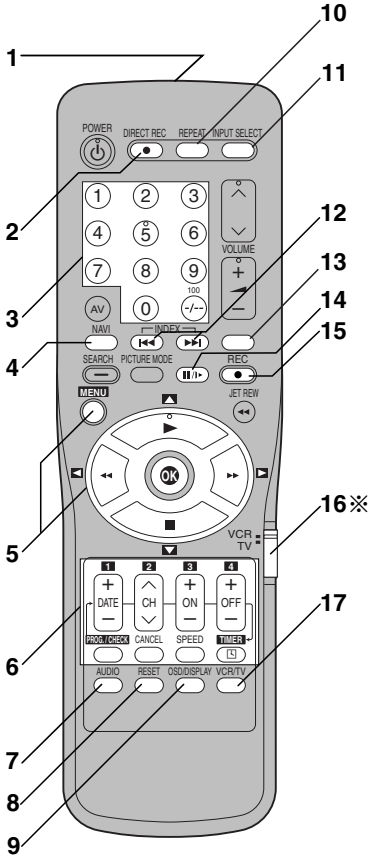

※ Set **VCR/TV** switch to **VCR** for using the **numeric buttons**.

1 Infra-red Transmitter

2 DIRECT REC (☞ 26)

3 Numeric Buttons (☞ 15, 24)

Selects program positions of the VCR.

• Ensure that **VCR/TV** switch is set to **VCR**.

9: 0 → 9

19: 1 → 9

109: +/- → 0 → 9

4 NAVI (☞ 30)

5 On Screen Display Menu Operation Buttons (☞ 13)

MENU

OK

▲ ▼ ◀ ▶

6 Timer Recording Operation Buttons (☞ 27–29)

DATE, CH, ON, OFF

PROG./CHECK

CANCEL

SPEED

TIMER []

7 AUDIO (☞ 17)

8 RESET (☞ 18)

9 OSD/DISPLAY (☞ 17, 25)

10 REPEAT (☞ 23)

11 INPUT SELECT (☞ 34)

12 INDEX ◀◀, ▶▶ (☞ 33)

13 No function




14 II/▶ (PAUSE/SLOW) (☞ 21)


15 REC ● (☞ 24)

16 VCR/TV switch

17 VCR/TV (☞ 11)

TV OPERATION



※ Set **VCR/TV** switch to **TV** for using **POWER** , the  and  buttons and the **numeric buttons**.

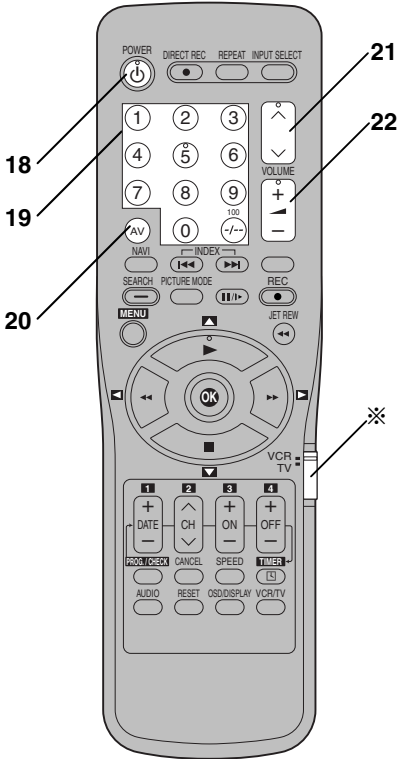

18 POWER

Press to switch the TV from on to standby mode or vice versa. In standby mode, the TV is still connected to the mains.

- With some TV models, it may only be possible to switch the TV to the standby mode using this button.

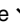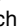In this case, use **AV** or the  and  buttons to switch the TV on.

- Ensure that **VCR/TV** switch is set to **TV**.

19 Numeric Buttons

Selects program positions of the TV.

- Ensure that **VCR/TV** switch is set to **TV**.

20 AV

Selects TV input or AV input.

21

Selects the required program position (TV station) of the TV.


- Ensure that **VCR/TV** switch is set to **TV**.

22 VOLUME

Adjusts the volume of the TV.

Installing the Batteries

Insert the batteries with the polarity (\oplus and \ominus) correctly aligned.

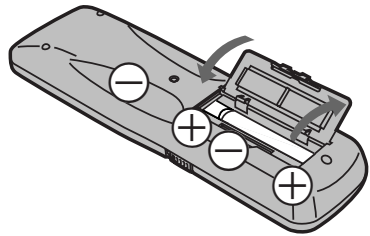

Power Source for the Remote Controller:

The remote controller is powered by 2 “AA”, “UM3” or “R6” size batteries. The life of the batteries is about one year, although this depends on the frequency of use.

Precautions for Battery Replacement:

- Load the new batteries with their polarity (\oplus and \ominus) aligned correctly.
- Do not apply heat to the batteries, or an internal short circuit may occur.
- If you do not intend to use the remote controller for a long period of time, remove the batteries and store them in a cool and dry place.
- Remove spent batteries immediately and dispose of them.
- Do not use an old and a new battery together, and never use an alkaline battery with a manganese battery.
- Do not use rechargeable batteries.


Connections

This section shows you how to connect the VCR to an antenna, TV, etc.

When the VCR is turned on after connecting the antenna cable and the AC power cord, Plug in Auto Tuning starts automatically.


Basic Connections

The following connections are required to record and play back the video cassette through the TV.


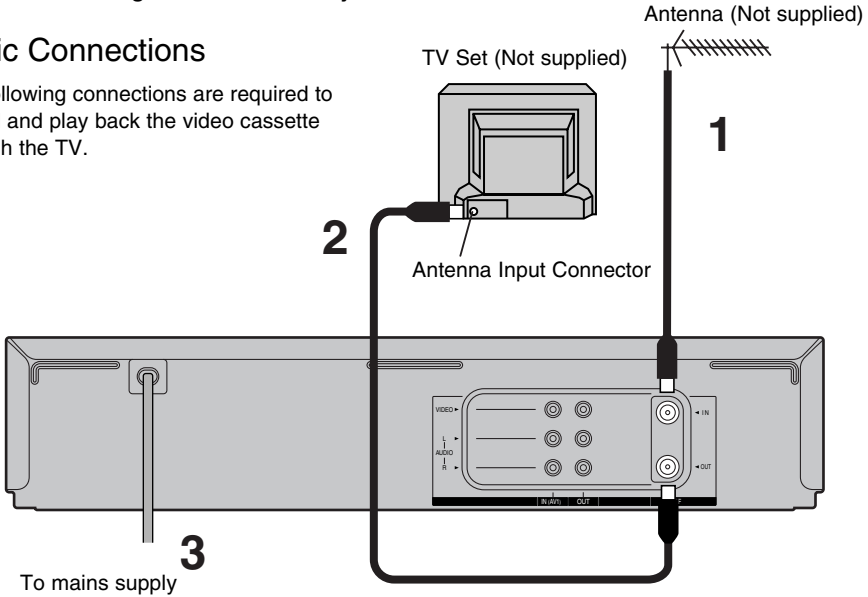


- Use the plug adaptor supplied if it is needed to fit the shape of the power outlet which will be used.

• Connection to a Stereo Amplifier (NV-FJ630PMP only)

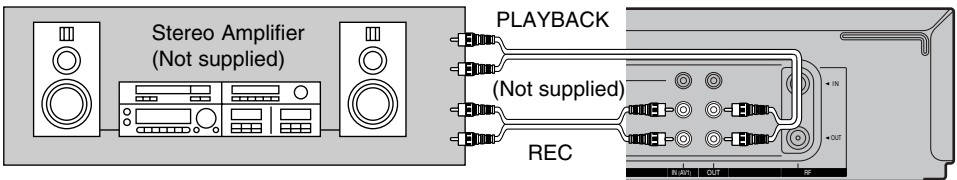

Connection to a TV using the Audio/Video Input Sockets

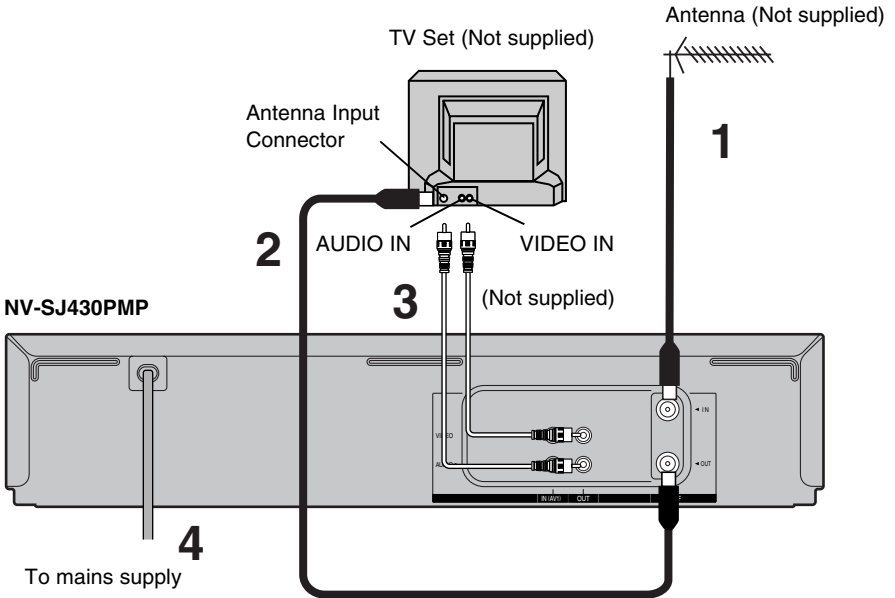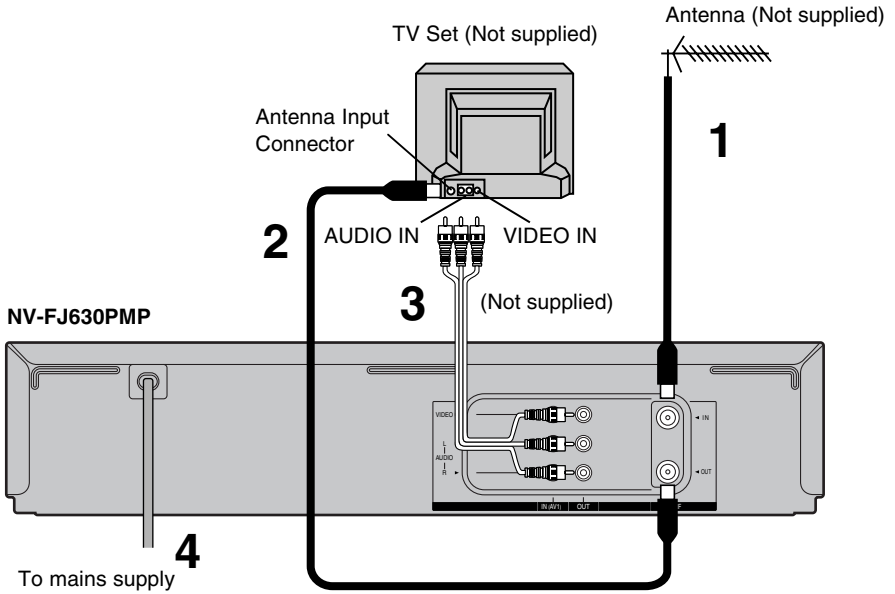


Cable Connection

Cable-VCR-TV (For CATV/PAY Channels Recording/Playback)

The VCR has an extended range, and can tune the Low-Band, Mid-Band, Super-Band, Hyper-Band, Ultra-Band, and Special cable channels (Channels A-5-A-1, A-W, AA-FFF, GGG-WWW, WWW+1-WWW+12, 100-125, 5A). Also, the VCR can tune to any of the 56 UHF channels (14-69). Refer to **Storing TV Broadcasts in your VCR** on page 13.


BASIC Hook-Up

Since the VCR can tune Mid and Super Bands, this connection will provide the reception of all cable channels except those which are intentionally scrambled.

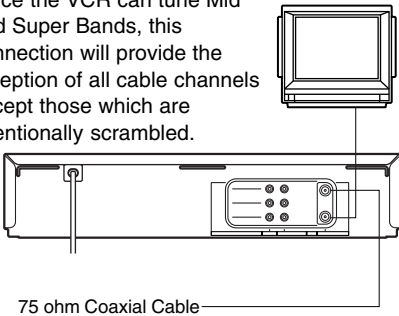


However, if you subscribe to a special channel which is scrambled you will probably have a descrambler box for proper reception. The VCR by itself cannot properly receive a scrambled program since it does not contain a descrambler. In order for the VCR to properly receive a scrambled program, your existing descrambler must be used. There are two commonly used methods of connection in this case.

Typical Cable System Hook Ups with Cable Converter/Descrambler Boxes

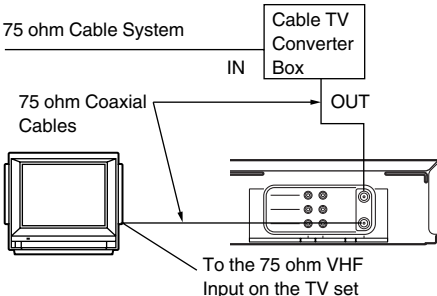


The cable hook-up shown at the bottom left allows VCR-TV functions except for viewing one channel while recording another.

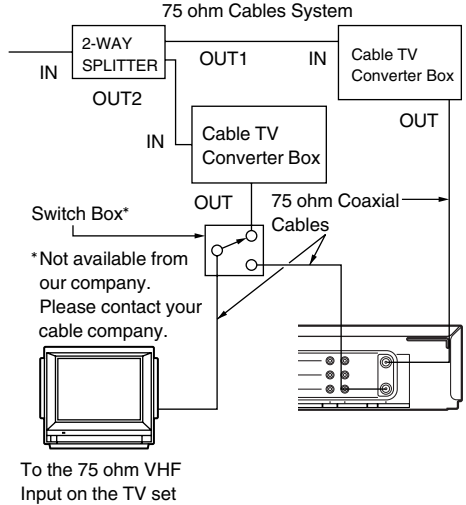

The above cable hook-up allows VCR functions, including viewing one channel while recording another, but it requires two cable TV Converter/Descrambler Boxes, one Switch Box and one 2-Way Splitter.

Since the VCR has an extended range of tuning, tuning-programing of non-scrambled Mid-Band and Super-Band TV programs is possible. When a cable converter or descrambler box is connected to the VCR, all timer-controlled recording functions will continue to operate with the exception of changing channels automatically. CATV Channel selection will have to be performed with the cable converter. Timer-controlled recording from CATV Channels is therefore limited to one channel at any given time.

Tuning the TV to your VCR

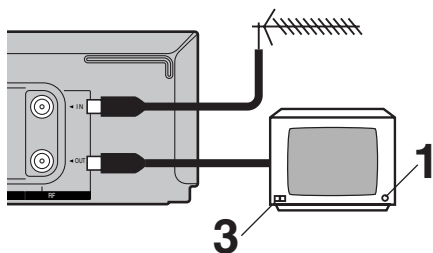


The VCR is fitted with its own tuner (just like a normal TV) and can be preset to receive up to 181 TV broadcast stations.

Plug in Auto Tuning

Auto Tuning searches for TV stations from VHF minimum to UHF maximum and memorizes every tuned program position.


Notes:

- If the VCR is turned on with the antenna not connected, all channels are skipped.
- When Auto Tuning is canceled halfway, Auto Tuning is not executed even if the VCR is turned off and then turned on again. In this case, see page 12 “To Restart Plug in Auto Tuning”.

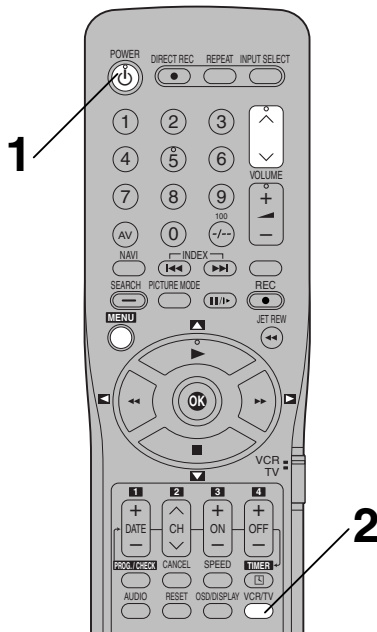

- 1 Press **POWER** to turn on the TV and VCR after connecting the antenna cable and the AC power cord, Auto Tuning starts.

On Screen Display

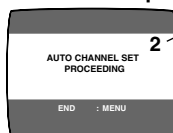

Channel being searched

- Auto Tuning will stop halfway by turning the VCR off, pressing **MENU**, playback or a power failure during Auto Tuning.
- When there are 5 more CATV channels, the antenna system CATV is automatically selected; when there are 4 or fewer CATV channels, the TV is selected. If a change is required, conduct the resetting procedure described in step 4 on page 13.

- 2 Press **VCR/TV** to select the VCR mode.

(continues on the next page)

The VCR supplies a signal to the TV via the RF coaxial cable on channel US3 or 4.

It is possible to view the video picture on your TV in the same way that you watch TV broadcasts.


If you have connected the VCR to the TV through the video and audio input sockets, then you do not need to follow the procedure below.

When the VCR is turned on after unpacking and connecting the antenna cable and the AC power cord, Plug in Auto Tuning starts automatically.

3 Select a program number on the TV which you wish to use as the video viewing channel. Then tune in the TV to the picture from the screen being auto tuned or the screen selected with the ∇ and \blacktriangle buttons of the VCR.

- During Auto Tuning, the TV program screen does not appear, and the Auto Tuning screen appears instead.

On Screen Display

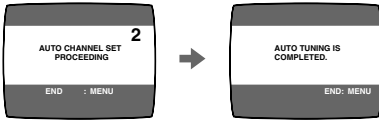


To Cancel Auto Tuning Mid-Operation

Press **MENU** during Auto Tuning. Auto Tuning is cancelled.

To Restart Plug in Auto Tuning

- 1 Press **EJECT** \blacktriangle and remove the video cassette.
- 2 Keep the ∇ and \blacktriangle buttons on the VCR pressed simultaneously for 3 seconds or more during the VCR on.
 - The channel displayed on the VCR display disappears for a moment then changes to 2.

 Display Symbol



- 3 Disconnect the mains lead and then reconnect it.
- 4 Turn off the VCR and then turn it on. Press **VCR/TV** to select the VCR mode.
 - Auto Tuning commences.


If Auto Tuning stops halfway by turning the VCR off, playback or a power failure:

- 1 Disconnect the mains lead and then reconnect it.
- 2 Turn off the VCR and then turn it on.
 - Auto Tuning commences.

To Change the RF Output Channel

In some rare cases after tuning the TV to your VCR, interference may be visible on the picture. To get rid of this interference, you can manually adjust the RF output channel a few channels up and down from the current setting. The procedure is described below.

- 1 Hold down **MENU** for 5 seconds or more.
 - The VCR display changes as shown below and the VCR picture on the TV displays this pattern.

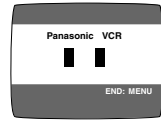

- 2 Enter the desired channel number (US3 or US4) by the ∇ and \blacktriangle buttons.

3 \longleftrightarrow 4

- 3 Press **MENU** to finish the setting mode.
- 4 Retune your TV to the new RF channel for the VCR.


Note:

- Even if the RF output channel has been changed, it is not necessary to perform Auto Tuning.

Storing TV Broadcasts in your VCR

Auto Tuning Using the On Screen Display

The VCR is tuned automatically by Plug in Auto Tuning. However, Auto Tuning using the On Screen Display should be performed according to the following method if necessary.

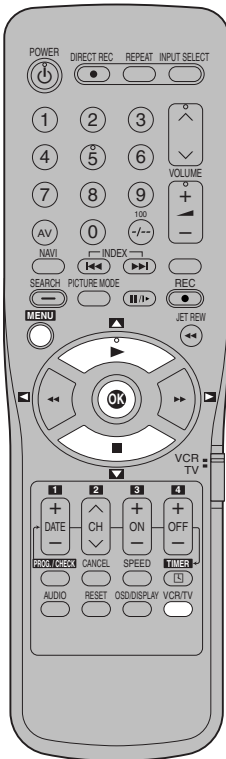

Notes:


- Auto Tuning searches for TV stations from VHF minimum to UHF maximum and memorizes every tuned program position. Other program positions are skipped.
- Auto Tuning takes three or more minutes to complete its search.
- If the VCR is not correctly tuned by Auto Tuning, follow the procedure on the next page.

Preparations


- Confirm that the TV is on and the VCR viewing channel is selected.
- Turn on the VCR and select any program position except A1 or A2.
- Press **VCR/TV** to select the VCR mode.

Operations


1 Press **MENU**.

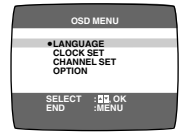


2 Select **CHANNEL SET** by pressing **▲** or **▼** and then press **OK**.

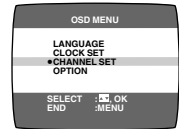


3 Select **ANTENNA SYSTEM** by pressing **▲** or **▼** and then press **OK**.

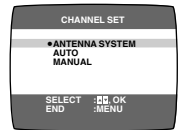


4 Select the desired system by pressing **▲** or **▼** and then press **MENU**.

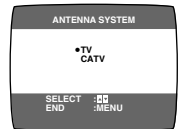

5 Select **AUTO** by pressing **▲** or **▼** and then press **OK**.

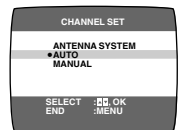

● When Auto Tuning is completed, the on screen display disappears and the lowest channel position at which a broadcast can be tuned in is received.

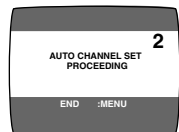


Manual System Setting Procedure

Follow steps 1 to 4 on page 13.

- 5 Select **MANUAL** by pressing ▲ or ▼ and then press **OK**.

On Screen Display

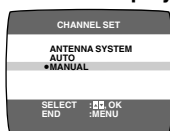

- 6 Select **CH** by pressing ▲ or ▼ and then select the program position by pressing ◀ or ▶.



- 7 Select **BLANK** by pressing ▲ or ▼ and then select **ON** or **OFF** by pressing ◀ or ▶.



- To select the blanking of a program position, select **ON**.
- Repeat steps 6 and 7 for another unoccupied program positions to skip during the selection of the program positions.

- 8 Press **MENU** three times.

Channel Plan TV mode


CHANNEL DESIGNATIONS	CHANNEL RECEIVED OF THE AIR	CHANNEL SELECTION & INDICATION ON VCR
VHF	2-13	2-13
UHF	14-69	14-69

CATV mode

CHANNEL DESIGNATIONS	CHANNEL RECEIVED FROM CABLE	CHANNEL SELECTION & INDICATION ON VCR
BROADCAST VHF	2-13	2-13
CATV LOW BAND	A-5-A-1	95-99
CATV MID/SUPER BANDS	A-W	14-36
CATV HYPER BAND	AA-FFF	37-65
ULTRA BAND	GGG-WWW WWW+1- WWW+12	66-94
	100-125	100-125
SPECIAL CATV CHANNEL	5A	1

Setting the Remote Controller for Operation of your TV

You can operate the TVs of the manufacturers listed below with the remote controller after setting it.

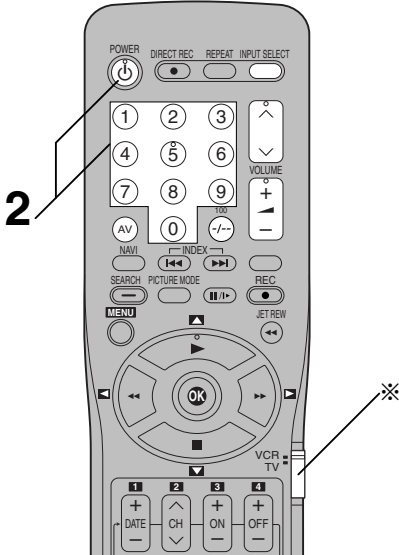

※ Set **VCR/TV** switch to **TV** for using **POWER** ⏻, the **∨** and **∧** buttons and the **numeric buttons**.

- 01 Panasonic/National QUASAR
- 02 Panasonic/National QUASAR
- 03 MAGNAVOX SYLVANIA PHILIPS (RC-5)
- 04 ZENITH
- 05 THOMSON RCA GE
- 06 SHARP
- 07 SHARP
- 08 SONY
- 09 TOSHIBA
- 10 SANYO FISHER
- 11 JVC
- 12 HITACHI PHILCO
- 13 MITSUBISHI
- 14 SAMSUNG
- 15 GOLDSTAR/LG
- 16 GOLDSTAR/LG
- 17 GOLDSTAR/LG
- 18 SAMSUNG

Preparation

- Install the batteries in the remote controller.

Operations

- 1 Find the manufacturer number of your TV while referring to the table.
- 2 While holding down **POWER** ⏻, use the **numeric buttons** to enter the manufacturer number. This completes the settings for the TV manufacturer.
 - Be sure to enter the number in two digits. Example: 1→01
- 3 To confirm that the correct settings were made, check whether the TV can be operated properly.
 - When a manufacturer has multiple numbers in the table, try entering other numbers if the TV operations cannot be performed properly, and then select the optimal number.

Notes:


- If you are using a Panasonic TV, this setting has already been made, and so you do not need to perform the above setting procedure. However, this remote controller may not work with some Panasonic TVs.
- Some TV models cannot be operated using this remote controller (including all TVs non-remote compatible).

Setting the Clock of your VCR

The built-in digital clock is used to activate the timer for automatic recording and must be set to the correct time. It employs the 24-hour system.

Preparations

- Confirm that the TV is on and the VCR viewing channel is selected.
- Turn on the VCR.
- Press **VCR/TV** to select the VCR mode.

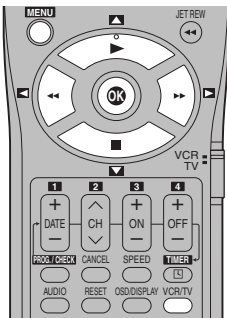

Example:


Date: 16 October (During daylight saving time), 2005

Time: 20:15


Operations

1 Press **MENU**.

On Screen Display

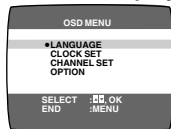

2 Select **CLOCK SET** by pressing **▲** or **▼** and then press **OK**.

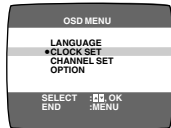


3 Set **D.S.T.** (Daylight Saving Time) by pressing **▲** or **▼**.



- Select **YES** to set daylight saving time. The time on the clock is advanced by 1 hour.
- Select **NO** to return to standard time. The time on the clock is set back by 1 hour.
- Press **▶** to set each time.
- Press **MENU** when not setting each time.

4 Set each item by pressing **▲** or **▼** and **▶**. Press **◀** to return to the previous item.


Set **Year** to "2005".

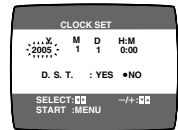

Set **Month** to "10".




Set **Date** to "16".

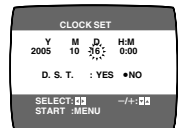


Set **Time** to "20:15".

- When it is kept pressed, the indication changes in 30-minute steps.
- There is no need to press **▶**.

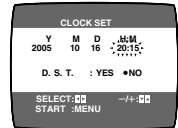

Display Symbol

 

5 Press **MENU**.

- The clock starts.

Note:

- The clock operates for at least 5 years on its backup system in the event of a power failure.

Time Reset Function

If the clock is less than two minutes slow or fast, it can easily be reset to the proper time.

Example: Resetting the clock to 12:00:00

- 1 Select **CLOCK SET** from the OSD menu and press **OK**.
- 2 When the current clock display on the VCR is between 11:58.00 and 12:01.59, press **MENU** as soon as you hear the 12:00.00 signal. This resets the time to 12:00.00.

Settings Using the On Screen Display

Preparations

- Confirm that the TV is on and the VCR viewing channel is selected.
- Turn on the VCR.
- Press **VCR/TV** to select the VCR mode.


On Screen Display

1 Press **MENU**.

- 2 Select **OPTION** by pressing **▲** or **▼** and then press **OK**.



- 3 Select **OSD** by pressing **▲** or **▼**.

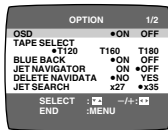


- 4 Select **ON** or **OFF** by pressing **◀** or **▶**.

ON: The on screen display will appear on the TV screen for 5 seconds.

- The on screen display will always appear on the TV screen during rewind and fast forward.

OFF: The on screen display will not appear.

- 5 Press **MENU** twice to make the on screen display disappear.

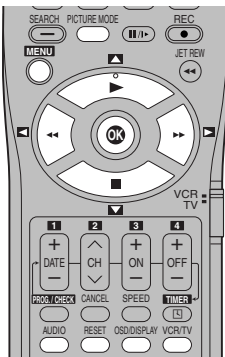

To Use the On Screen Display

Press **OSD/DISPLAY**.

- 1 **L and R Indicators** (NV-FJ630PMP only)

- 2 **Indicator for STEREO and SAP Reception** (NV-FJ630PMP only)

When receiving a TV program, automatically indicates when a TV program is broadcast with the stereo and/or AUDIO II (SAP) sound system.

At the every push of **AUDIO**, the audio output mode changes as follows. During playback:

Stereo → L → R → Normal audio track → Stereo

While the broadcast signals are being received:

Stereo → L → R → Stereo

The Left (L) and Right (R) indicators show which sound mode is selected as follows on the On Screen Display.

Stereo: Both the L and R indicators appear.


L: The L indicator appears.

R: The R indicator appears.

Normal: Neither the L nor R indicator appears.

- 3 **Program position**

(continues on the next page)

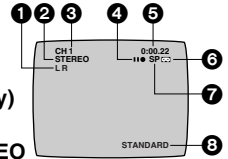

4 Tape running display

Stop, Eject	
Rewind, Review, Index Search ◀◀◀, Jet Search ◀◀, ◀◀◀	◀◀
Fast forward, Cue, Index Search ▶▶▶, Jet Search ▶▶	▶▶
Playback	▶
Recording	●
Recording pause	●
Repeat playback	R ▶

5 Present time/Tape counter/Remaining tape time/Index search

Information	Display
Present time	17:24
Tape counter	-2:35.47
Remaining tape time	REMAIN 2:34
Index search	S 01
Jet Rewind	J:REW

Press **RESET** to reset the tape counter (elapsed time) to "0:00.00".

- The tape counter is automatically reset to "0:00.00" when a video cassette is inserted.

6 Cassette-in indicator

7 Tape speed indicator

8 Picture mode indicator

At each press **PICTURE MODE**, the selected picture mode is set and following picture mode indicators appear.

STANDARD: For TV program recorded
DYNAMIC: For Scenery, Sports
SOFT: For Rental soft tape
CARTOON: For Cartoon

Notes:

- The on screen display may be disturbed depending on the playback tape or the input signal.
- The on screen display does not appear when the **OSD** is set to **OFF**. Set the **OSD** to **OFF** for dubbing.

To Select the Corresponding Video Cassette Tape Length to Display the Approximate Remaining Tape Time

Follow steps 1 to 2 on page 17.

3 Select **TAPE SELECT**

by pressing ▲ or ▼.

4 Select the corresponding video cassette tape length by pressing ◀ or ▶.


T120: For T30, -60, -90 and -120 tapes.

T160: For T140 and -160 tapes.

T180: For T180 tape.

5 Press **MENU** twice to make the on screen display disappear.

On Screen Display

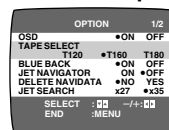

For the Blue Background Function

When **BLUE BACK** is **ON**, the screen will always have a blue background when you play back the unrecorded portions.

Follow steps 1 to 2 on page 17.


3 Select **BLUE BACK** by pressing ▲ or ▼.

4 Select **ON** or **OFF** by pressing ◀ or ▶.

- When **BLUE BACK** is **OFF**, the blue background function is deactivated.

- It is not possible to record the blue picture of the blue background function.


5 Press **MENU** twice to make the on screen display disappear.

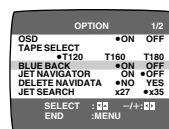

For the Jet Navigator Function

Follow steps 1 to 2 on page 17.

- 3 Select **JET NAVIGATOR** by pressing **▲** or **▼**.

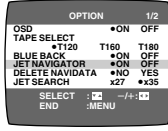

- 4 Select **ON** or **OFF** by pressing **◀** or **▶**.

- When **JET NAVIGATOR** is **ON**, **JN** appears on the VCR display and Jet Navigator function works.


- 5 Press **MENU** twice to make the on screen display disappear.

- See pages 30–32 for details on the Jet Navigator function.


To Delete All the Jet Navigator Data Stored in the VCR's Memory

Follow steps 1 to 2 on page 17.

- 3 Select **DELETE NAVIDATA** by pressing **▲** or **▼**.

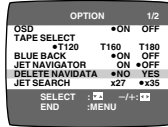

- 4 Select **YES** by pressing **◀** or **▶** then press **OK** when you want to delete all the Jet Navigator data.

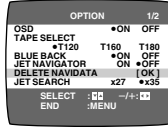


- 5 Press **MENU** twice to make the on screen display disappear.

- See page 31 on the way to delete the Jet Navigator data of a single video cassette tape.

To Select the Jet Search Speed in the EP mode

Follow steps 1 to 2 on page 17.

- 3 Select **JET SEARCH** by pressing **▲** or **▼**.

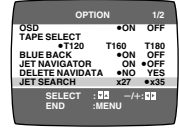

- 4 Select **x27** or **x35** by pressing **◀** or **▶**.

- It is possible to view the picture recorded in the EP mode at approx. 27 or 35 times speed.


- 5 Press **MENU** twice to make the on screen display disappear.

- See page 22 for details on the Jet Search function.

To Set to the Conditions for Direct Recording Function

Follow steps 1 to 2 on page 17.

- 3 Select **DIRECT REC** by pressing **▲** or **▼**.

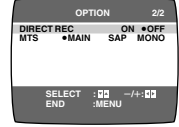

- 4 Select **ON** or **OFF** by pressing **◀** or **▶**.

- OFF: Initially set at this position.
- ON: This setting enables Direct Recording. AV Input (A1) becomes exclusive channel for Direct Recording. (See page 26.)

- 5 Press **MENU** twice to make the on screen display disappear.


Audio Channel Selection (NV-FJ630PMP only)

When a stereo and/or AUDIO II (SAP) broadcast is received, **STEREO** and/or **SAP** are lit to inform you of the type of broadcast. Follow steps 1 to 2 on page 17.

On Screen Display

3 Select **MTS** by pressing ▲ or ▼.

4 Select the desired mode by pressing ◀ or ▶.

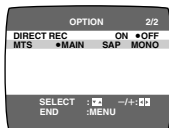

The table below shows the TV broadcast type, **MTS** settings, and audio recording patterns.

Be sure that **MTS** is set to **MAIN** or **SAP** and follow the operation procedure described on page 24 to record on the Hi-Fi audio tracks.

TV Broadcast	MTS	AudioTrack		
		Normal (Mono)	Hi-Fi	
			Left	Right
Mono	MAIN or SAP	Mono	Mono	Mono
Stereo	MAIN or SAP	L+R (Mixed)	Left	Right
Mono and Audio II (SAP)	MAIN	Mono	Mono	Mono
	SAP	Mono	Mono	Audio II
Stereo and Audio II (SAP)	MAIN	L+R (Mixed)	Left	Right
	SAP	L+R (Mixed)	L+R (Mixed)	Audio II

MONO Position

If the sound of a stereo or Audio II (SAP) broadcast is impaired by noise due to weak reception, set **MTS** to **MONO**. The TV broadcast is recorded monaurally for easier listening.

To resume stereophonic recording, set **MTS** to **MAIN** or **SAP**.

5 Press **MENU** twice to make on screen display disappear.

Auto Bilingual Choice Function (NV-FJ630PMP only)

When a stereo broadcast or Audio II (SAP) broadcast is recorded and played back on this unit, stereo sound will be automatically selected in this case of a stereo broadcast and Audio II (SAP) sound will be automatically selected in the case of a dual-sound broadcast (Mono and Audio II or Stereo and Audio II).

- The wrong choice may be made if the program is played back from an interim point. (In a case like this, press **AUDIO** and select the right sound.)
- This function works only for a cassette which has been recorded by a video recorder equipped with Panasonic's Auto Bilingual Choice function.
- The function will not work with a cassette which has been recorded using the external input facility.

To Select the Desired Language



Select one of the four languages displayed: English, Spanish, Portuguese and French.

1 Press **MENU**.



2 Select **LANGUAGE (IDIOMA)** by pressing ▲ or ▼ and then press **OK**.

3 Select the desired language by pressing ▲ or ▼.

4 Press **MENU** twice to make the on screen display disappear.

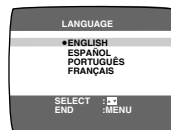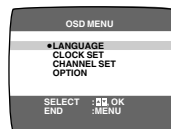

Playback

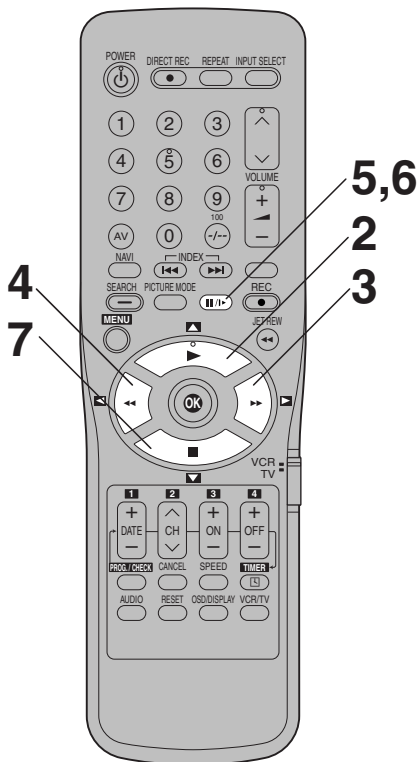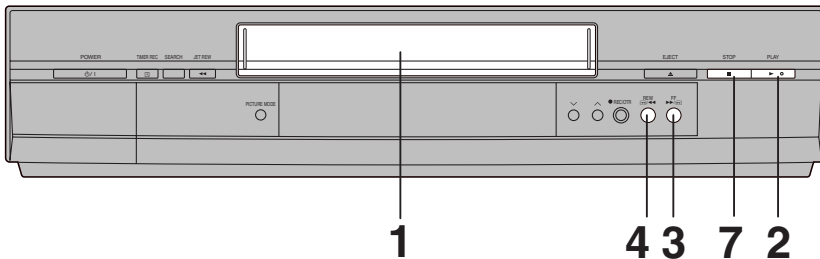

Operations

- 1 Insert a recorded video cassette tape.
- 2 Start viewing the picture by pressing ► (PLAY).
- 3 Search forward by tapping ►► (FF). (Cue)
 - To change back to normal playback, press ► (PLAY).
- 4 Search backward by tapping ◀◀ (REW). (Review)
 - To change back to normal playback, press ► (PLAY).
- 5 View a still picture by pressing |||/► (PAUSE/SLOW).
 - To continue normal playback, press ► (PLAY) or |||/► (PAUSE/SLOW).
- 6 View a slow motion picture.
 - Keep |||/► (PAUSE/SLOW) pressed for 2 seconds or more.
 - To continue normal playback, press ► (PLAY).
- 7 Stop viewing the picture by pressing ■ (STOP).



Display Symbols



Basic operations

Note:

- If you keep ►► (FF) or ◀◀ (REW) pressed in step 3 or 4, search playback is activated while the button is pressed, and operation returns to normal playback when the button is released.

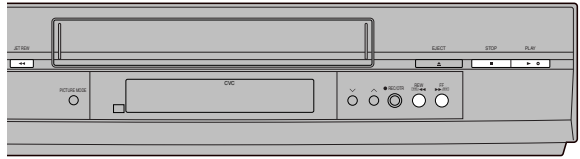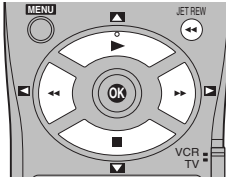

Fast-forwarding or Rewinding the Tape

Press ►► (FF) or ◀◀ (REW) in the stop mode.

- To stop fast-forwarding or rewinding, press ■ (STOP).

To Obtain a Higher Speed Rewind (Jet Rewind)

Press JET REW ◀◀.

The “J : REW” indication appears on the TV screen and VCR display. (except when the remaining tape time indication appears)

- Depending on a cassette or an operating condition, the rewind speed may change somewhat.
- The tape counter is reset to “0:00.00” when the tape is rewound to the beginning.
- To stop Jet Rewind, press ■ (STOP).

To Obtain a Higher Speed Picture than Cue, Review (Jet Search)

During playback, tap ►► (FF) or ◀◀ (REW) twice.

- Select search speed to view the picture recorded. (See page 19.)
- The picture that appears in the EP mode at approx. 35 times speed may be disturbed. A vertical scroll may happen due to combination with the TV monitor. It is not a malfunction but if it happens, change to approx. 27 times speed.
- The picture may not be in color or be distorted depending on TV.
- Press ► (PLAY) to cancel the Jet Search.

Other Playback Functions

To Stop Playback Automatically (Playback Off Timer Function)

If you set the playback duration, the playback will stop automatically.

After the set playback time has elapsed, the VCR automatically stops playback and switches off.

To Activate the Playback Off Timer Function

During normal playback, press ► (PLAY) on the VCR for more than 2 seconds to put the VCR in the Playback Off Timer mode.

After that, press ► (PLAY) on the VCR repeatedly until the desired playback duration is displayed on the VCR display.

Repeatedly pressing this button changes the indication in the following order:

Counter display (normal playback mode)
 →30 (min.)→60 (min.)→90 (min.)→120 (min.)→180 (min.)→240 (min.)→
 Counter display (normal playback mode)

- The VCR will automatically switch off when Play-Off Timer is completed. To turn the VCR on again, press POWER ⏻.


Notes:

- The Play-Off Timer function works during normal playback.
- When the tape reaches its end during Play-Off Timer, the tape will be rewound to the start and the VCR will turn itself off.
- Repeat Playback function does not work during Play-Off Timer.
- Press ■ (STOP) to stop midway.

To Play back the Recorded Part Repeatedly

Press **REPEAT**.

The "R ►" indication appears on the TV screen.

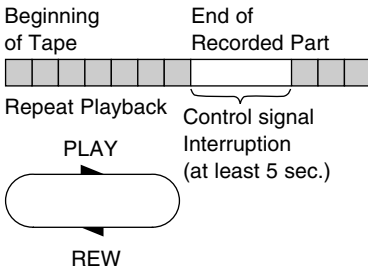

Notes:

- Repeat Playback function does not work during Play-Off Timer.
- Press **■ (STOP)** to release the VCR from the Repeat Playback mode.

To Playback in the Desired Picture Quality (Picture Mode)

This function reproduces optimum playback picture from various kind of recorded tapes and contents.

Press **PICTURE MODE** and select the corresponding Picture Mode as follows.

Mode	Characteristic	Example for Purpose
STANDARD	Normal	TV Program recorded
DYNAMIC	Clear & Vivid	Scenery, Sports
SOFT	Mild	Rental soft tape
CARTOON	Delicate	Cartoon

- Pressing **PICTURE MODE** once makes the On Screen Display appear; after that, pressing it repeatedly changes the indication in the following order:

STANDARD (Initial Setting) → DYNAMIC →
SOFT → CARTOON →
STANDARD (Initial Setting)

To Eject the Video Cassette Using the Remote Controller



Keep pressing **■ (STOP)** for at least 3 seconds.

Notes:

- Jet Search, cue, review or slow playback will be automatically released after 10 minutes, and still playback, after 5 minutes.
- In the EP mode only:
When playing back a tape which was recorded on another VCR, it may be necessary to adjust tracking control using the **✓** and **∧** buttons. (See page 35.) In some cases the picture quality may still be inferior. This is due to format constraints.



Manual Recording

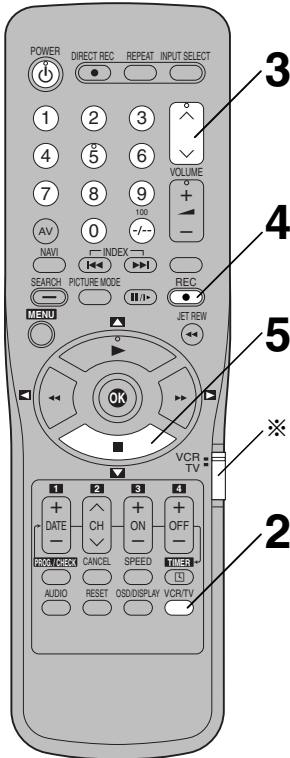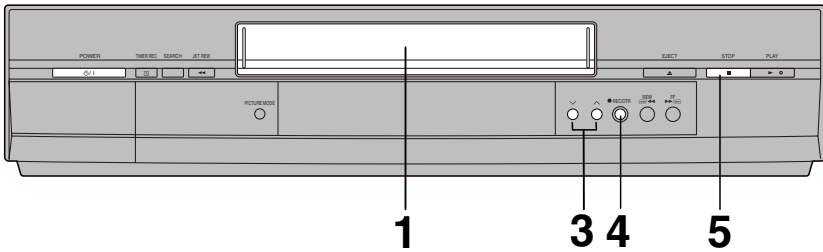

Operations

1 Insert a video cassette tape with an intact erasure prevention tab.
 • If it has already been inserted, press **POWER** / **(POWER)** to turn the VCR on.

2 Press **VCR/TV** to select the VCR mode.

3 Press the and buttons to select the TV station.
 • If you press and hold down these buttons, the number of program position changes fast.
 • It is also possible to select by pressing **numeric buttons**.
 • Ensure that **VCR/TV** switch is set to **VCR**.

4 Press **REC** (**REC/OTR**) to start recording.

5 Press (**STOP**) to stop recording.

 
Display Symbols



※ Set **VCR/TV** switch to **VCR** for using **POWER** , the and buttons and the **numeric buttons**.

To Select the Desired Tape Speed

Press **SPEED** before recording.



To Interrupt Recording

Press **II/▶** (**PAUSE/SLOW**) during recording.

Press it again to continue recording.



To View One TV Program while Recording Another One

1 Refer to steps 1–4 of the manual recording operation.

2 Press **VCR/TV** to select the TV mode.


3 Select the TV program on your TV that you wish to view now.

- Ensure that **VCR/TV** switch is set to **TV**.

To Display the Approximate Remaining Tape Time

1 Select **TAPE SELECT** from the on screen display and select the corresponding video cassette tape length. See page 18.

On Screen Display

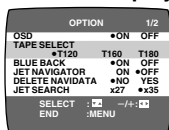

- T120: For T30, -60, -90 and -120 tapes.
- T160: For T140 and -160 tapes.
- T180: For T180 tape.


2 Press **OSD/DISPLAY**.



The display changes as follows each time **OSD/DISPLAY** is pressed.


Clock → Counter →
Remaining Tape Time → Clock

- The remaining tape time may not be displayed correctly depending on the tape used.

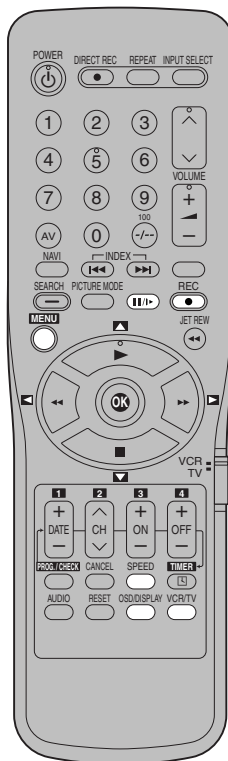

Notes:

- When a video cassette with a broken off erasure prevention tab is inserted, the "CO" indication will flash to indicate that recording is not possible even if **REC ● (● REC/OTR)** is pressed.
- The recording pause mode will be automatically released after 5 minutes, and the VCR will return to the stop mode.

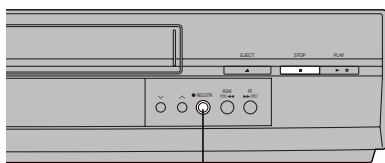

2

One-Touch Recording (OTR)

Whenever you are in a hurry to start a timer recording with automatic stop in your absence, simply set the recording duration by pressing ● **REC/OTR** repeatedly.

The duration indicated on the VCR display changes by pressing ● **REC/OTR** as follows:

Counter display (normal recording mode)
 →30 (min.)→60 (min.)→90 (min.)→120 (min.)→180 (min.)→240 (min.)→
 Counter display (normal recording mode)

Preparation


- Insert a video cassette with an intact erasure prevention tab.

Operations

- 1 Ready the video source which is to be recorded, and start recording.
- 2 Press ● **REC/OTR** on the VCR repeatedly to select the desired recording duration.
 - The VCR will automatically switch off when OTR is completed. To turn the VCR on again, press **POWER** ⏻/⏻.

Notes:

- The OTR function works during normal recording and Direct Recording.
- When the tape reaches its end during OTR, the VCR will turn itself off.
- To stop OTR at any time, press **STOP** ■ or **POWER** ⏻/⏻.

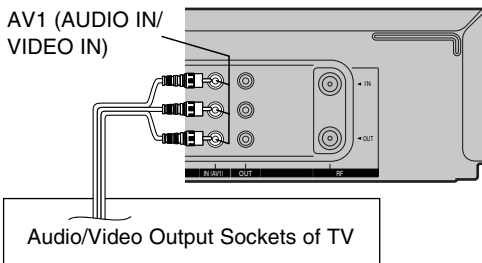

Direct Recording

 
This function allows you to immediately start recording the same scenes of program that you are viewing on the TV.

Conditions for correct operation of the Direct Recording function:

- Set **DIRECT REC** to **ON**. (See page 19.)
- The VCR must be connected to the TV's Audio/Video output sockets via Audio/Video cable as shown.

Preparation

- Insert a video cassette with an intact erasure prevention tab.



Operations

- 1 Press **DIRECT REC**.
 - Recording the scenes of the program that you are viewing on the TV starts.
 - In some cases, it may not be possible to change the program position on the TV during Direct Recording.

When viewing or displaying the program from your TV:

- Do not press **AV**, **numeric buttons** or the **∨** and **∧** buttons during Direct Recording, otherwise the recording may not be performed correctly.

When viewing or displaying the program from your VCR:

- It is possible to select and view any other TV program from your TV while the Direct Recording continues. After pressing **DIRECT REC** to start recording, select on your TV the program position of the TV program that you want to view.

- 2 Press ■ (**STOP**) to stop recording.

Timer Recording

4-Key Programming


Up to 16 timer programs, including weekly and daily programs, can be recorded up to one month in advance by setting the timer.

Preparations

- Insert a video cassette tape with an intact erasure prevention tab.
- Confirm that the TV is on and the VCR viewing channel is selected.
- Turn on the VCR.
- Check that the clock is set to the correct time. If it has not been set, refer to page 16.
- Press **VCR/TV** to select the VCR mode.

Example:

Program position (channel); 2
 Date; 27 October
 Starting time; 20:02
 Ending time; 21:30
 (Present date; 16 October)

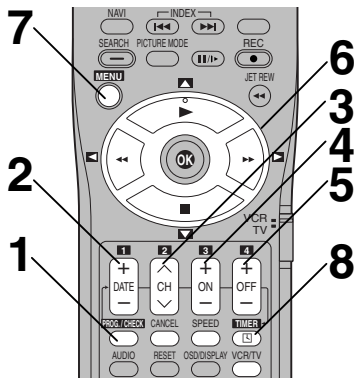


Operations

1 Press **PROG./ CHECK**.

2 Set **Date** to "27TH".

On Screen Display

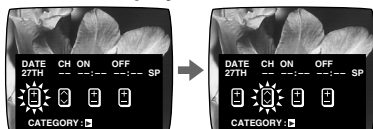

- The next item will flash after about 2 seconds.

3 Set **Program position** (channel) to "2".


4 Set **Starting time** to "20:02".

- When kept pressed, the indication changes in 30-minute steps.

5 Set **Ending time** to "21:30".



6 Press **▶** to select the **Category**. Then, select the desired category by pressing **▲▼◀▶**.

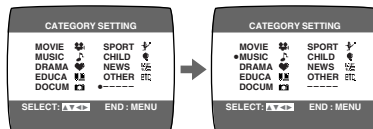

- Alternatively, you can set the category on the Navigator list. (See page 31 for details.)
- This function is activated when **JET NAVIGATOR** is set to **ON**. (See page 19.) When **JET NAVIGATOR** is set to **OFF**, proceed to the step 8.

7 Press **MENU** to make the previous display appear.



8 To activate timer recording, press **TIMER**.

- When **JET NAVIGATOR** is set to **ON**, the [PROGRAM IS COMPLETED REMAINING PROGRAM 49] message appears. (See page 19.)
- When **JET NAVIGATOR** is set to **OFF**, the [PROGRAM IS COMPLETED] message appears. (See page 19.)
- The VCR will be set to the timer recording standby mode after about 1 minute if **TIMER** is not pressed.

Weekly Timer Recording

In step 2, select the desired day by pressing **DATE** —.

For example, SU (Sunday)

On Screen Display



(SU=Sunday, MO=Monday, TU=Tuesday, WE=Wednesday, TH=Thursday, FR=Friday, SA=Saturday)

Daily Timer Recording

For this timer function, several groups of days can be selected.

- Ⓐ Daily recording from Monday to Friday (MO–FR)
- Ⓑ Daily recording from Monday to Saturday (MO–SA)
- Ⓒ Daily recording from Sunday to Saturday (SU–SA)

In step 2, select the desired days by pressing **DATE** —.

For example, Ⓒ



Timer Recording from an External Signal Source

If timer recording is performed by a unit connected to the audio/video input sockets, select the A1 or A2 indicator in step 3 for the program position.

- If **DIRECT REC** is set to **ON**, A1 is skipped.



Setting other Programs in Succession

Repeat steps 1–8.

Selecting the Desired Tape Speed

Press **SPEED** to make the selection in any of steps 1–5 .




Programming a Timer Recording of a TV Program Until its End

(Auto SP/EP Change Function)

If, during a timer recording performed in the SP mode, the VCR determines that the remaining tape time is insufficient to record the program to its end, the Auto SP/EP Change function automatically changes the tape speed to EP to ensure that the whole program will be recorded. Depending on the remaining tape length, recording may be performed in the EP mode from the start. However, if the remaining tape time is still not sufficient in this case, the program cannot be recorded to the end.

Example for T120 tape:

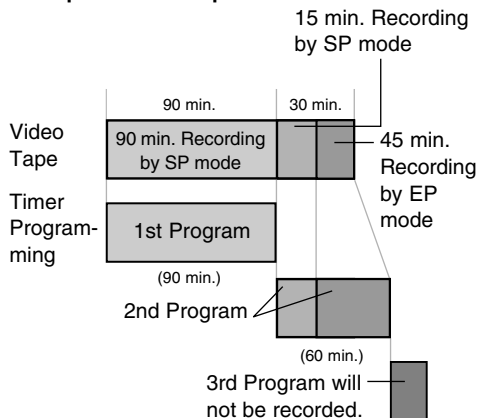

- The tape length must be set correctly. (See page 18.)
- Tapes except T30, -60, -90, -120, -140, -160, -180 tapes may not work correctly.

To Activate the Auto SP/EP Change

Function:

Press **SPEED** to select **A**.



- Every time you press **SPEED**, the indication changes in the following order:


SP → EP → **A** → SP

Checking a Timer Program

- The VCR must be turned on, or the timer recording indicator “**T**” lit.
- Confirm that the TV is on and the VCR viewing channel is selected.


- 1 Press **PROG./CHECK** twice.

- Every time you press **PROG./CHECK**, the program shifts below.

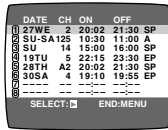

- 2 Press **VCR/TV** to select the VCR mode.

- 3 Press **▶** to display the Category. (When **JET NAVIGATOR** is set to **ON**.) Press **▶** again to make the previous display appear.

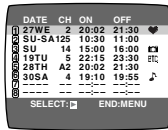

Cancelling a Timer Program


- The VCR must be turned on, or in timer recording standby mode.
- Confirm that the TV is on and the VCR viewing channel is selected.

- 1 Press **PROG./CHECK** twice.

- 2 Press **VCR/TV** to select the VCR mode.

- 3 Press **PROG./CHECK** repeatedly.

- 4 Press **CANCEL**.

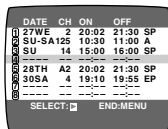

Note:


- If timer recording is not completed (due to insufficient tape or cancellation by the user), the programed timer recording data will be cancelled from the memory by 4 A.M. two days later.

However, if the timer recording function is activated at that time, the programed timer recording data will not be cancelled.

Search Functions

Jet Navigator

This VCR can display a list of the recorded programs on the inserted video cassette on the TV screen. You can then select the desired program, and the VCR will quickly locate its beginning and start playback.

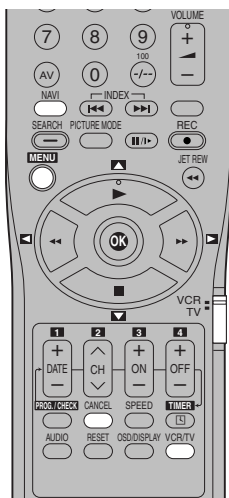

Conditions for correct operation of the Jet Navigator function:

- The tape length of the inserted cassette must be set correctly.
- The VCR must not be in the timer recording standby mode.
- A program of at least 15 minutes must be recorded on the tape.

Preparations

- Display the VCR picture on the TV.
- Be sure to set **JET NAVIGATOR** to **ON** (See page 19.) and preform recording.
- Press **VCR/TV** to select the VCR mode.

Operations

1 Press **NAVI** to display the Jet Navigator list.

- Up to 14 program data that have been recorded last are displayed on the Jet Navigator list.

(7 program data for each page)

- When more than 15 programs have been recorded for one cassette, the program data are deleted from the first one.
- When pressing **NAVI** during playback, playback stops and the Jet Navigator list appears.

2 Press **NAVI** several times to select the program that you want to locate and play back.

After more than 3 seconds, the VCR starts the search for the beginning of the selected program and playback starts automatically.

- Every time you press **NAVI**, the program shifts above.
- If, after playback has started, you want to search for the beginning of the same or another program, press **NAVI**. Playback stops and the Jet Navigator list appears.

On Screen Display

JET NAVIGATOR			
DATE	CH	ON	CATEGORY
10/18	1	10:30	MUSIC 2
10/19	124	15:00	SPORT 2
10/21	5	22:15	
10/23	A2	20:02	
10/26	4	19:10	EDUCA
10/27	2	20:02	
10/27	12	20:30	

SELECT : NAVI END : MENU

JET NAVIGATOR			
DATE	CH	ON	CATEGORY
10/18	1	10:30	MUSIC 2
10/19	124	15:00	SPORT 2
10/21	5	22:15	
10/23	A2	20:02	
10/26	4	19:10	EDUCA
10/27	2	20:02	
10/27	12	20:30	

SELECT : NAVI END : MENU



JET NAVIGATOR			
DATE	CH	ON	CATEGORY
10/18	1	10:30	MUSIC 2
10/19	124	15:00	SPORT 2
10/21	5	22:15	
10/23	A2	20:02	
10/26	4	19:10	EDUCA
10/27	2	20:02	
10/27	12	20:30	

SELECT : NAVI END : MENU


To cancel the Jet Navigator list:

Press **MENU**.

To Set the Category

The category setting allows you to find what kind of programs are recorded by the character and the icon indications.

Press **▶** while the Jet Navigator list appears.

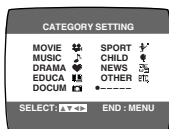

Category	Indication	Icon
MOVIE	MOVIE	
MUSIC	MUSIC	
DRAMA	DRAMA	
EDUCATION	EDUCA	
DOCUMENTARY	DOCUM	
SPORTS	SPORT	
CHILDREN	CHILD	
NEWS	NEWS	
OTHERS	OTHER	

To Delete the Jet Navigator Data of a Single Video Cassette Tape:

Keep **CANCEL** pressed for more than 5 seconds while the Jet Navigator list appears. “- -” appears on the list.

- See page 19 on the way to delete all the Jet Navigator data stored in the VCR's memory.


Notes:

- The Jet Navigator list is stored in each cassette.
- Signals approximately 10 seconds before and after the current tape position are checked. (During this checking, [CHECKING JET NAVIGATOR DATA] is displayed on the TV screen.)
- Checking cannot be performed properly when signals are attempted to be checked at portions of the tape where there are no signals such as at unrecorded portions of the tape. In this case, press **NAVI** at a portion of the tape where a program has been recorded of this VCR. This will allow signal checking to be performed more reliably. When a signal can still not be found, [CAN NOT FIND JET NAVIGATOR DATA] is displayed on the TV and you cannot find the beginning of the program.
- Up to 20 cassettes and 50 programs can be registered.
- If 50 recorded programs data is already stored in memory and you attempt to store timer recording data for another program, the message [REMAINING PROGRAM 0 DELETE JET NAVIGATOR DATA] appears. If you attempt to make a new recording, this same message also appears after you insert the cassette and the Jet Navigator data is checked. As each timer recording or manual recording is finished, the program data is deleted, starting from the oldest data.
- When a new program is attempted to be recorded if programs equivalent to 20 cassettes are already stored in memory, [REMAINING CASSETTE 0 FOR JET NAVIGATOR DELETE JET NAVIGATOR DATA] is displayed. Programs recorded without deleting data as instructed are not registered in the list.

(continues on the next page)

When Recording Over the Same Location on a Tape:

- The originally recorded program is deleted from the list.
- Program contents starting near the start and end of the newly recorded program (within 10 minutes before the start and after the end of the newly recorded program in the EP mode) are also erased.
(Although old program contents are also similarly erased in the case of ordinary recording, the newly recorded program is not registered in the list.)

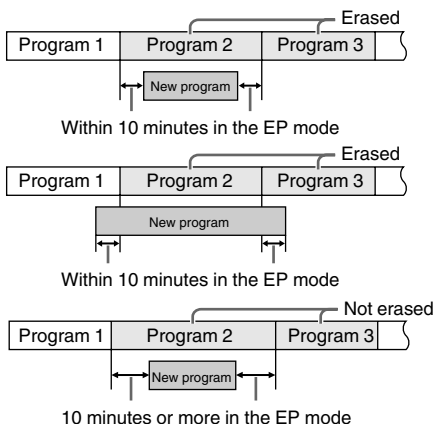

To Demonstrate the Jet Navigator Function

Keep **NAVI** pressed for more than 5 seconds without inserting a cassette tape.


To Check the Recorded Programming Data (Time Stamp Function)

When playback starts after searching with Jet Navigator function or index search function, recorded programming data (called Time Stamp) appears on the TV screen for approx. 5 seconds.

Preparations

- Display the VCR picture on the TV.
- Be sure to set **OSD** to **ON**. (See page 17.)
- Press **VCR/TV** to select the VCR mode.

On Screen Display

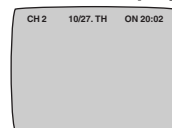

Note:

- Time Stamp does not appear if the beginning of the Jet Navigator data are not recorded 10 minutes before and after the current tape position in the EP mode even when index signals are recorded.

To Find the Beginning of Each Recording (VHS Index Search System)

Example:

Searching for the 2nd recorded segment in the forward direction.

Press **INDEX** **▶▶** twice.

(This operation is performed while the VCR is in the stop mode or normal playback mode.)

Display Symbol



- After finding the specific recorded segment, playback starts automatically.
- If you press **INDEX** **▶▶** too many times, simply press **INDEX** **◀◀** to correct it. In this way, you can reduce the displayed figure down to 1.
- Up to 20 index signals can be searched for in both directions.
- The figure on the display decreases by 1 each time an index signal is located.


Recording Index Signals

Index signals are recorded in the following cases.

- When a recording is started by pressing **REC** **●** (**● REC/OTR**).
- When **REC** **●** on the remote controller is pressed during recording.
- When timer recording is activated.

Note:

- The index search function can only work correctly if the index signals are spaced at least 3 minutes apart in the SP mode and 5 minutes apart in the EP mode.

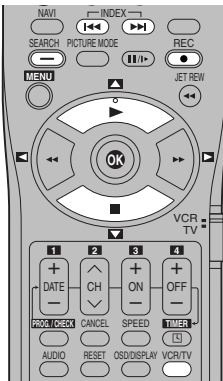

Searching while checking the video cassette contents (Intro-Jet Scan)

The approximate beginnings of each recorded program are played in succession at the high speed so that the program to be viewed can be located easily.

Preparations


- Confirm that the TV is on and the VCR viewing channel is selected.
- Press **VCR/TV** to select the VCR mode.
- Load the pre-recorded video cassette.

Operations

1 Press **SEARCH**.

(This operation is performed while the VCR is off or while the VCR is in the stop mode or normal playback mode with the VCR on.)

- The tape is rewound to the beginning, and played for about 10 seconds at the high speed. It is then fast forwarded, the VISS (VHS Index Search System) signals are searched in succession, and each time the signals are found, the tape is played for about 10 seconds at the high speed.

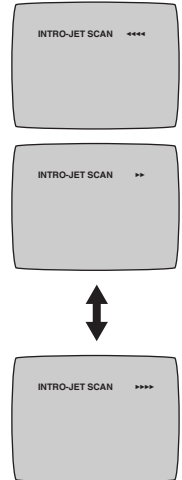

2 When the program to be viewed is reached, press **▶** (**PLAY**).

- Normal playback now commences.

To stop the operation at any time:

Press **■** (**STOP**).

Note:

- This function may not work properly when recorded programs run for 15 minutes or less.


Editing

Assembly Editing

This function can be used to make up an edited tape from other recordings or video sources. A new scene can be added to the end of previous one.

Preparations

- Connect a movie camera or another VCR to this VCR as shown.
- Insert a recorded cassette tape with an intact erasure prevention tab.
- Select the audio source required by pressing **INPUT SELECT** to set A1 or A2.

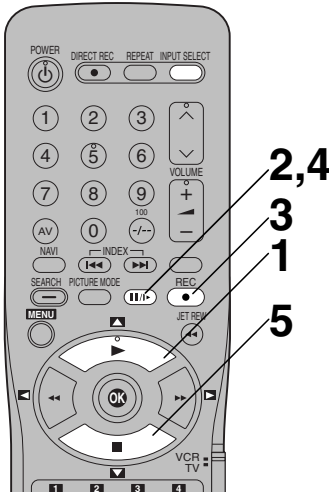


Operations

- 1 Search for the end of the previous recording by pressing **▶ (PLAY)**.
- 2 Press **⏸ (PAUSE/SLOW)**.
- 3 Press **REC ●** to switch the VCR from the pause mode to the recording standby mode.
- 4 Start the new recording by pressing **⏸ (PAUSE/SLOW)** again.
- 5 Press **■ (STOP)** to stop recording.


Notes:

- The new sound will be recorded on both the normal and Hi-Fi sound tracks, only monaural sound recording is possible on the normal sound tracks. (NV-FJ630PMP only)
- If **DIRECT REC** is set to **ON**, connect with AV2 sockets and select A2.

NV-FJ630PMP Recording VCR

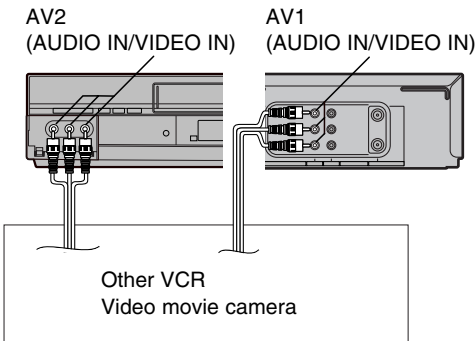

NV-SJ430PMP Recording VCR

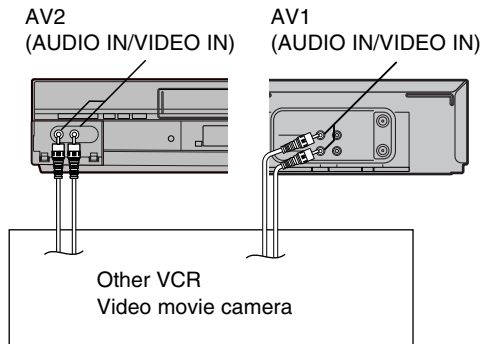

Other Functions



Tracking Adjustment and Vertical Locking Adjustment

- For manual tracking adjustment
The ∇ and \wedge buttons are used to adjust the tracking when, for example, noise bars on the picture during normal playback are better removed manually than by automatic digital tracking control. To return to automatic digital tracking control, press both buttons together.
 - For slow tracking adjustment
When noise bars appear during still or slow playback, switch over to slow playback and adjust with the ∇ and \wedge button to reduce the noise bars.
 - For vertical locking adjustment
Use the ∇ and \wedge buttons to minimize any vertical jitter during still picture playback.
- ※ Set **VCR/TV** switch to **VCR** for using the ∇ and \wedge buttons of remote controller.

Automatic Switching Off and Ejection

When the VCR is switched off, an inserted video cassette can be ejected by simply pressing **EJECT** \blacktriangle . The VCR will eject the video cassette and automatically turn itself off again.

Child Lock Function

This function deactivates all buttons on the VCR and the remote control. Use this function, when you do not want other people to operate the VCR.

To Activate the Child Lock Function

Hold down **OK** and **OFF (+)** simultaneously until the “ ∇ hold” indication appears in the VCR display.

- If you press a button while the Child Lock function is on, the “ ∇ hold” indication appears in the VCR display to inform you that no operation is possible.

To Cancel the Child Lock Function

Hold down **OK** and **OFF (+)** simultaneously until the “ ∇ hold” indication disappears.

Other Automatic Functions

Automatic Playback


When a video cassette without an erasure prevention tab is inserted, the VCR starts playback automatically.

VCR-off Playback

When the VCR is off, an inserted video cassette can be played back by pressing **PLAY** \blacktriangleright .

Automatic Rewinding


When the tape reaches its end during recording (except for timer recording) or playback, it will automatically be rewound to the beginning. During OTR, this function will not work.

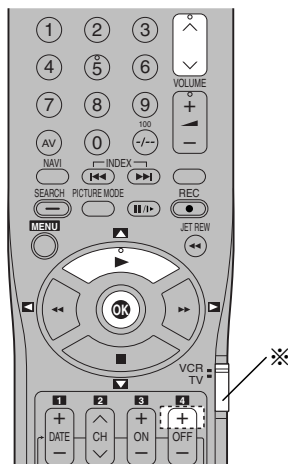

Before Requesting Service

Before requesting service, check the following points again.

Message of On Screen Display

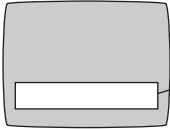

On screen display messages are displayed.

The error message is indicated in brackets [].

[PLEASE PUT IN A VIDEO CASSETTE.]

- ☞ **REC ● (● REC/OTR)** or **TIMER □ (TIMER REC □)** has been pressed without a video cassette inserted. Insert a video cassette with an intact erasure prevention tab.

[PLEASE STOP THE TAPE.]

- ☞ **CHANNEL SET** has been selected during playback. Stop the tape.

[PLEASE SET THE CLOCK.]

- ☞ **TIMER □ (TIMER REC □)** or **PROG./CHECK** has been pressed when the clock is not set. Set the clock.

[PLEASE USE A CASSETTE WITH TAB.]

- ☞ **REC ● (● REC/OTR)** or **TIMER □ (TIMER REC □)** has been pressed without a video cassette with an intact erasure prevention tab. Use a video cassette with an intact erasure prevention tab.

[NO TIMER RECORDING HAS BEEN SET.]

- ☞ **TIMER □ (TIMER REC □)** has been pressed with no timer programs. Set timer recording.

[VCR IS IN THE TIMER STANDBY MODE.]

- ☞ **POWER ⏻/⏻ (POWER ⏻)** has been pressed during the timer standby mode. Press **TIMER □ (TIMER REC □)** to release the VCR from the timer standby mode.

Self-diagnostic Indications

This VCR has a self-diagnosis and display function. If the VCR detects trouble during installation or during use, the following indications automatically appear in the VCR display. Indications are in the form of a single English letter plus two numbers, such as [H01].

INDICATION: H□□, F□□

CAUSE: Some trouble has occurred. (Numbers after H and F differ according to the status of the VCR.)

REMEDY: Consult your dealer for further advice.

The VCR will not operate correctly

The symptom description is indicated in quotations “ ”.

“The VCR display is not illuminated.”

- ☞ The AC power cord has not been connected. Connect the AC power cord to the main AC power.

“The VCR display is illuminated but the VCR will not operate.”

- ☞ The VCR is in the timer mode. Press **TIMER □ (TIMER REC □)** to operate the VCR manually.
- ☞ Safety devices are operating. Disconnect the AC power cord and wait for 1 minute. Reconnect the mains supply and check functions.

“An unknown language appears on the TV screen.”

- ☞ The language setting has been set to an unknown language. Select the desired language. See page 20.

Playback will not operate correctly


The symptom description is indicated in quotations “ ”.

“The picture is noisy or is not in color.
Horizontal bars or lines run down the screen.”

- ☞ Tracking is not correct.
Adjust the tracking. See page 35.
- ☞ The TV has not been tuned to the VCR.
Tune the TV to the VCR. See page 11.
- ☞ The video heads are clogged or worn.
Consult your dealer for further advice.

Recording will not operate correctly

The symptom description is indicated in quotations “ ”.

“The  indication flashes whenever recording is attempted.”



- ☞ The erasure prevention tab on the video cassette has been broken off.
Use a tape with an intact erasure prevention tab, or cover the tab hole with adhesive tape, if the original recording is no longer required.

“The picture is recorded with noise or a blank screen.”

- ☞ The antenna or antenna cable is defective.
Check the antenna connection to the VCR. See pages 8–9.
Check your normal TV picture. If there is no picture, check your antenna.
- ☞ The VCR is not correctly tuned.
Retune the VCR. See pages 11–14.
- ☞ A1 or A2 has been selected.
Select the required TV program.

“Timer recording cannot be performed.”

- ☞ The clock or calendar has been incorrectly set.
Check the clock and calendar. Set them to the present time. (Note that this is a 24-hour clock.) See page 16.

- ☞ The recording starting or ending time setting is incorrect.
Set the recording starting and ending time correctly.
- ☞ The VCR has not been set for timer recording.
Press **TIMER**  (**TIMER REC** ) after programming for timer recording.

“AV external recordings cannot be made.”

- ☞ A1 or A2 has not been selected.
Select A1 or A2 by pressing **INPUT SELECT**.
- ☞ External AV connections are incorrect.
Check that the connections for external video and audio sources are correct.
See page 34.
- ☞ A1 cannot be selected.
DIRECT REC can be set to **ON**.
Set **DIRECT REC** to **OFF**. See page 19.

The remote controller will not operate correctly

The symptom description is indicated in quotations “ ”.

“The remote controller does not operate correctly.”

- ☞ The remote controller transmitter beam is not reaching the VCR.
Ensure that the remote controller is being pointed at the VCR and that the transmitter beam is not obstructed.
- ☞ The distance is too far.
Use the remote controller within 7 m of the VCR.
If this range is not possible, replace the batteries.
- ☞ The batteries are exhausted.
Replace the batteries. Note the precautions for replacement on page 7.
- ☞ The batteries are incorrectly fitted with (\oplus/\ominus) reversed.
Fit the batteries correctly as shown on page 7.

Usage Precautions

Please read these precautions before you operate this VCR.

Avoid Sudden Changes in Temperature

If the VCR is suddenly moved from a cold to a warm place, dew may form on the tape and inside the VCR.

Humidity and Dust

Avoid places where there is high humidity or much dust, which may cause damage to internal parts.

Do Not Obstruct the Ventilation Holes

The ventilation holes prevent abnormal increases in temperature. Do not block or cover these holes. Avoid covering the holes with soft materials such as cloth or paper.

Avoid High Temperature

Keep the VCR away from extreme heat sources such as direct sunlight, heating radiators, or closed automobiles.

Avoid Magnets or Magnetized objects

Never bring a magnet or magnetized object near the VCR as it will adversely affect its performance of the VCR.

Keep the VCR away from other equipments as much as possible when using it, to avoid any adverse effect on performance for both the VCR and the equipment.

Do Not Place Fingers or Other Objects Inside

Do not attempt to disassemble the VCR. Touching internal parts of this VCR is dangerous, and may cause it serious damage. There are no user serviceable parts inside.

Avoid Water

Keep the VCR away from flower vases, tubs, sinks, etc. If liquids are spilled into the VCR, serious damage could occur. If you spill any liquid into the VCR, consult qualified service personnel.

Lightning

To avoid damage by lightning, disconnect the aerial plug from the VCR.

Cleaning the VCR

Wipe the VCR with a clean, dry cloth. Never use cleaning fluid or other chemicals. Do not use compressed air to remove any dust.

Stacking

Place the VCR in a horizontal position, and do not place anything heavy on it.

If Dew Forms in the VCR

Dew may form in the VCR if:

- The VCR is in a room where the heater has just been turned on.
- The VCR is in a room with steam or high humidity.
- The VCR is brought from cold surroundings into a well-heated room.
- The VCR is suddenly brought from cool surroundings, such as an air-conditioned room or car, to a place which is hot and humid.


Note:

- Do not operate the VCR for at least 1 hour if any of the above conditions occur. This VCR does not incorporate a dew sensor.

Dirt on the video heads

If the video heads get dirty, pictures will not be recorded or played back clearly.

(See the following conditions.)

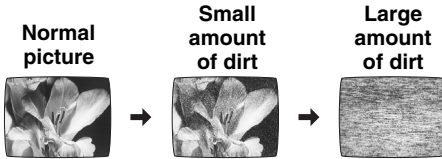


If this happens, insert and eject a cassette 5–10 times successively to remove the dirt from the video heads.

If a clear picture is not produced, insert a commercially available cleaning cassette. Then, press **REC ● (● REC/OTR)** and keep it running for approximate 10 seconds to clean the video heads.

If the problem still persists after performing all of the measures listed above, contact a service personnel to request assistance.

 Heads mainly become dirty because of scratched or dirty tapes, use of the unit in places where temperature and humidity are high, dust in the air and other reasons.



Never use tapes on which juice has been spilt or those that are extremely damaged since this will not only cause the heads to become dirty, but will also make the unit malfunction.

Specifications

NV-FJ630PMP

NV-SJ430PMP

Power Source:	110–240 V AC 50/60Hz
Power Consumption:	13 W (NV-FJ630PMP)
	11 W (NV-SJ430PMP)

Video Recording System:	2 rotary heads, helical scanning system
Video Heads:	4 heads
Audio Heads:	2 heads (NV-FJ630PMP only)
Tape Speed:	SP; 33.3 mm/s EP; 11.1 mm/s
Tape Format:	VHS tape
Record/Playback Time:	SP; 210 min with NV-T210 EP; 630 min with NV-T210
FF/REW Time:	Approx. 60 s with NV-T120 (FF/REW) Approx. 43 s with NV-T120 (JET REW)

VIDEO

Television System:	EIA; Standard (525 lines, 60 fields), NTSC color signal
Modulation System:	Luminance; FM azimuth recording Color signal; converted subcarrier phase shift recording
Input Level:	VIDEO IN (PHONO); 1.0 Vp-p, 75 ohm
Output Level:	VIDEO OUT (PHONO); 1.0 Vp-p, 75 ohm RF modulated; VHF channel US3 or 4, 75 ohm, terminated

AUDIO

Input Level:	AUDIO IN (PHONO); –10 dBV, 47 kohm
Output Level:	AUDIO OUT (PHONO); –8 dBV, 1 kohm
Audio Track:	1 track (normal-mono only), 2 channels (Hi-Fi sound-stereo) (NV-FJ630PMP only)

Video Horizontal Resolution:	Color; more than 200 lines
Signal-to-Noise Ratio:	Video; more than 38 dB/SP Audio; more than 40 dB/SP
Dynamic Range:	Audio; more than 90 dB (Hi-Fi audio track) (NV-FJ630PMP only)
Audio Frequency Response:	60 Hz–12 kHz/SP 20 Hz–20 kHz/Hi-Fi (NV-FJ630PMP only)
Wow and Flutter:	0.005% Wrms/Hi-Fi (NV-FJ630PMP only)
Operating Temperature:	5°C–40°C
Operating Humidity:	35%–80%
Weight:	3.5kg
Dimensions:	430 (W)×89 (H)×277 (D) mm

Weight and dimensions shown are approximate.
Specifications are subject to change without notice.

ENGLISH

Important Information

To loose a Cable Strap:

Push up a strap in the direction of the arrow, pushing a Lock Tab.

ESPAÑOL

Información importante

Para aflojar la Correa de cable:

Levante la correa en el sentido de la flecha, empujando la Lengüeta de bloqueo.

