


Panasonic®

Operating Instructions LCD TV

Model No. **TX-32LX80A**

VIERA

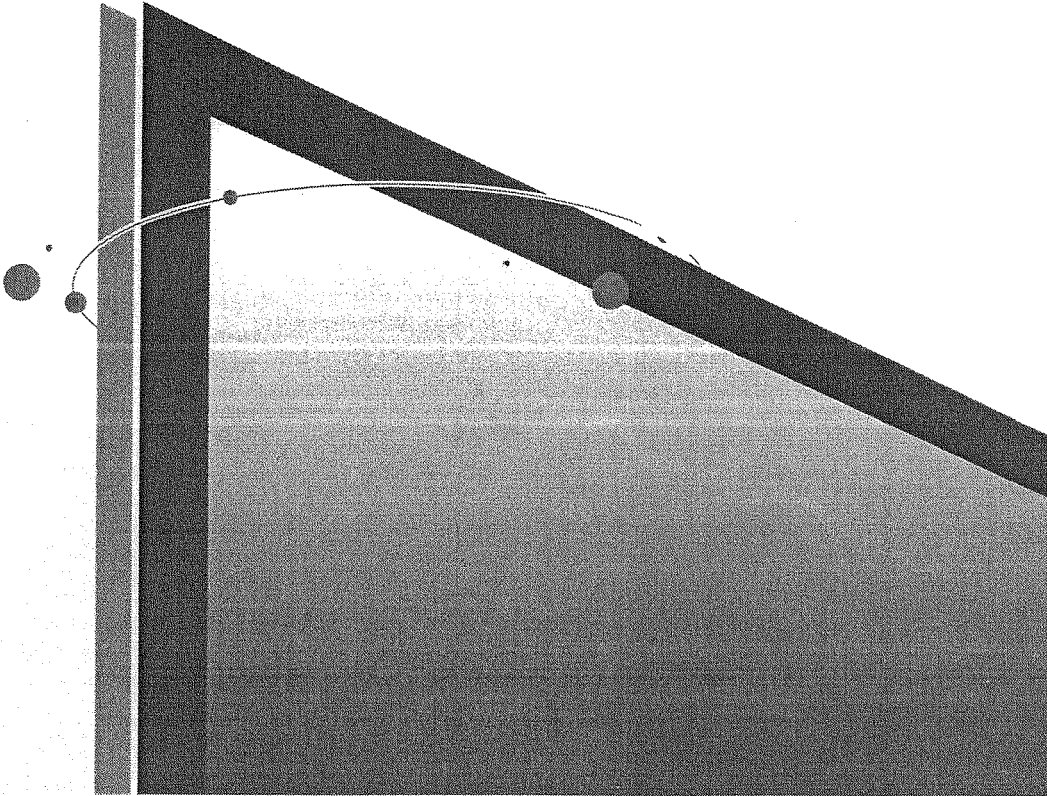

VIERA
Link

HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE

Please read these instructions before operating your set and retain them for future reference.
The images shown in this manual are for illustrative purposes only.

GD
TQB4GC0061








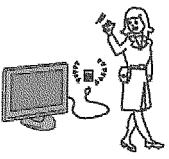
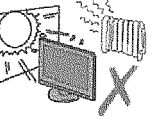
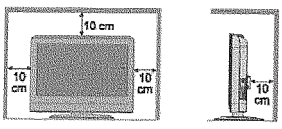
Dear Panasonic Customer

Welcome to the Panasonic family of customers. We hope that you will have many years of enjoyment from your new LCD TV.

Contents

Warnings and Cautions	2	External Equipment	18 ~ 23
Accessories / Options	3	Aspect Ratio	24
Identifying Controls	4	HDMI Connection	25
Basic Connection	5	PC Connection	25
Initial Setup	6	Control with VIERA Link	26
Auto Tuning	7	Input signal that can be displayed	26
Watching TV	8	Stereo / Bilingual Sound Selection	27
Watching Videos and DVDs	9	Licence	27
Viewing Teletext	10 ~ 11	FAQs	28
How to use Menu Functions	12 ~ 15	Troubleshooting	29
Editing and Setting Channels	16	Specifications	30
Displaying PC Screen on TV	17		

Warnings and Cautions

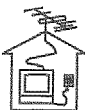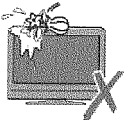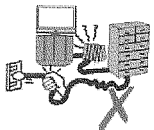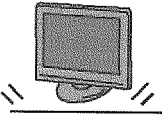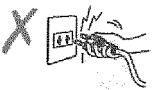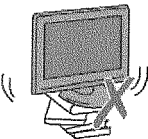 <p>TV operating voltage: AC SINGLE 230V, 50Hz</p>	 <p>To prevent damage which might result in electric shock or fire, do not expose this TV set to rain or excessive moisture. This TV must not be exposed to dripping or splashing water, and objects filled with liquid, such as vases, must not be placed on top of or above the TV.</p>
 <p>Do not use at a voltage other than indicated. Take care not to damage the power cord. Do not use if the power cord or power plug is damaged, or if the plug does not fit tightly into the socket. Do not twist the lead, bend it excessively, or stretch it.</p>	 <p>Keep the unit away from these equipment</p> <ul style="list-style-type: none"> ● Electronic equipment Do not place video equipment near the unit. It may distort images/sound. ● Equipment with an infrared sensor This TV also emits infrared rays.
 <p>Do not touch the power plug if your hands are wet.</p>	 <p>Do not place the TV on an unstable surface.</p>
 <p>Do not remove the rear cover as live parts are accessible when it is removed. There are no user serviceable parts inside.</p>	 <p>Remove the plug from the wall outlet (Power point) when the TV set is not used for a prolonged period of time. The mains plug is used as the disconnecting device.</p>
 <p>Avoid exposing the TV set to direct sunlight and other sources of heat. To prevent fire, never place any type of candle or naked flame on top or near the TV set.</p>	<p>Maintenance</p> <p>First, remove the mains plug from the socket outlet. Wipe the surface clean using a soft cloth dampened with clean water. Then, using a soft dry cloth, evenly, wipe the surface clean until it is dry.</p>
 <p>Allow sufficient space around the unit for radiated heat. Do not block the rear air vents.</p>	<p>Caution</p> <ul style="list-style-type: none"> ● Do not tap or scratch the surface with your fingernail or other hard object. ● Use care not to subject the surface to bug repellent, solvent, thinner, or other volatile substances (this may degrade surface quality).

 
Accessories / Options

Standard accessories


Remote Control Transmitter
● N2QAYB000227





Batteries for the Remote Control Transmitter (2)
● R6 (AA)



Operating Instructions

 

Installing remote control batteries

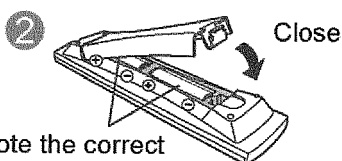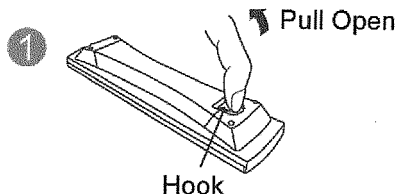


Note the correct polarity (+ or -)

Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control unit.
- Do not mix old and new batteries.
- Do not mix different battery types.
- Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or breakup batteries.

Optional accessories

Please contact your Panasonic dealer to purchase the recommended wall-hanging bracket. For additional details, please refer to the wall-hanging bracket installation manual.

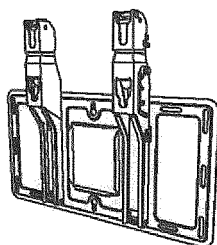

TY-WK32LR2W


→
Wall-hanging bracket
(Vertical)

WARNING

- Failure to use a Panasonic bracket or choosing to mount the unit yourself will be done at the risk of the consumer. Any damage resulting from not having a professional installer mount your unit will void your warranty.
- Always be sure to ask a qualified technician to carry out setup. Incorrect fitting may cause equipment to fall, resulting in injury and product damage.
- Do not mount this LCD Television directly below ceiling lights which typically give off high heat. Doing so may warp or damage plastic cabinet parts.

How to remove the TV stand

Remove four screws

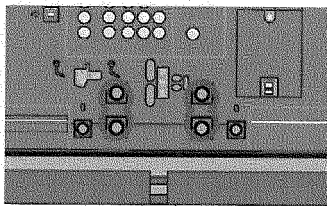


Rear of the TV

Adjust the LCD panel to your desired angle

- Ensure that the pedestal does not hang over the edge of the base even if the TV swivels to the full rotation range.
- Do not place any objects or hands within the full rotation range.



Set the mark at the centre as illustrated, to have the swivel positioned at the centre of the rotation angle.

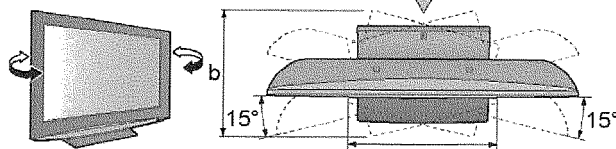

a: 463.5 mm / b: 380 mm

(View from the top)

Identifying Controls

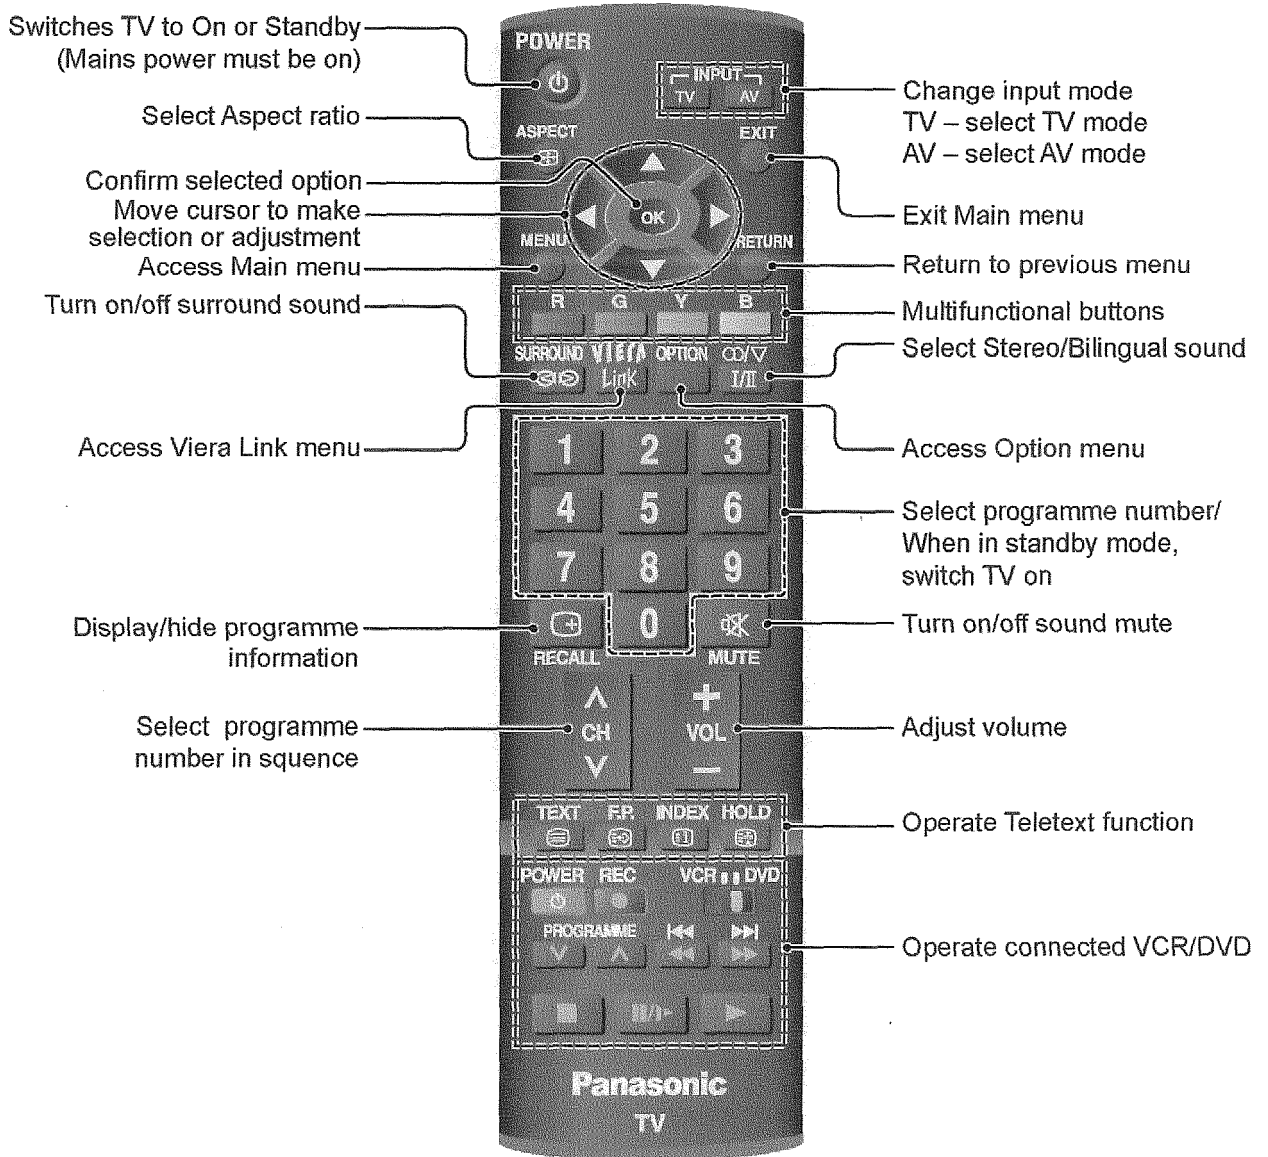
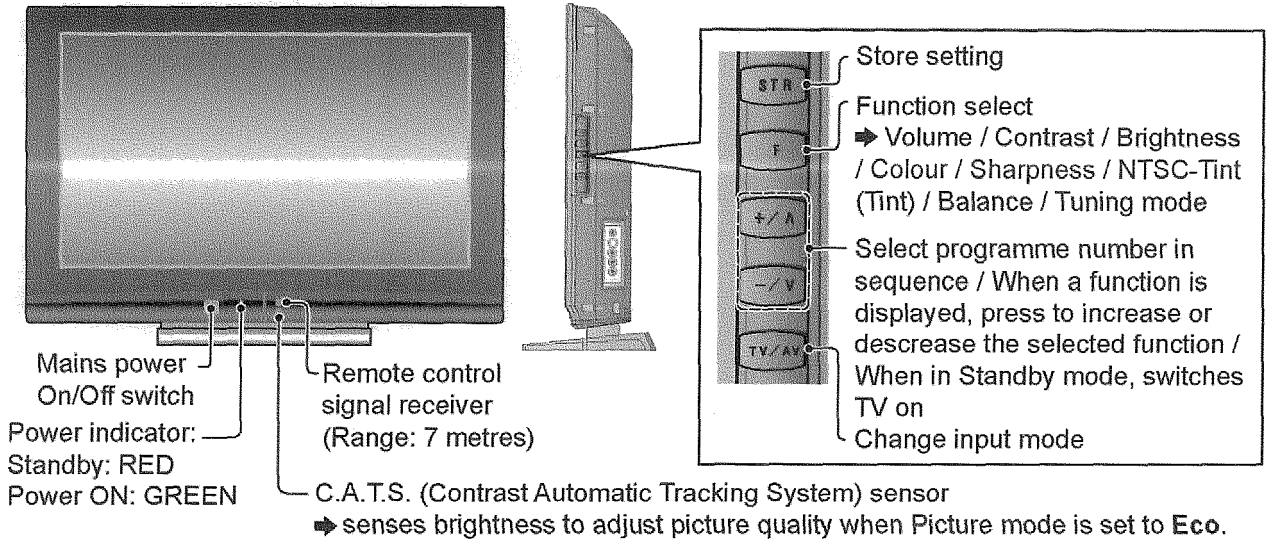


Basic Connection

External equipments and cables shown are not supplied with this TV.

Please ensure that unit is disconnected from the mains socket before attaching or disconnecting any leads.

Connecting aerial

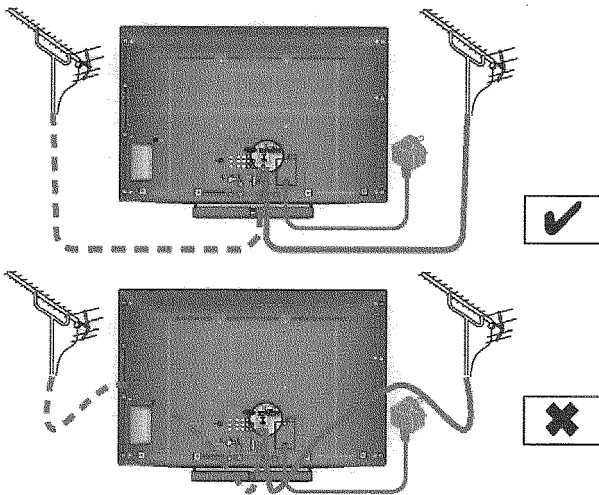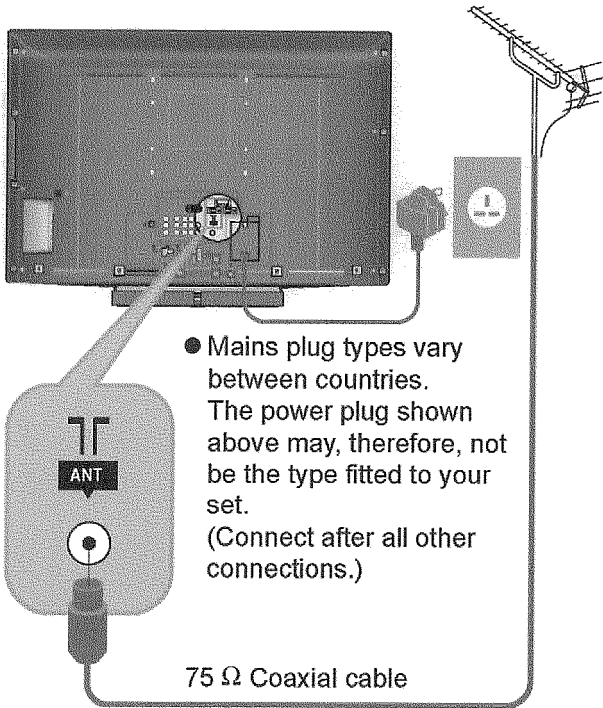


If the antenna is placed in the wrong location, interference might happen.

Note


- Do not put the Coaxial cable close to the mains lead to avoid noise.
- Do not place the Coaxial cable under the TV.
- To obtain optimum quality picture and sound, an Aerial, the correct cable (75 Ω coaxial) and the correct terminating plug are required.
- If a communal Aerial system is used, you may require the correct connection cable and plug between the wall Aerial socket and the TV.
- Your local Television Service Centre or dealer may be able to assist you in obtaining the correct Aerial system for your particular area and the accessories required.
- Any matters regarding Aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of you, the customer.

Connecting DVD Recorder / VCR

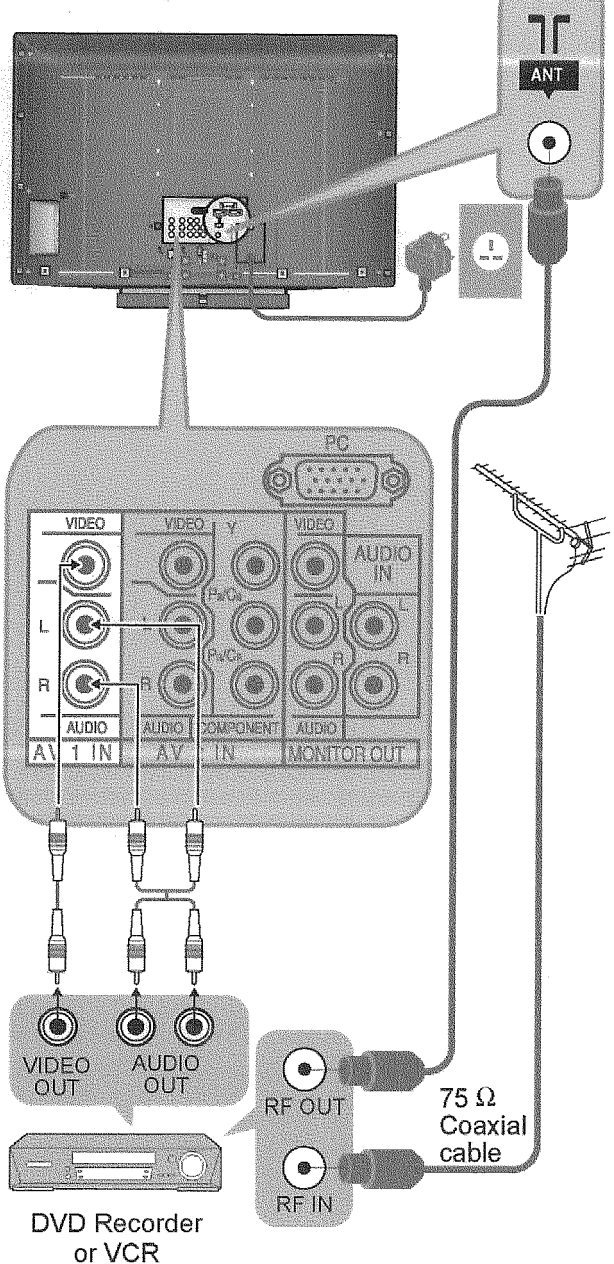

Initial Setup

These steps are not necessary if the setup has been completed by your local dealer.

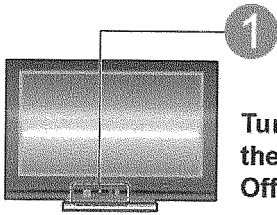



1
Turn On the TV with the mains power On / Off switch

- You can now use the remote control to turn On the unit or turn the unit to standby mode.
- If you turned the TV Off during Standby mode last time, the TV will be in Standby mode when you turn the TV On with mains power On / Off switch.

Select the picture setting


Please select your viewing environment.
MENU:Home RETURN:Shop

 - "Home" is the recommended mode for viewing at home. Select "Home" for optimal picture / power consumption. "Shop" is for in-store display.
- If "Shop" is selected, the word "Shop" appears every time the TV is switched on. (page 6)
Home: "Viewing Mode" is set as "Standard". (page 15)
Shop: "Viewing Mode" is set as "Dynamic". (page 15)

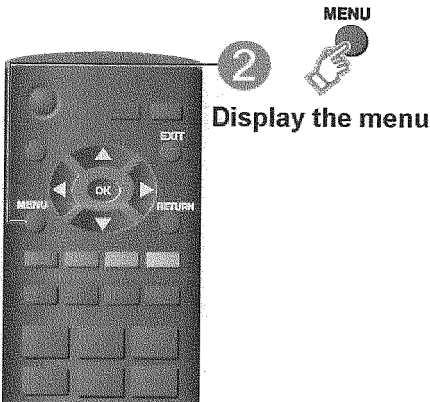

2
Display the menu


Main menu
VIERA Link menu
Picture menu
Sound menu
Setup menu

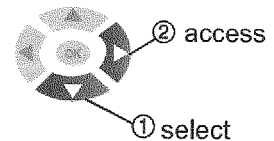

- To exit



 
- To return to the previous screen



Need help with operations?



On-screen operation guide will help you.

(example : Sound menu)

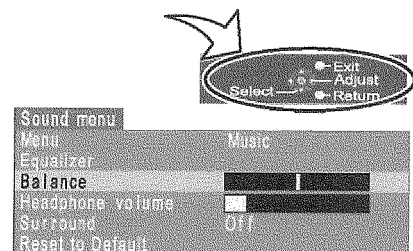

Auto Tuning

 
 
1 Display the menu




2 Select and access "Setup menu"

3 Select and access "Tuning menu"

 4 Select the item (Sys select / Auto tuning)

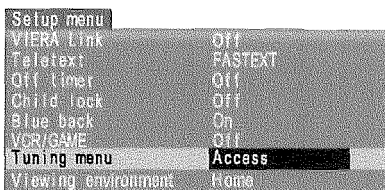

5 Change or access

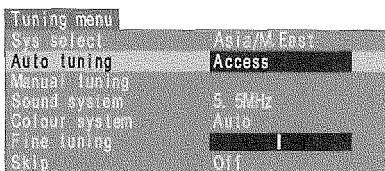

● To exit

EXIT



● To return to the previous screen

MENU RETURN




● **Sys select (System selection)**

Select the system of your area.


(China / HK/UK / Asia/M.East / NZ/INDONES / Australia / E.Europe / SPECL Ver / America / CATV / Japan)

● **Auto tuning**

Automatically set the channels received in your area.

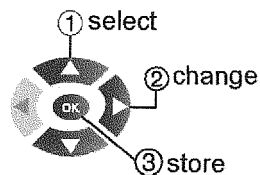

1 select "Auto tuning"
2 access

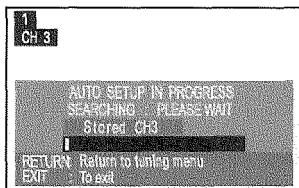

Auto tuning is now complete and your TV is ready for viewing.



The TV will search for, locate, store and then sort into order your local stations.

Once Auto tuning is completed the TV will display the programme now stored on programme position 1.

● If it is not the first time to perform Auto tuning, all previous tuning data will be erased.

● To edit channels → "Editing and Setting Channels" on page 16.

● Press the **EXIT** button at any time to go back to watching TV.



● **For Auto tuning using the buttons on the unit**

1 (Press until "Tuning mode" appears)


2 or (Access Tuning menu)

3 (Press until "Auto tuning" is reached)

4 or (Searching channels)

5 (Exit Tuning mode)

● **To return to TV**

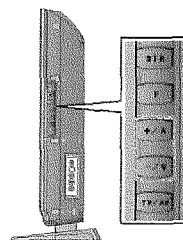


Watching TV

- Turn power on**
 - Mains power On/Off switch should be On.
 - If "Shop" is displayed on the top right of the screen, select "Home" in "Viewing Environment". (p. 6)



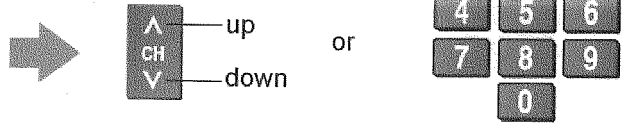


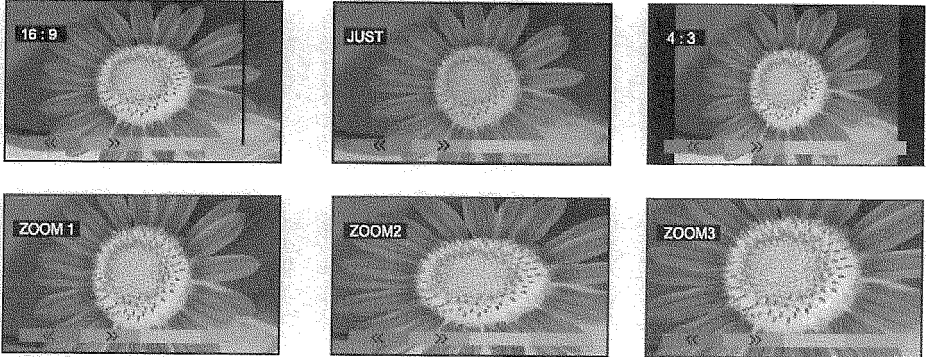


- Select a programme number**



- To select a 2 or 3-digit programme number, eg. 39
 → **3** → **9** (in a short time)

Other Useful Functions (Operate after 2)

<p>Picture Still</p>	<p>Freeze / unfreeze picture</p> <p>HOLD</p> 	<ul style="list-style-type: none"> Press the HOLD button to freeze the picture. (TV/VIDEO input only. Component / HDMI / PC input does not freeze.) Press again to return to watching the current programme.
<p>Display the current programme status</p>	<p>Check or change the current programme status instantly</p> <p>OPTION</p> 	<ul style="list-style-type: none"> To change →  ② change ① select <p>Teletext Language</p> <ul style="list-style-type: none"> Selects teletext language <p>CH colour set</p> <ul style="list-style-type: none"> Adjusts colour density variation between broadcasting channels. <p>Note</p> <ul style="list-style-type: none"> Also possible to change the settings in Menu list (page 14 and 15).
<p>Display status information</p>	<p>Recall status information</p> <p>RECALL</p> 	<ul style="list-style-type: none"> Displayed information: For example, Programme number, Channel number, Stereo mode, Aspect mode, Sound menu, Picture menu, Sound system.
<p>Change aspect ratio</p>	<p>Change the aspect ratio</p> <p>ASPECT</p> 	<ul style="list-style-type: none"> Each press changes the mode. (16:9 / Just / 4:3 / Zoom1 / Zoom2 / Zoom3) <p>While the bar is displayed → R G</p> 

Watching Videos and DVDs

Once the equipment is connected, use the following procedure to view the input. (For connection, see "External Equipment" on page 22.)



- 1 Display the input select menu
- 2 Select the input mode connected to the equipment
- 3 View





- To return to TV →

Displays the selected mode

Note

- If the external equipment has an aspect adjustment function for a connected TV, set to "16:9".
- You can also select the connector using the AV button on the remote control or side panel of the TV.

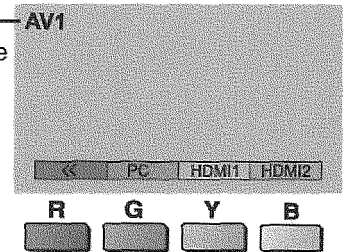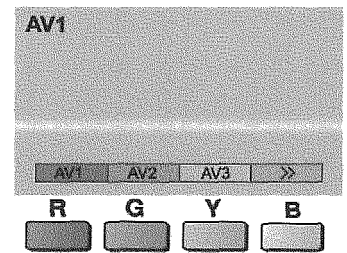

Setting your remote control to operate Panasonic VCR, DVD, etc.

- ① Set the VCR / DVD switch to the appropriate position →

- ② Press and hold during the following operations

Enter the appropriate code for the equipment to be controlled, see table below.

"VCR" position

Equipment	Code
VCR	10 (default)
DVD	11



"DVD" position

Equipment	Code
DVD	70 (default)
Home theatre player	71

Press



	Select VCR to operate Panasonic VCR or DVD Select DVD to operate Panasonic DVD or Home theatre player
	Standby mode / Turn on
	Playback video cassette / DVD
	Stop the operations
	VCR : Rewind, review the picture rapidly in reverse DVD : Play at slow speed Press and hold to search backward
	VCR : Fast-forward, view the picture rapidly forward DVD : Play at slow speed Press and hold to search forward
	Pause / Restart
	VCR : Select programme DVD : Skip the track or title
	Start recording

Note

- Confirm correct operation after the code changed.
- The codes will be reset to default values if batteries are replaced.
- "DVD" means DVD player, DVD recorders and home theatre recorders.
- Some operations may not be possible on some equipment models.

Viewing Teletext

- In FASTEXT mode, four differently coloured subjects are situated at the bottom of the display. To access more information about one of these subjects, press the corresponding coloured button. This facility enables fast access to information on the subjects shown.
- In List mode, four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory.


● To change mode ➔ Select "Teletext" in Setup menu

1 Switch to Teletext

- Display Index (content varies depending on the broadcasters)




Current page number

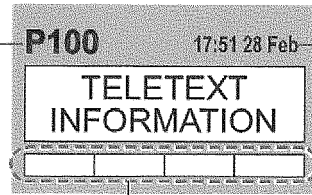


Time / date

Colour bar

2 Select the page

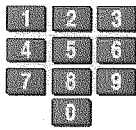

or

 

or

 


or




(corresponds to the colour bar)

● To adjust contrast



- As the blue bar is displayed.

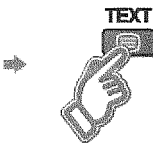


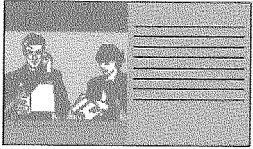













● To return to TV

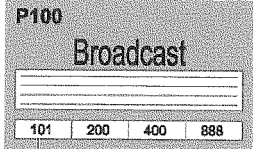

● Using teletext conveniently

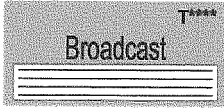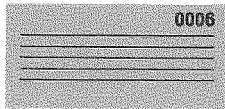
Reveal hidden data	<p>Reveal hidden words e.g. quiz page answers</p> <p>MENU → R ● Re-hide → R</p>
FULL / TOP / BOTTOM	<p>MENU → G</p> <p>(TOP) (BOTTOM) Normal (FULL)</p> <p>P100 Broadcast → P100 Broadcast → P100 Broadcast</p> <p>(Expand the BOTTOM half)</p>
HOLD	<p>If you wish to hold the current page without updating</p> <p>HOLD Stop or resume automatic updating ● To resume → HOLD Press again</p>

Viewing Teletext (continued)

<p>INDEX</p>	<p>Return to the main index page</p> <p>INDEX </p> <ul style="list-style-type: none"> ● FASTEXT mode only 												
<p>Favourite pages</p>	<p>FP. </p> <ul style="list-style-type: none"> ● Call up the page stored in "blue". ● Factory setting is "P103". 												
<p>Picture and text</p>	<p>Watch TV and Teletext in two windows at once</p> <p>TEXT  Press twice → Select Picture and text On or Off</p>  <ul style="list-style-type: none"> ● Operations can be made only in Teletext screen. 												
<p>Store frequently viewed pages</p>	<p>Store frequently viewed pages (programme position 1 to 25) in the colour bar</p> <p>As page is displayed  →  Press and hold</p> <p>Corresponding colour button</p> <p>List mode only</p>  <p>The number changes to white.</p> <ul style="list-style-type: none"> ● To change stored pages <p>→  Colour button you want to change → Enter new page number</p> <table border="1" data-bbox="711 976 844 1095"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td>9</td></tr> <tr><td>0</td><td></td><td></td></tr> </table> <p>→  Press and hold</p>	1	2	3	4	5	6	7	8	9	0		
1	2	3											
4	5	6											
7	8	9											
0													
<p>View sub page</p>	<p>View sub page (Only when teletext is more than one page)</p> <ul style="list-style-type: none"> ● To view specific sub page <p>→  →  →  → Enter the 4-digit number example: P6</p> <table border="1" data-bbox="844 1324 984 1353"> <tr><td>0</td><td>0</td><td>0</td><td>6</td></tr> </table> <p>→ </p> <ul style="list-style-type: none"> ● Sub pages <p>The number of sub pages varies depending on the broadcasters (up to 79 pages).</p> <p>It may take some time for searching, during which time you can watch TV.</p>	0	0	0	6								
0	0	0	6										
<p>Watch TV while waiting for updates</p>	<p>Watch TV programme while searching for a teletext page</p> <p>Teletext automatically updates itself when new information becomes available.</p> <p>Changes to TV screen temporarily</p> <p> →  →  →  → View the updated page</p> <p>Appears when updating is completed</p> <p>(You cannot change the channel.)</p> <ul style="list-style-type: none"> ● The news page provides a function that indicates arrival of latest news ("News Flash"). 												

How to use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV in your own way.


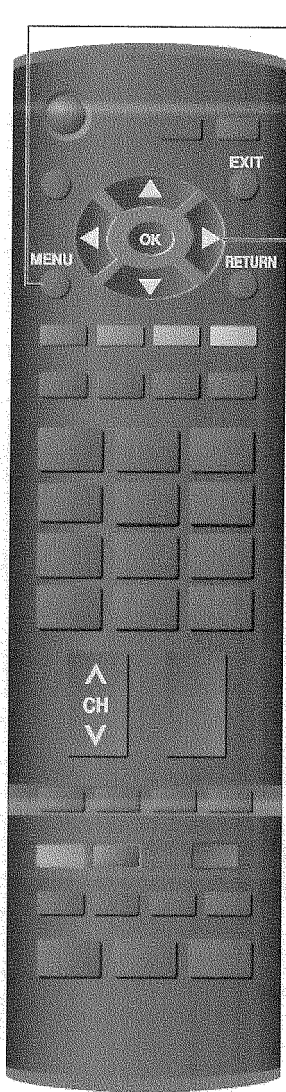


1 Display the menu





● Displays the functions that can be set (varies according to the input signal)

 
 
2 Select and access the menu



3 Select the item

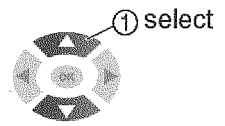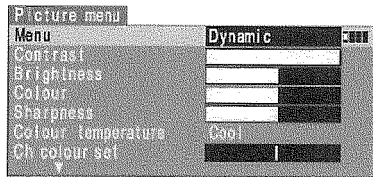

4 Adjust or select

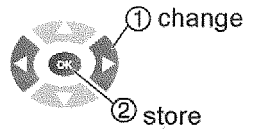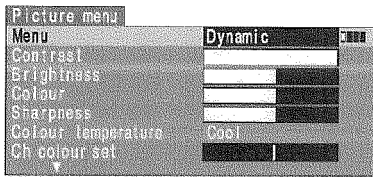

(Required by some functions)

● Choose from among alternatives

Number and positions of alternatives



Changed

● Adjust using the slide bar



Moved

● Go to the next screen

 


Displays the next screen

● To return to TV



● To return to the previous screen



How to use Menu Functions (continued)

Main Menu Overview

Main menu	
VIERA Link menu	Access
Picture menu	
Sound menu	
Setup menu	

VIERA Link menu	
Pause Live TV	
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema

Picture menu	
Menu	Dynamic
Contrast	
Brightness	
Colour	
Sharpness	
Colour temperature	Cool
Ch colour set	

Picture menu	
D. PNR	Auto
3D-COMB	On
Reset to Default	

Sound menu	
Menu	Music
Equalizer	
Balance	
Headphone volume	
Surround	Off
Reset to Default	

Setup menu	
VIERA Link	Off
Teletext	FASTEXT
Off timer	Off
Child lock	Off
Blue back	On
VCR/GAME	Off
Tuning menu	Access
Viewing environment	Home

Refer to page 18, 22


Tuning menu	
Sys select	Asia/M East
Auto tuning	Access
Manual tuning	
Sound system	5.5MHz
Colour system	Auto
Fine tuning	
Skip	Off

Refer to page 7, 16


1




2

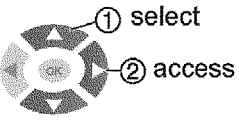

3

 

4

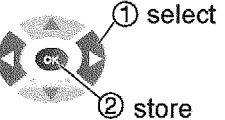

(Required by some functions)

● To return to TV
EXIT

● To return to the previous screen
MENU or RETURN

● Only available items can be selected.

How to use Menu Functions (continued)

Menu	Item	Adjustment / Configurations	
VIERA Link menu	Pause Live TV	Pause the live TV programme and resume later (page 19)	
	Direct TV Rec	Control the connected DIGA recorder to start or stop recording current TV programme (page 19)	
	VIERA Link Control	Controls the connected Panasonic equipment Easy control only with VIERA remote control”(page 20) Speaker control”(page 21)	
	Speaker Selection	● You can also access VIERA Link Menu directly using the VIERA Link button on the remote control.	
Picture menu	Menu	Basic picture mode (Dynamic / Standard / Cinema / Eco) ● Picture mode will be memorized for each TV, AV1, AV2, AV3, PC, HDMI1 and HDMI2 mode. ● C.A.T.S is in effect when picture mode is set to Eco.	
	Adjust by each menu	Contrast, Brightness, Colour, Sharpness	Adjusts colour, brightness, etc. for each picture mode to suit your taste
		NTSC-Tint	Adjust tint of image ● For NTSC signal reception only. ● Item will be changed to "Tint"when receiving YUV (60Hz) or HDMI (60Hz) signal.
		Colour temperature	Chooses the colour balance of the entire image (Cool / Standard / Warm)
		Ch colour set	Colour density varying between broadcast channels can be adjusted to three levels for each reception channel ● Select the channel you want to adjust and set this function.
		D. PNR	Automatically reduces image noise (Off / Strong / Weak / Auto) ● Set to Off when receiving a strong signal.
		3D-COMB	If colour patterning is seen while watching still or slow moving pictures, set this function to On to obtain sharper and more accurate colours (Off / On) Displayed only when receiving PAL or NTSC signal. Not displayed during S-Video, Component and HDMI inputs.
		Reset to Default	Press the OK, ◀ or ▶ button to reset the present Picture Menu to the default settings.
Sound menu	Menu	Basic sound mode (Music / News / Cinema) ● Sound mode will be memorized for each TV, AV1, AV2, AV3, PC, HDMI1 and HDMI2 mode.	
	Equalizer	Adjust the equalizer for each sound mode. ● Press the ◀ or ▶ button to select frequency band. Then, press the △ or ▽ button to adjust the level. Applicable for speakers only. (Does not apply for Headphone.)	

How to use Menu Functions (continued)


Menu	Item	Adjustment / Configurations
Sound menu	Balance	Adjusts volume level of right and left speakers
	Headphone volume	Adjusts the volume level of the headphones
	Surround	Gives a greater spatial effect by using dynamic enhancer (Off / On) ● Switching is also possible by SURROUND button on the remote control.
	HDMI1 input	Chooses according to the signal when HDMI is connected (Auto / Digital / Analogue) ● HDMI2 terminal is for digital signal only.
	Reset to Default	Press the OK button to reset the present Sound Menu to the default settings.
Setup menu	VIERA Link	VIERA Link function (Off / On) (page 18)
	Teletext	Teletext display mode (FASTEXT / List)
	Off timer	Sets the time the unit automatically turns Off (Off / 15 / 30 / 45 / 60 / 75 / 90) (minutes)
	Child lock	Child lock can be set for each channel and each AV mode Image and sound are not available during Child lock On (Black screen will appear) ● Select the channel or AV mode you want to lock and set this function.
	Blue back	Blue back display (Off / On) ● On: Blue back display when there are no signals ● Off: Blue back display off
	VCR/GAME	Reproduction of irregular signals, such as certain TV games and rental video tapes, may be improved. (Off / On)
Setup menu	Tuning menu	Edits or sets channels (page 16)
	Colour system	Displayed during AV mode. If a clear picture with current colours cannot be obtained when a Broadcast or AV signal is received, this function is used. (Auto / PAL / SECAM / NTSC 4.43 / NTSC 3.58) ● PAL, SECAM and NTSC 3.58 are different colour signal broadcast transmission systems applicable to different countries. NTSC 4.43 is a trick playback mode used in special VCRs to playback NTSC recorded video tapes through PAL television equipment.
	Colour matrix	Displayed during AV mode. Available only with 480p or 576p input signals in a natural colour from digital equipment connected to AV2 Component terminals. Select SD or HD to adjust suitable colour parameters for SD (Standard definition) or HD (High definition) ● SD: Input signal is a normal TV system. ● HD: Input signal is a High-Definition system.
	View Environment	Set the appropriate picture mode based on viewing environment. ● Home: Picture mode is set as "Standard" (for optimal picture/power consumption for home viewing). ● Shop: Picture mode is set as "Dynamic" (for in-store display).

Editing and Setting Channels

The current channel settings can be changed according to your needs and reception conditions.



To freely change settings after Auto setup

① Select the programme number and search through the channel

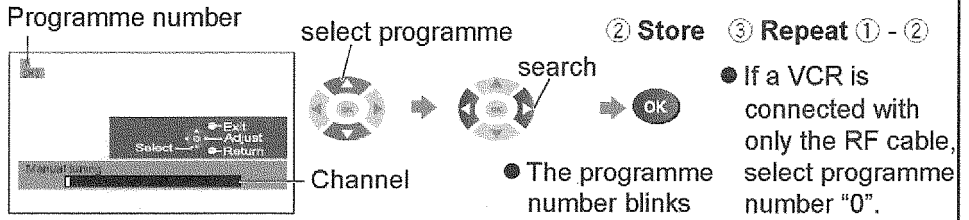

For Manual tuning using the buttons on the unit

- ① (Press until "Tuning mode" appears)
- ② (Access Tuning menu)
- ③ (Press until "Manual tuning" is reached)
- ④ (Access Manual tuning)
- ⑤ (Programme, Channel (select), Sound system)
- ⑥ (Change programme or start searching channels)
- ⑦ (Store)
- ⑧ ⑤ - ⑦ (Repeat)

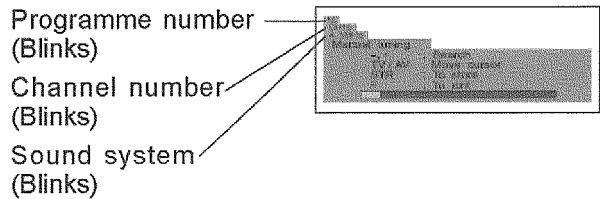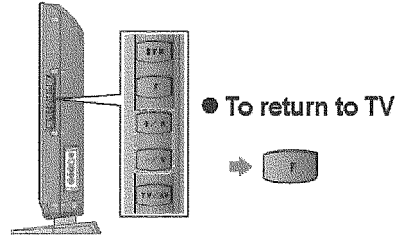

Set manually

Manual tuning

Edit

Sound system

Allows you to change the sound system used for a programme channel.
(4.5MHz / 5.5MHz / 6.0MHz / 6.5MHz)

Select the channel you want to adjust ➔ Set this function ➔

Edit

Colour system

Lets you select the correct transmission standard for the transmission signal being received (Auto / PAL / SECAM / NTSC 4.43 / NTSC 3.58)

Select the channel you want to adjust ➔ Set this function ➔

● Normally, select "Auto"

Small adjustment

Fine tuning

For the small adjustments to the tuning of an individual channel (useful for example when weather conditions are affecting reception quality of a programme)

Select the channel you want to adjust ➔ Set this function ➔

● To cancel Fine tuning, tune again by Manual tuning

Skip the programme

Skip


For skipping the programme numbers on which no TV stations are tuned

Select the programme numbers you want to skip ➔ Set "Skip" to "On" ➔

Displaying PC Screen on TV

The screen of the PC connected to the TV can be displayed on the TV.


You can also listen to PC sound with the audio cable connected. To connect PC (page 22)

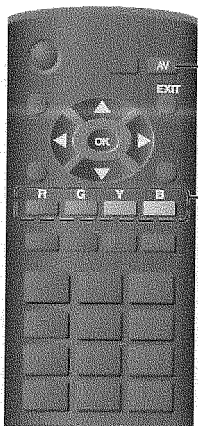

1 Select the external input




2 Select "PC"

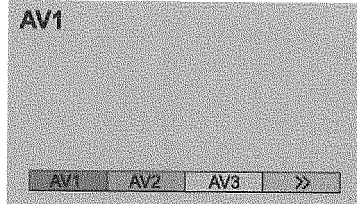

Blue

Red

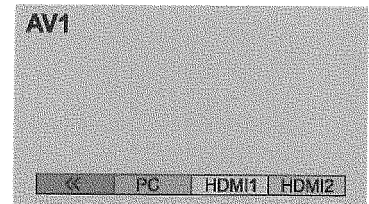

● To return to TV





(Corresponds to the colour bar on screen)

● Corresponding signals (page 26)

● PC menu setting (changed as desired)

To make settings → "How to Use Menu Functions" 1 to 4 (page 12)

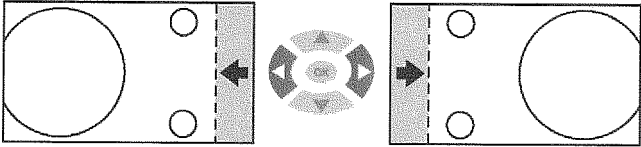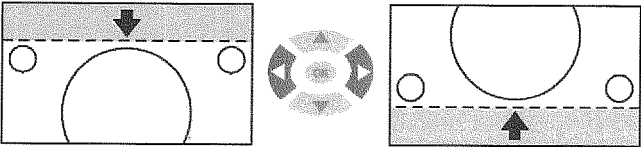Menu	Item	Adjustment / Configurations (options)	
Picture	Advanced PC Settings	R-Gain	Adjusts the white balance for red areas
		G-Gain	Adjusts the white balance for green areas
		B-Gain	Adjusts the white balance for blue areas
		Gamma	(2.0 / 2.2 / 2.5)
		Reset to default	Press the OK button to reset to the default setting.
Setup	PC Setup	Input Resolution	Switches to a wide view ● VGA (640 × 480 pixels), WVGA (852 × 480 pixels), SVGA (800 × 600 pixels), XGA (1,024 × 768 pixels), WXGA (1,366 × 768 pixels) ● Options change depending on signals ● If "H-freq." or "V-freq." is shown in red, the signals may not be supported.
		Clock	Set to the minimum level if noise occurs
		H-pos	Adjusts horizontal position 
		V-pos	Adjusts vertical position 
		Clock Phase	Eliminates flicker and distortion ● Adjust after Clock adjustment ● Set to the minimum level if noise occurs
		Reset to default	Press the OK button to reset to the default setting.


External Equipment

VIERA Link "HDAVI Control"


Enjoy additional HDMI Inter-Operability with Panasonic products which have "HDAVI Control" function. HDMI connections to some Panasonic equipment (Panasonic DVD Recorder DIGA) allow you to enjoy easy playback.



Connections for VIERA Link

- Use fully wired HDMI compliant cable.
- Easy control only with VIERA remote control.
- Read the manuals of the equipment too.

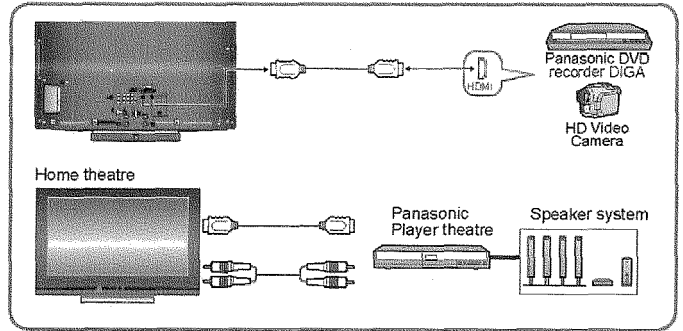

After connections turn the equipment on and then, switch the TV unit on.

 - 1 Display the menu 
- 2 Select and access "Setup menu"
- 3 Select "VIERA Link" and set to "On"

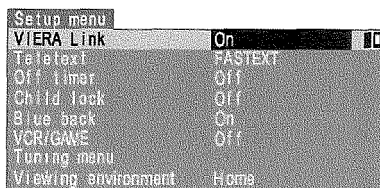

- Default setting is "On". If no HDMI equipment are connected or standard HDMI (non-"VIERA Link") are used, set to "Off".

Easy playback	Automatic Input switching - When the connected HDAVI control compatible equipment is operated, input mode is switched automatically.
Power on link	When "VIERA Link" is set to "On", the TV is automatically turned on and switched to the appropriate HDMI input whenever HDAVI control compatible equipment is initially turned on and Play mode is selected.
Power off link	When "VIERA Link" is set to "On" and the TV is turned off, the connected HDAVI control compatible equipment is also automatically turned off.

- The TV remains on even if the "VIERA Link" compatible equipment is turned off.

External Equipment (continued)

Using VIERA Link menu

Pause Live TV programme

 
Pause Live TV

- This function is available with DIGA Recorder which has HDD and "HDAVI Control" function when watching TV programme or input from DIGA Recorder.
- If you cannot operate, check the "VIERA Link" setting in "Setup menu" (page 18) and the equipment.

① Display "VIERA Link menu" 

② Select "Pause Live TV" and press OK to pause


Live TV programme is recorded on HDD from the point it was paused.



■ To resume (stop pause)


Select "Pause Live TV" and press OK.

 About the operation after resuming, refer to the manual of the equipment.



■ To return to Live TV (cancel pause or resume playback)

 Change the input mode or programme number.



- If you cancel pause or resume playback, the recorded programme will be deleted from HDD.

 
Direct TV recording

Direct TV Rec

- This function is available with DIGA Recorder which has HDD and "HDAVI Control" function when watching TV programme.
- If you cannot operate, check the "VIERA Link" setting in "Setup menu" (page 18) and the equipment.
- The recording is performed using the tuner of DIGA Recorder. During recording, you can change the programme number, input mode or turn off the TV.


① Display "VIERA Link menu" 

② Select "Start" in "Direct TV Rec", and press OK to start recording



■ To stop recording

 Select "Stop" in "Direct TV Rec", and press OK.



External Equipment (continued)

You can control some functions of the connected Panasonic equipment with this TV remote control (point the remote control at the TV's signal receiver).

- This function is available with equipment which has "HDAVI Control" function.
- If you cannot operate, check the "VIERA Link" setting in "Setup menu" (page 18) and the equipment.

① Display "VIERA Link menu"



② Select "VIERA Link Control"



select

③ Select the connected equipment which you want to access



① select
② access

The menu of the equipment is displayed.

④ Operate the menu of the equipment

- Available VIERA remote control buttons (depending on the connected equipment):

Easy control only
with VIERA remote
control

**VIERA
Link
Control**

	Move cursor / select menu
	Move cursor / access / adjust
	Store / set / access
	Return to the previous menu
	Exit the menu
	Display the operation guide of the equipment / The same functions with the OPTION button of the equipment
	Access when the key words are displayed on colour bar

- When the equipment with "HDAVI Control" function is connected but you cannot access it, use the equipment remote control to operate it.

External Equipment (continued)


Speaker control

Speaker Selection

You can control the theatre speaker with this TV remote control (point the remote control at the TV's signal receiver).

- This function is available with Amplifier or Player theatre which has "HDAVI Control" function.
- If you cannot operate, check the "VIERA Link" setting in "Setup menu" (page 18) and the equipment.

- ① Display "VIERA Link menu"
- ② Select "Speaker Selection"
- ③ Set to "Home Cinema" or "TV"

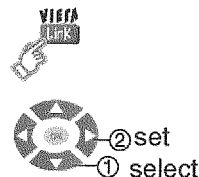

■ Home Cinema

Amplifier or Player theatre will be automatically turned on if it is in Standby mode and sound will be output from the theatre speakers connected to the equipment.

- Volume up / down ➡



- Mute ➡



- The sound of TV speakers is mute.
- When the equipment is turned off, TV speakers will be active.

■ TV


TV speakers are active.

Note

- This function may not work properly depending on the connected equipment.
- Image or sound may not be available for the first few seconds when playback starts or input mode is switched.
- Volume function will be displayed when adjusting the volume of the equipment.
- Easy playback is also available when using the remote control for Amplifier or Player theatre. Read the manual of the equipment.
- About HDMI cable for connecting Panasonic HD Video Camera, read the manual of the equipment.
- If more than one equipment of the same type are connected to the TV by HDMI cables, for example two DIGA Recorders to HDMI1 and HDMI2, VIERA Link will only be available for the lower terminal number, in this case HDMI1.
- "HDAVI Control 3" is the latest standard (current as of December, 2007) for HDAVI Control compatible equipment. This standard is compatible with conventional HDAVI equipment.

External Equipment (continued)

These diagrams show our recommendations for how to connect the TV unit to your various equipment.

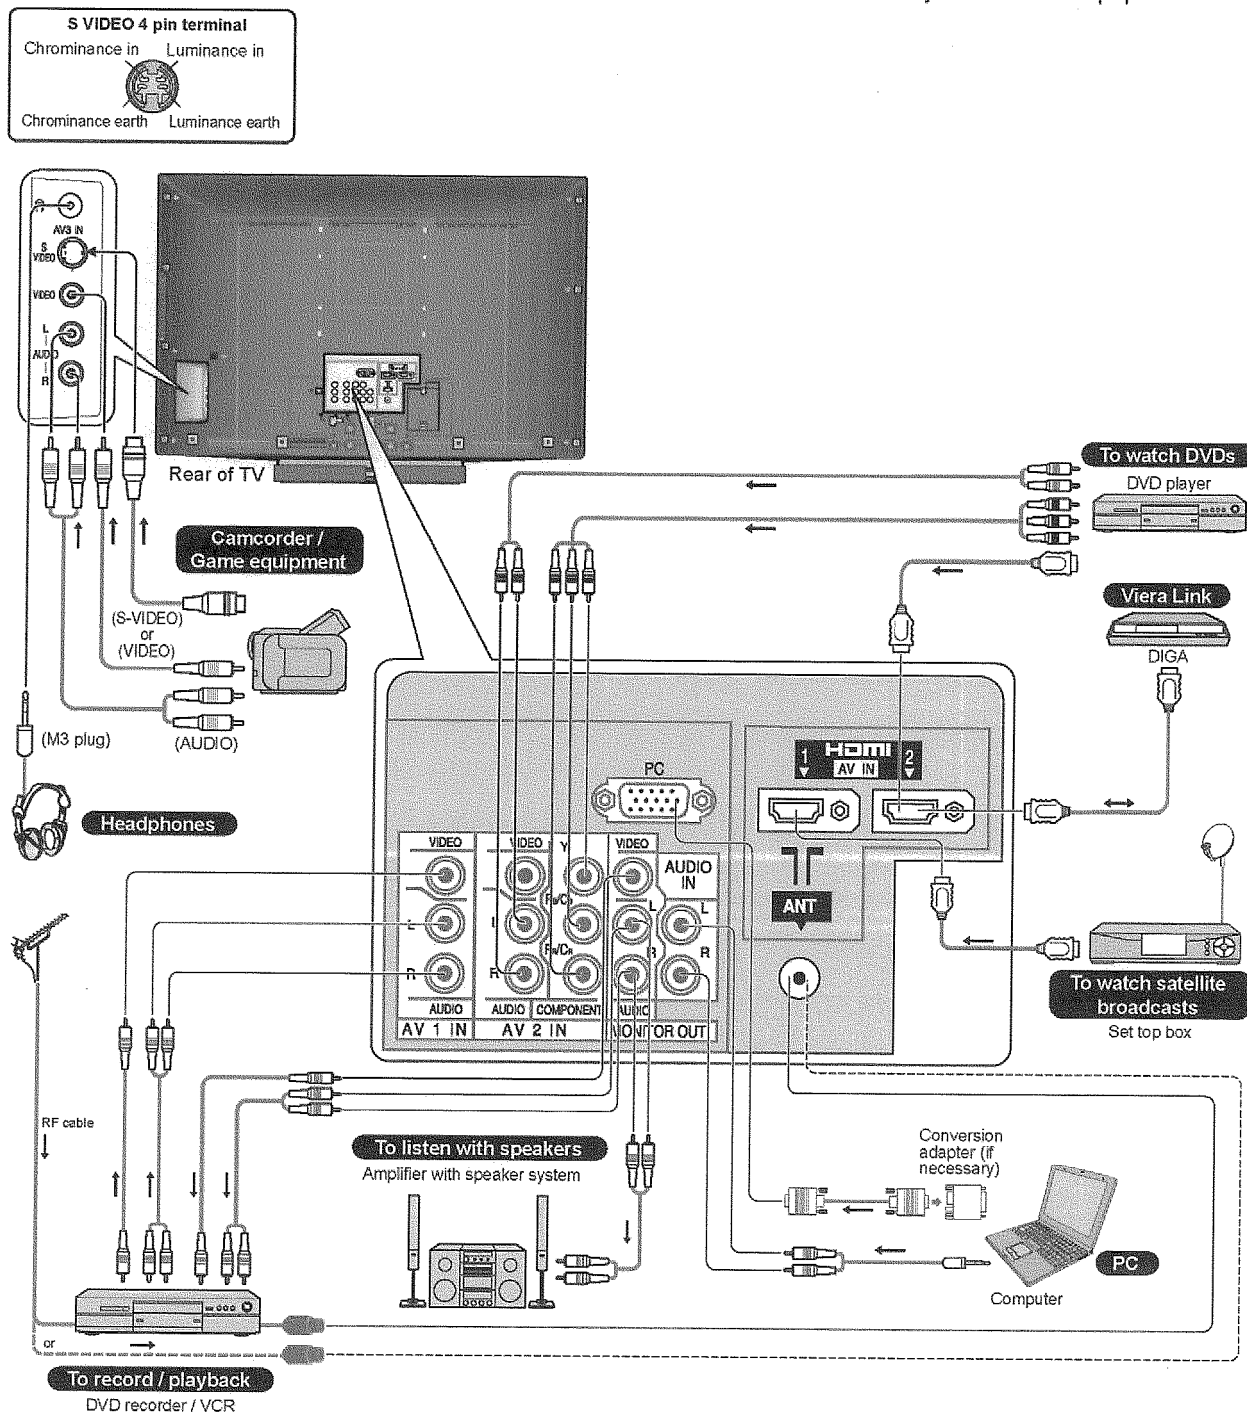

External Equipment (continued)

Types of connectable equipment to each connector

Recording/ Playback (equipment)	Connector	<input type="radio"/> AV1 <input type="radio"/> IN	<input type="radio"/> AV2 <input type="radio"/> IN	<input type="radio"/> AV3 <input type="radio"/> IN	<input type="radio"/> MONITOR <input type="radio"/> OUT	<input type="radio"/> HDMI1 <input type="radio"/> AUDIO IN <input type="checkbox"/> HDMI1	<input type="checkbox"/> HDMI2
To record / playback (VCR / DVD recorder)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
To watch DVDs		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
To watch camcorder images (Video camera)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
To watch satellite broadcasts (Set top box)			<input type="radio"/>			<input type="radio"/>	
To play games		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
VIERA Link						<input type="radio"/>	<input type="radio"/>

● Connect the S-VIDEO or VIDEO terminal when using AV3 IN terminals.

● Connect the COMPONENT or VIDEO terminal when using AV2 IN terminals.

○ Recommended Connection

Aspect Ratio


The optimum size and aspect can be chosen, and you can enjoy finer images.

Signal name		Aspect modes					
		16:9	JUST	4:3	ZOOM1	ZOOM2	ZOOM3
TV/AV1 AV2/AV3	PAL I	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	PAL 525/60	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	M.NTSC	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	NTSC	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
COMPONENT/HDMI	525(480)/60i	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	525(480)/60p	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	625(576)/50i	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	625(576)/50p	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	750(720)/50p	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	750(720)/60p	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	1125(1080)/50i	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	1125(1080)/60i	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PC input		<input type="radio"/>	-	<input type="radio"/>	-	-	-

Note


- The ratio varies depending on the programme, etc. If the ratio is greater than the standard "16:9" black bands may appear at the top and bottom of the screen.
- If the screen size looks unusual when a widescreen-recorded programme is played back on a VCR, adjust the tracking of the VCR.
- To select the ratio manually : (Only "16:9" or "4:3" in PC mode).

16:9

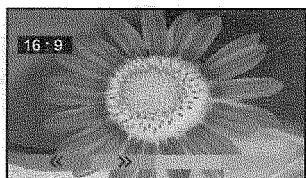


Directly displays the image at "16:9" without distortion (anamorphic).

JUST

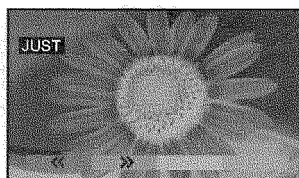


Displays a "4:3" image full-screen. Stretching is only noticeable at the left and right edges.

4:3

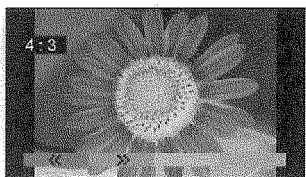


Displays the image at the standard "4:3" without distortion.

ZOOM1

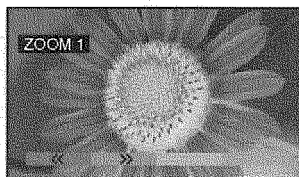


Displays a "16:9" letterbox or "4:3" image without distortion.

ZOOM2

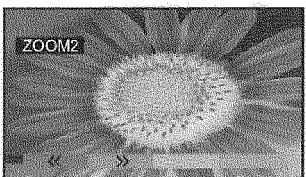

Displays a "16:9" letterbox (anamorphic) image full-screen without distortion.

ZOOM3

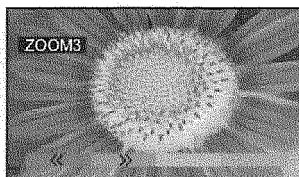

Displays a "21:9" letterbox (anamorphic) image full-screen without distortion. At "16:9", displays the image at its maximum (with slight enlargement).

HDMI Connection

HDMI (High-Definition Multimedia Interface) allows you to enjoy high-definition digital images and high quality sound by connecting the TV and the equipment.

HDMI-compatible equipment (*1) with a HDMI or DVI output terminal, such as a set top box or a DVD player, can be connected to the HDMI terminal using a HDMI compliant (fully wired) cable. About connections see "External Equipment" on page 22.

Note

- HDMI is the world's first complete digital consumer AV interface complying with a non-compression standard.
 - If the external equipment has only a DVI output, connect to the HDMI1 terminal via a DVI to HDMI adapter cable (*2).
 - When the DVI to HDMI adapter cable is used, connect the audio cable to the audio input terminal (HDMI1: use AUDIO IN terminals).
 - Audio setting can be made on the "HDMI1 Input" menu screen.
 - Applicable audio signal sampling frequencies (2ch L.PCM) : 48 kHz, 44.1 kHz, 32 kHz.
 - HDMI2 terminal is for digital audio signal only.
 - Use with a PC is not assumed.
 - If the connected equipment has an aspect adjustment function, set the aspect ratio to "16:9".
 - These HDMI connectors are "type A".
 - An equipment having no digital output terminal may be connected to the input terminal of either "Component", "S-VIDEO", or "Video" to receive analogue signals.
 - The HDMI input terminal can be used with only following image signals : 480i, 480p, 576i, 576p, 720p and 1080i. Match the output setting of the digital equipment.
 - For details of the applicable HDMI signals, see page 26.
- (*1) : The HDMI logo is displayed on an HDMI-compliant equipment.
 (*2) : Enquire at your local digital equipment retailer shop.

PC connection

A PC may be connected to this TV so that the PC screen is displayed and sound is heard from the TV.


- A PC adapter is not necessary for the DOS/V-compliant D-sub 15-pin connector.

Note

- Some PC models cannot be connected to this TV.
- When using PC, set the colour display quality of PC to the highest position.
- For details of the applicable PC signals, see below.
- Max. display resolution

Aspect	4:3	1,024 x 768 pixels
	16:9	1,366 x 768 pixels

- D-sub 15-pin connector signal

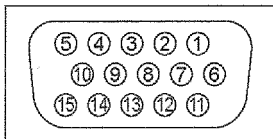

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
①	R	⑥	GND (Ground)	⑪	NC (not connected)
②	G	⑦	GND (Ground)	⑫	NC (not connected)
③	B	⑧	GND (Ground)	⑬	HD
④	NC (not connected)	⑨	NC (not connected)	⑭	VD
⑤	GND (Ground)	⑩	GND (Ground)	⑮	NC (not connected)

Control with VIERA Link

HDMI connections to some Panasonic equipment allow you to enjoy the easy playback.

- Setup the equipment to enable this function. Read the manual of the equipment.
- Switch the TV until on again with the equipment on when connection or setup is changed.
- This function may not work normally depending on the equipment condition.
- The equipment can be operated by TV's remote control with this function on even if TV is in Standby mode.
- Image or sound may not be available for the first few seconds when the playback starts.
- Image or sound may not be available for the first few seconds when the input mode is switched.
- Easy playback is also available by using the remote control from Amplifier or Player Theatre.
Read the manual of the equipment.

Input signal that can be displayed

Mark : Applicable input signal for Component (Y, P_B/C_B, P_R/C_R) and HDMI

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)	Component	HDMI
525 (480) / 60i	15.73	59.94	*	*
525 (480) / 60p	31.47	59.94	*	*
625 (576) / 50i	15.63	50.00	*	*
625 (576) / 50p	31.25	50.00	*	*
750 (720) / 60p	45.00	60.00	*	*
750 (720) / 50p	37.50	50.00	*	*
1,125 (1,080) / 60i	33.75	60.00	*	*
1,125 (1,080) / 50i	28.13	50.00	*	*



PC (D-sub 15P)



Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 × 480 @60 Hz	31.47	59.94
800 × 600 @60 Hz	37.88	60.32
852 × 480 @60 Hz	31.47	59.94
1,024 × 768 @60 Hz	48.36	60.00
1,366 × 768 @60 Hz	48.39	60.04

Note

- Signals other than the above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.
- Applicable input signal for PC is basically compatible to VESA standard timing.
- PC signal is magnified or compressed for display, so that it may not be possible to show fine detail with sufficient clarity.



 














Stereo / Bilingual Sound Selection

  When you receive stereo / bilingual sound system, sound output modes can be selected by pressing the Stereo / Bilingual Sound Selection button.

Audio Signal	Mode Indicator
STEREO	
MONO	
MAIN I	I
SUB II	II

Note

- If the stereo signal is poor or the receiving conditions are not optimum or if STEREO : MONO automatic switching occurs, it is recommended you switch from STEREO to MONO.
- Even when the contents of the receiving signal undergo changes, selection mode is kept intact.
- When the receiving conditions deteriorate, listening will be easier if the mode is set to the MONO position using the stereo / bilingual sound selection button.
- DUAL, also known as DUAL MONO or as BILINGUAL is not currently transmitted in some countries.

	Type of broadcast	Mode Indicator
NICAM	Regular broadcast (Standard Audio)	No Indicator  
	(Regular) + NICAM MONO I (MAIN I)	I  
	NICAM STEREO	  
	NICAM DUAL MONO (MAIN I / SUB II)	I  II   
A2 (German)	Regular broadcast (Standard Audio)	No Indicator  
	BILINGUAL or DUAL MONO : MAIN I / SUB II	I  II
	STEREO	  

Licence


Trademark Credits

- HDMI, the HDMI logo High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- VGA is a trademark of International Business Machines Corporation.
- Macintosh is a registered trademark of Apple Computer, USA.
- S-VGA is a registered trademark of the Video Electronics Standard Association.
Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.
- HDAVI Control™ is a trademark of Matsushita Electric Industrial Co., Ltd.

FAQs

Before requesting service or assistance, please follow these simple guides to resolve the problem. If problem still persists, please contact your local Panasonic dealer or Panasonic Customer Care Centre for assistance.

White spots or shadow images (noise)

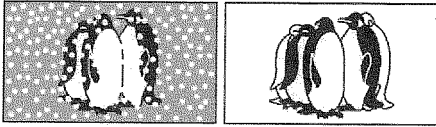

- Check the position, direction, and connection of the aerial.

The main unit is hot

- The main unit radiates heat and some of the parts may become hot. This is not a problem for performance or quality. Setup in a location with good ventilation. Do not cover the ventilation holes of the TV with a tablecloth, etc., and do not place on top of other equipment.

There may be red spots, blue spots, green spots and black spots on the screen.



- This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as fixed points of red, blue, green or black. Please note this does not affect the performance of your LCD.

The LCD panel moves slightly when it is pushed with a finger Clattered sound might be heard

- There are some looseness around the panel to prevent the damage to the panel. The panel might move slightly when it is pushed with a finger, and clattered sound might be heard. This is not a malfunction.

"Shop" appears on screen at switch on

- "Shop" was selected in Initial Setup? Select Home" in Viewing Environment" (page 6)

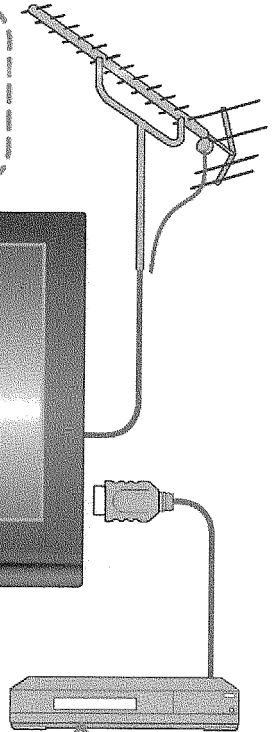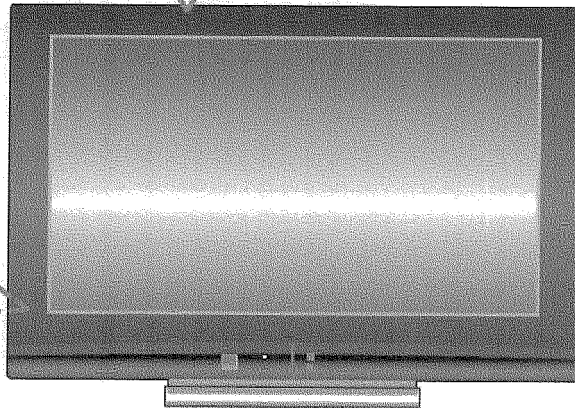





 


 
 
 



 



Pictures from an equipment are unusual when the equipment is connected via HDMI

- Is the HDMI cable connected properly? (page 22)
- Turn Off the TV unit and equipment, then turn them On again.
- Check an input signal from the equipment. (page 26)
- Use an equipment compliant with EIA/CEA-861/861B.

The remote control does not work

- Are the batteries installed correctly? (page 3)
- Has the TV unit been switched On?
- Has the battery run down?

Troubleshooting

Symptoms		Checks
Picture	Sound	
 Snowy Picture	 Noisy Sound	Aerial location, direction or connection
 Multiple Image	 Normal Sound	Aerial location, direction or connections
 Interference	 Noisy Sound	Electrical appliances Cars, motorcycles Fluorescent lights
 Normal Picture	 No Sound	Volume level Sound mute switched on.
 No Picture	 No Sound	Is the unit in "AV mode"? Is the mains lead plugged into the socket outlet? Is the TV unit turned On? Check Picture menu and volume.
 No Colour	 Normal Sound	Colour Control set at minimum levels. Colour system
 Poor or Distorted Picture	 Weak or No sound	Retune Channel(s).
 Normal Picture	 Weak or Distorted sound	Sound reception may have deteriorated. Sound system.
There may be red spots, blue spots, green spots and black spots on the screen	 Normal Sound	This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as fixed points of red, blue, green or black. Please note this does not affect the performance of your LCD.
H D M I	"VIERA Link" function does not work	Switch the TV unit on again with the equipment on. Set "VIERA Link" to "Off", then set to "On" again.
	Poor Video. (Snow noise, no picture, picture runs, etc.)	HDMI cable is not connected securely. Turn OFF the power supply of the TV and connected equipment OFF then turn on again. Check compatibility of input signal from the connected equipment. The connected equipment must be EIA/CEA-861/861B compliant.
	Poor Audio	Change the audio setting of the connected equipment to L.PCM Check the "HDMI1 input" setting in the Sound menu. If digital sound connected has a problem, select analogue sound (DVI) connected.
	The error message appears.	Please consult an Authorized Service Center.

Specifications

Power Source		AC SINGLE 230V, 50Hz																																							
Power consumption	Average use	Not decided																																							
	Standby condition	Not decided																																							
LCD Panel	Aspect Ratio	16:9																																							
	Visible screen size (No. of pixels)	94.0 cm (diagonal)																																							
		819.6 mm (W) x 460.8 mm (H) 1,049,088 (1,366 (W) x 768 (H))																																							
Sound	Speaker	Full range x 2 pcs, 8 Ω																																							
	Audio Output	20 W (10 W + 10 W), 10% THD																																							
	Headphones	M3 (3.5 mm) Jack x 1																																							
PC signals																																									
Receiving Systems / Band name																																									
		<table border="1"> <thead> <tr> <th>17 Systems</th> <th>Function</th> </tr> </thead> <tbody> <tr><td>1</td><td>PAL B, G, H</td></tr> <tr><td>2</td><td>PAL I</td></tr> <tr><td>3</td><td>PAL D, K</td></tr> <tr><td>4</td><td>SECAM B, G</td></tr> <tr><td>5</td><td>SECAM D, K</td></tr> <tr><td>6</td><td>SECAM K1</td></tr> <tr><td>7</td><td>NTSC M (NTSC 3.58 / 4.5MHz)</td></tr> </tbody> </table>	17 Systems	Function	1	PAL B, G, H	2	PAL I	3	PAL D, K	4	SECAM B, G	5	SECAM D, K	6	SECAM K1	7	NTSC M (NTSC 3.58 / 4.5MHz)	<table border="1"> <thead> <tr> <th>17 Systems</th> <th>Function</th> </tr> </thead> <tbody> <tr><td>8</td><td>NTSC 4.43 / 5.5MHz</td></tr> <tr><td>9</td><td>NTSC 4.43 / 6.0MHz</td></tr> <tr><td>10</td><td>NTSC 4.43 / 6.5MHz</td></tr> <tr><td>11</td><td>NTSC 3.58 / 5.5MHz</td></tr> <tr><td>12</td><td>NTSC 3.58 / 6.0MHz</td></tr> <tr><td>13</td><td>NTSC 3.58 / 6.5MHz</td></tr> <tr><td>14</td><td>SECAM I</td></tr> <tr><td>15</td><td>PAL 60Hz / 5.5MHz</td></tr> <tr><td>16</td><td>PAL 60Hz / 6.0MHz</td></tr> <tr><td>17</td><td>PAL 60Hz / 6.5MHz</td></tr> </tbody> </table>	17 Systems	Function	8	NTSC 4.43 / 5.5MHz	9	NTSC 4.43 / 6.0MHz	10	NTSC 4.43 / 6.5MHz	11	NTSC 3.58 / 5.5MHz	12	NTSC 3.58 / 6.0MHz	13	NTSC 3.58 / 6.5MHz	14	SECAM I	15	PAL 60Hz / 5.5MHz	16	PAL 60Hz / 6.0MHz	17	PAL 60Hz / 6.5MHz
17 Systems	Function																																								
1	PAL B, G, H																																								
2	PAL I																																								
3	PAL D, K																																								
4	SECAM B, G																																								
5	SECAM D, K																																								
6	SECAM K1																																								
7	NTSC M (NTSC 3.58 / 4.5MHz)																																								
17 Systems	Function																																								
8	NTSC 4.43 / 5.5MHz																																								
9	NTSC 4.43 / 6.0MHz																																								
10	NTSC 4.43 / 6.5MHz																																								
11	NTSC 3.58 / 5.5MHz																																								
12	NTSC 3.58 / 6.0MHz																																								
13	NTSC 3.58 / 6.5MHz																																								
14	SECAM I																																								
15	PAL 60Hz / 5.5MHz																																								
16	PAL 60Hz / 6.0MHz																																								
17	PAL 60Hz / 6.5MHz																																								
		Reception of broadcast transmissions and playback from Video Cassette Tape Recorders.	Playback from Special VCR's or DVD.																																						
			Playback from Special Disc Players and Special VCR's or DVD.																																						
Receiving Channels (Regular TV)																																									
		<table border="1"> <thead> <tr> <th>VHF BAND</th> <th>UHF BAND</th> <th>CATV</th> </tr> </thead> <tbody> <tr><td>2 - 12 PAL/SECAM B, K1</td><td>21 - 69 PAL G, H, I/SECAM G, K, K1</td><td>S1 - S20 (OSCAR)</td></tr> <tr><td>0 - 12 PAL B (AUST.)</td><td>28 - 69 PAL B (AUST.)</td><td>1 - 125 (U.S.A.CATV)</td></tr> <tr><td>1 - 9 PAL B (N.Z.)</td><td>13 - 57 PAL D, K</td><td>C13 - C49 (JAPAN)</td></tr> <tr><td>1 - 12 PAL/SECAM D</td><td>13 - 62 NTSC M (JAPAN)</td><td>S21 - S41 (HYPER)</td></tr> <tr><td>1 - 12 NTSC M (JAPAN)</td><td>14 - 69 NTSC M (U.S.A.)</td><td>Z1 - Z37 (CHINA)</td></tr> <tr><td>2 - 13 NTSC M (U.S.A.)</td><td></td><td>5A, 9A (AUST.)</td></tr> </tbody> </table>	VHF BAND	UHF BAND	CATV	2 - 12 PAL/SECAM B, K1	21 - 69 PAL G, H, I/SECAM G, K, K1	S1 - S20 (OSCAR)	0 - 12 PAL B (AUST.)	28 - 69 PAL B (AUST.)	1 - 125 (U.S.A.CATV)	1 - 9 PAL B (N.Z.)	13 - 57 PAL D, K	C13 - C49 (JAPAN)	1 - 12 PAL/SECAM D	13 - 62 NTSC M (JAPAN)	S21 - S41 (HYPER)	1 - 12 NTSC M (JAPAN)	14 - 69 NTSC M (U.S.A.)	Z1 - Z37 (CHINA)	2 - 13 NTSC M (U.S.A.)		5A, 9A (AUST.)																		
VHF BAND	UHF BAND	CATV																																							
2 - 12 PAL/SECAM B, K1	21 - 69 PAL G, H, I/SECAM G, K, K1	S1 - S20 (OSCAR)																																							
0 - 12 PAL B (AUST.)	28 - 69 PAL B (AUST.)	1 - 125 (U.S.A.CATV)																																							
1 - 9 PAL B (N.Z.)	13 - 57 PAL D, K	C13 - C49 (JAPAN)																																							
1 - 12 PAL/SECAM D	13 - 62 NTSC M (JAPAN)	S21 - S41 (HYPER)																																							
1 - 12 NTSC M (JAPAN)	14 - 69 NTSC M (U.S.A.)	Z1 - Z37 (CHINA)																																							
2 - 13 NTSC M (U.S.A.)		5A, 9A (AUST.)																																							
Aerial - Rear																																									
VHF / UHF																																									
Operating Conditions																																									
Temperature : 0°C - 40°C																																									
Humidity : 20 % - 80 % RH (non-condensing)																																									
Connection Terminal	AV1 Input	AUDIO L-R VIDEO	RCA PIN Type x 2 RCA PIN Type x 1																																						
			0.5 V [rms] 1.0 V [p-p] (75 Ω)																																						
	AV2 Input	AUDIO L-R VIDEO	RCA PIN Type x 2 RCA PIN Type x 1																																						
			0.5 V [rms] 1.0 V [p-p] (75 Ω)																																						
		COMPONENT	Y Pb/Cb, Pr/Cr																																						
			1.0 V [p-p] (including synchronization) ± 0.35 V [p-p]																																						
	AV3 Input	AUDIO L-R VIDEO S VIDEO	RCA PIN Type x 2 RCA PIN Type x 1 Mini DIN 4 - pin																																						
		0.5 V [rms] 1.0 V [p-p] (75 Ω) Y:1.0 V [p-p] (75 Ω) C:0.286 V [p-p] (75 Ω)																																							
Others	HDMI 1/2 Input	TYPE A Connectors																																							
	Audio Input for HDMI1	RCA PIN Type x 2	0.5 V [rms]																																						
	PC Input	HIGH-DENSITY D-SUB 15PIN	R, G, B/0.7 V [p-p] (75 Ω) HD, VD/TTL Level 2.0 - 5.0 V [p-p] (high impedance)																																						
Monitor Output	AUDIO L-R VIDEO	RCA PIN Type x 2 RCA PIN Type x 1	0.5 V [rms] (High impedance) 1.0 V [p-p] (75 Ω)																																						
Dimension (WxHxD)	Including TV stand	820 x 578 x 225 (mm)																																							
	TV set only	820 x 539 x 107.5 (mm)																																							
Net Weight		17 kg																																							

Note

- Design and Specifications are subject to change without notice. Weight and Dimensions shown are approximate.

Customer's Record

The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number _____

Serial Number _____