 


A decorative blue line graphic consisting of several overlapping loops and curves, starting from the left edge of the page and extending towards the right, ending near the top of the title.

# User Guide

## CDM8992

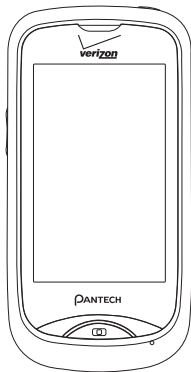

## CHAPTER 1. BEFORE USING

<b>BEFORE USING</b> .....	7
INSIDE THE PACKAGE .....	8
HANDSET DESCRIPTIONS .....	9
KEY DESCRIPTIONS .....	11
DISPLAY INDICATORS .....	12
INSTALLING THE BATTERY .....	17
REMOVING THE BATTERY .....	18
CHARGING THE BATTERY .....	18
BATTERY HANDLING INFORMATION .....	20

## CHAPTER 2. BASIC OPERATION

<b>BASIC OPERATION</b> .....	21
TURNING THE PHONE ON AND OFF .....	22
USING THE TOUCH SCREEN .....	22
USING THE HOME SCREEN .....	24
LOCKING OR UNLOCKING THE TOUCH SCREEN AND KEYS .....	26
USING THE TASK MANAGER .....	26
MENU SUMMARY .....	27
MAKING A CALL .....	31
ANSWERING A CALL .....	31
MISSED CALL NOTIFICATION .....	31
WAIT/PAUSE FEATURE .....	32
MAKING AN INTERNATIONAL CALL .....	33
3-WAY CALLING .....	33

CALL WAITING FUNCTION .....	33
CALLING A NUMBER FROM CONTACTS .....	34
ADJUSTING THE MASTER VOLUME .....	34
SPEAKERPHONE MODE .....	34
AVAILABLE OPTIONS DURING A CALL .....	35
MAKING AN EMERGENCY CALL .....	35
USING THE DIRECTORY SERVICE .....	36

## CHAPTER 3. MEMORY FUNCTION

<b>MEMORY FUNCTION</b> .....	37
ENTERING TEXT .....	38
STORING A PHONE NUMBER .....	40
EDITING CONTACT ENTRIES .....	42
DEFAULT NUMBERS .....	44
BACKUP ASSISTANT™ .....	44
SENDING A NAME CARD .....	44
SPEED DIALING .....	45

## CHAPTER 4. MENU FUNCTION

<b>MENU FUNCTION</b> .....	47
RECENT CALLS .....	48
MY VERIZON .....	50
VOICE COMMANDS .....	50
CALCULATOR .....	53
TIP CALCULATOR .....	54

CALENDAR.....	54
ALARM CLOCK.....	56
STOP WATCH.....	57
WORLD CLOCK.....	57
UNIT CONVERTER.....	58
NOTEPAD.....	58
USB MASS STORAGE.....	59
AIRPLANE MODE.....	59
MUSIC ONLY MODE.....	59
BLUETOOTH.....	60
SOUND SETTINGS.....	63
DISPLAY SETTINGS.....	65
TOUCH SETTINGS.....	68
PHONE SETTINGS.....	68
CALL SETTINGS.....	74
MEMORY.....	76
USB MODE.....	79
PHONE INFO.....	79

## CHAPTER 5. CAMERA

CAMERA.....	81
TAKING A PHOTO.....	82
VIEWING PHOTOS.....	83
USING PHOTO OPTIONS.....	83
RECORDING A VIDEO.....	83

VIEWING VIDEOS.....	85
USING VIDEO OPTIONS.....	85
USING CAMERA AND CAMCORDER SETTINGS.....	86

## CHAPTER 6. MEDIA CENTER

MEDIA CENTER.....	89
USING A microSD™ CARD.....	90
SEARCH.....	91
MUSIC & TONES.....	91
PICTURE & VIDEO.....	95
APPS.....	98

## CHAPTER 7. MESSAGING MENU

MESSAGING MENU.....	101
NEW MESSAGE NOTIFICATION.....	102
CREATING A NEW MESSAGE.....	102
VIEWING RECEIVED AND SENT MESSAGES.....	105
DELETING RECEIVED AND SENT MESSAGES.....	106
VIEWING DRAFT MESSAGES.....	106
DELETING DRAFT MESSAGES.....	106
MANAGING THE TEMPLATE BOX.....	106
CHANGING THE MESSAGE SETTINGS.....	107
ACCESSING YOUR VOICEMAILS.....	108
ACCESSING VISUAL VOICEMAILS.....	108
EMAIL & IM.....	109

## CHAPTER 8. SAFETY AND WARRANTY

SAFETY AND WARRANTY .....	111
SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES.....	112
SAFETY INFORMATION FOR FCC RF EXPOSURE .....	117
SAR INFORMATION.....	118
HEARING AID COMPATIBILITY (HAC) FOR WIRELESS TELECOMMUNICATIONS DEVICES .....	120
FDA CONSUMER UPDATE .....	121
AVOID POTENTIAL HEARING LOSS .....	130
FCC COMPLIANCE INFORMATION.....	132
12 MONTH LIMITED WARRANTY .....	133

# 1 BEFORE USING

This chapter provides important information about using the

CDM8992 including:

INSIDE THE PACKAGE

HANDSET DESCRIPTIONS

KEY DESCRIPTIONS

DISPLAY INDICATORS

INSTALLING THE BATTERY

REMOVING THE BATTERY

CHARGING THE BATTERY


BATTERY HANDLING INFORMATION



CDM8992

## INSIDE THE PACKAGE

 This package should include all items pictured below. If any are missing or different, immediately contact the retailer where you purchased the phone.




Handset



Standard Battery



 Pre-installed 1 GB  
microSD™ Card



QRG



Product Safety &  
Warranty Guide



Battery Cover




Wall/USB Adapter



USB Cable

## HANDSET DESCRIPTIONS

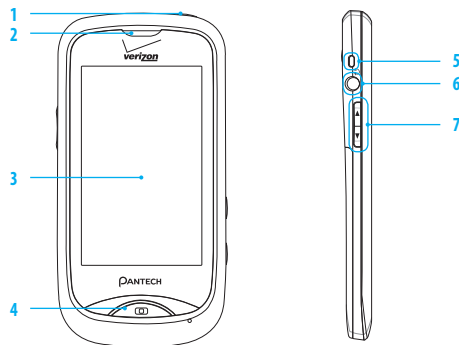 

1. Lock/Power Key
2. Earpiece
3. Touch Screen
4. Home Key

5. Wrist Strap Eyelet
6. Headset Jack
7. Volume Keys

01

02

03

04


05

06

07

08

## HANDSET DESCRIPTIONS

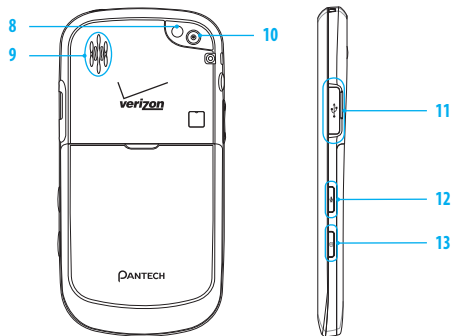 

8. Self-Portrait Mirror

9. Speaker

10. Camera Lens

11. Charging/Data Jack

12. AVC Key

13. Camera Key

## KEY DESCRIPTIONS

The following list correlates to the previous page's phone illustration.

1. **Lock/Power Key:** Press and hold to turn the phone on or off.
2. **Earpiece:** Allows you to hear the other caller.
3. **Touch Screen:** Tap the touch screen to access the menu or perform phone functions.
4. **Home Key:** Tap to return to the Menu mode screen. In Menu mode, tap to view the touch screen in 3D view. Tap and hold to open the Task Manager screen.
5. **Wrist Strap Eyelet:** Accessory eyelet (attach optional straps and lanyards – purchased separately).
6. **Headset Jack:** Plug in an optional headset for convenient handsfree conversations or for listening to music.
7. **Volume Keys:** With the phone in the unlocked, from the Menu mode, press to adjust the phone's volume. When a call comes in, press to silence the call ringtone. During a call, press to adjust the earpiece volume. In Speakerphone mode, press to adjust the speaker volume. During playback, press to adjust the music volume.
8. **Self-Portrait Mirror:** Displays your reflection when taking photos or recording videos.
9. **Speaker:** Music, ringtones, and sounds are played through the external speaker.
10. **Camera Lens:** The lens of your built-in camera and camcorder.

01

02

03

04

05

06

07

08

- 11. Charging/Data Jack:** Connects to the USB cable for data transferring or charging when attached to the Wall/USB Adapter.
- 12. AVC Key:** With the phone in the unlocked, from the Menu mode, press to launch the Voice Commands menu.
- 13. Camera Key:** With the phone in the unlocked, from the Home screen, press to turn on the camera; Press and hold to turn on the camcorder. In Camera mode, press to take a photo, or in Camcorder mode, press to record a video.

## DISPLAY INDICATORS

Icon	Icon Descriptions
	<b>D Signal Strength:</b> Indicates your phone is in the digital network. More bars indicate a stronger signal.
	<b>3G Signal Strength:</b> Indicates your phone is in the EVDO (3G) network. More bars indicate a stronger signal.
	<b>1X Signal Strength:</b> Indicates your phone is in the CDMA 1X network. More bars indicate a stronger signal.
	<b>3G &amp; 1X Signal Strength:</b> Indicates your phone is in the EVDO (3G) and CDMA 1X networks. More bars indicate a stronger signal.
	<b>3G &amp; D Signal Strength:</b> Indicates your phone is in the EVDO (3G) and digital networks. More bars indicate a stronger signal.
	<b>Airplane Mode:</b> Transmitting and receiving information is restricted.
	<b>Music Only Mode:</b> Indicates your phone is in Music Only mode.
	<b>Roaming:</b> Indicates your phone is outside of the home service area.
	<b>Femto Cell:</b> Indicates that this area has enhanced service coverage indoors.

Icon	Icon Descriptions
	<b>SSL (Secured Socket Layer):</b> Indicates that secure communication between client and server has been established during data communication using encryption.
	<b>Voice Privacy:</b> Indicates Voice Privacy mode is active.
	<b>Data Call:</b> Indicates a data call is in progress.
	<b>Dormant:</b> Indicates phone is in a dormant state during a data call. Phone reverts to Dormant mode when there hasn't been activity on a page for some time - the connection is still active and you can make and receive calls.
	<b>No Service:</b> Indicates no phone service is available.
	<b>TTY:</b> Indicates TTY mode is active.
	<b>Voice Call:</b> Indicates a voice call is in progress.
	<b>E911:</b> Location (GPS) service is set to E911 Only for emergency calls.
	<b>Location On:</b> Location (GPS) service is set to Full Detection.
	<b>Bluetooth:</b> Indicates Bluetooth® mode.
	<b>Bluetooth Active:</b> Indicates Bluetooth Active mode.
	<b>Bluetooth Connected:</b> Indicates a Bluetooth device is paired with your phone.
	<b>Music Pause Mode:</b> Indicates that music playback is paused.
	<b>Music Playing Mode:</b> Indicates that music is playing.
	<b>AVR Active:</b> Advanced Voice Command feature is active.

01

02

03














04























05

06

07

08

Icon	Icon Descriptions
	<b>AVR Listening:</b> Indicates your phone recognizes your voice command.
	<b>Battery Level:</b> Indicates the battery charging level - the more bars, the stronger the power.
	<b>All Sounds Off:</b> Indicates phone sounds are set to off.
	<b>Alarm Only:</b> Indicates the phone will alert you only with an alarm tone.
	<b>Vibrate On:</b> Indicates Alert Vibrate for incoming calls is set to on.
	<b>Voicemail:</b> Indicates you have a new voicemail.
	<b>Alert Voicemail:</b> Indicates a new voicemail.
	<b>Missed Calls:</b> Indicates you have missed calls.
	<b>Message:</b> Indicates you have new messages.
	<b>Alert Messages:</b> Indicates a new message.
	<b>Calendar Appointment:</b> Indicates an alarm for your appointment is active.
	<b>Alarm On:</b> Indicates an alarm is set.
	<b>Speakerphone:</b> Indicates Speakerphone mode is active.

Recent Call Icons	
	Dialed Call
	Missed Call
	Received Call
New Contact Icons	
	Mobile
	Mobile 2
	Home
	Business
	Fax
	Personal E-mail
	Business E-mail
	IM Screen Name
	AIM
	Yahoo!
	WL Messenger
	Address
	Ringtone
	Group
	Speed Dial
	Title
	Company
	Birthday
	Note

 
 


## Message Icons

	Unread Message		Received Read Message
	Read Message		Multiple Message Sent
	Unread EMS		Message Delivered
	Read EMS		Multiple Message Delivered
	Unread MMS Notification		Sent Message Delivery Failed
	Read MMS Notification		Multiple Message Failed
	Unread Corrupt Message		Pending Message Send
	Read Corrupt Message		Multiple Message Pending
	Unread Wap Push		Incomplete Delivery
	Read Wap Push		Multiple Message Incomplete
	Unread MMS		Text Message Draft
	Read MMS		Picture Message Draft
	Sent Message		Priority
	Received Unread Message		Message Locked

## INSTALLING THE BATTERY

- Slide the battery into the slot (1) by aligning the contacts and push down (2) until you hear the "click."



- Align the cover tabs with the slots on the back of the phone and slide the battery cover onto the unit until it snaps into place.




If the battery is not correctly placed in the compartment, the phone will not turn on and/or the battery may detach during use.



## REMOVING THE BATTERY

 1. To remove the battery cover, insert your finger tip into the slot (1), then push down on the top of the battery cover and slide it off (2).
2. Insert your fingernail into the slot and lift the battery from the compartment.
3. Align the cover tabs with the slots on the back of the phone and slide the battery cover onto the unit until it snaps into place.




## CHARGING THE BATTERY

1. Connect the USB data cable into the cableless wall adapter.
2. Plug the USB data cable into the phone's charging/data jack (making sure to align the connector as it appears in the image to the right) and the wall adapter end into an electrical outlet.



 
If the battery connector is not properly aligned, damage could occur to the charging connector and the phone may not be charged.

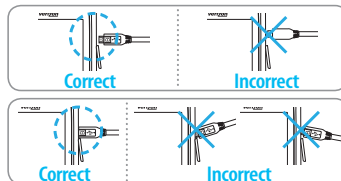

3. To remove the wall charger, unplug the USB data cable from the phone's charging/data jack.



- When you charge the battery with the handset powered off, you will see a charging status screen. After charging is completed, the Charge Complete message appears and you cannot operate the phone until it is powered on. To turn your phone on, press and hold the Power Key  until your display turns on.
- The battery may not be fully charged at the time of purchase. Fully charge the battery before using.
- It is more efficient to charge the battery with the handset powered off.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.



01

02

03

04

05

06

07

08