

BATTERY HANDLING INFORMATION

DO'S

- Only use the battery and charger approved for use with the CDM8992.
- Only use the battery for the system for which it is specified.
- Only use or replace the battery with a charging system or another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Only use the battery for its original purpose. As an improper battery use may result in a fire, explosion or other hazard.
- Try to keep batteries in a temperature between 41°F (5°C) and 95°F (35°C). If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly and promptly dispose of the battery according to local laws.
- Battery usage by children should be supervised.

DON'TS

- Don't attempt to disassemble or open the battery – it is a sealed unit with no serviceable parts.
- Don't crush, bend or deform, puncture or shred the battery.
- Don't drop the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Don't leave the battery in extremely hot or cold temperatures. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Don't accidentally short-circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery.
- Don't short-circuit a battery or allow metallic conductive objects to contact battery terminals.
- Don't dispose of the battery by placing into a fire.

BASIC OPERATION

2

This chapter addresses and explains the basic features for CDM8992 including:

TURNING THE PHONE ON AND OFF
USING THE TOUCH SCREEN
USING THE HOME SCREEN
LOCKING OR UNLOCKING THE TOUCH SCREEN AND KEYS
USING THE TASK MANAGER
MENU SUMMARY
MAKING A CALL
ANSWERING A CALL
MISSED CALL NOTIFICATION
WAIT/PAUSE FEATURE

MAKING AN INTERNATIONAL CALL
3-WAY CALLING
CALL WAITING FUNCTION
CALLING A NUMBER FROM CONTACTS
ADJUSTING THE MASTER VOLUME
SPEAKERPHONE MODE
AVAILABLE OPTIONS DURING A CALL
MAKING AN EMERGENCY CALL
USING THE DIRECTORY SERVICE



CDM8992


TURNING THE PHONE ON AND OFF


TURNING THE PHONE ON

1. Press and hold the Power Key  until the touch screen turns on.
2. Enter your 4-digit lock code if the phone is locked.

 The default lock code is the last 4 digits of your phone number.

TURNING THE PHONE OFF

1. Press and hold the Power Key .
2. Tab **Yes**.

-  • Immediately change or recharge the battery when “BATTERY LOW” appears on the display. Memory may possibly be damaged if the phone turns off due to the battery completely draining.
- Turn the phone off before removing or replacing the battery. If the phone is on, unsaved data may be lost.

USING THE TOUCH SCREEN

The touch screen of your phone allows you to select items and perform functions. The following finger actions help you easily understand how to use the touch screen.

CAUTION:

- Do not use sharp tools to avoid scratching the touch screen.
- Do not allow the touch screen to come in contact with water or chemicals. The touch screen may malfunction in humid conditions or in chemicals.
- Do not sit on your phone to prevent from damaging the touch screen.

Tap: Tap once to select or access a menu or an option.



 
Tap and hold: Tap an item and hold it for more than 2 seconds to perform functions.




Scroll: Tap and drag your finger up, down, left, or right to scroll through items on lists.




Drag: Tap and hold your finger on an item and move your finger without losing contact with the screen to move the item.



 Drag and drop: Tap and drag your finger on an item to select and move it, then lift your finger to drop the item into place.



 Swipe: Tap and drag your finger repeatedly to quickly move to a list or screen.



01

02

03

04

05

06

07

08

USING THE HOME SCREEN

Your phone's home screen has three different screens which allow you to access main menus, multimedia shortcuts and favorite contacts.

To access the home screen unlock the screen and tap the Home Key.

To access another screen, tap the desired screen.



ACCESSING MENUS

1. To access Menu mode from the idle screen, unlock the screen. The Menu mode screen automatically appears.
2. Tap the menu you want.
3. Tap **Back** to move back one level. Tap the Home Key to return to the Menu mode screen.

USING FAVORITE CONTACTS

With widgets, you can conveniently use web services, such as social network and messenger services.

1. Unlock the screen.
2. From the Menu mode screen, swipe the screen left to move to the widget screen.
3. Drag your finger up or down to view more widgets.
4. Tap the widget icon you want to access.
5. When the phone is connected to the corresponding website, follow the on-screen prompts.

 For service availability, contact your service provider.


USING MULTIMEDIA SHORTCUTS

Multimedia shortcuts allow you to quickly access your favorite items such as music, pictures, and videos.

ACCESSING A SHORTCUT ITEM

1. Unlock the screen.
2. From the Menu mode screen, swipe the screen right to move to the multimedia shortcut screen.
3. Tap the item you want to access.

ADDING AN ITEM

1. From the multimedia shortcut screen, tap .
2. Tap **Add** and then tap either **My Music**, **My Picture**, **My Video** or **Shortcuts**.
3. Select an item and tap **Add**. The selected item is shown on the screen.
4. Tap **Done**.

01

02

03

04


05

06

07

08

DELETING AN ITEM

1. From the multimedia shortcut screen, tap .
2. Tap **Remove**.
3. Tap the item to delete and then tap **Remove**.
4. Tap **Yes** to confirm.

LOCKING OR UNLOCKING THE TOUCH SCREEN AND KEYS

When your phone is closed or idle, the touch screen and keys are automatically locked to prevent any unwanted phone operations. To unlock, drag [ICON] to up if the phone is open and idle.

USING THE TASK MANAGER

You can manage multiple applications that are running at the same time. Switch to other applications without closing the current application you are using.

1. Unlock the screen.
2. Tap and hold the Home Key to open the Task Manager screen. The list of applications appears.
3. Use the following functions to control applications:
 - To switch to another application, tap the desired application from the list.
 - To close all applications, tap **Close All**.
 - To return to Menu mode, tap **Main Menu**.
 - To return to the previous menu, tap **Back**.

MENU SUMMARY

Main Menu	2 ND Depth	3 RD Depth	4 TH Depth
1. Media Center	1. Apps		
	2. Search		
	3. Browser		
	4. Music & Tones	1. My Ringtones 2. My Music	1. Ringtones 2. Play All Songs 3. Playlists 4. Artists 5. Genres 6. Albums 7. Manage My Music 8. Sync Music 9. Music Alert 10. Sound Effects 11. Airplane Mode 12. Music Only Mode
	5. Picture & Video	3. My Sounds 4. Sync Music 1. V CAST Videos 2. My Pictures 3. My Video 4. Take Picture 5. Record Videos 6. Online Album	1. Sounds
2. Messaging	1. New Message	1. Text Message 2. Picture Message 3. Video Message 4. Voice Message	
	2. Inbox		
	3. Sent		
	4. Drafts		

01

02

03

04

05

06

07

08

Main Menu	2 ND Depth	3 RD Depth	4 TH Depth
	5. Voicemail	1. Call Voicemail 2. Clear Counter 3. Visual Voicemail	
	6. Visual Voicemail		
	7. Mobile IM		
	8. Email	1. Mobile Email 2. Mobile Web Mail	
3. Contacts	1. In Case of Emergency	1. Personal Info	
	2. Contact Detail		
	3. Edit Contacts		
	4. My Name Card		
	5. New Contacts		
4. Recent Calls	1. All Calls		
	2. Missed Calls		
	3. Received Calls		
	4. Dailed Calls		
5. Tools	1. Voice Commands		
	2. Calculator		
	3. Tip Calculator		
	4. Calendar		
	5. Alarm Clock		
	6. Stop Watch		
	7. World Clock		
	8. Unit Converter		
	9. Notepad		
	10. USB Mass Storage		

Main Menu	2 ND Depth	3 RD Depth	4 TH Depth
	1. Bluetooth Settings	1. Add New Device 2. Device Name	
	2. Sounds Settings	1. Master Volume 2. Ringtones 3. Caller ID Readout 4. Emergency Tone 5. Alert Vibrate 6. Alert Reminder 7. Power On/Off Sound 8. Service Alerts 9. Touch Audio Feedback 10. Digit Dial Readout 11. Device Connect	
6. Settings	3. Display Settings	1. Wallpapers 2. Banners 3. Main Menu Settings 4. Backlight Timer 5. Backlight Brightness 6. Display Theme 7. Font Type 8. Dial Fonts 9. Menu Font Size 10. Clock Format	
	4. Touch Settings	1. Touch Vibrate	1. Touch Vibrate Feedback 2. Vibrate Level
	5. Phone Settings	1. Voice Commands Settings 2. Language 3. Location 4. Current Country	
		5. Security	1. Edit Codes 2. Restrictions 3. Phone Lock Setting 4. Lock Phone Now 5. Restore Phone

01

02

03

04

05




06

07

08

Main Menu	2 ND Depth	3 RD Depth	4 TH Depth
		6. System Select	
		7. NAM Select	1. Auto NAM 2. Change NAM
6. Call Settings		1. Home Key to Answer 2. Auto Answer with Handsfree 3. Auto Retry 4. TTY Mode 5. Voice Privacy 6. DTMF Tones 7. Assisted Dialing	
7. Memory		1. Save Options	1. Pictures 2. Videos 3. Sounds
		2. Phone Memory	1. Phone Memory Usage 2. My Pictures 3. My Videos 4. My Ringtones 5. My Music 6. My Sounds 7. My Contacts 8. Move All to Card
		3. Card Memory	1. Card Memory Usage 2. My Pictures 3. My Videos 4. My Ringtones 5. My Music 6. My Sounds 7. My Contacts 8. Move All to Phone
8. USB Mode			
9. Phone Info		1. My Number 2. SW/HW Version 3. Icon Glossay 4. Software Update 5. Operating System	

MAKING A CALL

1. Unlock the screen and tap **Keypad** .
2. Enter an area code and a phone number.
 - To erase one digit at a time, tap .
 - To erase the entire number, tap and hold .
3. Tap **Call** to dial the number.
To access menus during a call, tap the Home Key.
4. To end the call, tap **END**.



- If **Auto Retry** is set to on, the phone will automatically re-dial the number (Refer to page 75).
- You can also make a call by using the Voice Commands feature. Please refer to page 50 for more details.

ANSWERING A CALL

1. When a call comes in, unlock the screen and tap **ANSWER**.
 - To ignore the incoming call, tap **IGNORE**.
 - To silence the call ringtone, tap **QUIET**.
2. To end the call, tap **END** or slide the phone down.



- If **Auto Answer with Handsfree** is set to on, an incoming call is answered automatically after about a few seconds (Refer to page 75).

 
MISSED CALL NOTIFICATION

When an incoming call is not answered, the missed call icon appears on the touch screen.

TO DISPLAY THE MISSED CALL ENTRY FROM THE NOTIFICATION SCREEN:

1. Tap **View Now**.
2. To check the missed call notification at another time, tap **View Later**.

TO DISPLAY A MISSED CALL ENTRY FROM RECENT CALLS:


1. Unlock the screen and tap **Recent Calls** .
2. Tap **Missed Calls**.
3. Select an entry from the list.
4. To dial the phone number, tap **Call**. Or, to send a Text, Picture, Video or Voice Message to the caller, tap **Send Message**.

WAIT/PAUSE FEATURE

Pauses are used for automated systems (i.e., voice mail or calling cards). Insert a pause after a phone number and then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.


Wait (W)

The phone pauses dialing and resumes dialing the next number when you tap **CALL**.



1. Unlock the screen and tap **Keypad** .
2. Enter a phone number.
3. Tap **More** and then tap **Wait**.
4. Enter the additional number(s).
5. Tap **Call** to dial or **Save** to save the number.

2-Sec Pause (P)

The phone waits 2 seconds before sending the next string of digits automatically.


1. Unlock the screen and tap **Keypad** .
2. Enter a phone number.
3. Tap **More** and then tap **2-Sec Pause**.
4. Enter additional number(s) (pin number or credit card number).
5. Tap **Call** to dial or **Save** to save the number.

MAKING AN INTERNATIONAL CALL

1. Unlock the phone and tap **Keypad** .
2. Tap and hold . The + required for international calls appears.
3. Enter the country code, area code, and phone number, then tap **Call**.
4. To end the call, tap **END**.

3-WAY CALLING

With 3-Way Calling, you can talk to two people at the same time. When using this feature, normal airtime rates will be applied for each of the two calls.

1. Unlock the phone and tap **Keypad** .
2. Enter a phone number and tap **Call**.
3. Once you have established the connection, tap **Keypad** and enter the second phone number you wish to call, and tap **Call**.
4. When you're connected to the second party, tap **MERGE CALLS** to begin your 3-way call.
5. To end the last dialed call, tap **END LAST DIALED CALL**.
To end all calls, tap **END ALL CALLS**.



If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three calls will be disconnected.

CALL WAITING FUNCTION

If you are on a call and you receive another incoming call, you will hear a beep and the caller's phone number will appear on the display. With Call Waiting, you may put the active call on hold while you answer the other incoming call.

1. To answer another call while on the phone, tap **HOLD CALL AND ANSWER INCOMING**.

This places the first call on hold.

01

02

03

04

05




06


07

08


 




2. To switch back to the first caller, tap **SWAP CALLS**.
3. To end all calls, tap **END ALL CALLS**.


CALLING A NUMBER FROM CONTACTS

1. With the phone in the unlocked, from the Menu mode, tap **Contacts** .
2. Tap the first letter of the contact name you want, or tap  and scroll to a contact from the contact list.
3. Tap  to dial the contact number.

 If the contact has more than two numbers, the default number of the contact will be dialed.

ADJUSTING THE MASTER VOLUME

1. With the phone in the unlocked position, from the Menu mode, press the Volume Keys up  or down .
2. Tap  or , or press the Volume Keys up  or down  to adjust the volume level.
To hear the phone's volume, tap **Play** on the Master Volume menu.
3. Tap **Set** to save the setting.

 Press the Volume Keys up or down / to adjust the earpiece volume during a call.

SPEAKERPHONE MODE

The Speakerphone feature lets you hear audio through the phone speaker and talk without holding the phone.

1. During a call, tap **Speaker** to activate Speakerphone mode.
2. To switch back to Phone mode, tap **Speaker** again.

AVAILABLE OPTIONS DURING A CALL

During a phone call, you can access the following options:

- **Mute:** Allows you to turn off your phone's microphone so that the other person cannot hear you.
- **Speaker:** Allows you to talk and hear through the phone's speaker.
- **Bluetooth:** Allows you to use the Bluetooth feature.
- **Keypad:** Opens the dial screen.

MAKING AN EMERGENCY CALL

The E911 feature automatically places the phone in Emergency call mode when you dial the preprogrammed emergency number, "911." It also operates in Lock mode and out of the service area.

E911 IN LOCK MODE


When you lock the phone by using the **Lock Phone Now** setting (refer to page 73) or you are out of the service area, to make an emergency call:

1. When "**Enter Code**" appears, tap **E911**.
2. Tap **Yes** to dial.

The phone maintains Emergency mode for about 5 minutes. When the call ends, the phone returns to Lock mode.

E911 USING ANY AVAILABLE SYSTEM

To make an emergency call using any available system:

1. With the phone in the unlocked position, from the Menu mode, tap **Keypad** .
2. Enter "**911**" and tap **Call**.
3. The phone will stay in Emergency mode for about 5 minutes. While the phone is in Emergency mode you can receive an incoming call from any available system or you can make outgoing calls even in Emergency callback mode.

01

02

03

04

05


06

07

08

USING THE DIRECTORY SERVICE

You can make a call to the directory service to find out your local numbers.

1. With the phone in the unlocked position, from the Menu mode, tap **Keypad** .
2. Enter “**411**” and tap **Call**.

MEMORY FUNCTION 3

This chapter addresses memory functions including:

ENTERING TEXT

STORING A PHONE NUMBER

EDITING CONTACT ENTRIES

DEFAULT NUMBERS

BACKUP ASSISTANT™

SENDING A NAME CARD

SPEED DIALING




CDM8992

ENTERING TEXT

Learn to enter text by using the virtual keypad on your touch screen.

CHANGING THE TEXT INPUT MODE

 1. In text entry mode, tap the **Add Text** field to display the virtual keypad.
2. Change the text input mode - see the chart below.
3. Tap the virtual keys to enter text.

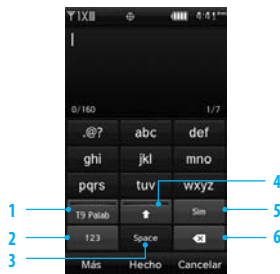

Number	Function
1	Switches to T9 Word or ABC mode. When T9 Word mode is activated, the key turns to show the line in a red color.
2	Switches to Number mode.
3	Inserts a space.
4	Changes case.
5	Switches to Symbol mode.
6	Clears the entered characters.

ENTERING TEXT USING INPUT MODES

When entering text with the keypad, you can use the following modes:

Mode	Function
T9 Word	1. Tap the appropriate virtual keys to enter an entire word. 2. When the word displays correctly, tap Space to insert a space and enter the next word. If the correct word does not display, tap the pop-up window and select an alternate word.
abc	Tap the appropriate virtual keys until the character you want appears on the display.
123	Tap the appropriate virtual keys to enter a number.
Symbol	Tap the appropriate virtual keys to enter a symbol.

ENTERING TEXT USING THE QWERTY KEYBOARD

You can enter text by using the virtual QWERTY Keyboard.

1. Tap the **Add Text** field.
2. Rotate the phone counter-clockwise to landscape view. The QWERTY Keyboard screen appears.
3. Enter text as you would use your computer's keyboard.



Number	Function
1	Changes case.
2	Switches to Number mode.
3	Clears the entered characters.
4	Starts a new line.
5	Inserts a space.

STORING A PHONE NUMBER

The Contact list stores up to 1000 entries.

ADDING A NEW CONTACT

1. With the phone in the unlocked position, from the Menu mode, tap **Keypad**



2. Enter a phone number and tap **Save**.
3. Tap **Add New Contact**.



Use **Update Existing** to add another phone number to a contact that is already stored in memory.

4. Select a number type (**Mobile/Home/Business/Mobile 2/Fax**).
5. Tap the **Name** field.
6. Enter the contact name and tap **Done**.
7. Enter additional contact information, if necessary.
8. Tap **Save** to save the contact.
9. The contact number re-appears on the screen, tap **Call** to dial the number.

EDITING A CONTACT

Once the basic phone number and name information is stored in your Contacts, you can edit the contact information.

1. Unlock the screen and tap **Contacts**
2. Tap the desired contact and then tap **Edit**.
3. Tap the information field you want to edit.
4. Change the data as necessary, then tap **Save** to update the contact entry.

ADDING OR CHANGING GROUPS

To organize your Contacts into groups:

1. Unlock the screen and tap **Contacts**
2. Tap the desired contact and then tap **Edit**.
3. Scroll down and tap the **Group** field.

4. Tap a group and then tap **Done**. To create a new group, tap **New Group** and then enter the name and tap **Done**.
5. Tap **Save** to update the contact entry.

CHANGING THE CALL RINGTONE

To identify who is calling by setting different ringtones for different phone numbers in your Contacts:

1. Unlock the screen and tap **Contacts**
2. Tap the desired contact and then tap **Edit**.
3. Scroll down and tap the **Ringtone** field.
4. Select a ringtone by tapping the ringtone name in the **Change to** field.
5. Tap **Save** to update the contact entry.

SETTING A PICTURE CALLER ID

Picture caller ID displays the picture of the person calling when your phone rings. If the caller's identity is stored with a picture in Contacts, the name and picture appear on the screen.

To select a picture to assign to a contact:

1. Unlock the screen and tap **Contacts**
2. Tap the desired contact and then tap **Edit**.
3. Tap the picture frame on the **Name** field.
4. Tap a picture.
5. Tap **Change**.
6. Tap **Save** to update the contact entry.

ADDING AN EMAIL ADDRESS

To add an email address to a contact entry:

1. Unlock the screen and tap **Contacts**
2. Tap the desired contact and then tap **Edit**.
3. Scroll down, and tap **Personal Email** or **Business Email**.

01

02

03

04

05

06


07

08

4. Enter an email address and tap **Done**.
5. Tap **Save** to update the contact entry.

ADDING A SPEED DIAL ENTRY

To add an entry to speed dial:

1. Unlock the screen and tap **Contacts** .
2. Tap the desired contact and then tap **Edit**.
3. Scroll down and tap the **Speed Dials** field.
4. Tap the contact's number you would like to assign, if applicable.
5. Enter the speed dial number you want to set and tap the entered number from the list.


 You can also tap  and select a speed dial number directly from the list.

6. Tap **Save** update the contact entry.


EDITING CONTACT ENTRIES

You can edit a contact by changing or deleting a phone number, name, and speed dial number.

EDITING A PHONE NUMBER FROM THE DIAL SCREEN



1. Unlock the screen and tap **Keypad** .
2. Enter the phone number you want to save (up to 32 digits) and tap **Save**.
3. Tap **Update Existing**.
4. Tap an existing contact entry.
5. Tap a number type.
6. If the number is already assigned to the type you selected, tap **Yes** to overwrite the existing entry.

ADDING A PHONE NUMBER FROM THE CONTACT LIST



1. Unlock the screen and tap **Contacts** .
2. Tap the desired contact and then tap **Edit**.

3. Tap the number type you want to add.
4. Enter a phone number and tap **Done**.
5. Tap **Save** to update the contact entry.



EDITING A STORED PHONE NUMBER

1. Unlock the screen and tap **Contacts** .
2. Tap the desired contact and then tap **Edit**.
3. Tap the number type you want to edit.
4. Tap  and enter a new number, and tap **Done**.
5. Tap **Save** to update the contact entry.


EDITING A STORED NAME

1. Unlock the screen and tap **Contacts** .
2. Tap the desired contact and then tap **Edit**.
3. Tap the **Name** field.
4. Tap  and enter a new name, and tap **Done**.
5. Tap **Save** to update the contact entry.

DELETING A PHONE NUMBER FROM A CONTACT

1. Unlock the screen and tap **Contacts** .
2. Tap the desired contact and then tap **Edit**.
3. Select a number type to be deleted.
4. Tap and hold  and tap **Done** to delete the number.
5. Tap **Save** to update the contact entry.

DELETING A CONTACT ENTRY

1. Unlock the screen and tap **Contacts** .
2. Tap the contact to be deleted.
3. Tap **Erase** and then tap **Yes**.

01

02

03

04


05

06

07

08


DELETING A SPEED DIAL NUMBER

1. Unlock the screen and tap **Contacts** .
2. Tap **More** and then tap **Speed Dials**.
3. Tap the speed dial number to be deleted.
4. Tap **Remove** and then tap **Yes**.

DEFAULT NUMBERS


You can set each default number for your contacts.

SETTING THE DEFAULT NUMBER

1. Unlock the screen and tap **Contacts** .
2. Tap the desired contact and then tap **Edit**.
3. Scroll down and tap the **Default Number** field.
4. From the **Change to** field, tap the phone number to set as the default number.
5. Tap **Save** to update the contact entry.


BACKUP ASSISTANT™

Backup Assistant™ is a wireless service that stores a copy of your Contact list to a secured website.

1. Unlock the screen and tap **Contacts** .
2. Tap **More** and then tap **Backup Assistant**.
3. Follow the on-screen prompts.

SENDING A NAME CARD

You can send a contact as the name card via message or Bluetooth.

1. Unlock the screen and tap **Contacts** .
2. Tap **More** and then tap **Send Name Card**.

3. Select one of the following sending options:

- **Send via Bluetooth:** Allows you to send a name card via Bluetooth.
- **Send via Text Msg:** Allows you to send a name card via Text Message.
- **Send via Picture Msg:** Allows you to send a name card via Picture Message.
- **Send via Video Msg:** Allows you to send a name card via Video Message.
- **Send via Voice Msg:** Allows you to send a name card via Voice Message.

4. Tap the desired contact(s) and then tap **Done**.

5. Tap **Add Recipient** and select one of the following sending options:

- **From Contacts**
- **From Favorites**
- **From Recent Calls**
- **Enter Number**
- **Groups**

6. Tap the desired recipient(s) and then tap **Done**.

7. Tap **Send** to send the contact as a name card via the selected sending option.

SPEED DIALING

Ideal for frequently dialed numbers, this feature allows contact entries to be dialed via the virtual keypad with only one or two key tapping.

To open the dial screen from Menu mode, tap **Keypad** .

- **2-9:** Tap and hold the number you wish to connect to for more than 1 second. **1** is already assigned for your voicemail box.
- **10-94:** Tap the first digit and tap and hold the second digit of the number to dial.
- **95, 96, 97, 98 and 99:** Speed Dial entries **95 (#Warranty Center)**, **96 (#DATA)**, **97 (#BAL)**, **98 (#MIN)** and **99 (#PMT)** are already assigned for Verizon Wireless Account Information.

MENU FUNCTION 4

This chapter addresses accessing the menu and using its functions and features to customize your CDM8992

RECENT CALLS

MY VERIZON

TOOLS

VOICE COMMANDS
CALCULATOR
TIP CALCULATOR
CALENDAR
ALARM CLOCK
STOP WATCH
WORLD CLOCK
UNIT CONVERTER
NOTEPAD
USB MASS STORAGE

SETTINGS

AIRPLANE MODE
MUSIC ONLY MODE
BLUETOOTH
SOUND SETTINGS
DISPLAY SETTINGS
TOUCH SETTINGS
PHONE SETTINGS
CALL SETTINGS
MEMORY
USB MODE
PHONE INFO




CDM8992

RECENT CALLS


The **Recent Calls** menu is a list of the recent phone numbers or Contact entries for calls you placed, accepted, missed, or blocked. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.


MISSED CALLS

Displays information about the most recently missed calls. Place a call to a missed call by simply tapping .

1. Unlock the screen, tap **Recent Calls**  and then tap **Missed Calls**.
2. Tap the desired call log to view details or tap **More** to access the options by referring to **All Calls**.
3. Tap **Call** to dial, or tap **Send Message** to send a message to the number.
If the number is not stored in Contacts, tap **Save to Contacts** to save the number.

RECEIVED CALLS

Displays information about the most recently received calls. Place a call to a received call by simply tapping .

1. Unlock the screen, tap **Recent Calls**  and then tap **Received Calls**.
2. Tap the desired call log to view details or tap **More** to access the options by referring to **All Calls**.
3. Tap **Call** to dial, or tap **Send Message** to send a message to the number.
If the number is not stored in Contacts, tap **Save to Contacts** to save the number.

DIALED CALLS

Displays information about the most recently dialed numbers. Place a call to a dialed call by simply tapping .

1. Unlock the screen, tap **Recent Calls**  and then tap **Dialed Calls**.

2. Tap the desired call log to view details or tap **More** to access additional options.
3. Tap **Call** to dial, or tap **Send Message** to send a message to the number.
If the number is not stored in Contacts, tap **Save to Contacts** to save the number.

BLOCKED CALLS

This menu appears only when incoming calls are restricted in the **Restrictions** menu.

1. Unlock the screen and tap **Recent Calls** .
2. Tap **More** and then tap **Blocked Calls**.
3. Enter the 4-digit lock code.




The default lock code is the last 4 digits of your phone number.

4. Select a call log to view details.

ALL CALLS

Displays information about all of the most recent calls you have received, dialed, and missed.

1. Unlock the screen, tap **Recent Calls** . The **All Calls** log is displayed.
2. Tap the desired call log to view details or tap **More** to access the following options:
 - **Sort by**: Changes the sort order of call logs.
 - **Erase**: Deletes a call log or multiple call logs.
 - **Erase All**: Deletes all call logs.
 - **View Timers**: Allows you to view the call timers by call type.
 - **Blocked Calls**: Allows you to view blocked calls, if applicable.
3. From the desired call log, tap **Call** to dial, or tap **Send Message** to send a message to the number.
If the number is not stored in Contacts, tap **Save to Contacts** to save the number.

01

02

03

04

05

06

07

08