

PT003

Basic Manual

read this manual to master
the cellular phone

www.au.kddi.com

Illustrations and
Screenshots
in This Manual

Notes on
Cell Phone Use

Contents

Getting Ready

Making and
Answering Calls

Character Input

Phone Book

Pair Function

Mail

Camera

EZweb

EZ News Flash

EZ Navi

In Case of
Loss of Your PT003

Troubleshooting

Index

Introduction

Thank you for purchasing the PT003. Before using your PT003, be sure to read the PT003 Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

Manuals for the PT003

There are three manuals for the PT003: the Basic Manual, printed Instruction Manual (Japanese) and printed full Instruction Manual (Japanese).

- **For learning the basics:**

Read the PT003 Basic Manual (this manual) or printed PT003 Instruction Manual (Japanese).

- **For learning details on using each function:**

The printed full Instruction Manual (Japanese) gives detailed instructions on using each function.

To ensure proper usage of the PT003, be sure to read the Safety Precautions “安全上のご注意” in the Instruction Manual.

The keyword searchable au Online Manual is also available on the au homepage:

<http://www.au.kddi.com/manual/index.html>


 



 



- To access from EZweb (Packet communication charges do not apply.):

 ⇒ Top Menu/Search ⇒ *au*お客様サポート (au Customer Support) ⇒ オンラインマニュアル (Online Manual)

Illustrations and Screenshots in This Manual

Note on Illustrations

The illustrations in this manual may look different from the actual cell phone in shape, color and typeface. The key illustrations are also simplified as shown below.

	Key Illustration		Key Illustration
①		⑩	
②		⑪	
③			
④	<div> <div>1</div> <div>2</div> <div>3</div> <div>4</div> <div>5</div> <div>6</div> <div>7</div> <div>8</div> <div>9</div> <div>*</div> <div>0</div> <div>#</div> </div>		
⑤	<div> <div>●</div> <div>↻</div> <div>↺</div> </div>		
⑥			
⑦			
⑧			
⑨			

Note on Screenshots

The screenshots in this manual are simplified and may look different from the actual cell phone screens.

- The display design themes of the PT003 vary by model color. The screenshots for the Navy Blue models are used in this manual.

Notes on Cell Phone Use

Cell Phone Etiquette

The cell phone always emits weak radio waves when power is on.

Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

- Use of cell phones is not allowed in some places.
 - Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
 - Using a cell phone in an aircraft is prohibited by law. Be sure to turn the cell phone off.
- Radio waves from cell phones may interfere with medical electrical equipment.
 - Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker. Turn the cell phone off in such places.
 - Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.
- Be considerate of where you use the cell phone and how loudly you talk.
 - Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode not to disturb others around you by ring tones.
 - Do not use the cell phone on a street where you might interrupt the flow of pedestrians.
 - Move to areas where you will not inconvenience others on trains or in hotel lobbies.
 - Refrain from talking in a loud voice.

- Obtain the permission of other people before you take their photos with the cell phone's camera.
- Do not record information with the cell phone's camera in bookstores and other locations where taking photos is not permitted.

Do not use the cell phone while driving!

Turn off your cell phone or put it in Drive Mode while driving.

 


Do not use the cell phone while driving a car/motorcycle or riding a bicycle. It may result in a traffic accident. Using a cell phone while driving is prohibited by law. Using a cell phone while riding a bicycle may also be punishable by law.

Prohibited!

- Looking at a cell phone display
- Talking on a cell phone while holding it

Drive Mode

In Drive Mode, a Japanese message meaning "I'm driving now, so I can't answer your call." is played when a call is received, and asks the caller to leave a message on the easy voice memo.

When the standby screen is displayed, press , use  to select Drive Mode, and then press  (OK).

Disaster Message Board Service


When a large scale disaster occurs, you can register your safety information from EZweb. The registered information can be referred from anywhere in Japan from EZweb or Internet.


Registering safety information

- When a large scale disaster occurs, from an au phone, you can register your safety information (i.e. your condition and comments) to the 災害用伝言板 (Disaster Message Board) created on the EZweb.
- After registration of your safety information, e-mail is sent to your family or acquaintances you have previously designated to notify that your safety information has been uploaded to the 災害用伝言板 (Disaster Message Board).

Inquiring for safety information

- You can inquire for safety information of a person by entering his/her phone number from EZweb or Internet.*
* To inquire from other carriers' cell phone, a PHS or PC, access "<http://dengon.ezweb.ne.jp/>".

Access	 ⇒ Top Menu/Search ⇒ 災害用伝言板 (Disaster Message Board)
	http://dengon.ezweb.ne.jp/

- Registered information is stored until the service set up for the disaster ends.
- The maximum available number of registrations is 10 per phone number. When the number of registrations exceeds 10, the oldest one is overwritten.
- The demonstration of this service can be referred to anytime by pressing  ⇒ Top Menu/Search ⇒ au お客さまサポート (au Customer Support) ⇒ 調べる (Search) ⇒ 災害用伝言板 (デモ版) (Disaster Message Board (Demo Version)).
- To view the Disaster Message Board in English, select English from the top menu of the Disaster Message Board.

Contents

Introduction

Illustrations and Screenshots in This Manual 1

Notes on Cell Phone Use 2

Cell Phone Etiquette	2
Do not use the cell phone while driving!	2
Disaster Message Board Service	3

Contents 4

Getting Ready 6

Checking the Contents of the Box	6
Names of Parts	7
Charging the Battery Pack	8
Learning the Basics	9
Turning On Power	10
Switching the Display Language to English	10
Initial Setup of E-mail and EZweb	10
Checking Your Phone Number and E-mail Address	10
Display Indicators	11
Using Main Menu	12
Changing Your E-mail Address	14
Security Code and Passwords	15

Making and Answering Calls 16

Making a Call	16
Making an International Call	16
Answering a Call	17

Returning a Call (Outgoing History/Incoming History)	17
One-ring Calls	17
Adjusting the Earpiece Volume during a Call	18
Turning On Manner Mode	18
Changing the Incoming Ring Tone	18
Adjusting the Incoming Ring Tone Volume	19
Turning On the Easy Voice Memo	19

Character Input 21

Character Entry Modes	21
Entering Alphanumeric Characters	21
Entering E-mail Addresses	22
Entering Pictograms	23

Phone Book 24

Saving a Phone Book Entry	24
Dialing from the Phone Book	24
Editing Phone Book Entries	24
Saving a Phone Number from the Incoming or Outgoing History	25

Pair Function 26

Registering a Pair Partner	26
Making a Call to a Pair Partner	26
Sending Mail to a Pair Partner	26

Mail 27

Using E-mail	27
Creating and Sending E-mail Messages	27
Reading Received E-mail Messages	28

Reading an E-mail Message with an Attached Photo or Movie	28	In Case of Loss of Your PT003	42
Replying to Received E-mail Messages	28	Setting Conditions for Activating the Remote Auto Lock	42
Rejecting Spam	29	Remotely Activating the Remote Auto Lock on Your PT00342	42
Using C-mail	29	Activating the Remote Auto Lock by the Security Lock Service	43
Creating and Sending C-mail Messages	29	Troubleshooting	44
Reading Received C-mail Messages	30	Index	46
Camera	31		
Photo Taking Tips	31		
About Photo Modes	31		
Taking a Photo	32		
Viewing Photos	32		
EZweb	33		
Accessing Sites	34		
Bookmarking Frequently Accessed Pages	35		
Viewing Bookmarked Pages	35		
Checking Charges	36		
Downloading Chaku-Uta®	36		
EZ News Flash	37		
Basic Operations	37		
Setting EZ News Flash	37		
EZ Navi	39		
Passenger Seat Navi for People in the Passenger Seat to Check the Route	39		
Security Navi to Check Where Your Kids Are	39		
EZ Navi Walk for When You Go Out	40		
Evacuate Navi to Guide You Home or to Nearby Evacuation Areas during Disasters	41		

Getting Ready

Checking the Contents of the Box

The box contains the cell phone and accessories.

- Cell phone
- Battery pack
- Instruction Manual (Japanese)
- Full Instruction Manual (Japanese)
- Warranty (Japanese)
- Safety Precautions (Japanese)
- Global Passport mobile rental service Owner's Guide (Japanese)
- JIBUN BANK Launcher Operation Guide (Japanese)
- au International Call Guide (Japanese)

- An AC adapter and microSD memory card are not included. Purchase a specified AC adapter (sold separately) and a commercially available microSD memory card.

Names of Parts

■ From the Front

■ From the Back

■ From the Sides

Charging the Battery Pack

The battery pack is not fully charged at the time of purchase. Be sure to charge the battery pack before using the cell phone for the first time.

- An AC adapter is not included. Purchase a specified AC adapter (sold separately).



- ➡ Unfold the power plug of the AC adapter and plug it into a 100 V AC power outlet.
- ➡ Confirm that the charging indicator lights.
 - Charging: The charging indicator lights.
 - Charging finished: The charging indicator goes out.
- Be sure to close the cover of the external connection jack when charging is finished.
- Do not pull or twist the cover of the external connection jack forcibly.

- ➡ Connect a specified AC adapter to the cell phone with the battery pack attached.
 - Open the cover of the external connection jack. Check the shape of the connector of the AC adapter, and plug it straight into the external connection jack.

Learning the Basics

 

■ Key Assignments


■ Side Key Assignments

- If you lose track of where you are or if you make a mistake, press  to return to the previous screen. Return to the standby screen by pressing .

Hiding/Redisplaying the Notification Window

 
Notification window

When the Notification window is displayed on the standby screen, you can temporarily hide it by pressing  and then display the Main menu by pressing .


To redisplay the hidden Notification window, press  when the standby screen is displayed.

Turning On Power

Hold down  for at least one second.

- You cannot receive or make calls if  (out of range indicator) is displayed.

Turning Off Power







When the standby screen is displayed, hold down  for at least three seconds.

Switching the Display Language to English

You can switch the display language for function names and other items to English.

When the standby screen is displayed, press .

- ➔ Use  to select 機能 (Settings) and then press  (選択 [Select]).

- ➔ Use  to select 画面表示 (Screen Setup) and then press  (選択 [Select]).
- ➔ Use  to select Set Language and then press  (選択 [Select]).
- ➔ Use  to select English and then press  (OK).

Initial Setup of E-mail and EZweb

To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the Customer Service Center.

Also, before use, you need to configure initial settings. Your e-mail address is assigned automatically in the initial setup.


 
When the standby screen is displayed, press .

- ➔ Press  (OK).



After a short while, your e-mail address is displayed.

- ➔ Press  (OK).

The initial settings are complete.

- You can also configure initial settings by pressing  or .

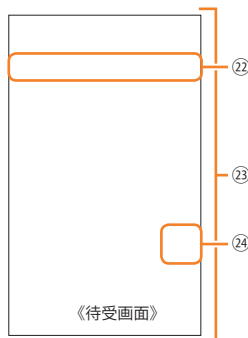
Checking Your Phone Number and E-mail Address

When the standby screen is displayed, press  and then .

Display Indicators

Display indicators inform you of mail arrival, current settings, etc.

Display





Indicator	Description
①	Signal strength
②	Battery level
③	microSD memory card (commercially available) inserted
④	During a call
	Connecting to EZweb
⑤	EZapps activated
	Connecting over SSL
⑥	Missed calls
⑦	Receiving EZ News Flash information
	New or unread e-mail/ C-mail
⑧	New or unread emergency earthquake bulletin
⑨	Displaying secret informations
⑩	Movable to next/ previous screen
	Scrollable

Indicator	Description
⑪	Current date and time
⑫	Easy voice memo set
⑬	Manner mode set
⑭	Alarm set
⑮	Schedule alarm set
⑯	Signal off mode set
⑰	USB connected
⑱	Ring tone off
⑲	Vibrator on
⑳	Auto lock activated
㉑	Side key disable feature on
㉒	— Ticker field
㉓	— Wallpaper
㉔	— Info pane
㉕	— Notification icon
㉖	— Shortcut menu

Sub-Display

Indicator	Description
①	Missed calls
②	New or unread e-mail
③	New or unread C-mail




- The date and time are set automatically.
- Press  /  to switch the sub-display screen.

Using Main Menu

 

You can access various functions from the Main menu. The Main menu patterns vary by model color. The screenshots for the Navy Blue models are used in this manual.

 

 

 
Model Color	Main Menu Pattern
Shiny Silver	Menu-Silver1
Navy Blue	Menu-Blue1
Light Pink	Menu-Pink1

You can use the Kantan menu by changing to the Kantan mode.

When the standby screen is displayed, press , use  to select Kantan mode, and then press  (Select).

 
Each Main menu pattern has a different set of items.

Menu-Silver1/ Menu-Blue1/ Menu-Pink1	Menu-List
 (Screen for Menu-Blue1)	
Alarm/Calendar	Alarm/Calendar
Tools	Tools
IrDA	IrDA
microSD	microSD
Data Folder	Data Folder
Camera	Camera
Calculator	Calculator
Settings	Settings
Kantan Mode	Kantan Mode

Menu-Silver2	Menu-Silver3	Menu-Blue2	Menu-Pink2	Kantan Menu
				
Calculator	Alarm	EZnavi	Calculator	Call
Alarm	Calendar	Data	Data	Camera Function
Camera	Kantan Mode	Calculator	IrDA	microSD
Security Navi	Tools	Tools	Tools	EZ Service
Data Folder	Camera	Camera	Camera	Data Folder
Calendar	Settings	Alarm/Calendar	Alarm/Calendar	Tools
SD Card Menu	EZnavi	IrDA	EZnavi	Memo
Tools	Data Folder	Settings	Settings	Settings
IrDA	microSD	Kantan Mode	Kantan Mode	
Sound Setup	Calculator			
Settings	Sound Setup			
Kantan Mode	IrDA			

Changing Your E-mail Address

You can change the account name of your e-mail address.



When the standby screen is displayed, press .

➡ Use to select E-Mail Setup and then press (Select).

➡ Use to select Other Setup and then press (Select).

The cell phone connects to the server.

➡ Use to select *Eメールアドレスの変更* (Change E-mail Address) and then press (Select).

➡ Use to select the entry box, press (Edit), enter your security code, and then press (OK).

- Your security code is the four-digit number you wrote on your subscription form.
- If the security code is incorrectly entered three times consecutively during a single day, the e-mail address change operation will be disabled until the next day.

➡ Use to select *送信* (Send) and then press (Select).

➡ Use to select *承諾する* (Accept) and then press (Select).

➡ Use to select the entry box, press (Edit), enter an e-mail address using single-byte alphanumeric characters, and then press (OK).

- For details on entering e-mail addresses, see page 22.

➡ Use to select *送信* (Send) and then press (Select).

➡ Use to select OK, press (Select) and then (OK).

- Check that the e-mail address has been updated before pressing (OK).

- Your e-mail address cannot be changed if the new address you enter in the above procedure is already being used. In this case, enter a different e-mail address.

Security Code and Passwords

You can use a security code and other passwords described below.

Take care not to forget your security code and passwords, because they are required for performing various operations and using subscription services.

Security Code

Usage Example	<ul style="list-style-type: none">①Using the Answering Service (Voice Mail) and Call Transfer remotely from a fixed-line phone②Making inquiries, applications, and changes while using Customer Service Center voice guidance, au web pages, and EZweb③Changing the settings of Mail Filter or Other Setup under E-Mail Setup
Initial Setting	The four-digit number you wrote on your subscription form

Lock No.

Usage Example	Changing various settings of the cell phone
Initial Setting	1234

EZ Password



Usage Example	Subscribing or canceling subscriptions to EZweb fee-based contents
Initial Setting	The four-digit number you wrote on your subscription form

Premium EZ Password

Usage Example	<ul style="list-style-type: none">①Subscribing or canceling subscriptions to EZweb fee-based contents paid by まとめてau 支払い (au Collective Payment Service)②Purchasing products from EZweb sites using まとめてau 支払い (au Collective Payment Service)
Initial Setting	The four-digit number you wrote on your subscription form

Making and Answering Calls

Making a Call






When the standby screen is displayed, use  to  to enter a phone number.

- When calling to a fixed-line phone, you also need to enter the area code.

➔ Press .

- To end the call, press .

- After you enter a phone number, you can add 184 or 186 to the phone number as follows:

- ➔ Press  (Call).
- ➔ Use  to select 184 + Call or 186 + Call and then press  (Select).
- ➔ Press  (Call).
- ➔ Press  (Select).

184 + Call: When you do not want to inform the other party of your phone number.


186 + Call: When you want to inform the other party of your phone number.

Making an International Call

001 International Call Service

Available without any additional application

Example: To call 212-123-△△△△ in the USA


Enter the access code, a country code, area code and phone number, and then press .



- International call charges are billed together with monthly local call charges.
- For more information on 001 International Call Service, dial either of the following numbers:
From au cell phones (toll-free):
157 (area code not required)
- From fixed-line phones (toll-free):
0077-7-111
(Open 9:00 to 20:00 everyday)

Answering a Call

To answer a call, press .

- To end the call, press .

Display When a Call is Received

The phone number of the caller appears.



If the caller's phone number and name are in the phone book, the name is also displayed.

When the phone number of the caller is not displayed, one of the following indicators may appear.

Indicator	Meaning
ID Unsent	The caller did not send a Caller ID.
Payphone	The call is from a pay phone.
Not Support	The call is from a phone that does not support Caller ID.

Missed Call Notification


If you did not answer a call,  and Missed Call are displayed to let you know that you missed a call.



To check the caller's phone number, use  to select Missed Call and then press  (OK). You can then return the call (see the procedure on the right).

Returning a Call (Outgoing History/Incoming History)

Example: Returning a call to a phone number in the incoming history

When the standby screen is displayed, press .

- Press  while the standby screen is displayed to display the Outgoing History screen.

➔ Use  to select the phone number you want to call and then press  (View).

➔ Press .


- The cell phone can store up to 30 phone numbers in each of the incoming and outgoing history.

One-ring Calls

What is a One-ring Call?



A one-ring call is a call from an unknown caller that only rings once, causing it to be stored in the incoming history. One-ring calls are often used to get you to return the call, which will connect you to a dating service or some other service that charges you at high rates.

One-ring Indicator

 
 indicator on the Incoming History screen indicates you have received a one-ring call (a call rang for three seconds or shorter). Be careful when you return a call to an unknown caller.





Adjusting the Earpiece Volume during a Call

During a call, use .

 
- : Increases the volume.
- : Decreases the volume.





Turning On Manner Mode

When the standby screen is displayed, hold down  for at least one second.

This turns on manner mode, and displays ,  and  on the standby screen. This also turns on easy voice memo, which is indicated by  on the standby screen.

Turning Off Manner Mode


When the standby screen is displayed, hold down  for at least one second.



Turning off manner mode causes ,  and  to disappear from the standby screen. Easy voice memo is also turned off, which is indicated by  disappearing from the standby screen.



- Even in manner mode, the cell phone still emits a shutter sound when you take a photo.



Changing the Incoming Ring Tone

When the standby screen is displayed, press .



➔ Use  to select Settings and then press  (Select).



➔ Use  to select Sound/Vib/Lamp and then press  (Select).

➔ Use  to select Incoming Setup and then press  (Select).


➔ Use  to select Incoming Call and then press  (Select).

➔ Use  to select Melody and then press  (Select).

➔ Use  to select Fixed Data and then press  (Select).




 









➔ Use  to select the ringtone you want to play and then press  (Select).



The incoming ring tone is set.

- If you press , the tone plays.

Adjusting the Incoming Ring Tone Volume

When the standby screen is displayed, press .

- ➔ Use  to select Settings and then press  (Select).
- ➔ Use  to select Sound/Vib/Lamp and then press  (Select).
- ➔ Use  to select Incoming Setup and then press  (Select).
- ➔ Use  to select Incoming Call and then press  (Select).
- ➔ Use  to select Volume and then press  (Select).
- ➔ Use  to adjust the volume and then press  (OK).
 - Each press of  changes the volume one step.

Step up	The ring tone volume gradually increases.
Step down	The ring tone volume gradually decreases.
5  1	The ring tone sounds at the set volume.
	The ring tone does not sound.

Turning On the Easy Voice Memo

When the standby screen is displayed, hold down



for at least one second.



is displayed on the standby screen.

Turning Off the Easy Voice Memo

When the standby screen is displayed, hold down for

at least one second. The easy voice memo is turned off and








disappears from the standby screen.

- The cell phone can record a maximum of ten messages, each up to 60 seconds long.
- Easy voice memo is a function that automatically answers calls and allows callers to record messages. Use the Answering Service (Voice Mail) when your phone is turned off or when you are in a location where a signal cannot be received.













Playing a Message

If a message is recorded, Easy Voice Memo appears on the standby screen.

- ➔ Use  to select Easy Voice Memo and then press  (OK).
- ➔ Use  to select the message you want to play and then press  (Play).
 - To stop playing the message, press  (Stop).


Deleting a Message

When the standby screen is displayed, press .

- ➡ Use  to select Easy Voice Memo and then press  (Select).
- ➡ Use  to select Easy Voice Memo List and then press  (Select).
- ➡ Use  to select the message you want to delete and then press  (Menu).
- ➡ Use  to select Delete and then press  (Select).
- ➡ Use  to select Delete One and then press  (Select).
- ➡ Use  to select Yes and then press  (OK).

Character Input

Character Entry Modes

When a character entry screen is displayed, you can select a character entry mode if you press  (Char).

Menu Items

漢字 : Kanji conversion mode

Code : Character code mode

アイウ : Double-byte katakana mode

アィ : Single-byte katakana mode

a A : Double-byte alphanumeric mode


aA : Single-byte alphanumeric mode

1 2 3 : Double-byte number mode

123 : Single-byte number mode

\$ % & : Double-byte symbol mode

\$%& : Single-byte symbol mode

Use  to select a character entry mode and then press









 
 
 

 (OK).


Entering Alphanumeric Characters

You can use the keys  to  to enter characters.


More than one character is assigned to each key.

The following table shows the key assignment for entering characters.


 
 
	Number of Times to Press the Key								
key	1	2	3	4	5	6	7	8	9
	.	@	—	_	/	:	~	1	
	a	b	c	A	B	C	2		
	d	e	f	D	E	F	3		
	g	h	i	G	H	I	4		
	j	k	l	J	K	L	5		
	m	n	o	M	N	O	6		
	p	q	r	s	P	Q	R	S	7
	t	u	v	T	U	V	8		
	w	x	y	z	W	X	Y	Z	9
	0	Inputs symbols							
	Inputs symbols (switches an unconfirmed character between uppercase and lowercase).								
	Adds a line break and displays characters in the opposite order.								

When you change your e-mail address, you cannot use the characters in  for the account name (part of the address to the left of @).

Entering Two or More Characters Assigned to the Same Key

After you enter the first character, press  and then enter the next character.

Deleting Characters

To delete one character at a time, move the cursor to the character you want to delete and then press . To delete all characters to the right of the cursor, hold down  for at least one second. If there are no characters to the right of the cursor, holding down  will delete all the characters.

Starting a New Line

Press .

- Certain functions such as C-mail do not support entering new lines.

Entering E-mail Addresses





 
 



E-mail Address Compatible Characters

- Before you enter an e-mail address, switch to the single-byte alphanumeric mode.
- When changing your e-mail address, you can enter up to 30 single-byte alphanumeric and symbol characters for the account name (part to the left of @). Note the following:
 - Uppercase characters cannot be used.
 - Period (.) or zero (0) cannot be used as the first character.

How to Enter E-mail Addresses

Example: Entering "taro.23@kddi.co.jp"






Enter "taro.23".

 




- t : Press  once.
 a : Press  once.
 r : Press  three times.
 o : Press  three times.
 . : Press  once.
 2: Press  once and then .
 3: Press  once and then .

➡ Enter "@".


- @: Press  twice.








➡ Enter "kddi" and then press  (OK).

- k: Press  twice.
 d: Press  once and then .
 d: Press  once.
 i : Press  three times.

- ➡ Press  (Menu).
- ➡ Use  to select Useful Sentence and then press  (Select).
- ➡ Use  to select .co.jp and then press  (Select).
".co.jp" is entered.


Entering Pictograms












 







When a character entry screen is displayed, press .

- ➡ Use  to select the pictogram you want to enter and then press  (Select).
 - You can enter pictograms consecutively if you press  (Repeat) instead of  (Select).
- Each time you press  in the character entry screen, the character entry mode changes in following order: Pictograms ⇒ Emoticons ⇒ Double-byte symbols ⇒ Single-byte symbols...
 - You can switch categories of pictograms and emoticon by pressing  # /  ✕ on each selection screen.

Phone Book

Saving a Phone Book Entry







When the standby screen is displayed, hold down  for at least one second.

- ➔ Use  to select  [Name] and then press  (Edit).
- ➔ Enter a name and then press  (OK).
The  [Reading] for the name is entered automatically.
- ➔ Use  to select  [Tel. #1] and then press  (Edit).
- ➔ Enter a phone number and then press  (OK).
 - If the phone number is for a fixed-line phone, enter the phone number starting with the area code.
- ➔ Use  to select a phone number type and then press  (Select).
 - Follow the next step to enter an e-mail address. If you do not want to enter an e-mail address, press  (Reg).
- ➔ Use  to select  [E-Mail 1] and then press  (Edit).
- ➔ Enter an e-mail address and then press  (OK).
- ➔ Use  to select an e-mail address type and then press  (Select).
- ➔ Press  (Reg).

- The phone book can store up to 1,000 entries.
- The cell phone automatically saves an entry to the lowest available memory number from 000 to 999.
- You can save three phone numbers and three e-mail addresses for each phone book entry.
- You can also assign a group No., and enter birthday, address, and other information.


 





Dialing from the Phone Book

When the standby screen is displayed, press .

- ➔ Use  to select the entry containing the phone number you want to dial and then press  (Select).
- ➔ Use  to select the phone number and then press  (Call).
- ➔ Use  to select Call and then press  (Select).



Editing Phone Book Entries

When the standby screen is displayed, press .



- ➔ Select an entry and press  (Select).
- ➔ Press  (Menu).
- ➔ Use  to select Edit and then press  (Select).
- ➔ Edit the contents and then press  (Reg).
- ➔ Use  to select Yes and then press  (OK).

Saving a Phone Number from the Incoming or Outgoing History

Example: Saving a phone number from the incoming history to the phone book

When the standby screen is displayed, press  and use  to select the phone number you want to save.

➡ Press  (Reg).

➡ Use  to select Reg. New and then press  (Select).





- For details on saving a phone book entry, see page 24.

Pair Function

You can register a maximum of five pair partners you contact often to easily call or send mail.




Registering a Pair Partner

When the standby screen is displayed, press .

- ➡ Use  to select a blank screen and then press  (Reg).
- ➡ Use  to select a pair partner, press  (Reg).
 - When registering a phone book entry with multiple phone numbers and e-mail addresses as pair partner, select the phone number and e-mail address to use with the Pair function.
 - When you delete a phone book entry registered in the pair partner, the phone book entry is also deleted from the Pair function.




Making a Call to a Pair Partner

When the standby screen is displayed, press .

- ➡ Use  to select the person you want to call.
- ➡ Use  to select Call and then press  (Select).

Sending Mail to a Pair Partner

When the standby screen is displayed, press .

- ➡ Use  to select the person you want to send mail.
- ➡ Use  to select E-mail or C-mail and then press  (Select).
 - To create an e-mail message, see "Creating and Sending E-mail Messages" on page 27. To create a C-mail message, see "Creating and Sending C-mail Messages" on page 29.

Using E-mail














 





To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the Customer Service Center. Also, before use, you need to configure initial settings.

You can send and receive e-mail with other cell phones that support e-mail, and with PCs. In addition to text messages of up to 5,000 double-byte (or 10,000 single-byte) characters, you can also send photos and movies by e-mail.

- The packet communication charge for sending and receiving e-mail applies to the amount of data sent and received.
- You can send an e-mail message to different addresses (includes To/Cc/Bcc, within 640 single-byte characters) at one time. If you turn the Addr Count Limit setting ON, you can only send to up to five addresses at one time.
- You can send up to 1,000 e-mail messages per day (a message with multiple recipients is counted as more than one message).
- Sending and receiving e-mail messages that include attachment data may take a while.









Creating and Sending E-mail Messages

When the standby screen is displayed, press .




- ➔ Use  to select Create New and then press .
- ➔ Use  to select Address and then press  (Edit) and then press .
- ➔ Use  to select Address Book and then press .
- ➔ Use  to select a phone book entry and then press .
- ➔ Use  to select an address and then press .
- ➔ Press .
- ➔ Use  to select Subject and then press .
- ➔ Enter a subject and then press  (OK).
 - You cannot enter single-byte katakana characters or a new line in a subject.
- ➔ Use  to select Body and then press .
- ➔ Enter text and then press  (OK).
 - You cannot enter single-byte katakana characters.
- ➔ Press .

Reading Received E-mail Messages

When you receive an e-mail message, New E-mail appears on the standby screen.

- ➔ Use  to select New E-mail and then press  (OK).
- ➔ Use  to select the folder and then press  (Select).
 - : Indicates a read message.
 - : Indicates an unread message.
- ➔ Use  to select the new message and then press  (View).

■ Reading an E-mail Message from the E-mail Menu



When the standby screen is displayed, press  to display the E-mail menu, use  to select Inbox and then press  (Select).




For subsequent operations, see "Reading Received E-mail Messages" above.


Reading an E-mail Message with an Attached Photo or Movie

Example: Viewing an attached photo

Display the e-mail message that has an attached photo (above).









- ➔ Use  to select the file name and then press  (Select).

- ➔ Use  to select the file name and then press  (Receive).
- ➔ Press  (Play).

- Selecting the file name or pressing  (Receive) may be unnecessary for some files to be displayed, depending on the file size.

Replying to Received E-mail Messages

When the standby screen is displayed, press .

- ➔ Use  to select Inbox and then press  (Select).
- ➔ Press  (Select).
- ➔ Use  to select the folder and then press  (Select).
- ➔ Use  to select the message you want to reply to and then press  (View).
- ➔ Press  (Reply).
"Re:" is prefixed to the subject, and the text of the message is quoted.
- ➔ Refer to "Creating and Sending E-mail Messages" (page 27) for subsequent operations.









Rejecting Spam

Setting mail filters to reject spam is recommended. The **オススメ設定** (Recommended Settings) helps you to set mail filters easily.

Recommended Settings

Mail filter is set to reject spoofing mail, auto-forwarding mail and to receive mail sent from a cell phone, PHS, or PC.

When the standby screen is displayed, press .

- ➡ Use  to select E-Mail Setup and then press .
- ➡ Use  to select Mail Filter and then press .
- ➡ Use  to select **設定する** (Settings) and then press .
- ➡ Use  to select **登録** (Registration) and then press .

- You can also prevent spam by changing your e-mail address. For details on changing your e-mail address, see page 14.

Using C-mail

C-mail is a service that uses phone numbers as addresses to exchange messages between au cell phones that support C-mail. A C-mail message can contain up to 50 double-byte (or 100 single-byte) characters.


- The C-mail send charge applies when sending C-mail.








C-mail Safety Block










C-mail safety block is a function that allows you to reject C-mails that include URLs (<http://△△△>, <https://△△△>) or phone numbers in the C-mail message text.

C-mail safety block is valid by default. Cancel the setting if you want to receive C-mails that include URLs and phone numbers in the message text.

Creating and Sending C-mail Messages







When the standby screen is displayed, hold down  for at least one second.

- ➡ Use  to select Create New and then press .
- ➡ Use  to select  and then press .
- ➡ Use  to select Address Book and then press .




- ➔ Use  to select a phone book entry and then press  (Select).
- ➔ Use  to select a phone number and then press  (Select).
- ➔ Use  to select  and then press  (Edit).
- ➔ Enter text and then press  (OK).
- ➔ Press  (Send).

Reading Received C-mail Messages

When you receive a C-mail message, New C-mail appears on the standby screen.

- ➔ Use  to select New C-mail and then press  (OK).
 - : Indicates a read message.
 - : Indicates an unread message.
- ➔ Use  to select the new message and then press  (View).

Reading a C-mail Message from the C-mail Menu

When the standby screen is displayed, hold down  for at least one second to display the C-mail menu, use  to select Inbox and then press  (Select).

For subsequent operations, see "Reading Received C-mail Messages" above.

Camera

Your cell phone has a CMOS camera with 1.97 effective megapixels for shooting photos and movies. You can use the self-timer and autofocus. Shot images can be used for the standby screen, and attached to e-mail messages.

Photo Taking Tips

When taking photos, frame the subject within the display and hold the cell phone steady with both hands to avoid shaking.

Portrait Position

Landscape Position

About Photo Modes


The following modes are available for taking photos. Wallpaper (240 x 400) is set at the time of purchase.

Mode	Photo Size	Storage Location
W.paper Mode	Wallpaper (240 x 320)	The Photo Folder in the Data Folder of the cell phone
	Wallpaper (240 x 400)	
DSC Mode	0.3M (640 x 480)	The Camera Folder in the Data Folder of a microSD memory card*
	1M (1280 x 960)	
	2M (1600 x 1200)	


* When a microSD memory card (commercially available) is not inserted, the files are saved to the Data Folder of the cell phone.

- Take care not to cover the lens with a strap or finger.


Taking a Photo

 
When the standby screen is displayed, press 
for at least one second.

The monitor screen appears.

- ➡ Frame the subject within the display and then
press  (Shot).
The shutter clicks, and the preview screen is displayed.









Saving a Photo

Press  (Save) on the preview screen.

- If you do not want to save the photo, press  in the preview screen.

Viewing Photos

When the standby screen is displayed, press .

- ➡ Use  to select Data Folder and then press
 (Select).
- ➡ Use  to select Photo Folder and then press
 (Select).
- ➡ Use  to select a folder and then press
 (Select).
- ➡ Use  to select the photo you want to view
and then press  (View).

EZweb is an information service that allows you to enjoy browsing the Internet on your cell phone. You can also download Chaku-Uta®, news, and other contents from web pages.

To use EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the Customer Service Center. Also, before use, you need to configure initial settings.

- The packet communication charge for EZweb connection applies to the amount of data sent and received, not to the length of time connected.
- In addition to communication charges, some sites charge for providing information.


Accessing Sites

■ Viewing the au one “OTONA” Style

You can access EZweb from the au one “OTONA” Style. There is a lot of convenient information that the adult makes attractive in the au one “OTONA” Style.

When the standby screen is displayed, press , use  to select Top Menu/Search and then press  (Select).



au one “OTONA” Style

 
 


The diagram shows an orange arrow pointing from the EZweb label on the left to a table of menu items. A large orange curly bracket is positioned to the left of the table, grouping all the items within it.







ニュース (Top News) Provides the latest news.
乗換 (Transfer Retrieval) Tells how to get to the destination by transferring station of train/bus, etc.
天気 (Weather) Provides the latest weather forecast.
スポーツニュース (Sportscast) Provides the latest sportscast.
au oneサービス一覧 (au one Service List) Provides the service list of au one.
auお客さまサポート (au Customer Support) Provides information about charges, various applications, au online manual and notices from au.
WEB de 請求書 (Online Bill Confirmation) Provides your online bill claimed by au.

Basic Operations


Use  to select the site you want to access and then press  (Select).



Press  to return to the previous screen. Hold down  for at least one second to return to the au one Top.

The following describes the basic operations that are available while accessing sites.

 
Key Operation	Description
	Exits EZweb.
	Moves the cursor up and down. When there is data available above or below the current screen, scrolls up and down the screen one line at a time.
	When there is data available previous or next to the current screen, moves the screen page by page.  : Returns to the previous screen.  : Moves to the next screen.
	Returns to the previous screen.

Bookmarking Frequently Accessed Pages

When the page you want to bookmark is displayed, press  (Browser menu).

➡ Use  to select New bookmark and then press  (Select).



- Some pages cannot be bookmarked.



➡ Press  (Reg).



The displayed page is bookmarked, and its title and URL are added to the Bookmark.

- The Bookmark can contain up to 100 titles and URLs.

Viewing Bookmarked Pages









When the standby screen is displayed, press  and then use  to select EZweb.

➡ Use  to select Bookmark(s) and then press  (Select).



➡ Use  to select the bookmark for the page you want to view and then press  (Select).
The cell phone connects to the site.


 




Checking Charges



When the standby screen is displayed, press .

- ➔ Use  to select Settings and then press  (Select).
- ➔ Use  to select Time/Toll/Sub and then press  (Select).
- ➔ Use  to select Inquire Toll and then press  (Select).
- ➔ Use  to select Yes and then press  (OK).
 - Select the item you want to check and then follow the on-screen instructions.

Downloading Chaku-Uta®

When the standby screen is displayed, press  and then use  to select EZweb.

- ➔ Use  to select Top Menu/Search and then press  (Select).
- ➔ Use  to select メニューリスト (Menu List) and then press  (Select).
- ➔ Use  to select 着うた (Chaku-Uta®) and then press  (Select).

- ➔ Use  to select the site you want to access and then press  (Select).

The download instructions appear.

- Fee-based information sites require entry of EZ password or Premium EZ password. Follow the on-screen instructions to enter either password. See page 15 for details.

- ➔ Follow the on-screen instructions.

Download is completed.

- Downloaded data is saved automatically to the Data Folder.

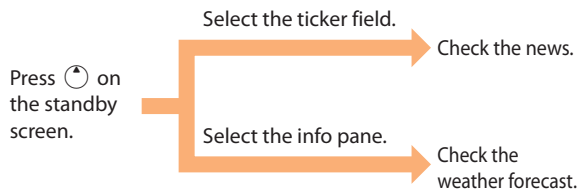
- ➔ Press  (Play).


The downloaded Chaku-Uta® plays.

- This procedure is only an example for the purpose of explanation and may differ from actual procedures. Follow the instructions on the site from which you want to download the data.

Use the EZ News Flash to display flash news on the standby screen. You can check the news details and other information by selecting the ticker field. You can use the EZ News Flash by making a few simple settings following the EZweb initial setup.



Basic Operations



- The EZ News Flash information is automatically received at no charge. Note, however, that packet communication charges may be incurred for manual updates and connecting to EZweb sites. In this case, a confirmation screen for network connection is displayed.
- The EZ News Flash information is updated at regular time intervals.  appears while receiving information.

Setting EZ News Flash

The EZ News Flash is available free of charge. You have only to make a few simple settings. After following the procedure in “Initial Setup of E-mail and EZweb” on page 10, configure EZ News Flash settings. If you did not configure the EZ News Flash settings at the time of the initial setup, follow the steps below.



When the standby screen is displayed, press  and select the ticker field and then press  (OK).




➡ Follow the on-screen instructions.

The setup procedure is completed.

- When the standby screen returns, a message asking you to wait for a while until the next update takes place appears in the ticker field.

■ Canceling EZ News Flash


When the standby screen is displayed, press  and select the ticker field and then press  (OK).

➡ Press  (メニュー[Menu]), use  to select サービス設定解除 (Service Cancellation) and then press  (選択[Select]).



➡ Follow the on-screen instructions.

■ Changing the Reception Settings for EZ News Flash Information

You can change the ring tone, vibrator and LED settings under M215 News Flash Rcv. for reception of EZ News Flash information.

If you do not want the ring tone to sound when receiving EZ News Flash information, set the volume to .

Using GPS (Global Positioning System), EZ Navi provides useful positional information services.

When the standby screen is displayed, press  and then use  to select the EZnavi.

- The packet communication charges for using EZ Navi services apply to the amount of data sent and received. Some services may require a separate information fee.
- Before using EZ Navi, you must configure initial settings of EZweb (page 10).

Passenger Seat Navi for People in the Passenger Seat to Check the Route

Passenger Seat Navi guides the passengers to the destination with the best route using voice and map.

Drivers are not allowed to use Passenger Seat Navi.

Security Navi to Check Where Your Kids Are

The Security Navi application is made up of the following three functions:

いつでも位置確認 (Auto Position Search [monthly charge]),
エリア通知 (Area Message [no monthly charge]),
位置確認メール (Position Search Mail [no monthly charge])

Using these functions, you can check the position of an au cell phone that supports Security Navi; and automatically receive a notification from the specified au cell phones when your kids enter (or are in) or leave (or are no longer in) the set area within a predetermined period of time.

EZ Navi Walk for When You Go Out

Displays various useful menu items for when you are out. There are two menu modes: the Full Mode menu for those who want to use all the convenient functions including the latest features, and the Simple Mode menu with limited functions allowing you to use the service with simple operation.

The following table describes the Full Mode menu.


フリーワード (Free Word)	Search for information about a facility, shop, station, etc. by entering its name or a part of its address.
トータルナビ／ 地図 (Total Navigation/ Map)	Find the most preferable combination of transportation (trains, airplanes, buses and taxis), and check out maps of your current location and places you like to go.
乗換／時刻表 (Connection/ Timetable)	Search for train connections, timetables and other public transportation information.
お店／施設／ イベント (Shop/Facility/ Event)	Search for local stores, facilities or events.
ドライブ／ 渋滞情報 (Road/Traffic Information)	Check out road traffic information in real time.

オススメ便利 メニュー (Useful Menu)	View information on services that are available on PCs, and use advanced functions of EZ Navi Walk that you can enjoy.
設定／会員登録／ インフォ (Setting/ Membership Registration/ Information)	Configure various settings, sign up as a member or check out various useful information.

- Some of the menu options require a monthly charge.

■ The Map of Your Current Location



★ represents your initial location. As you start moving, changes of your location are tracked by continuous positioning and indicated in real time by .

The 現在地の地図 (The Map of Your Current Location) option displays the current map in real time.

Evacuate Navi to Guide You Home or to Nearby Evacuation Areas during Disasters

Nearby public evacuation areas or the direction to your home can be determined using the map data pre-installed on the PT003 (避難所マップ [Evacuate Area Map]).

Other useful contents can be downloaded from the 災害時ナビ (Evacuate Navi) section of the EZweb site.

- Some contents require a monthly charge.
- Use the information on the screen as a reference and always follow the instructions of police, fire and other municipal authorities.
- When using Evacuate Navi, checking your current position may take more time than usual depending on the status of the GPS satellites.














In Case of Loss of Your PT003












The Remote Auto Lock allows you to remotely activate the Auto Lock, and Address Book Lock, preventing others from using your cell phone.

Setting Conditions for Activating the Remote Auto Lock

You can activate the Remote Auto Lock by calling your PT003 a set number of times from a registered phone number within a specified period of time.

When the standby screen is displayed, press .

- ➔ Use  to select Settings and then press  (Select).
- ➔ Use  to select Privacy Setup and then press  (Select).
- ➔ Use  to select Security Lock and then press  (Select).
- ➔ Use  to select Remote Auto Lock and then press  (Select).
- ➔ Enter Lock No., and then press  (OK).
- ➔ Use  to select Caller ID List and then press  (Select).
- ➔ Press  (Edit).
- ➔ Enter a phone number, and then press  (Reg).

- ➔ Press  (Back).
- ➔ Use  to select Specified Time and then press  (Select).
- ➔ Enter a time and then press  (OK).
 - This sets the time limit for receiving the set number of calls after the first call is received.
 - You can set a time from one to ten minutes.
- ➔ Use  to select Incoming Call Count and then press  (Select).
- ➔ Enter a number of calls, and then press  (OK).
 - This sets the number of calls to receive to activate the Remote Auto Lock.
 - You can set a number of calls from three to ten.
- ➔ Use  to select ON/OFF Setup and then press  (Select).
- ➔ Use  to select ON and then press  (OK).

Remotely Activating the Remote Auto Lock on Your PT003

Call the PT003 from the registered phone number repeatedly within the set time limit.

- When the specified number of calls are received, the Remote Auto Lock is activated and a message plays telling you that the cell phone is locked.


Activating the Remote Auto Lock by the Security Lock Service

Even if the Remote Auto Lock is not set in advance, the Remote Auto Lock can be activated by calling Customer Service Center or completing the application process on au Customer Support from a PC.
The Security Lock Service is available free of charge.

■ Calling Customer Service Center to Activating/Canceling the Remote Auto Lock

From an au cell phone: 113 without a prefix (toll free)

From any other cell phone or fixed-line phone:

 0077-7-113 (toll free)

Open 24 hours










 

Follow the voice guidance to complete the application process.



 

■ Activating/Canceling the Remote Auto Lock from a PC


Login to au Customer Support (<https://cs.kddi.com/>) and complete the application process by following the on-screen instructions.

- The Remote Auto Lock cannot be activated when the PT003 is turned off or out of the service area, or Emission OFF is set to ON.
- You must fill out an application to use au Customer Support (the application can be filled out even after your cell phone is lost).

Troubleshooting

Symptom	Possible Cause	Remedy	Page
Cannot turn on power.	● Is the battery pack charged?	Charge the battery pack.	8
	● Did you hold down  for at least one second?	Hold down  for at least one second.	10
Cannot make calls.	● Is power turned on?	Hold down  for at least one second.	10
	● Is  (out of range indicator) displayed?	Move to a location where  (out of range indicator) is no longer displayed, and try again.	10
	● Is your hand or a metal object covering the area around the built-in antenna?	Make sure your hand or any other metal object is not covering the area around the built-in antenna.	7
	● Did you enter the phone number starting with the area code?	When making a call to a phone other than a cell phone, you need to enter the area code even if you are inside the same area.	16
Cannot receive calls.	● Is  (out of range indicator) displayed?	Move to a location where  (out of range indicator) is no longer displayed.	10
	● Is power turned on?	Hold down  for at least one second.	10
No response when a key is pressed.	● Is power turned on?	Hold down  for at least one second.	10
A warning tone sounds and power turns off.	● Is there enough power left in the battery pack?	Charge the battery pack.	8
Calls are answered automatically.	● Is easy voice memo turned on?	Hold down  for at least one second to turn off easy voice memo.	19
Cannot hear the other party.	● Is the earpiece volume too low?	Press  during a call to increase the earpiece volume.	18

Symptom	Possible Cause	Remedy	Page
When making a call, a beeping sound is heard from the earpiece and a connection cannot be established.	● Is  (out of range indicator) displayed? Or are you in a location where the signal is too weak?	Move to a location where  (out of range indicator) is no longer displayed.	10
	● Is the wireless line busy or is the phone you are calling on another line?	End the call and try again later.	16
The incoming indicator flashes but the ring tone does not play.	● Is manner mode turned on?	Hold down  for at least one second to turn off manner mode.	18
	● Is  (ring tone off indicator) displayed?	Increase the volume of the incoming call ring tone.	19
Cannot charge the battery pack.	● Is the battery pack installed properly?	Install the battery pack properly.	8
	● Are the plug and connector of the AC adapter (sold separately) inserted properly?	Insert the plug and connector firmly.	
When the camera is activated, no subject is displayed.	● Is a finger or other object covering the camera (lens)?	Check the position of the camera (lens) and remove the obstacle.	31

- For more detailed information, visit the following au troubleshooting sites:
 - From an au cell phone:  ⇒ Top Menu/Search ⇒ *au*お客様サポート (au Customer Support) ⇒ オンラインマニュアル (Online Manual) ⇒ 故障診断Q&A (Troubleshooting FAQ)
 - From a PC: <http://www.kddi.com/customer/service/au/trouble/kosho/index.html>

Index

A

Accessories	6
-------------------	---

B

Battery level	11
Battery pack	6,8
Battery pack cover	7

C

Camera	31
Photo taking tips	31
Taking a photo	32
Cell phone etiquette	2
Character input	21
Character entry modes	21
Deleting characters	22
Entering characters from the same key	22
Starting a new line	22
Charging the battery pack	8
Checking charges	36
C-mail	29
C-mail safety block	29
Creating and sending	29
Reading Received mail	30
Contents	4

D

Disaster Message Board Service	3
Display	7,11
Domain	14
Downloading Chaku-Uta®	36

E

Earpiece volume	18
Easy voice memo	19
Playback	19
Turning off	19
Turning on	19
E-mail	27
Creating and sending	27
Initial settings	10
Reading Received mail	28
Replying	28
Viewing attached images	28
E-mail address	10
Available characters	21
Changing	14
Entering	22
Entering pictograms	23
Evacuate Navi	41
EZ Navi	39
EZ Navi Walk	40
EZ News Flash	37
Canceling	38
Changing the Reception Settings	38

Info pane	37
Setting	37
Ticker field	37
EZ password	15
EZweb	33
Accessing sites	34
au one Top	34
Basic operations	35
Initial settings	10

I

Incoming history	17
Indicators	11
Initial settings	10
E-mail • EZweb	10
International Call	16
Internet	33
Sites	34,35

K

Key assignments	9
-----------------------	---

L

Language	10
Learning the basics	9
Lock No.	15

M

Mail	27
C-mail	29
E-mail	27
Mail filters	29
Recommended settings	29
Main menu	12
Manner mode	18

N

Names of parts	7
Notification window	10

O

One-ring calls	17
Outgoing history	17

P

Pair Function	26
Making a call to a pair partner	26
Registering a pair partner	26
Sending mail to a pair partner	26
Passenger Seat Navi	39
Passwords	15
Phone (call)	16
184/186	16
Answering	17
International Call	16

Making	16
Returning	17
Phone book	24
Dialing	24
Editing	24
Saving	24
Saving a phone number from the incoming or outgoing history	25
Phone number	10
Photos	31
Photo modes	31
Taking	32
Viewing	32
Playback	
Easy voice memo	19
Premium EZ password	15

R

Remote Auto Lock	42
Ring tones	
Changing the type	18
Changing the volume	19

S

Security code	15
Security Lock Service	43
Security Navi	39
Signal strength	11
Sites	34
Bookmarking	35
Viewing from bookmarks	35

Spam	29
Sub-display	12

T

Troubleshooting	44
Turning on/off power	10

V

Viewing	
Photos	32

FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



FCC RF EXPOSURE INFORMATION

Warning! Read this information before using your phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.59 inches (2 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (2 cm) must be maintained between the user's body and the back of the phone, including the antenna. All beltclips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Turn off your phone before flying

You should turn off your phone when boarding any aircraft. To prevent possible interference with aircraft systems, U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *

Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations

(e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.428 W/Kg and when worn on the body, as described in this user guide, is 0.681 W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: JYCCDMAPT003.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a sub-stantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC)

Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities. While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

THIS PHONE HAS A HAC RATING OF M4.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with "normal usage" while using their hearing aid with the particular wireless phone. "Normal usage" in this context is defined as a signal quality that is acceptable for normal operation. The M mark is intended to be synonymous with the U mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U marks is referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

For information about hearing aids and digital wireless phones

FCC Hearing Aid Compatibility and Volume Control:

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC:

<https://fjallfoss.fcc.gov/oetcf/eas/reports/GenericSearch.cfm>

For inquiries, call: Customer Service Center

For general information and charges (toll free)

From fixed-line phones:

 0077-7-111

From au cellphones:

157 area code not required

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR
AFTER CALLING 157 ON YOUR au CELLPHONE

For loss, theft or damage and operation information
(toll free)

From fixed-line phones:

 0077-7-113

From au cellphones:

113 area code not required

In case above numbers are not available,

 0120-977-033 (except Okinawa)

 0120-977-699 (Okinawa)

From EZweb:

Access Method

EZ ▶ Top Menu/Search ▶ auお客様サポート
(au Customer Support)

▶ お問い合わせ (Inquiries)

* Menus are subject to change without prior notice.

なるほど! au
みんなでつくる、auQ&Aサイト

Access Method

EZ ▶ Top Menu/Search ▶ auお客様サポート

(au Customer Support)

▶ みんなでQ&A! なるほど! au (au User's Forum)

Read this code for an easy
access to なるほど! au
(au User's Forum). ▶

- The packet communication charge applies.



モバイル・リサイクルネットワーク
MOBILE RECYCLING NETWORK

Cellphone and PHS operators collect and recycle unused
telephones, batteries and battery chargers at stores
bearing the  logo regardless of brand and manufacturer
to protect the environment and reuse valuable resources.

Read this code for an easy
access to au Online Manual.
(Packet communication
charges do not apply.)



February 2011, Edition

Sales: KDDI CORPORATION・
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: Pantech Co., Ltd.