

CHAPTER 1. BEFORE USING YOUR PHONE	7
INSIDE THE PACKAGE	8
HANDSET DESCRIPTION	9
THE FUNCTION KEYS.....	10
DISPLAY INDICATORS.....	11
BATTERY USAGE	14
BATTERY INSTALLATION.....	14
BATTERY REMOVAL.....	15
BATTERY CHARGING.....	16
BATTERY HANDLING INFORMATION	17
DO'S.....	17
DON'Ts.....	17
CHAPTER 2. BASIC OPERATION	19
TURNING THE PHONE ON / OFF	20
TURNING THE PHONE ON.....	20
TURNING THE PHONE OFF.....	20
ACCESSING THE MENU	21
MENU SUMMARY	22
BASIC FUNCTIONS	25
MAKING A CALL.....	25
ANSWERING CALLS.....	26
SPEAKER PHONE.....	26
CALLER ID FUNCTION.....	26
WAIT/PAUSE FEATURE.....	27
ANSWERING A CALL.....	27
MAKING AN INTERNATIONAL CALL.....	28
3-WAY CALLING.....	28
CALL WAITING FUNCTION.....	28
CALLING A NUMBER FROM CONTACTS.....	29
ADJUSTING MASTER VOLUME.....	29
MUSIC PLAYER.....	29
VIBRATE ON/OFF MODE.....	29
DURING A CALL	30
AVAILABLE OPTIONS DURING A CALL.....	30
MAKING AN EMERGENCY CALL	32
911 IN LOCK MODE.....	32

911 USING ANY AVAILABLE SYSTEM.....	32
USING THE MICRO SD CARD	33
INSTALLING THE MICRO SD CARD.....	33
REMOVING THE MICRO SD CARD.....	33
CHAPTER 3. MEMORY FUNCTION	35
STORING A PHONE NUMBER	36
ENTERING LETTERS, NUMBERS & SYMBOLS	37
STANDARD INPUT MODE.....	38
WORD INPUT MODE.....	39
NUMERIC MODE.....	40
SYMBOL MODE.....	41
QUICK TEXT.....	41
MAKING A CALL THROUGH THE CONTACT LIST	42
ONE-TOUCH/TWO-TOUCH DIALING.....	42
CHAPTER 4. MENU FUNCTION	43
CONTACTS	44
NEW CONTACT.....	44
CONTACT LIST.....	45
GROUPS.....	46
SPEED DIALS.....	50
IN CASE OF EMERGENCY.....	50
MY NAME CARD.....	51
RECENT CALLS	52
MISSED.....	52
RECEIVED.....	53
DIALED.....	54
BLOCKED.....	55
ALL.....	56
VIEW TIMERS.....	57
SETTINGS	58
BLUETOOTH.....	58
BLUETOOTH MENU.....	62
SOUNDS SETTINGS.....	65
DISPLAY SETTINGS.....	70
PHONE SETTINGS.....	75

TABLE OF CONTENTS

CALL SETTINGS	84
MEMORY	87
PHONE INFO	88
VOICE TOOLS	90
AVR (ADVANCED VOICE RECOGNITION)	90
VOICE COMMAND WITHIN CONTACT	91
CALL <NAME><LOC>	92
SEND <MSG TYPE>	92
LOOKUP <NAME>	93
PLAY <PLAYLIST>	93
GO TO <MENU>	93
CHECK <ITEM>	94
MY ACCOUNT	95
HELP GUIDE	95
SETTINGS	95
INFO	100
TOOLS	101
CALCULATOR	101
CALENDAR	102
ALARM CLOCK	104
WORLD CLOCK	105
NOTEPAD	107
STOP WATCH	108
MY ACCOUNT	109
CHAPTER 5. GET IT NOW	111
MUSIC & TONES	112
PICTURE & VIDEO	119
GAMES	125
NEWS & INFO	126
TOOLS ON THE GO	126
EXTRAS	127
GET IT NOW INFO	127
CHAPTER 6. VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING	129
WHEN A NEW MESSAGE ARRIVES	130

TABLE OF CONTENTS

NEW MESSAGE	130
SEND NEW TXT MESSAGE	130
SEND NEW PICTURE MESSAGE	132
SEND NEW VIDEO MESSAGE	134
INBOX	136
SENT	140
DRAFTS	142
VOICEMAIL	143
MOBILE IM	144
GET NEW	144
E-MAIL	144
CHAT	144
ERASE ALL	145
SETTINGS	146
ALL MESSAGE SETTINGS	146
TXT MESSAGE SETTINGS	150
PIC-VIDEO MESSAGE SETTINGS	151
CHAPTER 7. MOBILE WEB 2.0	153
STARTING INTERNET BROWSER	154
LAUNCHING MOBILE WEB 2.0	154
BROWSER MENU	154
CHAPTER 8. SAFETY AND WARRANTY	159
SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES	160
SAFETY INFORMATION FOR FCC RF EXPOSURE	165
SAR INFORMATION	166
FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES	168
FDA CONSUMER UPDATE	170
12 MONTH LIMITED WARRANTY	176

"Licensed by QUALCOMM Incorporated under one or more of the following Patents : U.S. Patent No. 4,901,307 U.S. Patent No. 5,056,109 U.S. Patent No. 5,099,204 U.S. Patent No. 5,101,501 U.S. Patent No. 5,103,459 U.S. Patent No. 5,107,225 U.S. Patent No. 5,109,390."



This chapter provides important information about using the CDM-8960 including:

- INSIDE THE PACKAGE
- HANDSET DESCRIPTION
- BATTERY USAGE
- BATTERY HANDLING INFORMATION

BEFORE USING

INSIDE THE PACKAGE

This package should include all items pictured below. If any are missing or different, immediately contact the retailer where you purchased the phone.



Handset



Standard Battery



User Guide



AC/DC Travel Adaptor




Gender

HANDSET DESCRIPTION

BEFORE USING

The CDM-8960 weighs 3.93oz. and the dimensions are 1.86" x 3.65" x 0.78".

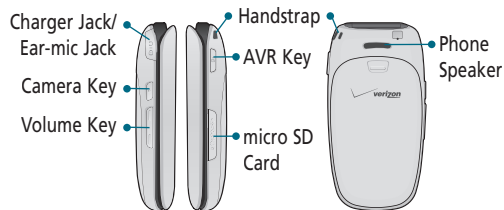

Headset shall be connected to gender when you use it.

THE FUNCTION KEYS

Display Indicators

See page 11 for a list of icons.

THE NAVIGATION KEYS

In Idle Mode

Press Left for Shortcut Key 1, Up for Shortcut Key 2, Right for Shortcut Key 3 and Down for Shortcut Key 4.

Inside The Menu

Within a menu, press the Navigation Key UP/DOWN/LEFT/RIGHT to scroll through options or press OK to select the function.

Left Soft Key

Press to access the message menu or function displayed on bottom line.

Press to turn Speaker Phone On or Off.

Press to make or receive a call.

Press and hold to display a plus "+" for international dialing.

Press and hold to turn Vibrate mode On/Off.

Text & Graphic Area

Soft Key Indicators

Shows the functions currently assigned to each soft key and displays some icons.

OK Key

Press to access the main menu.

Right Soft Key

Press to access contacts menu or function displayed on bottom line.

Camera Key

Short Press: Camera mode.
Long Press: Camcorder mode.

Press to clear a digit from the display or to return to the previous page.



DISPLAY INDICATORS

Signal Strength

Current signal strength: the more lines, the stronger the signal.



EV: The EV service mode indicator shall display with/without a progress bar when a 1x-EVDO device has only acquired 1x-EVDO service (e.g., roaming to a 1x-EVDO service area only).



1X: The 1X signal strength indicators shall display with/without a progress bar when a 1x-RTT CDMA2000 services.



D: The D signal strength indicators shall display with/without a progress bar when a CDMA IS-95 service.



EV & 1X: The EV and 1X signal strength indicators shall display with/without a progress bar when a 1x-EVDO device has acquired both 1x-RTT CDMA2000 and 1x-EVDO services.



EV & D: The EV and D signal strength indicators shall display with/without a progress bar when a 1x-EVDO device has acquired both 1x-EVDO service and CDMA IS-95 service.



Standalone

Transmitting and receiving information is restricted.



Roaming

Phone is out of home area.



Voice



Data Active



Dormant

Phone is in a dormant state during a data call. Phone reverts to Dormant mode when there hasn't been activity on a page for some time — the connection is still active and you can make and receive calls.

BEFORE USING

HANDSET DESCRIPTION

**No Service**

Phone cannot receive a signal from the system.

**GPS Icon**

Location Service of your phone is disabled/enabled.

**Voice Privacy**

Indicates Voice Privacy mode.

**SSL (Secured Socket Layer)**

Indicating that secure communication between client and server has been established during data communication using encryption.

**TTY**

TTY mode is active.

**Bluetooth**

Indicates Bluetooth mode.

**Bluetooth Active**

Indicates Bluetooth Active mode.

**Bluetooth Conn**

Indicates Bluetooth Connect.

**Battery**

Battery charging level — the more blocks, the stronger the charge.

**Keylock**

Indicates Keylock.

HANDSET DESCRIPTION

BEFORE USING

**New Messages**

Indicates you have new message.

**Voicemail**

Indicates you have voicemail messages.

**Missed Calls****Calendar Appointment**

Event Alarm is active.

**Speaker Phone**

Phone is in Speaker Phone mode.

**Alarm**

Appears when an alarm is set.

**All Sounds Off**

Ringer volume is set to off.

**Alarm Only**


Phone will alert you with an alarm tone.

**Vibrate Only**

Phone will vibrate when call is received.

■ BATTERY INSTALLATION


- 1 Place the battery on the back of the phone so the metal contacts match up on the battery and in the battery cavity.
- 2 Push the battery down into the battery cavity until it locks into place.
- 3 Place the battery cover over the battery and slide up into place.

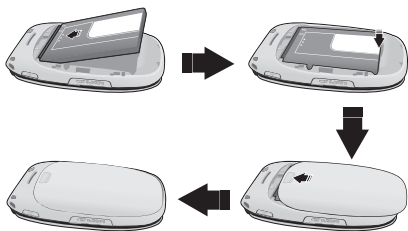

If the battery is not correctly placed in the compartment, the handset will not turn on and/or the battery may detach during use.


■ BATTERY REMOVAL

- 1 Push down the release latch button, then slide the battery cover off the phone.
- 2 Lift the battery up and out of the battery cavity.

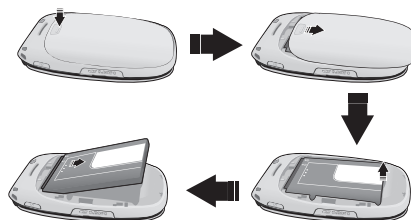

■ BATTERY CHARGING

- 1 Plug the AC/DC Travel Adaptor into a standard outlet.
- 2 Plug the other end of the AC/DC Travel Adaptor into the upper of left side your phone. The battery must be installed onto the phone.

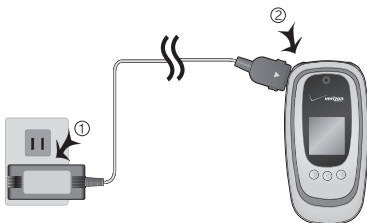


- When you charge the battery with the phone power off, you will see a charging status screen. You cannot operate the phone until it is powered on.
- The battery is not charged at the time of purchase.
- Fully charge the battery before use.
- It is more efficient to charge the battery with the handset powered off.
- The battery must be connected to the phone in order to charge it.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.

■ DO'S

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep batteries in a temperature between 41°F (5°C) and 95°F (35°C). If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Completely drain the battery before recharging. It may take one to four days to completely drain.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly dispose of the battery according to local laws.

■ DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't accidentally short circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery.
- Don't leave the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire.

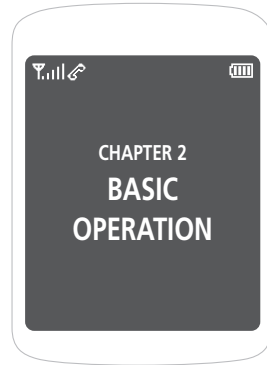

This chapter addresses and explains the basic features of your phone including:

- TURNING THE PHONE ON / OFF
- ACCESSING THE MENU
- MENU SUMMARY
- BASIC FUNCTIONS
- DURING A CALL
- MAKING AN EMERGENCY CALL
- USING THE MICRO SD CARD

■ TURNING THE PHONE ON

- 1 Press and hold **END** until your "Power On" logo appears and the tone sounds.



If "Enter Lock Code" appears on the display enter your 4-digit password to unlock your phone.

■ TURNING THE PHONE OFF

- 1 Press and hold **END** until your "Power Off" logo appears.



- Immediately charge or recharge the battery when "BATTERY LOW" appears on the display. Memory may possibly be damaged if the phone turns off due to the battery completely draining.
- Turn the phone off before removing or replacing the battery. If the phone is on, unsaved data may be lost.

Your phone can be customized via the menu. Each function can be accessed by scrolling with the Navigation Key or by pressing the number that corresponds with the menu item.

- 1 To access the menu in the idle mode, press **OK** [MENU].
- 2 To scroll through the menu use the Navigation Key .
- 3 To return to the previous page, press **CLR** .
To exit the current menu and return to the idle mode, press **END** .
- 4 Press the Navigation Key to enter a function when its main page is displayed or press its assigned number to have direct access to the function.

**Hotkey**

In idle mode, move the Navigation Key as follows to access these functions:

- **Leftward movement** : Shortcut key 1
- **Upward movement** : Shortcut key 2
- **Rightward movement** : Shortcut key 3
- **Downward movement** : Shortcut key 4

BASIC OPERATION
MENU SUMMARY

MAIN MENU	2 ND DEPTH	3 RD DEPTH	4 TH DEPTH
1. GET IT NOW	1. Music & Tones	1. V CAST Music 2. Get New Ringtones 3. My Ringtones	1. Get New Applications 1. Get New Ringtones
	2. Picture & Video	4. My Music 5. My Sounds 6. Sync Music 1. V CAST Videos 2. Get New Pictures	1. Record New 1. Get New Applications
	3. Games	3. My Pictures 4. My Videos 5. Take Picture 6. Record Video 7. PIX Place 1. Get New Applications	
	4. News & Info 5. Tools on the Go	1. Get New Applications	
	6. Extras	1. Get New Applications	
2. MESSAGING	1. New Message	1. TXT Message 2. Picture Message 3. Video Message	
	2. Inbox 3. Sent 4. Drafts 5. Voicemail 6. Mobile IM		
	7. E-mail 8. Chat	1. Get New Applications	
3. CONTACTS	1. New Contact 2. Contact List 3. Groups 4. Speed Dials 5. In Case of Emergency 6. My Name Card		

MENU SUMMARY
BASIC OPERATION

MAIN MENU	2 ND DEPTH	3 RD DEPTH	4 TH DEPTH
4. RECENT CALLS	1. Missed 2. Received 3. Dialed 4. All 5. View Timers		
5. SETTINGS & TOOLS	1. My Account 2. Tools	1. Voice Commands 2. Calculator 3. Calendar 4. Alarm Clock	1. Alarm 1 2. Alarm 2 3. Alarm 3
	3. Bluetooth Menu 4. Sounds Settings	5. World Clock 6. Notepad 7. Stop Watch 1. Add New Device 1. Call Sounds	1. Call Ringtone 2. Call Vibrate 1. TXT Message 2. Pic-Video Message 3. Voicemail
		3. Keypad Volume 4. Service Alerts	1. ERI 2. Minute Beep 3. Call Connect
		5. Power On/Off	1. Power On 2. Power Off
	5. Display Settings	1. Banner 2. Backlight 3. Wallpaper	1. Personal Banner 2. ERI Banner 1. Display 2. Keypad 1. Main Screen 2. Front Screen
		4. Display Themes 5. Dial Fonts 6. Clock Format	1. Main Clock 2. Front Clock

MAIN MENU	2 ND DEPTH	3 RD DEPTH	4 TH DEPTH
	6. Phone Settings	1. Standalone Mode 2. Set Shortcut keys	1. Left Key 2. Up Key 3. Right Key 4. Down Key 5. Reset All
		3. Voice Commands	1. Mode 2. Call Alert
		4. Language	
		5. Location	
		6. Security	1. Edit Codes 2. Restrictions 3. Phone Lock Setting 4. Lock Phone Now
		7. System Select	
	8 . NAM Select		1. Auto NAM 2. Change NAM
	7. Call Settings	1. Answer Options 2. Auto Retry 3. TTY Mode 4. One Touch Dial 5. Voice Privacy 6. DTMF Tones	
	8. Memory	1. Save Options 2. Phone Memory 3. Card Memory	
	9. Phone Info	1. My Number 2. SW Version 3. Icon Glossary	

■ MAKING A CALL

1 Enter a phone number.



To modify the phone number you have entered:

- To erase one digit at a time press **CLR** .
- To erase the entire number, press and hold **CLR** .

Phone number display in contact list

If there is no name in the Contact's name field, the highest priority phone number is displayed. If no phone numbers are stored, the email address appears.

All matching entries will be displayed. To call the selected number, press **SEND** .

To send the TXT, Picture or Video message with phone number:

- Enter a part of the phone number and then press Right Soft Key **...** [OPTIONS], select "New TXT Message, New Picture Message or New Video Message". Please refer to page 130, page 132 or page 134 for more details on "Send New TXT Message, Send New Picture Message or Send New Video Message".

2 Press **SEND** . The indicator, , appears on the display.



- If "CALL FAILED" appears on the display or the line is busy, press **END** or **SEND** .
- If you activate the "AUTO RETRY" function, the phone will automatically retry. (Refer to page 84).
- When you place or receive a call from stored phone numbers, the name will be displayed.
- There is another way to make a call through the VR mode, which is called "Call <Name><Loc>". Please refer to page 92 for more details.
- If "Enter Lock Code" appears on the display enter your 4-digit password to unlock your phone.

3 To end a call, press **END** .

ANSWERING CALLS

- 1 When your phone rings or vibrates, press **SEND** to answer the incoming call.
(Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any key.)



To ignore incoming calls, press Right Soft Key **☰** [IGNORE].

- 2 To end a call, press **END**.

SPEAKER PHONE

The Speaker Phone feature lets you hear audio through the speaker and talk without holding the phone.

- 1 To activate the Speaker Phone in idle, answering or calling modes, press Speaker Key **🔊**.
- 2 When the Speakerphone mode is on in the idle mode, the Speakerphone mode will be off one minute later. When Speakerphone mode is on in the idle mode, you make a call within one minute, the Speakerphone mode will be off upon ending the call.

CALLER ID FUNCTION

Identifies caller by displaying their phone number. If the caller's name and number are already stored in your contact list, name will appear. The caller ID is stored in the recent calls list.

WAIT/PAUSE FEATURE

Pauses are used for automated systems (i.e., voice mail, calling cards). Insert a pause after a phone number and then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.

- 1 To insert a wait/pause, enter a phone number and then press Right Soft Key **☰** [OPTIONS]. Select either 2-Sec Pause ("P") or a Wait ("W").
- 2 Press to dial **SEND** or Left Soft Key **☰** to save. Please refer to page 36 for more details about storing a phone number.

ANSWERING A CALL

- 1 To answer a call, press any key except **END**, Right Soft Key **☰**, **CLR**, Side Camera Key **📷**, Side AVR Key **🔊**, Speaker Key **🔊**, Side Volume Key **🔊/🔇** or Left Soft Key **☰**.


To select an answering option, press **OK** [MENU], then press the Navigation Key **🔍** right 2 times for the "Settings & Tools" menu. Pressing **7** [PAGES] for Call Settings, then **1** for Answer Options, select either "Flip Open", "Any Key", "Send Only" or "Auto w/ Hands-free".

- 2 To end the call, press **END**.



In Auto Answer Mode a call is automatically answered after a preset number of ring tones. See page 84 for more details.


■ MAKING AN INTERNATIONAL CALL

Press and hold . When “+” is displayed, enter the country and area codes, then complete the number and send the call.

■ 3-WAY CALLING

With 3-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be applied for each of the two calls.


- 1 Enter the number you wish to call and then press **SEND**.
- 2 Once you have established the connection, enter the second number you wish to call and then press **SEND**.
- 3 When you're connected to the second party, press **SEND** again to begin your 3-Way call.

 If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

■ CALL WAITING FUNCTION

Notifies you of an incoming call when you are already on a call by sounding a beep tone and displaying the caller's phone number.

- 1 To answer another call while on the phone, press **SEND**. This places the first call on hold. To switch back to the first caller, press **SEND** again.

 Call Waiting is a system dependent feature. Please contact your service provider for details.

■ CALLING A NUMBER FROM CONTACTS

Press Right Soft Key  [CONTACTS] to access the directory.

Select the desired phone number and press **SEND**.


■ ADJUSTING MASTER VOLUME

To adjust the master volume:


- 1 In idle mode, press the up or down side volume key.
- 2 Select one of the following options and press **OK** [SET] to save it.

- All Sounds Off
- Alarms Only
- Vibrate Only
- Low / Medium Low / Medium / Medium High / High



- Move the Navigation Key  up/down to adjust Earpiece volume during a call.
- Move the Side Volume Key up or down to adjust Earpiece volume during a call.

■ MUSIC PLAYER


Music Player is for playing WMA/MP3 files saved on a micro SD Card or internal memory. To display the play/list or play/all tracks when the phone is closed, press and hold .

Press  [PLAY/PAUSE], press  [FFW] or press  [FRW] to select another WMA/MP3 file. To stop the music player, open the shell and press **END**.

■ VIBRATE ON/OFF MODE

- 1 To activate vibrate on/off mode, press and hold .

■ AVAILABLE OPTIONS DURING A CALL

To display menu options during a call, press Right Soft Key  [OPTIONS].

MESSAGING

Enables you to send a message in the during a call.

- 1 Press Right Soft Key  [OPTIONS], then  for Messaging.

CONTACT LIST

To select the phone number in your Contact List.

- 1 Press Right Soft Key  [OPTIONS], then  for Contact List.

RECENT CALLS

To select the phone number in Recent Calls.

- 1 Press Right Soft Key  [OPTIONS], then  for Recent Calls.

AUDIO TO DEVICE / AUDIO TO PHONE

Display only if device supports Bluetooth connections. If device supports Bluetooth disconnected, appears Bluetooth Menu instead of Audio to device / Audio to phone.

- 1 Press Right Soft Key  [OPTIONS], then  for Audio to Device / Audio to Phone.

MAIN MENU

To access the phone's main menu in the during a call.

- 1 Press Right Soft Key  [OPTIONS], then  for Main Menu.

NOTEPAD

Enables you to compose and store reminders and notes in the during a call.

- 1 Press Right Soft Key  [OPTIONS], then  for Notepad.

BASIC OPERATION

MAKING AN EMERGENCY CALL

The 911 feature automatically places the phone in the Emergency Call Mode when you dial the preprogrammed emergency number, 911. It also operates in the Lock Mode and out of the service area.

■ 911 IN LOCK MODE

The 911 call service is available even in the Lock Mode.

- 1 Enter "911" and then press **SEND**.
- 2 The call connects.
- 3 The phone maintains the Emergency Mode for 5 minutes.

■ 911 USING ANY AVAILABLE SYSTEM

- 1 Enter "911" and then press **SEND**.
- 2 The call connects.
- 3 The phone will stay in Emergency Mode for 5 minutes.

While the phone is in the Emergency Mode for 5 minutes, the phone can receive an incoming call from any available system or you can make outgoing calls even in the Emergency Callback Mode. In this case, making a call can automatically end the Emergency Callback Mode.



The 911 call is not recorded in the recent call list.

USING THE MICRO SD CARD


BASIC OPERATION

The micro SD card stores sounds, images, photos and videos, music, and other files.

■ INSTALLING THE MICRO SD CARD

To install your micro SD card, use the following steps:

- 1 With the micro SD card slot opened, and the gold contacts facing down, insert the micro SD card into the slot.

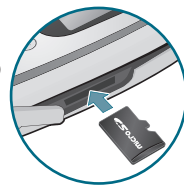

- 2 Push the card in until it clicks into place. Close the micro SD card slot.




To prevent possible damages, please keep Micro SD card slot closed at all times whether Micro SD card is inserted or not.

■ REMOVING THE MICRO SD CARD

To remove the micro SD card, use the following steps:

- 1 Open the micro SD card slot. Use your thumb to press and release the micro SD card. It will pop-out to allow you to remove the card.

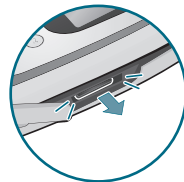

- 2 Remove the card and close the micro SD card slot.

BASIC OPERATION

USING THE
MICRO SD CARD

- When you insert the Micro SD card, make sure contact terminals face down.
- File names storing each media in the Micro SD card are "my_pix" for pictures, "my_flix" for videos, "my_music" for musics, "my_sound" for sounds.
- Do not remove the Micro SD card while reading or writing files. Otherwise it could be damaged.




To make sure the proper function of removable memory, please use the Micro SD card of SanDisk.

HOW IS MUSIC TRANSFERRED?

	Transfer from PC to Handset via USB Cable	Transfer from PC to Handset via Memory card
MP3 Songs	Yes	Yes
WMA Songs (Music ripped from CDs, e.g. unprotected content)	Yes	Yes
WMA Songs (Purchased from a Windows Media Player 10 music store such as V CAST Music, e.g. protected content)	Yes	Song will not play on the phone



- Music acquired from another online store as part of a subscription service or purchased in another format other than WMA/MP3 (e.g. AAC, AAC+) will not be recognized by V CAST Music devices.
- Only MP3 files with 192kbps or higher bitrate will be converted into WMA files.

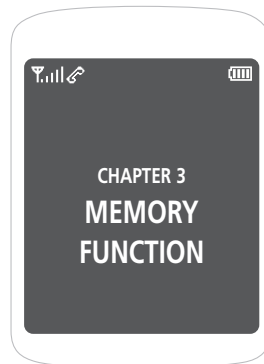










This chapter addresses memory functions including:

STORING A PHONE NUMBER
ENTERING LETTERS, NUMBERS & SYMBOLS
MAKING A CALL FROM THE PHONE BOOK

MEMORY FUNCTION

STORING A PHONE NUMBER

The phone book stores up to 500 entries.


- 1 Enter phone # and press Left Soft Key  [SAVE]. Choose "Add New Contact" or "Update Existing" and press  to Select.
- 2 If "Add New Contact" is selected, the phone number will appear above a list. Press the Navigation Key  up/down to choose the type of number you're adding, as indicated by the icon. Press  to select. If "Update Existing" is selected, your contact list is displayed. Choose the entry to add the phone number to, and then press . You will see the phone number updated in the existing list. Press  to select.
- 3 Enter a name. Please refer to page 37 for more details on entering letters, numbers & symbols. To change the input mode, press Left Soft Key  [Abc]. Press the Navigation Key  down to select other options (Mobile1.2, E-mail1.2, etc...). If entering a phone number, press Right Soft Key  [OPTIONS] to select one of the following options:

- Set Speed Dial
- Set As Default
- Add Pause

- 4 To store the entry, press  [SAVE]. "CONTACT SAVED" or "CONTACT UPDATED" will be displayed.

ENTERING LETTERS, NUMBERS & SYMBOLS

MEMORY FUNCTION







The input mode (Alpha editor) will automatically be activated when necessary to enter letters and numbers. As shown below, there are 6 available modes; Standard input mode (Abc)/(ABC), Input mode (Word), Numeric mode (123), Symbol mode (Symbols) and Quick Text mode (Quick Text). The input mode indicator appears on the upper right of the display when letters and numbers are entered. To select the desired input mode among the 6 modes below, press Left Soft Key  [Abc], and then enter letters and numbers.



Input mode indicator

- **Word** : Input mode
- **Abc** : Abc mode
- **ABC** : ABC mode
- **123** : Numeric mode
- **Symbols** : Symbol mode
- **Quick Text** : Quick Text mode

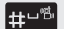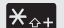The following illustrates the function assigned to each key in the Alpha Editor.

KEY	FUNCTION
	Abc - Press to change mode. [Word][Abc][ABC][123][Symbols][Quick Text]
	Next - Press to view the next matching word if the highlighted word is not the word you intended.
	Space - Press to accept a word and add a space.
	Caps Lock - Press to select a letter case of the standard text input or text input mode. [Abc], [ABC] and [abc] indicate the standard text input. [Word], [WORD] and [word] indicate the predictive text input.
	Clear - Press to delete a character to the left of the cursor.
	Send - Send the letters and numbers you enter.

MEMORY FUNCTION

ENTERING LETTERS, NUMBERS & SYMBOLS

STANDARD INPUT MODE

Use the digit keys to enter letters, numbers and characters.

- 1 Enter letters using the key pad as follows:

Key Pad	1 Time	Repetitions 2 times	Repetitions 3 times	Repetitions 4 times	Repetitions 5 times
2ABC	A	B	C	2	A
3DEF	D	E	F	3	D
4GHI	G	H	I	4	G
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

To change the input mode, press Left Soft Key [Abc]. When entering special character such as . @ ? ! - , & : ' / 1, press repeatedly.

- 2 To enter a space, press . The cursor will automatically move to the next column.
- 3 Repeat until letters are entered.
There is a 160-letter limit.
- 4 To delete one digit, press . To delete the entire entry, press and hold .
- 5 To change from lowercase to uppercase, press .

ENTERING LETTERS, NUMBERS & SYMBOLS

MEMORY FUNCTION

- e.g. Select Abc mode by pressing Left Soft Key [Abc]. When you select this mode, the Abc icon appears as a visual confirmation.
- Find the key that corresponds to the letter you want to enter.
 - Press it as many times as needed for the letter to appear on the screen.
 - To enter the name "John":
Press [|kl] J
Press [, ,] o
Press [,] h
Press [,] n

WORD INPUT MODE

The input mode incorporates a built-in-dictionary to determine a word based on the entered characters. A word can be entered more quickly by pressing a key once per character.

- 1 Select the Word mode by pressing Left Soft Key [Abc].
- 2 Press a digit key once to enter the character you want and then enter all the characters to input the word you want.
- 3 To view the next matching word, press .
- 4 To accept the matching word, enter a space and then press .

MEMORY FUNCTION

ENTERING LETTERS, NUMBERS & SYMBOLS



To enter a compound word:

- Enter the first part of the word and then press the Navigation Key right to accept it.
- Enter the last part of the word and then press to enter the word.

e.g.

To enter "Fun fare" in the input mode.

- After you enter the 1st letter, press Left Soft Key [Abc] to select input mode and to choose the lower case (Word).
- Press , , and you will see "Fun" highlighted. Press to select it.
- Press , , , and until you see "ease" highlighted. Press to select the next matching word, you will see "fare" and then enter a space.

NUMERIC MODE

Allows you to enter numbers.

- 1 Press Left Soft Key [Abc] and scroll down to "123" and press to change to Numeric Mode.
- 2 To enter a number, press a digit key.

ENTERING LETTERS, NUMBERS & SYMBOLS

MEMORY FUNCTION

SYMBOL MODE

Allows you to enter symbols.

- 1 Press Left Soft Key [Abc] and scroll down to "Symbols" and press to change to Symbol Mode.
- 2 Select symbol you want to enter with the Navigation Key .

Use the Navigation Key to view a different line of symbols.

Press the Navigation Key up/down/left/right.

QUICK TEXT

Allows you to enter written sentences.

- 1 Press Left Soft Key [Abc] and scroll down to "Quick Text" and press to change to Quick Text Mode.
- 2 Select Quick Text you want to enter with the Navigation Key , press [OK].

MEMORY FUNCTION

MAKING A CALL THROUGH
THE CONTACT LIST

■ ONE-TOUCH/TWO-TOUCH DIALING

Ideal for frequently dialed numbers, this feature allows contact entries to be dialed via the keypad with only one or two key presses.

ONE-TOUCH DIALING:

1-9 : Press and hold the number you wish to connect for more than 1 second.

TWO-TOUCH DIALING:

10-22 : Press the first digit and second digits of the memory number short and long respectively.

97,98,99 : Pre-set numbers for Verizon Customer Service, and are free calls.

- 97 - #BAL: The billing balance will read for you or sent in a text message.
- 98 - #MIN: The minutes used will read for you or sent in a text message.
- 99 - #PMT: Pay a bill with a one-time payment or other payment options.





This chapter addresses accessing the menu and using its functions and features to customize your phone.


CONTACTS
RECENT CALLS
SETTINGS
VOICE TOOLS
TOOLS
MY ACCOUNT

Stores up to 500 entries, each of which can be assigned to a group. Entries can be retrieved by name or group.

■ NEW CONTACT

Adds a new entry.

- 1 Press **OK** [MENU], then **1**  for New Contact.
- 2 To enter a name or number, use the Navigation Key  to select the contact field.

- **PHONE BOOK FIELDS** : Name/Mobile 1/Home/Work/
E-mail 1/Group/Picture/Ringtone/
Mobile 2/Fax/E-mail 2.
- Under "Mobile 1", "Mobile 2", "Home", "Work" or "Fax" input the phone number and then by pressing Right Soft Key  [OPTIONS], you can choose from the following:
 1. **Set Speed Dial**
 2. **Set As Default**
 3. **Add Pause**


Please refer to page 37 for more details on entering letters, numbers & symbols.




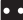
- 3 To save the entry, press **OK** [SAVE].
To return to the previous page, press **CLR** .




- For each new contact, at least 1 phone number or email address needs to be saved with the contact. "ADD AT LEAST ONE NUMBER OR E-MAIL ADDRESS" will be displayed if neither have been added.
- If the entry name is left empty and a phone number is provided, the entry will be saved and only the phone number will be displayed.

■ CONTACT LIST

Retrieves an entry by name and calls by simply pressing Right Soft Key  . You can review all the entries stored in your contact list or quickly find an entry by entering a name or its character string.

- 1 Press **OK** [MENU], then **2**  for Contact List press Right Soft Key  [CONTACTS].
- 2 The list of names in your contacts is displayed alphabetically.
- 3 Enter a name or its character string or scroll through the list with the Navigation Key  . Please refer to page 37 for more details on entering letters, numbers & symbols.
- 4 To edit the entry, press Left Soft Key  [EDIT]. To show detail of the entry, press **OK** [VIEW].

- To use and manage contacts, press Right Soft Key  [OPTIONS] then select:
 1. **New Contact**: To add a New Contact.
 2. **Erase**: To delete a contact.
 3. **New TXT Message**: To create a TXT message.
 4. **New Picture Message**: To create a Picture message.
 5. **New Video Message**: To create a Video message.
 6. **Call**: To call the contact.
 7. **Erase All**: To delete all contact list.
- To set as emergency number, select "In Case of Emergency". Please refer to page 50 for more details on "In Case of Emergency".

- 5 To call the selected number, press Right Soft Key  [OPTIONS] and then select "Call" or press **SEND** .

GROUPS

Groups allows you to classify phone entries into groups with up to 10 numbers in each group. The existing groups include Family and Work and they cannot be erased or renamed. You can add up to 28 more groups which can be changed or erased.

ADD NEW GROUP

- 1 Press **OK** [MENU], then **≡** [def] for Groups.
- 2 To select "New", press Left Soft Key **••** [NEW].
- 3 Input a new group name.
- 4 To save it, press **OK** [SAVE].

ASSIGN PHONE NUMBER TO GROUP

- 1 Press **OK** [MENU], then **≡** [def] for Groups.
- 2 To assign phone numbers to a Group, select "Add", press Right Soft Key **•••** [OPTIONS].
- 3 Select a location and then press **OK** [MARK].
Your contact entries will be displayed in alphabetical order.
- 4 Select the contact for the group and then press Left Soft Key **••** [DONE]. "CONTACT ADDED TO [GROUP NAME]" will be displayed. Repeat for each location for the Group.


CHANGE GROUP NAME

- 1 Press **OK** [MENU], then **≡** [def] for Groups.
- 2 Use the Navigation Key **⊙** to select the existing group name that you want to change.
- 3 To select "Rename", press Right Soft Key **•••** [OPTIONS].
- 4 Input a new group name.
- 5 To save it, press **OK** [SAVE].


SEND TXT MESSAGE TO A GROUP

- 1 Press **OK** [MENU], then **≡** [def] for Groups.
- 2 Select an existing group name with the Navigation Key **⊙**.
- 3 To select "New TXT Message", press Right Soft Key **•••** [OPTIONS].
- 4 Input a "Text", press Right Soft Key **•••** [OPTIONS] to select "Save As Draft", "Add Graphic", "Add Sound", "Font Size", "Add Name Card", "Add Quick Text", "Priority Level" and "Cancel Message".
- 5 To send the TXT message, press **OK** [SEND].
To save the TXT message, press Right Soft Key **•••** [OPTIONS] and then select "Save As Draft" and then press **OK**.

SEND PICTURE MESSAGE TO A GROUP


- 1 Press **OK** [MENU], then **≡ def** for Groups.
- 2 Select an existing group name with the Navigation Key .
- 3 To select “New Picture Message”, press Right Soft Key **⋮** [OPTIONS].
- 4 Input a “Text”, “Picture”, “Sound”, “Subject”, “Name Card”, and then press Right Soft Key **⋮** [OPTIONS] to select “Preview”, “Save As Draft”, “Add Quick Text”, “Add Slide”, “Priority Level”, “Remove Picture”, “Remove Sound” or “Cancel Message”.
- 5 To send the picture message, press **OK** [SEND].
To save the picture message, press Right Soft Key **⋮** [OPTIONS] and then select “Save As Draft” and then press **OK**.

SEND VIDEO MESSAGE TO A GROUP

- 1 Press **OK** [MENU], then **≡ def** for Groups.
- 2 Select an existing group name with the Navigation Key .
- 3 To select “New Video Message”, press Right Soft Key **⋮** [OPTIONS].

- 4 Input a “Text”, “Video”, “Subject”, “Name Card”, and then press Right Soft Key **⋮** [OPTIONS] to select “Preview”, “Save As Draft”, “Add Quick Text”, “Priority Level”, “Remove Video” or “Cancel Message”.
- 5 To send the video message, press **OK** [SEND].
To save the video message, press Right Soft Key **⋮** [OPTIONS] and then select “Save As Draft” and then press **OK**.

ERASE GROUP




- 1 Press **OK** [MENU], then **≡ def** for Groups.
- 2 Select an existing group name with the Navigation Key .
- 3 To select “Erase”, press Right Soft Key **⋮** [OPTIONS].
- 4 Select “Yes” to erase it, press **OK**.



When using Erase Group, the saved entries are moved to the “No Group”.


■ SPEED DIALS


In idle mode, calls can be placed to numbers stored in speed dial by pressing & holding the location number on the key pad. For a 2-digit location number, press the first number and then press and hold the second number.

- 1 Press **OK** [MENU], then **4 gmi** for Speed Dials.
 - 2 To assign a phone number to a location, select the location and then press **OK** [SET].
 - 3 Select the contact with the Navigation Key  then press **OK**.
 - 4 Select the phone number with the Navigation Key  then press **OK**.
-  **NOTE**
- “Unassigned” appears if the location is available.
 - To call an assigned number, press & hold the last digit of the speed dial #.
- 5 Select “Yes”, then press **OK**. “SPEED DIAL SET” will be displayed.

■ IN CASE OF EMERGENCY

Your phone has a special menu to organize your emergency contacts and information.

- 1 Press **OK** [MENU], then **5 jmi** for In Case of Emergency.
- 2 Select one of the entries using the Navigation Key . To set a new emergency number, choose Contact 1, 2 or 3. Press **OK** [ADD].


- 3 Select “From Contacts” or “Enter Number” with the Navigation Key . Press **OK**.

1. **From Contacts:** Search for a phone number which is stored in the contacts list.
2. **Enter Number:** To store the new emergency phone number in contacts.

- 4 Press **OK** to save it.
- 5 You can use this area to add personal note, including allergies, medications, and other health information's. If you want to add emergency personal info, select “Personal Info”. Press **OK** [VIEW]. Choose Note 1, 2 or 3, press **OK** [ADD]. Enter a special note that would prove useful in case of emergency, press **OK** [SAVE] to save it.

■ MY NAME CARD

Create your own business card, so that you can send all your details upon request by TXT message, picture&video message, by E-mail, by Bluetooth or etc...



- 1 Press **OK** [MENU], then **5 mmo** for My Name Card.
- 2 The list of my name card in your phone book is displayed. To edit it, press Left Soft Key  [EDIT], edit a my name card, then press **OK** [SAVE] to save it.
- 3 Select my name card with the Navigation Key, press **OK** [SEND] to send a my name card.
- 4 To move a New Message menu.



Please refer to page 130, for more details on “New Message”.

■ MISSED

Displays information about the 90 most recently missed calls.
Place a call to a missed call number by simply pressing **SEND**.

- To see a list of the 90 most recently missed calls, press **OK** [MENU], then press the Navigation Key  right once for the "Recent Calls" menu. Press **1**  for Missed.
If the number is already stored in your contacts, only the name appears. If the number is not stored, only the phone number appears.

- To view missed call details, press **OK** [OPEN].



Call details include date, time and phone number.

- Press Right Soft Key **⋮** [OPTIONS] and then select "Save" to save it or select "Erase" to delete it.



- **Save:** To store the phone number in your phone book.
- **Details:** If the selected entry is already stored in the contacts list, view the caller's information.
- **Erase:** To erase a missed calls listing.
- **Lock/Unlock:** To lock or unlock a missed calls listing.
- **Erase All:** To erase all missed calls listings.
- **View Timers:** To display usage time.



- After 90 missed calls, the oldest call will automatically be erased from the history.
- Press Left Soft Key **✉** [MESSAGE], to send a TXT, Picture or Video Message.

■ RECEIVED

Displays information about the 90 most recently received calls.
Place a call to a received call by simply pressing **SEND**.

- To see a list of the 90 most recently received calls, press **OK** [MENU], then press the Navigation Key  right once for the "Recent Calls" menu. Press **2**  for Received.
If the number is already stored in your contacts, only the name appears. If the number is not stored, only the phone number appears.

- To view received call details, press **OK** [OPEN].



Call details include date, time and phone number.

- Press Right Soft Key **⋮** [OPTIONS] and then select "Save" to save it or select "Erase" to delete it.


- **Save:** To store the phone number in your phone book.
- **Details:** If the selected entry is already stored in the contacts list, view the caller's information.
- **Erase:** To erase a received calls listing.
- **Lock/Unlock:** To lock or unlock received calls listing.
- **Erase All:** To erase all received calls listings.
- **View Timers:** To display usage time.



- After 90 received calls, the oldest call will automatically be erased from the history.
- Press Left Soft Key **✉** [MESSAGE], to send a TXT, Picture or Video Message.

■ DIALED

Displays information about the 90 most recently dialed numbers. Place a call to a dialed call by simply pressing **SEND**.

- 1 To see a list of the 90 most recently dialed numbers, press **OK** [MENU], then press the Navigation Key  right once for the "Recent Calls" menu. Press **DEL** for Dialed. If the number is already stored in your contacts, only the name appears. If the number is not stored, only the phone number appears.

- 2 To view dialed call details, press **OK** [OPEN].



Call details include type of call, date, time and phone number.

- 3 Press Right Soft Key **...** [OPTIONS] and then select "Save" to save it or select "Erase" to delete it.


- **Save:** To store the phone number in your phone book.
- **Details:** If the selected entry is already stored in the contacts list, view the caller's information.
- **Erase:** To erase a dialed calls listing.
- **Lock/Unlock:** To lock or unlock dialed calls listing.
- **Erase All:** To erase all dialed calls listings.
- **View Timers:** To display usage time.



- After 90 dialed calls, the oldest call will automatically be erased from the history.
- Press Left Soft Key **MSG** [MESSAGE], to send a TXT, Picture or Video Message.

■ BLOCKED

This menu appears only when "Incoming Call Restriction" is set. Displays information about the 90 most Incoming Call numbers. Place a call to a blocked call.

- 1 To see a list of the 90 most recently blocked numbers, press **OK** [MENU], then press the Navigation Key  right once for the "Recent Calls" menu. Press **4 ght** for Blocked and then enter your restriction code, press **OK**. If the number is already stored in your contacts, only the name appears. If the number is not stored, only the phone number appears.

- 2 To view dialed call details, press **OK** [OPEN].



Call details include type of call, date, time and phone number.

- 3 Press Right Soft Key **...** [OPTIONS] and then select "Save" to save it or select "Erase" to delete it.


- **Save:** To store the phone number in your phone book.
- **Details:** If the selected entry is already stored in the contacts list, view the caller's information.
- **Erase:** To erase a blocked calls listing.
- **Lock/Unlock:** To lock or unlock blocked calls listing.
- **Erase All:** To erase all blocked calls listings.
- **View Timers:** To display usage time.



- After 90 blocked calls, the oldest call will automatically be erased from the history.
- Press Left Soft Key **MSG** [MESSAGE], to send a TXT, Picture or Video Message.
- Please refer to page 80 for more details on "Restrictions".

■ ALL

Displays information about the most recent received, dialed and missed calls.

- To see a list of the 270 most recent received, dialed and missed calls, press **OK** [MENU], then press the Navigation Key  right once for the "Recent Calls" menu. Press **S jkl** for All.
If the number is already stored in your contacts, only the name appears. If the number is not stored, only the phone number appears.



- If Incoming Call Restriction has not been set, press **4 ghi** instead of **S jkl**.
- Please refer to page 80 for more details on "Restrictions".

- To view details, press **OK** [OPEN].



Call details include type of call, date, time and phone number.

- Press Right Soft Key **⋮** [OPTIONS] and then select "Save" to save it or select "Erase" to delete it.


- Save:** To store the phone number in your phone book.
- Details:** If the selected entry is already stored in the contacts list, view the caller's information.
- Erase:** To erase a recent calls listing.
- Lock/Unlock:** To lock or unlock recent calls listing.
- Erase All:** To erase all recent calls listings.
- View Timers:** To display usage time.



- After the 270 received, dialed or missed calls, the oldest call will automatically be erased from the history.
- Press Left Soft Key **⋮** [MESSAGE], to send a TXT, Picture or Video Message.


■ VIEW TIMERS

Checks the usage time and manages your calls within the limit you set. The 11 timers include (Last Call, All Calls, Received Calls, Dialed Calls, Roaming Calls, Transmit KB, Received KB, Total KB, Last Reset, Lifetime Calls, Lifetime Data Counter):

- Press **OK** [MENU], then press the Navigation Key  right once for the "Recent Calls" menu.
Press **S mno** for View Timers.



- If Incoming Call Restriction has not been set, press **S jkl** instead of **S mno**.
- Please refer to page 80 for more details on "Restrictions".

- Select "Last Call", "All Calls", "Received Calls", "Dialed Calls", "Roaming Calls", "Transmit KB", "Received KB", "Total KB" with the Navigation Key .

To reset an individual, press Left Soft Key **⋮** [RESET], select "Yes," then press **OK**.


To reset all timer, press Right Soft Key **⋮** [RESET ALL], then select "Yes", press **OK**.

- To return to the previous page, press **OK**.


Customizes your phone and optimizes performance through a variety of settings.

■ BLUETOOTH

Bluetooth technology connectivity enables wireless connections between electronic devices. If connected with a Bluetooth Handsfree device, you can use your phone more freely. With DUN, you can also use the phone as a wireless modem. It can also be used to connect wirelessly to products that use Bluetooth wireless technology, such as computers. You can synchronize your phone and your PC using Bluetooth connectivity. Since devices with Bluetooth connectivity communicate using radio waves, your phone and the other device do not need to be in direct line-of-sight. The two devices only need to be within 10 meters (30 feet) of each other. The connection can be subject to interference from obstructions such as walls or other electronic devices. This device is compliant with Bluetooth specification 1.1, supporting the following profiles: HSP V1.1 (headset profile), HFP V1.0 (handsfree car kit profile), DUN V1.1 (dial-up networking), GAP (general access profile) and SPP V1.1 (serial port profile). To ensure interoperability between other devices supporting Bluetooth technology, use UTStarcom approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this phone. There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or Verizon. If you want more information on this function, visit the Bluetooth Technology organization Web site: <https://www.bluetooth.org/>.

To access the Bluetooth menu, press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **≡** ^{def} for Bluetooth Menu. And from the following options:

Add New Device—To set up a pairing between your phone and another device with Bluetooth technology. With Bluetooth activated, place the device you are connecting to in discoverable mode and select OK.

Set Off or Set On—To activate or deactivate Bluetooth connectivity. An active Bluetooth connection is indicated by  at the top of the display.



Options—To define how your phone is shown to other devices with Bluetooth connectivity. To change the name of your phone that is seen by other users, select My Phone Name, enter the new name, and select OK. To display your phone to other devices for one minute or to hide your phone from other users, select Discovery Mode > On or Off.



Important: Features using Bluetooth technology, or allowing such features to run in the background while using other features, increase the demand on battery power and reduce the battery life.

Bluetooth pairing from phone to PC





Bluetooth pairing between your phone and PC or laptop is initialized from your phone or from your PC or laptop. To connect from your phone, do the following:

- 1 To enable Bluetooth on your phone, press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **≡** ^{def} for Bluetooth Menu. To select On, press the left soft key. The Bluetooth icon  is displayed in the upper right corner of the main display left the battery icon when Bluetooth is enabled.
- 2 To pair your phone to your PC or laptop, select Add New Device. Place the PC you are connecting to in discoverable mode and select OK. The phone searches for Bluetooth devices in range and lists all devices found.
- 3 Scroll to your PC or laptop name in the list and select OK. Enter your password on your phone, then enter the same password on your PC or laptop.

- 4 Select Ask always or Always connect on your phone, and select OK. The message Port enabled is displayed on the phone confirming the pairing.

Bluetooth pairing from PC to phone

To initialize a Bluetooth connection from your PC or laptop to your phone, do the following:

- 1 To enable Bluetooth on your phone, press  [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press  for Bluetooth Menu. To select On, press the left soft key. The Bluetooth icon  is displayed in the upper right corner of the main display left the battery icon when Bluetooth is enabled.
- 2 In the Bluetooth menu, select Options with the right softkey.
- 3 Scroll to Discovery Mode and select OK.
- 4 Scroll to On and select OK. Your phone is in discoverable mode by other Bluetooth devices for one minute.
- 5 Press the End key once, or the Clear key twice to return to the standby mode.



The phone must be in the standby mode to pair with another device.

- 6 From your PC, search for Bluetooth devices. A list of devices shows the CDM-8960 or the name you selected for your phone.
- 7 Select your phone from the list of found devices and enter the password.

- 8 Your phone displays a message asking to pair with your PC or laptop. Select OK and enter the same password entered on your PC.
- 9 Select Ask always or Always connect on your phone, and select OK. The message Port enabled is displayed on the phone confirming the pairing. All services such as Dial up Networking (DUN) are available on the phone.
- 10 Available services are also listed on your PC or laptop. Select services you want to use with your phone.



If your phone is connected to a laptop or PC using Bluetooth, you cannot use the USB cable.

To use the USB cable, go to the Bluetooth menu, select the laptop or PC connected to your phone and then disable the port using the applicable softkey.

Unpairing a Bluetooth connection

To successfully unpair a Bluetooth connection, you must unpair both the phone and the PC or laptop. To unpair the connection, do the following:

- 1 To unpair the connection from the phone, scroll to the name of the PC and select OK. The message Port disabled is displayed on the phone confirming the unpairing.
- 2 Follow the Bluetooth instructions on you PC or laptop, or the Bluetooth dongle instructions for unpairing the PC or laptop from the phone. A dongle is a small USB device added to a PC or laptop that does not have a built-in Bluetooth connection. PC, laptop, and dongle products have website support for Bluetooth connectivity.

■ BLUETOOTH MENU

The CDM-8960 is compatible with devices that support the Bluetooth headset and hands-free profile(s)*. You may create and store 30 pairings within the CDM-8960 and connect to one device at a time. The approximate communication range for Bluetooth wireless technology is up to 30 feet (10 meters).



Read user guide of each Bluetooth accessory that you are trying to pair with your phone because the instructions may differ.

BLUETOOTH ON/OFF

The Power feature allows you to turn the Bluetooth function on and off.

- 1 Press **OK** [MENU], then press the Navigation Key right 2 times for the “Settings & Tools” menu. Press **☰ def** for Bluetooth Menu.
- 2 Press Left Soft Key **⏻** [SET ON/SET OFF] to activate/deactivate Bluetooth mode.

ADD NEW DEVICE

Pairing is the process that allows the handset to locate establish and register 1-to-1 connection with the target device.

- 1 Press **OK** [MENU], then press the Navigation Key right 2 times for the “Settings & Tools” menu. Press **☰ def** for Bluetooth Menu.
- 2 Select “1. Add New Device”, then press **OK**. If Bluetooth is set to off, “Turn Bluetooth power on?” will appear. Select “Yes” and press **OK**.

By pressing Right Soft Key **⏻** [OPTIONS], you can choose from the following:

My Phone Name: Your phone’s Bluetooth name will appear to other in-range Bluetooth devices, depending on your discovery mode. Enter a new name and press **OK** to save and exit.

Discovery Mode: Turns Discovery Mode “on” or “off.” If Discovery Mode is turned on, other devices will be able to find your device for one minute.

Supported Profiles: Displays the following list of options.

1. **Headset:** Supports use of a compatible Bluetooth headset for mono voice.
2. **Handsfree:** Supports Bluetooth headsets, and may also support other installed compatible Bluetooth devices with speakerphone capabilities, such as car kits or a conference room device. For Handsfree Car Kit Compatibility, refer to www.verizonwireless.com/bluetoothchart on the Verizon Wireless Website.
3. **Dial Up Networking:** Allows the phone to be used as a data modem with a compatible Bluetooth device, such as a laptop or PDA, over the VZW NationalAccess and/or VZW BroadbandAccess systems.”

- 3 Instructions (Place device you are connecting to in discoverable mode) will be displayed. Highlight the device and press **OK**.

- 4 The handset will prompt you for the passkey. Consult the Bluetooth accessory instructions for the appropriate passkey (typically "0000" - 4 zeroes). Enter the passkey and press **OK**.



The default PIN code may differ depending on Bluetooth devices. Please refer to the user guide of the Bluetooth device that you wish to use.

- 5 Once pairing is successful, select "Yes" and press **OK** to connect with the device.
- 6 Once paired, you will see the device listed in the "1. Add New Device" menu.

By pressing Right Soft Key **☰** [OPTIONS], you can choose from the following:

Remove Device: Removing a device from the paired list.

Rename Device: Renaming the paired device.

Incoming Security: To Select "Always Ask" or "Always Connect".

Device Info: Reviewing information about the paired device.

■ SOUNDS SETTINGS

CALL SOUNDS

To select a ringer type for incoming calls:

CALL RINGTONE

- 1 Press **OK** [MENU], then press the Navigation Key **⌂** right 2 times for the "Settings & Tools" menu. Press **4** **ghj** for Sound Settings, then **1** **@** **2** for Call Sounds, and then **1** **@** **3** for Call Ringtone.
- 2 Select your desired ringer type.

- **Up or Down key:** 1. Get New Ringtones or select your desired ringer type.
- Press Left Soft Key **☰** [PLAY/STOP] to play/stop sound.

- 3 Select one of the available ring types. To confirm, press **OK**.




CALL VIBRATE

- 1 Press **OK** [MENU], then press the Navigation Key **⌂** right 2 times for the "Settings & Tools" menu. Press **4** **ghj** for Sound Settings, then **1** **@** **3** for Call Sounds, and then **2** **abc** for Call Vibrate.
- 2 Select "On" or "Off" with the Navigation Key **⌂** and then press **OK** to save it.

ALERT SOUNDS

When selected, this setting alerts you to the following handset changes:




TXT MESSAGE

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **4 ghl** for Sound Settings, then **2 abc** for Alert Sounds, and then **1 i** for TXT Message.
- 2 Select "Tone", "Vibrate" or "Reminder" with the Navigation Key  and then select one of the following options by pressing the Navigation Key .

- **Tone:** 1. Get New Ringtones or select your desired ringer type.
- **Vibrate:** Select "On" or "Off".
- **Reminder:** Select "Once", "Every 2 Minutes", "Every 15 Minutes" or "Off".

- 3 To save, press **OK**.




PIC-VIDEO MESSAGE

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **4 ghl** for Sound Settings, then **2 abc** for Alert Sounds, and then **2 abd** for Pic-Video Message.
- 2 Select "Tone", "Vibrate" or "Reminder" with the Navigation Key  and then select one of the following options by pressing the Navigation Key .

- **Tone:** 1. Get New Ringtones or select your desired ringer type.
- **Vibrate:** Select "On" or "Off".
- **Reminder:** Select "Once", "Every 2 Minutes", "Every 15 Minutes" or "Off".

- 3 To save, press **OK**.

VOICEMAIL



- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **4 ghl** for Sound Settings, then **2 abc** for Alert Sounds, and then **3 def** for Voicemail.
- 2 Select "Tone", "Vibrate" or "Reminder" with the  and then select one of the following options by pressing the .

- **Tone:** 1. Get New Ringtones or select your desired ringer type.
- **Vibrate:** Select "On" or "Off".
- **Reminder:** Select "Once", "Every 2 Minutes", "Every 15 Minutes" or "Off".

- 3 To save, press **OK**.

KEYPAD VOLUME

To adjust key pad tone:

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **4 ghl** for Sound Settings, then **3 def** for Keypad Volume.
- 2 Select one of the following options by pressing the Navigation Key  up/down.




- Low ~ High
- Off

- 3 To save, press **OK**.

SERVICE ALERTS



ERI (Enhanced Roaming Indicator)

The Enhanced Roaming Indicator (ERI) feature displays a text banner on the display screen informing the handset user of which systems the wireless device is using as compared to the service plan they purchased. The ERI Banner text changes to tell a customer if they are using the: "Verizon Network", "Extended Network" or "Roaming".

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **4 ghl** for Sound Settings, then **4 ghl** for Service Alerts, and then **1 ** for ERI.
- ② Select "On" or "Off" with the Navigation Key  and then press **OK** to save it.



MINUTE BEEP

Sounds an alert every minute during a call.

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **4 ghl** for Sound Settings, then **4 ghl** for Service Alerts, and then **2 abc** for Minute Beep.
- ② Select "On" or "Off" with the Navigation Key  and then press **OK** to save it.

CALL CONNECT




Notifies you that a call has been successfully placed.

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **4 ghl** for Sound Settings, then **4 ghl** for Service Alerts, and then **3 def** for Call Connect.
- ② Select "On" or "Off" with the Navigation Key  and then press **OK** to save it.

POWER ON/OFF



POWER ON

Allows you to activate/deactivate the power on tones.

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **4 ghl** for Sound Settings, then **5 jkl** for Power On/Off, and then **1 ** for Power On.
- ② Select "On" or "Off" with the Navigation Key  and then press **OK** to save it.

POWER OFF

Allows you to activate/deactivate the power off tones.

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **4 ghl** for Sound Settings, then **5 jkl** for Power On/Off, and then **2 abc** for Power Off.
- ② Select "On" or "Off" with the Navigation Key  and then press **OK** to save it.

■ DISPLAY SETTINGS




Allows you to customize the display.

BANNER




You can choose to display a personal Banner greeting or the Enhanced Roaming Indicator (ERI) banner on the phone's screens:

PERSONAL BANNER

The text greeting can be up to 16 characters and is displayed on your phone's screen in standby mode.

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **S jkl** for Display Settings, then **I**  for Banner, and then **I**  for Personal Banner.
- ② Enter a new personal greeting.
To change the input mode, press Left Soft Key **••** [Abc].
- ③ Press **OK** to save it.




ERI BANNER

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **S jkl** for Display Settings, then **I**  for Banner, and then **E abc** for ERI Banner.
- ② Select "On" or "Off" with the Navigation Key  and then press **OK** to save it.

BACKLIGHT

Backlights the display and key pad and activates dimming for easy viewing in dark places.



DISPLAY

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **S jkl** for Display Settings, then **E abc** for Backlight, and then **I**  for Display.
- ② Select one of the following options with the Navigation Key .

7 Seconds, 15 Seconds, 30 Seconds, Always On, Always Off.

- ③ Press **OK** to save it.

KEYPAD




- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **S jkl** for Display Settings, then **E abc** for Backlight, and then **E abc** for Keypad.
- ② Select one of the following options with the Navigation Key .

7 Seconds, 15 Seconds, 30 Seconds, Always On, Always Off.


- ③ Press **OK** to save it.


WALLPAPER

MAIN SCREEN



- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **S jkl** for Display Settings, then **S def** for Wallpaper, and then **1 ght** for Main Screen.
- 2 Select “My Pictures” or “My Videos” with the Navigation Key .
- 3 Select Default to choose a pre-installed display, Downloads, Pic # or Video # to choose a display you have downloaded to your phone. To launch “Get It Now”, press Right Soft Key **...** [GET NEW]. To expand selected image or play video, press Left Soft Key **...** [VIEW/PLAY].
- 4 Select a display from the Animation and the Graphic list using the Navigation Key  and then press **OK** to save it.

FRONT SCREEN

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **S jkl** for Display Settings, then **S def** for Wallpaper, and then **2 abd** for Front Screen.
- 2 Select Default to choose a pre-installed display, Downloads, Pic # to choose a display you have downloaded to your phone. To launch “Get It Now”, press Right Soft Key **...** [GET NEW]. To expand selected image, press Left Soft Key **...** [VIEW].

- 3 Select a display from the Graphic list using the Navigation Key  and then press **OK** to save it.



DISPLAY THEMES

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **S jkl** for Display Settings, then **4 ght** for Display Themes.
- 2 Select one of the following options with the Navigation Key .

- Default
- Youth

- 3 Press **OK** to save it.



DIAL FONTS

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **S jkl** for Display Settings, then **S jkl** for Dial Fonts.
- 2 Select “Normal” or “Large” with the Navigation Key .
- 3 Press **OK** to save it.

CLOCK FORMAT

MAIN CLOCK

To change the main clock's appearance on the standby screen:



- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **S jkl** for Display Settings, then **S mno** for Clock Format, and then **I @ 2/3** for Main Clock.
- 2 Select one of the following with the Navigation key .

- Digital
- Analog
- Off

- 3 To save, press **OK**.

FRONT CLOCK

To change the main clock's appearance on the standby screen:

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **S jkl** for Display Settings, then **S mno** for Clock Format, and then **Z abc** for Front Clock.
- 2 Select one of the following with the Navigation Key .



- Digital
- Analog
- Minimize
- Off

- 3 To save, press **OK**.

■ PHONE SETTINGS

STANDALONE MODE


Standalone Mode allows you to turn off the phone's radio functions where they are restricted.



- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **S mno** for Phone Settings, then **I @ 2/3** for Standalone mode.
- 2 Select "On" or "Off" with the Navigation Key  and then press **OK** to save it.



In Standalone Mode, all menu functions can be accessed except making calls, receiving calls, data connection (Wap, Brew) and Bluetooth.

SET SHORTCUT KEYS

Your phone offers you the option of assigning a shortcut key () to a favorite or often-used function. To assign a shortcut to the key:

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **S mno** for Phone Settings, then **Z abc** for Set Shortcut Keys.
- 2 Select **I @ 2/3** for Left Key, **Z abc** for Up Key, **3 def** for Right Key or **4 ghj** for Down Key.
- 3 Select one of the following options with the Navigation Key , press **OK** to save it.

Get It Now/Bluetooth Menu/Calendar/Inbox/Settings & Tools/My Pictures/My Videos/My Music/Picture & Video/News & Info/My Ringtones/My Sounds/Games/Music & Tones/E-mail/Chat/Mobile IM/Alarm Clock/Calculator.

- To reset the shortcut keys, press **[S jkl]** for Reset All, select "Yes", then press **[OK]**.

VOICE COMMANDS

You can use voice commands to control your device.

MODE

- Press **[OK]** [MENU], then press the Navigation Key **[Up]** right 2 times for the "Settings & Tools" menu. Press **[S mng]** for Phone Settings, then **[3 def]** for Voice Commands, and then **[1 @]** for Mode.
- Select one of the following with the Navigation Key **[Up]**.

- **Prompt Mode:** If AVR key is pressed on the idle screen or in the Contact menu, voice call alert will be announced.
- **Readout Mode:** If AVR key is pressed on the idle screen or in the Contact menu, voice call alert will be announced, or in the Menu, Notice and Confirm window, the phone will readout main menu and information.
- **Tones Only Mode:** You can hear ringtone instead of voice call alert if AVR key is pressed on the idle screen or in the Contact menu.

- To save, press **[OK]**.



If you change the setting details in the phone's mode in Voice Commands, this will affect the mode in Sound (refer to page 98) or vice versa.

CALL ALERT

- Press **[OK]** [MENU], then press the Navigation Key **[Up]** right 2 times for the "Settings & Tools" menu. Press **[S mng]** for Phone Settings, then **[3 def]** for Voice Commands, and then **[2 abd]** for Call Alert.
- Select one of the following with the Navigation Key **[Up]**.

- **Ring Only:** Deactivate Voice Call Alert. You can hear ringtone only.
- **Caller ID + Ring:** Playback the Voice Call Alert only once and then you will hear ringtone.
- **Name Repeat:** Activate Voice Call Alert. You will hear the caller's details repeatedly.



- To save, press **[OK]**.



For more information about the enhanced voice commands supported by your device, see "Voice Tools". Please refer to page 90 for more details.



LANGUAGE

Selects the language in which letters are displayed on the screen.

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **6 mno** for Phone Settings, then **4 ghi** for Language.
- 2 Select “English” or “Español” with the Navigation Key .
- 3 Press **OK** to save it.

LOCATION

To determine whether or not the network system can detect your position:

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **6 mno** for Phone Settings, then **5 jkl** for Location.
- 2 Select “Location On” or “E911 Only” with the Navigation Key .

- **Location On:** Your location is now available to the network.
- **E911 Only:** Your location will be hidden from network & application except 911.

- 3 Press **OK** to save it.

SECURITY

Prevents unauthorized use of your phone. The following settings can be restricted:




After three consecutive incorrect Lock Code entries, “INCORRECT LOCK CODE. PLEASE REFER TO THE USER GUIDE”, and the Lock Code is blocked. If you forget any of these codes, contact your service provider.

EDIT CODES

Changes your Device/Location 4-digit password.


PHONE ONLY

Changes your Phone's 4-digit password.

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **6 mno** for Phone Settings, then **6 mno** for Security, and then enter your password, press **OK**.
- 2 Select **1 @** for Edit Codes, then **1 @** for Phone Only.
- 3 Enter a “New Code” then press **OK**.


CALLS & SERVICES


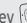

 
Changes your Calls & Service's 4-digit password.

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **6 mno** for Phone Settings, then **6 mno** for Security, and then enter your password, press **OK**.
- ② Select **1 @** for Edit Codes, then **2 abc** for Calls & Services.
- ③ Enter a "Current Code" then press **OK**.
- ④ Enter a "New Code" then press **OK** to save it.

RESTRICTIONS

You can restrict the use of your phone for outgoing calls, incoming calls, outgoing message, incoming message and dial-up modem.



- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **6 mno** for Phone Settings, then **6 mno** for Security, and then enter your password, press **OK**.
- ② Select **2 abc** for Restrictions, enter your password, then press **OK**.
- ③ Select **1 @** for Location Setting, **2 abc** for Calls, **3 def** for Messages or **4 ghi** for Dial-Up Modem.

1. **Location Setting:** To select "Unlock Setting" or "Lock Setting" with the Navigation Key .
2. **Calls:** To select "Incoming Calls" or "Outgoing Calls" and then select "Allow All", "Contact Only" or "Block All" with the Navigation Key .
3. **Messages:** To select "Incoming Messages" or "Outgoing Messages" and then select "Allow All" or "Block All" with the Navigation Key .
4. **Dial-Up Modem:** To select "Allow" or "Block" with the Navigation Key .

- ④ Press **OK** to save it.

PHONE LOCK SETTING

Prevents the phone from being used without entering the password first.


- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **6 mno** for Phone Settings, then **6 mno** for Security, and then enter your password, press **OK**.
- ② Select **3 def** for Phone Lock Setting.
- ③ Select "Unlocked" or "On Power Up" with the Navigation Key .

- **Unlocked:** Do not lock the phone.
- **On Power Up:** Not locked, but it is automatically locked when power is recycled.

- ④ Press **OK** to save it.



LOCK PHONE NOW

Lock the phone now.

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **6 mno** for Phone Settings, then **6 mno** for Security, and then enter your password, press **OK** .
- ② Select **4 ghi** for Lock Phone Now.
- ③ Lock the phone now.

SYSTEM SELECT

Selects the Preferred System.

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **6 mno** for Phone Settings, then **7 pars** for System Select.
- ② Select one of the following options with the Navigation Key  .



- Automatic B
 - Automatic A
 - Home Only
- ③ Press **OK** to save it.

NAM SELECT

Enables Auto NAM (Number Assignment Modules) or manually selects a NAM.



AUTO NAM

Automatically switches phone to proper NAM when you have multiple NAM registrations.

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **6 mno** for Phone Settings, then **8 tuv** for NAM Select, and then **1 @ i** for Auto NAM.
- ② Select “On” or “Off” with the Navigation Key  and then press **OK** to save it.

CHANGE NAM

Changes the NAM used by the phone when you have multiple registrations.




- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **6 mno** for Phone Settings, then **8 tuv** for NAM Select, and then **2 abd** for Change NAM.
- ② Select one of the following options with the Navigation Key  .

- NAM 1 - VERIZON
 - NAM 2 - VERIZON
- ③ Press **OK** to save it.

CALL SETTINGS

ANSWER OPTIONS

To select an answer mode:

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **7pqrs** for Call Settings, then **1**  for Answer options.
- 2 Select with the Navigation Key  and then press **OK** [MARK/UNMARK].

- Flip Open
- Any Key
- Send Only
- Auto w/ Hands-free




- 3 To save, press Left Soft Key **END** [DONE].



- If “Auto w/ Hands-free” selected, when you closed the flip, automatic answer is disabled.
- The four functions can be used at the same time.

AUTO RETRY

Automatically redials after a set time interval.




- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **7pqrs** for Call Settings, then **2**  for Auto Retry.
- 2 Select one of the following with the Navigation Key .

- Off
- Every 3 Seconds
- Every 5 Seconds
- Every 7 Seconds
- Every 10 Seconds

- 3 To save, press **OK** .

TTY MODE





Your phone is able to operate with a TTY (Teletypewriter) device in both analog and digital modes. This feature is system dependent and may not be available in all areas.

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **7pqrs** for Call Settings, then **3**  for TTY Mode.
- 2 Select one of the following with the Navigation key .

- TTY Full
- TTY + Talk
- TTY + Hear
- TTY Off





- 3 To save, press **OK** .

ONE TOUCH DIAL

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **7**  for Call Settings, then **4**  for One Touch Dial.
- 2 Select “On” or “Off” with the Navigation key  and then press **OK** to save it.

VOICE PRIVACY





Enhances voice privacy and avoids tapping during a call.

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **7**  for Call Settings, then **5**  for Voice Privacy.
- 2 Select “On” or “Off” with the Navigation key  and then press **OK** to save it.

On: Makes it more difficult to wire tap.

DTMF TONES




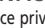

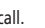


To adjust tone length:

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **7**  for Call Settings, then **5**  for DTMF Tones.
- 2 Select “Normal” or “Long” with the Navigation key  and then press **OK** to save it.

MEMORY

SAVE OPTIONS





You can save various data including Picture, Video and Sound files on either the phone’s memory or memory card.

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **8**  for Memory, then **1**  for Save Options.
- 2 Select **1**  for Pictures, **2**  for Videos or **3**  for Sounds with the Navigation Key  and then select one of the following options by pressing the Navigation Key .

- Phone Memory
- Card Memory

- 3 To save, press **OK** .



PHONE MEMORY

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the “Settings & Tools” menu. Press **8**  for Memory, then **2**  for Phone Memory.
- 2 Select one of the following options by pressing the Navigation Key  and then press **OK** .

- Phone Memory Usage
- My Pictures
- My Videos
- My Music
- My Sounds

- 3 The current options memory information appears at the display screen.
To return to the previous page, press **OK** .

CARD MEMORY

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **B tuv** for Memory, then **B def** for Card Memory.
- 2 Select one of the following options by pressing the Navigation Key  .



- Card Memory Usage
- My Pictures
- My Videos
- My Music
- My Sounds

- 3 The current options memory information appears at the display screen.
To return to the previous page, press **OK** .

PHONE INFO


MY NUMBER

Displays your phone number.

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **S wxyz** for Phone Info, then **I**  for My Number.
- 2 You will see the MDN/MIN and provider name.
- 3 To return to the previous page, press **OK** .


SW VERSION

Displays the (Software/Hardware/PRL/ERI/Browser/Get It Now) version.

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **S wxyz** for Phone Info, then **E ab8** for SW Version.
- 2 The software, hardware and browser version appears.
- 3 To return to the previous page, press **OK** .


ICON GLOSSARY

Displays the Indicator Icons of your cellular telephone.

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **S wxyz** for Phone Info, then **B def** for Icon Glossary.
- 2 A list of your phone indicator icons appear.
- 3 To return to the previous page, press **OK** .

Your phone is equipped with an AVR (Advanced Voice Recognition) feature. This feature allows you to make calls or use the phone's functions by simply using your voice. All you have to do is talk into the phone, and the phone will recognize your voice and complete tasks by itself.

■ AVR (ADVANCED VOICE RECOGNITION)

- 1 Press Side AVR Key , your phone turns to Voice Recognition mode.
- 2 The phone displays the Command menu and prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts. You can speak the name of the command after you hear a beep.









You can hear a beep in the Tone Only Mode (Settings -> Sound -> Mode -> Tones Only Mode) while you can see a prompt without a beep sound in the Prompt Mode or Readout Mode.

- Call <Name><Loc>
- Send <Msg Type>
- Lookup <Name>
- Play <Playlist>
- Go To <Menu>
- Check <Item>
- My Account
- Help Guide

When it recognizes one of these commands, the phone launches the associated application. If the phone does not hear a command within approximately eight seconds, it de-activates voice recognition without taking any action.


■ VOICE COMMAND WITHIN CONTACT

The Voice Command function is available when pressing Side AVR Key  in the Contact List and View Contact window.

- 1 Press  [MENU], then  for Contact List or press Right Soft Key  [CONTACTS].
- 2 The list of names in your contacts is displayed alphabetically.
- 3 Scroll through the list with the Navigation Key .
- 4 Press Side AVR Key , your phone turns to Voice Recognition mode.
- 5 The phone displays the Command menu and prompts you to say the name of the command you want to use.


- Call
- Read Out
- New Contact
- Modify
- Erase



- Voice Recognition for Call, Play, and Check commands can activate by AVR Side Long Press even without connection of Earjack and Bluetooth at Flip Close. For the menu which can not continue the action at Flip Close state such as Send MSG, Lookup etc, the pop-up screen will be displayed with "Flip Open to continue..". Spending several seconds after displaying the phrase, the device should return to the Idle state.
- Press Side AVR Key  when hearing the voice guide and you can use voice commands immediately without waiting for the voice guide to end.

■ CALL <NAME><LOC>

Use the Call command to voice dial a name from your contact list or a phone number. When dialing a number, pronounce each digit, but do not pause noticeably between the digits. If you experience problems dialing by number, you can adapt digit dialing to your voice with Settings -> Digit Dialing -> Adapt Digits.


1 Press Side AVR Key , your phone turns to Voice Recognition mode.

2 Say "Call".

Examples: - Call Tom Smith, - Call 617 555-1212, - Call Bob Carson's mobile, - Call Dee Harper at Home.

■ SEND <MSG TYPE>

Use the Send command to send a text or other type of message to a specified name or number.

1 Press Side AVR Key , your phone turns to Voice Recognition mode.


2 Say "Send" followed immediately by one of the following items:

- Text
- Picture
- Video

Examples: - Send Picture to Dee Harper's Mobile, - Send Text Tom Smith, - Send Video to Tom Smith's Mobile.

■ LOOKUP <NAME>

Use the Lookup command to retrieve and display information for any name stored in your contact list.


1 Press Side AVR Key , your phone turns to Voice Recognition mode.

2 Say "Lookup <Name>".

Examples: - Lookup Tom Jones.

■ PLAY <PLAYLIST>


Use the Play command to playback a song from the playlist. Say "PLAY" and your phone will playback the selected playlist for you.

1 Press Side AVR Key , your phone turns to Voice Recognition mode.

2 Say "Play <Playlist>".

■ GO TO <MENU>

Use the Go To command to open an application on your phone. You can say "Go To" by itself and be prompted to say the application name, or you can skip the prompt by saying "Go To" followed by the application name.


1 Press Side AVR Key , your phone turns to Voice Recognition mode.

2 Say "Go To" followed immediately by one of the following items:

- Contacts
- Recent Calls
- Messaging
- Get It Now
- Setting & Tools
- News & Info
- V CAST Videos
- My Music


■ CHECK <ITEM>

The Check command lets you check status information for your phone. You can say "Check" or "Check Status" to see and hear all status information.


- 1 Press Side AVR Key , your phone turns to Voice Recognition mode.
- 2 Say "Check" followed immediately by one of the following items:

- Status
- Voicemail
- Messages
- Missed Calls
- Time
- Battery
- Signal Strength
- Volume

■ MY ACCOUNT

- 1 Press Side AVR Key , your phone turns to Voice Recognition mode.
- 2 Say "My Account".
- 3 Connect "WAP Browser".





■ HELP GUIDE

- 1 Press Side AVR Key , your phone turns to Voice Recognition mode.
- 2 Say "Help Guide".

■ SETTINGS





CHOICE LISTS

When voice recognition is not confident it has recognized a name or number correctly, it will show you a list of up to three choices. You can control when choice lists appear.

- 1 Press Side AVR Key , your phone turns to Voice Recognition mode.
- 2 Press Right Soft Key  [SETTINGS], then  for Choice Lists.
- 3 Select "Automatic", "Always On" or "Always Off".
- 4 To save, press  [OK].

SENSITIVITY

The Sensitivity setting controls how the voice recognition software determines when a spoken word is a match. If you frequently experience the messages "Please Repeat..." or "No Match Found," adjust the sensitivity toward Reject Less. If you frequently experience false activations (when the phone recognizes a name you didn't say), adjust the sensitivity toward Reject More.






- ① Press Side AVR Key , your phone turns to Voice Recognition mode.
- ② Press Right Soft Key  [SETTINGS], then  [abc] for Sensitivity.
- ③ Scroll "Reject More", "Recommended" or "Reject Less".
- ④ To save, press  [OK].

DIGIT DIALING

ADAPT DIGITS







Digit Dialing is speaker independent, which means that no training or adaptation is required. Some users with heavy accents or unusual voice characteristics may find difficulty in achieving high accuracy with speaker independent Digit Dialing, so the Adapt Digits feature allows users to dramatically improve the digit accuracy through adaptation. Users who get acceptable digit recognition accuracy will find no additional benefit to performing the Adapt Digit adaptation.

- ① Press Side AVR Key , your phone turns to Voice Recognition mode.

- ② Press Right Soft Key  [SETTINGS], then  [def] for Digit Dialing.
- ③ Select  [g] for Adapt Digits, press  [OK].
- ④ Wait for the beep, and then repeat the digits using a normal tone of voice. (The phone plays back your recording and asks you if the recording sounds "OK.")
- ⑤ If the recording sounds OK (no mistakes and no background noises), say Yes. If you need to re-record the digits to fix any problems, say No. (The phone then prompts you to say the digits again.)
- ⑥ Wait for the beep, and then record the digits again. (Repeat this step until you are satisfied with the recording.)
- ⑦ After confirming that the recording sounds OK, repeat the recording process with the next set of digits. (After six sets of digits, the phone will ask you whether you want to do more adaptation. Answer Yes.)
- ⑧ Repeat steps 4-7 for another nine sets of digits. (After the nine set of digits, you will be half-way through the session and the phone will ask "More Adaptation?")
- ⑨ Select OK to continue for six more sets of digits, or press  [END] for partial adaptation. When you are finished with a full session, you will reach a screen that reads, "Adaptation Complete."






RESET DIGITS


Reset digit adaptation to factory default settings.

- ① Press Side AVR Key , your phone turns to Voice Recognition mode.
- ② Press Right Soft Key  [SETTINGS], then  for Digit Dialing.
- ③ Select  for Reset Digits, press  [OK].
- ④ Read “Reset digit adaptation to factory default settings?” and press  [OK].

SOUND**MODE**

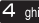The modes setting lets you control how you are notified by the system. In prompt mode, the system will prompt you for information. In readout mode, the system will prompt you for information and playback the menu items as you navigate. In tones only mode, the system will only prompt you with beeps.

- ① Press Side AVR Key , your phone turns to Voice Recognition mode.
- ② Press Right Soft Key  [SETTINGS], then  for Sound.
- ③ Select  for Mode, press  [OK].
- ④ Select “Prompt Mode”, “Readout Mode” or “Tones Only Mode”.








- ⑤ To save, press  [OK].



If you change the setting details in the phone's mode in Sound, this will affect the mode in Voice Commands (refer to page 76) or vice versa.

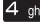





NAME SETTINGS**SPEED**

You can change the speed of name playback.

- ① Press Side AVR Key , your phone turns to Voice Recognition mode.
- ② Press Right Soft Key  [SETTINGS], then  for Sound.
- ③ Select  for Name Settings, then  for Speed, press  [OK].
- ④ Scroll “Faster”, “Recommended” or “Slower”.
- ⑤ To save, press  [OK].




VOLUME

You can change the volume of name playback.




- ① Press Side AVR Key , your phone turns to Voice Recognition mode.
- ② Press Right Soft Key  [SETTINGS], then  for Sound.
- ③ Select  for Name Settings, then  for Volume, press  [OK].

- ④ Scroll "Louder", "Recommended" or "Softer".
- ⑤ To save, press **OK** [OK].

ABOUT




- ① Press Side AVR Key , your phone turns to Voice Recognition mode.
- ② Press Right Soft Key  [SETTINGS], then **S**  for About.
- ③ The VoiceSignal version appears.
- ④ To return to the previous page, press **OK** [OK].




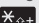
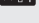
■ INFO

- ① Press Side AVR Key , your phone turns to Voice Recognition mode.
- ② Select the command menu with the Navigation Key  up/down, press Left Soft Key  [INFO].
- ③ Command menu information's appears.
- ④ To return to the previous page, press **OK** [OK].









■ CALCULATOR

To access the calculator:

- ① Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **2**  for Tools, then **2**  for Calculator.
- ② Follow the instructions below to calculate $8 \times 6 \div 4 - 2.5 = 9.50$



Input 8 and then press the Navigation Key  right.
 Input 6 and then press the Navigation Key  Left.
 Input 4 and then press the Navigation Key  down.
 Input 2 and then press the **X**  **÷**  to input (.).
 Press 5.
 Then press **OK** and you will see the answer.



Navigation Key  right : X, Navigation Key  down : -,
 Navigation Key  left : ÷, Navigation Key  up : +,
X  **÷**  : ., Left Soft Key  : Clear, **OK**  : =.

- ③ To reset, press Left Soft Key  [CLEAR].



- To change the displayed number from positive (+) to negative (-) and vice versa, press **±**  [±].
- Press Right Soft Key  [OPERATOR] to use parenthesis and "Exponent".

■ CALENDAR

Sets an event and reminds you of that event.

ADD NEW

- 1 Press **OK** [MENU], then press the Navigation Key **⬇** right 2 times for the “Settings & Tools” menu. Press **abd** for Tools, then **def** for Calendar.
- 2 Move the Navigation Key **⬇** to choose a date in the calendar and then press **OK** . Press Right Soft Key **...** [OPTIONS] to 1. Weekly View, 2. Go To Date, 3. Erase, 4. Erase Passed or 5. Erase All. Press Left Soft Key **+** [ADD] to set a new event.
- 3 To set a new event, press Right Soft Key **...** [OPTIONS] then select “Add”. The appointment field is highlighted. Press the Navigation Key **⬇** down to set the alarm options.

APPOINTMENT

Use the keypad to enter an appointment in your schedule.

START TIME

Use the keypad to set a start time and press Left Soft Key **+** to select “am” or “pm”.

END TIME

Use the keypad to set an end time and press Left Soft Key **+** to select “am” or “pm”.

START DATE

Use the keypad to change or enter the start date.

RECURRENCE

Use the Navigation Key **⬇** to select a repeat setting for the calendar. (Daily, Weekly, Monthly or Yearly).

BY COUNT

Use the keypad to enter a count.

END DATE

Use the keypad to change or enter the end date.

TIME ZONES

Use the Navigation Key **⬇** to select a time zones, press Left Soft Key **+** [SET]. (OFF, EST, EDT, CST, CDT, MST, MDT, PST, PDT, AKST, AKDT, HAST, HADT or GMT/UTC).

ALERT

Use the keypad to 1. Get New Ringtones or select the alert tone you wish to set.

VIBRATE



Use the Navigation Key **⬇** to select vibrate On/Off.

REMINDER




Use the Navigation Key **⬇** to select an alert time interval option (0 Minute, 5 Minutes, 10 Minutes, 15 Minutes).

- 4 Press **OK** [SAVE] to save it or **CLR** [CLR] to return to the calendar.
- 5 The date of the event will be marked on your calendar.

VIEW PLAN LIST

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **2 abc** for Tools, then **3 def** for Calendar.
- 2 To view the Calendar List:
Move the Navigation Key  to choose an event and then press **OK** [VIEW], press **OK** [VIEW]. Press Left Soft Key **••** [ERASE] and then select "Yes", press **OK** .

■ ALARM CLOCK

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **2 abc** for Tools, then **4 ghi** for Alarm Clock.
- 2 Select one of the entries using the Navigation Key  .
To set a new alarm, choose alarm 1, 2 or 3. To edit an existing alarm, select that alarm. Press **OK** .
- 3 The setting field will be highlighted. Press the Navigation Key  down to select alarm options.

ALARM

Use the Navigation Key  to select alarm On/Off.

TIME

Use the keypad to set a time for the alarm and press Left Soft Key **••** to select "am" or "pm".

FREQUENCY

Use the Navigation Key  to select a setting for the alarm (Once, Daily, Mon - Fri, Weekends).




RINGER

Press Left Soft Key **••** [SET], to use the keypad to 1. Get New Ringtones or select the alert tone you wish to set.

- 4 To save an alarm setting, press **OK** [SAVE].

■ WORLD CLOCK

To display the time and date in pre-programmed cities:

- 1 Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **2 abc** for Tools, then **5 jkl** for World Clock.
- 2 Select a city by pressing Left Soft Key **••** [CITIES].
Or use the Navigation Key  to select another city.
- 3 The world map appears with the city, its date and time.
Use the Navigation Key  to select another city.
DST (Daylight Saving Time) information should be applied for each city and persistent throughout the power cycle as well as application's life cycle, press Right Soft Key **•••** [DST] to set the DST options.

CITY

Use the Navigation Key  to select another city.


DST (Daylight Saving Time)

Use the Navigation Key  to select DST On/Off.

START DATE

Use the keypad to change or enter the start date.


START TIME

Use the keypad to set a start time and press Left Soft Key  to select "am" or "pm".

END DATE

Use the keypad to change or enter the end date.

END TIME

Use the keypad to set an end time and press Left Soft Key  to select "am" or "pm".

To save a DST setting, press  [SAVE].







- 4 To return to the previous page, press .

■ NOTEPAD

Your phone includes an internal notepad that can be used to compose and store reminders and notes.









ADD MEMO

To compose a memo (there is an 80-letter limit):

- 1 Press  [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press  for Tools, then  for Notepad.
- 2 To add a new memo, press Left Soft Key  [NEW]. Input a new text memo. (Please refer to page 37 for more details on entering letters, numbers & symbols.)
- 3 To save memo, press  [SAVE].

VIEW MEMO


To view a saved memo:



- 1 Press  [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press  for Tools, then  for Notepad.
- 2 The list of all memos, in saved order, is displayed. Select a memo and then press  [VIEW].
- 3 To add a new memo, press Left Soft Key  [NEW].
To erase a memo, press Right Soft Key  [OPTIONS] "Erase".
To erase all memos, press Right Soft Key  [OPTIONS] "Erase All".

- The selected memo will appear.
To edit it, press **OK** [EDIT] and input a new text memo and then press **OK** [SAVE] to save it.

■ STOP WATCH

Simultaneously times up to eight different events. To operate the stop watch:

- Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **abc** for Tools, then **pqrs** for Stop Watch.
- To measure a time period:
 - To start the stop watch, press **OK** [START].
 - To pause it, press **OK** [STOP].
 - To resume it, press **OK** [START].
To reset it, press Right Soft Key **...** [RESET].
- To time up to eight events at once:
 - To start, press **OK** [START].
 - To stop a time period and continue measuring another one, press Left Soft Key **...** [CONT].
 - To stop the second and continue measuring a third one, press Left Soft Key **...** [CONT].
 - To measure up to eight time periods, repeat the above steps.
 - To stop the stop watch, press **OK** [STOP].
 - To review the results, press Left Soft Key **...** [VIEW].
 - To return to the stop watch, press **OK** .
 - To reset it, press Right Soft Key **...** [RESET].

- Press **OK** [MENU], then press the Navigation Key  right 2 times for the "Settings & Tools" menu. Press **1**  for My Account.
- Connect "WAP Browser".



Your phone provides a unique feature -Get It Now- that enables you to download ringtones, wallpapers, games and more from your network to your phone. Please contact your service provider for the availability of these services.




GET IT NOW

MUSIC & TONES




To access the Music & Tones menu.

V CAST MUSIC



You can use the V Cast Music option to download music from the V Cast music catalog.

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu. Press **I**  for Music & Tones, then **I**  for V Cast Music.
- 2 Browse of Search the catalog to preview the songs you want.
- 3 Highlight the music that you want to purchase. Press **OK** [BUY] to purchase.
- 4 The Confirm Purchase screen will display the price and items you selected to purchase. Press **OK** [BUY] to accept the terms.
- 5 You'll receive a confirmation that your purchase was successful and your music is available for download. Press **OK** to continue.
- 6 Highlight Phone Memory or Memory Card for Storage location (Memory Card is recommended, and is only an option if a memory card is in your phone). Press **OK** to begin downloading. Wait for the phone to acquire the content license. Press **OK** when download is complete.
- 7 Press Right Sofy Key **...** [PLAY] to play the downloaded song immediately.

GET NEW RINGTONES

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu. Press **I**  for Music & Tones, then **abc** for Get New Ringtones.
- 2 If you have not downloaded any ringtones or ringtone applications previously, press **I**  for Get New Applications. The Get It Now browser will launch. From the Download menu, select a service provider and press **OK** . Then select the application and press **OK** to download it.
- 3 To download a ringtone, select the application from the Get New Ringtones menu. Once the application has launched, follow the directions to download your ringtones. Downloaded ringtones are saved to the My Ringtones menu.

MY RINGTONES

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu. Press **I**  for Music & Tones, then **def** for My Ringtones.
- 2 To play downloaded tunes or tones: Select the tunes or tones you want to play and then press **OK** [PLAY].
- 3 To erase downloaded tunes or tones: Select the tunes or tones you want to erase and then press Right Soft Key **...** [OPTIONS] and select "Erase" and then select "Yes", press **OK** .

- By pressing Right Soft Key **[OPTIONS]**, you can choose from the following:

DOWNLOADED RINGTONE:

1. **Erase:** Erase the current ringtone from your phone.
2. **Rename:** To edit the ringtone's title.
3. **Lock:** Lock/Unlock the current ringtone from your phone.
4. **Erase All:** To erase all the ringtones in your phone.
5. **File Info:** Displays information on the selected ringtone.

PRELOADED SOUND:

1. **Erase:** Erase the current ringtone from your phone.
2. **Erase All:** To erase all the ringtones in your phone.
3. **File Info:** Displays information on the selected ringtone.

- Press **[PLAY/STOP]** to play/stop ringtone.

- 4 To assign downloaded tunes or tones:
Select the tunes or tones you want to assign and then press Left Soft Key **[SET AS]**. Select "Ringtone", "Contact ID" or "Alert Sounds" and then press **[OK]**.

- By pressing Right Soft Key **[OPTIONS]** [SET AS], you can choose from the following:

1. Ringtone
2. Contact ID
3. Alert Sounds -
 1. All Messages
 2. TXT Message
 3. Pic-Video Message
 4. Voicemail




MY MUSIC

- 1 Press **[MENU]**, then press the Navigation Key **[HOME]** left 2 times for the "Get it Now" menu. Press **[MUSIC & TONES]** for Music & Tones, then **[MY MUSIC]** for My Music.
- 2 The My Music Menu consists of V Cast Music and all your saved songs - saved to your phone or your Micro SD card.
- 3 To download more music, highlight V Cast Music and press **[OK]**. You will connect to the V Cast service.








- Press Left Soft Key **[MY MUSIC/PLAYLIST]**.
- In My Music mode, pressing Right Soft Key **[OPTIONS]**, you can choose from the following:
 1. **Erase:** Erase the current music from your phone.
 2. **Rename:** To edit the music's title.
 3. **Lock:** Lock/Unlock the current music from your phone.
 4. **Move:** To move the selected music to the other save location.
 5. **Erase All:** To erase all the musics in your phone.
 6. **File Info:** Displays information on the selected music.
- In Playlist mode, pressing Right Soft Key **[OPTIONS]**, you can choose from the following:
 1. **View:** To edit a playlist.
 2. **Erase:** Erase the current playlist from your phone.
 3. **Erase All:** To erase all the playlist in your phone.
 4. **New Playlist:** To add a new playlist.


- 4 To play a saved song, scroll through the list of tracks and press **[PLAY]**. Press Left Soft Key **[MUTE]** to mute the song. Press Right Soft Key **[OPTIONS]** to 1. Play All, 2. Shuffle, 3. Get V Cast Music or 4. Play Music by Artist.

GET IT NOW

- 5 Press the Navigation Key  left to start the song over again. Press the Navigation Key  right to skip to the next song if there are other songs to be played. Press  to pause or play the song.




MY SOUNDS

- 1 Press  [MENU], then press the Navigation Key  left 2 times for the “Get it Now” menu. Press  for Music & Tones, then  for My Sounds.
- 2 To play downloaded sounds, select the sound you want to play, then press  [PLAY].
- 3 To erase downloaded sounds, select the sound you want to erase, then press Left Soft Key  [ERASE], then select “Yes”, press  [OK].










- By pressing Right Soft Key  [OPTIONS], you can choose from the following:
DOWNLOADED or RECORD SOUND:
 1. **Send:** To send a sound.
 2. **To PIX Place:** To upload selected sound to picture server.
 3. **Rename:** To edit the sound’s title.
 4. **Move:** To move the selected sound to the other save location.
 5. **Lock/Unlock:** To select “Lock” or “Unlock”.
 6. **Erase All:** To erase all the sounds in your phone.
 7. **File Info:** Displays information on the selected sound.

GET IT NOW




PRELOADED SOUND:

1. **Send:** To send a sound.
 2. **To PIX Place:** To upload selected sound to picture server.
 3. **File Info:** Displays information on the selected sound.
 - Press  [PLAY/STOP] to play/stop sound.
- 4 To send the Picture message, press Right Soft Key  [OPTIONS]. Then press  for Send. Please refer to page 132 for more details on “Send New Picture Message”.

RECORDING NEW TONES

- 1 Press  [MENU], then press the Navigation Key  left 2 times for the “Get it Now” menu. Press  for Music & Tones, then  for My Sounds.
- 2 Press  for Record New. “Press OK to start recording” will be displayed.
- 3 Press  to begin recording. When done, press  [STOP] to finish recording. The recording is automatically saved to your My Sounds list.
- 4 Your recording is saved with a number. To rename your recording, scroll to it in the My Sounds menu, then press Right Soft Key  [OPTIONS]. Then press  for Rename.

SYNC MUSIC


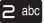

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the “Get it Now” menu. Press **I**  for Music & Tones, then **E**  for Sync Music.
- 2 Open Windows Media™ Player 10 on your PC and select the “Sync” tab.
- 3 Select “Edit Playlist” and select the songs from your library that you want to sync.
- 4 In Windows Media Player 10, select “V CAST Mobile Phone - Removable Storage Card” unless no memory card is available. Start the sync process in Windows Media Player 10 by pressing “Start Sync”. Remember, your phone must be in “Sync Music” mode.
- 5 When syncing completes, disconnect the cable from your phone and exit “Sync Music”.
- 6 Under the “Music & Tones” menu, open “My Music” to view and play your music.




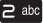


V CAST Music phones only support music imported from a CD via Windows Media™ Player 10, purchased from the V CAST Music Service, or other purchased Windows Media™ formatted music. iPod® and iTunes® compatible music files are not compatible with V CAST Music.

PICTURE & VIDEO

V CAST VIDEOS

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the “Get it Now” menu. Press **E**  for Picture & Video, then **I**  for V Cast Videos.
- 2 Connection to the V CAST Video Service.

GET NEW PICTURES

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the “Get it Now” menu. Press **E**  for Picture & Video, then **E**  for Get New Pictures, then select “Get New Applications”. (Get It Now will launch and take you to the download menu.)
- 2 Use the Navigation Key  to select a provider’s browser, press **OK**.
- 3 Select the desired application from the application list and then press **OK** to download it.





The downloaded application will be included in the list displayed when you access: Get New Pictures > 1. Get New Applications.

- 4 After executing the downloaded application, download the desired Picture. (The downloaded contents are saved in My Pictures.)

MY PICTURES

In Review Mode you can view all the pictures you have taken, store selected images in your phone, send pictures to the Online Album, delete images and access additional picture options.

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the “Get it Now” menu. Press **2 abc** for Picture & Video, then **3 del** for My Pictures.
- 2 In Review Mode, you can view all the pictures you have stored in your phone.
- 3 Select the picture with the Navigation Key  and then press **OK** [VIEW].



- To view the previous or next picture in detail view, press the Navigation Key  up/down.
- **By pressing Right Soft Key** **4...** [OPTIONS], you can choose from the following:
DOWNLOADED or TAKEN PICTURE:
 - **Send:** To send a picture message.
 - **Set As:** Assigns the selected picture to display for specific tasks. (Wallpaper/Picture ID)
 - **To PIX Place:** To upload selected picture to picture server.
 - **Take Picture:** To take new picture.
 - **Rotate:** To rotate the selected picture.
 - **Get New Pictures:** To download new picture.
 - **Rename:** To edit the picture’s title.
 - **Move:** To move the selected picture to the other save location.
 - **Lock/Unlock:** To set “Lock” or “Unlock”.
 - **Erase All:** To erase all the pictures in your phone.
 - **File Info:** Displays information on the selected picture, such as “File Name”, “Date”, “Time”, “Resolution”, “Size”.


PRELOADED PIX:

- **Set As:** Assigns the selected picture to display for specific tasks. (Wallpaper)
- **Take Picture:** To take new picture.
- **Rotate:** To rotate the selected picture.
- **Get New Pictures:** To download picture.
- **Erase All:** To erase all the pictures in your phone.
- **File Info:** Displays information on the selected picture, such as “File Name”, “Date”, “Time”, “Resolution”, “Size”.
- **Press Left Soft Key** **4...** [ERASE] to erase the current picture from your phone.

MY VIDEOS

In Review Mode, you can view all the videos you have taken, store selected video in your phone, send video to the Online Album, delete video and access additional video options.

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the “Get it Now” menu. Press **2 abc** for Picture & Video, then **4 gh** for My Videos.
- 2 In Review Mode, you can view all the videos you have stored in your phone.
- 3 Select the video with the Navigation Key  and then press **OK** [PLAY].

- To view the previous or next video in detail view, press the Navigation Key  up/down.

- By pressing Right Soft Key **[...]** [OPTIONS], you can choose from the following:
DOWNLOADED or TAKEN VIDEO:
 - 1. Send:** To send a video message.
 - 2. Record New:** To record new video.
 - 3. To PIX Place:** To upload selected video to video server.
 - 4. V CAST Videos:** To download V CAST video.
 - 5. Set As:** Assigns the selected video to display for specific tasks. (Wallpaper/Ringer ID)
 - 6. Rename:** To edit the video's title.
 - 7. Move:** To move the selected video to the other save location.
 - 8. Lock/Unlock:** To set "Lock" or "Unlock".
 - 9. Erase All:** To erase all the videos in your phone.
 - 10. File Info:** Displays information on the selected video, such as "File Name", "Date", "Time", "Resolution", "Size".
- Press Left Soft Key **[X]** [ERASE] to erase current video from your phone.

TAKE PICTURE




- 1** Press camera key or press and hold side camera key when flip is closed.
- 2** Point the camera lens at your subject. You can check the picture framing through the main display screen.
- 3** Press side camera key or press **[OK]** [TAKE] to take the picture.


- To view captured images, press Left Soft Key **[P]** [MY PICS].

- By pressing Right Soft Key **[...]** [OPTIONS], you can choose from the following:
 - 1. Resolution:** To select a resolution for a picture.
(Landscape: 1280x960/640x480/320x240/160x120, Portrait: 960x1280/480x640/240x320/120x160)
 - 2. Self Timer:** To activate the camera's timer function.
(Off/3 Seconds/5 Seconds/10 Seconds)
 - 3. Brightness:** To brightness up/down(-2, -1, 0, +1, +2).
 - 4. White Balance:** To select white balance.
(Auto/Sunny/Cloudy/Tungsten/Fluorescent/Darkness)
 - 5. Shutter Sound:** To select a shutter sound.
(Shutter/Silent/Say "Cheez"/Ready! 123)
 - 6. Color Effects:** To select color effect among the following: (Normal/Antique/Black and White/Negative)
 - 7. Capture Mode:** To select Capture mode "Landscape" or "Portrait".
 - 8. Sub Display:** To take a picture using the Sub LCD.
By pressing Right Soft Key **[...]** [OPTIONS], you can choose Sub LCD options: 1. Resolution/2. Self Timer/3. Brightness/4. White Balance/5. Shutter Sound/ 6. Color Effects/7. Capture Mode/8. Main Display
- User can control zoom directly by pressing the Navigation Key **[D]**. Press the Navigation Key **[D]** up/down: Zoom Up/Down. (Except 1280X960, 960X1280 mode).


- 4** After taking the picture it will be displayed. To save the picture, press Left Soft Key **[S]** [SAVE]. To go back to idle mode without saving the picture, press **[END]**.
To take another picture without saving the picture you just took, press Right Soft Key **[...]** [ERASE].
To send the picture to someone, press **[OK]** [SEND]. Please refer to page 132 for more details on "Send New Picture Message".

RECORD VIDEO


- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu. Press **2 abc** for Picture & Video, then **5 mmo** for Record Video. OR, in idle mode, press and hold  . OR, in camera preview mode, press  .
- 2 Point the camera lens at your subject. You can check the video framing through the main display screen.
- 3 Press camera key or press **OK** [REC] to take the video.

- To view captured videos, press Left Soft Key **••** [VIDEOS].
- **By pressing Right Soft Key **•••** [OPTIONS], you can choose from the following:**
 1. **Brightness:** To brightness up/down(-2, -1, 0, +1, +2).
 2. **White Balance:** To select white balance.
(Auto/Sunny/Cloudy/Tungsten/Fluorescent/Darkness)
 3. **Mute/Unmute:** To select Mute to Turn On/Off sound recording.
 4. **Sub Display:** To take a video using the Sub LCD.
By pressing Right Soft Key **••• [OPTIONS], you can choose Sub LCD options:**
 1. Brightness/2. White Balance/3. Mute/4. Main Display
- User can control zoom directly by pressing the Navigation Key  up/down: Zoom Up/Down.

- 4 To pause/resume recording, press Left Soft Key **••** [PAUSE/RESUME]. To stop recording, press **OK** [STOP].




- 5 After taking the video it will be displayed.
To save the video, press Left Soft Key **••** [SAVE].
To go back to idle mode without saving the video, press **END**  .
To erase video, press Right Soft Key **•••** [ERASE].
To send the video to someone, press **OK** [SEND]. Please refer to page 134 for more details on "Send New Video Message".

PIX PLACE


- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu. Press **2 abc** for Picture & Video, then **7 pixs** for PIX Place.
- 2 Connect "WAP Browser".

■ GAMES

DOWNLOADING NEW GAMES


- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu. Press **3 def** for Games, then select "Get New Applications", press **OK** . (Get It Now will launch and take you to the download menu.)
- 2 Use the Navigation Key  to select a provider's browser, press **OK** .
- 3 Use the Navigation Key  to select a game you wish to download, and press **OK** .

PLAYING DOWNLOADED GAMES

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu. Press **3** **def** for Games.
- 2 To play the game you downloaded, select the game and press **OK** [PLAY].


■ NEWS & INFO

CONNECTING NEWS & INFO

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu. Press **4** **ghil** for Connecting News & Info.
- 2 Connect "WAP Browser".


■ TOOLS ON THE GO

CONNECTING TOOLS ON THE GO

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu. Press **5** **ijkl** for Connecting Tools On the Go, then select "Get New Applications".



■ EXTRAS

CONNECTING EXTRAS

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu. Press **6** **mnop** for Connecting Extras, then select "Get New Applications".


■ GET IT NOW INFO

Displays information about "App. Memory", "Phone Memory", "View Log" and "Help":

- 1 Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu, press Right Soft Key **•••** [INFO].
- 2 Select one of the following options with the Navigation Key  .

- App. Memory
- Phone Memory
- View Log
- Help

- 3 To return to the previous page, press **OK** .

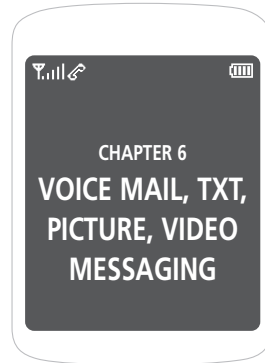

This chapter addresses Voice Mail, TXT, Picture, Video Messaging functions including:

WHEN A NEW MESSAGE ARRIVES

NEW MESSAGE

INBOX

SENT

DRAFTS

VOICE MAIL

MOBILE IM

E-MAIL

CHAT


ERASE ALL

SETTINGS

VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING

WHEN A NEW MESSAGE ARRIVES



- 1 The following display appears when a new message arrives.
- 2 To display the message, select "View Now" and then press **OK**.

Press **OK** [MENU], then press the Navigation Key  left 2 times for the "Get it Now" menu. Press **2** [abc] for Picture & Video, then **6** [mno] for Record Video.

VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING

NEW MESSAGE

■ SEND NEW TXT MESSAGE

- 1 Press Left Soft Key **...** [MESSAGE], then **1**  for New Message, and then **1**  for TXT Message.
- 2 Under "To", input the phone number and then press **OK**.

By pressing Right Soft Key **...** [ADD], you can choose from the following:

1. **From Contacts:** Search for a phone number which is stored in the contacts list.
2. **Recent Calls:** Search the phone number which is stored in the recent calls list.
3. **Groups:** Search the groups stored in the contacts list.
4. **To Contacts:** To store the phone number in contacts.

NEW MESSAGE

VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING

- 3 Under "Message", input a new TXT message and then press **OK** [SEND].
(Please refer to page 37 for more details on entering letters, numbers and symbols.)

Press Right Soft Key **...** [OPTIONS], you can choose from the following:


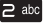
1. **Save As Draft:** To save the TXT message.
2. **Add Graphic:** Inserts simple graphic image in TXT message.
3. **Add Sound:** Inserts EMS sound in TXT message.
4. **Font Size:** Select "Small", "Normal" or "Large".
5. **Add Name Card:** Inserts name card in TXT message.
6. **Add Quick Text:** Inserts already written sentences in TXT message.
7. **Priority Level:** Select "High" or "Normal".
8. **Cancel Message:** To cancel message.

- 4 To send the TXT message, press **OK** [SEND].




- If one of the fields is inserted in TXT message field, the message is saved in the draft box.
- Input at least one TXT message field to save in the draft box.

■ SEND NEW PICTURE MESSAGE

- 1 Press Left Soft Key **••** [MESSAGE], then **1**  for New Message, and then **2**  for Picture Message.
- 2 Under "To", input the phone number and then press **OK**.

By pressing Right Soft Key **•••** [ADD], you can choose from the following:

1. **From Contacts:** Search for a phone number which is stored in the contacts list.
2. **Recent Calls:** Search the phone number which is stored in the recent calls list.
3. **Groups:** Search the groups stored in the contacts list.
4. **To PIX Place:** To send pictures by using online Address.
5. **To Contacts:** To store the phone number in contacts.

- 3 Under "Text", input a new TXT message and then press the Navigation Key  down.
(Please refer to page 37 for more details on entering letters, numbers and symbols. A maximum of 1,000 characters is allowed.)
- 4 Under "Picture", user can insert/remove only one picture.
Press Left Soft Key **••** [MY PICS], select picture you'd like to send and then press **OK**.
- 5 Under "Sound", user can insert/remove only one sound.
Press Left Soft Key **••** [SOUNDS], select the sound you'd like to send and then press **OK**.

- 6 Under "Subject", input a subject. (Please refer to page 37 for more details on entering letters, numbers and symbols. Max 100 characters support.)
- 7 Under "Name Card", enable to insert name card.
Press Left Soft Key **••** [ADD], select "My Name Card" or "Contacts", press **OK**, select my card you'd like to send and then press **OK**.


By pressing Right Soft Key **•••** [OPTIONS], you can choose from the following:

1. **Preview:** To preview a written picture message.
2. **Save As Draft:** To save the picture message.
3. **Add Quick Text:** Inserts already written sentences in TXT message.
4. **Add Slide:** To add a another message.
5. **Priority Level:** Select "High" or "Normal".
6. **Remove Picture:** To remove inserted picture.
7. **Remove Sound:** To remove inserted sound.
8. **Remove Name Card:** To remove inserted name card.
9. **Cancel Message:** To cancel message.

- 8 To send the Picture message, press **OK** [SEND].


■ SEND NEW VIDEO MESSAGE

1 Press Left Soft Key  [MESSAGE], then  for New Message, and then  for Video Message.

2 Under "To", input the phone number and then press .




By pressing Right Soft Key  [ADD], you can choose from the following:

1. **From Contacts:** Search for a phone number which is stored in the contacts list.
2. **Recent Calls:** Search the phone number which is stored in the recent calls list.
3. **Groups:** Search the groups stored in the contacts list.
4. **To PIX Place:** To send video by using online Address.
5. **To Contacts:** To store the phone number in contacts.

3 Under "Text", input a new TXT message and then press the Navigation Key  down. (Please refer to page 37 for more details on entering letters, numbers and symbols. A maximum of 1,000 characters is allowed.)

4 Under "Video", user can insert/remove only one video. Press Left Soft Key  [VIDEOS], select video you'd like to send and then press .

5 Under "Subject", input a subject. (Please refer to page 37 for more details on entering letters, numbers and symbols. Max 100 characters support.)

6 Under "Name Card", enable to insert name card. Press Left Soft Key  [ADD], select "My Name Card" or "Contacts", press , select my card you'd like to send and then press .

By pressing Right Soft Key  [OPTIONS], you can choose from the following:

1. **Preview:** To preview a written video message.
2. **Save As Draft:** To save the video message.
3. **Add Quick Text:** Inserts already written sentences in TXT message.
4. **Priority Level:** Select "High" or "Normal".
5. **Remove Video:** To remove inserted video.
6. **Remove Name Card:** To remove inserted name card.
7. **Cancel Message:** To cancel message.

7 To send the video message, press  [SEND].

The Inbox manages received TXT, Picture/Video, Web Alert messages. To access:

- 1 Press Left Soft Key [MESSAGE], then for Inbox.



- 2 Select a message and then press [OPEN]. The message is displayed. To delete a message, press Left Soft Key [ERASE], press .

When you select WAP PUSH message, press , to launch the browser.

- 3 Press Right Soft Key [OPTIONS].

PLAY AGAIN

- 1 To play a received Picture/Video message.

REPLY

- 1 Type your reply and then press .

ERASE INBOX

- 1 To erase all inbox message, select "Erase Inbox" and then select "Yes", press .



"Play Again" menu appears only when you receive a Picture/Video message.

REPLY W. COPY

- 1 Select to reply with the original message included.
- 2 To send the TXT, press [SEND].

FORWARD

- 1 Select to forward the TXT or Picture/Video message.
- 2 Input the phone number of the person you are sending the message and then press .
- 3 Input any TXT message to go along with the forwarded message and then press [SEND].

SAVE PICTURE (MMS PICTURE)

- 1 Select to save a picture to the "My Pictures" folder.

SAVE VIDEO (MMS VIDEO)

- 1 Select to save a video to the "My Videos" folder.

SAVE AS RINGTONE

- 1 If you receive a MMS message, select to save a sound to the "My Ringtones" folder.



- "Reply with Copy" menu appears only when you receive a TXT message.
- "Save Picture" menu appears only when you receive a Picture message.
- "Save Video" menu appears only when you receive a Video message.

SAVE SOUND(MMS SOUND)

- ① If you receive a MMS message, select to save a sound to the "My Sounds" folder.

SAVE OBJECTS(EMS SAVE OBJECTS)

- ① Select to save a graphic, sound, name card.

SAVE NAME CARD

- ① Select to save a name card to the contacts.

SAVE QUICK TEXT

- ① Select to save received text msg to "Quick Text".

ADD TO CONTACTS

- ① Select to save number to contacts.

LOCK/UNLOCK

- ① Select to lock or unlock the TXT or Picture/Video message.
- ② Select "Lock" to lock the message or "Unlock" to unlock the message and then press **OK** .

MESSAGE INFO

- ① Select to show received TXT/Picture/Video message information.



"Message Info" menu appears only when you receive a TXT/Picture/Video message.









- "Save Sound" menu appears only when you receive a Picture/Video message.
- "Save Objects" menu appears only when you receive a EMS message.
- "Save Name Card" menu appears only when you receive a Picture/Video message.
- Place a call to a received message number (Include Fr/CB phone number) by simply pressing **SEND** .





VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING

SENT



Manages sent TXT, Picture/Video messages or messages waiting to be sent.

- 1 Press Left Soft Key  [MESSAGE], then  for Sent.

-  : Lock
-  : Priority
-  : Sent
-  : Incomplete Delivery
-  : Delivered
-  : Sent Failed

- 2 Select a message and then press  [OPEN].
The message is displayed. To delete a message, press Left Soft Key  [ERASE], press  .
- 3 Press Right Soft Key  [OPTIONS].

FORWARD

- 1 Select to forward the TXT or Picture/Video message.
- 2 Input the phone number of the person you are sending the message and then press  .
- 3 Input any TXT message to go along with the forwarded message and then press  [SEND].

PLAY AGAIN

- 1 Select to play sent MMS message.



"Play Again" menu appears only when you send a MMS message.


RESEND

- 1 Select to resend a TXT or Picture/Video message.

SENT

VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING

ERASE

- 1 To erase this message, select "Erase" and then select "Yes", press  .


ERASE SENT

- 1 To erase all sent message, select "Erase Sent" and then select "Yes", press  .

ADD TO CONTACTS

- 1 Select to save number to contacts.

LOCK/UNLOCK

- 1 Select to lock or unlock the TXT or Picture/Video message.
- 2 Select "Lock" to lock the message or "Unlock" to unlock the message and then press  .

SAVE QUICK TEXT

- 1 Select to save sent msg to "Quick Text".


VIEW NAME CARD

- 1 To view include name card with in message.

MESSAGE INFO

- 1 Select to show send TXT/Picture/Video message information.






Place a call to a send message number by simply pressing  .

VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING

DRAFTS

Draft Folder contains any draft messages or saved messages. If message composition is interrupted by a voice call or other interrupting event, the text of the current composition is automatically saved in the drafts folder.

- 1 Press Left Soft Key **••** [MESSAGE], then **4** **ghj** for Drafts.

-  : Lock
-  : MMS Drafts
-  : SMS/EMS Drafts

- 2 Select a message and then press **OK** [EDIT].
The message is displayed. To delete a message, press Left Soft Key **••** [ERASE], press **OK** .
- 3 Press Right Soft Key **•••** [OPTIONS].

SEND

- 1 Select to send a selected message.

LOCK/UNLOCK

- 1 Select to lock or unlock the TXT or Picture/Video message.
- 2 Select "Lock" to lock the message or "Unlock" to unlock the message and then press **OK** .

ADD TO CONTACTS

- 1 Select to save number to contacts.

ERASE DRAFTS

- 1 To erase all drafts messages, select "Erase Drafts" and then select "Yes", press **OK** .

VOICEMAIL

VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING

Displays the number of voice mails and accesses them by pressing **SEND** .

- 1 Press Left Soft Key **••** [MESSAGE], then **5** **JKL** for Voicemail.

FIRST TIME USER

- 1 Dial *86 and then press **SEND** [SEND].
- 2 At the recording, press **##+*86** .
- 3 To set up your account follow the voice tutorial.

EXISTING USER

- 1 Dial *86 and then press **SEND** [SEND].
- 2 At the recording, enter your 4 digits password, and then press **##+*86** .
- 3 To listen to new messages, press **1** **®** **21** .

VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING

MOBILE IM

■ GET NEW

- 1 Press Left Soft Key **••** [MESSAGE], then **6 mno** for Mobile IM, and then **1 @** for Get New Applications.
- 2 Launch "Get It Now".

VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING

E- MAIL

- 1 Press Left Soft Key **••** [MESSAGE], then **7 pars** for E-Mail.
- 2 Browser launches.

VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING

CHAT

- 1 Press Left Soft Key **••** [MESSAGE], then **8 tuv** for Chat.
- 2 Browser launches.

ERASE ALL

VOICE MAIL, TXT, PICTURE, VIDEO MESSAGING

- 1 Press Left Soft Key **••** [MESSAGE], then Right Soft Key **•••** [OPTIONS].
- 2
 - 2.1. To erase all the inbox messages, press **1 @** [ERASE INBOX].
 - 2.2. To erase all the drafts messages, press **2 abc** [ERASE DRAFTS].
 - 2.3. To erase the sent messages, press **3 def** [ERASE SENT].
 - 2.4. To erase the all message, press **4 ghi** [ERASE ALL].
- 3 Select "Yes" and then press **OK**.

Set messaging preferences and default settings.

■ ALL MESSAGE SETTINGS

AUTO SAVE

- 1 Press Left Soft Key [MESSAGE], then Left Soft Key [SETTINGS], and then for All Messages.
- 2 Press [AUTO SAVE]. Select "On", "Off" or "Prompt" with the Navigation Key .

- **On:** All sent messages saved in the Sent box.
- **Off:** All sent messages not saved in the Sent box.
- **Prompt:** "Yes", "No" dialogue box displayed after sent message.

- 3 Press to save it.

AUTO ERASE

Automatically erases inbox messages when new messages arrive.

- 1 Press Left Soft Key [MESSAGE], then Left Soft Key [SETTINGS], and then for All Messages.
- 2 Press [AUTO ERASE]. Select "On" or "Off" with the Navigation Key .

- **On:** Oldest message erased from inbox automatically when Inbox is full.
- **Off:** Oldest message not erased from inbox automatically when Inbox is full.

- 3 Press to save it.

QUICK TEXT

To edit the Quick TXT message you have saved:

- 1 Press Left Soft Key [MESSAGE], then Left Soft Key [SETTINGS], and then for All Messages.
- 2 Press [QUICK TEXT].
 - 2.1. Select a message from the list. Press .
 - 2.2. To add a new Quick TXT message, press Right Soft Key [NEW], then enter text, press .
- 3 To erase the saved Quick TXT message, press Left Soft Key [ERASE].

Pre-defined quick text as below.

What's up?/Let's meet./Check this out!/Whacha doing?/
Thanks/What do you think?/You've gotta be here to enjoy
this./Would you like to join me for a date tonight?/
On my way./Yes/You're the best!/Call me.

VOICEMAIL#

- 1 Press Left Soft Key [MESSAGE], then Left Soft Key [SETTINGS], and then for All Messages.
- 2 Press [VOICEMAIL#]. Input a new voice call back number or edit voice call back number.
- 3 Press to save it.

ENTRY MODE

Sets an Entry Mode as a default. For example, if Word Mode is the default, its icon will appear.

- 1 Press Left Soft Key [MESSAGE], then Left Soft Key [SETTINGS], and then for All Messages.
- 2 Press [ENTRY MODE]. Select "Word", "Abc", "ABC" or "123" with the Navigation Key .
- 3 Press to save it.

CALLBACK

Edits a default callback number so that the recipient can callback or reply.

- 1 Press Left Soft Key [MESSAGE], then Left Soft Key [SETTINGS], and then for All Messages.
- 2 Press [CALLBACK#].
- 3 Select "Off" or "On" with the Navigation Key .
- 4 If "On" selected, input a new callback number, press to save it.

ALL MESSAGE SIGNATURE

Create a signature that can be automatically inserted at the end of all TXT and Picture messages.

- 1 Press Left Soft Key [MESSAGE], then Left Soft Key [SETTINGS], and then for All Messages.
- 2 Press [SIGNATURE]. To activate Signature function, put the cursor on Insert Signature then select "Custom" by using up or down direction keys. To deactivate Signature function, select "None".
- 3 To input "Signature", put the cursor on Edit Signature and then enter Signature Edit window by using right or left direction keys.

- 4 Press to save it.

■ TXT MESSAGE SETTINGS

AUTO VIEW

If the "Auto View" is set to on, the user will be able to view the message. If the "Auto View" is set to off, the user can view the message by entering SMS Menu-> Inbox.

1 Press Left Soft Key  [MESSAGE], then Left Soft Key  [SETTINGS], and then  for TXT Messages.

2 Press  [AUTO VIEW]. Select "On" or "Off" with the Navigation Key .


- **On:** TXT message displayed automatically.
- **Off:** TXT message displayed by going to the inbox or responding to interactive notification.

3 Press  to save it.

TXT MESSAGE SIGNATURE

Create a signature that can be automatically inserted at the end of a message.

1 Press Left Soft Key  [MESSAGE], then Left Soft Key  [SETTINGS], and then  for TXT Messages.




2 Press  [SIGNATURE]. To activate Signature function, put the cursor on Insert Signature then select "Custom" by using up or down direction keys. To deactivate Signature function, select "None".

3 To input "Signature", put the cursor on Edit Signature and then enter Signature Edit window by using right or left direction keys.

4 Press  to save it.

■ PIC-VIDEO MESSAGE SETTINGS

AUTO RECEIVE

1 Press Left Soft Key  [MESSAGE], then Left Soft Key  [SETTINGS], and then  for Pic-Video Messages.

2 Press  [AUTO RECEIVE]. Select "On" or "Off" with the Navigation Key .


- **On:** Picture message downloaded automatically.
- **Off:** Picture message must be retrieved from the inbox or at new TXT message prompt.

3 Press  to save it.

PIC-VIDEO MESSAGE SIGNATURE

Create a signature that can be automatically inserted at the end of a message.

- 1 Press Left Soft Key **[MESSAGE]**, then Left Soft Key **[SETTINGS]**, and then **[def]** for Pic-Video Messages.
- 2 Press **[abc]** [SIGNATURE]. To activate Signature function, put the cursor on Insert Signature then select "Custom" by using up or down direction keys. To deactivate Signature function, select "None".
- 3 To input "Signature", put the cursor on Edit Signature and then enter Signature Edit window by using right or left direction keys.
- 4 Press **[OK]** to save it.

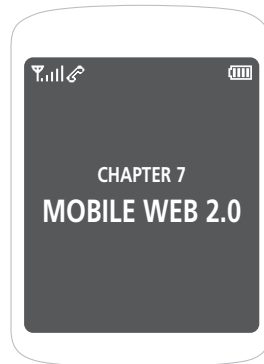




This chapter addresses Internet services and web browsing. For more detailed information contact your service provider.

STARTING INTERNET BROWSER
BROWSER MENU

LAUNCHING MOBILE WEB 2.0

Now you can access news, sports, weather, and e-mail from your phone. Mobile Web 2.0 keeps you updated by providing access to up-to-date information such as news, sports, weather and stock quotes when you subscribe to Internet service with your service provider. Please contact your service provider for a list of available websites and service details.

- 1 To start your Internet browser and access websites through your wireless handset press the Navigation Key  up.

The browser menu lists the actions necessary to operate the browser. To access, press the Navigation Key  up and then press Right Soft Key  [MENU].

VZW HOME

Returns the user to the home page.

- 1 To select "VZW Home".
Press the Navigation Key  up, then press Right Soft Key  [MENU]  for VZW Home.

ADD FAVORITE

Takes user to the VZW Add Favorite page.

- 1 To select "Add Favorite".
Press the Navigation Key  up, then press Right Soft Key  [MENU]  for Add Favorite.



For favorites, page name and URL need to auto-populate.

SEARCH

Takes user to the VZW Search page.

- 1 To select "Search".
Press the Navigation Key  up, then press Right Soft Key  [MENU]  for Search.

GO TO URL

Takes user to the VZW Search>Go to Site page.

- 1 To select "Go to URL".
Press the Navigation Key  up, then press Right Soft Key  [MENU]  for Go to URL.

SHOW URL

Displays the current URL.

- 1 To select "Show URL".
Press the Navigation Key  up, then press Right Soft Key  [MENU]  for Show URL.

BACK

Provides the ability to redisplay the page previously displayed.

- 1 To select "Back".
Press the Navigation Key  up, then press Right Soft Key  [MENU]  for Back.




MANAGE MEMORY

Will display following list of options.

- 1 To select “Manage Memory”.
Press the Navigation Key  up, then press Right Soft Key  [MENU]  for Manage Memory.

- **Clear Cache:** Clears the cache.
- **Clear History:** Clears the list of recently visited URLs.
- **Clear Cookies:** Clears saved cookies.
- **Autofill:** Automatically fills in character for browser recognized words.




SETTINGS

- 1 Selecting “Settings” will display following list of options.
Press the Navigation Key  up, then press Right Soft Key  [MENU]  for Settings.

- **Downloads:** Selecting the “Downloads” item allows the user to enable/disable downloading images, background sounds, and object downloads when a URL is accessed.
- **Restart Browser:** Selecting “Restart Browser” causes the history and cache to be cleared and returns the user to the homepage.
- **Scroll Mode:** Selecting “Scroll Mode” from the Settings menu allows the user to select the way text scrolls and the scroll speed.
- **Send Referrer:** When the “Send Referrer” item is selected from the Settings menu, the browser allows the user to turn on or off sending the referrer URL.


- **Key Press Time Out:** When the “Key Press Timeout” item is selected from the Settings menu, the browser allows the user to set the key press timeout as fast, medium or slow. Medium is 1.5 seconds, slow 2 seconds and fast is 1 second. The key press timeout is the period of time after which the cursor auto-advances to the next entry position. In most cases, a single key can be used to enter more than one character. Each time the key is pressed the last character of the line is replaced by the next choice for that key. As long as the same key is repressed within key press timeout, the last character cycles between all the choices for the key.
- **Connection Time Out:** When the Connection Timeout item is selected from the Settings menu, the browser allows the user to set the connection timeout. The connection timeout determines how long the browser will wait for a response from the network for a network request.


ADVANCED

- 1 Selecting “Advanced”, will display following list of options.
Press the Navigation Key  up, then press Right Soft Key  [MENU]  for Advanced.

- **About:** Displays the name of the supplier of the Browser and the Browser SW version.
- **Refresh:** Allows the user to reload the current URL.
- **History:** Displays the previous 20 number of visited URLs, where X=20.
- **Encryption:** Displays the following list of options.
 1. **Authentication:** Gives the option to turn Authentication Caching ON or OFF.
 2. **Root Certificate:** Shows the root security keys for TLS.
 3. **Current Certificate:** Shows the current site security key for TLS (if applicable).

EXIT

Press  to exit out of the browser and return to idle mode.

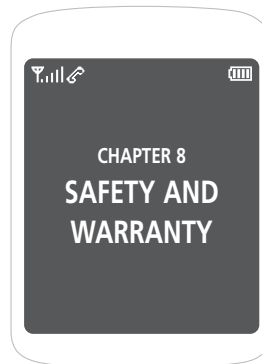

This chapter addresses the safety guidelines and precautions to follow when operating your phone. Before operating your phone, please be aware of all the safety details.

This chapter contains the terms and conditions of services and the warranty for your phone. Please review them thoroughly.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES
SAFETY INFORMATION FOR FCC RF EXPOSURE
SAR INFORMATION
FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES
FDA CONSUMER UPDATE
12 MONTH LIMITED WARRANTY

**Read This Information Before Using Your Handheld
Portable Cellular Telephone****EXPOSURE TO RADIO FREQUENCY SIGNALS**

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *
NCRP Report 86 (1986) *
ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

ANTENNA SAFETY

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Please contact your local dealer for replacement antenna.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

1* : American National Standards Institute.

2* : National Council on Radiation protection and measurements.

3* : International Commission on Nonionizing Radiation Protection.

ANTENNA SAFETY

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Please contact your local dealer for replacement antenna.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions so require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

ELECTRONIC DEVICES

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Therefore, use of your phone must be restricted in certain situations.

PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers :

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

OTHER MEDICAL DEVICES

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

VEHICLES

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

POSTED FACILITIES

Turn your phone OFF where posted notices so require.

OTHER SAFETY GUIDELINES

AIRCRAFT

FCC regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft. Always request and obtain prior consent and approval of an authorized airline representative before using your phone aboard an aircraft. Always follow the instructions of the airline representative whenever using your phone aboard an aircraft, to prevent any possible interference with airborne electronic equipment.

BLASTING AREAS

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on (1) AC/DC Travel Adaptor (2) Battery and (3) Product Using Battery.

Failure to follow the directions below could result in serious bodily injury and/or property damage due to battery liquid leakage, fire or rupture.

- DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
- DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using, lay down the unit to avoid possible damage due to instability.
- DO NOT expose this equipment to rain or spilled beverages.
- DO NOT use unauthorized accessories.
- DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized UTStarcom cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
- DO NOT short-circuit the battery terminals with metal items etc.



WARNING

- This product contains a chemical known to the State of California to cause cancer.
- This product contains a chemical known to the State of California to cause birth defects or other reproductive harm.

WARNING! READ THIS INFORMATION BEFORE USING

CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

BODY-WORN OPERATION

This device was tested for typical body-worn operations with the back of the phone kept 2.2 cm. from the body with a beltclip that contains metallic components. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories with which this device was tested. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



For more information about RF exposure, please visit the FCC website at www.fcc.gov.

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.38 W/Kg and when worn on the body, as described in this user guide, is 0.442 W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The SAR testing for Body-worn operation was performed with a belt clip that provided a 22mm separation. The User's Manual indicates that any holsters/clips used with this device should contain no metallic components.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on PP40VAL.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a sub-stancial margin of safety to give additional protection for the public and to account for any variations in measurements.

SAFETY AND WARRANTY

FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise.



FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES

The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with "normal usage" while using their hearing aid with the particular wireless phone. "Normal usage" in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

For information about hearing aids and digital wireless phone

- Fcc Hearing Aid Compatibility and Volume Control <http://www.fcc.gov/cgb/dro/hearing.html>
- Gallaudet University, RERC <http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm>
- Self Help for Hard of Hearing People Inc. [SHHH] www.hearingloss.org/hat/TipsWirelessPhones.htm
- The Hearing Aid Compatibility FCC Order http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf

SAFETY AND WARRANTY



U.S. Food and Drug Administration -
Center for Devices and Radiological Health
Consumer Update on Wireless Phones

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
 - Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
 - Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.
- FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration

- National Telecommunications and Information Administration

The National Institutes of Health participates in some inter-agency working group activities, as well. FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term "wireless phone" refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals.

However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be predisposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influ-

ential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues. FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the

first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones (<http://www.fda.gov/cdrh/phones/index.html>)
- Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)
- National Radiological Protection Board (UK) (<http://www.nrp.gov.uk/>)

SAFETY AND WARRANTY

12 MONTH LIMITED WARRANTY

UTStarcom Personal Communications (the Company) warrants to the original retail purchaser of this UTStarcom handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

12 MONTH LIMITED WARRANTY

SAFETY AND WARRANTY

When sending your wireless device to UTStarcom Personal Communications for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, UTStarcom Personal Communications is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to UTStarcom Personal Communications for repair or service.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 416-695-3060).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

SAFETY AND WARRANTY**12 MONTH LIMITED
WARRANTY**

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

IN USA: UTStarcom Personal Communications
555 Wireless Blvd.
Hauppauge, NY 11788
(800) 229-1235

IN CANADA: UTStarcom Canada Company
5535 Eglinton Avenue West
Suite# 234
Toronto, ON M9C 5K5
(800) 465-9672

**12 MONTH LIMITED
WARRANTY****SAFETY AND WARRANTY**

