

User Manual



OZ11

Thank you for choosing the Helio OZII wireless handset. Developed by our dedicated team of top researchers, this product allows for high speed communication services, such as web browsing, and data services, and has an animated, graphic menu system for easy access to its many features. Among its many advanced features, the T9 text input mode makes it much easier to enter letters and type messages. Other included technologies are:

- Full graphic display of 9 text input lines and 1 icon line with variable font size.
- Easy to enter text using T9 text input mode.
- Easy to select menu with finger mouse.
- Full QWERTY keyboard.
- Bluetooth Wireless Technology.
- Enhanced for web browsing & data services (i.e.; wireless internet access, full HTML browser)
- Animated Graphic User Interface (GUI) display compliant with CDMA2000 1X, EVDO.
- 260K QVGA LCD.
- Mobile camera (2.0 Megapixel) with flash
- Navigation Key and 27 keys aligned for more convenience.
- Sophisticated speaker handset features.
- Additional text messaging and web browsing services in addition to authentication, call forwarding, call transfer, and call waiting.

IMPORTANT INFORMATION

This OZII user manual contains very important information about how to handle and use the product. Please read this manual thoroughly, pay attention to the warranty on the back page and be alert to the exclusions and limitations of your warranty, related to the use of unauthorized components.

| | |
|---|-----------|
| CHAPTER 1. BEFORE USING YOUR HANDSET | 7 |
| INSIDE THE PACKAGE..... | 8 |
| HANDSET DESCRIPTION | 9 |
| HANDSET VIEW | 9 |
| THE FUNCTION KEYS | 10 |
| DISPLAY INDICATORS..... | 12 |
| DISPLAY INDICATORS..... | 12 |
| BATTERY USAGE | 14 |
| BATTERY INSTALLATION | 14 |
| BATTERY REMOVAL | 15 |
| BATTERY CHARGING..... | 16 |
| BATTERY HANDLING INFORMATION..... | 18 |
| DO's..... | 18 |
| DON'Ts..... | 18 |
| microSD CARD USAGE | 19 |
| USING microSD CARD (OPTIONAL ACCESSORY)..... | 19 |
| CHAPTER 2. BASIC OPERATION | 21 |
| TURNING THE HANDSET ON / OFF..... | 22 |
| TURNING THE HANDSET ON | 22 |
| TURNING THE HANDSET OFF | 22 |
| ACCESSING THE MENU..... | 23 |
| MENU SUMMARY | 24 |
| BASIC FUNCTIONS | 27 |
| MAKING A CALL | 27 |
| MAKING AN INTERNATIONAL CALL | 27 |
| CALLING A NUMBER FROM CONTACTS | 28 |
| ANSWERING A CALL | 28 |
| SPEAKER PHONE | 28 |
| ENTER LOCK MODE | 29 |
| 3-WAY CALLING | 29 |
| CALL WAITING | 30 |
| 2 SEC/HARD PAUSE | 30 |
| ADJUSTING VOLUME | 31 |
| CALLER ID..... | 31 |
| USING FLASHLIGHT | 31 |

TABLE OF CONTENTS

| | |
|--|-----------|
| USB CONNECTIONS | 32 |
| CALL HISTORY | 34 |
| DURING A CALL | 35 |
| AVAILABLE OPTIONS DURING A CALL | 35 |
| MAKING AN EMERGENCY CALL | 37 |
| 911 IN LOCK MODE | 37 |
| 911 USING ANY AVAILABLE SYSTEM | 37 |
| CHAPTER 3. MEMORY FUNCTIONS | 39 |
| STORING A HANDSET NUMBER | 40 |
| ENTERING LETTERS, NUMBERS & SYMBOLS | 41 |
| STANDARD INPUT MODE | 41 |
| T9WORD INPUT MODE | 43 |
| NUMERIC MODE | 44 |
| SYMBOL MODE | 44 |
| KOREAN MODE | 44 |
| USING QWERTY KEYBOARD | 45 |
| MAKING A CALL FROM THE PHONEBOOK | 46 |
| ONE-TOUCH/TWO-TOUCH DIALING | 46 |
| CHAPTER 4. MENU FUNCTIONS | 47 |
| CUSTOMIZE | 48 |
| RINGS | 48 |
| SCREEN | 49 |
| RING VIBRATION | 52 |
| VOLUME | 52 |
| AIRPLANE MODE | 53 |
| BLUETOOTH | 53 |
| SETTINGS | 57 |
| DEVICE | 64 |
| SURF | 67 |
| ACCESS HELIO PORTAL | 67 |
| GO | 67 |
| BROWSER MENU | 67 |
| SNAP | 72 |
| CAPTURE | 72 |
| VIDEO CAMERA | 77 |

TABLE OF CONTENTS

| | |
|---------------------------|------------|
| ALL MEDIA | 80 |
| MY ALBUMS | 81 |
| DATE VIEW | 82 |
| HELIO ALBUM | 83 |
| HELIO UP | 84 |
| MEMORY INFO | 84 |
| SETTINGS | 85 |
| PRINT PHOTOS | 86 |
| VIDEO+MUSIC | 87 |
| VIDEO | 87 |
| DOWNLOAD VIDEO | 87 |
| MUSIC | 89 |
| DOWNLOAD MUSIC | 90 |
| CONTACT | 91 |
| NEW CONTACT | 92 |
| EDIT CONTACT | 93 |
| DELETE CONTACT | 93 |
| SEARCH CONTACTS | 94 |
| COPY CONTACT | 95 |
| SYNCHRONIZE | 96 |
| GROUP DUPLICATES | 97 |
| SEPARATE DUPLICATES | 97 |
| SETTINGS | 98 |
| EMAIL AS VCARD | 99 |
| SELECT MULTIPLE | 99 |
| GAMES | 100 |
| DOWNLOAD GAME | 100 |
| PLAN | 101 |
| VOICE MEMO | 101 |
| CALENDAR | 102 |
| TO DO | 104 |
| WAKE-UP CALL | 106 |
| ALARM | 108 |
| CALCULATOR | 109 |
| WORLD TIME | 110 |
| UNIT CONVERTER | 111 |
| NOTEPAD | 102 |

TABLE OF CONTENTS

STOPWATCH 113
 TIP CALCULATOR 114
MESSAGE 115
 WHEN A NEW MESSAGE ARRIVES 115
 MESSAGE 115
 SEND TEXT/PIC 116
 TEXT/PIC INBOX 118
 OVER-THE-AIR SETTINGS SERVICE 119
 INSTANT MESSAGING 120
 EMAIL MESSAGES 122
 SEND EMAIL 123
 HELIO MAIL 125
 MAIL FOR MICROSOFT EXCHANGE 125
 YAHOO! 126
 AOL 126
 GMAIL 126
 WINDOWS LIVE 127
 EARTHLINK 127
 ADD EMAIL ACCOUNT 127
 ADD EMAIL ACCOUNT 128
 EMAIL MENU OPTIONS 128
APPS 129
CHAPTER 5. SAFETY AND WARRANTY 131
**SAFETY INFORMATION FOR WIRELESS HANDHELD
 HANDSETS 132**
SAFETY INFORMATION FOR FCC RF EXPOSURE 137
SAR INFORMATION 138
**FCC HEARING-AID COMPATIBILITY (HAC)
 REGULATIONS FOR WIRELESS DEVICES 140**
FDA CONSUMER UPDATE 142
PROTECT YOUR WARRANTY 149
12 MONTH LIMITED WARRANTY 150



This chapter provides important information about using OZII including:

- INSIDE THE PACKAGE
- HANDSET DESCRIPTION
- DISPLAY INDICATORS
- BATTERY USAGE
- BATTERY HANDLING INFORMATION
- microSD CARD USAGE

BEFORE USING

INSIDE THE PACKAGE

This package should include all items pictured below. If any are missing or different, immediately contact the retailer where you purchased the cellular device.



Handset



Manual CD



Stereo Headset



USB Data Cable



Travel Adaptor



Battery



Quick Start Guide



2.5 to 3.5mm Adapter



 
 
Charm

HANDSET DESCRIPTION


BEFORE USING

This handset is a dual-mode CDMA2000 1X, EVDO digital handset with camera and WEB browsing capabilities. The OZII weighs 5.61oz. The dimensions are 4.56" x 2.28" x 0.79".

HANDSET VIEW

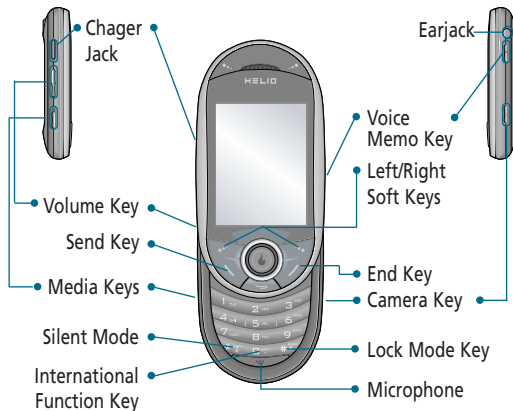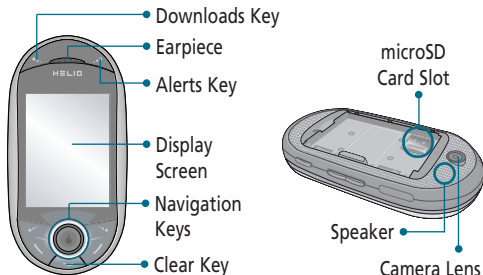

THE FUNCTION KEYS

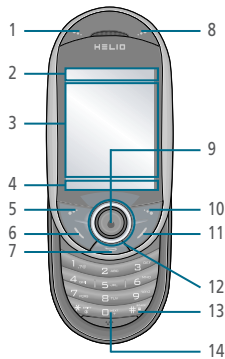 

- (1) **Download Store key** - Press to access Helio Store.
- (2) **Display Indicators** - See page 12 for a list of icons.
- (3) **Text & Graphic area**
- (4) **Soft Key Indicators** - Shows the functions currently assigned to each soft key and displays some icons.
- (5) **Left Soft Key** - Press to access the main menu or function displayed on bottom line of LCD.
- (6) **Send Key** - Press to make or receive a call. **Short Press:** Recent Calls.

- (7) **Clear Key** - Press to clear a digit from the display or to return to the previous page.
- (8) **Alerts Key** - Press to access Message Alert menu.
- (9) **OK Key**
- (10) **Right Soft Key** - Press to access contacts menu or function displayed on bottom line.
- (11) **End Key** - Press to turn the handset on/off, to terminate a call or to return to the initial page.

- (12) **THE NAVIGATION KEYS**
Long Press - Down for New Message, Left for Music Player and Right for Apps.
In Idle Mode - Press Up for Surf, Down for Message, Left for Video + Music and Right for Games.
Inside a Menu - Within a menu, use to scroll through menu options, or to select a function displayed on the screen.
- (13) **Lock Key** - Press and hold to enter lock mode.
- (14) **International Key** - A long press shall display a plus "+".



- (15) **Download Store key** - Press to access Helio Store.
- (16) **Shift key** - Enters upper case letters and symbols. You can either press the Shift key first and then the desired key or press both keys at the same time.
- (17) **Alt key** - To type the number or symbol printed in orange at the top of a key, hold down the orange-colored Alt key and then press one or more letter keys. Or, press and release the Alt key and then press a letter key.
- (18) **Space bar keys** - Enters a space.
- (19) **Emoticon key** - Opens a set of characters and symbols during text entry.
- (20) **Enter key** - Starts a new line when entering text.
- (21) **Backspace key** - Deletes characters.
- (22) **Alerts Key** - Press to access Alert screen.


■ DISPLAY INDICATORS

**Signal Strength**

 
Current signal strength: the more lines, the stronger the signal.

**Roaming**


Handset is out of home area.

**Voice Call Status**

 Indicates call is in progress or the handset cannot receive a signal from the system.

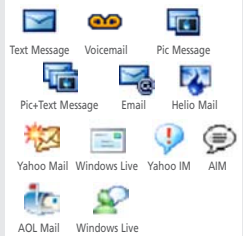**Message/Pic Message/Email/Instant Message**

 New TEXT or voice message/
New TEXT or voice Pic message/
New Email/
New Instant Message

**Battery**

Battery charging level – the more fill, the stronger the charge.

**1X Mode**

Handset is in a 1x service area.

**3G Mode**

Handset is operating in 3G mode.



1X Data Service



3G Data Service

Data Service

Indicates 1X/3G internet services access is active.



1X Dormant



3G Dormant

Dormant

Indicates your handset is in a dormant state during a data call. Your handset goes into Dormant mode when you have not had any activity on a page for some time - your connection is still active and you can make and receive calls.

**Airplane Mode**

While in Airplane Mode, your handset's standby screen will display.

**Annual Event**

Annual Event is set, the idle screen appears. The idle screen disappears if the anniversary expires or is disabled.

**Alarm/Wake-up Call**

Alarm/Wake-up Call is set, the idle screen appears. The idle screen disappears if the alarm/morning call is in operation or disabled.



Vibr then Ring



Vib + Ring

Ring Mode

Appears when a ringer is set as a ringer mode.

**Vibrate**

Handset will only vibrate when call is received.

**Volume Off**

Appears when a ringer volume is mute.



Power On



Discovery Mode on



Audio Connect


Bluetooth Icon

Indicates Bluetooth is active.

■ BATTERY INSTALLATION


As shown in the picture below, put the metal locators of the battery into the holes located in the bottom of the unit.

 - 1 Align the battery tabs with the slots at the bottom of the phone.
- 2 Press the battery down into place. Make sure that the battery is properly installed before switching on the phone.
- 3 With the battery in position on the phone, place the cover back on the handset and press it in until it clicks.

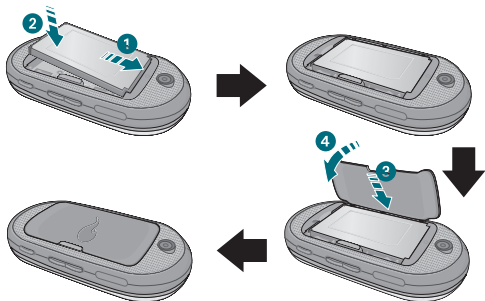

■ BATTERY REMOVAL

 - 1 If necessary, power-off the phone by holding down the END key until the power-off image displays.
- 2 Press the release latch, lift up the battery cover.
- 3 Lift the bottom of the battery and remove it.

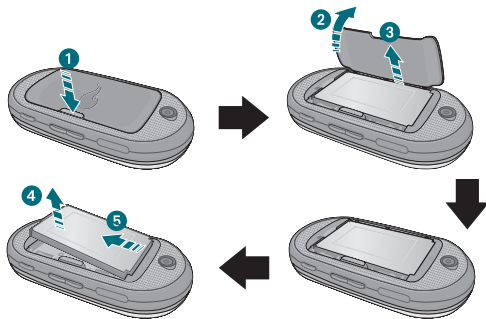


If the battery is not correctly placed in the compartment, the handset will not turn on and/or the battery may be detached during use.

BATTERY CHARGING

POWER CONNECTION

 - ❶ Plug the AC Charger into a standard outlet.
- ❷ Plug the other end of the AC Charger into the Left side of your handset. The battery must be installed onto the handset.

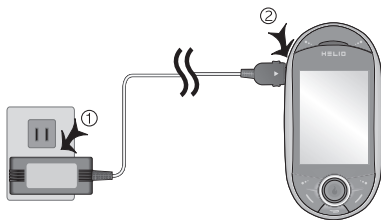

- You cannot operate the handset until it is powered on.
- Fully charge the battery before use.
- It is more efficient to charge the battery with the handset powered off.
- The battery must be connected to the handset in order to charge it.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.

BATTERY USAGE TIMES

The operating time is subject to your handset usage and configuration.

| Battery Capacity | DCS | PCS |
|------------------|------------------|------------------|
| STD 1320 mAh | up to 360 Minute | up to 330 Minute |

BATTERY STANDBY TIME

The operating time is subject to your handset usage and configuration.

| Battery Capacity | DCS | PCS |
|------------------|-----------------|-----------------|
| STD 1320 mAh | up to 260 Hours | up to 300 Hours |



These times are for a new battery. Usage and Standby time may decrease over time.

BEFORE USING

BATTERY HANDLING INFORMATION

microSD CARD USAGE

BEFORE USING

■ DO'S

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep batteries in a temperature between 41°F (5°C) and 95°F (35°C). If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Completely drain the battery before recharging. It may take one to six days to completely drain.
- Store the discharged battery in a cool, dark and dry place.
- Purchase a new battery when the operating time of the current battery has decreased gradually over time.
- Properly dispose of the battery according to local laws.

■ DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't accidentally short circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery.
- Don't leave the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire.

 
■ USING microSD CARD (OPTIONAL ACCESSORY)

The microSD card stores sounds, images, photos and videos, music, and other files.

INSTALLING THE microSD CARD

To install your microSD card, use the following steps:


- 1 Remove the back cover of the phone. Swing the microSD memory card holder open.
- 2 Insert the card into the memory card holder with the gold-colored contact area facing down.
- 3 Close the card holder and slide the back cover back in place.

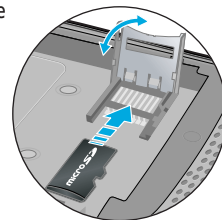


REMOVING THE microSD CARD

To remove the microSD card, use the following steps:

  - 1 Slide the back cover front in place and open the card holder.
- 2 Remove the card and close the memory card holder.

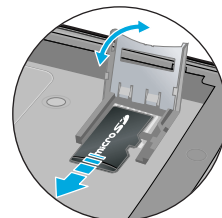

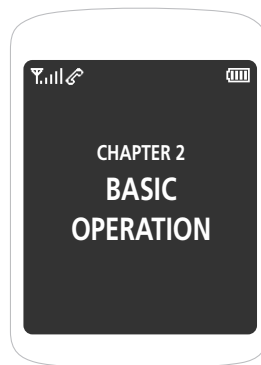


This chapter addresses and explains the basic features of your device including:

- TURNING THE HANDSET ON / OFF
- ACCESSING THE MENU
- MENU SUMMARY
- BASIC FUNCTIONS
- DURING A CALL
- MAKING AN EMERGENCY CALL

■ TURNING THE HANDSET ON




- 1 Slide the handset open, press and hold , until "HELIO" Logo and animation appears and the power on tone sounds.



- If your handset is locked, enter your 4-digit password to unlock your handset when "Enter Lock Code" appears on the display.
- The default password is "0000".





■ TURNING THE HANDSET OFF

- 1 Slide the handset open, press and hold , until "HELIO" Logo and animation appears and the tone sounds.



- Immediately change or recharge the battery when "Low Battery" appears on the display. Memory may possibly be damaged if the handset turns off due to the battery completely draining.
- Turn the handset off before removing or replacing the battery. If the handset is on, unsaved data may be lost.





Your handset can be customized via the menu. Each function can be accessed by scrolling with the Navigation Key or by pressing the number that corresponds to the menu item.

- 1 To access the menu in idle mode, slide the handset open, press  [MENU].
- 2 Use the Navigation Key to scroll through the menu.
- 3 To return to the previous page, press  . To exit the current menu and return to idle mode, press  .
- 4 Press the Navigation Key and then press , to enter a function when its main page is displayed or press its assigned number to have direct access to the function.



Hotkey

 
In idle mode, move the Navigation Key as follows to access these functions:

-  : SURF
-  : Message
-  : Games
-  : Video + Music



To Using Finger Mouse

OZII is a special feature that gives you finger mouse Navigation Keys experience on your device. With finger mouse Navigation Keys, you can simply use your finger to scroll menu items. Please refer to page 58 for more details on "Scroll Sensor Sensitivity".

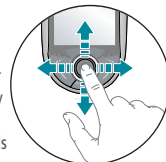

| MAIN MENU | 2 ND DEPTH | 3 RD DEPTH | 4 TH DEPTH |
|---------------------|--|--|--|
| 1. CUSTOMIZE | 1. Rings 2. Screen 3. Ring Vibration 4. Volume 5. Airplane Mode 6. Bluetooth 7. Settings | 1. Rings 2. Answer Rings 3. Alert Rings 1. Home Screen 2. HOT 3. Overlay 4. Banner 1. Turn Bluetooth Off 2. Add Device 3. Trusted Devices 4. Send + Receive 1. Backlight 2. System Sounds 3. Scroll Sensor Sensitivity 4. Language 5. Alert Manager 6. Call Options 7. Security 8. Mode Transition Time 9. Network 1. Memory 2. Reset 3. Software Info | 1. New Message 2. Keypad 3. Slide 4. Menu 5. Confirm 6. Cancel 7. Silent Mode 8. Call Connection 9. Minute Notification Display Input 1. Answer Call On 5. Auto Functions 6. Call Forwarding 4. Call Ignore 5. Voice Privacy 6. TTY 1. Phone Lock 2. Change Password 1. Memory Info 2. Clear Memory 1. Reset All 2. Clear Contacts |

| MAIN MENU | 2 ND DEPTH | 3 RD DEPTH | 4 TH DEPTH |
|-------------------------|--|--|-----------------------|
| 2. SURF | 1. Access Helio Portal | | |
| 3. SNAP | 1. Capture 2. All Media 3. My Album 4. Date View 5. Helio Album 6. Helio Up | 1. Internal Memory 2. External Memory 1. Internal Memory 2. External Memory 1. Internal Memory 2. External Memory 1. Access Helio Portal 1. Access Helio Up | |
| 4. VIDEO + MUSIC | 1. Video 2. Download Video 3. Music 4. Download Music | 1. Playlists 2. Videos 3. Video Album 1. Access Helio Portal 1. Playlists 2. Artists 3. Albums 4. Songs 5. Genres 1. Access Helio Portal | |
| 5. CONTACT | New Contact Edit Contact Delete Contact Search Contacts Copy Contacts Synchronize Group Duplicates Separate Duplicates Settings Email as vCard Select Multiple | | |

| MAIN MENU | 2 ND DEPTH | 3 RD DEPTH | 4 TH DEPTH |
|-------------------|--|-----------------------|-----------------------|
| 6. GAMES | Download Game | | |
| 7. PLAN | 1. Voice Memo 2. Calendar 3. To Do 4. Wake-up Call 5. Alarm 6. Calculator 7. World Time 8. Unit Converter 9. Notepad 0. Stopwatch *. Tip Calculator | | |
| 8. MESSAGE | 1. Helio Mail 2. Mail for Microsoft Exchange 3. Yahoo! 4. AOL 5. Gmail 6. Windows Live 7. EarthLink 8. Add Email Account 9. Add Email Account 0. Text/Pic Inx | | |
| 9. APPS | Download App | | |



■ MAKING A CALL




1 Slide the handset open, enter a handset number.



To modify the handset number you have entered:

- Erase one digit at a time by pressing .
- Erase the entire number by pressing and holding .



To send a Text or Photo message to the handset number:


- Enter a part of the handset number, then press  [MENU], select "Send Message".
- Please refer to page 116 for more details on "Send Text/Pic".

2 Press .


The indicator, , appears on the display.





- If "CALL FAILED" appears on the display or the line is busy, press  or .
- If you activate the "AUTO REDIAL" function, the handset will automatically retry for 2 times. (Refer to page 60).
- If "Enter Lock Code" appears on the display enter your 4-digit password to unlock your handset.

3 To end a call, slide the handset closed or press .


■ MAKING AN INTERNATIONAL CALL

Press and hold . When "+" is displayed, enter the country and area codes, then complete the number and send the call.



■ CALLING A NUMBER FROM CONTACTS


Press  [CONTACT] to access the directory.
Select the desired phone number and press .

■ ANSWERING A CALL

- 1 When your handset rings or vibrates, slide the handset open, press  to answer the incoming call.
(Depending on your handset's settings, you may also answer incoming calls by opening the handset or by pressing any number key.)





- To silence the ringer or ignore incoming calls, press  [SILENT] or then press  [IGNORE].
- When you place or receive a call from stored handset numbers, both the name and handset number will be displayed.

- 2 To end the call, slide the handset closed or press .

■ SPEAKER PHONE



The speaker phone feature lets you hear audio through the speaker and talk without holding the handset.

To activate or deactivate the speaker phone during call, press  [MENU] .



The handset returns to normal (Speaker Phone Off) after ending a call or when the handset is turned off and back on.




■ ENTER LOCK MODE

- 1 To lock the handset, slide the handset open, press and hold .
- 2 To unlock the handset, press any function key (Except ), then input your password.

■ 3-WAY CALLING

With 3-Way Calling, you can talk to two people at the same time. When using this feature, normal airtime rates will apply to the two calls.



- 1 Slide the handset open, enter a number you wish to call and press .
- 2 Once you have established the connection, enter the second number you wish to call and press .
- 3 When you're connected to the second party, press  again to begin your 3-Way call.



- If one of the people you called hangs up during your call, you and the remaining caller stay connected.
- If you initiated the call and are the first to hang up, all three callers are disconnected.

■ CALL WAITING

Notifies you of an incoming call when you are already on a call by sounding a beep tone and displaying the caller's phone number.



To answer another call while on the handset, press . This places the first call on hold. To switch back to the first caller, press again.



Call Waiting is a system dependent feature. Please contact your service provider for details.

■ 2 SEC/HARD PAUSE

Pauses are used for automated systems (i.e., voice mail, calling cards). Insert a pause after a handset number then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.



- 1 To insert a pause, enter a handset number then press [MENU]. Select either a "2 Sec Pause" ("T") or a "Hard Pause" ("P").
- 2 Press to dial or [SAVE] to store the handset number.



Please refer to page 40 for more details about storing a handset number.

■ ADJUSTING VOLUME

Adjust the volume of the ringer, key beep and speaker phone.



- 1 Select one of the following.

- **Ring:** Controls the ringer volume.
- **Alert:** Controls the alert volume.
- **Effects:** Controls the effects volume.
- **KeyPad:** Controls the keypad volume.

- 2 Adjust volume and press [SAVE] to save it.



To adjust ring volume in idle mode, press side volume key.

■ CALLER ID


Identifies callers by displaying their phone number. If the caller's name and number are already stored in your contact list, they will both appear.



The caller ID information is stored in Call History.

■ USB CONNECTIONS

Want to download your music and video files onto your OZII? It's easy, all you need is the USB cable included with your OZII. First, plug one end of the USB cable into the OZII and the other end into your computer's USB port. The icons "Helio OZII" and "Helio Ext" (when a microSD/T-Flash card is inserted) should appear on your desktop. ("Helio OZII" is your Internal Memory and "Helio Ext" is your External Memory.

From the idle mode on your device, press  [MENU], then select from the following transfer options

- 1. Helio Sync:** For Windows and Helio PC applications.
- 2. Mass Storage Mode:** For Windows and OS X. Just drag and drop the media files from your hard drive into the appropriate folder inside the Helio OZII icon or the Helio Ext icon.
- 3. Video + Music Sync Mode:** To use with Windows Media Player to sync or for music subscriptions such as Yahoo! Music. Just drag and drop media files into the Helio OZII icon.

DISCONNECTING THE USB CABLE








Once you've transferred the files you want, follow these steps to disconnect your USB cable safely and avoid corruption to your internal memory.

For PCs: At the bottom of your computer screen, click on the icon for "Safely Remove Hardware." Select the item you wish to disconnect and click "OK". Once you get a message that says "You may now remove hardware," you can remove the USB cable from the computer.

For Macs: On your desktop, find the item you wish to disconnect. Click and drag it to the "Eject" icon or eject using the Finder. Once the item has been removed from the desktop, you can remove the USB cable from the computer.




If your music files appear to be corrupted, then you'll have to reformat the internal memory. Here's how:

1. Back up all the content in your internal memory using Mass Storage Mode.
2. Press  [MENU]
3. Select  [CUSTOMIZE]
4. Select  [DEVICE]
5. Select  [MEMORY]
6.  [CLEAR MEMORY]
7.  [INTERNAL MEMORY]
8.  [ALL MEDIA + LICENSES]



■ CALL HISTORY

Displays information about All Calls, Missed Calls, Incoming Calls, Outgoing Calls and Ignored calls.



- 1 Press .
- 2 To see a list of the 40 most recent All Calls, Missed Calls, Incoming Calls, Outgoing Calls and Ignored calls. If the number is already stored in your contact list, only the name appears. If the number is not stored, only the phone number appears.



If you are in call history, you may also navigate to the next or previous call histories (All Calls, Missed Calls, Incoming Calls, Outgoing Calls and Ignored calls) by pressing the Navigation Key right or left.

- 3 Press  [MENU] to save a selected number or press  [MESSAGE] to send a message.

- **Save:** To save the number to a contact list.
- **Delete:** To delete a call history.
- **Delete All:** To delete all call histories.
- **Time List:** To see log of all times of specific caller.

- 4 To view details, press . To access options, press  [MENU].

- **Save:** To save the number to a contact list.
- **Delete:** To delete a call history.
- **Time List:** To see log of all times of specific caller.



Call details include type of call, date, time and phone number.

■ AVAILABLE OPTIONS DURING A CALL

To display menu options during a call, press  [MENU].

CONTACTS

To search or save the handset number in your contacts list.

Press  [MENU] .

CALL HISTORY

To displays the list of call history.

Press  [MENU] .

SPEAKER ON (OFF)

Activates the speaker phone when you are on a call. The handset returns to normal (speaker phone off) after ending a call or when the handset is turned off and back on.

Press  [MENU] .

3-WAY CALL

To call a second party during a call, dial the number or select it from the directory by accessing the menu during a call.

Press  [MENU] .

SEND MESSAGE

Enables you to send a message (SMS) during a call.

Press  [MENU] .

MY NUMBER

Enables you to see your handset number while on a call.

Press  [MENU] .

RECORD CALL

Records the conversation for up to three minutes during a call. DO NOT record any calls unless you have informed all the parties in the call that you are recording the conversation. Not informing all the parties that a call is being recorded may be illegal.


Press  [MENU] .

This 911 feature puts the handset in the Emergency Call Mode when you dial the preprogrammed emergency number, 911. It also operates in the lock mode and out of the service area.



■ 911 IN LOCK MODE


The 911 call service is available even in the lock mode.

- 1 Enter "911" and press .
- 2 The call connects.

 
When the call ends, the handset returns to the Lock Mode.

■ 911 USING ANY AVAILABLE SYSTEM

The 911 call service is available even in the lock mode.

- 1 Enter "911" and press .
- 2 The call connects.

While the handset is in the emergency mode for 5 minutes, the handset can receive an incoming call from any available system. However it can't make a call.

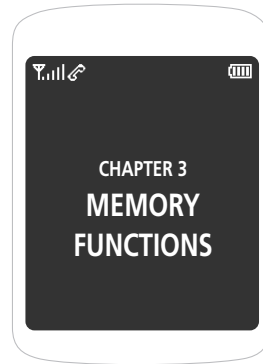










This chapter addresses memory functions including:

STORING A PHONE NUMBER


ENTERING LETTERS, NUMBERS & SYMBOLS

MAKING A CALL FROM THE PHONEBOOK






The contact list stores up to 4500 entries (2500 Helio, 1000 Yahoo!, and 1000 AOL)."

- ❶ Slide the handset open, enter handset # then press  [SAVE], and then choose "New Contact" or "Existing Contact". Press  to select.
- ❷ If "New Contact" is selected, enter a contact edit window. Press with up or down Navigation Key to choose the type of number you're adding, then press . If "Existing Contact" is selected, your contact list is displayed. Choose the entry to add the handset number to, then press  [SELECT]. Press with up or down Navigation Key to choose the type of number you're adding, then press .
- ❸ Enter a name.
Please refer to page 41 for more details on entering letters, numbers & symbols.
To change the input mode, press  [Abc]. Press the Navigation Key down to select other options.
 - **Contact Field:** First Name, Last Name, Graphic, Phone Number 1 ~ 6, Ring, Default Number, Email, Instant Messaging, MySpace, Notes, Group.
 - **Phone Number Type:** Mobile, Home, Work, Fax, Mobile2, Other.
 - Press  [Add...] to add additional details for the Contact such as more Email, Address, Nickname, Title, Company, Department or Website.
- ❹ To store the entry, press  [SAVE]. "Save contact?" and then press  [YES].

The input mode (T9 editor) will automatically be activated when necessary to enter letters and numbers. As shown below, there are 5 available modes ; Standard input mode (Abc), T9Word input mode (T9abc), Numeric mode (123), Symbol mode (Sym) and Korean mode (Korean).

The input mode indicator appears on the below right of the display when letters and numbers are entered. To select the desired input mode among the 5 modes below, press  [Abc] repeatedly, then enter letters and numbers.

The following illustrates the function assigned to each key in the Alpha Editor.



| KEY | FUNCTION |
|---|---|
|  | Abc Press repeatedly to change mode. [abc][T9abc][123][Sym][Korean] |
|  | Next Press to view the next matching word if the highlighted word is not the word you intended. |
|  | Space Press to accept a word and add a space. |
|  | Shift Press to select a letter case of the standard text input or T9 text input mode. [Abc], [ABC] and [abc] indicate the standard text input. [T9Abc], [T9ABC] and [T9abc] indicate the predictive text input. Press to change mode. |
|  | Clear Press to delete a character to the left of the cursor. |





■ STANDARD INPUT MODE

Use the number keys to enter letters, numbers and characters.

- 1 Enter letters using the key pad as follows:




| Key Pad | Press 1 Time | Press 2 times | Press 3 times | Press 4 times | Press 5 times |
|---------|--------------|---------------|---------------|---------------|---------------|
| 2ABC | A | B | C | 2 | A |
| 3DEF | D | E | F | 3 | D |
| 4GHI | G | H | I | 4 | G |
| : | : | : | : | : | : |
| 9WXYZ | W | X | Y | Z | 9 |

Press  repeatedly, until the desired symbol appears (., - ? ! ' @ : 1). To change the input mode, press  [Abc] repeatedly.

- 2 To enter a space, press . The cursor will automatically move to the next column.
- 3 Repeat until letters are entered.
- 4 To delete one digit, press . If you press and hold , it will delete characters quickly.
- 5 To change from lowercase to uppercase, press .



■ T9WORD INPUT MODE

The T9Word input mode incorporates a built-in-dictionary to determine a word based on the entered characters. A T9Word can be entered more quickly by pressing a key once per character.

- 1 Press  [Abc] repeatedly, until "T9abc" mode is displayed.
- 2 Press a digit key once to enter the character you want then enter all the characters to input the word you want.
- 3 To view the next matching word, press .
- 4 To accept the matching word and enter a space, press .



To enter a compound word:


- Enter the first part of the word then press  to accept it.
- Enter the last part of the word then press  to enter the word.

MEMORY FUNCTIONS

ENTERING LETTERS, NUMBERS & SYMBOLS


■ NUMERIC MODE

Allows you to enter numbers.

- 1 Press  [Abc] repeatedly, until "123" mode is displayed.
- 2 To enter a number, press a digit key.

■ SYMBOL MODE


Allows you to enter symbols.

- 1 Press  [Abc] repeatedly, until "Sym" mode is displayed.
- 2 Select the symbol you want to enter by pressing the corresponding digit key.

Use the Navigation Key to view a different set of symbols.
There are 8 sets of symbols.

■ KOREAN MODE

Allows you to enter Korean characters.

- 1 Press  [Abc] repeatedly, until "Korean" mode is displayed.
- 2 To enter Korean characters, press a keypad.

ENTERING LETTERS, NUMBERS & SYMBOLS

MEMORY FUNCTIONS

■ USING QWERTY KEYBOARD

Your device has a specifically designed QWERTY keyboard that provides a superior typing experience on a small handheld for easy and comfortable input. You can use all of the handset functions with the keyboard either closed or open. When you open the keyboard you have the extra benefit of a full messaging keyboard.

The handheld includes a fully-functional QWERTY keyboard you can use to compose text for email messages, notes, and so on.

| KEY | FUNCTION |
|-----------------------|---|
| Shift + letter | To type upper-case letters, hold down the Shift key and then press one or more letter keys. Alternatively, press and release the Shift key and then press a letter key. To write in upper case only, press the Shift keys twice [Shift Lock]. |
| Alt + letter | To type the number or symbol printed in orange at the top of a key, hold down the red-colored Alt key and then press one or more letter keys. Alternatively, press and release the Alt key and then press a letter key. To write in number or symbol printed in orange at the top of a key only, press the Alt keys twice [Alt Lock]. |
| Space Key | Press the Space key to type a blank space. |
| Enter Key | Press the Enter key to insert a carriage return. |
| Clear Key | Press the Delete key to delete a character to the left of the text cursor. |
| Emoticon Key | To insert an emoticon in the text mode. |



For best performance in low-light environments, your handset includes a backlight feature that can illuminate both the display and the keyboard so you can keep reading and typing.

■ ONE-TOUCH/TWO-TOUCH DIALING

Ideal for frequently dialed numbers, this feature allows phone book entries to be dialed via the keypad with only one or two key presses.

ONE-TOUCH DIALING:

1~9: Press and hold the corresponding memory number for more than 1 second.

TWO-TOUCH DIALING:

10~99: Press the first digit and second digits of the memory number short and long respectively.



Press  is used for One-Touch voicemail dial feature.



This chapter addresses accessing the menu and using its functions and features to customize your handset.

CUSTOMIZE

SURF

SNAP

VIDEO+MUSIC

CONTACT

GAMES

PLAN

MESSAGE

APPS



From the Customize menu, press to access the Settings menu, press to access the Bluetooth menu.

RINGS

You can select a ring that will play when receiving a call. You can select from downloaded rings as well as the default rings.



1 Press [MENU] .

2 To select your desired ring.

- **Rings:** Select a live, default or downloaded ringtone.
- **Answer Rings:** To connect to Helio server.
- **Alert Rings**

3 To play a ring, press [PLAY/STOP].

Press [MENU], select one of the following options.

- **Delete:** Delete the selected live ring.
- **Rename:** Rename the selected live ring.
- **Sort Files:** Sort the live ring list. (By Date, By Name)
- **Delete All:** Delete all contents in the live ring list.
- **File Info:** Display the selected live ring information.

4 To save it, press [SET].

SCREEN



HOME SCREEN

Select the screen displayed in idle mode. In addition to the default images, you can select a downloaded image, Video Screen, Photos or Video Recordings as your screen.

1 Press [MENU] .

2 To select your desired screen.

- **Download Home Screen:** To connect to Helio server.
- **Screens:** Select from downloaded screens.
- **Video Screens:** Select a Video Screen.
- **Album:** Select from saved taken images or video clips.
- **Album Slideshow**
- **Free Screens:** Select from the default screens.

3 If "Album" selected, press [VIEW/PLAY].

Press [MENU], select one of the following options.

- **Send:** To send selected content with "Message", "Email" or "Bluetooth".
- **Helio Up:** To connect to Helio UP server.
- **Set:** Set as "Screen" or "Contact Pic".
- **Delete:** Delete a selected content.
- **Copy:** To copy the selected content to the microSD card.
- **Rename:** To edit the content's name.
- **Sort By:** Sort By (Date, Name, Size), Sort Order (Descending, Ascending).
- **Check All:** To select all contents.
- **File Info:** Display the selected content information.

4 To save it, press [SET].

HOT (HELIO ON TOP)

- 1 Press [MENU] .
- 2 Select "Download More".
- 3 To connect to Helio server.

OVERLAY

To select a Overlay Mode:

CALENDAR

- 1 Press [MENU] .
- 2 To select "Calendar" set mode with up or down Navigation Key. You want to preview mode, press [PREVIEW].

None, 1mo Calendar 1 ~ 1mo Calendar 5, 2mo Calendar 1 ~ 2mo Calendar 4

- 3 To save, press [SET].

CLOCK

- 1 Press [MENU] .
- 2 To select "Clock" set mode with up or down Navigation Key. You want to preview mode, press [PREVIEW].

None, Digital Clock 1 ~ Digital Clock 4, Analog Clock 1 ~ Analog Clock 4

- 3 To save, press [SET].

DUAL CLOCK

- 1 Press [MENU] .
- 2 The world map appears with the city, its date and time, and then select city with Navigation Key.

- Left or Right Navigation Key: Move to city's location.
- Up or Down Navigation Key: Move to city's name.

- 3 To save, press [SET].

ANIMATED STICKER

- 1 Press [MENU] .
- 2 To select Animated Sticker image with the Navigation Key.

None, Animated Sticker 1 ~ Animated Sticker 12

- 3 To save, press [SET].

BANNER

To select a Banner Mode:

- 1 Press [MENU] .
- 2 To select "Banner" set mode with up or down Navigation Key. You want to preview mode, press [PREVIEW].




- **Banner:** To select Banner with left or right Navigation Key. (Off, On)
- **Text:** To enter a banner. (Default-Helio)
- **Font Color:** To select a banner color with left or right Navigation Key.

- 3 To save, press  [SAVE].


RING VIBRATION

To select a Ring Vibration Mode:



- 1 Press  [MENU]   .
- 2 To set your desired ring vibration mode.





- Ring Only
- Vibration
- None
- Vib then Ring
- Vib + Ring

- 3 To save, press  [SET].


VOLUME

Controls the Ring, Alert, Effects, KeyPad volume.



 
- 1 Press  [MENU]    .
- 2 To set your desired ring vibration mode.





- **Ring:** Off / Level 1 ~ 5.
- **Alert:** Off / Level 1 ~ 5.
- **Effects:** Off / Level 1 ~ 5.
- **KeyPad:** Off / Level 1 ~ 5.

- 3 To save, press  [SET].

AIRPLANE MODE

Airplane Mode allows you to use many of your handset's features, such as Games, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your handset is in Airplane Mode, it cannot send or receive any calls or access online information.



- 1 Press  [MENU]   .
- 2 Select "Airplane Mode On" or "Airplane Mode Off" with up or down Navigation Key.
- 3 To save, press  [SET].

BLUETOOTH

Your handset is compatible with devices that support the Bluetooth headset (HSP), hands-free(HFP), Advanced Audio Distribution(A2DP), and Audio/Video Remote Control(AVRC) profiles. You may create and store 30 pairings within your handset and connect to one device at a time. The approximate communication range for Bluetooth wireless technology is up to 30 feet (10 meters).



Your handset is a Bluetooth V1.2 compatible device. This means you can use Bluetooth V1.2 headsets and Bluetooth V1.0 hands-free devices with your handset.



You can use "Stereo Headset" when playing video clips or music files.



TRANSFERRING AUDIO

When a Bluetooth audio device is connected, To Bluetooth / To Device is displayed in the menu during calls.

- **To Bluetooth:** Sound comes from the Bluetooth audio device.
- **To Device:** Sound comes from the handset.

TURN BLUETOOTH ON/OFF

The Power feature allows you to turn the Bluetooth function on and off.

1 Press [MENU] .

2 To turn the Bluetooth function On/Off.



To extend battery life, set Bluetooth power to "Off" when not in use. If you turn Bluetooth power "Off", your phone will not connect to accessories until you turn Bluetooth power "On" and reconnect to the accessories.

ADD DEVICE

Add Device allows you to scan for remote bluetooth devices from the handset or devices.

1 Press [MENU] .

2 Select "Headset" or "Devices".

3 Place a Bluetooth device in discoverable mode.

4 Names of available Bluetooth devices appear in the display.

5 Use the Navigation Keys to highlight an available Bluetooth device and press [PAIR]. You are prompted to enter the passkey or PIN for the selected device.

6 Enter the device passkey or PIN and press . The selected device is automatically registered and connected.

TRUSTED DEVICES

Trusted Device List is a list of the devices that have paired with your handset via the Bluetooth functionality. Select the name of a device to enable it to work with your handset.

1 Press [MENU] .

2 Display listing all Bluetooth wireless technology devices currently registered on your device.

• **By pressing [MENU], you can choose from the following:**

1. **Rename:** To rename selected device.
2. **Remove:** To erase selected device.
3. **Device Info:** To view device information.

SEND + RECEIVE

Send + Receive lets you send your Contact information, and photos to other Bluetooth wireless technology devices.

1 Press [MENU] .

2 Select "Receive Mode", "Send Photos" or "Send Videos".

- **Receive Mode:** Places your device in Receive Mode to receive data from another Bluetooth wireless technology device.
- **Send Photos:** Send all or selected photo files to a Bluetooth wireless technology device.
- **Send Videos:** Send all or selected video files to a Bluetooth wireless technology device.

3 Use the Up and Down navigation keys to highlight the desired option, then press .

MENU OPTIONS

To setup how the Bluetooth feature operates on your device.

BLUETOOTH INFO

Display information about the Bluetooth device identity of your device.

- 1 Press [MENU] , then press [MENU].
- 2 To select "Bluetooth Info".

DISCOVERABLE

When Discoverable is on, other Bluetooth devices in the area can find your handset.

- 1 Press [MENU] , then press [MENU].
- 2 To select "Discoverable".
- 3 Select "Always", "On for 60sec" or "Off" then press [SAVE] to save it and wait in the idle mode.

DEVICE NAME

Device Name allows you to change the name of a Bluetooth device that is listed in your handset so you can more readily recognize which device you want to enable.

- 1 Press [MENU] , then press [MENU].
- 2 To select "Device Name".
- 3 Enter a new device name, press [OK] to save it.

HELP

- 1 Press [MENU] , then press [MENU].
- 2 To select "Help".

SETTINGS

Customizes your handset and optimizes performance through a variety of settings.



BACKLIGHT

Backlights the LCD, while the slide is closed and keypad light for easy viewing in dark places.

- 1 Press [MENU] .
- 2 To select Backlight set mode with up or down Navigation Key.

- **Display Duration:** 15sec, 30sec, 1min, 3min, 5min
- **Display Brightness:** Level 1 ~ Level 5
- **Keypad Duration:** Slider Open, 15sec, 30sec, 60sec, Off
- **Alert:** On, Off.
- **Reset All Backlight settings:** Press [MENU], select "Reset".

- 3 To save, press [SET].

SYSTEM SOUNDS

To select a sound effects ringer type:

- 1 Press [MENU] .
- 2 Use the Up or Down Navigation Keys to set your desired sound effects ringer type.

- **New Message:** Select "Helio", "Leo", "Alert 1 ~ Alert 4", "Vibrate", "Off".
- **Keypad:** Select "KeyClick", "LeoClick", "Tick", "Arp", "Henry", "Off".
- **Slide:** Select "Mambo 1 ~ Mambo 5", "Helio", "Off".
- **Menu:** Select "On", "Off".
- **Confirm:** Select "Confirm 1 ~ Confirm 4", "Off".
- **Cancel:** Select "Cancel 1 ~ Cancel 4", "Off".
- **Silent Mode:** Select "On", "Off".
- **Call Connection:** Select "Helio", "Call Connection 1", "Call Connection 2", "Off".
- **Minute Notification:** Select "Off", "Bell".
- **No Service:** Select "Off", "Bell 1 ~ Bell 3".
- **Low Battery:** Select "Off", "Low Battery 1 ~ Low Battery 3".

- 3 To save, press [SET].

SCROLL SENSOR SENSITIVITY

To select how sensitive your device's scroll button is to your touch.

- 1 Press [MENU] .
- 2 Select one of the following options with up or down Navigation Key.

- High
- Medium
- Low

- 3 To save, press [SET].

LANGUAGE

Selects the language in which letters are displayed on screen.

- 1 Press [MENU] .
- 2 Select one of the following options with the Navigation Key.

- **Display:** Select "English", "Korean".
- **Input:** Select "English", "English + Korean".

- 3 To save, press [SET].

ALERT MANAGER

- 1 Press [MENU] .
- 2 Select one of the following options with up or down Navigation Key.

- Always
- New
- Never

- 3 To save, press [SET].

CALL OPTIONS


Allows you to customize the call options.

ANSWER CALL ON

To select an answer call option:


- 1 Press [MENU] .
- 2 Select one of the following options with up or down Navigation Key.

- Slide Open
- Open + Any Key
- Open + Send Key
- Send Key Only

③ To save, press  [SET].


AUTO FUNCTIONS

To select an auto function option:

① Press  [MENU]    .

② Select one of the following options with up or down Navigation Key.

1. **Auto Redial:** Automatically redials a call up to a set time interval. (On, Off)
2. **Auto Headset:** If headset is connected, call is automatically connected. (On, Off)
3. **AutoRcv After 2sec:** After 2 seconds, call is automatically connected. (On, Off)

③ To save, press  [SET].


CALL FORWARDING

The device can divert all incoming calls to another number with this feature (network dependent). To activate call forwarding:

① Press  [MENU]    .

② Select one of the following options with up or down Navigation Key.

1. **Setting:** To select "On" or "Off" with Navigation Key.
2. **Set Number:** Input a new call forwarding number.


 
③ To save, press  [SET].

CALL IGNORE

To setup options to call ignore:

① Press  [MENU]     and enter your password.

② Select one of the following options with up or down Navigation Key.

- **Setting:** To select "On" or "Off" with Navigation Key.
- **Block List:** Press  [ADD], to add blocked phone number (Enter Number, Contacts, Call Log). To delete blocked handset number, press  [REMOVE], then select "Yes".


③ To view blocked phone number, press  [VIEW].

VOICE PRIVACY

Enhances voice privacy and avoids tapping during a call.

① Press  [MENU]    .

② Select "On" or "Off" with up or down Navigation Key.

③ To save, press  [SET].


TTY

To turn TTY Mode on or off:

① Press  [MENU]    .

② Select one of the following options with up or down Navigation Key.

- TTY Full
- TTY+Talk
- TTY+Hear
- TTY Off





③ To save, press  [SET].

SECURITY

Prevents unauthorized use of your handset. The following settings can be restricted:

PHONE LOCK

Prevents the handset from being used without entering the password first.






- ① Press  [MENU]   and enter your password.
(The default password is "0000".)
- ② Press  "Phone Lock".
- ③ Select "Unlocked", "Auto Lock" or "Lock Now" with up or down Navigation Key.

- **Unlocked:** Do not lock the handset.
- **Auto Lock:** Not locked, but it is automatically locked when power is cycled.
- **Lock Now:** Lock the handset now.

④ To save, press  [SET].





CHANGE PASSWORD

To change your 4-digit password.


- ① Press  [MENU]   and enter your password.
(The default password is "0000".)
- ② Press  "Change Password".
- ③ Enter your password.
(The default password is "0000".)
- ④ Enter a new password and down Navigation Key.
- ⑤ Enter the new password again and press  [SAVE].

MODE TRANSITION TIME

When closing (Portrait) slide or QWERTY slide, The process shall be continued for user's setting time.

- ① Press  [MENU]   .
- ② Select one of the following options with the Navigation Key.

- 5Sec
- 10Sec

③ To save, press  [SET].

NETWORK

To select a network mode option:

- 1 Press [MENU] .
- 2 Select one of the following options with the Navigation Key.

- 1X only
- EVDO mode

- 3 To save, press [SET].

■ DEVICE

Displays the following information about your handset:
Memory, Resets handset to default settings, S/W Version.



MEMORY

MEMORY INFO

To view "Internal" or "External" memory information.

- 1 Press [MENU] .
- 2 Select "Internal Memory" or "External Memory" with left or right Navigation Key.
- 3 To return to the previous page, press [OK].

CLEAR MEMORY

To format internal or external memory.

- 1 Press [MENU] .
- 2 Select "Internal Memory" or "External Memory" with up or down Navigation Key.

- **Internal Memory:** To select "All Media" or "All Media+Licenses", Enter your password, then press [YES].
- **External Memory:** Enter your password, then press [YES].

- 3 Press [OK].







RESET

Resets contacts or handset to default settings.

- 1 Press [MENU] .
- 2 Select "Reset All" or "Clear Contacts" with the Navigation Key.
- 3 Enter your password.
(The default password is "0000".)
- 4 Read the message. (Reset All?/Clear Contacts?)
- 5 Press [NO] or [YES].

SOFTWARE INFO

Displays the software version of your handset:

- 1 Press  [MENU]   .
- 2 The software version appears.
- 3 Press  [MENU], select "Reset All" or "Clear Contacts". (Please refer to page 65 for more details "Reset".
- 4 To return to the previous page, press  [OK].



From the SURF menu, press  to access the Bookmarks menu, press  to access the Last menu.

ACCESS HELIO PORTAL

Now you can access news, sports, weather, and email from your handset. Accessing Mobile Web keeps you updated by providing access to up-to-date information such as news, sports, weather and stock quotes when you subscribe to Internet service with your service provider. Please contact your service provider for a list of available websites and service details.








GO

Easy access to enter a URL to visit. Just type the site name, we've already filled in "www" and will automatically enter ".com" to make it easy. See and select from your most recent entered sites as well.



BROWSER MENU

The browser menu contains various browser options. To access the browser menu, press  [MENU]   or press  .

BOOKMARKS

Bookmarks allow you to store the address of your favorite Web sites for easy access at a later time.

1. ADD

When "Add" is selected from the Browser Menu, it allows you to save the recent Web site address.

2. VIEW ALL

When “View All” is selected from the Browser Menu, allows you to view and access bookmarked sites.

1. **Music:** To launch Helio Music web site.
2. **Videos:** To launch Helio Videos web site.
3. **Games:** To launch Helio Games web site.
4. **Rings:** To launch Helio Rings web site.
5. **Screens:** To launch Helio Screen web site.
6. **Helio Album:** To launch Helio UP Album web site.

VIEW

1. TABS

2. NEW TAB

3. FIT TO SCREEN / SHOW ACTUAL SIZE

Select “Fit To Screen” or “Show Actual Size” to display screen mode.



4. SHOW MINI MAP / HIDE MINI MAP

Select “Show Mini Map” or “Hide Mini Map” to show/hide mini map.


5. TEXT ONLY / TEXT AND IMAGES

Select “Text Only” or “Text and Images” to toggle images displayed on web site.

6. ZOOM

Select “50% ~ 200%” to display zoom with press , left or right Navigation Key, then press .

7. IMAGES

Select “50% ~ 200%” to image zoom with left or right Navigation Key, then press .

8. IMAGE LIST

To display images list.

9. VIEW CERTIFICATE

Displays security certificate information for the secure web sites when available.

10. SHOW VIRTUAL MOUSE

SEARCH

1. SEARCH

Navigates to the Helio search page.

2. SEND URL

3. INSERT CONTACT IN A TEXT

Insert Mobile Number from Contacts in a text entry field.

4. FIND IN PAGE

To find words or phrases in a current web site.

5. REFRESH

To reload the current content.

6. SAVE SCREEN

Capture Screenshot.


7. GO BACK

Navigates up a level in the history list.

8. GO FORWARD

Navigates to the next page in the history list. This is only available if you have navigated backward in the history.


9. SETTINGS

- **Cookies:** Selecting "DELETE" to erase all saved cookies.
- **Cache:** Selecting "EMPTY" to empty cache memory.
- **History:** Selecting "CLEAR" to erase all history lists.
- **Auto-Complete:** Press  to check it.
- **Scrolling Mode:** Selecting "Scrolling Mode" allows the user to select between time-square scrolling. Scrolling mode choices are Line by Line, Half Page, Full Page.
- **Font Size:** Selecting "Font Size" allows the user to select displayed Font Size. Font Size choices are Large (21px), Small (18px), X-Small (16px), XX-Small (14px).
- **Address Suffix**
- **Reset:** Selecting "Reset" to all setup options are reset to factory default settings.

1 To save, press  [SAVE].

10. BROWSER INFO

HISTORY

Keeps a list of links to your most recently visited sites. The history list is available from the Browser Menu and the user may delete all stored pages from the history (Stores up to 50 sites). To navigate to a site, highlight it and press  , to connect web site.



From the SNAP menu, press to access the Album menu, press to access the Camera menu.

■ CAPTURE

Taking pictures with your handset's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the Camera Mode and take pictures when the handset is open.



TAKING A PHOTO THROUGH THE MENU

- 1 Press [MENU] .
- 2 Point the camera lens at your subject. You can check the photo framing through the main display screen.
- 3 Press [SNAP] or the side camera button to take the photo.
- 4 Virtual function button appears on the bottom center of the display. To save the picture, press [SAVE]. The picture will be saved in "All Media" or "My Album". To go back to idle mode without saving the picture, press .
To send the picture to someone, press the Navigation Key Right.
To upload picture to Helio Screen web site, press the Navigation Key Up.
To assign to display for "Idle Screen" or "Contact's ID", press the Navigation Key Left.
- 5 Press [RENAME], to change the automatically assigned filename before saving the file.


TAKING A PHOTO IN IDLE MODE

- 1 Slide the handset open, press and hold to activate Camera Mode.
- 2 Point the camera lens at your subject.
You can check the photo framing through the main display screen.
- 3 Press [SNAP] or the side camera button to take the photo.
- 4 Virtual function button appears on the bottom center of the display. To save the picture, press [SAVE]. The picture will be saved in "All Media" or "My Album". To go back to idle mode without saving the picture, press .
To send the picture to someone, press the Navigation Key Right.
To upload picture to Helio Screen web site, press the Navigation Key Up.
To assign to display for "Idle Screen" or "Contact's ID", press the Navigation Key Left.
- 5 Press [RENAME], to change the automatically assigned filename before saving the file.


CAMERA MODE OPTIONS

When the handset is open and in Camera Mode, several user options are available.

WHITE BALANCE

Press  to directly adjust the white balance. (Auto, Outside, Cloudy, Fluorescent, Bulb)

PREVIEW

Press  [PREVIEW] to view all the pictures you have taken. Only the pictures in "All Media" or "My Album" can be viewed.


BRIGHTNESS

Press the Navigation Key left or right to directly adjust the brightness. The current brightness level appears at the bottom of the display screen.

ZOOM

Press the Navigation Key up or down to change the magnification. The current zoom level appears at the right side of the display screen. (Not supported when the resolution is set to 1600X1200)

PHOTO/VIDEO

Press  [PHOTO/VIDEO] to change a camera mode. (Photo, Video)

UNDER [MENU] - 1. Resolutions

To select a resolution for a picture. (1200X1600, 960X1280, 768X1024, 600X800, 480X640, 240X320)
If you taking a picture with the handset closed, to select a resolution for a picture. (1600X1200, 1280X960, 1024X768, 800X600, 640X480, 320X240)

UNDER [MENU] - 2. Quality

To select a picture quality. (Super Fine, Fine, Normal)

UNDER [MENU] - 3. White Balance

To select a white tone balance. (Auto, Outside, Cloudy, Fluorescent, Bulb)

UNDER [MENU] - 4. Night Mode


To activate the night mode function. (No, Yes)

UNDER [MENU] - 5. Timer

To activate the camera's timer function. (Off, 5sec, 10sec)

UNDER [MENU] - 6. Effects

To select picture effects. (Normal, Gray, Sepia, Negative, Solarize)

UNDER  **[MENU] - 7. Tag with Location**

To select a tag with location for a picture.
(No, Yes)

UNDER  **[MENU] - 8. Shot Mode**


To select a Shot Mode. (Single, Auto Series 4cuts, Auto Series 6cuts, Auto Series 9cuts). If you taking a picture with the handset closed, to select a Shot Mode. (Single, Auto Series 4cuts, Auto Series 6cuts, Auto Series 9cuts, Split Series 4cuts, Split Series 9cuts, Split Series 16cuts)

UNDER  **[MENU] - 9. Photo Frame**

To select a resolution for a picture.
(No Frame, Fun frame 1 ~ Fun frame 4) Supported when the resolution is set to 240X180.





 





UNDER  **[MENU] - #. Preview Mode**

To activate the preview mode function. (Indicators Only, Indicators + Crosshair, Crosshair Only, Hide All)

- 1 Press  [SAVE] to save camera option.

VIDEO CAMERA

 
Taking videos with your handset's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the Camera Mode and take videos when the handset is open.

- 1 In camera mode, press  [VIDEO].
- 2 Point the camera lens at your subject. You can check the video framing through the main display screen.
- 3 Press  or the side camera button  to record the video.
- 4 To stop recording, press  or  .
To Pause/Resume recording, press  [PAUSE/RESUME].
- 5 Virtual function button appears on the bottom center of the display. To save the video, press  [SAVE].
The video will be saved in "All Media" or "My Album".
To go back to idle mode without saving the picture, press  .
To replay video, press  [PLAY].
To send the picture to someone, press the Navigation Key Right.
To upload picture to Helio Screen web site, press the Navigation Key Up.
To assign to display for "Idle Screen", press the Navigation Key Left.
- 6 Press  [RENAME], to change the automatically assigned filename before saving the file.


VIDEO MODE OPTIONS

When the handset is open and in Video Mode, several user options are available.

WHITE BALANCE

Press  to directly adjust the white balance. (Auto, Outside, Cloudy, Fluorescent, Bulb)

ALBUM

Press  [PREVIEW] to view all the videos you have taken.


BRIGHTNESS

Press the Navigation Key left or right to directly adjust the brightness. The current brightness level appears at the bottom of the display screen.

ZOOM

Press the Navigation Key up or down to change the magnification. The current zoom level appears at the right side of the display screen.

PHOTO/VIDEO

Press  [PHOTO/VIDEO] to change a camera mode. (Photo, Video)

UNDER [MENU] - 1. Recording Type

To select a video recording type. (Normal, MMS Movie, Idle Screen Movie)

UNDER [MENU] - 2. Resolution

To select a video resolution. (320x240, 176x144)
(To take a video which can be sent as a Pic Message, ensure resolution is set at 176x144.)

UNDER [MENU] - 3. Quality

To select a video quality. (High, Standard, Economy)

UNDER [MENU] - 4. White Balance

To select a white tone balance. (Auto, Outside, Cloudy, Fluorescent, Bulb)

UNDER [MENU] - 5. Timer

To activate the camera's timer function. (Off, 5sec, 10sec)

UNDER [MENU] - 6. Preview Mode

To activate the preview mode function. (Indicators Only, Indicators + Crosshair, Crosshair Only, Hide All)

① Press  [SAVE] to save video option.

 
■ ALL MEDIA



- ❶ Press [MENU] .
- ❷ Select "Internal Memory" or "External Memory".
- ❸ In Review Mode, you can view all the pictures or videos you have stored in your phone.
- ❹ Select the picture or video with the Navigation Key and then press [VIEW] or press [CHECK/UNCHECK].
- ❺ To access options, press [MENU].

- **Send:** To send the current picture or video file as part of a "Message", "Email", "Bluetooth".
- **Helio UP:** To upload picture to Helio Screen web site.
- **Set:** To assign to display for "Idle Screen" or "Contact's Graphic Image". (If video file selected, except "Contact's Graphic Image".)
- **Delete:** To delete the current picture or video file from your phone.
- **Copy:** To copy the selected picture or video file to the other saved location or folders.
- **Move:** To move the selected picture or video file to the other saved location or folders.
- **Rename:** To edit or rename the picture or video file's title.
- **Sort by:** - Sort by (Date, Name, Size)
- Sort order (Descending, Ascending)
- **Check All:** To check all picture or video files.
- **File Info:** Displays information of the picture or video file.

■ MY ALBUMS



- ❶ Press [MENU] .
- ❷ Select "Internal Memory" or "External Memory".
- ❸ Select saved Image Album.
To access album's options, press [MENU].

- **Add Album:** To add a new album.
- **Delete Album:** To delete a selected album.
- **Set as Wallpaper:** To assign to display for "Wallpaper".
- **Copy:** To copy the selected picture or video file to the other saved albums.
- **Rename:** To rename a selected album.
- **Sort by:** - Sort by (Date, Name, Size)
- Sort order (Descending, Ascending)
- **Set as Default Album**

- ❹ In Review Mode, you can view all the pictures you have stored in Album.
- ❺ Select the picture or video with the Navigation Key and then press [VIEW] or press [CHECK/UNCHECK].
- ❻ To access options, press [MENU].

- **Send:** To send the current picture or video file as part of a "Message", "Email", "Bluetooth".
- **Helio UP:** To upload picture to Helio Screen web site.

- **Set:** To assign to display for "Idle Screen" or "Contact's Graphic Image". (If video file selected, except "Contact's Graphic Image".)
- **Delete:** To delete the current picture or video file from your phone.
- **Copy:** To copy the selected picture or video file to the other saved location or folders.
- **Rename:** To edit or rename the picture or video file's title.
- **Sort by:** - Sort by (Date, Name, Size)
- Sort order (Descending, Ascending)
- **Check All:** To check all picture or video files.
- **File Info:** Displays information of the picture or video file.

DATE VIEW



- 1 Press [MENU] .
- 2 Select "Internal Memory" or "External Memory".
- 3 Select folder saved with Date.
To access date folder's options, press [MENU].

- **Day:** To sort photo or video files with day.
- **Week:** To sort photo or video files with week.
- **Month:** To sort photo or video files with month.
- **Year:** To sort photo or video files with year.

- 4 In Review Mode, select the picture or video with the Navigation Key.

- 5 To access options, press [MENU].

- **Send:** To send the current picture or video file as part of a "Message", "Email", "Bluetooth".
- **Helio UP:** To upload picture to Helio Screen web site.
- **Set:** To assign to display for "Idle Screen" or "Contact's Graphic Image". (If video file selected, except "Contact's Graphic Image".)
- **Delete:** To delete the current picture or video file from your phone.
- **Copy:** To copy the selected picture or video file to the other saved location or folders.
- **Rename:** To edit or rename the picture or video file's title.
- **Sort by:** - Sort by (Date, Name, Size)
- Sort order (Descending, Ascending)
- **Check All:** To check all picture or video files.
- **File Info:** Displays information of the picture or video file.

HELIO ALBUM

Helio Album allows you to upload photos from photo album by sending pictures messages using Navigation Up Key to your Helio Album.



- 1 Press [MENU] .
- 2 Connecting to Helio Service.

■ HELIO UP



- 1 Press [MENU] .
- 2 Connecting to Helio Service.

■ MEMORY INFO

To view "Internal" or "External" memory information.



- 1 Press [MENU] .
- 2 Select "Memory Info".
- 3 Select "Internal Memory" or "External Memory" with the left or right Navigation Key.
- 4 The memory information appears.
- 5 To return to the previous page, press [OK].

■ SETTINGS

To select your camera settings:



- 1 Press [MENU] .
- 2 Select "Settings".

- **When Slide Closed:** To select "Stop Preview" or "Continue Preview" with up or down Navigation Key.
- **Call Receiving:** Specify whether or not to block incoming call during video recording. To select "Always Ignore" or "Provide Option" with up or down Navigation Key.
- **Shutter Sound:** To select "Ready Sound (Cheese, Ready?, Smile, Mute)" and "Shutter Sound (Sound 1 ~ Sound 4, Mute)" with up or down Navigation Key.
- **Voice Recording:** To select "Include" or "Not Include" with up or down Navigation Key.

- 3 Press [SAVE] to save option.

■ PRINT PHOTOS

The OZII comes equipped with a 2-megapixel built-in camera that allows you to print images directly to a printer using PictBridge technology. A USB cable must be connected between your handset and the printer before any printing can occur.



- 1 Connect the USB cable between your handset and the USB connector on the printer (Printer must support PictBridge technology).
- 2 Press [MENU] .
- 3 Select "Print Photos".
- 4 Read the message and press [OK].



From the Video+Music menu, press to access the Get Video menu, press to access the Get Music menu.

■ VIDEO



- 1 Press [MENU] or .
- 2 Select one of the following options with up or down Navigation Key.

1. Playlists: To play, add, rename or delete a playlists.

2. Videos: To display all video lists.

3. Video Album: To display all video album lists.

To access setting options, press [MENU].

- Sleep Timer: To select "Unlimited", "30min", "1hr", "1hr 30min", "2hr" or "3hr" with Navigation Key, then press .
- Shuffle+Repeat: To select "Normal", "Shuffle All", "Repeat All" or "Repeat One" with Navigation Key, then press .
- Memory Info: To view "Internal" or "External" memory information.

■ DOWNLOAD VIDEO

Connects directly to the Helio Store, where you can download videos.



- 1 Press [MENU] or .
- 2 Connecting to Helio Service.

VIDEO PLAYER

**Video Main**

(Does not interrupt playback)

| | |
|--|---|
| | Volume Up / Volume Down (Volume Level: 0, 1~10) |
| | Prev. Video (Short Press) Fast Rewind (Long Press) |
| | Cycle through play modes (same as settings) |
| | Next Video (Short Press) Fast Forward (Long Press) |
| | Play / Pause (Short Press) |
| | Full Screen mode (Once in landscape mode, down key in this direction still performs as Full Screen toggle) |

- By pressing [MENU], you can choose from the following:

1. Full Screen:
2. Add to Playlist:
3. Details:
4. Settings:

■ MUSIC



- 1 Press [MENU] or .
- 2 Select one of the following options with up or down Navigation Key.

1. **Playlists:** To play, create, rename or delete playlists.
2. **Artists:** To display all artists list.
3. **Albums:** To display all albums list.
4. **Songs:** To display all songs list.
5. **Genres:** To display all genres list.

To access setting options, press [MENU].

- Sleep Timer: To select "Unlimited", "30min", "1hr", "1hr 30min", "2hr" or "3hr" with Navigation Key, then press .
- Shuffle+Repeat: To select "Normal", "Shuffle All", "Repeat All" or "Repeat One" with Navigation Key, then press .
- Equalizer: To select "Auto", "Default", "Rock", "Jazz", "Classic" or "Pop" with Navigation Key, then press .
- Memory Info: To view "Internal" or "External" memory information.

■ DOWNLOAD MUSIC

Connects directly to the Helio Music Store, where you can download music.



❶ Press [MENU] [4] [4] or [Play/Pause] [4] .

❷ Connecting to Helio Service.

MUSIC PLAYER



Music Main

(Does not interrupt playback)



From the Contact menu, press [MENU] to access the My Number menu, press [MENU] to access the New menu.

Stores up to 4500 entries (2500 Helio, 1000 Yahoo!, and 1000 AOL), each of which can be assigned to a group. Entries can be retrieved by name, handset number or group.



SERVICE NUMBER

- **Customer Care:** 611
- **Emergency:** 911
- **Information:** 411
- **My Number:** My Handset Number
- **VoiceMail:** My Handset Number

| | |
|--|--|
| | Volume Up / Volume Down (Volume Level: 0, 1-10) |
| | Prev. Song (Short Press) Fast Rewind (Long Press) |
| | Play / Pause (Short Press) |
| | Cycle through play modes (same as settings) |
| | Next Song (Short Press) Fast Forward (Long Press) |
| | View playlist from which current song was played. |

■ NEW CONTACT

Adds a new entry.



- 1 To add a new entry to the phone book, press [CONTACT] .
- 2 To enter a name or number, use the Navigation Key to select the phone book field.

- **Contact Field:** First Name, Last Name, Graphic, Phone Number 1 ~ 6, Speed Dial, Ring, Default Number, Email, Instant Messaging, MySpace, Notes, Group.
- **Handset Number Type:** Mobile, Home, Work, Fax, Mobile2, Other.
- **Group Type:** Press [LIST] to select options. (Friends, Family, Work, School, Other, New Group, Rename Group, No Group)
- Press [Add...] to add additional details for the Contact such as more Email, Address, Nickname, Title, Company, Department or Website.

- 3 To save the entry, press [SAVE].
To return to the previous page, press .



Please refer to page 41 for more details on entering letters, numbers & symbols.

■ EDIT CONTACT



- 1 Press [CONTACT].
- 2 The list of names in your phone book is displayed alphabetically. Select entry with the Navigation Keys.
- 3 Press [MENU] .
- 4 To enter a name or number, use the Navigation Key to select the phone book field.
- 5 Press [MENU] to 1. Add More Details, 2. Merge Contacts, 3. Paste Link.
- 6 To edit a entry, then save contact, press [SAVE].

■ DELETE CONTACT



- 1 Press [CONTACT].
- 2 The list of names in your phone book is displayed alphabetically. Select entry with the Navigation Key.
- 3 Press [MENU] .
- 4 Read the message. (Delete "entry's name"?)
- 5 Press [CANCEL] or [OK].

SEARCH CONTACTS

You can review all the entries stored in your phone book list or find an entry quickly by entering all or part of a name.



- ① Press [CONTACT] .
- ② Enter a name or its character string, press [SEARCH]. All matching entries will be displayed. Highlight an entry.
- ③ Press [VIEW]. To display the entry's details.
- ④ To call the selected number, press [CALL]. To send a message, press [MSG].

COPY CONTACT



COPY TO NEW CONTACT

- ① Press [CONTACT].
- ② Select an existing entry name.
- ③ Press [MENU] .
- ④ Select type of Contacts such as "Helio", "Yahoo!" "AIM", press .
- ⑤ To edit the entry, press [SAVE].

COPY TO EXISTING CONTACT

- ① Press [CONTACT].
- ② Select an existing entry name.
- ③ Press [MENU] .
- ④ The list of names in your phone book is displayed alphabetically. Select entry with the Navigation Key.
- ⑤ To combine entries, press [SAVE].

■ SYNCHRONIZE



- 1 Press [CONTACT].
- 2 Press [MENU] .
- 3 Select "MyHelio Sync", "Yahoo! Sync" or "AOL Sync", press .

- Yahoo! and AOL Sync options will only appear after you have configured your Yahoo! or AOL email (see Email section for details).
- **MyHelio Sync (standard method):**
 - Sync Now: To sync port contacts
 - Recover Address Book: Read the message, press [NO] or [YES].
 - Sync Settings: To select "Two-way (standard)", "From Server Only" or "From Device Only" with left or right Navigation Key, press [SAVE].
- **Yahoo! Sync:**
 - Sync Now: To sync portal contacts
 - Sync Settings: To enable or disable Yahoo! sync by default.
- **AOL Sync:**
 - Sync Now: To sync portal contacts
 - Sync Settings: To enable or disable AOL sync by default.



You may need to run Yahoo! Contact Sync a few times to synchronize all your contacts.

■ GROUP DUPLICATES



- 1 Press [CONTACT].
- 2 Press [MENU] .
- 3 To group all entries with duplicate names into a single entry.



This can be undone at any time by using the Separate Duplicates feature.

■ SEPARATE DUPLICATES



- 1 Press [CONTACT].
- 2 Press [MENU] .
- 3 To separate all duplicate names that were combined previously using the Group Duplicates feature.

■ SETTINGS



- 1 Press [CONTACT].
- 2 Press [MENU] .

- **Name Display:** Press [LIST] to select "First name Last name" or "Last name First name".
- **Hide Yahoo! Contacts:** Press to check it.
- **Hide AOL Contacts:** Press to check it.
- **Send Unicode vCards:** Press to check it.
- **Do not remind me when I need to sync on first entry:** Press to check it.
- **Do not remind me when I need to sync:** Press to check it.
- **Usage Stats:** Press [GO] to usage contacts information appears.

- 3 Press [SAVE] to save it.

■ EMAIL AS VCARD



- 1 Press [CONTACT].
- 2 The list of names in your phone book is displayed alphabetically. Select entry with the Navigation Keys.
- 3 Press [MENU] .
- 4 To move a email editor.
- 5 To compose a email, press [SEND].

■ SELECT MULTIPLE



- 1 Press [CONTACT].
- 2 Press [MENU] .
- 3 To marked entry with [CHECK/UNCHECK].
- 4 Press [MENU] to 1. Delete Checked, 2.Check All, 3.Uncheck All.



From the Games menu, press to access the Download menu, press to access the Last menu.

■ DOWNLOAD GAME



1 Press [MENU] or .

Press the [MENU] to access the following Option:

- **Move to Folder:** To move the selected game to the other saved location or folders.
- **Rename:** To rename a selected folder.
- **Info:** Displays information of the selected folder.
- **Delete:** To delete a selected folder.
- **New Folder:** To add a new folder.
- **Settings:** To select "Download Summary" and "Delete All Files" with up or down Navigation Key.



From the PLAN menu, press to access the Calendar menu, press to access the New menu.

■ VOICE MEMO

Voice Memo allows you to record a reminder message that can be up to remain time. To record a memo:



1 Press [MENU] .

2 Record a new voice memo, press [NEW].

3 To stop recording a memo, press [SAVE] to save voice memo.

4 The list of all memos, in saved order, is displayed. Select a memo and press [PLAY].

Press the [MENU] to access the following Option:

- **Delete:** To delete a selected voice memo.
- **Delete All:** To delete all saved voice memo.
- **File Info:** Displays information of the selected voice memo.
- **Rename:** To rename a selected voice memo.
- **Send:** Select "Send as Text/Pic msg" or "Send as Email".
- **Sort:** Select "By Date" or "By Name".

CALENDAR

Sets an event reminder.



- 1 Press [MENU] .
- 2 Move the Navigation Key left, right, up or down to choose a date in the calendar and then press [VIEW]. Press [MENU] to 1. New Event, 2. New Annual Event, 3. Delete Range, 4. View List, 5. Alarm Settings or 6. Search Calendar. Press [MONTHLY/WEEKLY/DAILY] to exchange display mode.

If selected "Alarm Settings", to access the following option:

- **Events:** - Ring: Select ringer type.
- Vibrate: Select alert mode
- Screen: Select screen image.
- **Annual Events:** - Alarm On: Press [CHECK/UNCHECK].
- Time: To set alarm time.
- Ring: Select ringer type.
- Vibrate: Select alert mode
- Screen: Select screen image.

- 3 To set a new annual event, press [MENU] then select "New Annual Event". The "Subject" field is highlighted. Press the Navigation Key down to set the annual event options.

SUBJECT

Use the keypad to enter a title in your annual event.

DATE

Use the keypad to change or enter the date.

ANNUALLY

Press to check annually set.

CONTENTS

Use the keypad to input an anniversary plan message.

- 4 Press [SAVE] to save it or to return to the calendar.
- 5 To set a new schedule, press [MENU] then select "New Event". Select "Set Time", "Everyday", "Every Week", "Every Month" or "Every Year".
- 6 The "Subject" field is highlighted. Press the Navigation Key down to set the schedule options.

SUBJECT

Use the keypad to enter a title in your schedule.

START TIME

Use the keypad to set a start time and to select "AM" or "PM".

END TIME

Use the keypad to set an end time and to select "AM" or "PM".


CONTENTS



Use the keypad to input an anniversary plan message.

ALARM ON

Use the Navigation Key to select alarm On/Off.

ALARM TIME




Use the keypad to set an end time and  to select "AM" or "PM".

- 7 Press  [SAVE] to save it or  to return to New Event List.


TO DO


To create a task list. You can store, prioritize, and manage.



- 1 Press  [MENU]  .
- 2 The "To Do" screen appears in the display showing a list of any "To Do" tasks.

Press the  [MENU] to access the following Option:

- **Add To Do:** To create a new To Do task.
- **Del To Do:** To delete a selected To Do task.
- **Delete All:** To delete all saved To Do task list.
- **Priority Setting:** Select "High", "Mid" or "Low".
- **Annual Events:** - Alarm On: Press  [CHECK/UNCHECK].
 - Time: To set alarm time.
 - Ring: Select ringer type.
 - Vibrate: Select alert mode
 - Screen: Select screen image.


- 3 To add a new To Do task, press  [MENU] then select "Add To Do".

- 4 The "Subject" field is highlighted. Press the Navigation Key down to set the To Do task options.


SUBJECT

Use the keypad to enter a title in your schedule.

START TIME

Use the keypad to set a start time and  to select "AM" or "PM".

END TIME



Use the keypad to set an end time and  to select "AM" or "PM".


PRIORITY


Use the Navigation Key to select "High", "Mid" or "Low".

CONTENTS



Use the keypad to input an To Do task message.

- 5 Press  [SAVE] to save it or  to return to the To Do task list.

The list of all To Do tasks, in saved order, is displayed. Select a To Do task, press  [VIEW].

- To add a new To Do task, press  [NEW].

The selected To Do task will appear.

To edit it, press  [EDIT], input a new To Do task, then press  [SAVE] to save edit To Do task.

■ WAKE-UP CALL

Sets a Wake-up Call.



- 1 Press [MENU] .
- 2 The Set Wake-up Call field is highlighted. Press the Navigation Key down to set the Wake-up Call options.

SET WAKE-UP CALL

Use the Navigation Key to select Set Wake-up Call "Off", "Mon-Fri", "Mon-Sat", "Everyday".

NO HOLIDAY

Press to check No Holiday.

ALARM TIME

Use the keypad to set an alarm time and to select "AM" or "PM".

REPEAT

Use the Navigation Key to select repeat time "None", "2 times", "3 times", "4 times", "5 times".

INTERVAL

Use the Navigation Key to select interval time "5min", "10min", "15min".

RING

To set a "Ring" using the left or right Navigation Key. (Dingaling, I'm Callin', Space Dragon, The Federation, Silky Sky, Circle&Circle, HipHoop 2005, Monk, Minuet for Baby, Samadhi, Rainyday, China Cruising, Karma, Trill Harmonic, Hypnosis)

VIBRATE

Use the Navigation Key to select vibrate type "Ring Only", "Vibration", "Vib then Ring", "Vib + Ring".

SCREEN

To set a "Screen" using the left or right Navigation Key. (No picture, Helio Night, Helio Day, Helio Orange, Sea, Helio Type 1 ~ 3, Light Rain, Monoeye, Organic, Pattern Type 1 ~ 4, Starmap, Waterdrop, Zigzag Type 1 ~ 2, Diva, Empire, Hula Tiki, Lucky Cat, Calendar, Wake-up Call, Alarm)

- 3 Press [PREVIEW] to preview it.
Press [SAVE] to save it.

ALARM



- 1 Press [MENU] .
- 2 To set a new alarm, press [NEW].
- 3 To select alarm options.

- **After 10 min:** To set alarm after 10 minutes.
- **After 20 min:** To set alarm after 20 minutes.
- **After 30 min:** To set alarm after 30 minutes.
- **After 1 hour:** To set alarm after 1 hour.
- **Set Time:** To set alarm time.
- **Everyday:** To set alarm time every day.
- **Every Week:** To set alarm time every week.
- **Every Month:** To set alarm time every month.

ALARM ON

Use the Navigation Key to select alarm on On/Off.

EXCEPT HOLIDAY

Press to check Except Holiday.

DATE

Use the keypad to change or enter the date.

ALARM TIME

Use the keypad to set an alarm time and to select "AM" or "PM".

MEMO

Use the keypad to input an alarm message.

- 4 Press [SAVE] to save it.
- 5 Press [MENU] to "1. Delete" or "2. Delete All".

CALCULATOR

To access the calculator:



- 1 Press [MENU] .
- 2 Follow the instructions below to calculate $8 \times 6 \div 4 - 2.5 = 9.5$

- Input 8.
- Press the Up Navigation Key (x).
- Input 6.
- Press the Down Navigation Key (÷).
- Input 4.
- Press the Right Navigation Key (-).
- Input 2 and press , to input (.).
- Press 5, .
- Answer appears on the right side of the blue box below calculation.

- 3 To reset, press [CLEAR].



- To change the displayed number from positive (+) to negative (-) and vice versa, press [±].
- To view cal history, press [HISTORY].

■ WORLD TIME

To display the time and date in pre-programmed cities:



- 1 Press [MENU] .
- 2 Select a city with the Navigation Key.
- 3 The world map appears with the city, its date and time.



If daylight saving time does not apply, it may be different from the actual time during DST, press [DST].

- 4 To return to the previous page, press .

■ UNIT CONVERTER

To access the unit converter:



- 1 Press [MENU] .
- 2 Select the desired convert unit item with left or right Navigation Key, and input number.
- 3 To change the unit type (for example: m, cm...) with left or right Navigation Key.

- **Cm**: Centimeter, Meter, Inch, Feet, Yard, Mile.
- **Cm²**: Square Centimeter, Square Meter, Are, Square Foot, Square Yard, Acre.
- **Kg**: g, Kg, Ton, Grain, Ounce(oz), Pound(lbs).
- **MI**: Cubic Cm, Cubic Meter, Liter, Cubic Inch, Cubic Foot, Cubic Yard, Galon.
- **C**: Celsius, Fahrenheit.

- 4 Press [OK] to result appears on bottom below converter.

■ NOTEPAD

Your handset includes an internal notepad that can be used to compose and store reminders and notes. To compose a memo (there is a 220-letter limit):



- 1 Press [MENU] .
- 2 Input a new text memo, press [NEW].
(Please refer to page 41 for more details on entering letters, numbers & symbols.)
- 3 Press [SAVE] to save memo.
- 4 The list of all memos, in saved order, is displayed. Select a memo, press [VIEW].
- Press [MENU] to "Edit", "Delete", "Delete All".
- To add a new memo, press [NEW].
- 5 The selected memo will appear.
To edit it, press [EDIT], select "Edit" and input a new text memo, then press [SAVE] to save edit memo.

■ STOPWATCH

Simultaneously times up to 20 different events.
To operate the stopwatch:



- 1 Press [MENU] .
- 2 To measure a time period.
 - To start the stopwatch, press [START].
 - To pause it, press [PAUSE].
 - To resume it, press [RESUME] or press [RESET] to reset it.
 - To return to the previous page, press .
- 3 To time up to 20 events at once:
 - To start, press [START].
 - To stop a time period and continue measuring another one, press [SAVE].
 - To stop the second and continue measuring a third one, press [SAVE].
 - To measure up to 20 time periods, repeat the above steps.
 - To stop the stopwatch, press [PAUSE].
 - To review the results, press [VIEW].
 - To return to the stopwatch, press .
 - To reset it, press [RESET].

■ TIP CALCULATOR

Calculates the tip and determine how much each person should pay for the meal.



 
- 1 Press [MENU] .
- 2 Enter the amount of the bill, press the Navigation Key down. Press [.] for to enter a decimal point.
- 3 Enter the tip percentage, press the Navigation Key down. Press [.] for to enter a decimal point.
- 4 Enter the amount of people paying, press the Navigation Key down.
- 5 The tip is automatically calculated in the section below.
- 6 Press [RESET] for clear tip calculator.



From the Message menu, press to access the Inbox menu, press to access the Write menu.

■ WHEN A NEW MESSAGE ARRIVES

- 1 The following display appears when a new message arrives.
- 2 To display the message, press [VIEW].

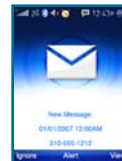

■ MESSAGE



- 1 Press [MENU] or .

- By pressing [MENU], you can choose from the following:

1. **Move:** Changes the order of menus on the current message screen.
2. **Manage Email Storage**
3. **Manage Ext Memory**
4. **Synchronize**
5. **Manage Quick Text**
6. **Sign Out All:** Signs out all IM accounts that are currently signed in.
7. **Reset**
8. **Help:** Help information.
9. **Put to Background**
0. **dbg: Debug Console**
- *. **dbg: SW Version**
- #. **dbg: View Session**

■ SEND TEXT/PIC

In the message menu, you can open the keypad to writing a message quickly. To compose a new text message:



- 1 Press [MENU] [MENU] and select "1. New Message" or [MENU] [MENU] and select "1. New Message".
- 2 "To" field is highlighted. Input the recipient handset number and press .

- By pressing [MENU], you can choose from the following:
 1. **Groups:** To select all the phone numbers in a group.
 2. **Call Log:** To search for a handset number in the call history.
- By pressing [CONTACTS], To search for a handset number or email address in your saved contacts.



- Input maximum of 10 recipients in the "To" filed.
 - You can select multiple Contacts by using the "Multi" function while searching Contacts.
- 3 The "Message" field is highlighted. Input a new text message and press .

- By pressing [MENU], you can choose from the following:
 1. **Insert Attachments:**
 1. **Photos:** To attach a picture from your internal memory.
 2. **Voice Recordings:** To attach a recorded audio file.
 3. **Video Recordings:** To attach a video from your internal memory.
 2. **Insert Emoticon:** To insert an emoticon from the separate 6 pages available. Note that more recipient handsets may not be able to display the emoticon images.
 3. **Insert Quick Text:** To insert the written sentences from the Quick Text list.
 4. **Change Format:**
 - **Text Color:** To change the text color from 15 available colors. Note that this change will send your message as a Pic message.
 - **Wallpaper:** To add a background design to your message from the 10 available. Note that this change will send your message as a Pic Message.
 - **Background Color:** To add a background color from the 15 available. Note that this change will send your message as a Pic message.
 5. **Save as Quick Text:** Saves the written sentences into Quick Text.
 6. **Save to Drafts:** To save a message to "Drafts" folder.

- 4 To send the Text message, press [SEND].

■ TEXT/PIC INBOX

The Inbox manages received Text/Picture messages. To access:



- 1 Press , .
- 2 Select a message and press .
If URL is included, press [GoTo].
If handset number is included, press [CALL].
If video file is included, press [PLAY/STOP].
- 3 To reply to the message, press [REPLY].

- By pressing [MENU], you can choose from the following:
 1. **New Message:** To compose a new message.
 2. **Call Contact:** Type your reply.
 3. **View Folders:** To select "Inbox", "Saved", "Sent", "Drafts" or "Trash" with up/down Navigation Key.
 4. **Delete Select:** To delete a selected message.
 5. **Delete All Messages:** To delete all received message.
 6. **Save Contact:** To save the callback number, email address and phone number from the address of the received message in to your contacts.
 7. **Settings:**
 - **Message View Style:** To select "All Messages" or "Classic Inbox".
 - **Time Stamp (All Message View):** To select "On" or "Off".
 - **Photo size:** To select "Reduced size(640x480)" or "Original size".

- In read the message, by pressing [MENU], you can choose from the following:
 - Delete
 - Forward
 - Save message
 - Add to Contacts
 - View Message Info
 - Save Sender's Number
 - Call Selected Number
 - Msg Selected Number
 - Save email address
 - Create New Contact

■ OVER-THE-AIR SETTINGS SERVICE

To use wireless services such as MMS, you need to have proper connection settings on your handset. These settings may have already been set up by your service provider. If not, you may obtain the settings directly as an OTA message, and save them on your handset. For more information, contact your service provider.

You may be able to receive the connection settings for EGPRS, multimedia messages, synchronization, Email, and multimode browser. When you have received the connection settings as an OTA message, Connection settings received is displayed.

■ INSTANT MESSAGING

OZII provides access to your Yahoo!, AOL, or Windows Live Instant Messaging services. If you're a registered user, you can take the experience with you on your OZII. From your Message screen just navigate to the portal to get started. There are three tabs inside each of the portals; IM Contact List, Conversation Screen, and Email.

SIGN-IN

From the IM Contacts screen on the far left, you will be prompted to Sign-in to the portal with your ID and password.

IM CONTACT LIST

Once Signed-in, you can see all your IM Contacts.


Select  for Menu items to manage your Contacts.


Note that some language is different for each service.

- **My Status:** To set the current status you want to show for yourself.
- **Sign Out / Sign Off:** To log off the IM service.
- **Group Message:** To select multiple IM contacts to send a message to. Note, unlike the desktop, this will create separate Conversations once sent.
- **Send Message/IM to:** To send a new message to someone not already in IM contact lists.
- **Add Contact:** To add a new contact to list of IM contacts.
- **Delete Contact:** To delete a contact from list. Note, this will delete them from your PC version as well.
- **Contact Status / Info:** To view the address book information for the IM contact.
- **Various feature depending on Service**
- **Refresh List:** To update the presence information for contacts.
- **Settings:** To change user preferences including ability to show as invisible and control what contacts will show.

CONVERSATION

To start a Conversation with a contact, simply select them from the contact list. This will open a Conversation window in the second tab.

Select  for Menu items for managing Conversations. Note that some language is different for each service.

- **Insert Symbol:** OZII has 8 screens of symbols to help, navigate to find, use corresponding number to select, and Press  to insert.
- **Insert Emoticon:** To include your portal emoticons in a conversation.
- **Insert Quick Text:** Choose from portal Quick Text options in a Conversation.
- **Paste Link:** To add a linked address.
- **Add Attachments:** To add an attachment, including photos and some other files. Note only available for Yahoo! and AOL.
- **Block:** To block further conversations with the sender of an IM message.
- **Delete Current Text:** To remove everything currently in text input box.

■ EMAIL MESSAGES

Mobile email allows you to access your Yahoo! Mail, AOL Mail, AIM Mail, Windows Live (Hotmail or MSN Mail), Gmail, Earthlink, or Helio Mail accounts on your handset. Now you can quickly and easily check your email while you're away from your computer. You can also configure up to two custom email accounts for work, home, school, or other if your email provider uses a standard POP3 or IMAP server.



- When sending email, your handset may display the words Message sent. This is an indication that the email has been sent by your handset to the email server. This is not an indication that the email has been received at the intended destination. For more details about email services, check with your service provider.
- Preview size of each message is set to 500 characters. Message larger than the preview size will truncate and more can be downloaded from within the message body window. You can increase the preview size or choose to always receive the full message from the settings menu. Note that can slow the Send/Receive time.
- Maximum email size is set at 10,000 characters. You can raise this up to 99,999 from the settings menu. Note that this can also drastically slow the Send/Receive time.


■ SEND EMAIL

In the message menu, you can open the keypad to writing an email quickly. To compose a new email message:




- 1 Press , , .
- 2 Select the Email Account you would like to send the email from. The list will show all Email Accounts that you currently have configured (username and password entered). If you only have one account configured or have identified a particular Email Account as your "default", it will automatically go to the Compose Screen for that account.
- 3 The "To:" field is highlighted. Input the recipient email and press .

- By pressing [MENU], you can choose from the following:
 1. **Contacts:** To search for a email address in the contact.
 2. **Add Attachment:** To add an attachment to an email.
 3. **Add Cc:** To add a carbon copy email address.
 4. **Add Bcc:** To add a blind carbon copy email address.
 5. **Save to Drafts:** To save a message to "Draft" folder.
 6. **Return to Mailbox:** To return to main message menu.
- 4 The "SUBJ" field is highlighted. Input the Subject and press .

- By pressing  [MENU], you can choose from the following:
 1. **Insert Symbol:** To insert a symbol from the 8 pages available. Use the corresponding number to select.
 2. **Insert Emoticon:** To insert an emoticon from the separate 1 pages available. Note that more recipient handsets may not be able to display the emoticon images.
 3. **Insert Quick Text:** To insert the written sentences from the Quick Text list.
 4. **Paste Link:** To add a linked address.
 5. **Add Attachment:** To add an attachment, including photos, videos, or other files saved previously from emails. Note that Helio support email downloads up to 1MB.
 6. **Add Cc:** To add a carbon copy email address.
 7. **Add Bcc:** To add a blind carbon copy email address.
 8. **Save to Drafts:** To save a message to "Draft" folder.
 9. **Return to Mailbox:** To return to main message menu.

- 5 The "Message" field is highlighted.
Input a new email.

- By pressing  [MENU], you can choose from the following:
 1. **Insert Symbol:** To insert a symbol.
 2. **Insert Emoticon:** To insert an emoticon image.
 3. **Insert Quick Text:** To insert the written sentences from the Quick Text list.
 4. **Paste Link:** To add a linked address or other text.
 5. **Add Attachment:** To add an attachment to an email.
 6. **Add Cc:** To add a carbon copy email address.
 7. **Add Bcc:** To add a blind carbon copy email address.
 8. **Save to Drafts:** To save a message to "Draft" folder.
 9. **Return to Mailbox:** To return to main message menu.

- 6 To send the email, press  [SEND].

■ HELIO MAIL

To use your Helio Mail account, you just need to setup your password. As a Helio member, you automatically received a your_device_number@myhelio.com Email Account (ex. 3105551212@myhelio.com) and have the option to create a friendly username during the password process.

To do this, go to <http://www.helio.com>, click on the "My Account" link, and follow the instructions under "Need a Password". Next, click on "Personalize Email" to create your unique friendly email address.

In the future you can access your Helio Mail only at <http://webmail.myhelio.com> or on your OZII. When performing the "Synchronize" feature from the Contact Menu, it will synchronize your contacts from the device to the Helio mail Address Book and can be used to transfer contacts entered or imported online to your device.

To compose a new Helio email message:



- 1 Press  ,  .

■ MAIL FOR MICROSOFT EXCHANGE



- 1 Press  ,  .
- 2 Connecting to Helio Service.

■ YAHOO!



- 1 Press , .
- 2 Input the "Yahoo! ID" and press .
- 3 Input the "Password" and press .

■ AOL



- 1 Press , .
- 2 Input the "Screen Name" and press .
- 3 Input the "Password" and press .

■ GMAIL



- 1 Press , .
- 2 Read the message, press .

■ WINDOWS LIVE



- 1 Press , .
- 2 Input the "E-mail address" and press .
- 3 Input the "Password" and press .

■ EARTHLINK



- 1 Press , .
- 2 Read the message, press .

■ ADD EMAIL ACCOUNT



- 1 Press , .
- 2 Read the message, press .

■ ADD EMAIL ACCOUNT



- 1 Press  ,  .
- 2 Read the message, press  .

 
■ EMAIL MENU OPTIONS



- By pressing  [MENU], you can choose from the following:
 1. **Send/Receive:** Starts the syncing process to download new emails and send any updates you made on the device back to the web version.
 2. **New Email:** To compose a new email.
 3. **Reply:** To reply to an email.
 4. **Forward:** : To forward an email.
 5. **View Folders:** To view other folders such as Sent, Drafts, Outbox, or Trash.
 6. **Cancel Send/Receive:** To view other folders such as Sent, Drafts, Outbox, or Trash.
 7. **Select Multiple:** This mode lets you delete multiple emails at the same time.
 8. **Mark as Read/Unread:** To change the status of email between read and unread."
 9. **Settings:** To change user configurable settings (General, Sort By, or Folder Options).
 0. **View Sender:** To show sender's informations.
- *. **Add to Contacts:** To add the address to the contacts list.



From the APPS menu, press  to access the Download menu, press  to access the Last menu.


Access your downloaded games and applications. You can also specify settings for application.



- 1 Press  [MENU]  .
- 2 To set application as your topmost application, select one of the following options with up or down Navigation Key.

Press the  [MENU] to access the following Option:

 - **Move to Folder:** To move the selected application to the other saved location or folders.
- **Rename:** To rename a selected application.
- **Info:** Displays information of the selected application.
- **Delete:** To delete a selected application.
- **New Folder:** To add a new folder.
- **Settings:** To select "Download Summary" and "Delete All Files" with up or down Navigation Key.

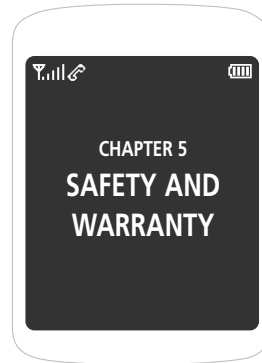

This chapter addresses the safety guidelines and precautions to follow when operating your handset. Before operating your handset, please be aware of all the safety details.

This chapter contains the terms and conditions of services and the warranty for your handset. Please review them thoroughly.

SAFETY INFORMATION FOR WIRELESS HANDHELD HANDSETS

SAFETY INFORMATION FOR FCC RF EXPOSURE

SAR INFORMATION

FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES

FDA CONSUMER UPDATE

PROTECT YOUR WARRANTY

12 MONTH LIMITED WARRANTY

Read This Information Before Using Your Handheld Portable Cellular Device

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable device is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless handsets. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *
NCRP Report 86 (1986) *
ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your handset complies with the FCC guidelines (and those standards).

ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the handset and may violate FCC regulations.

1* : American National Standards Institute.

2* : National Council on Radiation protection and measurements.

3* : International Commission on Nonionizing Radiation Protection.

DRIVING SAFETY

Talking on the handset while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of handsets in the areas where you drive. Always obey them.

Also, if using your handset while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions so require.

If you must use the handset while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless handset.

PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless handset and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers :

- ALWAYS keep the handset more than six inches from your pacemaker when the handset is turned on.
- Do not carry the handset in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your handset OFF immediately.

OTHER MEDICAL DEVICES

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your handset OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

POSTED FACILITIES

Turn your handset OFF where posted notices so require.

OTHER SAFETY GUIDELINES

AIRCRAFT

FCC regulations prohibit using your handset while in the air. Turn your handset OFF before boarding an aircraft. Always request and obtain prior consent and approval of an authorized airline representative before using your handset aboard an aircraft. Always follow the instructions of the airline representative whenever using your handset aboard an aircraft, to prevent any possible interference with airborne electronic equipment.

BLASTING AREAS

To avoid interfering with blasting operations, turn your handset OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your handset OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

PRECAUTIONS

Your Handheld Portable Device is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

- DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
- DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using, lay down the unit to avoid possible damage due to instability.
- DO NOT expose this equipment to rain or spilled beverages.
- DO NOT use unauthorized accessories.
- DO NOT disassemble the handset or its accessories. If service or repair is required, return unit to an authorized Pantech cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
- DO NOT short-circuit the battery terminals with metal items etc.



WARNING!

- This product contains a chemical known to the State of California to cause cancer.
- This product contains a chemical known to the State of California to cause birth defects or other reproductive harm.

WARNING! READ THIS INFORMATION BEFORE USING

CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this handset complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the handset, or result in violation of FCC regulations. Do not use the handset with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION

This device was tested for typical body-worn operations with the back of the handset kept 2.0 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 2.0 cm. separation distance between the user's body and the back of the handset, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



For more information about RF exposure, please visit the FCC website at www.fcc.gov.

THIS MODEL HANDSET MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the handset transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the handset while operating can be well below the maximum value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a handset model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 1.02 W/Kg and when worn on the body, as described in this user guide, is 0.786 W/Kg. (Body-worn measurements differ among handset models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various handsets and at various positions, they all meet the government requirement for safe exposure.

The SAR testing for Body-worn operation was performed with a 20mm separation. The User's Manual indicates that any holsters/clips used with this device should contain no metallic components.

The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on PP4OZ2.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile handsets used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

SAFETY AND WARRANTY

FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless handsets under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless handsets be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless handsets are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and handsets also vary in the amount of interference they generate.

The wireless device industry has developed a rating system for wireless handsets, to assist hearing device users find handsets that may be compatible with their hearing devices. Not all handsets have been rated. Handsets that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated handset successfully. Trying out the handset with your hearing device is the best way to evaluate it for your personal needs.

Your mobile device model complies with FCC rules governing hearing aid compatibility. These rules require an M3 microphone or higher value. The M-value, shown on the device box, refers to lower radio frequency (RF) emissions. A higher M-value generally indicates that a device model has a lower RF emissions level, which may improve the likelihood that the device will operate with certain hearing aids. Some hearing aids are more immune than others are to interference. Please consult your hearing health professional to determine the M-rating of your hearing aid and whether your hearing aid will work with this device.

FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES

SAFETY AND WARRANTY

This handset complies with the requirements set forth in Section 68.4 of the Federal Communication Commission's rules governing hearing aids and providing inductive coupling capability for the hearing aid's telecoil. The microphone (M) and telecoil (T) ratings are labeled on the box. Devices meeting HAC compliance have a minimum M3 or T3 rating. M refers to lower RF emissions levels for customers using their hearing aids in microphone mode. T refers to internal telecoil coupling for customers with t-coil-equipped hearing aids. Some hearing aids are more immune than others are to interference. To determine the immunity of your hearing aids, please contact your hearing health professional.



**U.S. Food and Drug Administration -
Center for Devices and Radiological Health
Consumer Update on Wireless Handsets**

1. Do wireless handsets pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless handsets. There is no proof, however, that wireless handsets are absolutely safe. Wireless handsets emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless handsets?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless handsets before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless handsets are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless handsets to notify users of the health hazard and to repair, replace or recall the handsets so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless handset industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless handsets;
- Design wireless handsets in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless handsets with the best possible information on possible effects of wireless handset use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some inter-agency working group activities, as well. FDA shares regulatory responsibilities for wireless handsets with the Federal Communications Commission (FCC). All handsets that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless handsets. FCC also regulates the base stations that the wireless handset networks rely upon. While these base stations operate at higher power than do the wireless handsets themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless handsets. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of handsets are the subject of this update?

The term "wireless handset" refers here to hand-held wireless handsets with built-in antennas, often called "cell," "mobile," or "PCS" handsets. These types of wireless handsets can expose the user to measurable radiofrequency energy (RF) because of the short distance between the handset and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the handset is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless handsets," which have a base unit connected to the device wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless handsets have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be predisposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless handsets, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless handsets and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless handset RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of handset use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless handsets poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless handsets would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless handsets. Many factors affect this measurement, such as the angle at which the handset is held, or which model of handset is used.

6. What is FDA doing to find out more about the possible health effects of wireless handset RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues. FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless handset safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless handset users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless handset?

All handsets sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless devices is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless handset and is set well below levels known to have effects. Manufacturers of wireless handsets must report the RF exposure level for each model of handset to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your handset so you can find your handset's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless handsets?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless handsets and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless handset users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same handset. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless handset complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless handset?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless handset will reduce RF exposure.

- If you must conduct extended conversations by wireless handset every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless handset away from your body or use a wireless handset connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless handsets are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless handset use.

10. What about children using wireless handsets?

The scientific evidence does not show a danger to users of wireless handsets, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless handsets. Reducing the time of wireless handset use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless handsets at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless handset causes brain tumors or other ill effects. Their recommendation to limit wireless handset use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless handset interference with medical equipment?

Radiofrequency energy (RF) from wireless handsets can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless devices. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless handset EMI. FDA has tested hearing aids for interference from handheld wireless handsets and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless handsets so that no interference occurs when a person uses a "compatible" handset and a "compatible" hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless handsets for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones (<http://www.fda.gov/cdrh/phones/index.html>)
- Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)
- National Radiological Protection Board (UK) (<http://www.nrbp.org.uk/>)

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

"Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling, misuse, neglect or accident".

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Pantech product. Be careful. Some of these products may not be compatible to use with your Pantech product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-Pantech accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Pantech product.

The logo for Pantech, featuring a stylized 'P' followed by the word 'PANTECH' in a bold, sans-serif font.

PANTECH WIRELESS, INC.

11240 Warland Drive, Cypress, CA 90630 (800) 962-8622

SAFETY AND WARRANTY

12 MONTH LIMITED WARRANTY

Pantech Wireless, Inc. (the Company) warrants to the original retail purchaser of this Pantech handheld portable cellular device, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) months period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, key pad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

12 MONTH LIMITED WARRANTY

SAFETY AND WARRANTY

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime handset number and/or fax number and complete description of the problem, transportation prepaid, to the Company by calling the number listed below or to the place of purchase for repair or replacement processing.

In addition, you may device us at (800) 962-8622, or email us at HandsetHelp@Pantech.com

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

SAFETY AND WARRANTY

12 MONTH LIMITED WARRANTY

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.