

User Guide

PC-7130



Thank you for choosing the up-to-date PC-7130, our new model, developed by top researchers to support the CDMA2000 1X system through Qualcomm-manufactured MSM6000 chips and CDMA technologies. This product allows for high speed communication services, such as data & fax services, and a GUI animation menu. T9 input mode makes it much easier to enter text. Other proven technologies include:

- Full graphic display of 3 text input line, 1 soft key line and 1 icon line with variable font size.
- Easy to enter letters through the T9 text input mode.
- DATA Services (i.e.; wireless fax send/receive).
- GUI & Animation display compliant with CDMA2000 1X.
- CSTN 65K Color LCD.
- Navigation Key and 20 keys aligned for more convenience.
- Sophisticated features of speaker phone.
- Additional services of text messaging and BREW on top of authentication, call forwarding, call waiting.

IMPORTANT INFORMATION

This PC-7130 user guide contains very important information about how to handle and use the product. Please read this manual thoroughly, pay attention to the warranty on the back page and be alert to the exclusions and limitations of your warranty, which are related with the unauthorized use of components.

CHAPTER 1. BEFORE USING YOUR PHONE	9
INSIDE THE PACKAGE.....	10
HANSET DESCRIPTION	11
FRONT VIEW.....	11
SIDE AVIEW.....	11
THE FUNCTION KEYS.....	12
DISPLAY INDICATORS.....	13
DISPLAY INDICATORS.....	13
BATTERY USAGE.....	15
BATTERY INSTALLATION.....	15
BATTERY CHARGING.....	16
POWER CONNECTION.....	16
BATTERY LIFE (FOR NEW BATTERY).....	17
BATTERY HANDLING INFORMATION.....	18
DOS.....	18
DON'Ts.....	18
CHAPTER 2. BASIC OPERATION	19
TURNING THE PHONE ON / OFF	20
TURNING THE PHONE ON.....	20
TURNING THE PHONE OFF.....	20
ACCESSING THE MENU.....	21
MENU SUMMARY.....	22
BASIC FUNCTIONS.....	25
MAKING A CALL.....	25
MAKING INTERNATIONAL CALLS.....	25
PAUSE FEATURE.....	26
ANSWERING A CALL.....	26
CALLER ID FUNCTION.....	27
CALL WAITING FUNCTION.....	27
ADJUSTING VOLUME.....	28
VIBRATE ONLY.....	28
KEY GUARD.....	29
DURING A CALL.....	30
MUTE (UNMUTE).....	30
SCRATCHPAD.....	30
MESSAGES.....	31
PHONE BOOK.....	31
CALL HISTORY.....	31
VOICE PRIVACY.....	32
MAKING AN EMERGENCY CALL.....	33
EMERGENCY NUMBER IN LOCK MODE.....	33
EMERGENCY NUMBER USING ANY AVAILABLE SYSTEM.....	34
CHAPTER 3. MEMORY FUNCTION	35

TABLE OF CONTENTS

STORING A PHONE NUMBER	36
ENTERING LETTERS, NUMBERS & SYMBOLS	38
STANDARD INPUT MODE.....	40
T9 INPUT MODE.....	44
NUMERIC MODE.....	45
SYMBOL MODE.....	45
SPEED DIAL.....	46
CHAPTER 4. MENU FUNCTION	47
PHONE BOOK	48
ADD NAME.....	48
PHONE.....	48
FIND.....	49
BY NAME.....	49
BY NUMBER.....	50
BY GROUP.....	51
GROUPS.....	52
RENAME.....	52
GROUP RINGER.....	52
SPEED DIAL.....	53
CALL HISTORY	54
MISSED.....	54
RECEIVED.....	55
DIALLED.....	56
CALL DURATION.....	57
ALL DIALLED CALLS.....	57
LAST DIALLED CALL.....	57
ALL CALLS.....	57
DATA HISTORY.....	57
PROFILES	58
PROFILES.....	58
DISPLAY	60
MENU STYLE.....	60
SERVICE AREA.....	60
GRAPHICS.....	60
STANDBY.....	60
POWER ON.....	61
POWER OFF.....	61
RECEIVED CALL.....	61
DIALED CALL.....	62
LANGUAGE.....	62
BANNER.....	62
CONTRAST.....	63
BACKLIGHT.....	63
SETTINGS	64

TABLE OF CONTENTS

CALL.....	64
CALL FORWARD.....	64
CALL WAIT.....	64
ANY KEY ANSWER.....	65
AUTO REDIAL.....	65
VOICE PRIVACY.....	66
CALL TIMER.....	66
AUTO ANSWER.....	66
tone length.....	67
CONNECT CALL ALERT.....	67
DISCONNECT CALL ALERT.....	67
EDIT SMS ON CALL REJECT.....	67
PHONE.....	68
KEY GUARD.....	68
DATA SETTINGS.....	68
VERSION.....	68
SECURITY.....	69
PHONE LOCK.....	69
CHANGE CODE.....	70
RESTRICT.....	71
EMERGENCY NUMBERS.....	72
ERASE ALL.....	72
RESET PHONE.....	73
AIR PLANE MODE.....	74
ORGANIZER	75
SCHEDULER.....	75
ADD EVENT.....	75
DATE.....	75
TIME.....	75
EVENT.....	75
SETTING.....	76
RINGER.....	76
VIEW EVENT.....	76
ALARM.....	77
SETTING.....	77
DATE.....	78
TIME.....	78
SNOOZING.....	78
RINGER.....	78
D-DAY.....	79
DATE.....	79
TIME.....	79
ALARM.....	79
RINGER.....	79
MEMO.....	79

TABLE OF CONTENTS

MEMO	80
ADD NEW	80
VIEW MEMO	80
SETTINGS	81
RESERVED CALL	81
CALCULATOR	82
CURRENCY CONVERTOR	82
STOPWATCH	83
WORLD CLOCK	84
R-WORLD	85
R-WORLD	85
RESET R-WORLD	85
GAME	85
SNAKE	86
ICARUS	86
CHAPTER 5. TEXT MESSAGE	87
WHEN A NEW MESSAGE ARRIVES	88
WRITE	88
INBOX	91
REPLY	92
FORWARD	92
SAVE TO TEMPLATE	92
SAVE TO PHONE BOOK	92
SAVE TO DRAFTS	92
MOVE TO ACHIEVE LOCK	93
LOCK & UNLOCK	93
ERASE	93
RESERVED CALL	93
OUTBOX	94
CHECKING SENT TEXT MESSAGES	94
SEND TO	94
SAVE TO PHONE BOOK	95
MOVE TO ACHIEVE LOCK	95
SAVE TO DRAFTS	95
LOCK & UNLOCK	95
ERASE	96
DRAFTS	96
ACHIEVE	97
1234 SERVICE	97
TEMPLATES	98
ERASE ALL	98
SETTINGS	99
SAVE SENT MSG	99

TABLE OF CONTENTS

AUTO ERASE	99
SIGNATURE	100
DIRECT VIEW	100
DELIVERY ACK	101
PRIORITY	101
MSG. GROUP	102
ADD NEW MSG. GROUP	102
ASSIGN PHONE NUMBER TO MSG. GROUP	102
CHANGE MSG. GROUP NAME	103
SEND TEXT MSG.	103
ERASE MSG. GROUP	104

CHAPTER 6. SAFETY AND WARRANTY

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES	106
EXPOSURE TO RADIO FREQUENCY SIGNALS	106
ANTENNA CARE	107
DRIVING SAFETY	108
ELECTRONIC DEVICES	109
PACEMAKERS	109
OTHER MEDICAL DEVICES	109
POSTED FACILITIES	110
OTHER SAFETY GUIDELINES	111
AIRCRAFT	111
BLASTING AREAS	111
POTENTIALLY EXPLOSIVE ATMOSPHERES	111
PRECAUTIONS	112
SAFETY INFORMATION FOR FCC RF EXPOSURE	113
CAUTIONS	113
BODY-WORN OPERATION	114
VEHICLE MOUNTED EXTERNAL ANTENNA (OPTIONAL, IF AVAILABLE)	114
SAR INFORMATION	115
PRECAUTIONS WHEN USING BATTERIES	118
CARE AND MAINTENANCE	120
TROUBLESHOOTING	122
PROTECT YOUR WARRANTY	125
12 MONTH LIMITED WARRANTY	126



This chapter provides important information about using the PC-7130 including :

- INSIDE THE PACKAGE
- HANDSET DESCRIPTION
- DISPLAY INDICATORS
- BATTERY USAGE
- BATTERY HANDLING INFORMATION

BEFORE USING

INSIDE THE PACKAGE

This package should include all items pictured below. If any are missing or different, immediately contact the retailer where you purchased the cellular telephone.



Handset



Handstrap



AC Charger



User Manual



Standard Battery

- The actual phone may be different from the picture.

HANDSET DESCRIPTION

 
BEFORE USING

This cellular telephone is a single mode (800MHz CDMA) CDMA2000 1X digital cellular telephone with capabilities. The PC-7130 90g (with out battery) And the dimensions are 98.2mm X 45.5mm X 19.8mm.


FRONT VIEW



SIDE VIEW

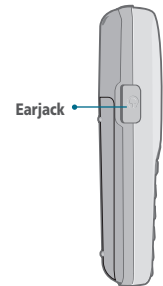

THE FUNCTION KEYS

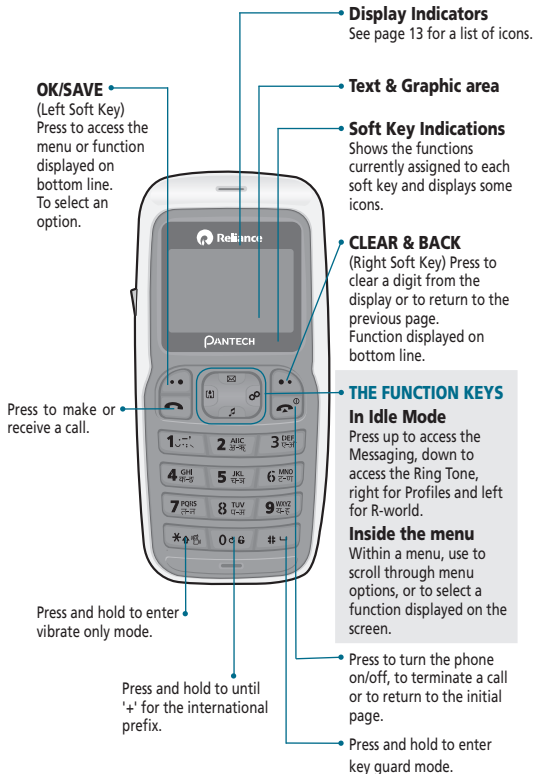 

DISPLAY INDICATORS



Signal Strength

Current signal strength: the more lines, the stronger the signal.



Service Indicator

Indicates call is in progress, indicates the phone cannot receive a signal from the system.



Message

New text or voice message.



Battery

Battery charging level – the more blocks, the stronger the charge.



Auto Answer

Phone is in answering machine mode.



Alarm

Appears when either an event or an alarm is set.



Ring Type

Appears when a ringer is set as a ringer Type.



Data Call

Data call is in progress.



Speakerphone

Phone is in speakerphone mode.



Vibrate Only

Phone will vibrate when call is received.


**Earpiece**

Appears when earpiece is inserted.


BATTERY INSTALLATION

As shown in the picture below, put the mold locators of the battery into the holes located in the bottom of the unit.

 - 1 Insert the mold locator of the battery into the hole located in the bottom of the unit.

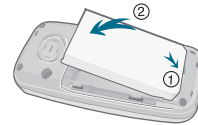

 - 2 Press the battery cover case until the sound of a 'click' is heard.




If the battery is not correctly placed in the compartment, the handset will not turn on and / or the battery may detach during use.

BATTERY CHARGING

POWER CONNECTION

 - 1 Plug the AC Charger into a standard outlet.
- 2 Plug the other end of the AC Charger into the bottom of your phone. The battery must be installed on to the phone.

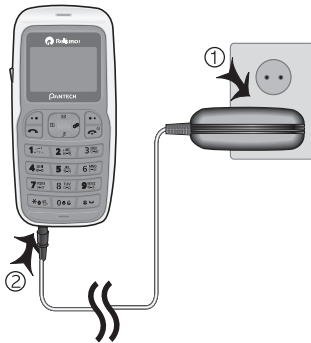

NOTE

- When you charge the battery with the phone power off, you will see a charging status screen. You cannot operate the phone until it is powered on.
- The battery is not charged at the time of purchase.
- Fully charge the battery before use.
- It is more efficient to charge the battery with the handset powered off.
- The battery must be connected to the phone in order to charge it.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.

BATTERY LIFE (FOR NEW BATTERY)

The operating time is subject to your handset usage and configuration.

Talk Time	Stand-by Time
170 m	205 hours



NOTE

- These times are for a new battery. Talking and Standby time may decrease over time.

BEFORE USING

 
BATTERY HANDLING
INFORMATION

DOs

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep batteries in a temperature between 41°F (5°C) and 95°F (35°C).
- If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Completely drain the battery before recharging. It may take one to four days to completely drain.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly dispose of the battery according to local laws.

DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't accidentally short circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery.
- Don't leave the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire.

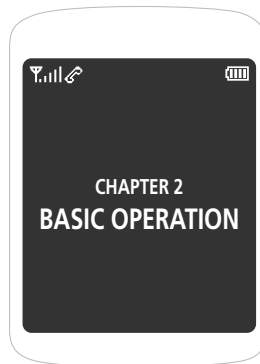

This chapter addresses and explains the basic features of your cellular telephone including :

- TURNING THE PHONE ON / OFF
- ACCESSING THE MENU
- MENU SUMMARY
- BASIC FUNCTIONS
- DURING A CALL
- MAKING AN EMERGENCY CALL

■ TURNING THE PHONE ON




- 1 Press and hold , until “**Reliance**” Logo appears and the tone sounds.



- To select a logo, refer to page 61 for more details. (**Display > Graphics**) for more detail.
- If your cellular telephone is locked when “**Password**” appears on the display, enter your 4-digit password to unlock your cellular telephone.
- The default password is the last 4 digits of your phone number.






■ TURNING THE PHONE OFF

- 1 Press and hold , until your “**Reliance**” Logo appears.



- Immediately change or recharge the battery when “Low Battery! Phone is turning off” appears on the display. Memory may possibly be damaged if the phone turns off due to the battery completely draining.
- Turn the phone off before removing or replacing the battery. If the phone is on, unsaved data may be lost.

Your phone can be customized via the menu. Each function can be accessed by scrolling with the Navigation key or by pressing the number that corresponds with the menu item.

- 1 To access the menu in the idle mode, press   [MENU].
 - To search through the menu in numerical order, press down.
- 2 Use the Navigation key to scroll through the menu.
- 3 To return to the previous page, press   .
To exit the current menu and return to the idle mode, press  .
- 4 Press the Navigation key to enter a function when its main page is displayed or press its assigned number to have direct access to the function.

**Hotkey**

In idle mode, move the Navigation Key as follows to access these functions :

- **Upward movement** : Messages
- **Downward movement** : Ring tone
- **Rightward movement** : Profiles
- **Leftward movement** : BREW

BASIC OPERATION
MENU SUMMARY

MAIN MANU	2ND DEPTH	3RD DEPTH	4TH DEPTH
1. Phone Book	1.1 Add Name		
	1.2 Find	1.2.1 By Name 1.2.2 By Number 1.2.3 By Group	
	1.3 Groups	No Group Family Relatives Friends Business Colleagues School Club VIP Others	
	1.4 Speed Dial		
2. Messages	2.1 Write		
	2.2 Inbox		
	2.3 Outbox		
	2.4 Drafts		
	2.5 Archieve		
	2.6 1234 Service		
	2.7 Templates		
	2.8 Erase All	2.8.1 Inbox	2.8.1.1 Read 2.8.1.2 All
		2.8.2 Outbox 2.8.3 Drafts 2.8.4 All	
	2.9 Settings	2.9.1 Save Sent Msg 2.9.2 Auto Erase	2.9.2.1 Inbox 2.9.2.2 Outbox
	2.9.3 Signature 2.9.4 Direct View 2.9.5 Delivery Ack 2.9.6 Priority		
2.10 Msg, Group	2.10.1 SMS Group 2.10.2 E-mail Group		
3. Call History	3.1 Missed		
	3.2 Received		
	3.3 Dialed		
	3.4 Call Duration	3.4.1 All Dialed Calls	

MENU SUMMARY
BASIC OPERATION

MAIN MANU	2ND DEPTH	3RD DEPTH	4TH DEPTH
		3.4.2 Last Dialed Call 3.4.3 All Calls	
	3.5 Data History		
4. Profiles	General Outdoor Meeting Silent Vibrate Only User1 User2		
5. Display	5.1 Menu Style 5.2 Service Area 5.3 Graphics	5.3.1 Standby 5.3.2 Power On 5.3.3 Power Off 5.3.4 Received Call 5.3.5 dialed Call	
	5.4 Language	5.4.1 English 5.4.2 Hindi	
	5.5 Banner 5.6 Contrast 5.7 Backlight		
6. Settings	6.1 Call	6.1.1 Call Forward	6.1.1.1 Immediate 6.1.1.2 When busy 6.1.1.3 No reply/not reachable 6.1.1.4 Disable all
		6.1.2 Call Wait 6.1.3 Any Key Answer 6.1.4 Auto Redial 6.1.5 Voice Privacy 6.1.6 Call Timer 6.1.7 Auto Answer 6.1.8 Tone Length 6.1.9 Connect Call Alert 6.1.10 Disconnect Call Alert 6.1.11 Edit SMS on call Reject	

MAIN MANU	2ND DEPTH	3RD DEPTH	4TH DEPTH
	6.2 Phone	6.2.1 Key Guard 6.2.2 Data Settings	6.2.2.1 Receive Mode 6.2.2.2 Data Speed
	6.3 Security	6.2.3 Version 6.3.1 Phone Lock 6.3.2 Change code 6.3.3 Restrict	6.3.3.1 Phone Book 6.3.3.2 Call History 6.3.3.3 Dialed Call 6.3.3.4 Messages
		6.3.4 Emergency Numbers 6.3.5 Set NAM 6.3.6 Erase All 6.3.7 Reset Phone	6.3.7.1 Reset 6.3.7.2 Clear Memory & Reset
	6.4 Airplane Mode		
7. Organiser	7.1 Schedule 7.2 Alarm	7.2.1 Alarm1 7.2.2 Alarm2 7.2.3 Alarm3	
	7.3 D-Day 7.4 Memo	7.4.1 Add New 7.4.2 View Memo 7.4.3 Settings	
	7.5 Reserved Call 7.6 Calculator 7.7 currency convertor 7.8 Stop Watch 7.9 World Clock		
8. R-world	8.1 R-world 8.2 Reset R-world 8.3 Game	8.3.1 Snake 8.3.2 Icarus	

■ MAKING A CALL

- 1 Enter a phone number.



To modify the phone number you have entered :

- To erase one digit at a time press ● ● .
- To erase the entire number, press and hold ● ● .

- 2 Press .



The indicator,  appears on the display.



- If you activate the "AUTO REDIAL" function, the phone will automatically redial for the number of times you have selected. (Refer to page 68).
- When you place or receive a call from stored phone numbers, both the name and phone number will be displayed.

- 3 To end a call, press .

MAKING INTERNATIONAL CALLS

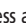- 1 Press and hold the  key for the international prefix. The '+' character can be replaced with the international access code.
- 2 Enter the country code, area code, and the phone number.
- 3 Press the  key.

■ PAUSE FEATURE

Pauses are used for automated systems (i.e., voice mail, calling cards). Insert a pause after a phone number then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.



- 1 To insert a pause, enter a phone number then press ●● [MENU]. Select a Hard Pause.
- 2 Press 📞 to dial or ●● [OK] to store.
Please refer to page 36 for more details about storing a phone number.

■ ANSWERING A CALL

- 1 To answer a call, press any key except 📞.
- 2 To end the call, press 📞.



In Auto Answer Mode a call is automatically answered after a preset number of ring tones. See page 69 for more details.



The caller ID is stored in the call history.

■ CALL WAITING FUNCTION

Notifies you of an incoming call when you are already on a call by sounding a beep tone and displaying the caller's phone number.

- 1 To answer another call while on the phone, press 📞.
This places the first call on hold.
To switch back to the first caller, press 📞 again.



Call Waiting is a system dependent feature. Please contact your service provider for details.

■ ADJUSTING VOLUME

Adjust the volume of the ringer, key beep and speaker.



- 1 Press ●● [MENU] 4 GH OK, EDIT - General or Outdoor or Meeting or User1 or User2 then select one of the following.

- Ringer Volume
- Key Volume
- Earpiece Volume
- Speaker Volume

- 2 Adjust volume then press ●● [OK] to save it.




To adjust earpiece volume during a call move the Navigation Key up or down.

■ VIBRATE ONLY

Mutes key tones and activates the vibration mode to alert you of an incoming call or message.



- 1 To turn vibrate only mode on/off, press and hold *vibration symbol.  will be displayed to indicate vibrate only mode is active.

■ KEY GUARD

The Key guard feature of your cellular telephone locks the keypad to protect against accidental key presses when the phone is turned on and no call is in progress. You can still answer or silence an incoming call.



- 1 To lock the phone, press and hold # * .
- 2 To unlock the phone, press any key then input the pass word.

- Lock feature will deactivate when the phone is powered off. Upon next power up, you will need to press # * to lock phone again.



Press 1, 2, 3 to unlock the key guard.

To display menu options during a call, press ●● [MENU].

■ MUTE (UNMUTE)

The caller cannot hear you or any sounds from your side but you can still hear them.



1 Press ●● [MENU] 1 मूट .

- To deactivate, press ●● [MENU] 1 मूट .
- The phone will automatically unmute in Emergency Call or Callback mode.

■ SCRATCHPAD

Enable you to write memo while on a call.



1 Press ●● [MENU] 2 स्क्रैचपैड .

- Press ●● [MENU] 2 स्क्रैचपैड to deactivate it.

■ MESSAGES

Enables you to send a message (SMS) during a call.
(Refer to page 89 for more details.)



1 Press ●● [MENU] 3 संदेश .

■ PHONE BOOK

Display the Phone book menu.



1 Press ●● [MENU] 4 फोन बुक .

■ CALL HISTORY

Display the call history.



1 Press ●● [MENU] 5 कॉल हिस्ट्री .

■ VOICE PRIVACY

Enhances voice privacy during a call.




- 1 Press ●● [MENU] 6 음성 프라이버시 .

The Emergency Call feature puts your phone in the Emergency Call Mode when you dial the preprogrammed emergency numbers, 100, 101, 102. It also operates in the lock mode and out of the service area.




■ EMERGENCY NUMBER IN LOCK MODE

The Emergency number call service is available even in the lock mode.

 
- 1 Enter Emergency number and press  .
- 2 The call connects.
- 3 The phone exits the Lock Mode.
 - When the call ends, the phone returns to the Lock Mode.

EMERGENCY NUMBER USING ANY AVAILABLE SYSTEM

The 100, 101, 102 call service is available even in the lock mode.

- 1 Enter Emergency number and press  .
- 2 The call connects.
- 3 The phone maintains the Emergency Mode.

- The phone returns to the Lock Mode.
- While the phone is in the emergency mode, the phone can receive an incoming call from any available system. However it can't make a call.

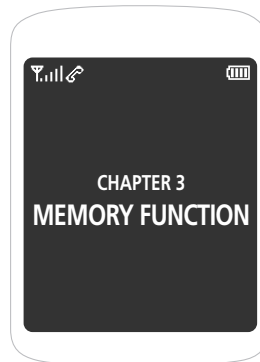

This chapter addresses memory functions including :
STORING A PHONE NUMBER
ENTERING LETTERS, NUMBERS & SYMBOLS

The phone book stores up to 500 entries.



- 1 Enter phone number and press ●● [MENU] 2 [SAVE].
- 2 Choose “New” or “Existing”.
Press ●● [OK] to select.
- 3 The Phone # will appear next to a list of icons.
The name of the icon is displayed above the list. Use the Navigation key to choose the type of # you’re adding, as indicated by the icon. Press ●● [OK] to select.
- 4 Enter a name and press ●● [OK].
Please refer to page 38 for more details on entering letters, numbers & symbols.
To change the input mode, press and hold *.
Press the navigation key down to select the group.
Press the navigation key down to select other options (secret, email).

 
- Name
 - Group : No Group, Family, Relatives, Friends, Business, Colleagues, School, Club, VIP, Others
 - Mobile
 - Home
 - Office
 - Fax
 - Email
 - Ringer
 - Msg bell
 - Secret : Lock, Unlock.
 - User category, User contents : You can edit.
 - The other fields are set to Numeric mode as a default.
- 5 To store the entry, press ●● [OK].
“New Entry added!” or “Entry edited!” will be displayed.

MEMORY FUNCTION

ENTERING LETTERS, NUMBERS & SYMBOLS

The input mode (Alpha editor) will be automatically activated when necessary to enter letters and numbers. As shown below, there are 6 available modes ; Standard input mode (Abc/Hindi), T9 input mode (T9 Abc/T9 Hindi), Numeric mode (Num), Symbol mode (Symbols).

The input mode indicator appears on the upper right of the display when letters and numbers are entered. To select the desired input mode among the 6 modes below, press *☰ [MODE], then enter letters and numbers.

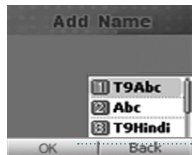

Input mode indicator

- **T9 Abc/T9 Hindi** : T9 mode
- **Abc/Hindi** : Standard mode
- **NUM** : Number mode
- **Symbols** : Symbol mode

ENTERING LETTERS, NUMBERS & SYMBOLS

MEMORY FUNCTION

The following illustrates the function assigned to each key in the Alpha Editor.

KEY	FUNCTION
*☰	Mode Press and hold to change mode. [T9 Abc][Abc][T9 Hindi][Hindi][NUM][Symbols]
0☰	Next Press to view the next matching word if the highlighted word is not the word you intended.
#☰	Space Press to accept a word and add a space.
••	Clear Press to delete a character to the left of the cursor.

MEMORY FUNCTION

ENTERING LETTERS, NUMBERS & SYMBOLS

STANDARD INPUT MODE

There are two modes in standard input mode : Abc mode, Hindi mode. Use the digit keys to enter letters, numbers and characters.

- Enter letters using the key pad as follows :

Abc mode

Key Pad	1 time	Repetitions 2 times	Repetitions 3 times	Repetitions 4 times	Repetitions 5 times
1	1	.	@	-	'
2ABC	A	B	C	2	A
3DEF	D	E	F	3	D
4GHI	G	H	I	4	G
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

ENTERING LETTERS, NUMBERS & SYMBOLS

MEMORY FUNCTION

Hindi mode

Key Pad	Character order
1 key	॰ : 1
2 key	। िी ु ॄ ॆ अ आ इ ई उ ऊ ऋ ॡ 2
3 key	ँ ॎ ो ॊँ ए ऐ ऎ ओ औ ॐ 3
4 key	क ख ग घ ङ 4
5 key	च छ ज झ ञ 5
6 key	ट ठ ड ढ ण 6
7 key	त थ द ध न 7
8 key	प फ ब भ म 8
9 key	य र ल व श ष स ह 9
0 key	0

MEMORY FUNCTION

ENTERING LETTERS, NUMBERS & SYMBOLS

To change the input mode, press *⊕⊕ [Abc].

- 2 To enter a space, press #␣ .
The cursor will automatically move to the next column.
- 3 Repeat until letters are entered.
- 4 To delete one digit, press ●● [CLEAR].
To delete the entire entry, press and hold ●● [CLEAR].
- 5 To change from lowercase to uppercase, press *⊕⊕ .

e.g.

Select Abc mode, by pressing *⊕⊕ [Abc].

When you select this mode, the Abc icon appears as a visual confirmation.

- Find the key that corresponds to the letter you want to enter.
- Press it as many times as needed for the letter to appear on the screen.
- To enter the name "John" :

Press [5 <small>JHLJ</small> अ-ब-क]	J
Press [6 <small>MNO</small> द-त-थ] 6 <small>MNO</small> द-त-थ] 6 <small>MNO</small> द-त-थ]	o
Press [4 <small>GHI</small> ग-घ-ङ] 4 <small>GHI</small> ग-घ-ङ]	h
Press [6 <small>MNO</small> द-त-थ] 6 <small>MNO</small> द-त-थ]	n

ENTERING LETTERS, NUMBERS & SYMBOLS

MEMORY FUNCTION

e.g.

Select Hindi mode, by press and hold *⊕⊕ [Mode] and select "Hindi".

When you select this mode, the appears as a visual confirmation.

- Find the key that corresponds to the letter you want to enter.
- Press it as many times as needed for the letter to appear on the screen.
- To enter the name "हिन्दी" :

Press [9 WXYZ
अ-ब-क] 9 WXYZ
अ-ब-क] 9 WXYZ
अ-ब-क] 9 WXYZ
अ-ब-क] 9 WXYZ
अ-ब-क] 9 WXYZ
अ-ब-क]

Press [2 ABC
अ-ब-क] 2 ABC
अ-ब-क]

Press [7 PQRS
द-त-थ] 7 PQRS
द-त-थ] 7 PQRS
द-त-थ] 7 PQRS
द-त-थ] 7 PQRS
द-त-थ]

Press [1 ॐ
ॐ] 1 ॐ
ॐ] 1 ॐ
ॐ] 1 ॐ
ॐ]

Press [7 PQRS
द-त-थ] 7 PQRS
द-त-थ] 7 PQRS
द-त-थ]

Press [2 ABC
अ-ब-क] 2 ABC
अ-ब-क] 2 ABC
अ-ब-क]

ह
ि
न्
दी

■ T9 INPUT MODE

There are two modes in standard input mode : Abc mode, Hindi mode.

The T9 input mode incorporates a built-in-dictionary to determine a word based on the entered characters. A word can be entered more quickly by pressing a key once per character.

- ❶ Select the T9 Abc mode by press and hold *☞☞ [Abc].
- ❷ Press a digit key once to enter the character you want and enter all the characters to input the word you want.
- ❸ To view the next matching word, press 0☞☞ .
- ❹ To accept matching word and enter a space, press #☞ .



NOTE

To enter a compound word.

- Enter the first part of the word and press ☞☞ to accept it.
- Enter the last part of the word and press #☞ to enter the word.



To enter “phone book” in the T9 input mode.

- Press and hold *☞☞ [Abc] to select the T9 input mode and *☞☞ to choose the small letter case (T9Word).
- Press 7 ^{PQRS}/₁₋₉, 4 ^{GHI}/₄, 6 ^{MNO}/₆, 6 ^{MNO}/₆, 3 ^{DEF}/₃ and you will see “phone” highlighted. Press ☞☞ to select it.
- Press 2 ^{ABC}/₂, 6 ^{MNO}/₆, 6 ^{MNO}/₆, 5 ^{JKL}/₅ and you will see “book” highlighted. Press #☞ to select the compound word and enter a space.

■ NUMERIC MODE

Allows you to enter numbers.

- ❶ Press and hold *☞☞ [Abc] until the current input mode changes to the “NUM (Numeric mode)”.
- ❷ To enter a number, press a digit key.

■ SYMBOL MODE

Allows you to enter symbols.

- ❶ Press and hold *☞☞ [Abc] until the “Symbols (Symbol mode)” appears.
- ❷ Select the symbol you want to enter with the Navigation Key.

- Use the Navigation Key to view a different line of symbols.

Press [<☞, ☞>], or Press [☞, ☞].

■ SPEED DIAL

In idle mode, calls can be placed to numbers stored in speed dial by pressing & holding the location number on the key pad. For a 2-digit location number, press the first number, then press and hold the second number. You can setting up speed dial entries from saved in your phone's memory.

 


❶ To assign a phone number to a location, select the location then press ●● [SET].

- If a phone number is already assigned to the location, press ●● [menu] and ●● [back].
- To edit it, press ●● [menu], then select "Edit".
To erase it, press ●● [menu], then select "Erase".

❷ Select the entry with the Navigation Key and press ●●.

- If the entry is set to secret, you will be asked for your password.

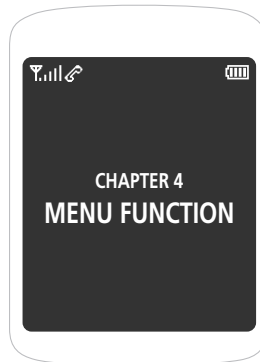

This chapter addresses accessing the menu and using its functions and features to customize your phone.

PHONE BOOK
CALL HISTORY
PROFILES
DISPLAY
SETTINGS
ORGANISER

■ ADD NAME

Adds a new entry.



PHONE

- 1 To add a new entry to the phone's memory.

- **PHONE BOOK FIELD :**

Name/Group/Mobile/Home/Office/Fax/E-Mail/Ringer/Msg bell/
Secret/User category/User content (You can edit name.)

- 2 To enter a name or number, use the Navigation Key to select the phone book field.
Please refer to page 38 for more details on entering letters, numbers & symbols.
- 3 3.1 To save the entry, press ●● [OK] .
3.2 To return to the previous page, press ●● [BACK].

Stores up to 500 entries, each of which can be assigned to a group.
Entries can be retrieved by name or group.

■ FIND

Retrieves an entry by name and calls by simply pressing .
You can review all the entries stored in your phone book list or find an entry quickly by entering a name or its character string.



BY NAME

- 1 Press ●● [MENU] 1, 2, 1 .
- 2 The list of names in your phone book is displayed alphabetically. Use Navigation key to select the name.
- 3 Enter a name or its character string or scroll through the list with the Navigation Key. Please refer to page 33 for more details on entering letters, numbers & symbols.
- 4 All matching entries will be displayed. Highlight an entry.
Press ●● [MENU] to 1. Edit, 2. Send Msg, 3. Prepend, 4 Reserved Call, 5. Erase.
 - If the entry is set to secret, you will be asked for your password.
- 5 To call the selected number, press .

BY NUMBER

- 1 Press ●● [MENU] 1 2 .
- 2 The list of phone numbers saved in your phone book will be displayed in numeric order.
- 3 Enter the phone number or scroll through the list with the Navigation Key. The name associated with that number will be displayed at the bottom of the screen.
- 4 All matching entries will be displayed. Highlight an entry.
Press ●● [MENU] to 1. Edit, 2. Send Msg, 3. Prepend, 4 Reserved Call, 5. Erase.

- If the entry is set to secret, you will be asked for your password.

- 5 To call the selected number, press .

BY GROUP

You can search for the data of saved in your phone's memory.

- 1 Press ●● [MENU] 1 2 3 .
- 2 The list of phone numbers saved in your phone book will be displayed in group order.
- 3 Select one of the following groups (No Group, Family, Relatives, Friends, Business, Colleagues, School, Club, VIP, Others) with ●● [OK] .
- 4 All matching entries will be displayed. Highlight an entry.
Press ●● [MENU] to 1. Edit, 2. Send Msg, 3. Prepend, 4 Reserved Call, 5. Erase.

- If the entry is set to secret, you will be asked for your password.

- 5 To call the selected number, press .

GROUP

Phone entries into groups. Existing groups include No Group, Family, Relatives, Friends, Business, Colleagues, School, Club, VIP, Others.



RENAME

- 1 Select an existing group name with the Navigation Key.
- 2 Press ●● [MENU] 2 [EDIT].
- 3 Input a new group name.
- 4 Press ●● [OK] to save it.

GROUP RINGER

- 1 Select an existing group name with the Navigation Key.
- 2 Press ●● [MENU] 2 [EDIT].
- 3 Select ringer, press ●● [MENU].
To select "default" or "change".
- 4 Press ●● [OK] to save it.

- "No group" cannot Edit.

SPEED DIAL

In idle mode, calls can be placed to numbers stored in speed dial by pressing & holding the location number on the key pad. For a 2-digit location number, press the first number, then press and hold the second number. You can setting up speed dial entries from saved in your phone's memory.




- 1 To assign a phone number to a location, select the location then press ●● [SET].

- If a phone number is already assigned to the location, press ●● [MENU] and ●● [BACK].
- To edit it, press ●● [MENU], then select "Edit".
To erase it, press ●● [MENU], then select "Erase".

- 2 Select the entry with the Navigation Key and press ●●.

- If the entry is set to secret, you will be asked for your password.

■ MISSED

Display information about the 30 most recently missed calls. Place a call to a missed call number by simply pressing .



- To see a list of the 30 most recent missed calls, press ●● [MENU] 3 DEF ए-ओ, 1 अ-क .
If the number is already stored in your phone book, name and number appears.
If the number is not stored, only the phone number appears.
- To view missed call details, press ●● [MENU] 1 अ-क [SELECT].



Call details include date, time, and phone number.


- Press ●● [MENU] to following items is displayed :

- **Select** : To see missed call details ●● [MENU] 1 अ-क .
- **Save** : Stores the phone number in your phone book.
- **Send Msg** : Sends a message to the phone number.
- **Prepend** : The user may add the desired number before the number.
- **Reserved call** : To view reserved call menu.
- **Erase** : To erase selected missed call.
- **Erase All** : To erase all missed calls list.



After 30 Received, Dialed or Missed calls, the oldest call will automatically be erased from the history.

■ RECEIVED

Displays information about the 30 most recently Received calls. Place a call to a received call number by simply pressing .



- To see a list of the 30 most recent Received calls, press ●● [MENU] 3 DEF ए-ओ, 2 ABC अ-क .
If the number is already stored in your phone book, name and number appears.
If the number is not stored, only the phone number appears.
- To view received call details, press ●● [MENU] 1 अ-क [SELECT].



Call details include date, time, and phone number.


- Press ●● [MENU] to following items is displayed :

- **Select** : To see missed call details ●● [MENU] 1 अ-क .
- **Save** : Stores the phone number in your phone book.
- **Send Msg** : Sends a message to the phone number.
- **Prepend** : The user may add the desired number before the number.
- **Reserved call** : To view reserved call menu.
- **Erase** : To erase selected received call.
- **Erase All** : To erase all received calls list.



After 30 Received, Dialed or Missed calls, the oldest call will automatically be erased from the history.


■ DIALLED

Displays information about the 30 most recently Dialed calls.
Place a call to a dialed call number by simply pressing .




- To see a list of the 30 most recent Dialed calls, press ●● [MENU] 3 DEF र-ओँ, 3 DEF र-ओँ.
If the number is already stored in your phone book, name and number appears.
If the number is not stored, only the phone number appears.

- To view dialed call details, press ●● [MENU] 1 DEF [SELECT].

 NOTE Call details include date, time, and phone number.

- Press ●● [MENU] to following items is displayed :

- **Select** : To see missed call details ●● [MENU] 1 DEF .
- **Save** : Stores the phone number in your phone book.
- **Send Msg** : Sends a message to the phone number.
- **Prepend** : The user may add the desired number before the number.
- **Reserved call** : To view reserved call menu.
- **Erase** : To erase selected dialed call.
- **Erase All** : To erase all dialed calls list.

 NOTE After 30 Received, Dialed or Missed calls, the oldest call will automatically be erased from the history.


■ CALL DURATION

In this menu, shows details about the call, timer, if available, the time and date it was dialed, last call, or all calls.




ALL DIALLED CALLS

Displays information of all dialed calls.

 NOTE Press navigation left or right key to change the mode "All dialed calls", "Last dialed call" or "All calls".


LAST DIALLED CALL

Displays information of last dialed call.

 NOTE Press navigation left or right key to change the mode "All dialed calls", "Last dialed call" or "All calls".

ALL CALLS

Displays information of all missed, received and dialed calls.

 NOTE Press navigation left or right key to change the mode "All dialed calls", "Last dialed call" or "All calls".

■ DATA HISTORY

Displays information of data calls.



Customizes your cellular telephone and optimizes performance through a variety of settings.

PROFILES

The phone provides you five profiles, which have a set of features to control (General/Outdoor/Meeting/Silent/Vibrate Only/User 1/User 2). You can easily choose a profile and switch to another.

The default of each profile is in the table below. You can adjust the features of each profile.



- 1 Select one of the following options by pressing the Navigation key to the Up/Dwon and then press ●● [MENU]. And then select " Default" or "Edit".

- General/Outdoor/Meeting/Silent/Vibrate Only/User 1 /User 2
- User 1/User 2
 - Ring Type :
 - Calls : Determines ring tone style.
(Silent/Vibrate/1 Beep/Ascending/Ring/Ring & Vib./Ring After Vib.)
 - Message Alerts : Determines the tone of the received message.
(Ring/Vibrate/Silent/Ring&Remind /Vibrate&Remind)
 - Ring Tone :
 - Calls : Sets the ring tone of the incoming call.
Setting of the downloaded ringtone is possible.
(Melodies/Bells/Downloads)
 - Messages : Sets the tone of the text message. (Tone 1 ~ 5)

Messages : Sets the tone of the text message. (Tone 1 ~ 5)
Ringer Volume : Sets the volume of the ringtone.

(Mute/Level 1~5)

Key Volume : Sets the volume of the keytone. (Off, Level 1~5)

Earpiece Volume : Adjusts the volume of earpiece. (Level 1~5)
- during a call

Speaker Volume : Adjusts the speaker volume of the speaker mode. (Level 1~5) - during a call

Speaker Mode : Sets the speaker mode. (On/Off)



- User1/User2, General, Outdoor, and Meeting mode can be edited.
- Press and hold the star key to change to the vibrate only mode.

Allows you to customize display.

MENU STYLE

Sounds an alert when the signal begins to fade.



- 1 Select "Graphic" or "List" with the Navigation Key then press ●● [OK] to save it.

SERVICE AREA



- 1 This Sub-menu selection will pop-up the service area name on the display.

GRAPHICS

To select an LCD display :



STANDBY

- 1 Press ●● [MENU] 5 ^{JKL} च-ज 3 ^{DEF} ए-ऑ, 1 ^{.,:; \'}.
- 2 Select Default to choose a standby display, or

Downloads or Saved to Phone to choose a display you have downloaded to your phone.

- 3 To save it, press ●● [OK] .

POWER ON

- 1 Press ●● [MENU] 5 ^{JKL} च-ज 3 ^{DEF} ए-ऑ, 2 ^{ABC} अं-अं .
- 2 Select Default to choose a pre-installed display, display, or Downloads or Saved to Phone to choose a display you have downloaded to your phone.

- 3 To save it, press ●● [OK] .

POWER OFF

- 1 Press ●● [MENU] 5 ^{JKL} च-ज 3 ^{DEF} ए-ऑ, 3 ^{DEF} ए-ऑ .
- 2 Select Default to choose a pre-installed display, display, or Downloads or Saved to Phone to choose a display you have downloaded to your phone.
- 3 To save it, press ●● [OK] .

RECEIVED CALL

- 1 Press ●● [MENU] 5 ^{JKL} च-ज 3 ^{DEF} ए-ऑ, 4 ^{GHI} इ-इ .
- 2 Select Default to choose a pre-installed display, or Downloads or Saved to Phone to choose a display you have downloaded to your phone.

- 3 To save it, press ●● [OK] .

DIALED CALL

- 1 Press ●● [MENU] 5 JKL च-ज, 3 DEF ए-ऑ, 5 JKL च-ज .
- 2 Select Default to choose a pre-installed display, display, or Downloads or Saved to Phone to choose a display you have downloaded to your phone.
- 3 To save it, press ●● [OK] .

LANGUAGE

Selects the language in which letters are displayed on screen.



- ENGLISH
- HINDI

BANNER

To input a personal greeting:



- 1 Select "Message", "Font Color" or "Entry Message" with the Navigation Key and press ●● [OK] .

- **Message** : On/Off.
- **Font Color** : Black/Blue/Green/Magenta/Maroon/White
- **Entry Message** : Enter message.

CONTRAST

To adjust the display contrast:



- 1 Use \leftarrow and \rightarrow to select a contrast level.

- **CONTRAST LEVEL** : 1-5

BACKLIGHT

Backlights the display for easy viewing in dark places.



- 1 Select "Backlight" then select the duration with the Navigation Key and press ●● [OK] .

- 7 Secs / 15 Secs / 30 Secs / 60 Secs / Always on