

## WELCOME

Thank you for choosing the CDM180 camera phone.

This new mobile handset features dual LCD screen displays with a unique landscape-oriented main screen. There is a 262K color 1.8" TFT display on the inside, and a smaller 65K 1.0" sub-display on the outside. The landscape view on the main screen will provide users with a customary format in which to view text messaging and menu options, but also allows for a better gaming and browsing experience. The outer display allows users to quickly view incoming calls, message alerts and date/time functions. Utilizing the CDMA2000 1x networks with a QUALCOMM® MSM6050 chipset that is GPSOne™ capable, this phone allows for high-speed communication services such as wireless Internet access, messaging and image transmissions. The phone's built-in CCD 330K pixel camera also includes auto flash.

Equipped with today's latest features, this phone is Mobile Web 2.0 enabled and features Get It Now<sup>SM</sup>, which allows users to download ringtones, wallpapers, screensavers, games and more to their phone. In addition, it has CMX 32 polyphonic ringers and supports two-way short, enhanced and multimedia messaging services. This phone also contains user-friendly features such as a built-in speakerphone and voice activated dialing for hands-free operation, T9 predictive text input for easy text entries, is TTY compatible and supports English and Spanish languages.

### IMPORTANT INFORMATION

This CDM180 user guide contains very important information about how to handle and use the product.

Please read this manual thoroughly, pay attention to the warranty on the back page and be alert to the exclusions and limitations of your warranty, which are related with the unauthorized use of components.

## TABLE OF CONTENTS

<b>CHAPTER 1. BEFORE USING YOUR PHONE</b> .....	<b>5</b>
INSIDE THE PACKAGE .....	6
HANDSET DESCRIPTION .....	7
SYSTEM STATUS BAR INDICATOR DISPLAY AREA .....	9
BATTERY USAGE .....	11
BATTERY INSTALLATION .....	11
BATTERY REMOVAL .....	11
BATTERY CHARGING .....	12
POWER CONNECTION .....	12
PCS AND 1X BATTERY TIMES .....	13
BATTERY LIFE (FOR NEW BATTERY) .....	13
BATTERY HANDLING INFORMATION .....	14
DOs.....	14
DON'Ts.....	14
<b>CHAPTER 2. BASIC OPERATION</b> .....	<b>15</b>
TURNING THE PHONE ON / OFF .....	16
TURNING THE PHONE ON .....	16
TURNING THE PHONE OFF .....	16
ACCESSING THE MENU .....	17
MENU SUMMARY .....	18
BASIC FUNCTIONS .....	21
MAKING A CALL .....	21
ANSWERING CALLS .....	22
SPEAKERPHONE .....	22
HARD/TIMED PAUSE FEATURE .....	23
ANSWERING A CALL .....	23
3-WAY CALLING .....	24
CALLER ID FUNCTION .....	24
CALL WAITING FUNCTION .....	25
ADJUSTING VOLUME .....	25
ENTER LOCK MODE .....	25
DURING A CALL .....	26
MUTE (UNMUTE) .....	26
SEND TEXT MSG .....	26
SEND PHOTO MSG .....	26
CONTACTS .....	26
RECENT CALLS .....	26
SEND DTMF .....	27
VOICE PRIVACY .....	27
LOCATION .....	27
MAKING AN EMERGENCY CALL .....	28
911 IN LOCK MODE .....	28
911 USING ANY AVAILABLE SYSTEM .....	28
<b>CHAPTER 3. MEMORY FUNCTION</b> .....	<b>29</b>
STORING A PHONE NUMBER .....	30
ENTERING LETTERS, NUMBERS & SYMBOLS .....	31
STANDARD INPUT MODE .....	32
T9 INPUT MODE .....	33
NUMERIC MODE .....	34
SYMBOL MODE .....	34
<b>CHAPTER 4. MENU FUNCTION</b> .....	<b>35</b>
CONTACTS .....	36
FIND .....	36
FIND BY NAME .....	36
FIND BY NUMBER .....	37
ADD NEW .....	38
GROUP .....	38
ADD NEW GROUP .....	38
CHANGE GROUP NAME .....	39
ERASE GROUP .....	39
SPEED DIAL .....	40
MSG. GROUP .....	41
ADD NEW MSG. GROUP .....	41
CHANGE MSG. GROUP NAME .....	41

## TABLE OF CONTENTS

SEND TEXT MSG. GROUP .....	42
SEND PHOTO MSG. GROUP .....	43
ERASE MSG. GROUP .....	43
MY PHONE # .....	44
RECENT CALLS .....	45
ALL CALLS .....	45
MISSED CALLS .....	46
RECEIVED CALLS .....	47
DIALED CALLS .....	48
CALL TIMERS .....	49
LAST CALL .....	49
ALL CALLS .....	49
HOME CALLS .....	49
ROAM CALLS .....	50
CUMULATIVE CALLS .....	50
DATA CALLS .....	51
RECEIVED .....	51
TRANSMITTED .....	51
TOTAL .....	51
AXCESS .....	52
START AXCESS .....	52
DOWNLOADING APPLICATIONS .....	52
DOWNLOADING MELODIES/WALLPAPERS .....	53
APPLYING MELODIES/WALLPAPERS .....	53
CHECKING DATA FOLDER MEMORY .....	53
ERASING AN APPLICATION .....	54
MEDIA GALLERY .....	55
IMAGES .....	55
GRAPHICS .....	55
ANIMATIONS .....	55
PHOTO .....	56
TONES .....	56
SHUFFLE .....	57
WALLPAPER .....	57
RING TONE .....	57
SETTINGS .....	58
SOUNDS .....	58
RINGER TYPE .....	58
VOLUME .....	59
ALERT .....	60
ROAM RINGER .....	62
TONE LENGTH .....	62
ETIQUETTE .....	62
DISPLAY .....	63
GRAPHICS .....	63
SUB SCREEN .....	65
GREETING MESSAGE .....	65
CONTRAST .....	66
BACKLIGHT .....	66
DATA SERVICE .....	67
CONNECTION .....	67
WAP/BREW .....	67
AIRTIME WARNING MESSAGE .....	67
SECURITY .....	68
PHONE LOCK .....	68
RESTRICT .....	68
CHANGE CODE .....	71
SPECIAL #'S .....	71
ERASE ALL .....	71
RESET PHONE .....	72
1X PASSWORD .....	72
OTHERS .....	73
ANSWER OPTIONS .....	73
AUTO RETRY .....	74
LANGUAGE .....	75
VOICE PRIVACY .....	75
TTY MODE .....	76

## TABLE OF CONTENTS

LOCATION .....	76
SYSTEM .....	77
SET MODE .....	77
NAM SETTING .....	77
PRL ID .....	78
PHONE INFO .....	79
SMV VERSION .....	79
HMV VERSION .....	79
AXCESS VERSION .....	79
AIRPLANE MODE .....	80
UTILITIES .....	81
SCHEDULE .....	81
ADD NEW PLAN .....	81
VIEW PLAN .....	82
ALARM .....	83
MEMO PAD .....	85
ADD MEMO .....	85
VIEW MEMO .....	85
SETTINGS .....	85
CALCULATOR .....	86
WORLD CLOCK .....	87
STOP WATCH .....	88
CAMERA .....	89
TAKE A PHOTO .....	89
TAKING A PICTURE THROUGH THE MENU .....	89
TAKING A PICTURE IN IDLE MODE .....	89
CAMERA MODE OPTIONS .....	90
PHOTO GALLERY .....	91
PHOTO MESSAGE .....	92
HELP .....	93

CHAPTER 5. VOICE SERVICE .....	95
VOICE TOOLS MENU .....	96
VOICE MEMO .....	96
VOICE DIAL .....	97
TRAIN WORDS .....	98
YES .....	98
NO .....	98
WAKE-UP .....	99
UNDO TRAIN ALL .....	99
VOICE SETTING .....	100
SET ACTIVE .....	100
HFK MODE .....	100
VOICE RECOGNITION MODE .....	101
NAME .....	101

CHAPTER 6. VOICE MAIL, TEXT AND PHOTO MESSAGE .....	103
WHEN A NEW MESSAGE ARRIVES .....	104
VOICE MAIL .....	104
NEW TEXT MSG .....	105
NEW PHOTO MSG .....	106
INBOX .....	108
PHOTO INFO .....	108
PLAY SLIDE SHOW .....	108
REPLY .....	108
REPLY WITH COPY .....	109
FORWARD .....	109
SAVE MEDIA .....	109
SAVE TO CONTACT .....	109
SAVE TO SAVED .....	110
SAVE TO QUICK TEXT .....	110
BLOCK SENDER .....	110
LOCK & UNLOCK .....	110
OUTBOX .....	111
CHECKING SENT TEXT MESSAGES .....	111
PHOTO INFO .....	111
RESEND .....	111

## TABLE OF CONTENT

EDIT MESSAGE .....	112
SAVE TO CONTACT .....	112
SAVE TO SAVED .....	112
LOCK & UNLOCK .....	112
STATE .....	112
<b>WEB ALERTS .....</b>	<b>113</b>
SAVED .....	114
QUICK TEXT .....	115
ERASE ALL .....	116
ERASE MESSAGES .....	116
SETTINGS .....	117
AUTO SAVE .....	117
SAVE SENT MSG .....	117
PHOTO RECEIVE .....	117
<b>AUTO ERASE .....</b>	<b>118</b>
INBOX .....	118
OUTBOX .....	118
DEFAULT CALLBACK .....	119
EDIT VOICE CALLBACK .....	119
REMINDE .....	119
EDIT SIGNATURE .....	120
DIRECT VIEW .....	120
ENTRY MODE .....	121
BLOCK OR UNBLOCK .....	121
<b>CHAPTER 7. WEB BROWSING .....</b>	<b>123</b>
START INTERNET BROWSER .....	124
ACCESS THE INTERNET .....	124
BROWSER MENU .....	124
HOME .....	124
BACK .....	124
FORWARD .....	124
REFRESH .....	125
HISTORY .....	125
ADDRESS .....	125
CLEAR MEMORY .....	125
SETTINGS .....	125
ADVANCED .....	126
EXIT .....	126
<b>CHAPTER 8. SAFETY AND WARRANTY .....</b>	<b>127</b>
SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES .....	128
DRIVING SAFETY .....	129
ELECTRONIC DEVICES .....	130
OTHER SAFETY GUIDELINES .....	131
PRECAUTIONS .....	132
SAFETY INFORMATION FOR FCC RF EXPOSURE .....	133
CAUTIONS .....	133
SAR INFORMATION .....	134
FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES .....	136
FDA CONSUMER UPDATE .....	138
PROTECT YOUR WARRANTY .....	142
12 MONTH LIMITED WARRANTY .....	143

# Chapter 1

## BEFORE USING YOUR PHONE

This chapter provides important information about using the CDM-8910 including:

- INSIDE THE PACKAGE
- HANDSET DESCRIPTION
- BATTERY USAGE
- BATTERY HANDLING INFORMATION

IC  
i

 
## INSIDE THE PACKAGE

IC  
1

This package should include all items pictured below. If any are missing or different, immediately contact the retailer where you purchased the phone.



Handset

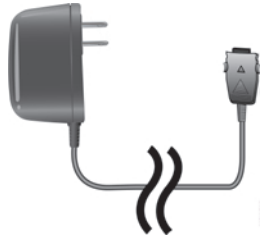


AC Travel Charger



User Manual



 Standard Battery




Handstrap


## HANDSET DESCRIPTION

 The CDM180 weighs 3.5oz. The dimensions are 2.99" x 2.14" x .95".

IC  
1

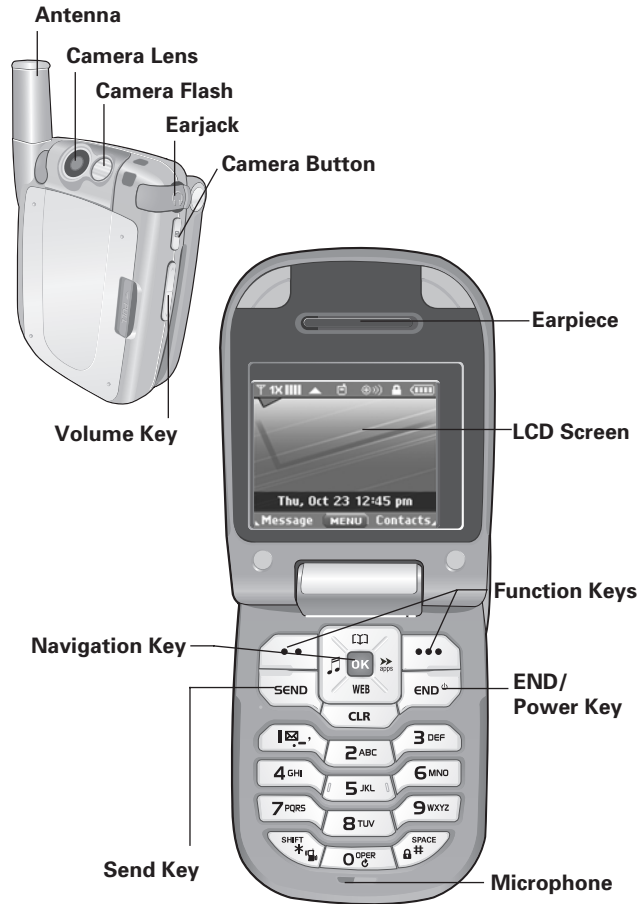

## HANDSET DESCRIPTION

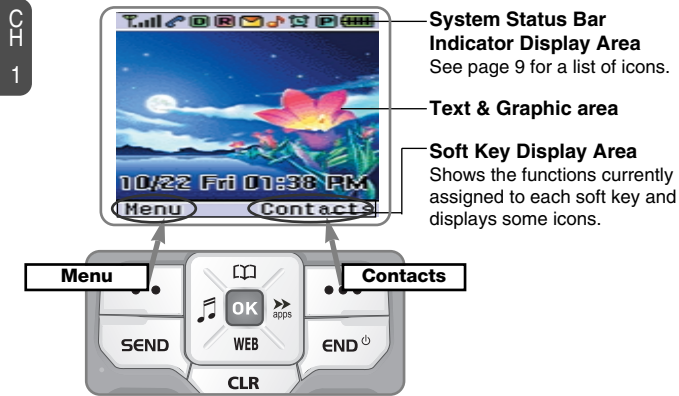 

**System Status Bar Indicator Display Area**  
See page 9 for a list of icons.

**Text & Graphic area**

**Soft Key Display Area**  
Shows the functions currently assigned to each soft key and displays some icons.

**Contacts**

**Mobile Web** **Access Apps**

**Messaging**

**In Idle Mode**  
- Press up to access Contacts, down to access Messaging, right to access Access Apps and left to access Mobile Web.  
**Inside the menu**  
- Within a menu, use to scroll through menu options or to select a function displayed on the screen.

- Press to make or receive a call.
- Press to turn the phone on/off, to terminate a call or to return to the initial page.
- (Left Soft Key) Press to access the message menu or function displayed on bottom line.
- (Right Soft Key) Press to access contacts menu or function displayed on bottom line.
- Press to clear a digit from the display or to return to the previous page. Press and hold to enable speaker phone mode.
- A long press shall display a plus "+". A "+" is reserved for international dialing code. In entry mode, toggle between text mode.
- Press and hold to enter lock mode.

## HANDSET DESCRIPTION

### SYSTEM STATUS BAR INDICATOR DISPLAY AREA

- Signal Strength** - Current signal strength: the more lines, the stronger the signal (1X Mode/Digital Mode).
- Roaming**  
Phone is out of home area.
- Voice Privacy**  
Indicates "Voice Privacy" mode.
- Dormant**  
Indicates your phone is in a dormant state during a data call. Your phone goes to Dormant mode when you have not had any activity on a page for some time - your connection is still active and you can make and receive calls.
- No Service**  
Indicates the phone cannot receive a signal from the system.
- Voice**
- Data Active**
- TTY**  
Indicates your phone is active in TTY mode.
- GPS Icon**  
Indicates the Location Service of your phone is disabled/enabled.
- Locked**  
Indicates your phone is locked.
- Battery**  
Battery charging level – the more blocks, the stronger the charge.
- Alarm Only**  
Phone will alert you with an alarm tone when call is received.

## HANDSET DESCRIPTION

IC  
1



### Alarm

Appears when either a calendar or an alarm is set.



### Vibrate Only

Phone will vibrate when call is received.



### All Off

Indicates the ringer volume is set to off.



### Missed Calls



### Voicemail

indicates you have voicemail messages.



### New Messages

New TXT or voice message.



### Calendar Appointment

Indicates Event Alarm is active.



### Data Only

Receives an async. call as a voice call.



### Fax Only

Receives a fax call as a voice call.



### Speakerphone

Phone is in speakerphone mode.



### Auto Answer

 
Phone is in answering machine mode.

## BATTERY USAGE

### BATTERY INSTALLATION




1 Place the battery on the back of the handset and slide into place. 2 Push the battery down until it locks into place.

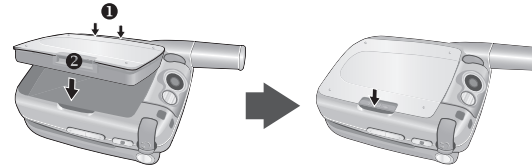

### BATTERY REMOVAL



 1 Pull down the release latch, lift up the battery and 2 remove the battery from the handset.

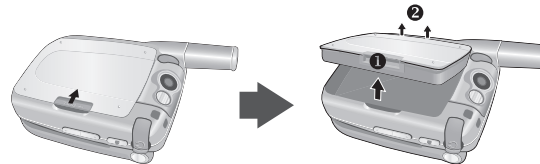

If the battery is not correctly placed in the compartment, the handset will not turn on and/or the battery may detach during use.


## BATTERY USAGE

 IC  
1

### BATTERY CHARGING

#### POWER CONNECTION

- 1 Plug the AC Charger into a standard outlet.
- 2 Plug the other end of the AC Charger into the bottom of your phone. The battery must be installed onto the phone.

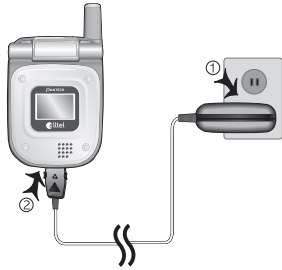

- When you charge the battery with the phone power off, you will see a charging status screen. You cannot operate the phone until it is powered on.
- The battery is not charged at the time of purchase.
- Fully charge the battery before use.
- It is more efficient to charge the battery with the handset powered off.
- The battery must be connected to the phone in order to charge it.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.

12

## BATTERY USAGE

### PCS AND 1X BATTERY TIMES

The operating time is subject to your handset usage and configuration.

Battery Capacity	DCS	PCS
STD 1000 mAh	Up to 207 minutes	Up to 160 minutes
EXT 1700 mAh	Up to 282 minutes	Up to 270 minutes

### BATTERY LIFE (FOR NEW BATTERY)

The operating time is subject to your handset usage and configuration.

Battery Capacity	DCS	PCS
STD 1000 mAh	Up to 190 Hours	Up to 172 Hours
EXT 1700 mAh	Up to 326 Hours	Up to 293 Hours



- These times are for a new battery. Usage and Standby time may decrease over time.
- Talk time for the standard battery: about 207 minutes. Standby time for the standard battery: about 190 hours.

13

## BATTERY HANDLING INFORMATION

IC  
1

### DOs

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep batteries in a temperature between 41°F (5°C ) and 95°F (35°C).
- If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Completely drain the battery before recharging. It may take one to four days to completely drain.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly dispose of the battery according to local laws.

### DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't accidentally short circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery.
- Don't leave the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire.

14

## Chapter 2 BASIC OPERATION

CH  
2

This chapter addresses and explains the basic features of your phone including:


- TURNING THE PHONE ON / OFF
- ACCESSING THE MENU
- MENU SUMMARY
- BASIC FUNCTIONS
- DURING A CALL
- MAKING AN EMERGENCY CALL

15



## TURNING THE PHONE ON / OFF


### TURNING THE PHONE ON

- 1 Press , then your "ALLTEL" logo appears and the tone sounds.



- To select a logo, refer to page 63 for more details. (Settings>Display>Graphics>Power On).
- If your phone is locked when "Password" appears on the display enter your 4-digit password to unlock your phone.
- The default password is the last 4 digits of your phone number.

### TURNING THE PHONE OFF

 
- 1 Press and hold , until your "ALLTEL" logo appears.







- Immediately change or recharge the battery when "Low Battery Warning Power Off" appears on the display. Memory may possibly be damaged if the phone turns off due to the battery completely draining.
- Turn the phone off before removing or replacing the battery. If the phone is on, unsaved data may be lost.
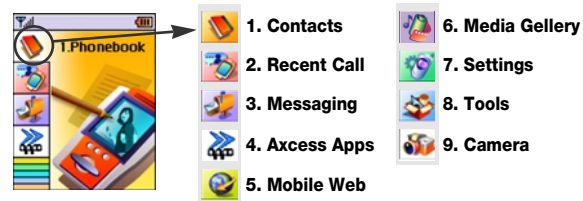
## ACCESSING THE MENU

Your phone can be customized via the menu. Each function can be accessed by scrolling with the Navigation Key or by pressing the number that corresponds with the menu item.



- 1 To access the menu in the idle mode, press  [MENU].
- 2 Press the Navigation Key up or down to scroll through the menu options.
- 3 To return to the previous page, press . To exit the current menu and return to the idle mode, press .
- 4 Press  to enter a function when its main page is displayed or press its assigned number.



#### Hotkey

In idle mode, move the Navigation Key as follows to access these functions:

- Upward movement : Contacts
- Downward movement : Messaging
- Rightward movement : Access Apps
- Leftward movement : Mobile Web

## MENU SUMMARY

CH  
2

1. <b>Contacts</b>	<ol style="list-style-type: none"> <li>Find</li> <li>Add New</li> <li>Group</li> <li>Speed Dial</li> <li>Msg. Group</li> <li>My Phone #</li> </ol>	<ol style="list-style-type: none"> <li>By Name</li> <li>By Number</li> </ol>	
2. <b>Recent Call</b>	<ol style="list-style-type: none"> <li>All Calls</li> <li>Missed Calls</li> <li>Received Calls</li> <li>Dialed Calls</li> <li>Call Timers</li> </ol>	<ol style="list-style-type: none"> <li>Last Call</li> <li>All Calls</li> <li>Home Calls</li> <li>Roam Calls</li> <li>Cumulative Calls</li> </ol>	
3. <b>Messaging</b>	<ol style="list-style-type: none"> <li>New Text Msg</li> <li>New Photo Msg</li> <li>Voice Mail</li> <li>Inbox</li> <li>Outbox</li> <li>Web Alerts</li> <li>Saved</li> <li>Quick Text</li> <li>Erase All</li> </ol>	<ol style="list-style-type: none"> <li>Received</li> <li>Transmitted</li> <li>Total</li> </ol>	<ol style="list-style-type: none"> <li>Inbox</li> <li>Old Inbox</li> <li>Entire Inbox</li> </ol>
4. <b>Access Apps</b>	<ol style="list-style-type: none"> <li>Access Apps</li> </ol>	<ol style="list-style-type: none"> <li>Inbox</li> <li>Outbox</li> <li>Saved</li> <li>Auto Save</li> </ol>	<ol style="list-style-type: none"> <li>Save sent MSG</li> <li>Photo receive</li> <li>Inbox</li> <li>Outbox</li> </ol>
5. <b>Mobile Web</b>	<ol style="list-style-type: none"> <li>Connect web</li> </ol>	<ol style="list-style-type: none"> <li>Auto Erase</li> <li>Default Callback</li> <li>Edit Voice C.B</li> <li>Remind</li> <li>Edit Signature</li> <li>Direct View</li> <li>Entry Mode</li> <li>Block or Unblock</li> </ol>	<ol style="list-style-type: none"> <li>Block</li> <li>Unblock</li> <li>View List of Blocked Address</li> </ol>
6. <b>Data Calls</b>		<ol style="list-style-type: none"> <li>Received</li> <li>Transmitted</li> <li>Total</li> </ol>	
7. <b>Settings</b>		<ol style="list-style-type: none"> <li>Inbox</li> <li>Outbox</li> <li>Saved</li> <li>Auto Save</li> <li>Auto Erase</li> <li>Default Callback</li> <li>Edit Voice C.B</li> <li>Remind</li> <li>Edit Signature</li> <li>Direct View</li> <li>Entry Mode</li> <li>Block or Unblock</li> </ol>	<ol style="list-style-type: none"> <li>Old Inbox</li> <li>Entire Inbox</li> <li>Save sent MSG</li> <li>Photo receive</li> <li>Inbox</li> <li>Outbox</li> <li>Block</li> <li>Unblock</li> <li>View List of Blocked Address</li> </ol>

## MENU SUMMARY

CH  
2

6. <b>Media Gallery</b>	<ol style="list-style-type: none"> <li>Images</li> <li>Photos</li> <li>Tones</li> <li>Shuffle</li> </ol>	<ol style="list-style-type: none"> <li>Graphics</li> <li>Animations</li> </ol>	<ol style="list-style-type: none"> <li>Wallpaper</li> <li>Ring Tones</li> </ol>
7. <b>Settings</b>	<ol style="list-style-type: none"> <li>Sounds</li> <li>Display</li> <li>Data Service</li> <li>Security</li> <li>Others</li> </ol>	<ol style="list-style-type: none"> <li>Ringer Type</li> <li>Volume</li> <li>Alert</li> <li>Roam Ringer</li> <li>Tone Length</li> <li>Etiquette</li> <li>Sub Screen</li> <li>Greeting Message</li> <li>Contrast</li> <li>Backlight</li> <li>Connection</li> <li>WAP/BREW</li> <li>Airtime Warning Message</li> <li>Phone Lock</li> <li>Restrict</li> <li>Change Code</li> <li>Special #s</li> <li>Erase All</li> <li>Reset Phone</li> <li>1X Password</li> <li>Answer Options</li> <li>Auto Retry</li> <li>Language</li> </ol>	<ol style="list-style-type: none"> <li>Ringer</li> <li>Messages</li> <li>Voice Mail</li> <li>Ringer</li> <li>Key Tone</li> <li>Voice Call</li> <li>Speaker Phone</li> <li>Minute</li> <li>Roam</li> <li>Connect</li> <li>Fade</li> <li>On/Off Tones</li> <li>Wallpaper</li> <li>Power On</li> <li>Power Off</li> <li>Received</li> <li>Dialed</li> <li>Screen Saver</li> <li>Dialed</li> <li>Recent Calls</li> <li>Camera</li> <li>Data Call</li> <li>900#s</li> <li>Long Distance</li> <li>911</li> <li>*911</li> <li>#911</li> <li>PAP User ID</li> <li>PAP Password</li> <li>Call Answer</li> <li>Active Flip</li> <li>Auto Answer</li> </ol>

## MENU SUMMARY

CH  
2

8. Tools	6. System	4. Voice Privacy 5. TTY Mode 6. Location 1. Set Mode 2. Nam Setting	1. Auto NAM 2. Change NAM
	7. Phone Info	3. PRL ID 1. S/W Version 2. H/W Version 3. Access Version	
9. Camera	8. Airplane Mode		
	1. Voice Service	1. Voice Memo 2. Voice Dial 3. Train Words 4. Voice Setting	1. Record 2. Playing 3. Play Speaker 4. Erase All 1. Record 2. Playing 3. Play Speaker 4. Erase All 1. Yes 2. No 3. Wake-Up 4. Undo Train All Set Active HFK Mode
	2. Schedule	1. Add New Plan 2. View Plan	
	3. Alarm	1. Alarm 1 2. Alarm 2 3. Alarm 3	
	4. Memo Pad	1. Add Memo 2. View Memo 3. Settings	
	5. Calculator 6. World Clock 7. Stop Watch		
	1. Take a Photo 2. Photo Gallery 3. Photo Message		
	4. Help	1. New Photo 2. Saved Photo	

## BASIC FUNCTIONS

### MAKING A CALL

1 Enter a phone number.



**To modify the phone number you have entered :**

- To erase one digit at a time press .
- To erase the entire number, press and hold .

**To find the phone number with your contact list :**

- Enter a part of the phone number, then press (FIND), to display contacts entry list.

**Phone number display in contact list**

If name field of the contact list entry is empty, the highest priority phone number will be displayed. When name and phone number fields are empty, e-mail address will be displayed. Reference "Contact display order".

All matching entries will be displayed. To call the selected number, press .

**To send a txt or pix message with phone number :**

- Enter a part of the phone number, then press [MENU], select "Send Text Msg or Send Photo Msg.". Please refer to page 105 or page 106 for more details on "Send Text Msg or Send Photo Msg".

CH  
2

2 Press .  
The indicator, , appears on the display.




- If "CALL FAILED" appears on the display or the line is busy, press or .
- If you activate the "Auto Retry" function, the phone will automatically retry for the number of times you have selected. (refer to page 74).
- When you place or receive a call from stored phone numbers, both the name or phone number will be displayed.
- There is another way to make a call through the VR mode, which is called "VAD (Voice Activated Dialing)". Please refer to page 97 (Voice Service) for more details.
- If "Enter Lock Code" appears on the display enter your 4 digit password to unlock your phone.


3 To end a call, press .


## BASIC FUNCTIONS

### ANSWERING CALLS

- 1 When your phone rings or vibrates, press  to answer the incoming call.  
(Depending on your phone's settings, you may also answer incoming calls by flip open or by pressing any digit key.)




To ignore incoming calls, press  [IGNORE].

- 2 To end a call, press  .

### SPEAKER PHONE


The speaker phone feature lets you hear audio through the speaker and talk without holding the phone.

- 1 To activate the speaker phone in idle, answering or calling modes, press and hold  .
- 2 The phone returns to normal (Speaker Phone Off) after ending a call or when the phone is turned off and back on.



## BASIC FUNCTIONS

### HARD/TIMED PAUSE FEATURE







Pauses are used for automated systems (i.e., voice mail, calling cards). Insert a pause after a phone number then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.






- 1 To insert a hard/timed pause, enter a phone number then press  [MENU]. Select either a Hard Pause ("P") or a Timed Pause ("T").


- **Hard Pause** : Inserting a "Hard Pause" means that the caller has to press the "Send" key to send the DTMF tone before the dialing continues.
- **Timed Pause** : Inserting a "Timed Pause" shall suspend the dialing for 2 seconds when it reaches the "Timed Pause".

- 2 Press  to dial or  to save.  
Please refer to page 30 for more details about storing a phone number.

### ANSWERING A CALL

- 1 To answer a call, press any key except  ,  ,  ,  ,  or  .

- Press  [MENU]    .  
Select among "Any Key", "Send Key", "Flip Open", and "Auto Answer" answering a call options. If "Send Key" is selected, the phone can only be answered by pressing  .  
See page 73 for more information.

- 2 To end the call, press  .






In Auto Answer Mode, a call is automatically answered after a preset number of ring tones. See page 74 for more details.

## BASIC FUNCTIONS

### 3-WAY CALLING

With 3-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be applied for each of the two calls.

- 1 Enter a number you wish to call then press .
- 2 Once you have established the connection, enter the second number you wish to call then press .
- 3 When you're connected to the second party, press  again to begin your 3-Way call.



*If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.*



### CALLER ID FUNCTION

Identifies caller by displaying their phone number. If the caller's name and number are already stored in your phone book, name or number will appear. The caller ID is stored in the call history.

## BASIC FUNCTIONS

### CALL WAITING FUNCTION

Notifies you of an incoming call when you are already on a call by sounding a beep tone and displaying the caller's phone number.

- 1 To answer another call while on the phone, press . This places the first call on hold. To switch back to the first caller, press  again.




*Call Waiting is a system dependent feature. Please contact your service provider for details.*

### ADJUSTING VOLUME

Adjusts the volume of the ringer, key beep and speaker.

- 1 Press  [MENU]    then select one of the following.





- **Ringer** : Controls the ringer volume.
- **Key Tone** : Controls the keypad tone.
- **Voice Call** : Controls the earpiece volume.
- **Speaker Phone** : Controls the speaker volume.

- 2 Adjust volume then press  to save it.



- *When you are on a voice call, the side up/down volume key shall raise/lower the earpiece or headset volume respectively.*
- *To adjust master volume, press the side up/down key when phone is in idle mode.*

### ENTER LOCK MODE

- 1 To lock the phone, press and hold .
- 2 To unlock the phone, press  or  [UNLOCK], then input your password, then press .

## DURING A CALL

To display menu options during a call, press [OPTIONS].

### MUTE (UNMUTE)

With mute activated, the caller cannot hear you or any sounds from your side but you can still hear them.

1 Press [MUTE].

- To deactivate, press [UNMUTE].
- The phone will automatically un-mute in Emergency Call or Callback mode.

### SEND TEXT MSG

Enables you to send a Text message (SMS) during a call.

1 Press [MENU] .

### SEND PHOTO MSG

Enables you to send a Photo message (MMS) during a call.

1 Press [MENU] .

### CONTACTS

To select the phone number in your internal Contact List.

1 Press [MENU] .

### RECENT CALLS

To select the phone number in your recent calls List.

1 Press [MENU] .

## DURING A CALL

### SEND DTMF

Automatically transmits your phone number to a pager during a call. (Dependent on pager service)

1 Press [MENU] .

### VOICE PRIVACY

Increases security during a call.

1 Press [MENU] .

### LOCATION

Enables the network to locate your current location through Global Positioning System (GPS). (Refer to page 76 for more details.)


1 Press [MENU] .

## MAKING AN EMERGENCY CALL


The 911 feature puts the phone in the Emergency Call Mode when you dial the preprogrammed emergency number, 911. It also operates in the lock mode and out of the service area.

### 911 IN LOCK MODE

The 911 call service is available even in the lock mode.

- 1 Enter "911" then press .
- 2 The call connects.
- 3 The phone maintains the emergency mode for 5 minutes.
  - When the call ends, the phone returns to the Lock Mode.

### 911 USING ANY AVAILABLE SYSTEM

- 1 Enter "911" then press .
- 2 The call connects.
- 3 The phone maintains the Emergency Mode for 5 minutes.
  - The phone returns to the Lock Mode.
  - While the phone is in the emergency mode for 5 minutes, the phone can receive an incoming call from any available system. However, it can't make a call.



The 911 call is not recorded in the recent call list.

## Chapter 3 MEMORY FUNCTION

This chapter addresses memory functions including:

- STORING A PHONE NUMBER
- ENTERING LETTERS, NUMBERS & SYMBOLS

## STORING A PHONE NUMBER

The phone book stores up to 500 entries.

- 1 Enter phone number, press **OK** [SAVE] then choose "New Contact" or "Existing Contact". Press **OK** to select.
- 2 If "New Contact" is selected, the phone number will appear above a list. Press the Navigation Key left or right to choose the type of number you're adding, as indicated by the icon. Press **OK** to select. If "Existing Contact" is selected, your contact list is displayed. Choose the entry to add the phone number to, then press **OK**. You will then see the phone number listed with the entry. Press **OK** to select.

- 3 Enter a name, press **OK**. Please refer to page 31 for more details on entering letters, numbers & symbols. To change the input mode, press **[...]** [Abc]. Press the Navigation Key down to select other options (Mobile1.2, E-mail1.2, etc...). If entered phone number, press **[...]** [MENU] to select one of the following options:

 
- Send Text Msg
- Send Photo Msg
- Prefix
- Hard Pause
- Timed Pause

- 4 To store the entry, press **[...]** [SAVE]. "New contact added!" will be displayed.

## ENTERING LETTERS, NUMBERS & SYMBOLS

The input mode (Alpha editor) will automatically be activated when necessary to enter letters and numbers. As shown below, there are 4 available modes: Standard input mode (Abc), T9 input mode (T9Word), Numeric mode (NUM), and Symbol mode (Symbols).

The input mode indicator appears on the upper right of the display when letters and numbers are entered. To select the desired input mode among the 4 modes below, press **[...]** [Abc], then enter letters and numbers.

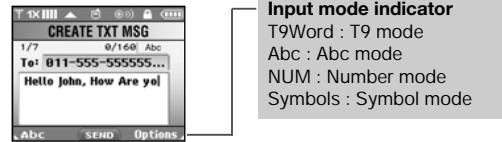

The following illustrates the function assigned to each key in the Alpha Editor.

KEY	FUNCTION
Abc	Press to change mode. [T9Word][Abc][NUM][Symbols]
Next	Press to view the next matching word if the highlighted word is not the word you intended.
Space	Press to accept a word and add a space.
Caps Lock	Press to select a letter case of the standard text input or T9 text input mode. [Abc], [ABC] and [abc] indicate the standard text input. [T9Word], [T9WORD] and [T9word] indicate the predictive text input. Press and hold to change mode.
Clear	Press to delete a character to the left of the cursor.
Save	Store the letters and numbers you enter.



## ENTERING LETTERS, NUMBERS & SYMBOLS

### STANDARD INPUT MODE

Use the digit keys to enter letters, numbers and characters.

1 Enter letters using the key pad as follows:

Key Pad	1 Time	Repetitions 2 times	Repetitions 3 times	Repetitions 4 times	Repetitions 5 times
2ABC	A	B	C	2	A
3DEF	D	E	F	3	D
4GHI	G	H	I	4	G
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

Press repeatedly, until the desired symbol appears (. 1 @ ? ! - , & : ' ).

To change the input mode, press [Abc].

2 To enter a space, press . The cursor will automatically move to the next column.

3 Repeat until letters are entered. There is a 16-letter limit.

4 To delete one digit, press . If you press and hold , it will delete letters word by word, and numbers in whole.

5 To change from lowercase to uppercase, press .

**e.g.** Select Abc mode by pressing [Abc].

When you select this mode, the Abc icon appears as a visual confirmation.

- Find the key that corresponds to the letter you want to enter.  
- Press it as many times as needed for the letter to appear on the screen.

- To enter the name "John":

Press | | J  
Press | | | | o  
Press | | | h  
Press | | | n

## ENTERING LETTERS, NUMBERS & SYMBOLS

### T9 INPUT MODE

The T9 input mode incorporates a built-in-dictionary to determine a word based on the entered characters. A word can be entered more quickly by pressing a key once per character.

1 Select the T9Word mode by pressing [Abc].

2 Press a digit key once to enter the character you want then enter all the characters to input the word you want.

3 To view the next matching word, press .

4 To accept the matching word and enter a space, press .



To enter a compound word:

- Enter the first part of the word then press to accept it.
- Enter the last part of the word then press to enter the word.



To enter "Fun fare" in the T9 input mode.

- After you enter the 1<sup>st</sup> letter, press [Abc] to select T9 mode and to choose the lower case (T9Word).

- Press and you will see "Fun" highlighted. Press to select it.

- Press and you will see "ease" highlighted. Press to select the next matching word; press until you see "fare". To accept and add a space, press .

## ENTERING LETTERS, NUMBERS & SYMBOLS

### NUMERIC MODE

Allows you to enter numbers.

- 1 Press [ABC] and scroll to the input mode to change to "NUM (Numeric mode)".
- 2 To enter a number, press a digit key.

### SYMBOL MODE

Allows you to enter symbols.

 
- 1 Press [ABC] and scroll to the input mode to change to "Symbols (Symbol mode)".
- 2 Select symbol you want to enter with the Navigation Key.

- Use the Navigation Key to view a different line of symbols.

Press [ ← ] [ABC] [ → ],

or

Press [ ↑ ] [ABC] [ ↓ ].

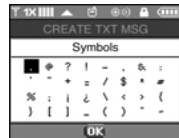

# Chapter 4 MENU FUNCTION

This chapter addresses accessing the menu and using its functions and features to customize your phone.

- CONTACTS
- RECENT CALLS
- ACCESS
- MEDIA GALLERY
- SETTINGS
- UTILITIES
- CAMERA

## CONTACTS

Stores up to 300 entries, each of which can be assigned to a group. Entries can be retrieved by name, phone number or group.

### FIND

Retrieves an entry by name and calls by simply pressing . You can review all the entries stored in your phone book list or quickly find an entry by entering a name or phone number.



**Shortcut:** From standby mode, press [CONTACTS] to display your internal Phone Book list.

### FIND BY NAME

Lists contacts alphabetically so you can quickly find a name.

- 1 Press [MENU] or .
- 2 The list of names in your phone book is displayed alphabetically.
- 3 Enter a name or character string or scroll through the list with the Navigation Key. Please refer to page 31 for more details on entering letters, numbers & symbols.
- 4 The list beginning with the letter you entered is displayed. Highlight an entry. Press to edit the entry. Press [MENU] to view options. If the contact has a mobile phone number your options will be 1. Send Text Msg, 2. Send Photo Msg, 3. Prefix or 4. Erase. If no mobile number is saved for the contact, your options will be 1. Prefix, 2. Erase. If only an email or web address is saved for the contact, your options will be 1. Send Text Msg, 2. Send Photo Msg or 3. Erase.

- If the entry is set to secret, you will be asked for your password.

Please refer to page 105 or page 106 for more details on "New Text Msg" & "New Photo Msg".

- 5 To call the selected number, press .

## CONTACTS

### FIND BY NUMBER

Lists contacts numerically so you can quickly find a number.

- 1 Press [MENU] or .
- 2 The list of phone numbers saved in your phone book will be displayed in numerical order.
- 3 Enter a part of the phone number or scroll through the list with the Navigation Key. The name associated with that number will be displayed at the bottom of the screen.
- 4 The list of phone numbers matching what you entered is displayed. Highlight an entry. Press to edit the entry. Press [MENU] to view options. If the contact has a mobile phone number your options will be 1. Send Text Msg, 2. Send Photo Msg, 3. Prefix or 4. Erase. If no mobile number is saved for the contact, your options will be 1. Prefix, 2. Erase. If only an email or web address is saved for the contact, your options will be 1. Send Text Msg, 2. Send Photo Msg or 3. Erase.

- If the entry is set to secret, you will be asked for your password.

Please refer to page 105 or page 106 for more details on "New Text Msg" & "New Photo Msg".

- 5 To call the selected number, press .

## CONTACTS

### ADD NEW

Adds a new entry.

- 1 To add a new entry to the phone book, press [MENU] or .
- 2 The Contact screen appears. Enter the name of the entry and press . Press the Navigation Key down to enter information for the other phone book fields.

- **PHONE BOOK FIELD** : Name/Mobile/Home/Office/Pager/  
Fax/E-Mail/Wireless Addr./Group/Ringer/Msg.Ringer/  
Graphic/Memo/ Set Secret.

Please refer to page 31 for more details on entering letters, numbers & symbols.

- 3.1 To save the entry, press [SAVE].
- 3.2 To return to the previous page, press .

### GROUP

Allows you to classify phone entries into groups. Existing groups include Personal, Business, Etc. and All. A maximum of seven groups is allowed.

#### ADD NEW GROUP

- 1 To add a new group, press [MENU] or .
- 2 Press [MENU] to select "Add Group".
- 3 Input a new group name.
- 4 Press to save it.

**NOTE** To add a phone book entry to a group, select the name of the group from the Group field when you add or edit the phonebook entry.

## CONTACTS

### CHANGE GROUP NAME

- 1 Press [MENU] or .
- 2 Select an existing group name that you have added with the Navigation Key.
- 3 Press [MENU] to select "Rename".
- 4 Input a new group name.
- 5 Press to save it.

**NOTE** The default group names (All, Personal, Business, Etc.) cannot be changed.

### ERASE GROUP

- 1 Press [MENU] or .
- 2 Use the Navigation Key to select, then delete the group.
- 3 Press [ERASE] to delete it.
- 4 Press to erase it.

**NOTE**

- The default group names (All, Personal, Business, Etc.) cannot be erased.
- When executing erase group, the saved entries are moved to the Etc. group.

## CONTACTS

### SPEED DIAL

In idle mode, calls can be placed to numbers stored in speed dial by pressing & holding the location number on the key pad. For a 2-digit location number, press the first number, then press and hold the second number.

**1** Press **[MENU]** **[4]** or **[4]**.

**2** To assign a phone number to a location, select the location, then press **[SET]**.

- If a phone number is already assigned to the location, press **[ERASE]** and **[SET]** to delete.

**3** Select the entry with the Navigation Key then press **[OK]**.

- If the entry is set to secret, you will be asked for your password.

**NOTE**

- "Unassigned" appears if the location is available.
- To call an assigned number, press & hold the last digit of the speed dial #.

**4** "Speed Dial # X edited" will be displayed.

## CONTACTS

### MSG. GROUP

Allows the user to group up to 10 phone numbers. The user can add, change, and delete Msg.Group.

#### ADD NEW MSG. GROUP

**1** To add a new group, press **[MENU]** **[5]** or **[5]**.  
A maximum of five groups is allowed.

**2** Press **[MENU]** to select "Add Group".

**3** Input a new group name.

**4** Press **[OK]** to save it.

**NOTE** To add a phone book entry to a Msg group, press **[MENU]** **[5]**, select the Msg group, then press **[OK]**. Choose a location, then press **[SET]**. Then scroll to the phone book entry, then press **[OK]**.

#### CHANGE MSG. GROUP NAME

**1** Press **[MENU]** **[5]** or **[5]**.

**2** Select an existing group name with the Navigation Key.

**3** Press **[MENU]** to select "Rename".

**4** Input a new group name.

**5** Press **[OK]** to save it.

## CONTACTS

### SEND TEXT MSG. GROUP

- 1 Press [MENU] or .
- 2 Scroll to the group name. Select an existing group name with the Navigation Key.
- 3 Press [MENU] to select "Send Text Msg."
- 4 Press the Navigation Key down to select the Message field.
- 5 5.1. To send the text message, press [MENU], then select "Send", then press .  
5.2. To save the text message, press [MENU], then select "Save to Outbox", then press .

Please refer to page 105 for more details on "New Text Msg".

## CONTACTS

### SEND PHOTO MSG. GROUP

- 1 Press [MENU] or .
- 2 Scroll to the group name. Select an existing group name with the Navigation Key.
- 3 Press [MENU] to select "Send Photo Msg."
- 4 Input a "Message", "Subject", "CC" and "BCC".
- 5 To send the picture message, press [MENU], then select "Send", then press .  
Please refer to page 106 for more details on "New Photo Msg".

### ERASE MSG. GROUP

- 1 Press [MENU] or .
- 2 Select an existing group name with the Navigation Key.
- 3 Press [ERASE] to delete it.
- 4 Press to erase it.

## CONTACTS

### MY PHONE #

To display your phone number and service provider:

- 1 Press [MENU] or .
- 2 To return to the previous page, press .

## RECENT CALLS

In idle mode, you can access recent calls by pressing [MENU] .

### ALL CALLS

Displays information about the most recent received, dialed and missed calls.

- 1 To see a list of the 60 most recent incoming, outgoing and missed calls, press [MENU] . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.
- 2 To view details, press .



*Call details include type of call, date, time and phone number.*

- 3 Press [MENU] select "SAVE" to save it or press [ERASE] to delete it.


- Save: To store the phone number in your phone book.
- Prefix: The user may add the desired number before the number. It is useful when you add "1" during long distance call. You may save it in the phone book after Prefix.
- Send Text Msg: To send a Text Message, insert the phone number.
- Send Photo Msg: To send a photo message, insert the phone number.
- Erase All: To erase all recent calls list.







*After the 60 received, dialed or missed calls, the oldest call will automatically be erased from the history.*


## RECENT CALLS



### MISSED CALLS

Displays information about the 20 most recently missed calls.  
Place a call to a missed call number by simply pressing .


**1** To see a list of the 20 most recently missed calls, press  [MENU]  . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

**2** To view missed call details, press .

 Call details include date, time and phone number.


**3** Press  [MENU] select "SAVE" to save it or press  [ERASE] to delete it.




- Save: To store the phone number in your phone book.
- Prefix: The user may add the desired number before the number.  
It is useful when you add "1" during a long distance call.  
You may save it in the phone book after Prefix.
- Send Text Msg: To send a Text Message, insert the phone number.
- Send Photo Msg: To send a photo message, insert the phone number.
- Erase All: To erase all missed calls list.


 After 20 missed calls, the oldest call will automatically be erased from the history.


## RECENT CALLS



### RECEIVED CALLS

Displays information about the 20 most recently answered calls.  
Place a call to a received call by simply pressing .


**1** To see a list of the 20 most recently answered calls, press  [MENU]  . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

**2** To view incoming call details, press .

 Call details include date, time and phone number.

**3** Press  [MENU] select "SAVE" to save it or press  [ERASE] to delete it.

- Save: To store the phone number in your phone book.
- Prefix: The user may add the desired number before the number.  
It is useful when you add "1" during long distance call.  
You may save it in the phone book after Prefix.
- Send Text Msg: To send a Text Message, insert the phone number.
- Send Photo Msg: To send a photo message, insert the phone number.
- Erase All: To erase all received calls list.

 After 20 received calls, the oldest call will automatically be erased from the history.



## RECENT CALLS

### DIALED CALLS

Displays information about the 20 most recently dialed numbers. Place a call to a dialed call by simply pressing .

- 1 To see a list of the 20 most recently dialed numbers, press [MENU] .  
If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.
- 2 To view dialed call details, press .



Call details include type of call, date, time and phone number.

- 3 Press [MENU] select "SAVE" to save it or press [ERASE] to delete it.

- Save: To store the phone number in your phone book.
- Prefix: The user may add the desired number before the number. It is useful when you add "1" during long distance call. You may save it in the phone book after Prefix.
- Send Text Msg: To send a Text Message, insert the phone number.
- Send Photo Msg: To send a photo message, insert the phone number.
- Erase All: To erase all dialed calls list.



After 20 dialed calls, the oldest call will automatically be erased from the history.

## RECENT CALLS

### CALL TIMERS

Checks the usage time and manages your calls within the limit you set. The five timers include:

#### LAST CALL

Displays usage time of last call.

- 1 Press [MENU] .
- 2 To return to the previous page, press .

#### ALL CALLS

Displays usage time of all incoming and outgoing calls, excluding web access calls.

- 1 Press [MENU] .
- 2 To view the time of the following items:
  - Voice Call
  - Data/Fax Call
- 3 To return to the previous page, press .

#### HOME CALLS

Displays usage time of all calls made within Home area.

- 1 Press [MENU] .
- 2 To view the time of the following items:
  - Voice Call
  - Data/Fax Call
- 3 To reset the timer, press [RESET].  
To return to the previous page, press .

## RECENT CALLS

### ROAM CALLS

Displays usage time of roaming calls.

- 1 Press [MENU] .
- 2 To view the time of the following items:
  - Voice Call
  - Data/Fax Call
- 3 To reset the timer, press [RESET].  
To return to the previous page, press .

### CUMULATIVE CALLS

Displays usage time of all incoming and outgoing calls, excluding web access calls.

- 1 Press [MENU] .
- 2 To view the time of the following items:
  - Voice Call
  - Data/Fax Call
- 3 To reset the timer, press [RESET].  
To return to the previous page, press .

## RECENT CALLS

### DATA CALLS

Checks the log of all kilobyte data transmissions.

### RECEIVED

To show the received kilobyte usage on a user definable interval:

- 1 Press [MENU] .
- 2 To reset the counter, press [RESET].  
To return to the previous page, press .

### TRANSMITTED

To show the transmitted kilobyte usage on a user definable interval:

- 1 Press [MENU] .
- 2 To reset the counter, press [RESET].  
To return to the previous page, press .

### TOTAL

To show the received or transmitted kilobyte usage on a user definable interval:

- 1 Press [MENU] .
- 2 To return to the previous page, press .

## AXCESS

Your phone provides "Access", a unique feature that enables you to download melody ringers, wallpapers, games, and more from your network to your phone. Please contact your service provider for the availability of these services.

### START AXCESS

- 1 To launch "Access" from the standby mode, press [MENU] or .
- 2 The name of the icon will appear at the bottom of the screen. Select the "Access Shop
 by pressing the Navigation Key left or right.
- 3 To start the application, press .
- 4 To end the application, press . The phone will return to the standby mode or the previous screen status.

### DOWNLOADING APPLICATIONS

- 1 Press [MENU] or .
- 2 Select "Access Shop
 ", then press .
- 3 Select "Catalog", then press .
- 4 The phone will access your service provider's server. Follow the prompt to download applications.
  - To select an option, scroll to the option by pressing or , then press .
  - When a prompt appears, press to proceed or to cancel.

## AXCESS

### DOWNLOADING MELODIES/WALLPAPERS

Before downloading melody ringers and wallpapers, you need to download the dedicated downloader. Please contact your service provider for details.

### APPLYING MELODIES/WALLPAPERS

Downloaded melody ringers apply to several functions including the incoming call alert, new text message alert, alarm clock and scheduler alarm. See Ringer Type on page 58.

Downloaded wallpapers apply to the standby mode. See Wallpaper on page 63.

### CHECKING DATA FOLDER MEMORY

Downloaded melody ringers, wallpapers and applications are saved to the data folder in your phone.

- 1 Press [MENU] or .
- 2 Select "Settings
 ", then press .
- 3 Select "Manage Apps", then press [SYSTEM INFO]. The memory status will be displayed.
- 4 To exit, press .

## AXCESS

### ERASING AN APPLICATION

- 1 Press [MENU] or .
- 2 Select "Settings ", then press .
- 3 Select "Manage Apps", then press .  
The memory status will be displayed.
- 4 Select the application to be erased then press .
- 5 Select "Remove", then press to remove it.

CH  
4

## MEDIA GALLERY

### IMAGES

#### GRAPHICS

This menu shows the list of downloaded still images.

- 1 Press [MENU] .  
  - Press [MENU] to select 1.Erase, 2.Erase All, 3.Change Title.
- 2 Scroll through the downloaded images to display the picture you want to send, then press [SEND].
- 3 To write your picture message, see "New Photo Msg" on page 106.
- 4.1 To send the photo message, press [MENU] then select "Send", then press [OK].  
 4.2 To save the photo message, press [MENU] then select "Save to Outbox", then press [OK].

CH  
4

#### ANIMATIONS

This menu shows the list of downloaded or saved images.

- 1 Press [MENU] .  
  - Press [MENU] to select 1.Erase, 2.Erase All, 3.Change Title.
- 2 Scroll through the downloaded images to display the picture you want to send, then press [SEND].
- 3 To write your picture message, see "New Photo Msg" on page 106.
- 4.1 To send the photo message, press [MENU] then select "Send", then press [OK].  
 4.2 To save the photo message, press [MENU] then select "Save to Outbox", then press [OK].

## MEDIA GALLERY

### PHOTOS

This menu shows the list of photos that have been taken with the camera.

- 1 Press [MENU] .
  - Press [MENU] to select 1.Erase, 2.Erase All, 3.Change Title.
- 2 Scroll through the captured pictures to display the picture you want to send, then press [SEND].
- 3 The New Photo Msg screen will appear. Enter the information in all the necessary fields. See "New Photo Msg" on page 106.
- 4 4.1 To send the photo message, press [MENU] then select "Send", then press [OK].  
4.2 To save the photo message, press [MENU] then select "Save to Outbox", then press [OK].

### TONES

This menu shows the list of downloaded ringtones and saved voice memos. Sending tones or voice memos is done through the New Photo Msg screen.

- 1 Press [MENU] .
- 2 Scroll to the saved voice memo or downloaded ringtone you want to send then press [SEND].
- 3 The New Photo Msg screen will appear. Enter the information in all the necessary fields. See "New Photo Msg" on page 106.
- 4 4.1 To send the photo message, press [MENU] then select "Send", then press [OK].  
4.2 To save the photo message, press [MENU] then select "Save to Outbox", then press [OK].

56

## MEDIA GALLERY

### SHUFFLE

#### WALLPAPER

This menu shows the list of downloaded or saved images.

- 1 Press [MENU] .
  - Press [MENU] to select 1.Erase, 2.Erase All, 3.Change Title.
- 2 Scroll through the downloaded images to display the picture you want to send, then press [SEND].
- 3 To write your picture message, see "New Photo Msg" on page 106.
- 4 4.1 To send the photo message, press [MENU] then select "Send", then press [OK].  
4.2 To save the photo message, press [MENU] then select "Save to Outbox", then press [OK].

#### RING TONE

This menu shows the list of downloaded or saved ring tones.

- 1 Press [MENU] .
  - Press [MENU] to select 1.Erase, 2.Erase All, 3.Change Title.
- 2 Scroll to the saved ringtone or downloaded ringtone you want to send then press [SEND].
- 3 To write your picture message, see "New Photo Msg" on page 106.
- 4 4.1 To send the photo message, press [MENU] then select "Send", then press [OK].  
4.2 To save the photo message, press [MENU] then select "Save to Outbox", then press [OK].

57

## SETTINGS

Customizes your phone and optimizes performance through a variety of settings.

### SOUNDS

Sets Ringer Type, Volume, Alert, Roam Ringer, Tone Length and Etiquette.

#### RINGER TYPE

To select a ringer type for incoming calls:

##### RINGER

1 Press [MENU] .

2 Select your desired ringer type.

- Left or Right key : Select "Ring Tones", "Music Bells" or "Downloads".
- Up or Down key : Select "Ringer".
- Downloads : Downloaded ringer types and familiar music.

3 Select one of the available ring types.  
To confirm, press [SELECT].

#### MESSAGES

To select a ringer type for receiving messages:

1 Press [MENU] .

2 Press the Navigation Key up or down to select "Tone 1, 2, 3, 4, 5, 6, 7, 8, 9, 10".

3 To confirm, press [SELECT].

#### VOICE MAIL

To select a ringer type for receiving voice mail:

1 Press [MENU] .

2 Press the Navigation Key up or down to select "Tone 1, 2, 3, 4, 5, 6, 7, 8, 9, 10".

3 To confirm, press [SELECT].

## SETTINGS

### VOLUME

Controls the Ringer, Key Tone, Voice Call and Speakerphone volume.

#### RINGER

Controls the Ringer volume and alerts you to incoming calls in the modes listed in the gray box below.

1 Press [MENU] .

2 Select one of the following options by pressing the Navigation Key to the right.

- Silent : Mute the ringer, press (Min).
- Ringer Off
- Vibrate On
- Ringer Mode : Up & Down (Level 1-5)
- High & Vib : The ringer sounds after vibration, press (Max).

3 To confirm, press .

#### KEY TONE

To adjust key pad tone:

1 Press [MENU] .

2 Adjust the key pad tone with the Navigation Key.

- Off (Min- )
- Level 1 - 5 (level 5, Max- )

3 To activate, press .

#### VOICE CALL

To adjust earpiece volume (Lets you adjust the ringer volume in standby mode with side volume key):

1 Press [MENU] .

2 Adjust the earpiece volume with the Navigation Key.






- Level 1 - 5 (Min- , Max- )

3 To activate, press .

## SETTINGS

### SPEAKERPHONE

To adjust speakerphone volume:





- 1 Press **\*\*** [MENU]    .
- 2 Adjusts the speakerphone volume using the Navigation Key.  

- 3 To activate, press **OK**.

### ALERT

When set, this setting alerts you to the following handset changes:





#### MINUTE

Sounds an alert every minute during a call.

- 1 Press **\*\*** [MENU]    .
- 2 Select "Off" or "On" with the Navigation Key, then press **OK** to activate it.





#### ROAM

Sounds an alert when leaving a service area and entering a roaming service area.

- 1 Press **\*\*** [MENU]    .
- 2 Select "Off" or "On" with the Navigation Key, then press **OK** to activate it.

#### CONNECT





Notifies you that a call has been successfully placed.

- 1 Press **\*\*** [MENU]    .
- 2 Select "Off" or "On" with the Navigation Key, then press **OK** to activate it.

## SETTINGS





### FADE

Sounds an alert when entering an area where calls cannot be made due to weak signal strength.

- 1 Press **\*\*** [MENU]    .
- 2 Select "Off" or "On" with the Navigation Key, then press **OK** to activate it.

### ON/OFF TONES

Allows you to activate/deactivate the power on/off tones.

- 1 Press **\*\*** [MENU]    .
- 2 Select "Off" or "On" with the Navigation Key, then press **OK** to activate it.

## SETTINGS

### ROAM RINGER

Sounds a different ringer when you are in a roaming service area.

- 1 Press **[MENU]** **[7]** **[1]** **[4]**.
- 2 Select "Distinctive" or "Normal" with the Navigation Key, then press **[OK]** to activate it.

- Normal : Sounds the same ringer type as used in Home area.
- Distinctive : Sounds a different ringer type.

### tone LENGTH

To adjust tone length:

- 1 Press **[MENU]** **[7]** **[5]**.
- 2 Select "Normal" or "Long" with the Navigation Key, then press **[OK]** to activate it.

### ETIQUETTE

To place the phone in Etiquette Mode so all phone sounds are muted:

- 1 Press **[MENU]** **[7]** **[6]**.
- 2 Select "On" or "Off" with the Navigation Key, then press **[OK]** to activate it.



**Shortcut:**

From standby mode, press and hold **[\*]** to Etiquette Mode On/Off.

## SETTINGS

### DISPLAY

Allows you to customize the display.

### GRAPHICS

To select an LCD display:

### WALLPAPER

- 1 Press **[MENU]** **[7]** **[2]** **[1]**.
- 2 Select Default to choose a pre-installed display or scroll through Downloads or Photo # to choose a display you have downloaded to your phone.
- 3 Press **[OK]** [SELECT] to activate it.

### POWER ON

- 1 Press **[MENU]** **[7]** **[2]** **[2]**.
- 2 Select "ALLTEL" with the Navigation Key.
- 3 Press **[OK]** [SELECT] to activate it.

### POWER OFF

- 1 Press **[MENU]** **[7]** **[2]** **[3]**.
- 2 Select "ALLTEL" with the Navigation Key.
- 3 Press **[OK]** [SELECT] to activate it.



## SETTINGS

### RECEIVED

- 1 Press [MENU] .
- 2 Select "Default" with the Navigation Key.
- 3 Press [SELECT] to activate it.

### DIALED

- 1 Press [MENU] .
- 2 Select "Default" with the Navigation Key.
- 3 Press [SELECT] to activate it.

### SCREEN SAVER

Set the time of Screen Saver, then select the images (default or downloaded from Cricket Clicks), then the image will be displayed on the LCD.

- 1 Press [MENU] .
- 2 Select "Time Setting" or "Screen Saver" with the Navigation Key.
  - Time Setting : Off, 5 Secs, 10 Secs, 20 Secs, 30 Secs.
  - Screen Saver : Select picture image.(Photo/Multimedia/Images).  
By pressing [MENU], the user can choose from the following:
    1. **Erase:** To erase pictures saved in the current album.
    2. **Erase All:** To erase all pictures saved in the current album.
    3. **Change Title:** To edit the title of a picture file.
- 3 To activate, press [SELECT].

## SETTINGS

### SUB SCREEN

- 1 Press [MENU] .
- 2 Select "Digital" or "Analog" with the Navigation Key.
- 3 To activate, press .

### GREETING MESSAGE

To input a personal greeting:

- 1 Press [MENU] .
- 2 The message field will be highlighted.  
Press the Navigation Key left or right to choose between on and off. Press the Navigation Key down to move to the next field, font color.  
Press the Navigation Key left or right to choose a color. Repeat for both fields.  
Press the Navigation Key down to entry message.  
Enter your greeting.
  - Message : On/Off.
  - Font Color: White, Blue, Dark blue, Magenta, Gray, Black.
  - Entry Message : Enter message (Default-ALLTEL).
- 3 To save, press [SAVE].

## SETTINGS

### CONTRAST

To adjust the display contrast:

#### MAIN LCD/SUB LCD

1 Press [MENU] .

2 Select "Main LCD" or "Sub LCD", then select one of the following options with the Navigation Key.

- Main LCD : Level 1-5.
- Sub LCD : Level 1-5.

3 To save, press .

### BACKLIGHT

Backlights the display and key pad for easy viewing in dark places.

#### LCD/KEY PAD

1 Press [MENU] .

2 Select "LCD" or "Key Pad", then select one of the following options with the Navigation Key.

- LCD : 5 Secs/15 Secs/30 Secs/60 Secs/Always On.
- Key Pad : 5 Secs/15 Secs/30 Secs/60 Secs/Always On/Always Off.

3 To save, press .

## SETTINGS

### DATA SERVICE

#### CONNECTION

Choose the connection mode for the usage of your phone.

1 Press [MENU] .

2 Select one of the following connection modes with the Navigation Key.

- Voice Call : To receive a voice call.
- Data Only : To receive data when connected to PC.
- Fax Only : To function as a fax when connected to PC.

3 Press to activate.

**NOTE** This function is available only when the phone is connected to data cable.

#### WAP/BREW

When connected to "WAP" or "BREW", allows the user to either choose "QNC".

1 Press [MENU] .

2 Select "WAP", "BREW" or "QNC Only" with the Navigation Key.

3 To save it, press .

#### AIRTIME WARNING MESSAGE

1 Press [MENU] .

2 Select "Yes" or "No", then press to activate it.

## SETTINGS

### SECURITY

Prevents unauthorized use of your phone. The following settings can be restricted:

#### PHONE LOCK

Prevents the phone from being used without entering the password first.

- 1 Press [MENU] , enter your password.



The default password is the last 4 digits of your phone number.

- 2 Press , then select "Lock Now", "Lock On Power Up" or "Unlock".

- Lock Now : Lock the phone now.
- Lock On Power Up : Not locked, but it is automatically locked when power is recycled.
- Unlock : Do not lock the phone.

- 3 To activate, press .

#### RESTRICT

When you attempt to make a restricted call, "This phone is restricted" appears on the screen.

#### DIALED

Blocks all dialed calls – except emergency calls – but allows an incoming call to be placed.

- 1 Press [MENU] , enter your password.

- 2 Press , then select "Allow" or "Restrict" with the Navigation Key.

- Allow : Allows a dialed call.
- Restrict : Restricts a dialed call.

- 3 To activate, press .

## SETTINGS

### RECENT CALLS

Blocks access to Recent Call List.

- 1 Press [MENU] , enter your password.

- 2 Press , then select "Allow" or "Restrict" with the Navigation Key.

- Allow : Allows a recent call.
- Restrict : Restricts a recent call.

- 3 To activate, press .

### CAMERA

Restricts access to camera mode.

- 1 Press [MENU] , enter your password.

- 2 Press , then select "Allow" or "Restrict" with the Navigation Key.

- Allow : Allows access to the camera.
- Restrict : Restricts access to the camera.

- 3 To activate, press .

### DATA CALL

Restricts a data call from being placed.

- 1 Press [MENU] , enter your password.

- 2 Press , then select "Allow" or "Restrict" with the Navigation Key.

- Allow : Allows a data call.
- Restrict : Restricts a data call.

- 3 To activate, press .

## SETTINGS

### 900#S

Restricts calling 900 dial service numbers.

- 1 Press [MENU] , enter your password.
- 2 Press , then select "Allow" or "Restrict" with the Navigation Key.
  - Allow : Allows calls to a 900-dial service.
  - Restrict : Restricts calls to a 900-dial service.
- 3 To activate, press .

### LONG DISTANCE

Restricts calling long distance numbers – the phone is limited to calling numbers within the area.

- 1 Press [MENU] , enter your password.
- 2 Press , then select "Allow" or "Restrict" with the Navigation Key.
  - Allow : Allows a long distance call.
  - Restrict : Restricts a long distance call.
- 3 To activate, press .

## SETTINGS

### CHANGE CODE

Changes your 4-digit password.

- 1 Press [MENU] , enter your password.
- 2 Press .
- 3 Enter a new password, then press .
- 4 Enter the new password again, then press .

### SPECIAL #'S

Stores 3 phone numbers that can be called even in the lock mode.

- 1 Press [MENU] , enter your password.
- 2 Press , then select a location with the Navigation Key.
- 3 Press [SET] and input a phone number, press again to save.

### ERASE ALL

Clears all contacts, downloads, and photo gallery entries from your phone.

- 1 Press [MENU] , enter your password.
- 2 Press .
- 3 Press [CHECK] to check "Contacts", "Downloads" or "Photo Gallery", then press to erase all the items in those categories.

## SETTINGS

### RESET PHONE

Resets phone to default settings.

- 1 Press **[MENU]**, enter your password.
- 2 Press **[6]**.
- 3 Select "Yes" or "No" with the Navigation Key. Press **[OK]**.

When you select "Yes" and **[OK]**, you will see "Reset Phone ! This will reset to default setting" on the display.

- 4 To reset the phone, press **[OK]**.

### 1X PASSWORD

#### PAP USER ID

To change your User ID:

- 1 Press **[MENU]**, enter your password.
- 2 Press **[7]** for "PAP User ID". Your User ID appears in the Editor screen.
- 3 To save, press **[OK]** [STORE].

#### PAP PASSWORD

To change your PASSWORD:

- 1 Press **[MENU]**, enter your password.
- 2 Press **[2]** for "PAP Password". Your password appears in the Editor screen.
- 3 To save, press **[OK]** [STORE].

## SETTINGS

### OTHERS

#### ANSWER OPTIONS

##### CALL ANSWER

To select an answer mode:

- 1 Press **[MENU]**.
- 2 Select "Any Key" or "Send Key" with the Navigation Key.

- Any Key : Press any key to answer an incoming call except **[CALL]**, **[END]**, **[MENU]** and **[POWER]**.
- Send Key : Press only **[SEND]** to answer a call.

- 3 To activate, press **[OK]**.

##### ACTIVE FLIP

To select active flip answer mode.

- 1 Press **[MENU]**.
- 2 Select "On" or "Off" with the Navigation Key.
- 3 To activate, press **[OK]**.

- When Active Flip On is selected, an incoming phone call can be answered simply by opening the phone.
- When Active Flip Off is selected, you will need to open the phone and follow the Answer mode you have selected.

## SETTINGS

### AUTO ANSWER

Automatically answers a call after a preset amount of time.  
Auto Answer only works when the phone is open.

**1** Press **[\*\*]** **[MENU]** **[7 sec]** **[5 sec]** **[18 sec]** **[3 sec]**.

**2** Select one of the following with the Navigation Key.

● Off/5 Secs/10 Secs/18 Secs.



*This function will not be active when you select Vibrate, Silent, Etiquette or Ringer after Vib as a ringer mode.*

**3** To activate, press **[OK]**.

### AUTO RETRY

Automatically redials a call up to 5 times after a set time interval.

**1** Press **[\*\*]** **[MENU]** **[7 sec]** **[5 sec]** **[2 sec]**.

**2** Retry time to field is shown. Press the Navigation Key left or right to choose the amount of time.  
(Off, 3 Secs, 5 Secs, 7 Secs, 10 Secs.)

**3** When a time is chosen for retry time, the repeat field is shown. Press the Navigation Key down to highlight the repeat field. Press the Navigation Key left or right to choose the amount of repeats. (1 Time, 3 Times, 5 Times).

**4** To activate, press **[OK]**.

## SETTINGS

### LANGUAGE

Selects the language in which letters are displayed on screen.

**1** Press **[\*\*]** **[MENU]** **[7 sec]** **[5 sec]** **[3 sec]**.

**2** Select either "English" or "Spanish" with the Navigation Key.

**3** To activate, press **[OK]**.

### VOICE PRIVACY

Enhances voice privacy and avoids tapping during a call.

**1** Press **[\*\*]** **[MENU]** **[7 sec]** **[5 sec]** **[4 sec]**.

**2** Select "Standard" or "Enhanced" with the Navigation Key.

**3** To activate, press **[OK]**.

● "Enhanced" : Makes it more difficult to wire tap.

## SETTINGS

### TTY MODE

Your phone is able to operate with a TTY (Teletypewriter) device in digital mode. This feature is system dependent and may not be available in all areas.

- 1 Press [MENU] .
- 2 Select one of the following options (TTY Off / TTY+TALK / TTY+HEAR / TTY Full) with the Navigation Key, then press .

### LOCATION

To determine whether or not the network system can detect your position:

- 1 Press [MENU] .
- 2 Select "911 Only" or "Location On" with the Navigation Key.
  - 911 Only : Your location will be hidden from network & application except 911.
  - Location On : Your location is now available to the network.
- 3 To activate, press .

## SETTINGS

### SYSTEM

#### SET MODE

Selects the Preferred System.

- 1 Press [MENU] .
- 2 Select one of the following options (Automatic B / Automatic A / Home Only) with the Navigation Key, then press .

- Automatic B : Scans the radio channels based on the Automatic B setting.
- Automatic A : Scans the radio channels based on the Automatic A setting.
- Home Only : Only within your home area or home affiliated area.

#### NAM SETTING

Enables Auto NAM (Number Assignment Modules) or manually selects a NAM.

#### AUTO NAM

Automatically switches phone to proper NAM when you have multiple NAM registrations.

- 1 Press [MENU] .
- 2 Select "Yes" or "No", then press to activate it.

## SETTINGS

### CHANGE NAM

Changes the NAM used by the phone when you have multiple registrations.

- 1 Press [MENU] .
- 2 Select "NAM1-ALLTEL" or "NAM2-ALLTEL", then press to activate it.

### PRL ID

Displays the phone's PRL (Preferred Roaming List).

- 1 Press [MENU] .
- 2 To return to the previous page, press .

## SETTINGS

### PHONE INFO

Displays the version of your phone:

#### S/W VERSION

- 1 Press [MENU] .
- 2 The software version appears.
- 3 Press .

#### H/W VERSION

- 1 Press [MENU] .
- 2 The hardware version appears.
- 3 Press .

#### AXCESS VERSION

- 1 Press [MENU] .
- 2 The "AXCESS" software version appears.
- 3 Press .



## SETTINGS

### AIRPLANE MODE

When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. You may still use the phone's other features, such as Notepad, Voice Memos, etc., while you are in Airplane Mode.

- 1 Press [MENU] .
- 2 Read the message, then press .
- 3 Select "On" or "Off", then press to activate it.



While in Airplane Mode, your phone's standby screen will display "Airplane Mode" and the Time/Date disappears.

## UTILITIES

### SCHEDULE

Sets an plan and reminds you of that plan.

#### ADD NEW PLAN

- 1 Press [MENU] .
- 2 Use the Navigation Key to choose a date in the calendar, then press .
- 3 The date field is highlighted. Press the Navigation Key down to set the other options.

#### DATE SETTING

Use the keypad to change or enter the date then press .

#### TIME SETTING

Use the keypad to set a time and when highlighted, press to select "AM" or "PM", then press .

#### PLAN SETTING

Use the keypad to input a plan message then press .

#### SETTING

Select an alert time interval option (On Time, 10 Min Before, 30 Min Before, 1 Hour Before, No Alarm) by pressing the Navigation Key left or right.

#### RINGER SETTING

To set a Ringer, press [MENU], then select "Default" or "Change" using the Navigation Key. To save it press [SELECT].

- Default : To set default ringer type.
- Change : Choose a ringer type from the list.

## UTILITIES

- 4 Press [SAVE] to save it or [CLR] to return to the calendar.
- 5 The date of the plan will be marked on your calendar.

### VIEW PLAN

- 1 To view the Event List, press [MENU] .
- 2 Move the Navigation Key to choose an event, then press or [ERASE]. Press [MENU], then select "Erase All" using the Navigation Key. "Erase all plans?" will be displayed. Press to delete.

## UTILITIES

### ALARM

You can set up to 3 alarms.

- 1 To display alarm entries, press [MENU] .
- 2 Select one of the entries using the Navigation Key. To set a new alarm, choose alarm 1, 2 or 3. To edit an existing alarm, select that alarm. Press .
- 3 The Setting field will be highlighted. Press the Navigation Key down to select alarm options.

### SETTING

Use the Navigation Key to select a setting for the alarm (Once, Daily, Weekly, Monthly, Off).

### DATE SETTING

Use the keypad to change or enter the date for the alarm then press .

If Weekly is chosen for the setting, date field becomes a day of the week.

- Once: Select the single date of the alarm.
- Daily: Select alarm for same time each day.
- Weekly: Select "Monday", "Tuesday", "Wednesday", "Thursday", "Friday", "Saturday", "Sunday".
- Monthly: Select day 1 through 31.
- Off

### TIME SETTING

Use the keypad to set a time for the event and the to select "AM" or "PM" then press .

## UTILITIES

### SNOOZE SETTING

Use the Navigation Key to select a Snooze setting (Off, 1 time after 5 min, 1 time after 10 min, 3 times by 5 min).

### RINGER SETTING

To set a "Ringer" press [MENU], then select "Default" or "Change" using the Navigation Key. To save it press [SELECT] to save it.

- Default : To set default ringer type.
- Change : To choose a ringer type from the list.

### PLAN SETTING

Using the keypad, input an alarm message then press .

- To save an alarm setting press [SAVE].

## UTILITIES

### MEMO PAD

Your phone includes an internal memo pad that can be used to compose and store reminders and notes.

#### ADD MEMO

To compose a memo (there is an 80-letter limit):

- 1 Press [MENU] .
- 2 Input a new text memo.  
(Please refer to page 31 for more details on entering letters, numbers & symbols.)
- 3 Press to save memo.

#### VIEW MEMO

To view a saved memo:

- 1.1. Press [MENU] .
- 1.2. To erase a memo, press .
- 1.3. To add a new memo, press [MENU] "New Memo".
- 1.4. To erase all memos, press [MENU] "Erase All".
- 2 The list of all memos, in saved order, is displayed. Select a memo, then press .
- 3 The selected memo will appear. To edit it, press [MENU], select "Edit" and input a new text memo, then press to save edit memo.

#### SETTINGS

To select memo pad background image:

- 1 Press [MENU] .
- 2 Select (Paper/Pattern/Sea/Sky/Flower) by pressing Navigation Key left or right, then press .

## UTILITIES

### CALCULATOR

To access the calculator:

1 Press [MENU] .

2 Follow the instructions below to calculate  $8*6 \div 4 - 2.5$

Press 8.  
 Press the Navigation Key to the right.  
 Press 6.  
 Press the Navigation Key to the left.  
 Press 4.  
 Press the Navigation Key down.  
 Press 2 then press to input (.  
 Press 5.  
 Then press and you will see the answer.



3 To reset, press [RESET].

## UTILITIES

### WORLD CLOCK

To display the time and date in pre-programmed cities:

1 Press [MENU] .

2 Select a city with the Navigation Key.

3 The world map appears with the city, its date and time.

• Use the Navigation Key to select another city.

**NOTE** As the daylight saving time is not applied, it may be different from the actual time during DST.

4 To return to the previous page, press .

## UTILITIES

### STOP WATCH

Simultaneously times up to six different events. To operate the stop watch:

- 1 Press [MENU] .
- 2 To measure a time period.
  1. To start the stop watch, press [START].
  2. To pause it, press [STOP].
  3. To resume it or [RESET] to return to the previous page, press [EXIT].
- 3 To time up to six events at once:
  1. To start, press [START].
  2. To stop a time period and continue measuring another one, press [CONT].
  3. To stop the second and continue measuring a third one, press [CONT].
  4. To measure up to six time periods, repeat the above steps.
  5. To stop the stop watch, press [STOP].
  6. To review the results, press [VIEW].
  7. To return to the stop watch, press .
  8. To reset it, press [RESET].

## CAMERA

### TAKE A PHOTO

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens and pressing a button. You can activate the Camera Mode and take pictures when the phone is open.

#### TAKING A PICTURE THROUGH THE MENU

- 1 Press [MENU] or press .
- 2 Point the camera lens at your subject. You can check the picture framing through the main display screen.
- 3 Press [OK] or the side camera button to take the picture.
- 4 To save the picture, press [SAVE] then input a picture title, then press . To go back to idle mode without saving the picture, press . To send the picture to someone, press [SEND].

- You cannot place or receive calls while in Camera Mode. All incoming voice calls will be forwarded to voicemail.

#### TAKING A PICTURE IN IDLE MODE

- 1 Press the Side Camera button or press and hold to activate Camera Mode.
- 2 Point the camera lens at your subject. You can check the picture framing through the main display screen.
- 3 Press the side camera button to take the picture.
- 4 To save the picture, press [SAVE] then input a picture title, then press . To go back to idle mode without saving the picture, press . To send the picture to someone, press [SEND].

## CAMERA

### CAMERA MODE OPTIONS

When the phone is open and in Camera Mode, several user options are available.

#### GALLERY

Press [GALLERY] to enter Review Mode. From there you can view the captured pictures, view a running count of stored pictures and more.

#### RESOLUTION

Press the Navigation Key up or down to adjust the picture size from High (640x480 pixels) to Med (320x240 pixels) to Low (160x120 pixels). The current picture size appears at the top left side of the display screen.

#### ZOOM

Press the Navigation Key left or right to change the magnification. (Zoom to 1x, 2x or 4x magnification in Low Resolution and 1X and 2X in Medium Resolution.)

#### UNDER [MENU]

##### SUB LCD

The sub LCD will show a representation of the picture to be taken. Use the sub LCD to help frame yourself for a self portrait.

##### FLASH

To activate the flash function. (Off / On this shot / Always On)

##### SELF TIMER

To activate the camera's timer function. (Off / 5 Secs / 10 Secs)

##### IMAGE CONTROLS

To select an option from the following. (Brightness / Image Effect / Contrast / Quality)

##### SHUTTER SOUND

To select a shutter sound. (Off / Shutter 1 / Shutter 2 / Shutter 3 / Say "Cheese")

## CAMERA

 
### PHOTO GALLERY

Your phone enters Review Mode after taking a picture.

**1** Press [MENU] or .

**2** Press to select a picture.

- In Review Mode you can view all the pictures you have taken, store selected images in your phone, send pictures to the Online Album, delete images and access additional picture options.
- Press [MENU] to display the following options :
  - 1. Thumbnail** : To switch the display from full-screen to thumbnail view.
  - 2. Edit Title** : Edit the picture's title.
  - 3. Send Photo** : Upload the picture to a message.
  - 4. Assign Picture** : Assigns the selected photo to display for specific tasks (Wallpaper/Screen Saver/Picture CallerID/Incoming Call).
  - 5. Erase** : Erase the current picture from your phone.
  - 6. View Lists** : Displays all pictures.
  - 7. Photo Info** : Displays information on the selected picture, such as title, date/time, size, etc.
- Press [CAM] to return to Camera mode to take another picture.

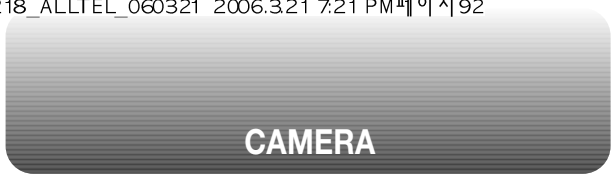

CAMERA

**PHOTO MESSAGE**

Once you've taken a picture, you can use the messaging capabilities of your phone to instantly share it with family and friends. To send a picture to a recipient's email address or to their wireless phone:

- 1 Press [MENU] or .
- 2 Press for "New Photo" or for a "Saved Photo". If you are looking for a saved photo, scroll through the captured pictures to select the picture you want to send.
- 3 Highlight the picture, then press .
- 4 Under "Send To", enter the email address or mobile phone number, then press .
- 5 Under "Message", press . The picture will come up with the flashing cursor underneath. Enter the message, then press . Press to 1. Voice Record, 2. Insert Q.Text, 3. Delete Photo, 4. Insert Sound, 5. Insert Slide or 6. Slide Duration.
- 6 Under "Subject", enter a subject line for the message. Press .
- 7 If you want to send the picture to any additional recipients, enter their information under "CC" or "BCC". Press to 1. Find, 2. Save or 3. Msg. Group.



CAMERA

- 8 To send the picture, press [MENU] . Press [MENU] to 1. Send, 2. Preview, 3. Save to Outbox, 4. Priority or 5. Expiration.

Please refer to page 106 for more details on "New Photo Msg".

**HELP**

- 1 Press [MENU] or .

- Use up/down keys to change picture size, left/right keys to change zoom and Side up/down keys control rotation on preview mode.  
Camera menu provides more settings:  
1. SUB LCD: Enable previewing on external LCD.  
2. FLASH: Provides just enough light to allow pictures to be taken.  
3. SELF TIMER: Set timer to take a self portrait.  
4. IMAGE CONTROLS  
4.1 BRIGHTNESS  
4.2 IMAGE EFFECT  
4.3 CONTRAST  
4.4 QUALITY  
5. SHUTTER SOUND: Select a sound to use for shutter.



MEMO

# Chapter 5

## VOICE SERVICE

This chapter addresses Voice Service, an advanced feature that allows you to place calls using your voice. With Voice Memo (VM) you can record voice messages and set the Answering Machine. Topics include:

- VOICE TOOLS MENU
- VOICE RECOGNITION MODE



## VOICE TOOLS MENU

### VOICE MEMO

Voice Memo allows you to record a reminder message that can be up to 60 seconds. To record a memo:

- 1 Press **[MENU]** to start Voice Tools menu.
- 2 To enter a voice memo, press **[MEMO]**.
- 3
  - 1.1. To record a voice memo, press **[MEMO]**.  
Instructions will be displayed and you will hear "Please record at the tone."
  - 1.2. To stop recording a memo, press **[OK]** [STOP] or **[PAUSE/RESUME]**.
  - 1.3. Press **[MENU]** after recording a voice memo to "1. Re-record" or "2. Review".
  - 1.4. Press **[OK]** [SAVE] to input a "Voice Memo" title, then press **[OK]**. (See page 31 for more information on entering letters, numbers and symbols.)
  - 1.5. Press **[SEND]** to access the "New Photo Msg" see "New Photo Msg" on page 106.
2. To playing voice memo, press **[PLAY]**.  
Select the message you want to play then press **[OK]** [PLAY] or press **[MENU]** to
  1. Edit Title or 2. Send. Press **[ERASE]** to erase the memo.
3. To play the voice memo using the speakerphone, press **[SPEAKER]**. Select the message you want to play then press **[OK]** [PLAY] or press **[MENU]** to
  1. Edit Title or 2. Send. Press **[ERASE]** to erase the memo.
4. To erase all voice memos, press **[ERASE]**.  
"Erase all voice memos?" will be displayed.  
Press **[OK]** to erase all voice memos.

## VOICE TOOLS MENU

### VOICE DIAL

Voice Dial allows you to record a voice tag so you can call a person in your phone book simply by saying their name. To access Voice Dial:

- 1 Press **[MENU]** to start Voice Tools menu.
- 2 To enter Voice Dial, press **[DIAL]**.
- 3
  - 1.1. To record a voice tag, press **[MEMO]**.  
The phone book list will be displayed alphabetically. Select a name, then press **[OK]**.  
Instructions will be displayed and you will hear "Name Please".
  - 1.2. Say the name for the voice tag and repeat the name when prompted. You will hear "Got it".
2. To playing a voice tag, press **[PLAY]**.  
Highlight the name you want to play then press **[OK]** [PLAY] or press **[ERASE]**.
3. To play a voice tag using the speakerphone, press **[SPEAKER]**.  
Highlight the name you want to play then press **[OK]** [PLAY] or press **[ERASE]**.
4. To erase all voice tags, press **[ERASE]**.  
"Removing all voice tags Proceed?" will be displayed.  
Press **[OK]** to erase all voice tags.

## VOICE TOOLS MENU

### TRAIN WORDS

Train allows you to use Control words to make a call without using the keypad.

#### YES

Use to train or untrain the Voice Recognition with the control word, "Yes".

- 1 Press [MENU] .
- 2 "Please listen closely to hear instructions" will be displayed and you will hear "Now training control words. Please say the word yes".
- 3 Say "Yes". You will hear "Again". Say "Yes" again. You will hear "Training word successful".

#### NO

Use to train or untrain the Voice Recognition with the control word, "No".

- 1 Press [MENU] .
- 2 "Please listen closely to hear instructions" will be displayed and you will hear "Now training control words. Please say the word no".
- 3 Say "No". You will hear "Again". Say "No" again. You will hear "Training word successful".

## VOICE TOOLS MENU

### WAKE-UP

Use to train or untrain the Voice Recognition with the control word, "Wake-Up".

- 1 Press [MENU] .
- 2 "Please listen closely to hear instructions" will be displayed and you will hear "Now training control words. Please say the word Wake-Up".
- 3 Say "Wake-Up". You will hear "Again". Say "Wake-Up" again. You will hear "Training word successful".

### UNDO TRAIN ALL

Undo Train All erases all "trained" words.

- 1 Press [MENU] .
- 2 "Undo voice recognition for all procedures?" will be displayed. Press [OK] to undo all trained words.

## VOICE TOOLS MENU

### VOICE SETTING

#### SET ACTIVE

Allows the user to activate or deactivate voice dial service.

- 1 Press [MENU] .
- 2 Select "Active Flip" or "Send Key" by pressing the Navigation Key left or right.
- 3 To activate, press .

#### HFK MODE

While using the Hands Free Kit, activates or deactivates the voice recognition function.

- 1 Press [MENU] .
- 2 Scroll to HFK Mode. Select "On" or "Off" by pressing the Navigation Key left or right.
- 3 To activate, press .

## VOICE RECOGNITION MODE

Voice Recognition (VR) enables you to place calls using your voice and to record voice memos.

- 1 Press and hold until your phone turns to Voice Recognition mode.



If no recorded voice dial, "No entries recorded" message will be displayed.

- 2 "Please say the name after the prompt tone" will be displayed and you will hear "Name please".



### NAME

- 1 Press and hold until your phone turns to Voice Recognition mode.
- 2 Say a tag name when prompted. The member and name will appear on the display and you will hear "Calling (Name)".

MEMO

## Chapter 6

### VOICE MAIL, TEXT AND PHOTO MESSAGE

This chapter addresses Voice Mail, Text and Photo Messaging functions including:

- WHEN A NEW MESSAGE ARRIVES
- VOICE MAIL
- NEW TEXT MSG
- NEW PHOTO MSG
- INBOX
- OUTBOX
- WEB ALERTS
- SAVED
- QUICK TEXT
- ERASE ALL
- SETTINGS

## WHEN A NEW MESSAGE ARRIVES

- 1 The following display appears when a new message arrives.



- 2 To display the message, press [READ].

## VOICE MAIL

Displays the number of voice mails and accesses them by pressing .

- 1 To access your voice mail, press [MENU] or .

### FIRST TIME USER

- 1 Dial \*86, then press .
- 2 At the recording, press .
- 3 Follow the voice tutorial to set up your account.

### EXISTING USER

- 1 Dial \*86, then press .
- 2 At the recording, enter your 4 digit password, then press .
- 3 To listen to new messages, press .

## NEW TEXT MSG

To send a new message:

- 1 Press [MENU] or .
  - 2 Under "Send To", input the phone number, then press .
- By pressing [MENU], you can choose from the following:
    1. **Find:** Search the phone number which is stored in the phone book.
    2. **Save:** Stores the phone number the message was sent to.
    3. **Msg. Group:** Select, all the phone numbers in a group.

- 3 Under "Message", input a new text message, then press .
- (Please refer to page 31 for more details on entering letters, numbers and symbols.)

- By pressing [MENU], in the message input screen you can choose from the following:
  1. **Insert Quick Text:** Inserts canned text into a Text Msg.
  2. **Insert Sound:** Inserts sound in Text Msg.
  3. **Insert Picture:** Inserts picture in Text Msg.
  4. **Insert Animation:** Inserts Animation in Text Msg.
  5. **Save to Quick Text:** Saves the written sentences into Quick Text.

- 4 The default call back number is automatically inputted into the Default CB# field. You can scroll to the number and edit it or simply press [EDIT].

- 5 Press the Navigation Key down for more fields. Under "Priority", select "Normal" or "Urgent".

- 6 Under "Insert Signature", select "On" or "Off".

- 7.1. To send the text message, press [MENU], then select "Send", then press .
- 7.2. To save the text message, press [MENU], then select "Save to Outbox", then press .

## NEW PHOTO MSG

To send a new picture message:

- 1 Press [MENU] or .
- 2 Phone goes into camera mode automatically. Take a picture, then press .  
(Please refer to page 89 for more details on take a photo.)
- 3 Under "Send To", input the phone number, then press .
  - By pressing [MENU], the user can choose from the following:
    1. **Find:** Allows the user to search the phone number which is stored in the phone book.
    2. **Save:** Stores the phone number the message was sent to.
    3. **Msg. Group:** Allows you to select all the phone numbers in a group.
    4. **Online Album:** To send pictures by using online Address Book.
- 4 Under "Message", input a new text message, then press .
  - By pressing [MENU], the user can choose from the following:
    1. **Take Photo:** To take a new photo.
    2. **Voice Record:** To record a voice memo.
    3. **Insert Q.Text:** Insert Quick Text function inserts already saved sentences.
    4. **Insert/Delete Photo:** To insert/delete a picture from your photo gallery.
    5. **Insert/Delete Sound:** To Insert/delete a sound in Photo Msg.
    6. **Insert/Delete Slide:** To insert/delete a picture in Photo Msg.
    7. **Slide Duration:** To select a slide duration time.
- 5 Under "Subject", input a message subject, then press .  
(Please refer to page 31 for more details on entering letters, numbers and symbols.)

## NEW PHOTO MSG

- 6 To send a message to another person, select the "CC" or "BCC" and input the phone numbers, then press .
  - By pressing [MENU], the user can choose from the following:
    1. **Find:** Allows the user to search the phone number which is stored in the phone book.
    2. **Save:** Stores the phone number the message was sent to.
    3. **Msg. Group:** Allows you to select all the phone numbers in a group.
- 7 7.1. To send the picture message, press [MENU], then select the "Send", then press .
  - 7.2. To save the picture message, press [MENU], then select "Save to Outbox", then press .
    - By pressing [MENU], the user can choose from the following:
      1. **Send:** To send a picture message.
      2. **Preview:** To preview a written picture message.
      3. **Send to Outbox:** To save a message to "Outbox" folder.
      4. **Priority:** To select priority "Normal" or "High".
      5. **Expiration:** To select expiration time "Off", "1 day", "2 days", "3 days", "4 days" or "5 days".

## INBOX

The Inbox manages received text messages. To access:

- 1 Press [MENU] or .

- : Urgent New Msg (not read)
- : Urgent Read Msg
- : New Msg (not read)
- : Old Msg (already read)
- : Lock (already read and locked)

- 2 Select a message, then press .  
The message is displayed. To delete a message, press [ERASE].
- 3 Press [MENU] to view options.

### \*PHOTO INFO

- 1 Select Photo Info to display the photo message information.  
(Please refer to page 110 "NOTE" for more details.)

### \*PLAY SLIDE SHOW

A slide show consists of up to 3 pictures in one message with text and/or sound.

- 1 Select Play Slide Show to play all slides in a slide show from a photo message. There is a 5 second interval between slides.  
(Please refer to page 110 "NOTE" for more details.)

### REPLY

- 1 Select Reply to reply to the message.
- 2 Type your reply, then press .

108

## INBOX

### REPLY WITH COPY

- 1 Select Reply With Copy to reply to a message and include a copy of the received message.
- 2 The default call back number is automatically inputted into the Default CB# field.  
You can scroll to the number and edit it.
- 3 Under "Insert Signature", select "On" or "Off".
- 4 To send the text message, press [SEND].
- 5 To save the text message, press [MENU] and select the "Save to Outbox" then press .

### FORWARD

- 1 Select Forward to forward the message to another person.
- 2 Input the phone number of the person you are sending the message to, then press .
- 3 Input any text message to go along with the forwarded message, then press .

### \*SAVE MEDIA

- 1 Select Save Media to save the picture from the received message to the media gallery folder.  
(Please refer to page 110 "NOTE" for more details.)

### SAVE TO CONTACT

- 1 Select Save to Contact to save the contact information from the message to your contact list.

109

# INBOX

## SAVE TO SAVED

- 1 Select Save to Saved to save the message in your phone.

## SAVE TO QUICK TEXT

- 1 Select Save to Quick Text to save the received text message to the Quick Text list.

## \*BLOCK SENDER

- 1 Select Block Sender to block all incoming messages from the sender of the message.

## LOCK & UNLOCK

- 1 Select Lock & Unlock to lock or unlock the message.
- 2 Select "Lock" to lock the message or "Unlock" to unlock the message, then press **OK**.



 
- *\*\*Photo Info\* and \*\*Play Slide Show\* menus appear only when you receive a photo message.*
- *\*\*Save Media\* menu appears only when you receive a photo message or EMS message.*
- *\*\*Block Sender\* menu appears only when you receive a text message.*

# OUTBOX

Manages sent text messages or messages waiting to be sent.

## CHECKING SENT TEXT MESSAGES

- 1 Press **[MENU]** **[3M]** **[5M]** or **[RE]** **[5M]**.

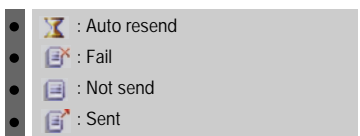

- 2.1. Select a message, then press **OK**.  
The text message is displayed.
- 2.2. To erase message, press **[...]** **[ERASE]**.

- 3 Press **[MENU]** for more options.

## \*PHOTO INFO

- 1 Select Photo Info to display the photo message information.  
(Please refer to page 112 "NOTE" for more details.)

## RESEND

- 1 Select Resend to resend the message.



## OUTBOX

### EDIT MESSAGE

- 1 Select Edit Message to edit the message.
- 2 Input a text message, then press **OK**.
- 3 Input the phone number, then press **OK**.

### SAVE TO CONTACT

- 1 Select Save to Contact to save the number to your contacts list.

### SAVE TO SAVED

- 1 Select Save to Saved to save the message in your phone.

### LOCK & UNLOCK

- 1 Select Lock & Unlock to lock or unlock the message.
- 2 Select "Lock" to lock the message or "Unlock" to unlock the message, then press **OK**.

### \*STATE

- 1 Select State to display the status of the message.



- *\*\*Photo Info\* menus appear only when you receive a photo message.*
- *\*\*State\* menu appears only when you receive a text message.*

## WEB ALERTS

### WEB ALERTS

- 1 Press **[MENU]** or **[GO]**.
- 2 To select GoTo, press **[\*\*\*]**.  
To select Erase Message, press **[\*\*]**.
- 3 The Web Alerts message will be displayed.

- **[Lv]** : Read Message.
- **[ ]** : Unread Message.
- **[⚡]** : Displays the remaining text.
- **GoTo** : Connecting to Selected Site.
- **Erase** : Erase Selected Message.

# SAVED

# QUICK TEXT

## SAVED

Manages saved messages from the Inbox/Outbox.

- 1 Press [MENU] or .
- 2 2.1. Select a text message then press .  
The text message is displayed.  
2.2. To erase message, press [ERASE].
- 3 Press [MENU].
- 4 If the text message is saved from the "Inbox" menu, this screen will be displayed.

- To select inbox menu : \*Photo Info, \*Play Slide Show, Reply, Reply With Copy, Forward, Save to Quick Text, \*Save Media, Block Sender, Save to Contact, Lock & Unlock

If the text message is saved from the "Outbox" menu, this screen will be displayed.

- To select outbox menu : \*Photo Info, Resend, Edit Message, Save to Contact, Lock & Unlock, \*State

- 5 Select one by pressing .



- *\*\*Photo Info\* or \*Play Slide Show\* menu only appears when you receive a photo message.*
- *\*\*Save Media\* menu appears only when you receive a photo message or EMS message.*
- *\*\*State\* menu appears only when you receive a text message.*

## QUICK TEXT

To edit the quick text message you have saved:

- 1 Press [MENU] or .
- 2 2.1. Select a message from the list.  
Press [MENU].  
2.2. To add a new quick text message, press [ADD NEW]. To edit the quick text message you have selected, press [EDIT].
- 3 To erase the saved quick text message, press [ERASE].

## ERASE ALL

### ERASE MESSAGES

- 1 Press [MENU] or .
- 2 1. To erase all the inbox messages, press .
  - Old Inbox : To erase all messages already read. (However, the locked Message(s) will not be deleted).
  - Entire Inbox : To erase all messages.
 2. To erase all the outbox messages, press .
 3. To erase the saved messages, press .
- 3 Select "OK" or "Cancel" with [OK] or [CANCEL].

## SETTINGS

Manages messaging features through various features.

### AUTO SAVE

#### SAVE SENT MSG

- 1 Press [MENU] or .
- 2 Press . Select either "Off", "On" or "Prompt" with the Navigation Key.
- 3 Press .

#### PHOTO RECEIVE

- 1 Press [MENU] or .
- 2 Press . Select "Automatic" or "Prompt" with Navigation Key.
- 3 Press .

## SETTINGS

### AUTO ERASE

Automatically erases inbox/outbox messages when new messages arrive.

#### INBOX

- 1 Press **[MENU]** **[3]** **[0]** **[2]** or **[MENU]** **[0]** **[2]** .
- 2 Press **[ENT]** .  
Select "Disable" or "Enable" with Navigation Key.
- 3 Press **[OK]** .

#### OUTBOX

- 1 Press **[MENU]** **[3]** **[0]** **[2]** or **[MENU]** **[0]** **[2]** .
- 2 Press **[ENT]** .  
Select "Disable" or "Enable" with Navigation Key.
- 3 Press **[OK]** .

## SETTINGS

### DEFAULT CALLBACK

Edits a default callback number so that the recipient can callback or reply.

- 1 Press **[MENU]** **[3]** **[0]** or **[MENU]** **[0]** .
- 2 Press **[3]** .  
Input a callback number, then press **[OK]** .

- You can look it up from the phone book by pressing **[\*]** **[FIND]** .

### EDIT VOICE CALLBACK

- 1 Press **[MENU]** **[3]** **[0]** or **[MENU]** **[0]** .
- 2 Press **[4]** .  
Input a new voice callback number or edit voice call back number.

- You can look it up from the phone book by pressing **[\*]** **[FIND]** .

- 3 Press **[OK]** .

### REMIND

- 1 Press **[MENU]** **[3]** **[0]** or **[MENU]** **[0]** .
- 2 Press **[5]** .  
Select "On" or "Off" with the Navigation Key.
- 3 Press **[OK]** .

## SETTINGS

### EDIT SIGNATURE

Create a signature that can be automatically inserted at the end of a message.

- 1 Press **[MENU]** **[3]** **[0]** **[2]** or **[9]** **[0]** **[2]**.
- 2 Press **[6]**.  
To input "Signature", put the cursor on Edit Signature, then enter Signature Edit window by using right or left direction keys.
- 3 To activate Signature function, put the cursor on Insert Signature, then select "On" by using right or left direction keys. To deactivate Signature function, select "Off".
- 4 Press **[OK]**.

### DIRECT VIEW

If the Direct View is set to on, the user will be able to view the message by pressing the read key. If the Direct View is set to off, the user can view the message by entering SMS Menu-> Inbox.

- 1 Press **[MENU]** **[3]** **[0]** **[2]** or **[9]** **[0]** **[2]**.
- 2 Press **[7]**.  
Select "On" or "Off" with the Navigation Key.
  - On : Set to read msg without entering inbox in SMS menu.
  - Off : Set to read msg after entering inbox in SMS menu.
- 3 Press **[OK]**.

## SETTINGS

### ENTRY MODE

Sets an Entry Mode as a default. The T9 mode indicator will appear whenever the input mode is activated if the T9 mode is the default.

- 1 Press **[MENU]** **[3]** **[0]** **[2]** or **[9]** **[0]** **[2]**.
- 2 Press **[8]**.  
Select "Alpha Mode" or "T9 Mode" with the Navigation Key.
- 3 Press **[OK]**.

### BLOCK OR UNBLOCK

- 1 Press **[MENU]** **[3]** **[0]** **[2]** or **[9]** **[0]** **[2]**.
- 2 Press **[9]**.  
Select "Block", "Unblock" or "View List of Blocked Address" with the Navigation Key.

- Block : Enter the address to block.
- Unblock : Enter the address to remove from block.
- View List of Blocked Address : Display the blocked list on LCD.

- 3 Press **[OK]**.

MEMO

# Chapter 7

## WEB BROWSING

This chapter addresses Internet services and web browsing.  
For more detailed information contact your service provider.

- START INTERNET BROWSER
- BROWSER MENU

CH  
6

CH  
7

## START INTERNET BROWSER

### ACCESS THE INTERNET

- To start your Internet browser and access websites through your wireless handset, press [MENU] .

## BROWSER MENU

The browser menu lists the actions necessary to operate the browser. To access press [MENU] .

### HOME

When the home item is selected from the browser menu, the phone displays the home page.

- To display the homepage, press [MENU] , then press .

### BACK

- To return to the previous page, press [MENU] , then press .

### FORWARD

- To forward to the next page, press [MENU] , then press .

## BROWSER MENU

### REFRESH

Selecting the refresh item from the browser menu refreshes the current page.

- To select "Refresh", press [MENU] , then press .

### HISTORY

When the history item is selected from the browser menu, the browser is displayed with the browser version and copyright information. The device layer version is also displayed.

- To select "History", press [MENU] , then press .

### ADDRESS

Selecting the "Address" action displays the URL of the current page.

- To select "Address", press [MENU] , then press .

### CLEAR MEMORY

- To clear browser memory, press [MENU] , then press .

### SETTINGS

- To select "Settings", press [MENU] , then press .

## BROWSER MENU

### ADVANCED

Selecting the advanced item in the browser menu displays the advanced menu items.

1 To select "Advanced", press [MENU] , then press .

### EXIT

1 To exit browser, press [MENU] , then press .

# Chapter 8

## SAFETY AND WARRANTY

This chapter addresses the safety guidelines and precautions to follow when operating your phone. Before operating your phone, please be aware of all the safety details.

This chapter contains the terms and conditions of services and the warranty for your phone. Please review them thoroughly.

- SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES
- SAFETY INFORMATION FOR FCC RF EXPOSURE
- SAR INFORMATION
- FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES
- FDA CONSUMER UPDATE
- PROTECT YOUR WARRANTY
- 12 MONTH LIMITED WARRANTY



## SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

*Read This Information Before Using Your Handheld  
Portable Cellular Telephone*

### EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*  
NCRP Report 86 (1986) \*  
ICNIRP (1996) \*

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

### ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

1\* : American National Standards Institute.  
2\* : National Council on Radiation protection and measurements.  
3\* : International Commission on Nonionizing Radiation Protection.

## SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

### DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions so require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



**WARNING:** Failure to follow these instructions may lead to serious personal injury and possible property damage.

## SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

### ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers :

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

### OTHER MEDICAL DEVICES

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

### POSTED FACILITIES

Turn your phone OFF where posted notices so require.

130

## SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

### OTHER SAFETY GUIDELINES

#### AIRCRAFT

FCC and Transport Canada Regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

#### BLASTING AREAS

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

#### POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.







Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

131

## SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

### PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

-  DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
-  DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using, lay down the unit to avoid possible damage due to instability.
-  DO NOT expose this equipment to rain or spilled beverages.
-  DO NOT use unauthorized accessories.
-  DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
-  DO NOT short-circuit the battery terminals with metal items etc.

## SAFETY INFORMATION FOR FCC RF EXPOSURE



**WARNING! Read this Information before using**

### CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

### BODY-WORN OPERATION

This device was tested for typical body-worn operations with the back of the phone kept 2.0 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 2.0 cm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

## SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \* Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.08 W/Kg and when worn on the body, as described in this user guide, is 0.760W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on PP4PN-218.

## SAR INFORMATION

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>.

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



## FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with "normal usage" while using their hearing aid with the particular wireless phone. "Normal usage" in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

### For information about hearing aids and digital wireless phone

- **Fcc Hearing Aid Compatibility and Volume Control**  
<http://www.fcc.gov/cgb/dro/hearing.html>
- **Gallaudet University, RERC**  
<http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm>
- **Self Help for Hard of Hearing People Inc. [SHHH]**  
[www.hearingloss.org/hat/TipsWirelessPhones.htm](http://www.hearingloss.org/hat/TipsWirelessPhones.htm)
- **The Hearing Aid Compatibility FCC Order**  
[http://hraunfoss.fcc.gov/edocs\\_public/attachmatch/FCC-03-168A1.pdf](http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf)

## FDA CONSUMER UPDATE



U.S. Food and Drug Administration -Center for Devices and Radiological Health Consumer Update on Wireless Phones

### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### 2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function;

and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some inter-agency working group activities, as well. FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

### 3. What kinds of phones are the subject of this update?

The term "wireless phone" refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones.

## FDA CONSUMER UPDATE

These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

### 4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

### 5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

### 6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world.

## FDA CONSUMER UPDATE

The Project has also helped develop a series of public information documents on EMF issues. FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

### 7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineers (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

### 8. What has FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

### 9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

## FDA CONSUMER UPDATE

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

### 10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

### 11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a "compatible" phone and a "compatible" hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

### 12. Where can I find additional information?

- For additional information, please refer to the following resources:
- FDA web page on wireless phones (<http://www.fda.gov/cdrh/phones/index.html>)
  - Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)
  - International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)
  - World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)
  - National Radiological Protection Board (UK) (<http://www.nrp.org.uk>)

## PROTECT YOUR WARRANTY

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

"Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling misuse, neglect or accident".

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Audiovox product. Be careful. Some of these products may not be compatible to use with your Audiovox product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-Audiovox accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Audiovox product.

# UTSTARCOM

### UTSTARCOM/AUDIOVOX COMMUNICATIONS

555 Wireless Blvd., Hauppauge, New York 11788, 800-229-1235  
16808 Marquardt Avenue, Cerritos, California 90703, 562-802-5100  
UTStarcom Canada Company  
5155 Spectrum Way, Unit #5, Mississauga, Ontario  
Canada L4W 5A1, 800-465-9672

## 12 MONTH LIMITED WARRANTY

UTStarcom/Audiovox Communications (the Company) warrants to the original retail purchaser of this Audiovox handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) months period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, key pad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing.



## 12 MONTH LIMITED WARRANTY

In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 905-712-9299).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

**IN USA :** UTStarcom/Audiovox Communications  
555 Wireless Blvd.  
Hauppauge, NY 11788  
(800) 229-1235

**IN CANADA :** UTStarcom Canada Company  
5155 Spectrum Way, Unit #5  
Mississauga, Ontario L4W 5A1  
(800) 465-9672