

WELCOME

Thank you for choosing the PN-E330. This exceptional new phone boasts an impressive array of features that are versatile, easy to use and allows you to enjoy some of the hottest mobile services available today.

All Digital and supporting the high-speed communications provided by the CDMA2000 1xEVDO network system, this phone offers lightning fast downloads for enhanced multimedia, web browsing and data services. Two LCD displays present rich full-color content on either the large inner main display screen, or the smaller outer sub-display screen. A built-in 1.3 Mega Pixel camera with embedded flash and video capture, a WAP 2.0 browser, GPS technology for quick location identification when calling 911, a built-in speaker phone and voice activated dialing for easy hands-free operation, two-way short, enhanced or multimedia messaging services so you can send and receive messages in a variety of forms, T9 predictive text input for effortless text entries and a USB port for expanded data capabilities complete this nimble device.

In addition, this phone is equipped with Video on Demand and Music on Demand capabilities that allow you to select and play video or audio clips from a mobile entertainment library that is accessible right from your phone.

These features give you the most of exciting Nokia services like V Cast, which allows you to download full motion video clips of breaking news, weather, sports highlights, entertainment clips and 3D games, or Get It Now, which allows you to download, ringtones, ringback tones, wallpapers, games and provides Picture Caller ID.

So unleash all the powerful features of your new PN-E330 and enjoy the latest in wireless technology and mobile entertainment, all from this one awesome handset.

TABLE OF CONTENTS

CHAPTER 1. BEFORE USING YOUR PHONE	5
INSIDE THE PACKAGE	6
HANDSET DESCRIPTION	7
DISPLAY INDICATORS	9
BATTERY USAGE	11
BATTERY INSTALLATION	11
BATTERY REMOVAL	12
BATTERY CHARGING	13
BATTERY HANDLING INFORMATION	14
DOs.....	14
DON'Ts.....	14

CHAPTER 2. BASIC OPERATION	15
TURNING THE PHONE ON / OFF	16
TURNING THE PHONE ON	16
TURNING THE PHONE OFF	16
ACCESSING THE MENU	17
MENU SUMMARY	18
BASIC FUNCTIONS	20
MAKING A CALL	20
ANSWERING CALLS	21
SPEAKER PHONE	21
VIBRATE ON/OFF MODE	21
CALLER ID FUNCTION	21
WAIT/PAUSE FEATURE	22
ANSWERING A CALL	22
3-WAY CALLING	23
CALL WAITING FUNCTION	23
ADJUSTING VOLUME	24
MUSIC PLAYER	24
DURING A CALL	25
MUTE (UNMUTE)	25
SEND TXT MSG	25
CONTACTS	25
RECENT CALLS	25
TO PHONE/TO BLUETOOTH	26
VOICE PRIVACY	26
MAKING AN EMERGENCY CALL	27
911 IN LOCK MODE	27
911 USING ANY AVAILABLE SYSTEM	27
USING THE TRANS-FLASH CARD	28
INSTALLING THE TRANS-FLASH CARD	28
REMOVING THE TRANS-FLASH CARD	28
HOW IS MUSIC TRANSFERRED?	29

CHAPTER 3. MEMORY FUNCTION	31
STORING A PHONE NUMBER	32
ENTERING LETTERS, NUMBERS & SYMBOLS	33
STANDARD INPUT MODE	34
WORD INPUT MODE	35
NUMERIC MODE	36
SYMBOL MODE	36
MAKING A CALL THROUGH THE CONTACT LIST	37
ONE-TOUCH/TWO-TOUCH DIALING	37
ONE-TOUCH DIALING:	37
TWO-TOUCH DIALING:	37

CHAPTER 4. MENU FUNCTION	39
CONTACTS	40
NEW CONTACT	40
CONTACT LIST	41
GROUPS	42
ADD NEW GROUP	42
ASSIGN PHONE NUMBER TO GROUP	42
CHANGE GROUP NAME	43

TABLE OF CONTENTS

SEND TXT MSG. TO A GROUP	43
SEND PIX MSG. GROUP	44
SEND FLIX MSG. GROUP	45
ERASE GROUP	46
SPEED DIALS	47
RECENT CALLS	48
MISSED	48
RECEIVED	49
DIALED	50
ALL	51
VIEW TIMERS	52
SETTINGS	53
SOUNDS SETTINGS	53
MASTER VOLUME	53
CALL SOUNDS	54
ALERT SOUNDS	55
KEYPAD VOLUME	57
EARPIECE VOLUME	57
SERVICE ALERTS	58
POWER ON/OFF	59
ALARM SOUNDS	60
DISPLAY SETTINGS	61
BANNER	61
BACKLIGHT	62
CONTRAST	63
WALLPAPER	63
DISPLAY THEMES	65
DIAL FONTS	65
CLOCK FORMAT	66
PHONE SETTINGS	67
STANDALONE MODE	67
SET SHORTCUT KEY	67
LANGUAGE	68
LOCATION	68
SECURITY	69
SYSTEM SELECT	70
NAM SELECT	71
CALL SETTINGS	72
ANSWER OPTIONS	72
AUTO RETRY	72
TTY MODE	73
ONE TOUCH DIAL	73
VOICE PRIVACY	74
VOICE SERVICES	74
DTMF TONES	77
BLUETOOTH	78
BLUETOOTH ON/OFF	78
ADD NEW DEVICE	78
MEMORY	80
SAVE OPTIONS	80
PHONE MEMORY	80
CARD MEMORY	81
PHONE INFO	82
MY NUMBER	82
SW VERSION	82
ICON GLOSSARY	83
TOOLS	84
CALCULATOR	84
CALENDAR	85
ADD NEW	85
VIEW PLAN LIST	86
ALARM CLOCK	87
WORLD CLOCK	88
NOTEPAD	89
ADD MEMO	89
VIEW MEMO	89
STOP WATCH	90

TABLE OF CONTENTS

MY ACCOUNT	91
MY ACCOUNT	91

CHAPTER 5. GET IT NOW.....	93
GET IT NOW	94
GET TUNES & TONES	94
GET VCAST MUSIC	94
GET NEW RINGTONE.....	95
RECORDING NEW TONES	95
MY RINGTONES	96
MY MUSIC	97
MY SOUNDS	97
SYNC MUSIC	98
MANAGE MUSIC	99
GET PIX & FLIX	100
GET V CAST VIDEO	100
GET NEW PIX	100
MY PIX	101
MY FLIX	102
PIX PLACE	103
TAKE PIX	104
RECORD FLIX	106
GET FUN & GAMES.....	108
DOWNLOADING NEW FUN & GAMES	108
PLAYING DOWNLOADED FUN & GAMES	108
GET NEWS & INFO	108
CONNECTING NEWS & INFO	108
GET GOING	109
CONNECTING GET GOING	109
GET EXTRAS	109
CONNECTING GET EXTRAS.....	109
GET IT NOW INFO.....	109

CHAPTER 6. VOICE MAIL, TXT, PIX, FLIX MESSAGING	111
WHEN A NEW MESSAGE ARRIVES	112
NEW MSG	113
SEND NEW TXT MESSAGE	113
SEND NEW PIX MESSAGE	114
SEND NEW FLIX MESSAGE	116
INBOX	118
PLAY AGAIN	118
REPLY	118
ERASE INBOX.....	118
REPLY W. COPY	119
FORWARD	119
SAVE PICTURE (MMS PIX)	119
SAVE VIDEO (MMS VIDEO)	119
SAVE SOUND	120
SAVE GRAPHIC	120
SAVE QUICK TEXT	120
TO CONTACTS	120
LOCK/UNLOCK	120
MESSAGE INFO	120
SENT	121
FORWARD	121
PLAY AGAIN	121
RESEND	122
ERASE	122
ERASE SENT	122
TO CONTACTS	122
LOCK/UNLOCK	122
SAVE QUICK TEXT	122
MESSAGE INFO	122
DRAFTS	123
SEND	123
TO CONTACTS	123

TABLE OF CONTENT

LOCK/UNLOCK	123
ERASE DRAFTS	123
VOICEMAIL	124
E-MAIL	125
MOBILE IM	126
GET NEW	126
MOBILE IM	126
CHAT	127
ERASE ALL	128
SETTINGS	129
ALL MSG SETTINGS	129
AUTO SAVE	129
AUTO ERASE	129
QUICK TEXT	130
VOICEMAIL#	130
ENTRY MODE	131
CALLBACK #	131
ALL MESSAGE SIGNATURE	132
TXT MSG SETTINGS	133
TXT AUTO VIEW	133
TXT MESSAGE SIGNATURE	133
PIX-FLIX MSG SETTINGS	134
AUTO RECEIVE	134
PIX-FLIX MESSAGE SIGNATURE	134

CHAPTER 7. MOBILE WEB 2.0	135
STARTING INTERNET BROWSER	136
LAUNCHING MOBILE WEB 2.0	136
BROWSER MENU	136
VZW HOME	136
ADD FAVORITE	136
SEARCH	137
GO TO URL	137
SHOW URL	137
BACK	137
MANAGE MEMORY	137
SETTINGS	138
ADVANCED	139
EXIT	139

CHAPTER 8. SAFETY AND WARRANTY	141
SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES	142
DRIVING SAFETY	143
ELECTRONIC DEVICES	144
OTHER SAFETY GUIDELINES	145
PRECAUTIONS	146
SAFETY INFORMATION FOR FCC RF EXPOSURE	147
CAUTIONS	147
SAR INFORMATION	148
FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES	150
FDA CONSUMER UPDATE	152
PROTECT YOUR WARRANTY	156
12 MONTH LIMITED WARRANTY	157
ADDITIONAL SAFETY INFORMATION	158
OPERATING ENVIRONMENT	158
MEDICAL DEVICES	158
VEHICLES	159
POTENTIALLY EXPLOSIVE ENVIRONMENTS	160
EMERGENCY CALLS	160
CERTIFICATION INFORMATION (SAR)	161
HEARING AID COMPATIBILITY (HAC)	162
TECHNICAL INFORMATION	162

"Licensed by QUALCOMM Incorporated under one or more of the following Patents : U.S.Patent No. 4,901,307 U.S.Patent No. 5,056,109 U.S.Patent No. 5,099,204 U.S. Patent No. 5,101,501 U.S. Patent No. 5,103,459 U.S. Patent No. 5,107,225 U.S.Patent No. 5,109,390."

Chapter 1

BEFORE USING YOUR PHONE

This chapter provides important information about using the PN-E330 including:

- INSIDE THE PACKAGE
- HANDSET DESCRIPTION
- BATTERY USAGE
- BATTERY HANDLING INFORMATION

INSIDE THE PACKAGE

This package should include all items pictured below. If any are missing or different, immediately contact the retailer where you purchased the phone.



 
Handset



 
AC Travel Charger



User Manual



Handstrap

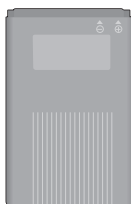 


Standard Battery

 
HANDSET DESCRIPTION


The PN-E330 weighs 4 ounces. The dimensions are 3.5" x 1.9" x .9".



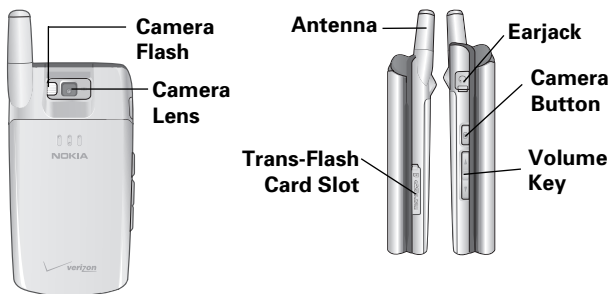



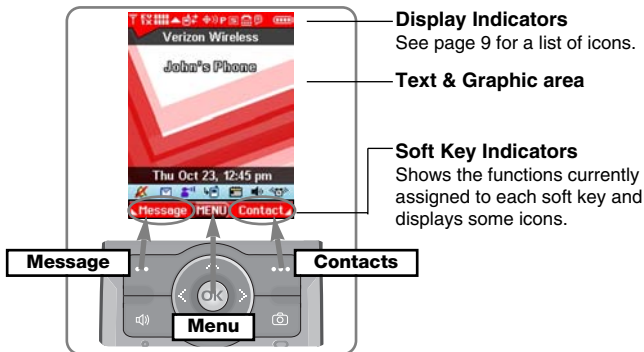


ICT 1



HANDSET DESCRIPTION



<div style="border: 1px solid black; padding: 2px; display: inline-block;">Shortcut Key 1</div> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 2px; display: inline-block;">Shortcut Key 3</div>  <div style="border: 1px solid black; padding: 2px; display: inline-block;">Shortcut Key 4</div> </div> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-top: 5px;">Shortcut Key 2</div>	<p>In Idle Mode</p> <ul style="list-style-type: none"> - Press Up for Shortcut Key 1, Down for Shortcut Key 2, Right for Shortcut Key 4 and Left for Shortcut Key 3. <p>Inside the menu</p> <ul style="list-style-type: none"> - Within a menu, press the Navigation Key UP/DOWN/LEFT/RIGHT to scroll through options or press OK to select the function.
---	---

-  Press to make or receive a call.
-  Press to turn the phone on/off, to terminate a call or to return to the initial page.
-  (Left Soft Key) Press to access the message menu or function displayed on bottom line.
-  (Right Soft Key) Press to access contacts menu or function displayed on bottom line.
-  Press to turn Speakerphone On or Off.
-  Short/Long press : Go to Take PIX/FLIX Viewfinder.
-  Press to clear a digit from the display or to return to the previous page. Long press to turn on voice recognition mode.
-  A twice press shall display a plus "+".
-  Press and hold to enter Vibrate On/Off.

HANDSET DESCRIPTION

DISPLAY INDICATORS

IC
1

Signal Strength - Current signal strength: the more lines, the stronger the signal.



EV : The “EV” service mode indicator shall display with/ without a progressive bar when a 1x-EVDO device has only acquired 1x-EVDO service (e.g., roaming to a 1x- EVDO service area only).



EV & 1X : The “EV” and “1X” signal strength indicators shall display with/without a progressive bar when a 1x-EVDO device has acquired both 1x-RTT CDMA2000 and 1x-EVDO services.



EV & D : The “EV” and “D” signal strength indicators shall display with/without a progressive bar when a 1x-EVDO device has acquired both 1x-EVDO service and CDMA IS-95 service.



Standalone

The mode that restricts transmitting and receiving inside the airplane.



Roaming

Phone is out of home area.



Voice



Data Active



Dormant

Phone is in a dormant state during a data call. Phone reverts to Dormant mode when there hasn't been activity on a page for some time – the connection is still active and you can make and receive calls.



No Service

Phone cannot receive a signal from the system.



GPS Icon

Location Service of your phone is disabled/enabled.



Voice Privacy

Indicates “Voice Privacy” mode.



SSL (Secured Socket Layer)

Indicating that secure communication between client and server has been established during data communication using encryption.

HANDSET DESCRIPTION



TTY
TTY mode is active



Bluetooth
Indicates Bluetooth mode.



BluetoothActive
Indicates Bluetooth Active mode.



BluetoothConn
Indicates Bluetooth Connect.



Battery
Battery charging level – the more blocks, the stronger the charge.



All Sound Off
Ringer volume is set to off.



Alarm Only
Phone will alert you with an alarm tone when call is received.



Vibrate Only
Phone will vibrate when call is received.



New Messages
New message or voice message.



Voicemail
Indicates you have voicemail messages.



Missed Calls



Calendar Appointment
Event Alarm is active.



Speakerphone
Phone is in speakerphone mode.

 


Alarm
Appears when either a calendar or an alarm is set.

BATTERY USAGE

BATTERY INSTALLATION

 
- 1** Place the battery on the back of the phone so the metal contacts match up on the battery and in the battery cavity.
- 2** Push the battery down into the battery cavity until it locks into place.
- 3** Place the battery cover over the battery and slide up into place.

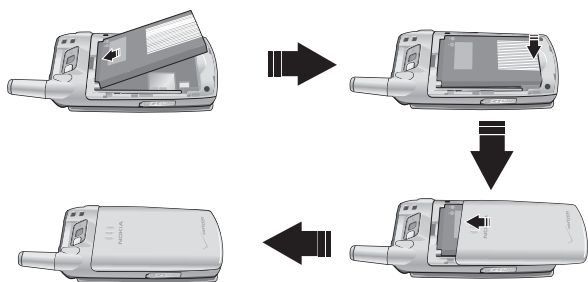

BATTERY USAGE

BATTERY REMOVAL

- 1 Push down the release latch button, then slide the battery cover off the phone.
- 2 Lift the battery up and out of the battery cavity from the down of the battery.

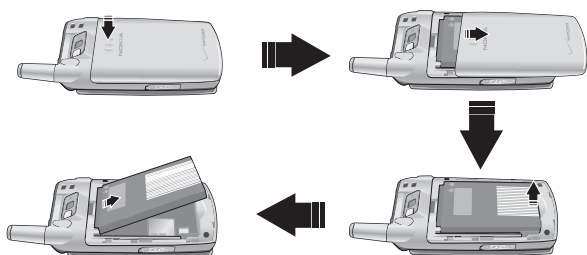 


If the battery is not correctly placed in the compartment, the handset will not turn on and/or the battery may detach during use.

BATTERY USAGE

BATTERY CHARGING

- 1 Plug the AC Charger into a standard outlet.
- 2 Plug the other end of the AC Charger into the bottom of your phone. The battery must be installed onto the phone.

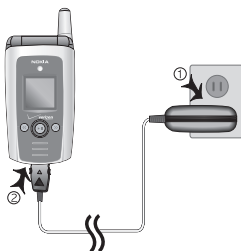

- When you charge the battery with the phone power off, you will see a charging status screen. You cannot operate the phone until it is powered on.
- The battery is not charged at the time of purchase.
- Fully charge the battery before use.
- It is more efficient to charge the battery with the handset powered off.
- The battery must be connected to the phone in order to charge it.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.

BATTERY HANDLING INFORMATION

DOs

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep batteries in a temperature between 41°F (5°C) and 95°F (35°C). If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Completely drain the battery before recharging. It may take one to four days to completely drain.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly dispose of the battery according to local laws.

DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't accidentally short circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery.
- Don't leave the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire.

Chapter 2


BASIC OPERATION

This chapter addresses and explains the basic features of your phone including:

- TURNING THE PHONE ON / OFF
- ACCESSING THE MENU
- MENU SUMMARY
- BASIC FUNCTIONS
- DURING A CALL
- MAKING AN EMERGENCY CALL
- USING THE TRANS-FLASH CARD

TURNING THE PHONE ON / OFF


TURNING THE PHONE ON

Press and hold  until your "Power On" logo appears and the tone sounds.



- If "Enter Lock Code" appears on the display enter your 4-digit password to unlock your phone.
- The default password is the last 4 digits of your phone number.

TURNING THE PHONE OFF

 
Press and hold  until your "Power Off" logo appears.



- Immediately change or recharge the battery when "BATTERY LOW" appears on the display. Memory may possibly be damaged if the phone turns off due to the battery completely draining.
- Turn the phone off before removing or replacing the battery. If the phone is on, unsaved data may be lost.

ACCESSING THE MENU

Your phone can be customized via the menu. Each function can be accessed by scrolling with the Navigation Key or by pressing the number that corresponds with the menu item.

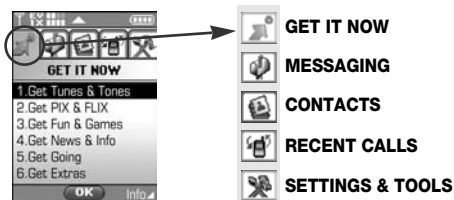

- 1** To access the menu in the idle mode, press [MENU].
- 2** To scroll through the menu use the Navigation Key.
- 3** To return to the previous page, press . To exit the current menu and return to the idle mode, press .
- 4** Press the Navigation Key to enter a function when its main page is displayed or press its assigned number to have direct access to the function.



Hotkey

In idle mode, move the Navigation Key as follows to access these functions:

- Upward movement : Shortcut Key 1
- Downward movement : Shortcut Key 2
- Rightward movement : Shortcut Key 4
- Leftward movement : Shortcut Key 3

MENU SUMMARY

GET IT NOW



1. Get Tunes & Tones

2. Get PIX & FLIX

3. Get Fun & Games
4. Get News & Info
5. Get Going
6. Get Extras

MESSAGING



1. New Msg

2. Inbox
3. Sent
4. Drafts
5. Voicemail
6. E-mail
7. Mobile IM

8. Chat

CONTACTS



1. New Contact
2. Contact List
3. Groups
4. Speed Dials

RECENT CALLS



1. Missed
2. Received
3. Dialed
4. All
5. View Timers

SETTINGS & TOOLS



1. My Account
2. Tools

3. Sounds Settings

1. Get V CAST Music
2. Get New Ringtones
3. My Ringtones
4. My Music
5. My Sounds
6. Sync Music
7. Manage Music

1. Get V CAST Video
2. Get New PIX
3. My PIX
4. My FLIX
5. PIX Place
6. Take PIX
7. Record FLIX
1. Get New App.

1. Get New App.
1. Get New App.

1. TXT Msg
2. PIX Msg
3. FLIX Msg

1. Get New App.
Mobile IM

1. Calculator
2. Calendar
3. Alarm Clock

4. World Clock
5. Notepad
6. Stop Watch

1. Master Volume
2. Call Sounds

3. Alert Sounds

1. Get New App.
1. Get New Ringtones
1. Get V CAST Music
1. Record New

1. Get New App.

1. Alarm 1
2. Alarm 2
3. Alarm 3

1. Call Ringtone
2. Call Vibrate
1. TXT Message
2. PIX-FLIX Msg
3. Voicemail Msg

MENU SUMMARY

	<ul style="list-style-type: none"> 4. Keypad Volume 5. Earpiece Volume 6. Service Alerts 	<ul style="list-style-type: none"> 1. ERI 2. Minute Beep 3. Call Connect
	<ul style="list-style-type: none"> 7. Power On/Off 	<ul style="list-style-type: none"> 1. Power On Sound 2. Power Off Sound
	<ul style="list-style-type: none"> 8. Alarm Sounds 	<ul style="list-style-type: none"> 1. Alarm Tone 2. Alarm Vibrate
4. Display Settings	<ul style="list-style-type: none"> 1. Banner 2. Backlight 3. Contrast 4. Wallpaper 5. Display Themes 6. Dial Fonts 7. Clock Format 	<ul style="list-style-type: none"> 1. Personal 2. ERI Banner 1. Display 2. Keypad
		<ul style="list-style-type: none"> 1. Main Screen 2. Front Screen
5. Phone Settings	<ul style="list-style-type: none"> 1. Standalone Mode 2. Set Shortcut Key 	<ul style="list-style-type: none"> 1. Main Clock 2. Front Clock
	<ul style="list-style-type: none"> 3. Language 4. Location 5. Security 	<ul style="list-style-type: none"> 1. Left Key 2. Up Key 3. Right Key 4. Down Key 5. Reset All
	<ul style="list-style-type: none"> 6. System Select 7. NAM Select 	<ul style="list-style-type: none"> 1. Lock Mode 2. Edit Code
6. Call Settings	<ul style="list-style-type: none"> 1. Answer Options 2. Auto Retry 3. TTY Mode 4. One Touch Dial 5. Voice Privacy 6. Voice Services 	<ul style="list-style-type: none"> 1. Auto NAM 2. Change NAM
	<ul style="list-style-type: none"> 7. DTMF Tones 	<ul style="list-style-type: none"> 1. Voice Dial 2. Voice Setting 3. Train Words
7. Bluetooth	<ul style="list-style-type: none"> 1. Add New Device 	
8. Memory	<ul style="list-style-type: none"> 1. Save Options 2. Phone Memory 3. Card Memory 	
9. Phone Info	<ul style="list-style-type: none"> 1. My Number 2. SW Version 3. Icon Glossary 	

BASIC FUNCTIONS

MAKING A CALL

1 Enter a phone number.



To modify the phone number you have entered :

- To erase one digit at a time press .
- To erase the entire number, press and hold .

Phone number display in contact list

If there is no name in the Contact's name field, the highest priority phone number is displayed. If no phone numbers are stored, the email address appears.

All matching entries will be displayed. To call the selected number, press .

To send the TXT, PIX or FLIX message with phone number :

- Enter a part of the phone number and then press [OPTIONS], select "New TXT Msg, New PIX Msg or New FLIX Msg". Please refer to page 113, page 114 or page 116 for more details on "Send New TXT Message, Send New PIX Message or Send New FLIX Message".

2 Press .
The indicator, , appears on the display.




- If "CALL FAILED" appears on the display or the line is busy, press or .
- If you activate the "AUTO RETRY" function, the phone will automatically retry. (Refer to page 72).
- When you place or receive a call from stored phone numbers, the name will be displayed.
- There is another way to make a call through the VR mode, which is called "VAD (Voice Activated Dialing)". Please refer to page 74 (Voice Service) for more details.
- If "Enter Lock Code" appears on the display enter your 4-digit password to unlock your phone.


3 To end a call, press .


BASIC FUNCTIONS

ANSWERING CALLS

- 1 When your phone rings or vibrates, press  to answer the incoming call.
(Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any key.)




To ignore incoming calls, press  [IGNORE].


- 2 To end a call, press .

SPEAKER PHONE

The speaker phone feature lets you hear audio through the speaker and talk without holding the phone.

- 1 To activate the speaker phone in idle, answering or calling modes, press .
- 2 The phone returns to normal (Speaker Phone Off) after ending a call or when the phone is turned off and back on.

VIBRATE ON/OFF MODE

To vibrate on/off mode, press and hold .




CALLER ID FUNCTION

Identifies caller by displaying their phone number. If the caller's name and number are already stored in your contact list, name will appear. The caller ID is stored in the recent calls list.







BASIC FUNCTIONS

 



WAIT/PAUSE FEATURE


Pauses are used for automated systems (i.e., voice mail, calling cards). Insert a pause after a phone number and then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.

- 1 To insert a wait/pause, enter a phone number and then press  [OPTIONS]. Select either 2-Sec Pause ("P") or a Wait ("W").
- 2 Press  to dial or  to save. Please refer to page 32 for more details about storing a phone number.

ANSWERING A CALL

- 1 To answer a call, press any key except , , , ,  or .

● To select an answering option, press  [MENU] and then select the "Settings & Tools" by pressing  , select either "Flip Open", "Any Key", "Send Only" or "Auto Answer". If "Send Only" is selected the phone can only be answered by pressing . See page 72 for more information.

- 2 To end the call, press .






In Auto Answer Mode a call is automatically answered after a preset number of ring tones. See page 72 for more details.

BASIC FUNCTIONS

3-WAY CALLING

With 3-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be applied for each of the two calls.



- 1 Enter the number you wish to call and then press .
- 2 Once you have established the connection, enter the second number you wish to call and then press .
- 3 When you're connected to the second party, press  again to begin your 3-Way call.



If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

CALL WAITING FUNCTION

Notifies you of an incoming call when you are already on a call by sounding a beep tone and displaying the caller's phone number.

- 1 To answer another call while on the phone, press . This places the first call on hold. To switch back to the first caller, press  again.



Call Waiting is a system dependent feature. Please contact your service provider for details.

BASIC FUNCTIONS

ADJUSTING VOLUME

Adjusts the volume of the ringer, key beep and speaker.

- 1 Press [MENU] and then select "Settings & Tools" menu, press and then select one of the following.

- **Master Volume** : Controls the ringer volume.
- **Keypad Volume** : Controls the keypad volume.
- **Earpiece Volume** : Controls the earpiece volume.

- 2 Adjust volume and then press to save it.



- To adjust earpiece volume during a call, press the Navigation Key up or down.
- To adjust master volume, press short side up/ down key.
- **In Idle Mode:**
Side Volume Up key Long Press: Volume key shall bring device out of silence.
Side Volume Down key Long Press: Volume key shall bring device into silence mode.

MUSIC PLAYER

Music Player is for playing WMA files saved on the Trans Flash Card. To display music list with the phone closed, press and hold and select a music file with the Navigation Key, press [PLAY], then press [PAUSE] or in order to stop the music player while it is playing with shell closed, it is required to open the shell and press .




Nokia shall not be responsible for any action or liability as a result of any breach of copyright or other misuse of music contents.

DURING A CALL

MUTE (UNMUTE)

The caller cannot hear you or any sounds from your side but you can still hear him.

1 Press  [MUTE].

- To deactivate, press  [UNMUTE].
- The phone will automatically un-mute in Emergency Call or Callback mode.

SEND TXT MSG

Enables you to send a TXT message (SMS) during a call.

1 Press  [OPTIONS] .

CONTACTS

To display the recent call menu for received, dialed, and missed calls.

1 Press  [OPTIONS] .

RECENT CALLS

To select a phone number in your Recent Calls List:

1 Press  [OPTIONS] .

DURING A CALL

TO PHONE/TO BLUETOOTH

This menu appears only when connect Bluetooth Audio Device.

1 Press  [OPTIONS]  .

- **To Phone** : To deactivate bluetooth audio device.
- **To Bluetooth** : To active bluetooth audio device.

VOICE PRIVACY

Increases security during a call. To select "On" or "Off".


1 Press  [OPTIONS]  .

MAKING AN EMERGENCY CALL

The 911 feature automatically places the phone in the Emergency Call Mode when you dial the preprogrammed emergency number, 911. It also operates in the Lock Mode and out of the service area.


911 IN LOCK MODE

The 911 call service is available even in the Lock Mode.

- 1 Enter "911" and then press  .
- 2 The call connects.
- 3 The phone maintain the Emergency Mode for 5 minutes.

- When the call ends, the phone returns to the Lock Mode.

911 USING ANY AVAILABLE SYSTEM

- 1 Enter "911" and then press  .
- 2 The call connects.
- 3 The phone will stay in Emergency Mode for 5 minutes.

- While the phone is in the Emergency Mode for 5 minutes, the phone can receive an incoming call from any available system. However, it can't make a call.

 


The 911 call is not recorded in the recent call list.

USING THE TRANS-FLASH CARD

INSTALLING THE TRANS-FLASH CARD

- 1 Open the card hole cover, and insert the Trans-Flash card like the arrow indicates.

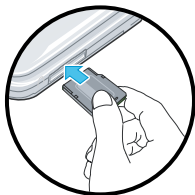

To prevent possible damages, please keep Trans-Flash card slot closed at all times whether Trans-Flash card is inserted or not.

REMOVING THE TRANS-FLASH CARD

- 1 To remove the Trans-Flash card, press and release the card so that it is disengaged from the slot. Then slide it out.



- When you insert the Trans-Flash card, make sure contact terminals face down.
- File names storing each media in the Trans-Flash card are "my-pix" for pictures, "my-flix" for videos.
- Do not remove the Trans-Flash card while reading or writing files. Otherwise it could be damaged.
- Trans-Flash card is recognized as a mobile disk when connected to a personal computer.
- When disconnecting from PC, please remove the USB storage equipment on your PC. Otherwise, the stored files on the Trans-Flash card could be damaged.



To make sure the proper function of removable memory, please use the Trans-Flash card of San Disk.

USING THE TRANS-FLASH CARD

HOW IS MUSIC TRANSFERRED?

	<i>Transfer from PC to Handset via USB Cable</i>	<i>Transfer from PC to Handset via Memory Card</i>
<i>MP3 Songs</i>	Yes. Song will be converted to WMA format	Song will not play on the phone
<i>WMA Songs (Music ripped from CDs, e.g. unprotected content)</i>	Yes	Yes
<i>WMA Songs (Purchased from a Windows Media Player 10 music store such as V CAST Music, e.g. protected content)</i>	Yes	Song will not play on the phone



Music acquired from another online store as part of a subscription service or purchased in another format other than WMA/MP3 (e.g. AAC, AAC+) will not be recognized by V CAST Music devices.

MEMO

2
CIE

Chapter 3









MEMORY FUNCTION

This chapter addresses memory functions including:


- **STORING A PHONE NUMBER**
- **ENTERING LETTERS, NUMBERS & SYMBOLS**
- **MAKING A CALL THROUGH THE PHONE BOOK**

 
STORING A PHONE NUMBER

The phone book stores up to 500 entries.

- 1** Enter phone # and press  [SAVE]. Choose "Create New" or "Update Existing" and press  to Select.
- 2** If "Create New" is selected, the phone number will appear above a list. Press the Navigation Key up or down to choose the type of number you're adding, as indicated by the icon. Press  to select. If "Update Existing" is selected, your contact list is displayed. Choose the entry to add the phone number to, and then press . You will see the phone number updated in the existing list. Press  to select.
- 3** Enter a name.
Please refer to page 33 for more details on entering letters, numbers & symbols.
To change the input mode, press  [Abc].
Press the Navigation Key down to select other options (Mobile1.2, E-mail1.2, etc...).
If entering a phone number, press  [OPTIONS] to select one of the following options:
 - Set Speed Dial
 - Set Voice Dial
 - Set As Default
 - Add Pause
- 4** To store the entry, press  [SAVE].
"CONTACT SAVED" or "CONTACT UPDATED" will be displayed.


 


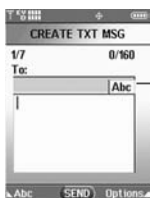

ENTERING LETTERS, NUMBERS & SYMBOLS

The input mode (Alpha editor) will automatically be activated when necessary to enter letters and numbers. As shown below, there are 4 available modes ; Standard input mode (Abc), Input mode (Word), Numeric mode (123), and Symbol mode (Symbols). The input mode indicator appears on the upper right of the display when letters and numbers are entered. To select the desired input mode among the 5 modes below, press  [Abc], and then enter letters and numbers.



Input mode indicator
 Word : Input mode
 Abc : Abc mode
 ABC : ABC mode
 123 : Number mode
 Symbols : Symbol mode

The following illustrates the function assigned to each key in the Alpha Editor.

KEY	FUNCTION
 Abc	Press to change mode. [Word][Abc][ABC][123][Symbols]
 Next	Press to view the next matching word if the highlighted word is not the word you intended.
 Space	Press to accept a word and add a space.
 Caps Lock	Press to select a letter case of the standard text input or text input mode. [Abc], [ABC] and [abc] indicate the standard text input. [Word], [WORD] and [word] indicate the predictive text input.
Clear 	Press to delete a character to the left of the cursor.
Send 	Send the letters and numbers you enter.

ENTERING LETTERS, NUMBERS & SYMBOLS

STANDARD INPUT MODE

Use the digit keys to enter letters, numbers and characters.

1 Enter letters using the key pad as follows:

Key Pad	1 Time	Repetitions 2 times	Repetitions 3 times	Repetitions 4 times	Repetitions 5 times
2ABC	A	B	C	2	A
3DEF	D	E	F	3	D
4GHI	G	H	I	4	G
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

To change the input mode, press [Abc].
When entering special character such as .@?!-, &:' ↵ 1, press repeatedly.

2 To enter a space, press . The cursor will automatically move to the next column.

3 Repeat until letters are entered.
There is a 160-letter limit.

4 To delete one digit, press . To delete the entire entry, press and hold .

5 To change from lowercase to uppercase, press .



Select Abc mode by pressing [Abc].

When you select this mode, the Abc icon appears as a visual confirmation.

- Find the key that corresponds to the letter you want to enter.
- Press it as many times as needed for the letter to appear on the screen.
- To enter the name "John":

Press [] J

Press [] o


 

Press [] h

Press [] n

ENTERING LETTERS, NUMBERS & SYMBOLS



WORD INPUT MODE

The input mode incorporates a built-in-dictionary to determine a word based on the entered characters. A word can be entered more quickly by pressing a key once per character.

- 1 Select the Word mode by pressing  [Abc].
- 2 Press a digit key once to enter the character you want and then enter all the characters to input the word you want.
- 3 To view the next matching word, press .
- 4 To accept the matching word, enter a space and then press .

 
 





 

 
 


To enter a compound word:

- Enter the first part of the word and then press  to accept it.
- Enter the last part of the word and then press  to enter the word.





To enter "Fun fare" in the input mode.

- After you enter the 1st letter, press  [Abc] to select input mode and  to choose the lower case (Word).
- Press    and you will see "Fun" highlighted. Press  to select it.
- Press     and until you see "ease" highlighted. Press  to select the next matching word, you will see "fare" and then enter a space.

ENTERING LETTERS, NUMBERS & SYMBOLS


 
NUMERIC MODE

Allows you to enter numbers.

- 1 Press  [Abc] and scroll down to "123" and press  to change to Numeric Mode.
- 2 To enter a number, press a digit key.

SYMBOL MODE

Allows you to enter symbols.

 
- 1 Press  [Abc] and scroll down to "Symbols" and press  to change to Symbol Mode.
- 2 Select symbol you want to enter with the Navigation Key.

- Use the Navigation Key to view a different line of symbols.

Press [  ],

OR

Press [  ].

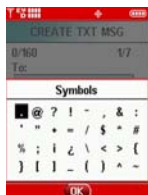

MAKING A CALL THROUGH THE CONTACT LIST

● ONE-TOUCH/TWO-TOUCH DIALING

Ideal for frequently dialed numbers, this feature allows contact entries to be dialed via the keypad with only one or two key presses.

ONE-TOUCH DIALING:

1-9 : Press and hold the number you wish to connect for more than 1 second.

TWO-TOUCH DIALING:

10-22 : Press the first digit and second digits of the memory number short and long respectively.

MEMO

CI
3

Chapter 4

MENU FUNCTION

This chapter addresses accessing the menu and using its functions and features to customize your phone.



- CONTACTS
- RECENT CALLS
- SETTINGS
- TOOLS
- MY ACCOUNT

CONTACTS


Stores up to 500 entries, each of which can be assigned to a group. Entries can be retrieved by name or group.

NEW CONTACT


Adds a new entry.

1 Press  [MENU] and then press  "New Contact".

2 To enter a name or number, use the Navigation Key to select the contact field.

- **PHONE BOOK FIELDS :**
Name/Mobile 1/Home/Work/Email 1/Group/Picture/
Ringtone/Mobile 2/Fax/Email 2.
- Under "Mobile 1", "Mobile 2", "Home", "Work" or "Fax" input the phone number and then by pressing  [OPTIONS], you can choose from the following:
 1. Set Speed Dial
 2. Set Voice Dial
 3. Set As Default
 4. Add Pause

Please refer to page 33 for more details on entering letters, numbers & symbols.

3 3.1 To save the entry, press  [SAVE].


3.2 To return to the previous page, press  .













- For each new contact, at least 1 phone number or email address needs to be saved with the contact. "NO DATA ENTERED" will be displayed if neither have been added.
- Even though entry name is left empty while the phone number is provided, the entry will be saved and displayed with phone number.




CONTACTS

CONTACT LIST

Retrieves an entry by name and calls by simply pressing  . You can review all the entries stored in your contact list or quickly find an entry by entering a name or its character string.

-  Press  [MENU] and then press  "Contact List" or press  [CONTACTS].
-  The list of names in your contacts is displayed alphabetically.
-  Enter a name or its character string or scroll through the list with the Navigation Key. Please refer to page 33 for more details on entering letters, numbers & symbols.
-  To edit the entry, press  [EDIT]. To show detail of the entry, press  [VIEW].

- To use and manage contacts, press  [OPTIONS] then select:
 - New Contact:** To add a New Contact.
 - Erase:** To delete a contact.
 - Send TXT Msg:** To create a TXT message.
 - Send PIX Msg:** To create a PIX message.
 - Send FLIX Msg:** To create a FLIX message.
 - Call:** To call the contact.
 - Erase All:** To delete all contact list.

 



-  To call the selected number, press  [OPTIONS] and then select "Call" or press  .

CONTACTS




GROUPS

Groups allows you to classify phone entries into groups with up to 10 numbers in each group. The existing groups include Family and Work and they cannot be erased or renamed. You can add up to 28 more groups which can be changed or erased.

ADD NEW GROUP





- 1 Press  [MENU] and then press  "Groups".
- 2 To select "New", press  [NEW].
- 3 Input a new group name.
- 4 To save it, press  [SAVE].

ASSIGN PHONE NUMBER TO GROUP








- 1 To assign phone numbers to a Group, select "Add", press  [OPTIONS].
- 2 Select a location and then press  [MARK]. Your contact entries will be displayed in alphabetical order.
- 3 Select the contact for the group and then press  [DONE]. "CONTACT ADDED TO GROUP" will be displayed.
Repeat for each location for the Group.

CONTACTS

CHANGE GROUP NAME








- 1 Press  [MENU], press  "Groups".
- 2 Select an existing group name that you have added with the Navigation Key.
- 3 To select "Rename", press  [OPTIONS].
- 4 Input a new group name.
- 5 To save it, press  [SAVE].

SEND TXT MSG. TO A GROUP

- 1 Press  [MENU], press  "Groups".
- 2 Select an existing group name with the Navigation Key.
- 3 To select "Send TXT Msg.", press  [OPTIONS].
- 4 Input a "Message", press  [OPTIONS] to select "Save As Draft", "Add Graphic", "Add Sound", "Add Quick Text", "Priority Level" and "Cancel Msg".
- 5 5.1. To send the text message, press  [SEND].
5.2. To save the text message, press  [OPTIONS] and then select "Save As Draft" and then press .








CONTACTS

SEND PIX MSG. GROUP

- 1 Press  [MENU], press  "Groups".
- 2 Select an existing group name with the Navigation Key.
- 3 To select "Send PIX Msg", press  [OPTIONS].
- 4 Input a "Text", "PIX", "Sound", "Subject", and then press  [OPTIONS] to select "Preview", "Add Quick Text", "Save As Draft", "Priority Level", "Remove PIX", "Remove Sound", "Add Slide" or "Cancel Msg".
- 5 5.1. To send the PIX message, press  [SEND].
5.2. To save the PIX message, press  [OPTIONS] and then select "Save As Draft" and then press .





CONTACTS

SEND FLIX MSG. GROUP

- 1 Press  [MENU], press  "Groups".
- 2 Select an existing group name with the Navigation Key.
- 3 To select "Send FLIX Msg", press  [OPTIONS].
- 4 Input a "Text", "FLIX", "Subject", and then press  [OPTIONS] to select "Preview", "Add Quick Text", "Save As Draft", "Priority Level", "Remove FLIX" or "Cancel Msg".
- 5 5.1. To send the FLIX message, press  [SEND].
5.2. To save the FLIX message, press  [OPTIONS] and then select "Save As Draft" and then press .

CONTACTS

ERASE GROUP

- 1** Press  [MENU], press  "Groups".
- 2** Select an existing group name with the Navigation Key.
- 3** To select "Erase", press  [OPTIONS].
- 4** Select "Yes" to erase it, press  .








When using Erase Group, the saved entries are moved to the "No Group".

CONTACTS

SPEED DIALS

In idle mode, calls can be placed to numbers stored in speed dial by pressing & holding the location number on the key pad. For a 2-digit location number, press the first number and then press and hold the second number.

- 1 Press  [MENU], press  "Speed Dials".
- 2 To assign a phone number to a location, select the location and then press  [SET].
- 3 Select the contact with the Navigation Key then press  .
- 4 Select the phone number with the Navigation Key then press  .






- "Unassigned" appears if the location is available.
- To call an assigned number, press & hold the last digit of the speed dial #.


- 5 "SPEED DIAL SET" will be displayed.

RECENT CALLS

MISSED


Displays information about the 90 most recently missed calls. Place a call to a missed call number by simply pressing .

1 To see a list of the 90 most recently missed calls, press  [MENU] and then select “Recent Calls” menu, press  “Missed”. If the number is already stored in your contacts, only the name appears. If the number is not stored, only the phone number appears.

2 To view missed call details, press  [OPEN].




Call details include date, time and phone number.

3 Press  [OPTIONS] and then select “Save” to save it or select “Erase” to delete it.


- **Save** : To store the phone number in your phone book.
- **Details** : If the selected entry has already been stored the contacts list, to view the caller's information.
- **Erase** : To erase a missed calls listing.
- **Lock/Unlock** : To lock or unlock a missed calls listing.
- **Erase All** : To erase all missed calls listings.
- **View Timers** : To display usage time.


 



- *After 90 missed calls, the oldest call will automatically be erased from the history.*
- *Press  [MESSAGE], to send the TXT, PIX or FLIX message.*

RECENT CALLS

RECEIVED


Displays information about the 90 most recently received calls. Place a call to a received call by simply pressing .

1 To see a list of the 90 most recently received calls, press  [MENU] and then select "Recent Calls" menu, press  "Received". If the number is already stored in your contacts, only the name appears. If the number is not stored, only the phone number appears.

2 To view received call details, press  [OPEN].




Call details include date, time and phone number.

3 Press  [OPTIONS] and then select "Save" to save it or select "Erase" to delete it.


- **Save** : To store the phone number in your phone book.
- **Details** : If the selected entry has already been stored the contacts list, to view the caller's information.
- **Erase** : To erase a received calls listing.
- **Lock/Unlock** : To lock or unlock received calls listing.
- **Erase All** : To erase all received calls listings.
- **View Timers** : To display usage time.


 



- *After 90 received calls, the oldest call will automatically be erased from the history.*
- *Press  [MESSAGE], to send the TXT, PIX or FLIX message.*

RECENT CALLS

DIALED


Displays information about the 90 most recently dialed numbers. Place a call to a dialed call by simply pressing .

1 To see a list of the 90 most recently dialed numbers, press  [MENU] and then select "Recent Calls" menu, press  "Dialed". If the number is already stored in your contacts, only the name appears. If the number is not stored, only the phone number appears.

2 To view dialed call details, press  [OPEN].




Call details include type of call, date, time and phone number.

3 Press  [OPTIONS] and then select "Save" to save it or select "Erase" to delete it.

- **Save** : To store the phone number in your phone book.
- **Details** : If the selected entry has already been stored the contacts list, to view the caller's information.
- **Erase** : To erase a dialed calls listing.
- **Lock/Unlock** : To lock or unlock dialed calls listing.
- **Erase All** : To erase all dialed calls listings.
- **View Timers** : To display usage time.






- *After 90 dialed calls, the oldest call will automatically be erased from the history.*
- *Press  [MESSAGE], to send the TXT, PIX or FLIX message.*

RECENT CALLS

ALL


Displays information about the most recent received, dialed and missed calls.

1 To see a list of the 270 most recent received, dialed and missed calls, press  [MENU] and then select "Recent Calls" menu, press  "All". If the number is already stored in your contacts, only the name appears. If the number is not stored, only the phone number appears.

2 To view details, press  [OPEN].




Call details include type of call, date, time and phone number.

3 Press  [OPTIONS] and then select "Save" to save it or select "Erase" to delete it.

- **Save** : To store the phone number in your phone book.
- **Details** : If the selected entry has already been stored the contacts list, to view the caller's information.
- **Erase** : To erase a recent calls listing.
- **Lock/Unlock** : To lock or unlock recent calls listing.
- **Erase All** : To erase all recent calls listings.
- **View Timers** : To display usage time.



- *After the 270 received, dialed or missed calls, the oldest call will automatically be erased from the history.*
- *Press  [MESSAGE], to send the TXT, PIX or FLIX message.*

RECENT CALLS

VIEW TIMERS

Checks the usage time and manages your calls within the limit you set. The 11 timers include (Last Call, All Calls, Received Calls, Dialed Calls, Roaming Calls, Transmit Kb, Received Kb, Total Kb, Last Reset, Lifetime Calls, Lifetime Data Counter):

- 1 Press **OK** [MENU], select "Recent Calls" menu, press **5** [JK] "View Timers".
- 2 If "Last Call", "All Calls", "Received Calls", "Dialed Calls", "Roaming Calls", "Transmit Kb", "Received Kb", "Total Kb" is selected with Navigation Key.

To reset the timer, press **RE** [RESET], then select "Yes", press **OK**.

To reset all timer, press **RE** [RESET ALL], then select "Yes", press **OK**.

If "Last Reset", "Lifetime Calls", "Lifetime Data Counter" is selected with Navigation Key.

To reset all timer, press **RE** [RESET ALL], then select "Yes", press **OK**.

- 3 To return to the previous page, press **OK**.

SETTINGS

Customizes your phone and optimizes performance through a variety of settings.

SOUNDS SETTINGS

MASTER VOLUME

Controls the Ringer volume and alerts you to incoming calls in the modes listed in the gray box below.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3** del "Sounds Settings" and then select **1** "Master Volume".
- 2 Select one of the following options by pressing the Navigation Key to the right.
 - Low, Medium Low, Medium, Medium High, High.
 - Vibrate Only
 - Alarm Only
 - All Sounds Off
 - Press [PLAY/STOP] to play/stop sound.
- 3 Select one of the available ring types. To confirm, press **OK** .

SETTINGS

CALL SOUNDS

To select a ringer type for incoming calls:

CALL RINGTONE

1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3** [def] "Sounds Settings" and then select **2** [abc] "Call Sounds", press **1** [0] "Call Ringtone".

2 Select your desired ringer type.

- **Up or Down key** : 1. Get New App. or select your desired ringer type.
- Press **⏮** [PLAY/PAUSE] to play/pause sound.

3 Select one of the available ring types. To confirm, press **OK** .

CALL VIBRATE

1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3** [def] "Sounds Settings" and then select **2** [abc] "Call Sounds", press **2** [abc] "Call Vibrate".

2 Select "On" or "Off" with the Navigation Key and then press **OK** to save it.

SETTINGS

ALERT SOUNDS

When selected, this setting alerts you to the following handset changes:

TXT MESSAGE

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3** def "Sounds Settings" and then select **3** def "Alert Sounds", press **1** **OK** "TXT Message".
- 2 Select "Tone", "Vibrate" or "Reminder" with the Navigation Key and then select one of the following options by pressing the Navigation Key.

- **Tone** : 1. Get New App. or select your desired ringer type.
- **Vibrate** : Select "On" or "Off".
- **Reminder** : Select "Once", "Every 2 Minutes", "Every 15 Minutes" or "Off".

- 3 To save, press **OK** .

PIX-FLIX MSG


 
 
 

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3** def "Sounds Settings" and then select **3** def "Alert Sounds", press **2** abc "PIX-FLIX Msg".
- 2 Select "Tone", "Vibrate" or "Reminder" with the Navigation Key and then select one of the following options by pressing the Navigation Key.

- **Tone** : 1. Get New App. or select your desired ringer type.
- **Vibrate** : Select "On" or "Off".
- **Reminder** : Select "Once", "Every 2 Minutes", "Every 15 Minutes" or "Off".

- 3 To save, press **OK** .

SETTINGS

VOICEMAIL MSG

- 1** Press  [MENU] and then select "Settings & Tools" menu, press  "Sounds Settings" and then select  "Alert Sounds", press  "Voicemail Msg".
- 2** Select "Tone", "Vibrate" or "Reminder" with the Navigation Key and then select one of the following options by pressing the Navigation Key.
 - **Tone** : 1. Get New App. or select your desired ringer type.
 - **Vibrate** : Select "On" or "Off".
 - **Reminder** : Select "Once", "Every 2 Minutes", "Every 15 Minutes" or "Off".
- 3** To save, press .

SETTINGS

KEYPAD VOLUME

To adjust key pad tone:

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3**^{def} "Sounds Settings" and then select **4**^{ghi} "Keypad Volume".
- 2 Select one of the following options by pressing the Navigation Key to the right.
 - Low, Medium Low, Medium, Medium High, High
 - Off
- 3 Select one of the available ring types. To confirm, press **OK**.

EARPIECE VOLUME

To adjust earpiece volume:



 


- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3**^{def} "Sounds Settings" and then select **5**^{jkl} "Earpiece Volume".
- 2 Select one of the following options by pressing the Navigation Key to the right.
 - Low, Medium Low, Medium, Medium High, High
- 3 Select one of the available ring types. To confirm, press **OK**.

SETTINGS

SERVICE ALERTS

ERI (Enhanced Roaming Indicator)

The Enhanced Roaming Indicator (ERI) feature displays a text banner on the display screen informing the handset user of which systems the wireless device is using as compared to the service plan they purchased. The ERI Banner text changes to tell a customer if they are using the: "Verizon Network", "Extended Network" or "Roaming".




 

- 1 Press  [MENU] and then select "Settings & Tools" menu, press  "Sounds Settings" and then select  "Service Alerts", press  "ERI".
- 2 Select "On" or "Off" with the Navigation Key and then press  to save it.



Display Settings -> Banner -> ERI Banner must be set for "ON" for smooth operation of all the functions.

MINUTE BEEP

Sounds an alert every minute during a call.

- 1 Press  [MENU] and then select "Settings & Tools" menu, press  "Sounds Settings" and then select  "Service Alerts", press  "Minute Beep".
- 2 Select "On" or "Off" with the Navigation Key and then press  to save it.

SETTINGS

CALL CONNECT

Notifies you that a call has been successfully placed.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3** ^{def} "Sounds Settings" and then select **6** ^{mno} "Service Alerts", press **3** ^{def} "Call Connect".
- 2 Select "On" or "Off" with the Navigation Key and then press **OK** to save it.

POWER ON/OFF

POWER ON SOUND

Allows you to activate/deactivate the power on tones.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3** ^{def} "Sounds Settings" and then select **7** ^{pqrs} "Power On/Off", press **1** [Ⓢ] "Power On Sound".
- 2 Select "On" or "Off" with the Navigation Key and then press **OK** to save it.

POWER OFF SOUND

Allows you to activate/deactivate the power off tones.


- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3** ^{def} "Sounds Settings" and then select **7** ^{pqrs} "Power On/Off", press **2** ^{abc} "Power Off Sound".
- 2 Select "On" or "Off" with the Navigation Key and then press **OK** to save it.

SETTINGS


ALARM SOUNDS

To select a ringer type for alarm sound:

ALARM TONE

1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3** def "Sounds Settings" and then select **8** tuv "Alarm Sounds", press **1**  "Alarm Tone".

2 Select your desired ringer type.

- **Up or Down key** : 1. Get New App. or select your desired ringer type.
- Press  [PLAY/PAUSE] to play/pause sound.

3 Select one of the available ring types. To confirm, press **OK** .

ALARM VIBRATE

1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **3** def "Sounds Settings" and then select **8** tuv "Alarm Sounds", press **2** abc "Alarm Vibrate".

2 Select "On" or "Off" with the Navigation Key and then press **OK** to save it.

SETTINGS

DISPLAY SETTINGS

Allows you to customize the display.

BANNER

You can choose to display a personal Banner greeting or the Enhanced Roaming Indicator (ERI) banner on the phone's screens:

PERSONAL

The text greeting can be up to 16 characters and is displayed on your phone's screen in standby mode.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **4** **ghi** "Display Settings" and then select **1** **ghi** "Banner", press **1** **ghi** "Personal".
- 2 Enter a new personal greeting.
To change the input mode, press **⋮** [Abc].
- 3 Press **OK** to save it.

ERI BANNER

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **4** **ghi** "Display Settings" and then select **1** **ghi** "Banner", press **2** **abc** "ERI Banner".
- 2 Select "On" or "Off" with the Navigation Key and then press **OK** to save it.

SETTINGS

BACKLIGHT

Backlights the display and key pad and activates dimming for easy viewing in dark places.

DISPLAY

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **4** **ghl** "Display Settings" and then select **2** **abc** "Backlight", press **1** **0** **2** "Display".
- 2 Select one of the following options with the Navigation Key.

- 7 Seconds, 15 Seconds, 30 Seconds, Always On, Always Off.

- 3 Press **OK** to save it.

KEYPAD

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **4** **ghl** "Display Settings" and then select **2** **abc** "Backlight", press **2** **abc** "Keypad".
- 2 Select one of the following options with the Navigation Key.




 

- 7 Seconds, 15 Seconds, 30 Seconds, Always On, Always Off.

- 3 Press **OK** to save it.

SETTINGS








CONTRAST

To adjust the display contrast:

- 1 Press  [MENU] and then select "Settings & Tools" menu, press  "Display Settings" and then select  "Contrast".
- 2 Select one of the following options with the Navigation Key.

- 3 Press  to save it.




 



WALLPAPER

MAIN SCREEN

- 1 Press  [MENU] and then select "Settings & Tools" menu, press  "Display Settings" and then select  "Wallpaper", press  "Main Screen".
- 2 Select "My PIX" or "My FLIX" with the Navigation Key.
- 3 Select Default to choose a pre-installed display, Downloads, PIX # or FLIX # to choose a display you have downloaded to your phone.
To launch "Get It Now", press  [GET NEW].
To expand selected image, press  [VIEW].
- 4 Select a display from the Animation and the Graphic list using the Navigation Key and then press  to save it.

SETTINGS

FRONT SCREEN

- 1** Press  [MENU] and then select "Settings & Tools" menu, press  "Display Settings" and then select  "Wallpaper", press  "Front Screen".
- 2** Select Default to choose a pre-installed display, Downloads, PIX # to choose a display you have downloaded to your phone.
To launch "Get It Now", press  [GET NEW].
To expand selected image, press  [VIEW].
- 3** Select a display from the Graphic list using the Navigation Key and then press  to save it.

SETTINGS

DISPLAY THEMES

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **4** ghl "Display Settings" and then select **5** jkl "Display Themes".
- 2 Select one of the following options with the Navigation Key.

- Default
- Business
- Tropical
- Blue

- 3 Press **OK** to save it.

DIAL FONTS

 
- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **4** ghl "Display Settings" and then select **6** mno "Dial Fonts".
- 2 Select "Normal" or "Large" with the Navigation Key.
- 3 Press **OK** to save it.

SETTINGS

CLOCK FORMAT

 
MAIN CLOCK

To change the main clock's appearance on the standby screen:

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **4** ghi "Display Settings" and then select **7** pqrs "Clock Format" and then select **1** ^o ₁ "Main Clock".
- 2 Select one of the following with the Navigation Key.

 - Digital
 - Analog
 - Off
- 3 To save, press **OK** .

FRONT CLOCK

To change the main clock's appearance on the standby screen:

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **4** ghi "Display Settings" and then select **7** pqrs "Clock Format" and then select **2** abc "Front Clock".
- 2 Select one of the following with the Navigation Key.

 - Digital
 - Analog
 - Minimize
 - Off
- 3 To save, press **OK** .

SETTINGS

PHONE SETTINGS

STANDALONE MODE

The device shall provide the ability for the user to turn off all radios in order to utilize the native or downloaded capability within the device when in areas where radio transmission is restricted.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **5 jkl** "Phone Settings" and then select **1 g** "Standalone Mode".
- 2 Select "On" or "Off" with the Navigation Key and then press **OK** to save it.



Allows you to use the menu functions except making calls, bluetooth.

SET SHORTCUT KEY

Your phone offers you the option of assigning a shortcut key (Up, Down, Left, Right Navigation Key) to a favorite or often-used function. To assign a shortcut to the key:

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **5 jkl** "Phone Settings" and then select **2 abc** "Set Shortcut Key".
- 2 Select **1 g** "Left Key", **2 abc** "Up Key", **3 def** "Right Key" or **4 ghi** "Down Key".
- 3 Select one of the following options with the Navigation Key, press **OK** to save it.

Get It Now/Get Tunes & Tones/Get PIX & FLIX/Get Fun & Games/
Get News & Info/My PIX/My FLIX/My Ringtones/My Music/My
Sounds/Inbox/Email/Chat/IM/Settings & Tools/Alarm Clock/
Calculator/Calender.

- 4 To reset all already set shortcut key, press **5 jkl** "Reset All", then select "Yes", press **OK**.

SETTINGS

LANGUAGE

Selects the language in which letters are displayed on the screen.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **5** [jkl] "Phone Settings" and then select **3** [def] "Language".
- 2 Select "English" or "Spanish" with the Navigation Key.
- 3 Press **OK** to save it.

LOCATION

To determine whether or not the network system can detect your position:

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **5** [jkl] "Phone Settings" and then select **4** [ghi] "Location".
- 2 Select "Location On" or "E911 Only" with the Navigation Key.

- **Location On:** Your location is now available to the network.
- **E911 Only:** Your location will be hidden from network & application except 911.

- 3 Press **OK** to save it.



 

SETTINGS

SECURITY

Prevents unauthorized use of your phone. The following settings can be restricted:


LOCK MODE

Prevents the phone from being used without entering the password first.

- 1 Press  [MENU] and then select "Settings & Tools" menu, press  "Phone Settings" and then select  "Security" and then enter your password, press .



The default password is the last 4 digits of your phone number.

- 2 Select  "Lock Mode".
- 3 Select "Device" or "Location" and then select one of the following options with the Navigation Key.

- **Device** : Lock, Unlock, On Power Up
- **Location** : Lock, Unlock

- 4 Press  to save it.

SETTINGS

EDIT CODE

Changes your Device/Location 4-digit password.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **5** [jkl] "Phone Settings" and then select **5** [jkl] "Security" and then enter your password, press **OK** .



The default password is the last 4 digits of your phone number.

- 2 Select **2** [abc] "Edit Code".
- 3 Enter a "New Code" then press **OK** .
- 4 Enter a "Confirm Code" then press **OK** to save it.

SYSTEM SELECT

Selects the Preferred System.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **5** [jkl] "Phone Settings" and then select **6** [mno] "System Select".

- 2 Select one of the following options with the Navigation Key.

- Automatic B
- Automatic A
- Home Only

- 3 Press **OK** to save it.

SETTINGS

NAM SELECT

Enables Auto NAM (Number Assignment Modules) or manually selects a NAM.

AUTO NAM

Automatically switches phone to proper NAM when you have multiple NAM registrations.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **5** [jkl] "Phone Settings" and then select **7** [pqrs] "NAM Select", press **1** [1] "Auto NAM".
- 2 Select "On" or "Off" with the Navigation Key and then press **OK** to save it.

CHANGE NAM

Changes the NAM used by the phone when you have multiple registrations.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **5** [jkl] "Phone Settings" and then select **7** [pqrs] "NAM Select", press **2** [abc] "Change NAM".
- 2 Select one of the following options with the Navigation Key.
 - NAM 1 - VERIZON
 - NAM 2 - VERIZON
- 3 Press **OK** to save it.

SETTINGS

CALL SETTINGS

ANSWER OPTIONS

To select an answer mode:

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **6** mno "Call Settings" and then select **1** ☎ "Answer Options".
- 2 Select one of the following with the Navigation Key.
 - Flip Open
 - Any Key
 - Send Only
 - Auto Answer
- 3 To save, press **OK** .

AUTO RETRY

Automatically redials after a set time interval.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **6** mno "Call Settings" and then select **2** abc "Auto Retry".
- 2 Retry time field is shown.
(Off, Every 3 Seconds, Every 5 Seconds, Every 7 Seconds or Every 10 Seconds)
- 3 To save, press **OK** .

SETTINGS

TTY MODE

Your phone is able to operate with a TTY (Teletypewriter) device in both analog and digital modes. This feature is system dependent and may not be available in all areas.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **6**^{mno} "Call Settings" and then select **3**^{def} "TTY Mode".
- 2 Select one of the following with the Navigation Key.
 - TTY Full
 - TTY+ Talk
 - TTY + Hear
 - TTY Off
- 3 To save, press **OK** .

ONE TOUCH DIAL

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **6**^{mno} "Call Settings" and then select **4**^{ghi} "One Touch Dial".
- 2 Select "On" or "Off" with the Navigation Key and then press **OK** to save it.

SETTINGS

VOICE PRIVACY

Enhances voice privacy and avoids tapping during a call.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **6** ^{mno} "Call Settings" and then select **5** ^{jk} "Voice Privacy".
- 2 Select "On" or "Off" with the Navigation Key and then press **OK** to save it.

- **On** : Makes it more difficult to wire tap.


 

VOICE SERVICES

VOICE DIAL

Voice Dial allows you to call a person by simply saying their name. To access Voice Dial:

- 1 Press **OK** [MENU], select "Settings & Tools" menu, press **6** ^{mno} "Call Settings", select **6** ^{mno} "Voice Services", and press **1** ^q "Voice Dial".
- 2.1. Press **⋮** [NEW]. The phone book list will be displayed alphabetically. Select a name and then press **OK**. Instructions (Press OK and say name) will be displayed and press **OK**. You will hear "Name Please".
2.2. Say the name for the voice tag and repeat the name when prompted. You will hear "Added".
- 3 To play a voice dial:
Highlight the voice tag you want to play and then press **OK** [PLAY].
- 4 To review a voice dial: Highlight the voice tag you want to review, and press **⋮** [OPTIONS] and then select "Detail".




 
SETTINGS


- 5** To re-record a voice dial: Highlight the voice tag you want to re-record and press  [OPTIONS] and then select "Re-record".
- 6** To hear a voice dial from speaker: Highlight the voice tag you want to hear and press  [OPTIONS] and then select "Play Speaker".
- 7** To erase or erase all voice dials: Highlight the voice tag you want to erase or erase all and press  [OPTIONS] and then select "Erase" or "Erase All" to erase all voice tags.


SETTINGS

VOICE SETTING

Select Set Active to activate voice-dial. If the handset is connected to HFK, select HFK to activate voice-dial by simply saying "Wake up".


- 1 Press  [MENU], select "Settings & Tools" menu, press  "Call Settings", select  "Voice Services", and press  "Voice Setting".
- 2 Under "Set Active", select "Off", "Active Flip" or "Clear Key".

- **Clear Key** : Voice Dialing can be activated by pressing and holding  in idle mode.
- **Active Flip** : Voice Dialing can be activated after the flip opens.
- **Off** : Voice Dialing canceled.

- 3 Under "HFK Mode", select an option "On" or "Off", press  to save it.









When Clear Key is set to be the activation key

1. Press and hold  until your phone turns to Voice Recognition mode.
2. Say the indicator, such as a person's name you saved for the number you are calling.

SETTINGS






TRAIN WORDS

Train allows you to use Control words to make a call without using the keypad. Use to train or untrain Voice Recognition with the control words, "Yes", "No" or "Wake-Up".

- 1** Press  [MENU], select "Settings & Tools" menu, press  "Call Settings", select  "Voice Services", and press  "Train Words".
- 2** Select one of the control words - "Yes", "No" or "Wake-Up". "Please begin recording after the prompt tone" will be displayed and you will hear "Now training control words. Please say the word". Say the word. You will hear "Again". Say the word again. You will hear "Training word successful". To undo voice recognition, select a word you want to undo then press  [UNDO].
- 3** Under "Undo Train All".
"Undo voice recognition for all procedures?" will be displayed. Press  to undo all trained words.

DTMF TONES

To adjust tone length:

- 1** Press  [MENU] and then select "Settings & Tools" menu, press  "Call Settings" and then select  "DTMF Tones".
- 2** Select one of the following with the Navigation Key.

 - Normal
 - Long
- 3** To save, press .

SETTINGS

BLUETOOTH

The PN-E330 is compatible with devices that support the Bluetooth headset and hands-free profile(s)*. You may create and store 30 pairings within the PN-E330 and connect to one device at a time. The approximate communication range for Bluetooth wireless technology is up to 30 feet (10 meters).



Read user guide of each Bluetooth accessory that you are trying to pair with your phone because the instructions may differ.

BLUETOOTH ON/OFF

- 1 Press [MENU] and then select "Settings & Tools" menu, press "Bluetooth".
- 2 Press [ON/OFF] to activate/deactivate bluetooth mode.

ADD NEW DEVICE

Pairing is the process that allows the handset to locate establish and register 1-to-1 connection with the target device.




- 1 Press [MENU] and then select "Settings & Tools" menu, press "Bluetooth".
- 2 Select "1. Add New Device", press .
If Bluetooth is set to off, you will be prompted to "Turn Bluetooth on?". Select "Yes" and press .


By pressing [SETTINGS], you can choose from the following:

My Phone Name: Your phone's Bluetooth name will appear to other in-range Bluetooth devices, depending on your discovery mode. Enter a new name and press to save and exit.

Discovery Mode: To Select discovery "On" or "Off".
If discovery "On" selected, for one minute other devices can find you.

SETTINGS

- 3** Instructions (Place device you are connecting to in discoverable mode) will be displayed. Highlight the device and press .
- 4** The handset will prompt you for the passkey. Consult the Bluetooth accessory instructions for the appropriate passkey (typically "0000" - 4 zeroes). Enter the passkey and press .
- 5** Once pairing is successful, select "Yes" and press  to connect with this device.
- 6** Once paired, you will see the device listed in the "1. Add New Device" menu.

By pressing  [OPTIONS], you can choose from the following:

- Remove Device:** To erase selected device.
- Rename Device:** To rename selected device.
- Incoming Security:** To Select "Always Ask" or "Always Connect".
- Device Info:** To view device information.

MEMORY

SAVE OPTIONS

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **8** tuv "Memory" and then select **1** abc "Save Options".
- 2 Select **1** abc "PIX", **2** abc "FLIX" or **3** def "Sounds" with the Navigation Key and then select one of the following options by pressing the Navigation Key.
 - Phone Memory
 - Card Memory
- 3 To save, press **OK** .

PHONE MEMORY

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **8** tuv "Memory" and then select **2** abc "Phone Memory".
- 2 Select one of the following options by pressing the Navigation Key.
 - Memory Usage
 - My PIX
 - My FLIX
 - My Music
 - My Sounds
- 3 To display the phone memory information.
- 4 To save, press **OK** .

SETTINGS

CARD MEMORY

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **8** tuv "Memory" and then select **3** def "Card Memory".
- 2 Select one of the following options by pressing the Navigation Key.
 - Memory Usage
 - My PIX
 - My FLIX
 - My Music
 - My Sounds
- 3 To display the card memory information.
- 4 To save, press **OK** .

SETTINGS

PHONE INFO

MY NUMBER

Displays your phone number.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **9** ^{wxyz} "Phone Info" and then select **1** ¹ "My Number".
- 2 You will see the MDN/MIN and provider name.
- 3 To return to the previous page, press **OK** .

SW VERSION





Displays the (Software/PRL/ERI/Browser/Get It Now) version.

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **9** ^{wxyz} "Phone Info" and then select **2** ^{abc} "SW Version".
- 2 You will see the version of software, browser and others.
- 3 To return to the previous page, press **OK** .

SETTINGS

ICON GLOSSARY

Displays the Indicator Icons of your cellular telephone.

- 1** Press  [MENU] and then select "Settings & Tools" menu, press  "Phone Info" and then select  "Icon Glossary".
- 2** You should see a list of the Indicator Icons of your cellular telephone with a short label or description.
- 3** To return to the previous page, press .

TOOLS

CALCULATOR

To access the calculator:

- 1 Press [MENU] and then select "Settings & Tools" menu, press "Tools" and then select "Calculator".
- 2 Follow the instructions below to calculate $8*6 \div 4 - 2.5 = 9.50$

Input 8.
Move the Navigation Key rightward.
Input 6 and then press the Navigation Key.
Move it leftward.
Input 4 and then press the Navigation Key.
Move it downward.
Input 2 and then press the to input (.).
Press 5.
Then press and you will see the answer.



: X, : -, : /, : +, : ., : Clear, : =.

- 3 To reset, press [CLEAR].




 
 




- To change the displayed number from positive (+) to negative (-) and vice versa, press [±].
- Press [OPERATOR] to use parenthesis and "Exponent".

TOOLS

CALENDAR

Sets an event and reminds you of that event.


ADD NEW

- 1 Press  [MENU] and then select "Settings & Tools" menu, press  "Tools" and then select  "Calendar".
- 2 Move the Navigation Key left, right, up or down to choose a date in the calendar and then press  . Press  [OPTIONS] to 1. Add, 2. Go To Date, 3. Erase, 4. Erase Passed or 5. Erase All. Press  [MONTHLY/WEEKLY] to exchange display mode.
- 3 To set a new event, press  [OPTIONS] then select "Add". The appointment field is highlighted. Press the Navigation Key down to set the alarm options.


APPOINTMENT

Use the keypad to enter an appointment in your schedule.

START TIME

Use the keypad to set a start time and  to select "am" or "pm".

END TIME

Use the keypad to set an end time and  to select "am" or "pm".

START DATE

Use the keypad to change or enter the start date.

RECURRENCE

Use the Navigation Key to select a repeat setting for the the calendar. (Daily, Weekly, Monthly or Yearly).

TOOLS


BY COUNT

Use the keypad to enter an account.

END DATE

Use the keypad to change or enter the end date.

TIME ZONE

Use the Navigation Key to select a time zone, press  [SET]. (OFF, EST, EDT, CST, CDT, MST, MDT, PST, PDT, AKST, AKDT, HAST, HADT or GMT/UTC).

ALERT



Use the keypad to 1. Get New or select the alert tone you wish to set.

VIBRATE





Use the Navigation Key to select vibrate On/Off.

REMINDER

Use the Navigation Key to select an alert time interval option (0 Minutes, 5 Minutes, 10 Minutes, 15 Minutes).





- 4 Press  [SAVE] to save it or  [CLR] to return to the calendar.
- 5 The date of the event will be marked on your calendar.

VIEW PLAN LIST

- 1 To view the Calendar List:
- 2 Move the Navigation Key to choose an event and then press , press  [VIEW]. Press  [ERASE] and then select "Yes", press .

TOOLS


ALARM CLOCK

- 1** Press  [MENU] and then select "Settings & Tools" menu, press  "Tools" and then select  "Alarm Clock".
- 2** Select one of the entries using the Navigation Key. To set a new alarm, choose alarm 1, 2 or 3. To edit an existing alarm, select that alarm. Press  .
- 3** The setting field will be highlighted. Press the Navigation Key down to select alarm options.

ALARM

Use the Navigation Key to select alarm On/Off.


TIME


Use the keypad to set a time for the alarm and  to select "am" or "pm".

FREQUENCY

Use the Navigation Key to select a setting for the alarm (Once, Daily, Mon - Fri, Weekends).

RINGER


 


Press  [SET], to use the keypad to 1. Get New App. or select the alert tone you wish to set.

- 4** To save an alarm setting press  [SAVE].

TOOLS


WORLD CLOCK

To display the time and date in pre-programmed cities:

- 1** Press  [MENU] and then select "Settings & Tools" menu, press  "Tools" and then select  "World Clock".
- 2** Select a city by pressing the  [CITIES].
Or use the Navigation Key to select another city.
- 3** The world map appears with the city, its date and time.
Use the Navigation Key to select another city.



Pressing  [DST], turns all cities supporting Daylight Savings Time on or off.






- 4** To return to the previous page, press .

NOTEPAD

Your phone includes an internal notepad that can be used to compose and store reminders and notes.


 

 





ADD MEMO

To compose a memo (there is an 80-letter limit):

- 1 Press  [MENU] and then select "Settings & Tools" menu, press  "Tools" and then select  "Notepad".
- 2 To add a new memo, press  [NEW].
Input a new text memo.
(Please refer to page 33 for more details on entering letters, numbers & symbols.)
- 3 To save memo, press  [SAVE].

VIEW MEMO

To view a saved memo:

- 1 Press  [MENU] and then select "Settings & Tools" menu, press  "Tools" and then select  "Notepad".
- 2 The list of all memos, in saved order, is displayed. Select a memo and then press  [VIEW].
- 3
 - 3.1. To add a new memo, press  [NEW].
 - 3.2. To erase a memo, press  [OPTIONS] "Erase".
 - 3.3. To erase all memos, press  [OPTIONS] "Erase All".
- 4 The selected memo will appear. To edit it, press  [EDIT] and input a new text memo and then press  [SAVE] to save it.

TOOLS



STOP WATCH

Simultaneously times up to eight different events. To operate the stop watch:

- 1 Press **OK** [MENU] and then select "Settings & Tools" menu, press **2** abc "Tools" and then select **6** mno "Stop Watch".
- 2 To measure a time period:
 1. To start the stop watch, press **OK** [START].
 2. To pause it, press **OK** [STOP].
 3. To resume it, press **OK** [START].
To reset it, press **...** [RESET].
- 3 To time up to eight events at once:
 1. To start, press **OK** [START].
 2. To stop a time period and continue measuring another one, press **...** [CONT].
 3. To stop the second and continue measuring a third one, press **...** [CONT].
 4. To measure up to six time periods, repeat the above steps.
 5. To stop the stop watch, press **OK** [STOP].
 6. To review the results, press **...** [VIEW].
 7. To return to the stop watch, press **OK** .
 8. To reset it, press **...** [RESET].

MY ACCOUNT

MY ACCOUNT

- 1** Press  [MENU], then select "Settings & Tools" menu, press  "My Account".
- 2** Connect "WAP Browser".

MEMO

Chapter 5

GET IT NOW



Your phone provides a unique feature -Get It Now- that enables you to download ringtones, wallpapers, games and more from your network to your phone. Please contact your service provider for the availability of these services.

■ GET IT NOW

GET IT NOW















GET TUNES & TONES

To access the Get Tunes & Tones menu.

Press  [MENU], then select "Get it Now" menu, press  "Get Tunes & Tones".

GET VCAST MUSIC

You can use the V Cast Music option to download music from the V Cast music catalog.

-  From the Get Tunes & Tones menu, press  "Get V Cast Music".
-  Browse of Search the catalog to preview the songs you want.
-  Highlight the music that you want to purchase. Press  [BUY] to purchase.
-  The Confirm Purchase screen will display the price and items you selected to purchase. Press  [BUY] to accept the terms.
-  You'll receive a confirmation that your purchase was successful and your music is available for download. Press  to continue.
-  Highlight Phone Memory or Memory Card for Storage location (Memory Card is recommended, and is only an option if a memory card is in your phone). Press  to begin downloading. Wait for the phone to acquire the content license. Press  when download is complete.
-  Press  [PLAY] to play the downloaded song immediately.

GET IT NOW





GET NEW RINGTONES



- 1** From the Get Tunes & Tones menu, press **[2 abc]** "Get New Ringtones".
- 2** If you have not downloaded any ringtones or ringtone applications previously, select "Get New App.". The Get It Now browser will launch. From the Download menu, select a service provider and press **(OK)**. Then select the application and press **(OK)** to download it.
- 3** To download a ringtone, select the application from the Get New Ringtones menu. Once the application has launched, follow the directions to download your ringtones. Downloaded ringtones are saved to the My Ringtones menu.



RECORDING NEW TONES

 
- 1** From the Get Tunes & Tones menu, press **[5 jkl]** "My Sounds".
- 2** Select "Record New". "Press OK to start recording" will be displayed.
- 3** Press **(OK)** to begin recording. When done, press **(OK)** [STOP] to finish recording. The recording is automatically saved to your My Sounds list.
- 4** Your recording is saved with a number. To rename your recording, scroll to it in the My Sounds menu, then press **[...]** [OPTIONS]. Then press **[2 abc]** "Rename".

MY RINGTONES

- 1 From the Set Tunes & Tones menu, press  "My Ringtones".
- 2 To play downloaded tunes or tones:
Select the tunes or tones you want to play and then press  [PLAY].
- 3 To erase downloaded tunes or tones:
Select the tunes or tones you want to erase and then press  [OPTIONS] and select "Erase" and then select "Yes", press .







 



- By pressing  [OPTIONS], you can choose from the following:
 - DOWNLOADED RINGTONE :**
 1. **Erase:** Erase the current ringtone from your phone.
 2. **Rename:** To edit the ringtone's title.
 3. **Ringtone Info:** Displays information on the selected ringtone.
 - PRELOADED SOUND :**
 1. **Erase:** Erase the current ringtone from your phone.
 2. **Ringtone Info:** Displays information on the selected ringtone.
- Press  [PLAY/STOP] to play/stop ringtone.

- 4 To assign downloaded tunes or tones:
Select the tunes or tones you want to assign and then press  [SET AS]. Select "Ringtone", "Contact ID" or "Alert Tone" and then press .



- By pressing  [SET AS], you can choose from the following:
 1. **Ringtone**
 2. **Contact ID**
 3. **Alert Tone -**
 1. All Messages
 2. TXT Message
 3. PIX-FLIX Msg
 4. Voicemail Msg

GET IT NOW

MY MUSIC

- 1** From the Get Tunes & Tones menu, press  "My Music".
- 2** The My Music Menu consists of Get V Cast Music and all your saved songs - saved to your phone or your Trans-Flash card.
- 3** To download more music, highlight Get V Cast Music and press . You will connect to the V Cast service.
- 4** To play a saved song, scroll through the list of tracks and press  [PLAY]. Press  [MUTE] to mute the song. Press  [OPTIONS] to
1. Play All track, 2. Shuffle or 3. Get V Cast Music.
- 5** Press   to start the song over again. Press   to skip to the next song if there are other songs to be played. Press  to pause or play the song.

MY SOUNDS

- 1** From the Get Tunes & Tones menu, press  "My Sounds".
- 2** To play downloaded sounds, select the sound you want to play, then press  [PLAY].

GET IT NOW

- 3** To erase downloaded sounds, select the sound you want to erase, then press [⋮] [OPTIONS]. Select "Erase" or "Erase All", then press (OK).

- By pressing [⋮] [OPTIONS], you can choose from the following:
DOWNLOADED or RECORD SOUND :
 1. **To PIX Place:** To upload selected sound to PIX server.
 2. **Rename:** To edit the sound's title.
 3. **Move:** To move the selected sound to the other save location.
 4. **Lock/Unlock:** To select "Lock" or "Unlock".
 5. **Erase:** Erase the current sound from your phone.
 6. **Erase All:** To erase all the sounds in your phone.
 7. **Sound Info:** Displays information on the selected sound.**PRELOADED SOUND :**
 1. **Erase:** Erase the current sound from your phone.
 2. **Erase All:** To erase all the sounds in your phone.
 3. **Sound Info:** Displays information on the selected sound.
- Press [▶/⏸] [PLAY/STOP] to play/stop sound.

- 4** To send the PIX message, press (OK) [SEND]. Please refer to page 114 for more details on "Send New PIX Message".

SYNC MUSIC

- 1** Use the USB cable to connect your phone to your PC.
- 2** Press (OK) [MENU], then select "Get it Now" menu, press [1] [Get Tunes & Tones], press [6] [mno] "Sync Music".
- 3** Open Windows Media™ Player 10 on your PC and select the "Sync" tab.
- 4** Select "Edit Playlist" and select the songs from your library that you want to sync.



GET IT NOW

- 5** In Windows Media Player 10, select “V CAST Mobile Phone - Removable Storage Card” unless no memory card is available. Start the sync process in Windows Media Player 10 by pressing “Start Sync”. Remember, your phone must be in “Sync Music” mode.
- 6** When syncing completes, disconnect the cable from your phone and exit “Sync Music”.
- 7** Under the “Get Tunes & Tones” menu, open “Manage Music” or “My Music” to view and play your music.



V CAST Music phones only support music imported from a CD via Windows Media™ Player 10, purchased from the V CAST Music Service, or other purchased Windows Media™ formatted music. iPod® and iTunes® compatible music files are not compatible with V CAST Music.


 

MANAGE MUSIC

- 1** From the Get Tunes & Tones menu, press  “Manage Music”.
- 2** The Music Library screen will appear. Choose to manage by 1. Genres, 2. Artists, 3. Albums, 4. Songs, 5. Playlists, 6. Inbox, 7. Play All or 8. Shuffle.
- 3** Press  [CATALOG] to launch the browser.


 
 


GET IT NOW

GET PIX & FLIX

GET V CAST VIDEO

- 1 Press  [MENU] and then select "Get It Now" menu and then press  "Get PIX & FLIX", and then select  "Get V Cast Video".
- 2 Connection to the V CAST Video Service.

GET NEW PIX

- 1 Press  [MENU] and then select "Get It Now" menu and then press  "Get PIX & FLIX", and then select  "Get New PIX" then select "Get New App.". (Get It Now will launch and take you to the download menu.)
- 2 Use your Navigation Key to select a provider's browser, press  .
- 3 Select the desired application from the application list and then press  to download it.




 


The downloaded application will be included in the list displayed when you access: Get New PIX > 1. Get New App.



- 4 After executing the downloaded application, download the desired PIX. (The downloaded contents are saved in My PIX.)

GET IT NOW

MY PIX

In Review Mode you can view all the pictures you have taken, store selected images in your phone, send pictures to the Online Album, delete images and access additional picture options.

- 1 Press  [MENU] and then select "Get It Now" menu and then press  "Get PIX & FLIX", and then select  "My PIX".
- 2 In Review Mode, you can view all the pictures you have stored in your phone.
- 3 Select the picture with the Navigation Key and then press  [VIEW].

- To view the previous or next picture in detail view, press the Navigation Key right or left.
- By pressing  [OPTIONS], you can choose from the following:
DOWNLOADED or TAKEN PIX :
 1. **Send:** To send a picture message.
 2. **To PIX Place:** To upload selected picture to PIX server.
 3. **Get New:** To download picture.
 4. **Set As:** Assigns the selected PIX to display for specific tasks. (Wallpaper/Screensaver/Picture ID)
 5. **Rename:** To edit the picture's title.
 6. **Move:** To move the selected picture to the other save location.
 7. **Lock/Unlock:** To select "Lock" or "Unlock".
 8. **Erase:** Erase the current picture from your phone.
 9. **Erase All:** To erase all the pictures in your phone.
 10. **PIX Info:** Displays information on the selected picture, such as "File Name", "Date", "Time", "Resolution", "Size".**PRELOADED PIX :**
 1. **Get New:** To download picture.
 2. **Set As:** Assigns the selected PIX to display for specific tasks. (Wallpaper/Screensaver)
 3. **Erase All:** To erase all the pictures in your phone.
 4. **PIX Info:** Displays information on the selected picture, such as "File Name", "Date", "Time", "Resolution", "Size".
- Press  [CAMERA] to return to Camera mode to take another picture.

GET IT NOW

MY FLIX

In Review Mode, you can view all the videos you have taken, store selected video in your phone, send video to the Online Album, delete video and access additional video options.

- 1 Press **(OK)** [MENU] and then select "Get It Now" menu and then press **[2 abc]** "Get PIX & FLIX", and then select **[4 ghi]** "My FLIX".
- 2 In Review Mode, you can view all the videos you have stored in your phone.
- 3 Select the video with the Navigation Key and then press **(OK)** [PLAY].

- To view the previous or next video in detail view, press the Navigation Key right or left.
- By pressing **[...]** [OPTIONS], you can choose from the following: **DOWNLOADED or TAKEN FLIX :**
 1. **Send:** To send a picture message.
 2. **To PIX Place:** To upload selected video to flix server.
 3. **Get V CAST Video:** To download V CAST video.
 4. **Set As:** Assigns the selected FLIX to display for specific tasks. (Wallpaper/Screensaver/Picture ID)
 5. **Rename:** To edit the video's title.
 6. **Move:** To move the selected video to the other save location.
 7. **Lock/Unlock:** To select "Lock" or "Unlock".
 8. **Erase:** Erase the current video from your phone.
 9. **Erase All:** To erase all the videos in your phone.
 10. **FLIX Info:** Displays information on the selected video, such as "File Name", "Date", "Time", "Resolution", "Size".
- Press **[...]** [VIDEO] to return to Camera mode to take another video.

GET IT NOW

PIX PLACE


- 1** Press **OK** [MENU] and then select "Get It Now" menu and then press **2** abc "Get PIX & FLIX", and then select **5** jkl "PIX Place".
- 2** Connect "WAP Browser".


TAKE PIX


- 1 Press camera key or press and hold side camera key when flip is closed.
- 2 Point the camera lens at your subject. You can check the picture framing through the main display screen.
- 3 Press side camera key or press **OK** [TAKE] to take the picture.


- To view captured images, press **[RECALL]** [MY PIX].
- By pressing **[MENU]** [OPTIONS], you can choose from the following:
 1. **Resolution:** To select a resolution for a picture.
(Landscape: 1280x960/640x480/320x240/176x144/160x120, Portrait: 960x1280/480x640/240x320/144x176/120x160)
 2. **Self Timer:** To activate the camera's timer function.
(Off/3 Seconds/5 Seconds/10 Seconds)
 3. **Flash:** To activate the flash function.
(Off/On/Only This Shot)
 4. **Brightness:** To brightness up/down(-2, -1, 0, +1, +2).
 5. **White Balance:** To select white balance.
(Auto/Sunny/Cloudy/Tungsten/Fluorescent/Darkness)
 6. **Shutter Sound:** To select a shutter sound.
(Shutter/Silent/Say "Cheez"/Ready! 1 2 3)
 7. **Color Effects:** To select color effect among the following:
(Normal/Antique/Black & White/Negative)
 8. **Capture Mode:** To select Capture mode "Landscape" or "Portrait".
 9. **Sub Display:** To take a picture using the Sub LCD.
By pressing **[MENU]** [OPTIONS], you can choose Sub LCD options:
 1. Main Display/2. Resolution/3. Self Timer/4. Flash/
 5. Brightness/6. White Balance/7. Shutter Sound/
 8. Color Effects
- User can control zoom directly by pressing the Navigation Key.
Navigation Right / Left: Zoom up / down.
(Except 1280X960, 960X1280 mode).

GET IT NOW

- 4 After taking the picture it will be displayed. To save the picture, press  [SAVE].

To go back to idle mode without saving the picture, press .

To take another picture without saving the picture you just took, press  [ERASE].

To send the picture to someone, press  [SEND]. Please refer to page 114 for more details on "Send New PIX Message".

GET IT NOW


RECORD FLIX


- 1 Press [MENU] and then select "Get It Now" menu and then press "Get PIX & FLIX", and then select "Record FLIX". OR, in idle mode, press and hold . OR, in camera preview mode, press .
- 2 Point the camera lens at your subject. You can check the video framing through the main display screen.
- 3 Press camera key or press [REC] to take the video.


- To view captured videos, press [MY FLIX].
- By pressing [OPTIONS], you can choose from the following:
 1. **FLIX Light:** To activate the flash function.
(Off/On/Only This Shot)
 2. **Brightness:** To brightness up/down(-2, -1, 0, +1, +2).
 3. **White Balance:** To select white balance.
(Auto/Sunny/Cloudy/Tungsten/Fluorescent/Darkness)
 4. **Sub Display:** To take a video using the Sub LCD.
By pressing [OPTIONS], you can choose Sub LCD options:
 1. **FLIX Light**/2. **Brightness**/3. **White Balance**/
 4. **Main Display**
- User can control zoom directly by pressing the Navigation Key.
Navigation Right / Left: Zoom up / down.


- 4 To pause/resume recording, press [PAUSE/RESUME].
To stop recording, press [STOP].

GET IT NOW

- 5** After taking the video it will be displayed.
To save the video, press  [SAVE].

To go back to idle mode without saving the video, press .

To replay video, press  [REPLAY].

To send the video to someone, press  [SEND].
Please refer to page 116 for more details on
“Send New FLIX Message”.

GET IT NOW

GET FUN & GAMES

DOWNLOADING NEW FUN & GAMES

- 1 Press **OK** [MENU] and then select "Get It Now" menu, and then press **3 def** "Get Fun & Games" and then select "Get New App.", press **OK** . (Get It Now will launch and take you to the download menu.)
- 2 Use your Navigation Key to select a provider's browser, press **OK** .
- 3 Use your Navigation Key to select a game you wish to download, and press **OK** .

PLAYING DOWNLOADED FUN & GAMES

- 1 Press **OK** [MENU] and then select "Get It Now" menu, and then press **3 def** "Get Fun & Games".
- 2 To play the game you downloaded, select the game and press **OK** [PLAY].

GET NEWS & INFO


 
CONNECTING NEWS & INFO

- 1 Press **OK** [MENU] and then select "Get It Now" menu, and then press **4 ght** "Get News & Info".
- 2 Connect "WAP Browser".

GET IT NOW



GET GOING

CONNECTING GET GOING

- 1 Press  [MENU] and then select "Get It Now" menu, and then press  "Get Going" and then select "Get New App.".




GET EXTRAS

CONNECTING GET EXTRAS

- 1 Press  [MENU] and then select "Get It Now" menu, and then press  "Get Extras" and then select "Get New App.".

GET IT NOW INFO

Displays information about "App. Memory", "Content Memory", "View Log" and "Help":

- 1 Press  [MENU] and then select "Get It now" menu, and then press  "Info".
- 2 Select one of the following options with the Navigation Key.
 - App. Memory
 - Content Memory
 - View Log
 - Help
- 3 To return to the previous page, press  .

MEMO

CH
5

Chapter 6

 
VOICE MAIL, TXT, PIX, FLIX MESSAGING

This chapter addresses Voice Mail, TXT, PIX, FLIX Messaging functions including:

- WHEN A NEW MESSAGE ARRIVES
- NEW MSG
- INBOX
- SENT
- DRAFTS
- VOICE MAIL
- E-MAIL
- MOBILE IM
- CHAT
- ERASE ALL
- SETTINGS

WHEN A NEW MESSAGE ARRIVES

- 1 The following display appears when a new message arrives.

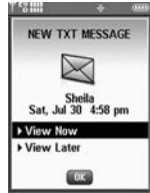

- 2 To display the message, select "View Now" and then press **OK**.

NEW MSG

SEND NEW TXT MESSAGE

1 Press [MESSAGE], press [1] "New Msg", then press [1] "TXT Msg".

2 Under "To", input the phone number and then press [OK].

- By pressing [ADD], you can choose from the following:
 - From Contacts** : Search for a phone number which is stored in the contacts list.
 - Groups** : Search the groups stored in the contacts list.
 - Recent Calls** : Search the phone number which is stored in the recent calls list.
 - To Contacts** : To store the phone number in contacts.

3 Under "Message", input a new TXT message and then press [OK] [SEND].

(Please refer to page 33 for more details on entering letters, numbers and symbols.)

- Press [OPTIONS], you can choose from the following:
 - Add Graphic** : Inserts simple graphic images in TXT Msg.
 - Add Sound** : Inserts EMS sound in TXT Msg.
 - Add Quick Text** : Inserts already written sentences in TXT Msg.



- If one of the fields is inserted in TXT msg field, the message is saved in the draft box.*
- Input at least one TXT msg field to save in the draft box.*

4 To save the TXT message, press [OPTIONS] and then select "Save As Draft".

Press [OPTIONS] and then select "Priority Level", select "High" or "Normal" and then press [OK].

To cancel message, press [OPTIONS] and then select "Cancel Msg.", then select "Yes", press [OK].

5 To send the TXT message, press [OK] [SEND].

NEW MSG

SEND NEW PIX MESSAGE

1 Press [MESSAGE], press [1] "New Msg", then press [2] "PIX Msg".

2 Under "To", input the phone number and then press [OK].

- By pressing [ADD], you can choose from the following:
 - From Contacts** : Search for a phone number which is stored in the contacts list.
 - Groups** : Search the groups stored in the contacts list.
 - Recent Calls** : Search the phone number which is stored in the recent calls list.
 - To PIX Place** : To send pictures by using online Address.
 - To Contacts** : To store the phone number in contacts.


3 Under "Text", input a new TXT message and then press [SEND].
(Please refer to page 33 for more details on entering letters, numbers and symbols. A maximum of 1,000 characters is allowed.)

- By pressing [OPTIONS].
 - Add Quick Text** : Inserts already written sentences in TXT Msg.
 - Add Slide** : To add a another message.


4 Under "PIX", user can insert/remove only one picture.
Press [MY PIX], select the My PIX and then picture you'd like to send and then press [OK].


5 Under "Sound", user can insert/remove only one sound.
Press [SOUNDS], select the sound you'd like to send and then press [OK].


NEW MSG



- 6 Under "Subject", input a subject and then press  [SEND].

(Please refer to page 33 for more details on entering letters, numbers and symbols. Max 100 characters support.)


- By pressing  [OPTIONS].
Add Quick Text : Inserts already written sentences in TXT Msg.
Add Slide : To add a another message.


- 7 To preview a written picture message, press  [OPTIONS] and then select "Preview".



To save the PIX message, press  [OPTIONS] and then select "Save As Draft".


Press  [OPTIONS] and then select "Priority Level", select "High" or "Normal" and then press  .

To remove PIX, press  [OPTIONS] and then select "Remove PIX".

To remove sound, press  [OPTIONS] and then select "Remove Sound".

To remove slide, press  [OPTIONS] and then select "Remove Slide".

To cancel message, press  [OPTIONS] and then select "Cancel Msg.", then select "Yes", press  .

- 8 To send the PIX message, press  [SEND].

NEW MSG

SEND NEW FLIX MESSAGE

1 Press [MESSAGE], press **1** "New Msg", then press **3** "FLIX Msg".

2 Under "To", input the phone number and then press **OK**.

- By pressing [ADD], you can choose from the following:
 - From Contacts** : Search for a phone number which is stored in the contacts list.
 - Groups** : Search the groups stored in the contacts list.
 - Recent Calls** : Search the phone number which is stored in the recent calls list.
 - To PIX Place** : To send video by using online Address.
 - To Contacts** : To store the phone number in contacts.

3 Under "Text", input a new TXT message and then press **↓**.


(Please refer to page 33 for more details on entering letters, numbers and symbols. A maximum of 1,000 characters is allowed.)

- By pressing [OPTIONS].
Add Quick Text : Inserts already written sentences in TXT Msg.


4 Under "FLIX", user can insert/remove only one video.


Press [MY FLIX], select the My FLIX and then video you'd like to send and then press **OK**.


NEW MSG



- 5** Under "Subject", input a subject and then press  [SEND].

(Please refer to page 33 for more details on entering letters, numbers and symbols. Max 100 characters support.)



- By pressing  [OPTIONS].
Add Quick Text : Inserts already written sentences in TXT Msg.


- 6** To preview a written picture message, press  [OPTIONS] and then select "Preview".

To save the PIX message, press  [OPTIONS] and then select "Save As Draft".

Press  [OPTIONS] and then select "Priority Level", select "High" or "Normal" and then press .

To remove FLIX, press  [OPTIONS] and then select "Remove FLIX".

To cancel message, press  [OPTIONS] and then select "Cancel Msg.", then select "Yes", press .

- 7** To send the FLIX message, press  [SEND].

INBOX

The Inbox manages received TXT,PIX/FLIX, Web Alert messages.
To access:

- 1 Press [MESSAGE], press "Inbox".

: Lock	: PIX Unread
: Priority	: PIX Read
: Read	: Unread
: EMS Unread	: EMS Read

- 2 Select a message and then press [OPEN].
The message is displayed. To delete a message,
press [ERASE], press .

When you select WAP PUSH message,
press , to launch the browser.

- 3 Press [OPTIONS].

PLAY AGAIN

- 1 To play a received PIX/FLIX message.

REPLY

- 1 Type your reply and then press .

ERASE INBOX

- 1 To erase all inbox message, select "Erase
Inbox" and then select "Yes", press .



"Play Again" menu appears only when you receive a PIX/FLIX message.

REPLY W. COPY

- 1 Select to reply with the original message included.
- 2 The default call back number is automatically included in the Default CB# field. You can scroll to the number and edit it.
- 3 To send the TXT or PIX/FLIX message, press **OK** [SEND].

FORWARD

- 1 Select to forward the TXT or PIX/FLIX message.
- 2 Input the phone number of the person you are sending the message and then press **OK** .
- 3 Input any text message to go along with the forwarded message and then press **OK** [SEND].

SAVE PICTURE (MMS PIX)

- 1 Select to save a picture to the "My PIX" folder.

SAVE VIDEO (MMS VIDEO)

- 1 Select to save a video to the "My FLIX" folder.



- "Reply with Copy" menu appears only when you receive a TXT message.
- "Save Picture" menu appears only when you receive a PIX message.
- "Save Video" menu appears only when you receive a FLIX message.

SAVE SOUND

- 1 If you receive a EMS message, select to save a sound to the "My Ringtones" folder.
If you receive a MMS message, select to save a sound to the "My Sounds" folder.

SAVE GRAPHIC

- 1 Select to save a graphic to the "My Graphics" folder.

SAVE QUICK TEXT

- 1 Select to save received text msg to "Quick Text".

TO CONTACTS

- 1 Select to save number to contacts.

LOCK/UNLOCK

- 1 Select to lock or unlock the TXT or PIX/FLIX message.
- 2 Select "Lock" to lock the message or "Unlock" to unlock the message and then press **OK**.

MESSAGE INFO

- 1 Select to show received PIX/FLIX message information.

 


 


- "Save Sound", "Save Graphic" menu appears only when you receive a TXT, PIX/FLIX or EMS message.
- "Message Info" menu appears only when you receive a PIX/FLIX message.
- Place a call to a received message number (Include Fr/CB phone number) by simply pressing **SEND**.

SENT

Manages sent TXT, PIX/FLIX messages or messages waiting to be sent.

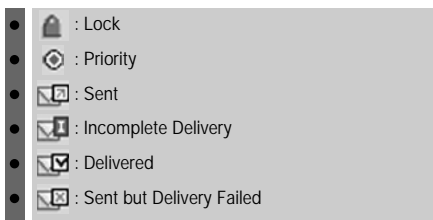

- 1 Press  [MESSAGE], press  "Sent".



- 2 Select a message and then press  [OPEN].
The message is displayed. To delete a message, press  [ERASE], press .

- 3 Press  [OPTIONS].

FORWARD

- 1 Select to forward the TXT or PIX/FLIX message.
- 2 Input the phone number of the person you are sending the message and then press .
- 3 Input any text message to go along with the forwarded message and then press  [SEND].

PLAY AGAIN

- 1 Select to play sent MMS message.



"Play Again" menu appears only when you send a MMS message.

SENT

RESEND

- 1 Select to resend a TXT or PIX/FLIX message.

ERASE

- 1 To erase this message, select "Erase Sent" and then select "Yes", press **OK** .

ERASE SENT

- 1 To erase all sent message, select "Erase Sent" and then select "Yes", press **OK** .

TO CONTACTS

- 1 Select to save number to contacts.

LOCK/UNLOCK

- 1 Select to lock or unlock the TXT or PIX/FLIX message.
- 2 Select "Lock" to lock the message or "Unlock" to unlock the message and then press **OK** .

SAVE QUICK TEXT

- 1 Select to save received text msg to "Quick Text".

MESSAGE INFO

- 1 Select to show send PIX/FLIX message information.

 






Place a call to a send message number by simply pressing **SEND** .

DRAFTS

Draft Folder contains any draft messages or saved messages. If message composition is interrupted by a voice call or other interrupting event, the text of the current composition is automatically saved in the drafts folder.

- 1 Press  [MESSAGE], press  "Drafts".



- 2 Select a message and then press  [EDIT]. The message is displayed. To delete a message, press  [ERASE], press .
- 3 Press  [OPTIONS].


SEND

- 1 Select to send a selected message.


TO CONTACTS

- 1 Select to save number to contacts.


LOCK/UNLOCK

- 1 Select to lock or unlock the TXT or PIX/FLIX message.
- 2 Select "Lock" to lock the message or "Unlock" to unlock the message and then press .

ERASE DRAFTS



- 1 To erase this message, select "Erase Drafts" and then select "Yes", press .

VOICEMAIL




Displays the number of voice mails and accesses them by pressing .

- 1 Press  [MESSAGE], press  "Voicemail".





FIRST TIME USER

- 1 Dial *86 and then press  [SEND].
- 2 At the recording, press .
- 3 To set up your account follow the voice tutorial.

EXISTING USER




- 1 Dial *86 and then press  [SEND].
- 2 At the recording, enter your 4 digits password, and then press .
- 3 To listen to new messages, press .

E- MAIL



-  Press  [MESSAGE], press  "E-mail".
-  Browser launches.

MOBILE IM


 
GET NEW

- 1** Press  [MESSAGE], press  "Mobile IM" and then select  "Get New App." with Navigation Key.
- 2** Launch "Get It Now".








MOBILE IM

- 1** Press  [MESSAGE], press  "Mobile IM" and then select "Mobile IM" with Navigation Key.
- 2** Connect "Mobile IM".

CHAT

- 1** Press  [MESSAGE], press  "Chat".
- 2** Browser launches.

ERASE ALL




- 1** Press  [MESSAGE], press  [OPTIONS].
- 2**
 - 2.1. To erase all the inbox messages, press  [ERASE INBOX].
 - 2.2. To erase the sent messages, press  [ERASE SENT].
 - 2.3. To erase all the drafts messages, press  [ERASE DRAFTS].
 - 2.4. To erase the all message, press  [ERASE ALL].
- 3** Select "Yes" and then press .


SETTINGS

Set messaging preferences and default settings.

ALL MSG SETTINGS

AUTO SAVE

1 Press  [MESSAGE], press , press  "All Msg".




2 Press  [AUTO SAVE].
Select "On", "Off" or "Prompt" with the Navigation Key.

 
- On : All sent messages saved in the Sent box.
- Off : All sent messages not saved in the Sent box.
- Prompt : "Yes", "No" dialogue box displayed after sent message.

3 Press .

AUTO ERASE

Automatically erases inbox messages when new messages arrive.

1 Press  [MESSAGE], press , press  "All Msg".

2 Press  [AUTO ERASE].
Select "On" or "Off" with the Navigation Key.









- On : Oldest message erased from inbox automatically when message is full.
- Off : Oldest message not erased from inbox automatically when message is full.

3 Press .

SETTINGS

QUICK TEXT






To edit the Quick Text message you have saved:

- 1 Press  [MESSAGE], press  [SETTINGS], press  "All Msg".
- 2 Press  [QUICK TEXT].
 - 2.1. Select a message from the list.
Press  .
 - 2.2. To add a new Quick Text message, press  [NEW], then enter text, press  .
- 3 To erase the saved Quick Text message, press  [ERASE].

Pre-defined quick text as below.

1. What's up?/2. Let's meet./3. Check this out!/4. Whacha doing?/5. Thanks/6. What do you think?/7. You've gotta be here to enjoy this./8. Would you like to join me for a date tonight?/9. On my way./10. Yes/11. You're the best!/12. Call me.






VOICEMAIL#

- 1 Press  [MESSAGE], press  [SETTINGS], press  "All Msg".
- 2 Press  [VOICEMAIL#].
Input a new voice call back number or edit voice call back number.
- 3 Press  .

SETTINGS






ENTRY MODE

Sets an Entry Mode as a default. For example, if Word Mode is the default, its icon will appear.

- 1** Press  [MESSAGE], press  [SETTINGS], press  "All Msg".
- 2** Press  [ENTRY MODE].
Select "Word", "Abc", "ABC", "123" or "Symbols" with the Navigation Key.
- 3** Press .

CALLBACK






Edits a default callback number so that the recipient can callback or reply.

- 1** Press  [MESSAGE], press  [SETTINGS], press  "All Msg".
- 2** Press  [CALLBACK#].
- 3** Input a new callback number, press .

SETTINGS

ALL MESSAGE SIGNATURE

Create a signature that can be automatically inserted at the end of all TXT and PIX messages.



 
- 1** Press  [MESSAGE], press , press  "All Msg".
- 2** Press  [SIGNATURE].
To activate Signature function, put the cursor on Insert Signature then select "Custom" by using up or down direction keys. To deactivate Signature function, select "None".
- 3** To input "Signature", put the cursor on Edit Signature and then enter Signature Edit window by using right or left direction keys.
- 4** Press .


SETTINGS

TXT MSG SETTINGS

TXT AUTO VIEW

If the "Auto View" is set to on, the user will be able to view the message. If the "Auto View" is set to off, the user can view the message by entering SMS Menu-> Inbox.

1 Press  [MESSAGE], press , press  "TXT Msg".



 
2 Press  [TXT AUTO VIEW].
Select "On" or "Off" with the Navigation Key.

 
- On : Text message displayed automatically.
- Off : Text message displayed by going to the inbox or responding to interactive notification.

3 Press .

TXT MESSAGE SIGNATURE

Create a signature that can be automatically inserted at the end of a message.

1 Press  [MESSAGE], press , press  "TXT Msg".

2 Press  [SIGNATURE].
To activate Signature function, put the cursor on Insert Signature then select "Custom" by using up or down direction keys. To deactivate Signature function, select "None".

3 To input "Signature", put the cursor on Edit Signature and then enter Signature Edit window by using right or left direction keys.

4 Press .

SETTINGS

PIX-FLIX MSG SETTINGS

AUTO RECEIVE

1 Press [MESSAGE], press [SETTINGS], press [3 def] "PIX-FLIX Msg".

2 Press [1 op / 2 *] [AUTO RECEIVE].
Select "On" or "Off" with the Navigation Key.

- On : PIX msg downloaded automatically.
- Off : PIX message must be retrieved from the inbox or at new TXT message prompt.

3 Press [OK] .

PIX-FLIX MESSAGE SIGNATURE

Create a signature that can be automatically inserted at the end of a message.

1 Press [MESSAGE], press [SETTINGS], press [3 def] "PIX-FLIX Msg".

2 Press [2 abc] [SIGNATURE].
To activate Signature function, put the cursor on Insert Signature then select "Custom" by using up or down direction keys. To deactivate Signature function, select "None".

3 To input "Signature", put the cursor on Edit Signature and then enter Signature Edit window by using right or left direction keys.

4 Press [OK] .

Chapter 7

MOBILE WEB 2.0


This chapter addresses Internet services and web browsing. For more detailed information contact your service provider.

- STARTING INTERNET BROWSER
- BROWSER MENU



STARTING INTERNET BROWSER

LAUNCHING MOBILE WEB 2.0

Now you can access news, sports, weather, and e-mail from your phone. Mobile Web 2.0 keeps you updated by providing access to up-to-date information such as news, sports, weather and stock quotes when you subscribe to Internet service with your service provider. Please contact your service provider for a list of available websites and service details.




- 1 To start your Internet browser and access websites through your wireless handset press .

BROWSER MENU

The browser menu lists the actions necessary to operate the browser. To access, press  and then press  [MENU].




VZW HOME

Returns the user to the home page.

- 1 To select "VZW Home".
Press , then press  [MENU] .

ADD FAVORITE

Takes user to the VZW Add Favorite page.

- 1 To select "Add Favorite".
Press , then press  [MENU] .






For favorites, page name and URL need to auto-populate.

BROWSER MENU




SEARCH

Takes user to the VZW Search page.

- 1 To select "Search".
Press  , then press  [MENU] .




GO TO URL

Takes user to the VZW Search>Go to Site page.

- 1 To select "Go to URL".
Press  , then press  [MENU] .




SHOW URL

Displays the current URL.

- 1 To select "Show URL".
Press  , then press  [MENU] .




BACK

Provides the ability to redisplay the page previously displayed.

- 1 To select "Back".
Press  , then press  [MENU] .

MANAGE MEMORY

Will display following list of options.


- 1 To select "Manage Memory".
Press  , then press  [MENU] .

- **Clear Cache** : Clears the cache.
- **Clear History** : Clears the list of recently visited URLs.
- **Clear Cookies** : Clears saved cookies.
- **Autofill** : Automatically fills in character for browser recognized words.

BROWSER MENU

SETTINGS

1 To select "Settings", will display following list of options




Press  , then press  [MENU]  .

- **Downloads** : Selecting the "Downloads" item allows the user to enable/disable downloading images, background sounds, and object downloads when a URL is accessed.
- **Restart Browser** : Selecting "Restart Browser" causes the history and cache to be cleared and returns the user to the homepage.
- **Scroll Mode** : Selecting "Scroll Mode" from the Settings menu allows the user to select the way text scrolls and the scroll speed.
- **Send Referrer** : When the "Send Referrer" item is selected from the Settings menu, the browser allows the user to turn on or off sending the referrer URL.
- **Key Press Time Out** : When the "Key Press Timeout" item is selected from the Settings menu, the browser allows the user to set the key press timeout as fast, medium or slow. Medium is 1.5 seconds, slow 2 seconds and fast is 1 second. The key press timeout is the period of time after which the cursor auto-advances to the next entry position. In most cases, a single key can be used to enter more than one character. Each time the key is pressed the last character of the line is replaced by the next choice for that key. As long as the same key is re-pressed within key press timeout, the last character cycles between all the choices for the key.
- **Connection Time Out** : When the Connection Timeout item is selected from the Settings menu, the browser allows the user to set the connection timeout. The connection timeout determines how long the browser will wait for a response from the network for a network request.

BROWSER MENU


ADVANCED

1 To select “Advanced”, will display following list of options.

Press  , then press  [MENU]  .

- **About...** : Displays the name of the supplier of the Browser and the Browser SW version.
- **Refresh** : Allows the user to reload the current URL.
- **History** : Displays the previous 20 number of visited URLs, where X=20.
- **Encryption** : Displays the following list of options.
 1. **Authentication** : Gives the option to turn Authentication Caching ON or OFF.
 2. **Root Certificate** : Shows the root security keys for TLS.
 3. **Current Certificate** : Shows the current site security key for TLS (if applicable).

EXIT

Press  , the user exits out of the browser and is returned to the phone idle mode.

MEMO

Chapter 8

SAFETY AND WARRANTY

This chapter addresses the safety guidelines and precautions to follow when operating your phone. Before operating your phone, please be aware of all the safety details.

This chapter contains the terms and conditions of services and the warranty for your phone. Please review them thoroughly.

- SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES
- SAFETY INFORMATION FOR FCC RF EXPOSURE
- SAR INFORMATION
- FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES
- FDA CONSUMER UPDATE
- PROTECT YOUR WARRANTY
- 12 MONTH LIMITED WARRANTY
- ADDITIONAL SAFETY INFORMATION

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

*Read This Information Before Using Your Handheld
Portable Cellular Telephone*

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *
NCRP Report 86 (1986) *
ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

1* : American National Standards Institute.

2* : National Council on Radiation protection and measurements.

3* : International Commission on Nonionizing Radiation Protection.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving, please:

- Give full attention to driving. Safe driving is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions so require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers :

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

OTHER MEDICAL DEVICES

If you use any other personal medical device, consult with the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

POSTED FACILITIES

Turn your phone OFF where posted notices so require.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

OTHER SAFETY GUIDELINES

AIRCRAFT

FCC and Transport Canada Regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

BLASTING AREAS

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle’s engine.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.



DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.



DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using, lay down the unit to avoid possible damage due to instability.



DO NOT expose this equipment to rain or spilled beverages.



DO NOT use unauthorized accessories.



DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized cellular service center. If unit is disassembled, the risk of electric shock or fire may result.



DO NOT short-circuit the battery terminals with metal items etc.



WARNING!

- *This product contains a chemical known to the State of California to cause cancer.*
- *This product contains a chemical known to the State of California to cause birth defects or other reproductive harm.*

SAFETY INFORMATION FOR FCC RF EXPOSURE



WARNING! Read this Information before using

CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION

This device was tested for typical body-worn operations with the back of the phone kept 2.2 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 2.2 cm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



For more information about RF exposure, please visit the FCC website at www.fcc.gov.

SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.37 W/Kg and when worn on the body, as described in this user guide, is 0.537W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on PP4PN-E330.

SAR INFORMATION

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

 
While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

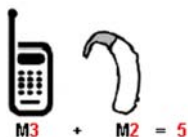

FCC HEARING-AID COMPATIBILITY (HAC) REGULATIONS FOR WIRELESS DEVICES

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

For information about hearing aids and digital wireless phone

- **Fcc Hearing Aid Compatibility and Volume Control**
<http://www.fcc.gov/cgb/dro/hearing.html>
- **Gallaudet University, RERC**
<http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm>
- **Self Help for Hard of Hearing People Inc. [SHHH]**
www.hearingloss.org/hat/TipsWirelessPhones.htm
- **The Hearing Aid Compatibility FCC Order**
http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf

FDA CONSUMER UPDATE



U.S. Food and Drug Administration -Center for Devices and Radiological Health Consumer Update on Wireless Phones

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function;

and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some inter-agency working group activities, as well. FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term "wireless phone" refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones.

FDA CONSUMER UPDATE

These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be predisposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world.

The Project has also helped develop a series of public information documents on EMF issues. FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless phones ?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a "compatible" phone and a "compatible" hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones (<http://www.fda.gov/cdrh/phones/index.html>)
- Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)
- National Radiological Protection Board (UK) (<http://www.nrp.org.uk/>)

PROTECT YOUR WARRANTY

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

“Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling misuse, neglect or accident”.

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Pantech product. Be careful. Some of these products may not be compatible to use with your pantech product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-pantech accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Pantech product.

NOKIA
Connecting People

12 MONTH LIMITED WARRANTY

Pantech Personal Communications (the Company) warrants to the original retail purchaser of this Audiovox handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to Pantech Personal Communications for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, Pantech Personal Communications is not responsible for and does not guarantee restoration of any third-party software,

12 MONTH LIMITED WARRANTY

personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to Pantech Personal Communications for repair or service.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 905-712-9299).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

IN USA : PANTECH&CURITEL COMMUNICATION, INC.

ADDITIONAL SAFETY INFORMATION

OPERATING ENVIRONMENT

Your phone and its enhancements may contain small parts. Keep them out of the reach of small children.

Remember to follow any special regulations in force in any area and always switch off your phone when its use is prohibited or when it may cause interference or danger. Use the phone only in its normal operating positions. This phone meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 centimeters (7/8 inch) away from the body. When a carry case, belt clip, or holder is used for body-worn operation, it should not contain metal and should position the phone the above-stated distance from your body.

In order to transmit data files or messages, this phone requires a good quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

MEDICAL DEVICES

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices.

Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

PACEMAKERS

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless device or phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. To minimize the potential for interference, persons with pacemakers should:

- Always keep the phone more than 15.3 centimeters (6 inches) from their pacemaker.

ADDITIONAL SAFETY INFORMATION

- Not carry the phone in a breast pocket.
- Hold the phone to the ear opposite the pacemaker to minimize the potential for interference.

If you suspect interference, switch off your phone and move the phone away.

HEARING AIDS

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

VEHICLES

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the phone, or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the phone. Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

FCC regulations prohibit using your wireless phone while in the air. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

ADDITIONAL SAFETY INFORMATION

POTENTIALLY EXPLOSIVE ENVIRONMENTS

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine.

Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the phone at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, legal action, or both.

EMERGENCY CALLS

IMPORTANT: *Wireless phones, including this phone, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless phone for essential communications like medical emergencies.*

To make an emergency call, make sure your phone is properly charged before attempting any emergency calls. If your battery becomes empty, you cannot receive or make calls, including emergency calls and must wait a few minutes after the charging begins to place your call.

1. Press the end key as many times as needed to clear the display and ready the phone for calls.
2. Enter the official emergency number for your present location and press the send key. Emergency numbers vary by location.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless phone may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

ADDITIONAL SAFETY INFORMATION

CERTIFICATION INFORMATION (SAR)

THIS MOBILE DEVICE MEETS GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.668 W/kg.

Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 1.37 W/kg and when properly worn on the body is 0.537 W/kg. Information about this device model can be found at <http://www.fcc.gov/oet/fccid> by searching the equipment authorization system using FCC ID QMNRM-215.

ADDITIONAL SAFETY INFORMATION

HEARING AID COMPATIBILITY (HAC)

Your mobile device model complies with FCC rules governing hearing aid compatibility. These rules require an M3 microphone or higher value. The M-value, shown on the device box, refers to lower radio frequency (RF) emissions.

A higher M-value generally indicates that a device model has a lower RF emissions level, which may improve the likelihood that the device will operate with certain hearing aids. Some hearing aids are more immune than others are to interference. Please consult your hearing health professional to determine the M-rating of your hearing aid and whether your hearing aid will work with this device. More information on accessibility can be found at www.nokiaaccessibility.com.

TECHNICAL INFORMATION

Type designation — RM-215

Dimensions — Width, 47.6 mm; length, 89.5 mm; depth, 18.2 mm

Weight — 96.3 g with 950 mAh Li-Ion Battery

Display — 2.0-in, 176x220 pixels, 262k colors

Camera — Integrated 1.3M pixel with 4x digital zoom and flash

Wireless networks — CDMA 800 and 1900 MHz, and CDMA2000 1xRTT