

WELCOME

Thank you for choosing the new TX-120C, developed by top researchers to support the CDMA2000 1X system through Qualcomm-manufactured MSM6050 chips and CDMA technologies.

Among its many advanced features, the T9 input mode makes it much easier to enter words and names. In addition, the following state-of-the-art features make the TX-120C more user friendly:

- Full graphic display of 9 text input line and 1 icon line with variable font size.
- Voice Activated Dialing feature for easy dialing.
- T9 text input mode for easier message and name input.
- Web browsing & data services (i.e.; wireless internet access, Openwave, UP browser)
- Dual LCD Displays with inner TFT 65K Color LCD Display.
- Sophisticated features of speakerphone, and downloadable games, ringtones and graphics.

IMPORTANT INFORMATION

This TX-120C user guide contains very important information about how to handle and use the product. So please read this manual thoroughly, pay attention to the warranty on the back page and be alert to the exclusions and limitations of your warranty, which are related with the unauthorized use of components.

TABLE OF CONTENTS

CHAPTER 1. BEFORE USING YOUR PHONE	5
INSIDE THE PACKAGE	6
HANDSET DESCRIPTION	7
NAVIGATION KEY	8
THE FUNCTION KEYS	8
DISPLAY INDICATORS	9
BATTERY USAGE	10
BATTERY INSTALLATION	10
BATTERY REMOVAL	10
BATTERY CHARGING	11
POWER CONNECTION	11
CHARGING THE BATTERY WITH THE HANDSET	11
PCS AND 1X BATTERY TIMES	12
BATTERY LIFE (FOR NEW BATTERY)	12
BATTERY HANDLING INFORMATION	13
DOS	13
DON'Ts	13
CHAPTER 2. BASIC OPERATION	15
TURNING THE PHONE ON / OFF	16
TURNING THE PHONE ON	16
TURNING THE PHONE OFF	16
ACCESSING THE MENU	17
MENU SUMMARY	18
BASIC FUNCTIONS	21
MAKING A CALL	21
SPEAKERPHONE	22
PAUSE FEATURE	22
ANSWERING A CALL	23
CALLER ID FUNCTION	23
CALL WAITING FUNCTION	24
ADJUSTING VOLUME	24
MANNER MODE	25
LOCK	25
DURING A CALL	26
MUTE(UNMUTE)	26
SILENT	26
SEND MY PHONE #	26
MY PHONE NUMBER	27
HANDSET INFORMATION	27
MAKING AN EMERGENCY CALL	28
911 IN LOCK MODE	28
911 USING ANY AVAILABLE SYSTEM	28
CHAPTER 3. MEMORY FUNCTION	29
STORING A PHONE NUMBER	30
ENTERING LETTERS, NUMBERS & SYMBOLS	31
STANDARD INPUT MODE	32
T9 INPUT MODE	33
NUMERIC MODE	34
SYMBOL MODE	34
MAKING A CALL THROUGH THE PHONE BOOK	35
SPEED DIALING	35
CHAPTER 4. MENU FUNCTION	37
PHONE BOOK	38
FIND	38
BY NAME	38
BY NUMBER	39
ADD NEW	40
GROUP	40
ADD NEW GROUP	40
CHANGE GROUP NAME	41
ERASE GROUP	41

TABLE OF CONTENTS

SPEED DIAL	42
MSG. GROUP	42
ADD NEW MSG. GROUP	42
CHANGE MSG. GROUP NAME	43
SEND MSG. GROUP	43
ERASE GROUP	43
MY PHONE #	44
RECENT CALLS	45
ALL CALLS	45
MISSED CALLS	46
RECEIVED CALLS	47
DIALED CALLS	48
CALL TIMERS	49
LAST CALL	49
ALL CALLS	49
HOME CALLS	49
ROAM CALLS	50
CUMULATIVE CALLS	50
GET IT NOW	51
START GET IT NOW	51
DOWNLOADING APPLICATIONS	51
DOWNLOADING MELODIES/WALLPAPERS	51
APPLYING MELODIES/WALLPAPERS	52
CHECKING DATA FOLDER MEMORY	52
ERASING AN APPLICATION	52
MOBILE WEB	53
CONNECT WEB	53
BOOKMARK	53
ADD BOOKMARK	53
SAMPLE1	53
SAMPLE2	53
SAMPLE3	53
SAMPLE4	53
MEDIA GALLERY	54
IMAGES	54
FRAME	54
GRAPHICS	54
ANIMATIONS	54
PHOTOS	55
TONES	55
SETTINGS	56
SOUNDS	56
RINGER TYPE	56
VOLUME	57
ALERT	58
ROAM RINGER	59
TONE LENGTH	59
DISPLAY	60
MENU STYLE	60
GRAPHICS	60
SUB SCREEN	62
GREETING MESSAGE	63
CONTRAST	63
BACKLIGHT	64
INTERNET	64
UP PROXY IP	64
HOME URL	64
WEB IDLE TIME	65
DATA SVC.	65
SECURITY	66
PHONE LOCK	66
RESTRICT	66
CHANGE CODE	69
SPECIAL #'S	69
ERASE ALL	70

TABLE OF CONTENTS

RESET PHONE	70
OTHERS	71
ANSWER OPTIONS	71
AUTO RETRY	72
VOICE DIAL	73
LANGUAGE	73
VOICE PRIVACY	73
TTY MODE	74
LOCATION	74
HANDSET INFO	75
SW VERSION	75
HW VERSION	75
GET IT NOW VERSION	75
SYSTEM	76
SET MODE	76
FORCE CALL	76
NAM SETTING	77
PRL ID	77
UTILITIES	78
EVENT	78
ADD PLAN	78
VIEW EVENT LIST	79
ALARM	80
MEMO PAD	81
ADD MEMO	81
VIEW MEMO	81
SETTINGS	81
CALCULATOR	82
WORLD CLOCK	82
STOPWATCH	83

CHAPTER 5. VOICE SERVICE	85
VOICE RECOGNITION MODE	86
NAME	86
DIAL	87
REDIAL	88
VOICE MEMO	88
PHONE BOOK	89
CANCEL	89
VOICE SERVICE MENU	90
VOICE MEMO	90
VOICE DIAL	91
LIST	91
ADD	92
CLEAR ALL	92
TRAIN WORD	93
YES	93
NO	93
WAKE-UP	94
UNDO TRAIN ALL	94

CHAPTER 6. VOICE MAIL AND TEXT MESSAGE	95
WHEN A NEW MESSAGE ARRIVES	96
VOICE MAIL	96
SEND MESSAGE	97
INBOX	98
REPLY	98
REPLY WITH COPY	98
FORWARD	98
SAVE TO SAVED	99
SAVE TO QUICK TEXT	99
SAVE TO CONTACT	99
LOCK & UNLOCK	99

TABLE OF CONTENT

OUTBOX.....	100
CHECKING SENT TEXT MESSAGES.....	100
RESEND.....	100
SEND TO.....	100
SAVE TO CONTACT.....	101
SAVE TO SAVED.....	101
LOCK & UNLOCK.....	101
STATE.....	101
SAVED.....	102
SAVED.....	102
MY OBJECT.....	103
MY OBJECT.....	103
QUICK TEXT.....	104
QUICK TEXT.....	104
ERASE ALL.....	105
ERASE MESSAGES.....	105
SETTINGS.....	106
SAVE SENT MSG.....	106
DEFAULT CALL BACK.....	106
ALERT.....	106
AUTO ERASE.....	107
AUTO ERASE INBOX.....	107
AUTO ERASE OUTBOX.....	107
ENTRY MODE.....	107
BLOCK OR UNBLOCK.....	108
EDIT SIGNATURE.....	108
DIRECT VIEW.....	108
CHAPTER 7. WEB BROWSING.....	109
START INTERNET BROWSER.....	110
ACCESS THE INTERNET.....	110
BROWSER MENU.....	110
BACK.....	110
HOME.....	110
EXIT.....	110
MARK SITE.....	111
BOOKMARKS.....	111
INBOX.....	111
RELOAD.....	111
SETTINGS.....	112
HOMEPAGE.....	112
PROXY.....	112
CIRCUIT LINGER.....	112
SCROLL MODE.....	112
SCROLL SPEED.....	112
KEY PRESS TIMEOUT.....	112
SECURITY.....	113
ADVANCED.....	113
CHAPTER 8. SAFETY AND WARRANTY.....	115
SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES.....	116
DRIVING SAFETY.....	117
ELECTRONIC DEVICES.....	118
OTHER SAFETY GUIDELINES.....	119
PRECAUTIONS.....	120
SAFETY INFORMATION FOR FCC RF EXPOSURE.....	121
CAUTIONS.....	121
SAR INFORMATION.....	122
FDA CONSUMER UPDATE.....	124
PROTECT YOUR WARRANTY.....	128
12 MONTH LIMITED WARRANTY.....	129

Chapter 1

BEFORE USING YOUR PHONE

This chapter provides important information about using the TX-120C including:

- INSIDE THE PACKAGE
- HANDSET DESCRIPTION
- BATTERY USAGE
- BATTERY HANDLING INFORMATION



INSIDE THE PACKAGE

This package should include all items pictured below. If any are missing or different, immediately contact the retailer where you purchased the phone.

IC
1



6

HANDSET DESCRIPTION

 
This phone is a tri mode (800 MHz Amps/CDMA, 1900 MHz PCS) CDMA2000 1X digital phone with web browsing capabilities. The TX-120C weighs XX oz. And the dimensions are X.X" x X.X" x X".

IC
1




7

HANDSET DESCRIPTION

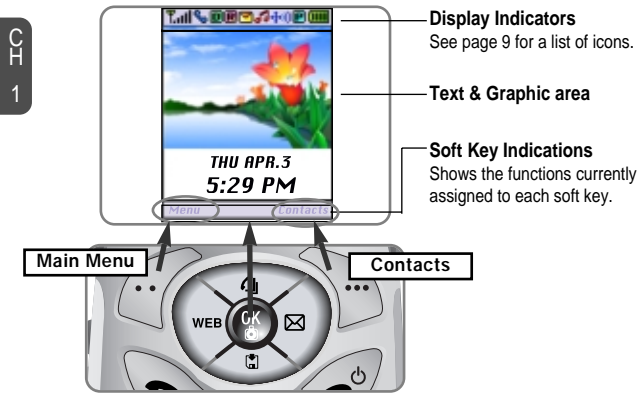

NAVIGATION KEY

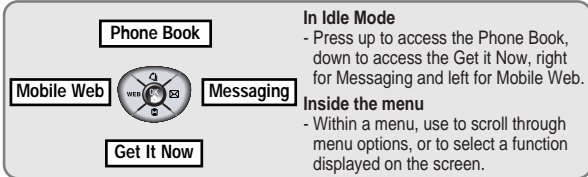 

THE FUNCTION KEYS

- Press to make or receive a call.
Press and hold to activate VR mode.
- Press to turn the phone on/off, to terminate a call or to return to the idle display.
- (Soft 1) Press to access the menu or function displayed on bottom line.
- (Soft 2) Press to access a voice or text message.
- Press and hold to access internet service.
- Press to clear a digit from the display or to return to the previous page.
Press and hold to enable speakerphone mode.
- Press and hold to enter manner (vibrate) mode.

HANDSET DESCRIPTION





- Press and hold to enter lock mode.
- Press to scroll through the items and adjust volume up/down.

DISPLAY INDICATORS

- Signal Strength**
Current signal strength – the more lines, the stronger the signal.
- Roaming**
Phone is out of home area.
- Service Indicator**
 Indicates call is in progress, indicates the phone cannot receive a signal from the system.
- Message**
New text or voice message.
- Digital mode**
Phone is operating in digital mode.
- Battery**
Battery charging level – the more blocks, the stronger the charge.
- Mute**
Phone is mute during a call.
- Silent**
Appears when Silent is selected as the ring mode.
- Emergency Call**
Blinks when an emergency call is in progress.
- Voice Memo**
New voice memo has been recorded.
- Answering machine**
Phone is in answering machine mode.
- Manner Mode**
Phone will vibrate when call is received.
- Schedule**
Appears when either an event or an alarm is set.
- Ring Mode**
Appears when a ringer is set as a ringer mode.

 
BATTERY USAGE

IC
1

-  **GPS Icon**
Location On
-  **GPS Icon**
911 Only
-  **1X**
Phone is in the 1x service area.
-  **Pause**


BATTERY INSTALLATION

- 1 Place the battery on the back of the handset and slide into place. 2 Push the battery down until it locks into place.

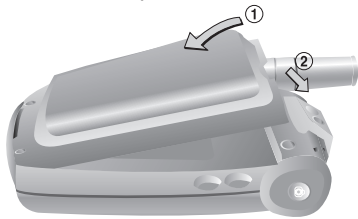

BATTERY REMOVAL

 - 1 Pull down the release latch, lift up the battery and 2 remove the battery from the handset.

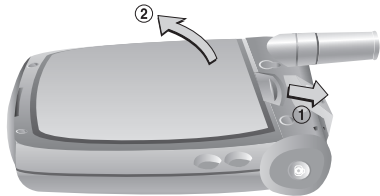

NOTE Make sure the battery is securely placed to avoid detaching from the phone.

BATTERY USAGE

BATTERY CHARGING

POWER CONNECTION

- 1 Plug the AC charger into a standard outlet.



- The red LED indicates charging is in progress.
- The green LED indicates charging is completed.

NOTE Fully charge the battery before using - it is not charged when purchased.

CHARGING THE BATTERY WITH THE HANDSET

- 1 Attach the handset (with battery attached) to the charger.



- NOTE**
- It is more efficient to charge the battery with the phone turned off.
 - If the red LED does not illuminate when charging, check the power connection and make sure the handset is securely in place.

BATTERY USAGE

IC
1

PCS AND 1X BATTERY TIMES

The operating time is subject to your handset usage and configuration.

Status \ Type	CDMA	AMPS
Talk (min)	150	103
Stand by (hrs)	103	25

BATTERY LIFE (FOR NEW BATTERY)

The operating time is subject to your handset usage and configuration.

Status \ Type	CDMA	AMPS
Talk (min)	150	103
Stand by (hrs)	103	25

12

BATTERY HANDLING INFORMATION

DOs

- Only use the battery and charger approved by the manufacturer.
- Only use the battery for its original purpose.
- Try to keep batteries in a temperature between 41°F (5°C) and 95°F (35°C).
- If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Completely drain the battery before recharging. It may take one to four days to completely drain.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly dispose of the battery according to local laws.

DON'Ts

- Don't attempt to disassemble the battery – it is a sealed unit with no serviceable parts.
- Don't accidentally short circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery.
- Don't leave the battery in hot or cold temps. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Don't dispose of the battery into a fire.

13

IC
1

MEMO

CI
1

Chapter 2

BASIC OPERATION


CH
2

This chapter addresses and explains the basic features of your phone including

- TURNING THE PHONE ON / OFF
- ACCESSING THE MENU
- MENU SUMMARY
- BASIC FUNCTIONS
- DURING A CALL
- MAKING AN EMERGENCY CALL

TURNING THE PHONE ON / OFF


TURNING THE PHONE ON

- 1 Press  until your "Power On" logo appears and the tone sounds.



- To select a logo, refer to page 60 for more details. (Settings>Display>Graphics) for more detail.
- If "Password" is displayed, the phone is locked. Enter your 4-digit password to unlock your phone.
- The default password is the last 4 digits of your phone number.

TURNING THE PHONE OFF

 
- 1 Press and hold  until your "Power Off" logo appears.







- Immediately change or recharge the battery when "Low Battery Warning Power Off" appears on the display. Memory may possibly be damaged if the phone turns off due to the battery completely draining.
- Turn the phone off before removing or replacing the battery. If the phone is on, data may be lost.

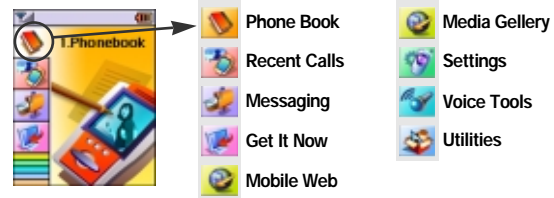ACCESSING THE MENU

Your phone can be customized via the menu. Each function can be accessed by scrolling with the navigation key or by pressing the number that corresponds with the menu item.



- 1 To access the menu in idle mode, press  [MENU].
- 2 Use the Navigation key to scroll through the menu.
- 3 To return to the previous page, press  [BACK]. To exit the current menu and return to idle mode, press .
- 4 Press  to select a highlighted option or press the option's number to access it.

MENU SUMMARY

CH
2

1. Phone Book	1. Find	1. By Name 2. By Number	
	2. Add New		
	3. Group		
2. Recent Calls	4. Speed Dial		
	5. Msg. Group		
	6. My Phone #		
3. Messages	1. All Calls		
	2. Missed Calls		
	3. Received Calls		
4. Get It Now	4. Dialed Calls		
	5. Call Timers		
	1. Voice		
5. Mobile Web	2. Send New		
	3. Inbox		
	4. Outbox		
6. Media Gallery	5. Saved		
	6. My Object		
	7. Quick Text		
7. Settings	8. Erase All		
	9. Settings		
	1. Games		
8. Call Settings	2. Ringer		
	3. Graphics		
	1. Connect Web		
9. Call Settings	2. Bookmark		
	1. Last Call		
	2. All Calls		
10. Call Settings	3. Home Calls		
	4. Roam Calls		
	5. Cumulative Calls		
11. Call Settings	1. Inbox		
	2. Outbox		
	3. Saved		
12. Call Settings	4. My Object		
	5. Quick Text		
	1. Save Sent MSG		
13. Call Settings	2. Default Callback		
	3. Alert		
	4. Auto Erase		
14. Call Settings	5. Entry Mode		
	6. Block or Unblock		
	7. Edit Signature		
15. Call Settings	8. Direct View		
	1. Get New		
	2. Game1		
16. Call Settings	3. Game2		
	1. Get New		
	2. Ringer1		
17. Call Settings	3. Ringer2		
	1. Get New		
	2. Sample1		
18. Call Settings	3. Sample2		
	1. Add Bookmark		
	2. Sample1		
19. Call Settings	3. Sample2		
	4. Sample3		
	5. Sample4		
20. Call Settings			



MENU SUMMARY

CH
2

6. Media Gallery	1. Images	1. Frame 2. Graphics 3. Animations	
	2. Photos		
	3. Tones		
7. Settings	1. Sounds	1. Ringer Type	
		2. Volume	
		3. Alert	
8. Call Settings	2. Display	4. Roam Ringer 5. Tone Length	
		1. Menu Style	
		2. Graphics	
9. Call Settings	3. Internet	3. Sub Screen 4. Greeting Message 5. Contrast	
		6. Backlight	
		1. UP Proxy IP 2. Home URL 3. Web Idle Time 4. Data Svc.	
10. Call Settings	4. Security	1. Phone Lock 2. Restrict	
		3. Change Code 4. Special #'s 5. Erase All 6. Reset Phone	
11. Call Settings			
12. Call Settings			
13. Call Settings			
14. Call Settings			
15. Call Settings			
16. Call Settings			
17. Call Settings			
18. Call Settings			
19. Call Settings			
20. Call Settings			

MENU SUMMARY

 CH
2

5. Others	1. Answer Options	1. Call Answer 2. Active Flip 3. Auto Answer
	2. Auto Retry	1. Retry Time 2. Repeat
6. Phone Info.	3. Voice Dial	1. Set Active 2. HFK Mode
	4. Language	
7. System	5. Voice Privacy	
	6. TTY Mode	
8. Voice Tools 	7. Location	
	1. S/W Version	
9. Utilities 	2. H/W Version	
	3. Get It Now Version	
1. Voice Memo	1. Set Mode	
	2. Force Call	
2. Voice Dial	3. Nam Setting	1. Auto NAM 2. Change NAM
	3. Train Word	
3. Memo Pad	4. PRL ID	
	4. Voice Setting	
4. Calculator	1: Record	
	5. World Clock	2: Play
6. Stopwatch	3: Play Speaker	
		4: Erase All
	1: Record	
	2: Play	
	3: Play Speaker	
	4: Erase All	
	1: Yes	
	2: No	
	3: Wake-Up	
	4: Undo Train All	
	1: Set Active	
	2: HFK Mode	
	1: Add Plan	
	2: View Event List	
	1: Item 1	
	2: Item 2	
	3: Item 3	
	1: Add Memo	
	2: View Memo	
	3: Settings	



BASIC FUNCTIONS

MAKING A CALL

1 Enter a phone number.



To modify the phone number you have entered :


- To erase one digit at a time press .
- To erase the entire number, press and hold .

CH
2




2 Press .
The indicator, , will be displayed.




- If "Call Failed" is displayed or if the line is busy, press .
- If you activate the "Auto Rerty" function, the phone will automatically retry the phone number for the set amount of times selected. (refer to page 72).
- When you place or receive a call to/from stored phone numbers, both the name and phone number will be displayed.
- You can also make calls using VR mode (voice activated dialing). Please refer to page 87 for more details.



3 To end a call, press .

BASIC FUNCTIONS

SPEAKERPHONE




- 1 To activate the speakerphone in idle, answering or calling modes, press and hold .
- 2 After you have ended your call, speakerphone mode deactivates.



The phone resets to Speakerphone Off when it is turned off and on again.




PAUSE FEATURE


Pauses are used for automated systems (i.e., voice mail, calling cards). Insert a pause after a phone number then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.


- 1 Enter a phone number, then press  [PSE] to insert a pause.
- 2 Press  to dial or  [STO] to store. Please refer to page 30 for more details about storing a phone number.

BASIC FUNCTIONS

ANSWERING A CALL

- 1 To answer a call, press any key except ,  or .

- In the Settings menu, you can select either "Any Key" or "Send Key" to answer a call. If "Send Key" is selected, the phone can only be answered by pressing . See page 71 for more information.

- 2 To end the call, press .



In Auto Answer Mode, a call is automatically answered after a preset number of rings. See page 72 for more information.

CALLER ID FUNCTION

Displays the caller's name and phone number, if available in the phone book. This feature is system dependent. Please contact your service provider for details.



The caller ID is stored in the call history.

BASIC FUNCTIONS

CALL WAITING FUNCTION

Notifies you of an incoming call when you are already on a call by sounding a beep tone and displaying the caller's phone number.

CH
2

- 1 To answer another call while on a call, press . This places the first call on hold. To switch back to the first caller, press again.

ADJUSTING VOLUME

Adjusts the volume of the ringer, key tone and speaker.

- 1 Press [MENU] and select one of the following.

- Ringer – Controls the ringer volume.
- Key Tone – Controls the keypad tone.
- Voice Call – Controls the speaker & earpiece volume.

- 2 Adjust volume and press [OK] to save the setting.

NOTE Press the navigation key to the left or right to adjust the earpiece volume during a call.

BASIC FUNCTIONS

MANNER MODE

Mutes key tones and activates the vibration mode to alert you of an incoming call or message.

CH
2

- 1 To turn manner mode on/off, press and hold . will be displayed to indicate manner mode is active.

LOCK


Locks your phone to prevent unauthorized use. Your phone can only be used after inputting the password.

- 1 To lock the phone, press and hold .
- 2 To unlock the phone, press then input the password.

Lock feature will deactivate when the phone is power off. Upon next power up, you will need to press to lock your phone again.

NOTE The default password is the last 4 digits of your phone number.



DURING A CALL

To display menu options during a call, press .

MUTE (UNMUTE)

Mutes the microphone while you are on a call so the other party cannot hear you if you speak.



1 Press  [MENU] .

- To deactivate, press  [MENU] .
- The phone will automatically un-mute in Emergency Call or Callback mode.

SILENT

Prevents the other end from hearing tones if any key is pressed during a call.

1 Press  [MENU] .

- Press  [MENU]  to deactivate it.

SEND MY PHONE

Automatically transmits your phone number to a pager during a call. (Dependent on pager service)

1 To transmit your phone number during a call press  [MENU] .

DURING A CALL

MY PHONE NUMBER

Displays your phone number.

1 Press  [MENU] .


HANDSET INFORMATION

Notifies you of your handset information. Please see page 75 for more details.

1 Press  [MENU] .


MAKING AN EMERGENCY CALL

911 IN LOCK MODE

- 1 Enter "911" and press .
- 2 The call connects.
- 3 The phone exits the Lock Mode for 5 minutes.

When the call ends, the phone returns to the Lock Mode.

911 USING ANY AVAILABLE SYSTEM

- 1 Enter "911" and press .
- 2 The call connects.
- 3 The phone maintains the Emergency Mode for 5 minutes.

- When the call ends, the phone returns to the Lock Mode.
- The phone continuously attempts to receive service from any available system.

Chapter 3

MEMORY FUNCTION

This chapter addresses memory functions including:

- STORING A PHONE NUMBER
- ENTERING LETTERS, NUMBERS & SYMBOLS
- MAKING A CALL THROUGH THE PHONE BOOK

STORING A PHONE NUMBER

The phone book stores up to 300 entries.

 
- 1 Enter phone # and press [SAVE].
- 2 Choose "New Contact" or "Existing Contact". Press [OK] to select.
- 3 The phone number will appear above a list of icons. The name of the icon is displayed below the list. Use the navigation key to choose the type of number you are entering, as indicated by the icon. Press [OK] to select.
 - Group - Family, Friends, Work, Etc.
 - Graphic.
 - Set Secret - Yes, No.
- 4 Enter a name and press [OK]. Follow instructions on page 31 for entering text. To change the input mode, press [MODE]. Press the navigation key down to select the group. Press the navigation key down to select other options (secret, email).
- 5 Use the Navigation key to scroll through more options for the entry (VAD, secret).
 - The other fields are set to Numeric mode as a default.
- 6 To store the entry, press [SAVE] "New contact added" will be displayed.

30

ENTERING LETTERS, NUMBERS & SYMBOLS

The input mode (Alpha editor) will be automatically activated when necessary to enter letters and numbers. As shown below, there are 4 available modes ; Standard input mode (abc), T9 input mode (T9abc), Numeric mode (123), and Symbol mode.

The input mode indicator appears on the lower right of the display when letters and numbers are entered. To select an input mode, press [MODE].

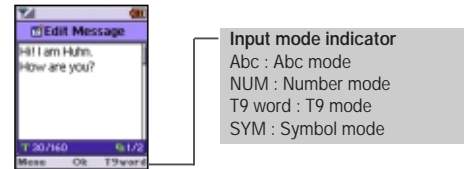

The following illustrates the function assigned to each key in the Alpha Editor.

KEY	FUNCTION
Mode	Press to change mode. [T9Abc][Abc][123][Symbol mode]
Next	Press to view the next matching word if the highlighted word is not the word you intended.
Space	Press to accept a word and add a space.
Shift	Press to select a letter case of the standard text input or T9 text input mode. [Abc], [ABC], and [abc] indicate the standard text input. [T9Abc], [T9ABC], and [T9abc] indicate the predictive text input.
Clear	Press to delete a character to the left of the cursor.
Save	Store the letters and numbers you enter.

31

ENTERING LETTERS, NUMBERS & SYMBOLS

STANDARD INPUT MODE

Use the digit keys to enter letters, numbers and characters.

- 1 Enter letters using the keypad as follows:

Keypad	1 Time	Repetitions 2 times	Repetitions 3 times	Repetitions 4 times	Repetitions 5 times
1	1	.	@	-	1
2ABC	A	B	C	2	A
3DEF	D	E	F	3	D
4GHI	G	H	I	4	G
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

To change the input mode, press [MODE].

- 2 To enter a space, press [SPACE]. After two seconds, the cursor will automatically move to the next column.
- 3 Repeat until letters are entered. There is a 16-letter limit.
- 4 To delete one digit, press [DEL]. To delete the entire entry, press and hold [DEL].
- 5 To change from lowercase to uppercase, press [CAPS].



Select Abc mode, by pressing [MODE].

When you select this mode, the Abc icon appears as a visual confirmation.

- "Find the key that corresponds to the letter you want to enter."
- Press it as many times as needed for the letter to appear on the screen.
- To enter the name "John":

Press [J] J
 Press [O] [O] [O] o
 Press [H] [H] h
 Press [N] [N] n

ENTERING LETTERS, NUMBERS & SYMBOLS

T9 INPUT MODE

The T9 input mode incorporates a built-in-dictionary to determine a word based on the entered characters. A word can be entered more quickly by pressing a key once per character.

- 1 Select the T9Abc mode by pressing [MODE].
- 2 Press a digit key once to enter the character you want and enter all the characters to input the word you want.
- 3 To view the next matching word, press [NEXT].
- 4 To accept matching word and enter a space, press [SPACE].



To enter a compound word.

- Enter the first part of the word and press [NEXT] to accept it.
- Enter the last part of the word and press [SPACE] to enter the word.



To enter "phone book" in the T9 input mode.

- Press [MODE] to select the T9 input mode and [CAPS] to choose the small letter case (T9abc).

- Press [P] [H] [O] [N] [E] and you will see "phone" highlighted. Press [NEXT] to see the next matching word and [NEXT] to select it.

- Press [B] [O] [O] [K] and you will see "book" highlighted. Press [NEXT] to move to the next matching word and [SPACE] to select the compound word and enter a space.

ENTERING LETTERS, NUMBERS & SYMBOLS

NUMERIC MODE

Enters numbers.

1 Press [MODE] to select Numeric Mode [NUM].

2 To enter a number, press a digit key.

SYMBOL MODE

Allows you to enter symbols.

1 Press [MODE] to select Symbol Mode [SYM].

 
2 Choose the symbol you want to enter with the navigation key.

- Use the navigation key to view a different line of symbols.

Press [],

or

Press [],

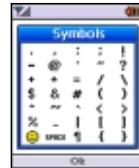

3 Press to select the symbol.

MAKING A CALL THROUGH THE PHONE BOOK

SPEED DIALING

Dials a number simply by pressing its location number. Please refer to page 42 for more information.



- "Unassigned" appears if the location pressed is available.
- A phone number that is set secret will not be displayed.
- A call can be made by pressing its entry number and .

MEMO

IC
3

Chapter 4

MENU FUNCTION

CH
4


This chapter addresses accessing the menu and using its functions and features to customize your phone.

- PHONE BOOK
- RECENT CALLS
- GET IT NOW
- MOBILE WEB
- MEDIA GALLERY
- SETTINGS
- UTILITIES





PHONE BOOK

Stores up to 300 entries, each of which can be assigned to a group. Entries can be retrieved by name, phone number or group.

FIND


Retrieves an entry by group, voice name, name and number, and calls by simply pressing .

BY NAME

1 Press  [MENU]   .


2 Enter a name or its character string and press the navigation key to display the names in alphabetical order. Please refer to page 31 about using the Alpha Editor.

If there is no match, "Cannot Find Name" will appear.

3 All matching entries will be displayed. Select an entry and either delete it by pressing  [Menu] to view the time of the following items:

- Edit/Send Msg./Prefix/Erase.

If the entry is set to secret, you will be asked for your password.

4 To call the selected number, press .

PHONE BOOK


BY NUMBER

1 Press  [MENU]   .

2 Display the list of all phone numbers.


3 To search through the menu, enter a part of the phone number and press the navigation key.

If there is no match, "Cannot Find Name" will appear.

4 All matching entries will be displayed. Select an entry and either delete it by pressing  [Menu] to view the time of the following items:

- Send Msg./Erase/Prefix.

If the entry is set to secret, you will be asked for your password.

5 To call the selected number, press .

PHONE BOOK

ADD NEW

Adds a new entry.

- 1 To add a new entry to the phone book, press [MENU] .
- 2 To enter a name or number, use the navigation key to select the phone book field.

PHONE BOOK FIELD :

Name/Group/Mobile/Home/Office/Pager/Fax/Email/
Wireless Addr./Ringers/Msg.Ringer/Graphic/Memo/
Set Secret.

- 3 To save the entry, press [Save].
To return to the previous page, press [BACK].
Please refer to page 30 about storing a phone number.

GROUP

Adds, changes and deletes groups.

ADD NEW GROUP

- 1 To add a new group, press [MENU] .
A maximum of seven groups is allowed.
- 2 Press [Menu] to select "Add Group".
- 3 Input a new group name.
- 4 Press [OK] to save it.

PHONE BOOK

CHANGE GROUP NAME

- 1 Select an existing group name using the navigation key.
- 2 Press [Menu] to select "Rename".
- 3 Input a new group name.
- 4 Press [OK] to save it.



Do not edit default group name. (All, Personal, Business, Etc.)

ERASE GROUP

- 1 Use the navigation key to select then delete the group.
Press again to confirm.
- 2 Press [Erase] to delete it.
- 3 Press [OK] again to confirm it.



Do not erase default group name.(All, Personal, Business, Etc.)

PHONE BOOK

SPEED DIAL

In idle mode, calls can be placed to numbers stored in speed dial by pressing its location number on the keypad.

- 1 Press [MENU] .
- 2 To assign a phone number to a location, select the location and press the navigation key.

If a phone number is already assigned to the location, press [Erase] and the navigation key to delete.

- 3 Locate the entry in the group where it is saved and press the navigation key.

- 4 Select the entry and press the navigation key; select the phone number and press the navigation key again.

MSG. GROUP

Adds, changes and deletes msg. groups.

ADD NEW MSG. GROUP

- 1 To add a new group, press [MENU] . A maximum of seven groups is allowed.
- 2 Press [Menu] to select "Add Group".
- 3 Input a new group name.
- 4 Press [OK] to save it.

PHONE BOOK

CHANGE MSG. GROUP NAME

- 1 Select an existing group name with the Navigation key.
- 2 Press [Menu] to select "Rename".
- 3 Input a new group name.
- 4 Press [OK] to save it.

SEND MSG. GROUP

- 1 Select an existing group name with the Navigation key.
- 2 Press [Menu] to select "Send Msg.".
- 3 Input a new group name.
- 4 Press [OK] to save it.

ERASE GROUP

- 1 Use the Navigation Key to select, then delete the group. Press again to confirm.
- 2 Press [Erase] to delete it.
- 3 Press [OK] again to confirm it.

PHONE BOOK

MY PHONE

To display your phone number and service provider.

- 1 Press [MENU] .
- 2 To return to the previous page, press [OK].

RECENT CALLS

In idle mode, you can access Call History by pressing [MENU], .

ALL CALLS

Displays information about the ten most recent calls.

- 1 To see a list of the 10 most recent calls, press [MENU] . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.
- 2 To view details, press the navigation key.

NOTE The detail includes date, time, and phone number of all calls.

- 3 Press [Save] to save the number or press [Erase] to delete it.

"Phone # is already saved in phone book" or "Move to phone book save mode?" may appear.


NOTE After the tenth all call, the oldest call will automatically be erased from the history.




CH
4

CH
4

RECENT CALLS




MISSED CALLS

Displays information of the 20 most recently missed calls. Place a call to a missed call number by simply pressing .

- 1 To see the list of the 20 most recently missed calls, press  [MENU]  .
If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

- 2 To view missed call details, press the navigation key.

NOTE Call details include date, time and phone number.


- 3 Press   [Save] to save the number and  [Erase] to erase it.




"Phone # is already saved in phone book" or "Move to phone book save mode?" may appear.

NOTE After the 20 missed call, the oldest call will automatically be erased from the history.

RECENT CALLS




RECEIVED CALLS

Displays information of the 20 most recently answered calls. Saves the numbers and places calls by simply pressing .

- 1 To see the list of the 20 most recently answered calls, press  [MENU]  .
If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

- 2 To view incoming call details, press the navigation key.

NOTE Call details include date, time and phone number.


- 3 Press   [Save] to save the number and  [Erase] to erase it.




"Phone # is already saved in phone book" or "Move to phone book save mode?" may appear.

NOTE After the 20 incoming call, the oldest call will automatically be erased from the history.

RECENT CALLS

DIALED CALLS



 
Displays information about the 20 most recently dialed numbers. Saves the numbers and places call by simply pressing .

- 1 To see the list of the 20 most recently dialed calls, press  [MENU]  . If the number is already stored in your phone book, only the name appears. If the number is not stored, only the phone number appears.

- 2 To view dialed call details, press the navigation key.



The detail includes date, time, and phone number of outgoing calls.

- 3 Press   [Save] to save the number and press  [Erase] to erase it.

"Phone # is already saved in phone book" or "Move to phone book save mode?" may appear.



After the 20 outgoing call, the oldest call will automatically be erased from the history.






RECENT CALLS

CALL TIMERS

Checks the talk time and manages your calls within the limit you set. The four timers include:






LAST CALL

Displays talk time of last call.

- 1 Press  [MENU]   .
- 2 To return to the previous page, press  [OK].







ALL CALLS

Displays talk time of all incoming and outgoing calls, excluding web access calls.

- 1 Press  [MENU]    and the message "Not intended for billing purposes" appears for 5 seconds.
- 2 Use the navigation key to view the time of the following items:
 - Voice Call
 - Data/Fax Call
- 3 To return to the previous page, press  [OK].

HOME CALLS

Displays talk time of all calls made within Home area.

- 1 Press  [MENU]    and the message "Not intended for billing purposes" appears for 5 seconds.
- 2 Use the navigation key to view the time of the following items:
 - Voice Call
 - Data/Fax Call
- 3 To reset the timer, press  [Reset]. To return to the previous page, press  [OK].

RECENT CALLS

ROAM CALLS

Displays talk time of roaming calls.

- 1 Press [MENU] and the message "Not intended for billing purposes" appears for 5 seconds.
- 2 Use the navigation key to view the time of the following items:
 - Voice Call
 - Data/Fax Call
- 3 To reset the timer, press [Reset].
To return to the previous page, press [OK].

CUMULATIVE CALLS

Displays talk time of all calls.

- 1 Press [MENU] and the message "Not intended for billing purposes" appears for 5 seconds.
- 2 Use the navigation key to view the time of the following items:
 - Voice Call
 - Data/Fax Call
- 3 To reset the timer, press [Reset].
To return to the previous page, press [OK].

GET IT NOW

Your phone provides a unique feature -Get It Now- that enables you to download melody ringers, wallpapers, games and more from your network to your phone. Please contact your service provider for the availability of these services.

START GET IT NOW

- 1 To launch "Get It Now" from the standby mode, press or .
- 2 When two or more icons appear on the screen, select an application with .
- 3 To start the application, press .
- 4 To end the application, press .
The phone will return to the standby mode.

DOWNLOADING APPLICATIONS

- 1 Press or .
- 2 Select "Get It Now" with then press .
- 3 Select "Start" with then press .
- 4 The phone will access your service provider's server.
Follow the prompt to download applications.

- To select an option, press then press .
- When a prompt appears, press to proceed or to cancel.

DOWNLOADING MELODIES/WALLPAPERS

Before downloading melody ringers and wallpapers, you need to download the dedicated downloader.
Please contact your service provider for details.

GET IT NOW

APPLYING MELODIES/WALLPAPERS

Downloaded melody ringers apply to several functions including the incoming call alert, new text message alert, alarm clock and scheduler alarm.

Downloaded wallpapers apply to the standby mode.

CHECKING DATA FOLDER MEMORY

Downloaded melody ringers, wallpapers and applications are saved to the data folder in your phone.

- 1 Press or .
- 2 Select "Get It Now" with then press .
- 3 Select "Options" with then press .
- 4 Select "Information" with then press .
The memory status will be displayed.
- 5 To exit, press .

ERASING AN APPLICATION

- 1 Press or .
- 2 Select "Get It Now" with then press .
- 3 Select "Options" with then press .
- 4 Select the application to be erased with then press .
- 5 Select "Remove" then press .

MOBILE WEB

CONNECT WEB

You can use your phone to browse the Internet if you have obtained phone Internet service from your service provider and if over-the air Internet access is available in your area.

- 1 Press [MENU] .
- 2 Follow the procedures for "Chapter 7 WEB BROWSING" on page 109.

BOOKMARK

ADD BOOKMARK

- 1 Press [MENU] .

SAMPLE1

- 1 Press [MENU] .

SAMPLE2

- 1 Press [MENU] .

SAMPLE3

- 1 Press [MENU] .

SAMPLE4

- 1 Press [MENU] .

MEDIA GALLERY

IMAGES

FRAME

1 Press [MENU] [6sec] [2sec] [2sec].

GRAPHICS

1 Press [MENU] [6sec] [2sec] [2sec].

ANIMATIONS

1 Press [MENU] [6sec] [2sec] [3sec].

MEDIA GALLERY

PHOTOS

1 Press [MENU] [6sec] [2sec].

TONES

1 Press [MENU] [6sec] [3sec].

CH
4

CH
4

SETTINGS

Customizes your phone and optimizes performance through a variety of settings.

SOUNDS

Sets Ringer Type, Volume, Alert, Roam Ringer and Tone Length.

RINGER TYPE

To select a ringer type for incoming calls:

RINGER

- 1 Press [MENU] .
- 2 Select "Music Bells", "Ring Tones" with the navigation key.(left or right)
- 3 Select one of the available ring types.
To confirm, press [OK].

MESSAGES

- 1 Press [MENU] .
- 2 Select "Tone_1,2,3,4,5" with the navigation key.(left or right)
- 3 Select one of the available ring types.
To confirm, press [OK].

VOICE MAIL

- 1 Press [MENU] .
- 2 Select "Tone_1,2,3,4,5" with the navigation key.(left or right)
- 3 Select one of the available ring types.
To confirm, press [OK].

SETTINGS

VOLUME

Controls the Ringer, Key Tone, and Voice Call volume.

RINGER

- 1 Press [MENU] .
- 2 Select one of the following options:
 - Ringer Off
 - Vibrate On
 - Ringer Mode - Up&Down (Level 1-5).
 - High&Vib - The ringer sounds after vibration, press (Max)
 - Silent - Mute the ringer, press (Min)
- 3 To confirm, press [OK].

KEY TONE

To adjust keypad tone:

- 1 Press [MENU] .
- 2 Adjusts the keypad tone volume using the navigation key.
 - Off/Level1-5 (Min- , Max-)
- 3 To save, press [OK].

VOICE CALL

To adjust earpiece volume:

- 1 Press [MENU] .
- 2 Adjusts the earpiece volume using the navigation key.
 - Level1-5 (Min- , Max-)
- 3 To save, press [OK].

SETTINGS

ALERT

When set, this setting alerts you to the following handset changes:

MINUTE

Sounds an alert every minute of a phone call.

- 1 Press [MENU] .
- 2 Select "Off" or "On" using the navigation key and press [OK] to save it.

ROAM

Sounds an alert when leaving a service area and entering a roaming service area.

- 1 Press [MENU] .
- 2 Select "Off" or "On" using the navigation key and press [OK] to save it.

CONNECT

Notifies you that a call has been successfully placed.

- 1 Press [MENU] .
- 2 Select "Off" or "On" using the navigation key and press [OK] to save it.

FADE

Sounds an alert entering an area where calls cannot be made due to weak signal strength. The alert sounds in standby mode.

- 1 Press [MENU] .
- 2 Select "Off" or "On" using the navigation key and press [OK] to save it.

SETTINGS

LOW SIGNAL

Sounds an alert when you encounter low signal strength during a call.

- 1 Press [MENU] .
- 2 Select "Off" or "On" using the navigation key and press [OK] to save it.

ROAM RINGER

Sounds a different ringer when you are in a roaming service area.

- 1 Press [MENU] .
- 2 Select "Distinctive" or "Normal" using the navigation key and press [OK] to save it.

- Normal – Sounds the same ringer type as used in Home area.
- Distinctive – Sounds a different ringer type.

tone LENGTH

To adjust tone length:

- 1 Press [MENU] .
- 2 Select "Normal" or "Long" using the navigation key and press [OK] to save it.

SETTINGS

DISPLAY

Allows you to customize the display.

MENU STYLE

To select an display menu style:

- 1 Press [MENU] .
- 2 Select "Fold" or "Grid" using the navigation key and press [OK] to save it.

GRAPHICS

To select an LCD display:

WALLPAPER

- 1 Press [MENU] .
- 2 Select "Flower", "Digital Clock1,2", or "Analog Clock1,2" using the navigation key.
- 3 Select a display from the Animation list using the navigation key and press [OK] to save it.

POWER ON

- 1 Press [MENU] .
- 2 Select "Defaults", "Downloads", or "Photos" using the navigation key.
- 3 Select a display from the Animation list using the navigation key and press [OK] to save it.

SETTINGS

POWER OFF

- 1 Press [MENU] .
- 2 Select "Defaults", "Downloads", or "Photos" using the navigation key.
- 3 Select a display from the Animation list using the navigation key and press [OK] to save it.

RECEIVED

- 1 Press [MENU] .
- 2 Select "Defaults", "Downloads", or "Photos" using the navigation key.
- 3 Select a display from the Animation list using the navigation key and press [OK] to save it.

DIALED

- 1 Press [MENU] .
- 2 Select "Defaults", "Downloads", or "Photos" using the navigation key.
- 3 Select a display from the Animation list using the navigation key and press [OK] to save it.

SETTINGS

SCREEN SAVER

- 1 Press [MENU] .
- 2 Select "Time Setting" or "Screen Saver" using the navigation key.
 - Time Setting - Off, 5Secs, 10Secs, 20Secs, 30Secs.
 - Screen Saver
- 3 Select a display from the Animation list using the navigation key and press [OK] to save it.

SUB SCREEN

- 1 Press [MENU] .
- 2 Select "Digital" or "Analog" using the navigation key.
- 3 Select a display from the Animation list using the navigation key and press [OK] to save it.

SETTINGS

GREETING MESSAGE

To input a personal greeting:

MSG/FONT COLOR/BACKGROUND COLOR/ENTRY MESSAGE

- 1 Press [MENU] .
- 2 Select "MSG", "Font Color", "Background Color" or "Entry Message" with the Navigation key. Press [OK].

- MSG - On/Off.
- Font Color - White, Blue, Dark blue, Magenta, Gray, Black.
- Background Color - Transparent, White, Blue, Yellow, Gray, Black.
- Entry Message - Enter message.

- 3 To save, press [OK].

CONTRAST

To adjust the display contrast:

MAIN LCD/SUB LCD

- 1 Press [MENU] .
- 2 Select "Main LCD" or "Sub LCD" using the navigation key.
 - Main LCD - Level 1-5.
 - Sub LCD - Level 1-5.
- 3 To save, press [OK].

SETTINGS

BACKLIGHT

Backlights the display and keypad for easy viewing in dark places.

LCD/KEY PAD

1 Press [MENU] .

2 Select "LCD" or "Keypad" using the navigation key.

- LCD - 5s/15s/30s/60s/Always On.
- Key Pad - 5s/15s/30s/60s/Always On/Always Off.

3 To save, press [OK].

INTERNET

UP PROXY IP

1 Press [MENU] .

HOME URL

1 Press [MENU] .

SETTINGS

WEB IDLE TIME

This function disconnects your phone from a network when there is no key input for a certain time period.

1 Press [MENU] .

2 Use the scroll key to set the wap idle timer or press digit keys to enter the time on your own.

DATA SVC.

Transfers data from to PC.

CONNECTION

Choose the connection mode for the usage of your phone.

1 Press [MENU] .

2 Select one of the following connection modes using the navigation key.

- Voice Call : To receive a voice call.
- Data Only : To receive data when connected to PC.
- Fax Only : To function as a fax when connected to PC.

3 Press [OK] to save.

NOTE This function is available only when the phone is connected to data cable.

SETTINGS

SECURITY

Prevents unauthorized use of your phone. The following settings can be restricted:

PHONE LOCK

Prevents the phone from being used without entering the password first.

- 1 Press and enter "Password".



The default password is the last 4 digits of your phone number.

- 2 Press and select "Unlock", "Lock Now" or "Lock On Power Up".

- Lock Now – Lock the phone now.
- Lock On Power Up – Lock the phone whenever it is turned on.
- Unlock – Do not lock the phone.

- 3 To save, press [OK].

RESTRICT

When you attempt to make a restricted call, "This phone is restricted" will be displayed.

DIALED

Blocks all dialed calls – except emergency calls – but allows incoming calls to be answered.

- 1 Press [MENU] and enter "Password".

- 2 Press and select "Allow" or "Restrict" using the navigation key.

- Allow : Allows dialed calls.
- Restrict : Restricts dialed calls.

- 3 To save, press [OK].

SETTINGS

RECENT CALLS

- 1 Press [MENU] and enter "Password".

- 2 Press and select "Allow" or "Restrict" using the navigation key.

- Allow : Allows recent calls.
- Restrict : Restricts recent calls.

- 3 Press [OK] to save it.

PHONE BOOK

Blocks access to, and protects data in your phonebook.

- 1 Press [MENU] and enter "Password".

- 2 Press and select "Allow" or "Restrict" with the Navigation key.

- Allow : Allow access to the phonebook.
- Restrict : Restrict access to the phonebook.

- 3 To save, press [OK].

DATA CALL

Restricts data calls from being placed.

- 1 Press [MENU] and enter "Password".

- 2 Press and select "Allow" or "Restrict" using the navigation key.

- Allow : Allows data calls.
- Restrict : Restricts data calls.

- 3 To save, press [OK].

SETTINGS

900 #'S

Restricts calling 900 dial service numbers.

- 1 Press [MENU] and enter "Password".
- 2 Press and select "Allow" or "Restrict" using the navigation key.
 - Allow : Allows 900-dial services.
 - Restrict : Restricts calls 900-dial services.
- 3 To save, press [OK].

LONG DISTANCE

To restrict calling long distance numbers – the phone is limited to calling numbers within the area.

- 1 Press [MENU] and enter "Password".
- 2 Press and select "Allow" or "Restrict" using the navigation key.
 - Allow : Allow a long distance call.
 - Restrict : Restrict a long distance call.
- 3 To save, press [OK].



A phone number over 7 digits is restricted.

SETTINGS

CHANGE CODE

Changes your 4-digit password.

- 1 Press [MENU] and enter "Password".
- The default password is the last 4 digits of your phone number.
- 2 Press .
 - 3 Enter a new password and press [OK].
 - 4 Enter the new password again and press [OK].

SPECIAL #'S

Stores 3 phone numbers that can be called even in the lock mode.

- 1 Press [MENU] and enter "Password".
- The default password is the last 4 digits of your phone number.
- 2 Press and select a location using the navigation key.
 - 3 Press [OK] and input a phone number, press [OK] again to save.

SETTINGS

ERASE ALL

Clears all phone book, downloads, photo album entries.

- 1 Press [MENU] and enter "Password".



The default password is the last 4 digits of your phone number.

- 2 Press .
- 3 Select "Phone Book", "Downloads" using the navigation key and press [OK] to erase it.

RESET PHONE

Resets phone to default settings.

- 1 Press [MENU] and enter "Password".



The default password is the last 4 digits of your phone number.

- 2 Press .
- 3 Select "Yes" or "No" using the navigation key. Press [OK].

When you select "Yes", you will see "Wait a moment" on the display and the phone will restart.

SETTINGS

OTHERS

ANSWER OPTIONS

CALL ANSWER

To select an answer mode:

- 1 Press [MENU] .
- 2 Select "Any Key" or "Send Key" with the Navigation key.

- Any Key - Press any key to answer an incoming call except , , and .
- Send Key - Press only to answer a call.

- 3 To save, press [OK].

ACTIVE FLIP

Selects an Active Flip Answer mode as follows.

- 1 Press [MENU] .
- 2 Select "On" or "Off" with the navigation key.
- 3 To save, press [OK].

- When Active Flip On is selected, an incoming phone call can be answered simply by opening the phone.
- When Active Flip Off is selected, you will need to open the phone and follow the Answer mode you have selected.

SETTINGS

AUTO ANSWER

Automatically answers a call after a preset number of rings. An ideal setting for the hands-free car kit.

- 1 Press [MENU] .
- 2 Select on of the following with the Navigation key.

- Off/5/10/18seconds.



This function will not be active when you select Vibrate, Silent, Etiquette or Ringer after Vib as a ringer mode.

- 3 To save, press [OK].

AUTO RETRY

Automatically redial a call up to 5 times after a set time interval.

- 1 Press [MENU] .
- 2 Select Retry Time and Select a time interval option (Off,3,5,7,10 seconds) with the Navigation key.
- 3 Select Repeat and Select a time interval option (1 time,3 times,5 times) with the Navigation key.
- 4 To save, press [OK].

72

SETTINGS

VOICE DIAL

- 1 Press [MENU] .
- 2 Select Set Active and Select "Active Flip" or "Send Key" with the Navigation key.
- 3 Select HFK Mode and Select "On" or "Off" with the Navigation key.
- 4 To save, press [OK].

LANGUAGE

Selects the language in which letters are displayed on screen.

- 1 Press [MENU] .
- 2 Select either "English" or "Spanish".
- 3 To save, press [OK].

VOICE PRIVACY

Enhances voice privacy and avoids tapping during a call.

- 1 Press [MENU] .
- 2 Select "Standard" or "Enhanced" with the Navigation key
- 3 To save, press [OK].

- "Enhanced" - Makes it more difficult to wire tap.

73

SETTINGS

TTY MODE

Your phone is able to operate with a TTY (Teletypewriter) device in both analog and digital modes. This feature is system dependent and may not be available in all areas.

- 1 Press [MENU] .
- 2 Select one of the following options (TTY Full/TTY+TALK/TTY+HEAR/TTY Off) with the Navigation key and press [OK].

LOCATION

To determine whether or not the network system can detect your position:

- 1 Press [MENU] .
- 2 Select "Location On" or "911 Only" with the Navigation key.
 - 911 Only - Your location will be hidden from network & application except 911.
 - Location On - Your location is now available to the network.
- 3 To save, press [OK].

SETTINGS

PHONE INFO.

To display the version of your phone:

S/W VERSION

- 1 Press [MENU] .
- 2 You are to see the version of software.
- 3 Press [OK].

H/W VERSION

- 1 Press [MENU] .
- 2 You are to see the version of hardware.
- 3 Press [OK].

GET IT NOW VERSION

- 1 Press [MENU] .
- 2 You are to see the version of get it now.
- 3 Press [OK].

SETTINGS

SYSTEM

SET MODE

Selects the Preferred System.

1 Press [MENU] .

2 Select one of the following options (Automatic B /Automatic A /Home only) with the Navigation key and press [OK].

- Automatic B : Scan the radio channels based on the Automatic B setting.
- Automatic A : Scan the radio channels based on the Automatic A setting.
- Home only : Only within your home area or home affiliated area.

FORCE CALL

Temporarily forces phone to use Analog mode - mode automatically ends in 10 minutes.

1 Press [MENU] .

2 Select one of the following options (CDMA-IS95/Analog/No) with the Navigation key and press [OK].

- CDMA-IS95
- Analog
- No

SETTINGS

NAM SETTING

Enables Auto NAM (Number Assignment Modules) or manually selects a NAM.

AUTO NAM

Automatically switches phone to proper NAM when you have multiple NAM registrations.

1 Press [MENU] .

2 Select "Yes" or "No" then, press [OK] to save it.

CHANGE NAM

Changes the NAM used by the phone when you have multiple registrations.

1 Press [MENU] .

2 Select "NAM1-VERIZON" or "NAM2-VERIZON" then press [OK] to save it.

PRL ID

Displays the phone's PRL (Preferred Roaming List).

1 Press [MENU] .

2 To return to the previous page, press [OK].

UTILITIES

EVENT

Sets an event and reminds you of that event.

ADD PLAN

- 1 Press [MENU] .
- 2 Move the Navigation key to choose a date in the calendar and press [OK].

- Use left, right, up and down instead of leftward, upward, rightward and leftward.

TIME SETTING

To select "Time Setting" for the event, press select a melody with the Navigation Key.

- Choose one of the following on the first line:
On time, 10 Min Before, 30 Min Before, 1 Hour Before, No Alarm.
- Use the Navigation Key to move to year, month, day, time and input using the digit keys.
- Down press Navigation Key to return to editing mode.

MELODY SETTING

To set a "Melody Setting" for the event, press select a melody with the Navigation Key.

MESSAGE SETTING

To set a "Message Setting" for the event, press .

- 3 Press [OK] to save it or [Back] to return to the calendar.
- 4 The date of the event will be marked on your calendar.

UTILITIES

VIEW EVENT LIST

- 1 To display all Event List, press [MENU] .
- 2 Move the Navigation key to choose a list and press and choose one at the , , .

UTILITIES

ALARM

You can set up to 3 alarms.

- 1 To display alarm entries, press [MENU] .
- 2 Select one of the entries using the navigation key. To set a new alarm, choose item 1, 2 or 3. To edit an existing alarm, select that alarm. Press [OK].

- To delete the existing one, press .

- 3 1. To set a time, press from the Alarm Setting Menu.

- Use the navigation key to choose an alarm frequency (Once, Daily, Weekly, Monthly, Yearly). To save, press [OK]. "Save Complete" will be displayed and the screen will return to the alarm list.

2. To set a melody, press from the Alarm Setting Menu.

- Use the navigation key to scroll through the list of 10 ring tones and 30 melody tones. To set a melody, press [OK]

3. To set a snooze, press from the Alarm Setting Menu.

- Select one of the following:
No use, 1 Time, After 3 minutes.

4. To set a pause, press from the Alarm Setting Menu.

NOTE • Pause setting is available for existing alarms. It is not available for new entries.

UTILITIES

MEMO PAD

Your phone comes with a memo pad you can use to compose and store reminders and notes to help keep you utilities.

ADD MEMO

To compose a memo (There is a 80-letter limit):

- 1 Press [MENU] .
- 2 Input a new text memo and press [OK].
(Please refer to page 31 for more details on entering letters and numbers.)

VIEW MEMO

To view saved a memo:

- 1 Press [MENU] .
- 2 Display the list all memo in saved order. To select with Navigation keys and press [OK].
- 3 Select an entry and pressing [MENU] to view the time of the following items:
- Add New/Erase All
- 4 Selected memo will be displayed. If you want edit memo, press [MENU] to select "Edit" and Input a new text memo.

SETTINGS

To select memo pad background image.

- 1 Press [MENU] .
- 2 Select (Paper/Pattern/Sea/Sky/Flower) with the navigation key.(left or right) and press [OK].

UTILITIES

CALCULATOR

To access the calculator:

- 1 Press [MENU] .
- 2 Follow the instructions below to calculate $(8*6)/4-2.5$

Input 8.
Press the navigation key to the right.
Input 6 and press the navigation key to the left.
Input 4 and press the navigation key down.
Input 2 and press the to input (.).
Press 5, .

- 3 To reset, press [Reset].

WORLD CLOCK

Notifies you of the time in a specific preprogrammed city.

- 1 Press [MENU] .
- 2 Select a city using the navigation key.
- 3 The world map is displayed with the city, the date and time.

UTILITIES

STOPWATCH

Simultaneously times up to six different events. To operate the stopwatch:

- 1 Press [MENU] .
- 2 To measure a time period.
 1. To start the stopwatch, press .
 2. To pause it, press .
 3. To resume it or [RESET] to return to the previous page, press [EXIT].
- 3 To time up to six events at once:
 1. To start, press .
 2. To stop a time period and continue measuring another one, press [CONT].
 3. To stop the second and continue measuring a third one, press [CONT].
 4. To measure up to six time periods, repeat the above steps.
 5. To stop, press . To review the results, press [VIEW].
 6. To return to the stopwatch, press or .
 7. To reset it, press [RESET].

MEMO

Chapter 5


VOICE SERVICE

This chapter addresses Voice Service, an advanced feature that allows you to place calls using your voice. With Voice Memo (VM) you can record voice messages and set the Answering Machine. Topics include:

- VOICE RECOGNITION MODE
- VOICE SERVICE MENU

VOICE RECOGNITION MODE

Voice Recognition (VR) enables you to place calls using your voice and to record voice memos.

- 1 Press and hold  until your phone turns to Voice Recognition mode.
- 2 The display to the right will appear when the phone turns on Voice Recognition mode.



Depending on the prompt mode, expert or beginner, you will hear either of the following prompts. The second prompt automatically plays when nothing is said. (Please see page 92 for more information on prompt modes.)

Beginner Mode

- 1st : "Main Menu"
- 2nd : "Speak a name to call, or say dial."


Expert Mode

- 1st : A sequence of low tone and high tone.
- 2nd : "Main Menu"

Once you say your selection, you will be taken through each of the procedures (name, dial, redial, voice memo, phone book, cancel).


CH
5

NAME

- 1 Press and hold  until your phone turns to Voice Recognition mode.
- 2 If you say a name or tag that is already in the phone book, the number and name will be displayed and you will hear "Calling (name)".

VOICE RECOGNITION MODE

DIAL

- 1 Press and hold  until your phone turns to Voice Recognition mode.
- 2 Say "Dial" when prompted.



Depending on the prompt mode, expert or beginner, you will hear either of the following prompts. The second prompt automatically plays when nothing is said. (Please see page 92 for more information on prompt modes.)

Beginner Mode

- 1st prompt: "Digit menu"
- 2nd prompt: "Say digits or verify, cancel, clear or call."

Expert Mode


- 1st prompt: A sequence of high and low tones sound
- 2nd prompt: "Digit menu"

- 3 Press or say the digits of the phone number.
- 4 Say "Call" after entering the entire number.




CH
5

VOICE RECOGNITION MODE

REDIAL

- 1 Press and hold  until your phone turns to Voice Recognition mode.
- 2 Say "Redial" to dial the last dialed number.

VOICE MEMO


- 1 Press and hold  until your phone turns to Voice Recognition mode.
- 2 Say "Voice Memo" and follow the steps as instructed on the display.
- 3 To stop recording a memo, press . To cancel, press .

 *To pause, press . To resume, press .*


- 4 After recording a voice memo you can "Review", "Re-record", or "Save".

VOICE RECOGNITION MODE


PHONE BOOK

- 1 Press and hold  until your phone turns to Voice Recognition mode.
- 2 Say "Phone Book".

All phone book entries with voice tags will appear and be played.

 *To call a phone number with an attached voice tag, say "yes" while the voice tag is playing.*

CANCEL

- 1 Press and hold  until your phone turns to Voice Recognition mode.
- 2 To exit the Voice Recognition mode or to return to idle mode, say "Cancel".

VOICE SERVICE MENU

VOICE MEMO

- 1 Press to start Voice Service menu.
 - 2 To enter a voice memo, press .
 - 3 1.To record a voice memo, press .
Instructions will be displayed and you will hear "Please record at the tone."
2.To play voice memos, press .
3.To play speaker mode, press .
4.To erase all voice memos, press .
 - 4 To stop recording a memo, press .
- NOTE**
To pause or resume, press .
To stop, press .
- 5 After recording a voice memo you can "Review", "Re-record", or "Save".

VOICE SERVICE MENU

VOICE DIAL

Lists, adds, or erases phone book entry voice tags.

LIST

- 1 To list phone book entries with attached voice tags, press .
- 2 Select one with the Navigation key and press .
- 3 To play a voice tag, press .
- 4 To edit an existing voice tag, press .

EDIT : Retrain / Voice Setting / Clear.
PLAY : Voice tag play.

- 1) Retrain - "Retrain Voice Name" displays.
Press then say a name.
- 2) Voice Setting - "Change" displays. Press , select a phone number, then press again.
- 3) Clear - "Removing voice names proceed" displays.
Press and "All voice tags were deleted successfully" appears.

VOICE SERVICE MENU

ADD

- 1 To add a voice tag to a phone book entry, press .
- 2 Select one group with the Navigation key and press .
- 3 Select a phone number with the Navigation key and press .
- 4 To add the voice tag, say the name.

CLEAR ALL

- 1 To erase all voice tags in the list, press .
- 2 You will see "Removing all voice tags proceed?".
- 3 Press and you will see a message "Delete all tagged book entries too?"

NO : Delete all voice tags.
 YES : Delete all voice tags and phone book entries.
 CNCL : Return to the previous page.

VOICE SERVICE MENU

TRAIN WORD

Trains the Control Words into categories as follows.

YES

Use the "Yes/No" to train or untrain the Voice Recognition with the control words, "Yes".

- 1 Press [MENU] .
- 2 Select one of the following options with the Navigation key and press .

List Words : Displays list of control words in the "Yes" set. Select a control word, press and either train, untrain or view the status of the word. To train with a word, press and follow the voice prompts.
 Untrain All : Untrain "Yes" set to recognize trained control words.

NO

Use the "Yes/No" to train or untrain the Voice Recognition with the control words, "No".

- 1 Press [MENU] .
- 2 Select one of the following options with the Navigation key and press .

List Words : Displays list of control words in the "No" set. Select a control word, press and either train, untrain or view the status of the word. To train with a word, press and follow the voice prompts.
 Untrain All : Untrain "No" set to recognize trained control words.

VOICE SERVICE MENU

WAKE-UP

Use the Wake-Up to train or untrain the Voice Recognition with the control word, wake up.

1 Press [MENU] .

3 Select one of the following options with the Navigation key and press .

List Words : Displays list of control words in the Yes/No set. Select a control word, press and either train, untrain or view the status of the word. To train with a word, press and follow the Untrain All : Untrain Wake-up to recognize trained control words.

UNDO TRAIN ALL

1 Press [MENU] .

2 Select "Yes" or "No" with the Navigation key and press .

Chapter 6

VOICE MAIL AND TEXT MESSAGE

This chapter addresses Voice Mail and Text Messaging functions including:

- WHEN A NEW MESSAGE ARRIVES
- VOICE MAIL
- SEND MESSAGE
- INBOX
- OUTBOX
- SAVED
- MY OBJECT
- QUICK TEXT
- ERASE ALL
- SETTINGS

WHEN A NEW MESSAGE ARRIVES

- 1 The following display appears when a new message arrives.
- 2 To display the message, press [READ].

VOICE MAIL

Displays the number of voice mails and accesses them by pressing .

- 1 To access your voice mail, press or press .

SEND MESSAGE

To send a new message:

- 1 Press or press .

- 2 Input a phone number and press [OK].

You can look it up from the phone book by pressing [MENU].

- 3 Input a new text message and press [OK].
(Please refer to page 31 for more details on entering letters and numbers.)

- 4 Input a default callback number and press [OK].

- 5 Select the priority (NORMAL/URGENT) by using the navigation key.

- 6 Select the Insert Signature (ON/OFF) by using the navigation key.

- 7 To send the text message, press [SEND].

- 8 To save the text message, press [MENU] and select the "Save to Outbox" then press [OK].

INBOX

Manages received text messages.

- 1 Press or press .

- : Urgent New Msg (not read)
- : Urgent Read Msg
- : New Msg (not read)
- : Old Msg (already read)
- : Lock (already read and locked)

- 2 Select a message and press [OK].
The message is displayed.

- 3 Press [MENU].

1. REPLY

- 1 To reply to the text message, press .
- 2 Type your reply and press [OK].
(See page 31 for more information on entering letters, numbers and characters.)

2. REPLY WITH COPY

- 1 Reply to the received message with received phone number and contents.

3. FORWARD

- 1 To forward the text message, press "FORWARD".
- 2 Input the phone number of the person you are sending the message, then press [OK].
- 3 Input any text message to go along with the forwarded message, then press [OK].

INBOX

4. SAVE TO SAVED

- 1 To save the text message in your phone, press "SAVE TO SAVED".
- 2 Press .

5. SAVE TO QUICK TEXT

- 1 Press .

6. SAVE TO CONTACT

- 1 Press .

7. LOCK & UNLOCK

 
- 1 To lock or unlock the text message, press "LOCK/UNLOCK".
- 2 Select LOCK to lock the message or UNLOCK to unlock the message, then press [OK].

OUTBOX

Manages sent text messages or messages waiting to be sent.

CHECKING SENT TEXT MESSAGES

- 1 Press or press . Select a message using the navigation key. Then, press [OK].

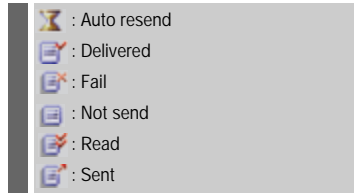

- 2 The text message is displayed.
- 3 Press [MENU].

1. RESEND

- 1 To resend a text message, press .

2. SEND TO

- 1 To send a message to another person, press .
- 2 Input the phone number and press .
- 3 Input a text message and press .

OUTBOX

3. SAVE TO CONTACT

- 1 Press .

4. SAVE TO SAVED

- 1 Press .

5. LOCK & UNLOCK

- 1 To lock or unlock the text message, press "LOCK/UNLOCK".
- 2 Select LOCK to lock the message or UNLOCK to unlock the message, then press .

6. STATE

 
- 1 To display the status of an outbox message, press .

SAVED

SAVED

Manages saved messages from the Inbox/Outbox.

- 1 Press or press .
Select a text message using the navigation key.
Press [OK].
- 2 The text message is displayed.
Press [MENU].
- 3 If the text message is saved from the "Inbox" menu, this screen will be displayed.

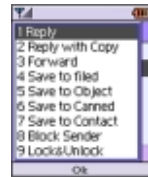

If the text message is saved from the "Outbox" menu, this screen will be displayed.



- 4 Select one by pressing .

MY OBJECT

MY OBJECT

- 1 Press or press .
Select an my object type "Sound", "Graphics"
or "Animation" with the Navigation key.
Press [OK].

1. SOUND

- 1 To name, play or erase saved sound objects,
press or press .
- 2 Select "Name" to rename a sound with or
"Play" to play a sound with .
- 3 To erase a sound, press .

2. GRAPHICS

- 1 To name, play or erase saved graphic objects,
press or press .
- 2 Select "Name" to rename a graphic with or
"View" to view a graphic with .
- 3 To erase a graphic, press .

3. ANIMATION

- 1 To name, play or erase saved animation objects,
press or press .
- 2 Select "Name" to rename animation with or
"View" to view animation with .
- 3 To erase animation, press .

QUICK TEXT

QUICK TEXT

To edit the quick text message you have saved:

- 1 Press / / or press / . Select one message from the list with the Navigation key. Press [OK].
- 2 The text message is displayed. Press [MENU].
- 3 To edit the saved quick text message, press [Add New].

To add the saved quick text message, press [Edit].

To erase the saved quick text message, press [Erase].

ERASE ALL

ERASE MESSAGES

- 1 Press / / or press / .
- 2
 1. To erase all the inbox messages, press .

Erases entire inbox or old inbox.
 2. To erase all the outbox messages, press .

Erases entire outbox or old outbox.
 3. To erase the saved messages, press .
 4. To erase the my object items "Sound", "Graphics" or "Animation", press .
 5. To erase the quick text, press .
- 3 Select "Ok" or "Cancel" with [OK] or [CANCEL].

SETTINGS

Manages messaging features through various features.

SAVE SENT MSG

Saves every sent message.

- 1 Press or press .
- 2 Press .
Select "Off", "On", or "Prompt" using the navigation key, then press [OK].

DEFAULT CALL BACK

Edits a default call back number so that the recipient can call back or reply.

- 1 Press or press .
- 2 Press .
Input a call back number, then press [OK].

ALERT

Enables phone to alert you of an incoming message..

- 1 Press or press .
- 2 Press .
Select "Ringer", "Vibrate", "Silent", "Ringer & Remind", or "Vibrate & Remind" using the navigation key.

The Ringer & Remind or Vibrate & Remind rings or vibrates every 2 minutes to remind you of a new message. They will be cleared when any key is pressed.

- 3 Press [OK].

SETTINGS

AUTO ERASE

Automatically erases inbox/outbox messages when new messages arrive.

1. AUTO ERASE INBOX

- 1 Press or press .
- 2 Press .
Select "Disable" or "Old Inbox" using the navigation key.
- 3 Press [OK].

2. AUTO ERASE OUTBOX

- 1 Press or press .
- 2 Press .
Select "Disable" or "Old Inbox" using the navigation key.
- 3 Press [OK].

ENTRY MODE

Sets an Entry Mode as a default.
The T9 mode indicator will appear whenever the input mode is activated if the T9 mode is the default.

- 1 Press or press .
- 2 Press .
Select "T9 Mode" or "Alpha Mode" using the navigation key.
- 3 Press [OK].

SETTINGS

BLOCK OR UNBLOCK

- 1 Press or press .
- 2 Then press .
Select "Block", "Unblock" or "View List of Blocked Address" with the Navigation key.
- 3 Press [OK].

EDIT SIGNATURE

Make signature as user wants.

- 1 Press or press .
- 2 Then press .
Select "Edit Signature" or "Insert Signature" with the Navigation key.
- 3 Press [OK].

EDIT SIGNATURE : Edit user's signature.

INSERT SIGNATURE : Select whether the signature will be included into sending message.

DIRECT VIEW

- 1 Press or press .
- 2 Then press .
Select "On" or "Off" with the Navigation key.
- 3 Press [OK].

ON : Set to read msg without entering inbox in SMS menu.
OFF : Set to read msg after entering inbox in SMS menu.







Chapter 7 WEB BROWSING

This chapter addresses Internet services and web browsing.
For more detailed information contact your service provider.





- START INTERNET BROWSER
- BROWSER MENU

START INTERNET BROWSER





ACCESS THE INTERNET

- To start your Internet browser and access websites through your wireless handset press    or press   .






BROWSER MENU

The browser menu lists the actions necessary to operate the browser. Press   or press   to access the browser menu.

BACK

- To return to the previous page, press   or  .

HOME






- To display the homepage, press   or   .

EXIT

- To exit the browser, press   or   .


 



BROWSER MENU

MARK SITE

- To add the current page to your bookmark list, press    or   .




"No bookmark service site" is displayed when the Internet site cannot support the bookmark service.

BOOKMARKS

- To view your bookmark list, press   or   . This provides easy website access without entering its URL.

INBOX

Display inbox list.

- To select Inbox, press   or   .

RELOAD

Reloads current page.

- To select Reload, press   or   .

BROWSER MENU

SETTINGS

Displays Browser Menu Settings.

- 1 To select Settings, press or .

HOMEPAGE

Enables you to change the homepage.

- 1 To select Homepage, press .

PROXY

Enables you to select another WAP PROXY.

- 1 To select Set UP.Link, press .

CIRCUIT LINGER

- 1 To select Circuit Linger Timer, press .

SCROLL MODE

- 1 To select scroll mode, press .

SCROLL SPEED

- 1 To select scroll speed, press .

KEY PRESS TIMEOUT

- 1 To select Key Press Timeout, press .

BROWSER MENU

SECURITY

Display Security Menu Options.

- 1 To select Security, press .

ADVANCED

Displays Advanced Menu options.

- 1 To select Set UP.Link, press .

-SHOW URL
Displays the URL (Uniform Resource Locator) of the current page.

1. To select Show URL, press .

-RESTART BROWSER
Causes the deck history and deck cache to be cleared and starts a new session with the UP. Link.

1. To select Restart Browser, press .

MEMO

Chapter 8

SAFETY AND WARRANTY

This chapter addresses the safety guidelines and precautions to follow when operating your phone. Please make sure to be aware of all the details about the safety to operate your phone in the way that you are supposed to.

This chapter contains the terms and conditions of services and the warranty for your phone. Please review them thoroughly.

- SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES
- SAFETY INFORMATION FOR FCC RF EXPOSURE
- SAR INFORMATION
- FDA CONSUMER UPDATE
- PROTECT YOUR WARRANTY
- 12 MONTH LIMITED WARRANTY

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

Read This Information Before Using Your Handheld
Portable Cellular Telephone

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *
NCRP Report 86 (1986) *
ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

1* : American National Standards Institute.
2* : National Council on Radiation protection and measurements.
3* : International Commission on Nonionizing Radiation Protection.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions so require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers :

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

OTHER MEDICAL DEVICES

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

POSTED FACILITIES

Turn your phone OFF where posted notices so require.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

OTHER SAFETY GUIDELINES

AIRCRAFT

FCC and Transport Canada Regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

BLASTING AREAS

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

POTENTIALLY EXPLOSIVE ATMOSPHERES







Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

-  DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
-  DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using, lay down the unit to avoid possible damage due to instability.
-  DO NOT expose this equipment to rain or spilled beverages.
-  DO NOT use unauthorized accessories.
-  DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
-  DO NOT short-circuit the battery terminals with metal items etc.

SAFETY INFORMATION FOR FCC RF EXPOSURE



WARNING! Read this Information before using

CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION

This device was tested for typical body-worn operations with the back of the phone kept 2.0 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 2.0 cm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

VEHICLE MOUNTED EXTERNAL ANTENNA (OPTIONAL, IF AVAILABLE)

A minimum separation distance of 7.9 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.



For more information about RF exposure, please visit the FCC website at www.fcc.gov

SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.28mW/g and when worn on the body, as described in this user guide, is 0.547mW/g. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on PP4TX-120C.

IC 8

SAR INFORMATION

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

IC 8

FDA CONSUMER UPDATE



U.S. Food and Drug Administration - Center for Devices and Radiological Health
Consumer Update on Wireless Phones

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
 - Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function;
- and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some inter-agency working group activities, as well. FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term "wireless phone" refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones.

FDA CONSUMER UPDATE

These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world.

FDA CONSUMER UPDATE

The Project has also helped develop a series of public information documents on EMF issues. FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wire-less telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

FDA CONSUMER UPDATE

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wire-less phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wire-less phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a "compatible" phone and a "compatible" hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones (<http://www.fda.gov/cdrh/phones/index.html>)
- Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)
- National Radiological Protection Board (UK) (<http://www.nrp.org.uk>)

PROTECT YOUR WARRANTY

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

"Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling misuse, neglect or accident".

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Audiovox product. Be careful. Some of these products may not be compatible to use with your Audiovox product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-Audiovox accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Audiovox product.



AUDIOVOX COMMUNICATIONS CORP.

555 Wireless Blvd., Hauppauge, New York 11788, 800-229-1235
16808 Marquardt Avenue, Cerritos, California 90703, 562-802-5100
Audiovox Canada
5155 Spectrum Way, Unit #5, Mississauga, Ontario
Canada L4W 5A1, 800-465-9672

12 MONTH LIMITED WARRANTY

Audiovox Communications Corp. (the Company) warrants to the original retail purchaser of this Audiovox handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing.

12 MONTH LIMITED WARRANTY

In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 905-712-9299).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

IN USA : AUDIOVOX COMMUNICATIONS CORP.
555 Wireless Blvd.
Hauppauge, NY 11788
(800) 229-1235

IN CANADA : AUDIOVOX CANADA LTD.
5155 Spectrum Way, Unit #5
Mississauga, Ontario L4W 5A1
(800) 465-9672