




All-In-One Wireless Security System V2.0

Model #: MG-6130 / MG-6160

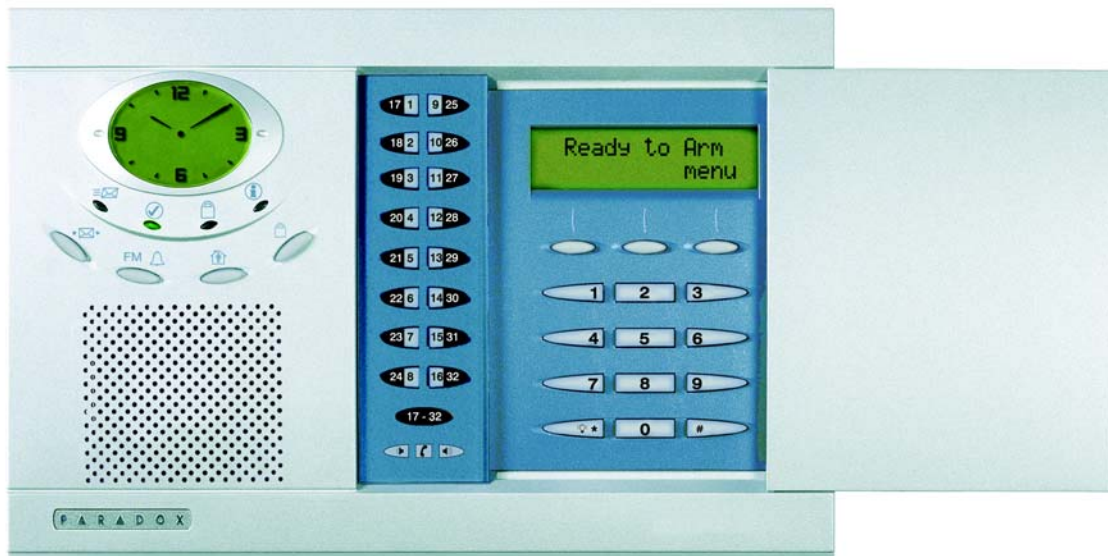

Reference and Installation Manual

We hope this product performs to your complete satisfaction. Should you have any questions or comments, please visit www.paradox.com and send us your comments.



Table of Contents

Introduction.....	3	Regular Arming Switches to Force Arming	22
About Magellan and this Manual.....	3	Stay Arming Switches to Force Arming.....	22
Conventions	3	Timed Auto-Arming	22
Specifications.....	3	No Movement Auto-Arming.....	22
Quick Setup.....	4	Auto-Arming Options.....	23
Installation.....	7	One-Touch Arming.....	23
AC Power.....	7	Exit Delay	23
DC Power.....	7	Bell Squawk on Arm/Disarm with Remote Control	23
Backup Battery Pack.....	7	No Exit Delay when Arming with Remote Control.	23
Auxiliary Output.....	7	Exit Delay Termination	23
Telephone Line Connections	8	Follow Zone Switches to Entry Delay 2.....	23
Programmable Outputs (PGMs)	8	Closing Delinquency Timer	23
Hardwire Zone Connections	9	Stay Arm Siren Delay	23
WinLoad Connection.....	10	Alarm Options.....	24
UIP-256 Universal In-Field Programmer Connection.	10	Bell Cut-off Timer	24
X10 Transmitter Connection (MG-6160 only)	10	Wireless Transmitter Supervision Options	24
Connecting a Paradox Memory Key (PMC-3).....	10	Check-in Supervision Options	24
Location and Mounting.....	11	Tamper Recognition Options	24
Connecting the Radio Antenna (MG-6160 only) ...	12	Wireless PGM Supervision Options	25
Programming Methods	13	Wireless Keypad Supervision Options	25
WinLoad Installer Upload/Download Software.....	13	Wireless Repeater Supervision Options	25
Programming Using the Built-in Keypad	13	Wireless PGM Console Supervision Options (Follow	25
Programming Using a Paradox Memory Key.....	13	Alarm/Follow Bell)	25
User Codes.....	14	Backup Alarm Reporting Option.....	25
User Code Length.....	14	Panic Alarms	26
Installer Code.....	14	Reporting and Dialer Settings.....	27
Maintenance Code.....	14	Report Codes	27
System Master Code	14	Console Telephone Numbers	29
Duress Code	14	Console Account Number	30
Zone Programming.....	15	Reporting Formats	30
Zone Programming Overview	15	Event Call Direction.....	31
Zone Definitions	15	Delay Between Dialing Attempts.....	31
Zone Options	17	Alternate Dial Option	31
Zones 31 and 32 Become Hardwire Zones	18	Force Dial Option	31
EOL (End-Of-Line) Zones.....	18	Dialing Method	32
Assigning Wireless Zone Transmitters	19	Pulse Ratio.....	32
Assigning Wireless Doorbells to the Console	19	Switch to Pulse Dialing on 5th Attempt	32
Deleting Assigned Wireless Transmitters	19	Telephone Line Monitoring (TLM)	32
Viewing Wireless Transmitter Signal Strength.....	19	Recent Close Delay	32
Assigning Remote Controls	20	Auto-Test Report.....	32
Programming the Remote Control's Buttons	20	Power Failure Report Delay	33
Assigning Wireless Keypads.....	21	Disarm Reporting Options.....	33
Assigning Wireless Repeaters	21	Zone Restore Report Options	33
Wireless Repeater Options.....	21	RF Jamming Supervision	33
Arming and Disarming	22	Programmable Outputs	34
Regular Arming Switches to Stay Arming	22	Assigning PGMs.....	34

Wireless PGM Activation Event	35
Wireless PGM Deactivation Event.....	35
Wireless PGM Delay.....	35
System Settings	36
Software Reset	36
Installer Lock.....	36
Console Tamper Supervision	36
Console Audible Trouble Warning	36
FM Tuner Option (MG-6160 only).....	36
Daylight Savings Time	36
AC Power Failure Warning	36
The Trouble Display.....	36
WinLoad Software Settings	38
Panel Answer Options	38
Panel Identifier.....	38
PC Password.....	38
PC Telephone Number.....	38
Call Back Feature	38
Appendix 1: Automatic Report Code List. 39	
Appendix 2: Ademco Contact ID Report Code List	41
Index	44

Introduction

About Magellan and this Manual

Magellan is designed for fast and easy installation. Simply remove it from the box, mount the console and wireless transmitters, apply power, perform some basic programming and Magellan is ready to protect your home.

Some of Magellan's features can be programmed through a quick Installer menu (menu programming) or through section programming. Use the quick setup chapter (see page 4) to install the Magellan console quickly with the basic programming required for a standard security application. All other chapters (pages 7 to 38) are for advanced section programming. These other chapters provide more in-depth and precise information if more advanced programming is required.

We recommend that you read this entire manual before you begin your installation.

Conventions



This symbol designates a reference to another section, manual or guide.



This symbol designates either a warning or important information.



This symbol designates a reminder or suggestion.

[DATA] = - Text shown in this manner designates data or programming information that is entered through the console's keypad.

- Text shown in this manner can also designate a specific key that has to be pressed.

Specifications

Power input: AC*: 12Vac, 1A transformer or 16.5Vac, 1A transformer
or
DC: 12Vdc to 18Vdc (1A) power supply
or
For UL installations:
Primary: 120Vac, 60Hz, 120mA
Secondary: 16.5Vac, 60Hz, 600mA

Current consumption: 1A max. (600mA max. for UL installations)

Auxiliary output: When using an AC or DC power source, the auxiliary output provides 13.8V (200mA maximum). To achieve this value, use a minimum of 15Vdc.

Backup Battery: 7.2Vdc, 1.8Ah NiMH rechargeable battery pack (order # 0780100178)
Not user replaceable. Replace battery every 3-5 years.

PGM1: N.O solid-state relay (not polarized); Internal resistance 16 Ω max.; Max. handling current 100mA.

PGM2: One low powered open-collector; Max. handling current 50mA.



**** It is recommended that you use a 12Vac, 1A transformer to power the Magellan console. The console will generate less heat when connected to a 12Vac transformer than when connected to a 16.5Vac transformer. In UL installations, use only the Universal transformer (model no. UB1640W, 16.5Vac, 40VA).***



The alternate DC power supply is not for use in UL installations.

Grade A Household Fire and Burglar Alarm Warning System Unit.

Quick Setup

Follow these steps to quickly set up Magellan with the required settings for a basic security installation.

1. Getting Started

```
1-English
2-Français
```



1. After powering up for the first time, the language selection option will appear. Select the desired language.

```
System Setup
start      skip
```



2. Press **[START]** to access the Installer menu.

2. User Programming

```
2-User Profile
ok  next  exit
```



1. From the "User Profile" menu, press **[OK]**.

```
Modify Master
ok  next  exit
```



2. Select which user you wish to add by pressing **[NEXT]**. When the desired user appears, press **[OK]** and follow the menus to set:
 - Access code
 - User label
 - Remote control

When you are done the next menu option will appear (see Monitoring Station Reporting below).



For more in-depth programming of the remote controls, see Programming the Remote Control's Buttons on page 20.

3. Monitoring Station Reporting

```
3-Communicator
ok  next  exit
```



1. From the "Communicator" menu, press **[OK]**.

```
Central Report?
ok  next  exit
```



2. Press **[OK]** and follow the menus to set:
 - Telephone numbers
 - Account Number
 - Report Format

When you are done the next menu option will appear. Press **[NEXT]** until you see the "Zone

Profile" menu or press the **[6]** key to immediately access the "Zone Profile" menu.



For more in-depth programming of the console's communication features, see Reporting and Dialer Settings on page 27.

4. Adding and Programming Zones

```
6-Zone Profile
ok  next  exit
```



1. From the "Zone Profile" menu, press **[OK]**.

```
Add Zone 01
ok  next  exit
```



2. Select which zone you wish to add by pressing **[NEXT]** and press **[OK]** when the desired zone number appears.

```
Open/Close Cover
back
```



3. Press the tamper switch on the transmitter you wish to assign to the selected zone. Follow the menus to set:
 - Zone Label
 - Zone Type
 - Other Zones

When you are done the next menu option will appear. Press **[NEXT]** until you see the "System Test" menu or press the **[5]** key to immediately access the "System Test" menu.



For more in-depth programming of the console's zones, see Zone Programming on page 15 and When hardwired zones are used, the EOL Resistor Option must be enabled for UL installations. Wireless Programming on page 18.

5. Testing the Magellan System

```
5-System Test
ok  next  exit
```



1. From the "System Test" menu, press **[OK]**.

```
Test Zones?
ok  next  exit
```



2. Select which test you wish to perform by pressing **[NEXT]** and press **[OK]** when the desired test appears. The following tests can be performed:
 - Zone tests
 - Remote control tests
 - Reporting tests
 - Hardware tests



WARNING! When testing the hardware, the speaker and sirens will also be tested. Avoid close proximity to the Magellan console when performing the hardware test to avoid any damage to your hearing.

When you are done the next menu option will appear. Press [NEXT] until you see the "Passwords" menu or press the [8] key to immediately access the "Passwords" menu.

6. Signal Strength

8-Signal Strength
ok next exit

1. From the "Signal Strength" menu, press [OK].



Noise Floor:Low
next exit

2. The Magellan will begin testing the noise level and signal strength of all assigned wireless transmitters. Press [NEXT] to navigate through the various tests.



Press [EXIT] when you are done.

7. Passwords

9-Passwords
ok next exit

1. From the "Passwords" menu, press [OK].



Installer Code
ok next exit

2. Select which password(s) or code(s) you wish to program by pressing [NEXT] and press [OK] when the desired password appears. The following passwords can be programmed:
 - Installer code
 - Maintenance code
 - Panel ID
 - PC Password



When you are done the next menu option will appear. Press [EXIT].



For more in-depth programming of the console's passwords, see User Codes on page 14 and WinLoad Software Settings on page 38.

8. Time and Date

Ready to Arm
menu

1. Press the [MENU] key.



3-TIME AND DATE
ok next exit

2. Press [NEXT] until you reach the "Time and Date" menu and press [OK] or press the [3] key to access the "Time and Date" menu.



Time Format
12hrs 24hrs back

3. Select the time format (12Hr-clock or 24Hr-clock) and then program the time. Press [OK] when done. Program the date by entering the 4-digit year first, followed by the 2-digit month and then the 2-digit day. Press [OK] when done.



Deleting Zones

6-Zone Profile
ok next exit

1. From the "Zone Profile" menu, press [OK].



Modify Zone 01
ok next exit

2. Select which zone you wish to delete by pressing [NEXT] and press [OK] when the desired zone number appears.



Delete Zone(s)
yes next back

3. Press [YES].



Are you sure?
no yes

4. Press [YES]. To delete another zone, press [YES] and then repeat steps 2 to 4.



When you are done the next menu option will appear. Press [NEXT] until you see the "System Test" menu or press the [5] key to immediately access the "System Test" menu.




For more in-depth programming of the console's zones, see Zone Programming on page 15 and When hardwired zones are used, the EOL Resistor Option must be enabled for UL installations. Wireless Programming on page 18.

Adding Outputs



1. From the "Output Profile" menu, press **[OK]**.

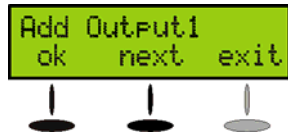

2. Select which output you wish to add, modify or delete by pressing **[NEXT]** and then **[OK]** when the desired output number appears.



3. Select what type of output you wish to add. Press **[YES]** for a wireless output, or **[NO]** for a hardwired output. For hardwired, follow the menus to configure the output.



4. If you are adding a wireless output, press the tamper switch on the transmitter you wish to assign to the selected zone.

When you complete an output programming option, you will be given the choice to configure another output. If you do not choose to program another output, you will be brought back to the "Output Profile" menu.

Deleting Outputs



1. From the "Output Profile" menu, press **[OK]**.



2. Select which output you wish to delete by pressing **[NEXT]** and then **[OK]** when the desired output number appears.



3. Press **[YES]**.




4. Press **[YES]**. To delete another output press **[YES]** and then repeat steps 2 to 4.

When you are done the next menu option will appear. Press **[NEXT]** until you see the "System Test" menu or press the **[5]** key to immediately access the "System Test" menu.

Installation

AC Power

Magellan requires a 12Vac (1A) or 16.5Vac (1A) transformer (not included) to supply power to the console. Connect the transformer to the AC terminals as shown in Figure 1 on page 7.

 *Magellan can also be powered through a DC power supply. Connect a 12Vdc to 18Vdc (1A) power supply to the AC terminals to power the console. The alternate DC power supply is not for use in UL installations.*


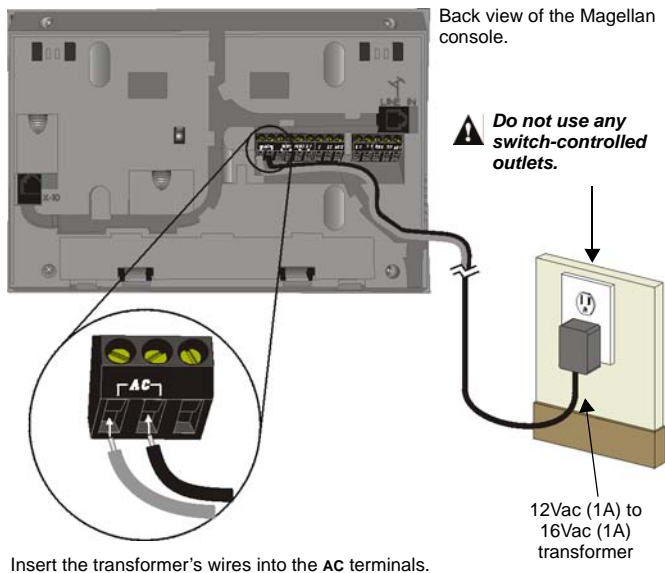
 **Do not connect to a receptacle controlled by a switch.**


Figure 1: Connecting the Transformer



DC Power

Magellan can also be powered through a DC power supply. Connect a 12Vdc to 18Vdc (1A) power supply to the AC terminals to power the console. Connect the transformer to the AC terminals as shown in Figure 2 on page 7.

Figure 2: Connecting the DC Power Supply

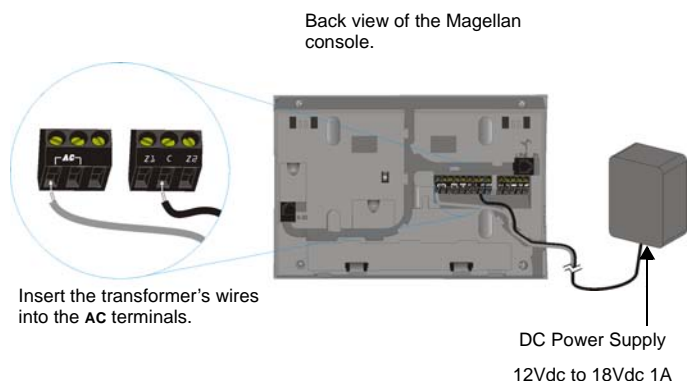


Backup Battery Pack

Magellan uses a backup battery pack to provide power during a power loss. A 7.2Vdc 1.8Ah NiMH (Nickel Metal Hydride) rechargeable battery pack is included with the Magellan console. Connect the battery pack as shown in Figure 3 on page 7.


 **Connect the backup battery pack after applying AC power.**

Figure 3: Connecting the Backup Battery

Back view of the Magellan console

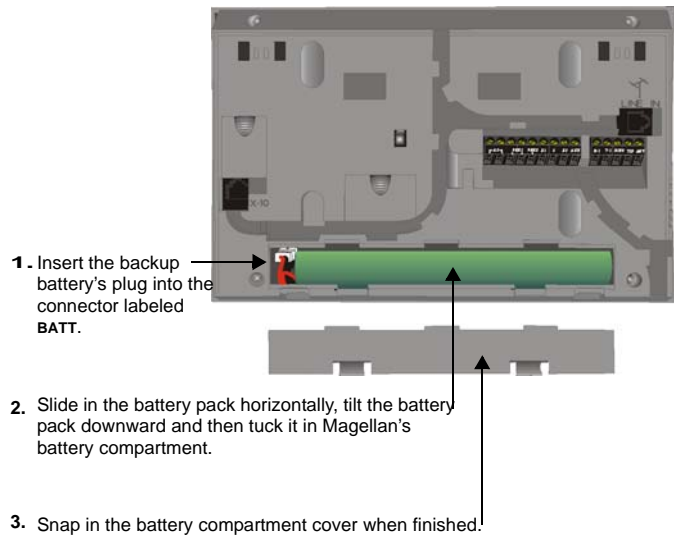



To order a battery pack, the battery pack's part number is: Paradox# 0780100178.

 *The backup battery can support Magellan during an AC failure for 24 hours when in standby mode.*

Auxiliary Output

The auxiliary power supply terminals can be used to power motion detectors. The combined current consumption of devices connected to the auxiliary power supply should not exceed 200mA. If the auxiliary output is overloaded and is shut down, you must disconnect all loads from the output for at least 10 seconds before reconnecting any load back to the auxiliary output.

Figure 4: Auxiliary Output Connection

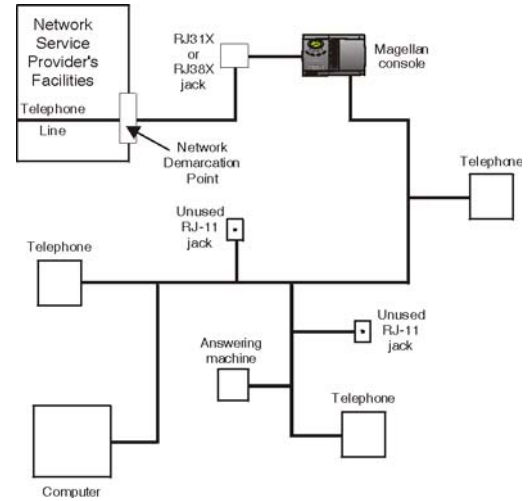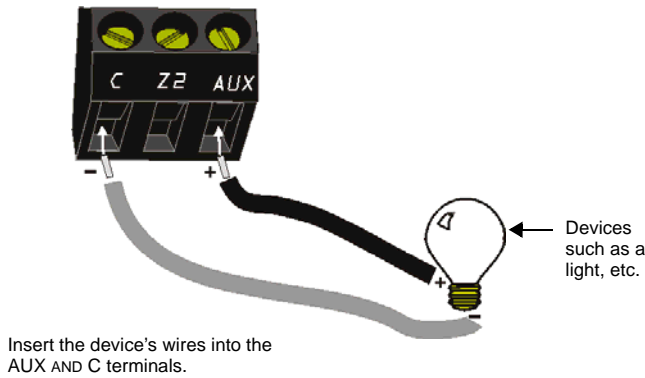


Telephone Line Connections

The Magellan console can be connected to a telephone line by connecting the telephone company's wires directly to Magellan's dialer or by connecting a standard 4-pin RJ-11 cable between the LINE plug of the console to a standard telephone wall jack.

Direct Connect

Connect the telephone line through a RJ31X jack as shown in Figure 5 on page 8.

Figure 5: Telephone Line Direct Connect

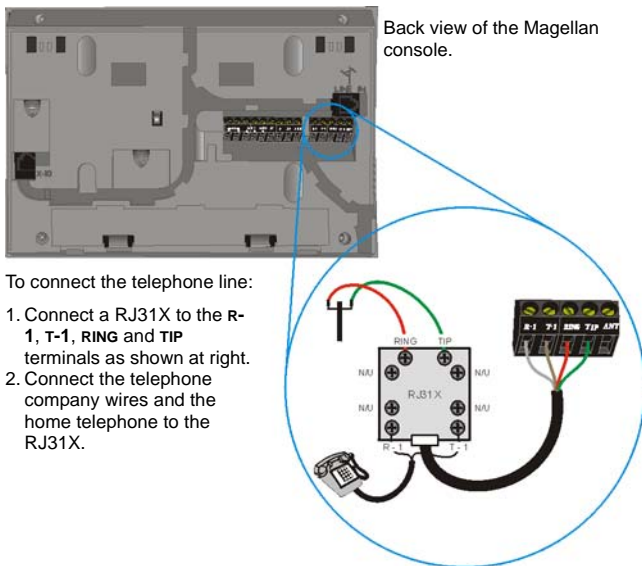


! For UL compliant installations, the Magellan console must be able to seize the telephone line and place a call in a non-medical emergency situation. It must be able to do this even if other equipment (telephones, answering machines, computer modems, etc.) already has the line in use. To do so, the Magellan console must be connected to a properly installed RJ31X jack that is in series with and ahead of all other equipment attached to the same telephone line. Proper installation is depicted in the diagram below. If you have any questions concerning these instructions, you should consult your telephone company about installing the RJ31X jack and the Magellan console for you.

Line Plug Connect

The Magellan console can also be connected to a telephone line via its on-board LINE plug. See Figure 6 on page 8 for more information on connecting the telephone line using this method.

! When connecting via the LINE plug, if the telephone line is shared and it is busy (i.e. someone is talking on the telephone) the console will be unable to communicate with the Monitoring Station. It is recommended that the Direct Connect method (see page 8) be used to connect the telephone line.

Figure 6: Line Plug Connection

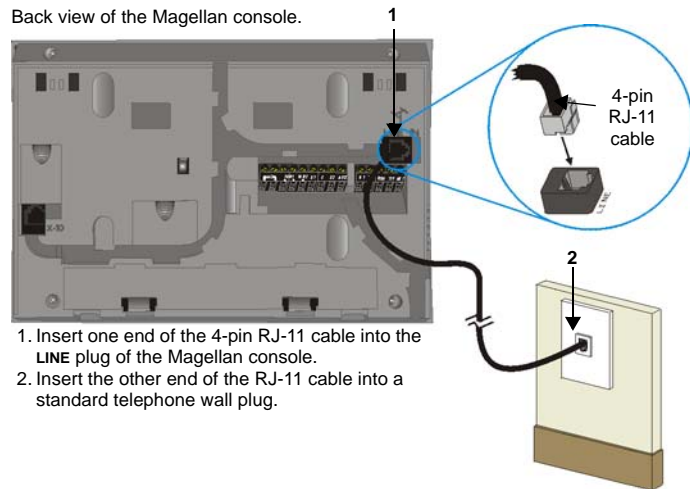

Programmable Outputs (PGMs)

Magellan comes equipped with one 100mA solid-state PGM output and one low powered open-collector; Max. handling current 50mA. When a specific event occurs in the system, a PGM can be programmed to activate lights, garage door openers, etc. See Programmable Outputs on page 34 for more information on programming PGMs.

Connect Magellan's PGM outputs as shown in Method 1 in Figure 7 on page 9. Since Magellan does not come with a power supply, an external power supply must be employed to power the circuit. The PGM outputs can be either Normally Open (N.O.) or

Normally Closed (N.C.) as detailed in PGM Normal State (Onboard Only) on page 35.

If the current draw on the PGMs is to exceed 100mA, we recommend using an external relay as shown in Method 2 in Figure 7 on page 9. For connecting PGM2, see Figure 8.


 Using Method 2, connect the device to the output terminal of the external relay that matches the normal state of Magellan's PGM output. For example, if PGM1's normal state is Normally Open (N.O.), connect the device to the N.O. terminal of the external relay.

Figure 7: PGM1 Connections

Back view of the Magellan console.


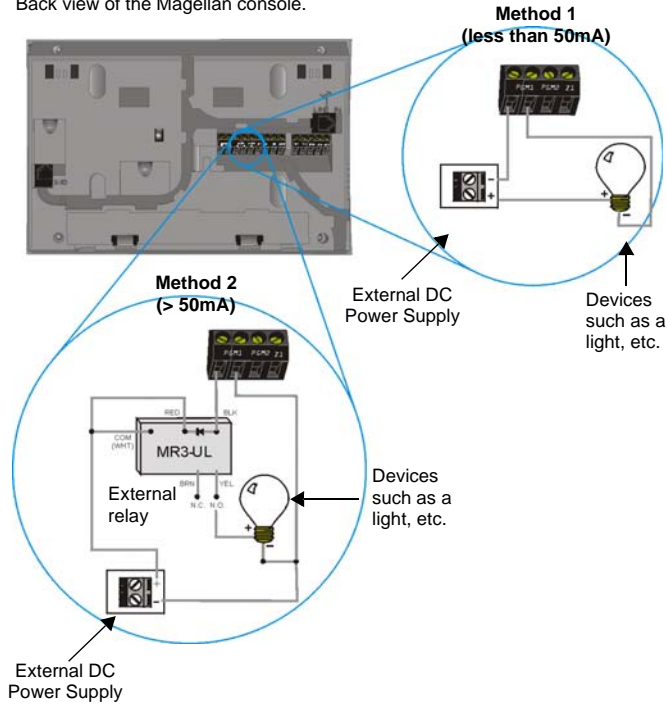


Figure 8: PGM2 Connections

Back view of the Magellan console.

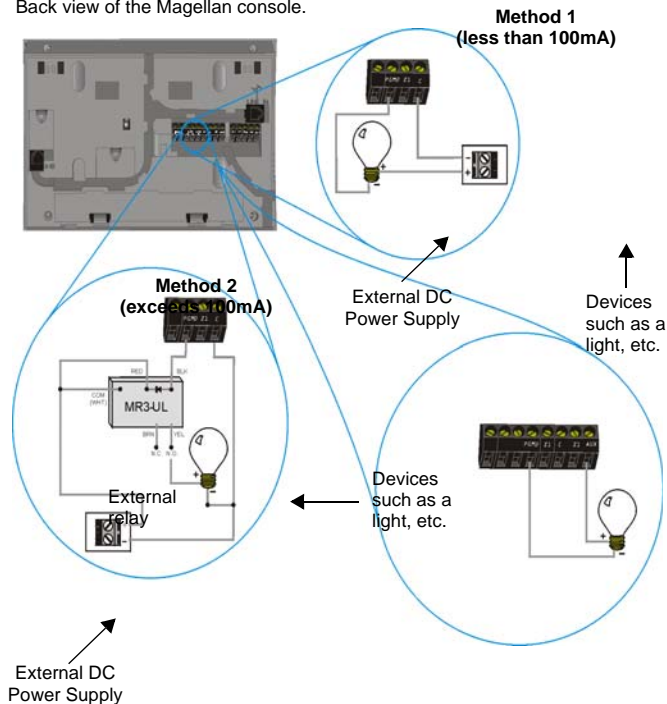

Hardwire Zone Connections

Magellan comes with two on-board hardwire zones. You can connect hardwire detection devices such as door contacts to Magellan's zone terminals. Connect the detection devices as shown in Figure 9 on page 9. Please note the following:

- Section [095] options [1] and [2] must be enabled in order to use the two on-board hardwire zones. See Zones 31 and 32 Become Hardwire Zones on page 18 for more information.
- After connecting the detection devices, the zones must be defined. See Zone Programming on page 15 for more information.
- The hardwire zones follow the console's EOL and tamper definitions.


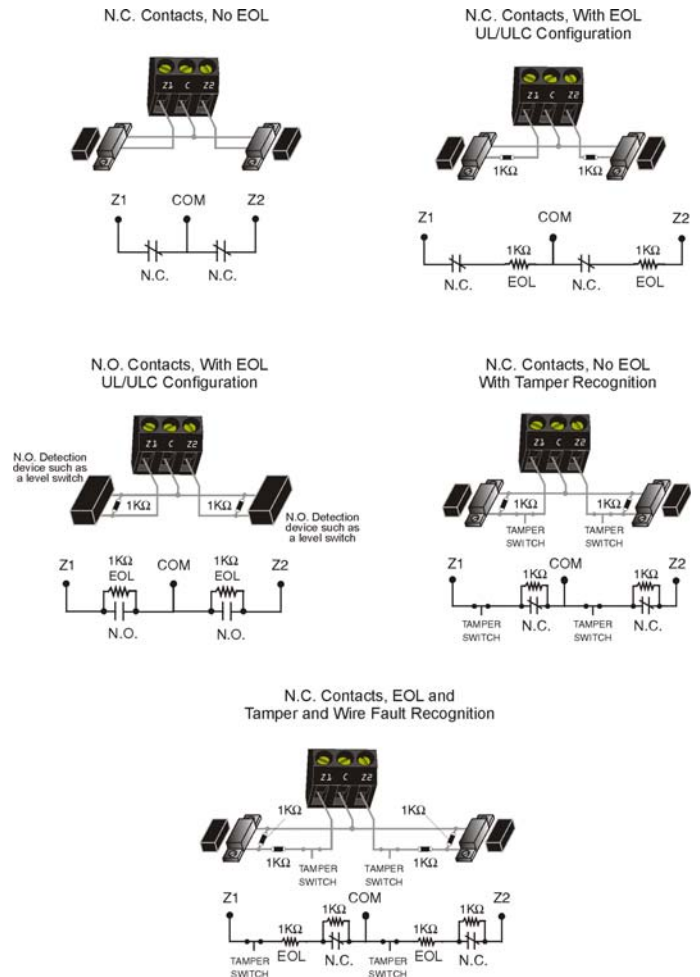
 Though any hardwire detection device can be connected to Magellan's on-board hardwire zone inputs, it is recommended that only devices that do not require a power source (i.e., standard door contacts) be connected. Since Magellan has no power supply, an external power supply would have to be connected in order to power hardwire detection devices that do require a power source.

Figure 9: Hardwire Zone Connections




WinLoad Connection

The Magellan console can be programmed and monitored through the WinLoad Installer Upload/Download Software for Windows®. WinLoad allows for remote or on-site uploading and downloading using most standard modems. It also allows for advanced printing of reports and supports several languages simultaneously. Connect Magellan to a computer containing the WinLoad software as shown in Figure 10 on page 10.

Refer to the *WinLoad's Online Help* for more information on WinLoad.

Figure 10: On-site Connection

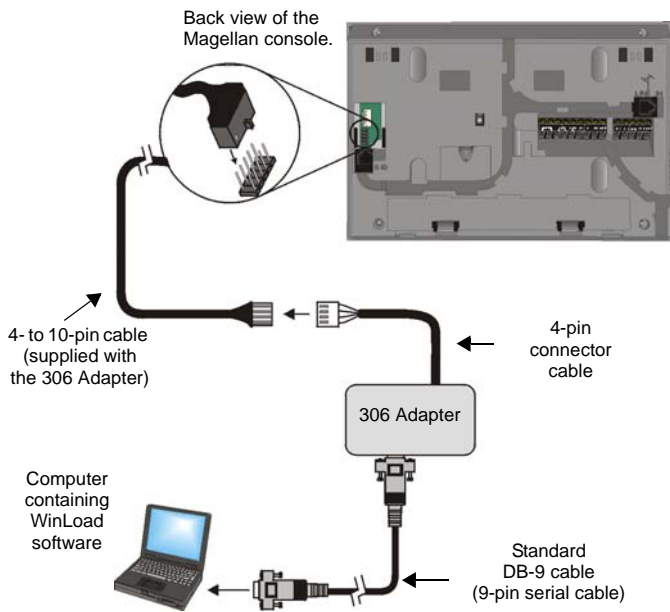


UIP-256 Universal In-Field Programmer Connection

Magellan's firmware can be upgraded locally using the UIP-256 Universal In-Field Programmer. The UIP-256 includes proprietary PC software, cables to interconnect Magellan and a PC, as well as two 9V batteries. Connect the UIP-256 as shown in Figure 11 on page 10.

Refer to the *Universal In-Field Programmer (UIP-256) Instructions* for more information.

Figure 11: Connecting the UIP-256

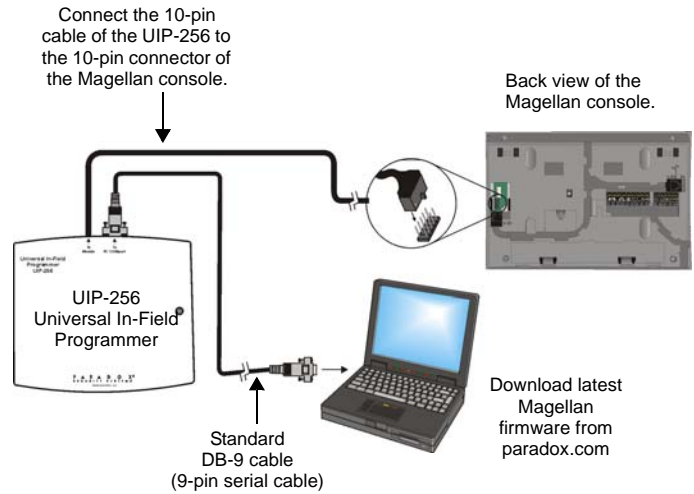


X10 Transmitter Connection (MG-6160 only)

Magellan supports the X10 communication protocol. X10 is a communication protocol for remote control of electrical devices such as lamps and appliances. Communication is accomplished through standard household electrical wiring using X10 transmitters and receivers. Configure Magellan, with the use of an X10 transmitter, to automate a home. Connect the X10 transmitter as shown in Figure 12 on page 10.

Refer to the *Magellan X10 Instructions* on our website, paradox.com, for information on using and configuring Magellan's X10 feature.

Figure 12: Connecting the X10 Transmitter

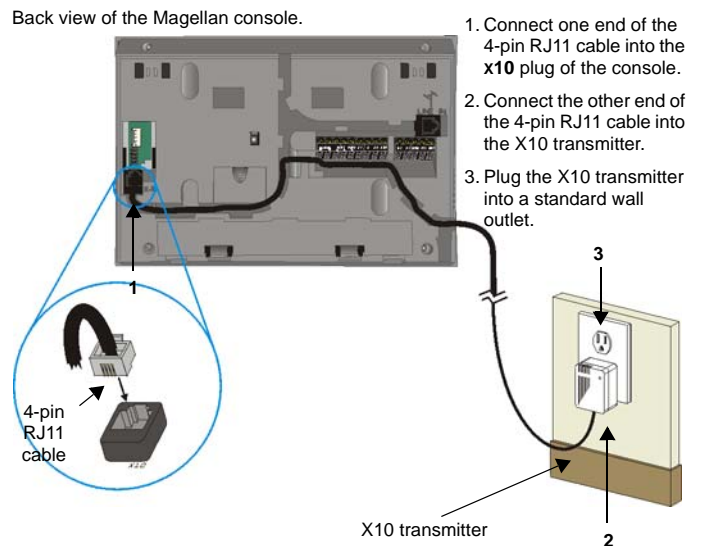


Connecting a Paradox Memory Key (PMC-3)

When using a Paradox Memory Key with a Magellan console, remove power (both AC and battery power) and connect the memory key to the 5-pin connector on the back of the Magellan console as shown in Figure 13 on page 11. Once connected, re-

apply power to the console. For more information, see Programming Using a Paradox Memory Key on page 13.

Figure 13: Connecting a Paradox Memory Key (PMC-3)

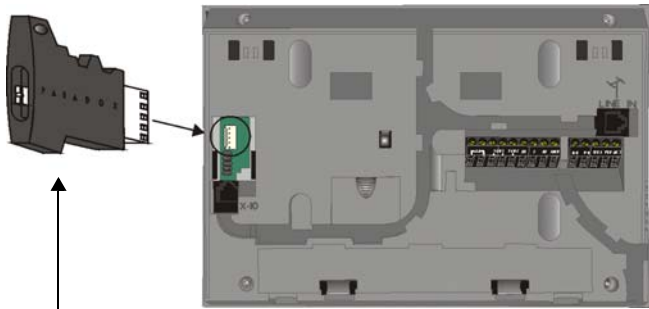

Jumper ON:
Read from and/or write to memory key
Jumper OFF:
Write protected (read from memory key only)



The installer should verify the proper installation of the memory key.

Location and Mounting

Location

The locations of Magellan and its wireless transmitters affect the overall performance of the wireless system. To ensure the best signal reception, the following list of location criteria should be respected whenever possible:

- Select an installation site that is free of obstacles that reflect and absorb radio frequency (RF) signals, as well as interference that may distort signals. Avoid installation near or in the path of strong RF fields (i.e., neon lights, computers), and on or near metal objects, circuit breaker boxes, air conditioners and heater ducts since they may cause interference and reduce the console's sensitivity.
- Select a site that is not susceptible to drastic temperature changes.
- Mount the Magellan console as central as possible to the proposed placement of the wireless transmitters.
- Mount the Magellan console as high as possible.
- Avoid installing Magellan in the basement as the range of the console is reduced when installed below ground level. However, if it is absolutely necessary to install the console in the basement, install the console as high as possible.
- Install the Magellan console on a wall allowing at least 5cm (2") around the console to permit adequate ventilation and heat dissipation.

The Wall Plate

Magellan uses a plastic wall plate to stay mounted on a wall. The wall plate is also used for tabletop mounting to cover the back of the console as well as keep any wires within their respective wire slots. After choosing an appropriate location (see Location on page 11), mount the wall plate onto the Magellan console with two screws as described in Mounting Magellan on the Wall on page 11 or Tabletop Mounting on page 12.

Figure 14: Wall Plate

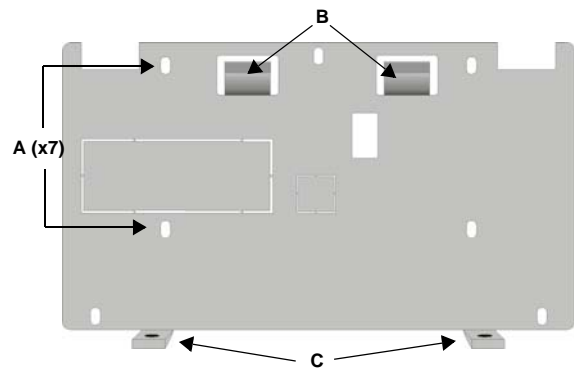


Figure 15: Mounting Magellan onto the Wall Plate


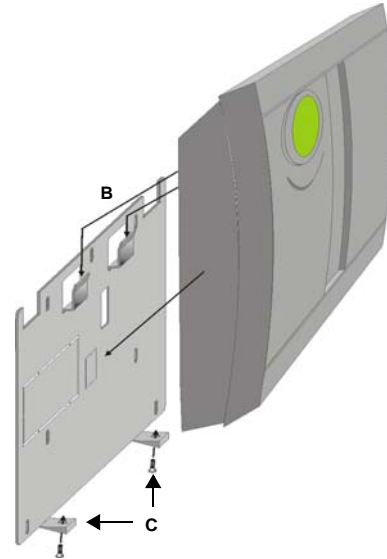


Figure 16: Magellan's Back Plate

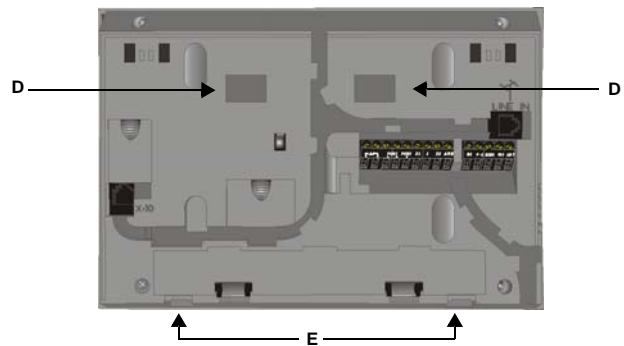

Mounting Magellan on the Wall

Magellan can be mounted on a wall by first securing the wall plate (see The Wall Plate on page 11) to the wall and then mounting the Magellan console on the secured wall plate as shown in Figure 15 on page 11 and Figure 16 on page 11. To do so:

1. Place the wall plate on the desired spot of the wall.
2. Drill and insert screws into holes labeled **A** as shown in Figure 14 on page 11.
3. Place the console back plate flush against the mounted wall plate.


4. Slide the Magellan's open slots labeled **D** (see Figure 16 on page 11) onto the wall plate's tabs labeled **B** (see Figure 15 on page 11).
5. Gently apply downward pressure to insert the wall plate's tabs into Magellan's open slots.
6. Insert two screws through the wall plate's screw holes labeled **C** and into holes labeled **E** (see Figure 15 on page 11 and Figure 16 on page 11) in the Magellan back plate. This will secure the console to the wall.

Tabletop Mounting

Magellan can also be mounted on a tabletop. This is a useful convenience that allows Magellan to be situated on a nightstand, desk, kitchen counter, etc. Included with Magellan are two plastic feet as well as two rubber stops. The plastic feet raise the Magellan console to a slight angle for easy viewing while the rubber stops prevent the console from sliding when Magellan is being used. To do so:

1. Place the console back plate flush against the wall plate.
2. Slide the Magellan's open slots labeled **D** (see Figure 16 on page 11) onto the wall plate's tabs labeled **B** (see Figure 15 on page 11).
3. Gently apply downward pressure to insert the wall plate's tabs into Magellan's open slots.
4. Insert two screws through the wall plate's screw holes labeled **C** and into holes labeled **E** (see Figure 16 on page 11) in the Magellan back plate.
5. Attach the plastic feet and rubber stops as shown in Figure 17 on page 12.

Figure 17: Mounting Magellan on a Tabletop

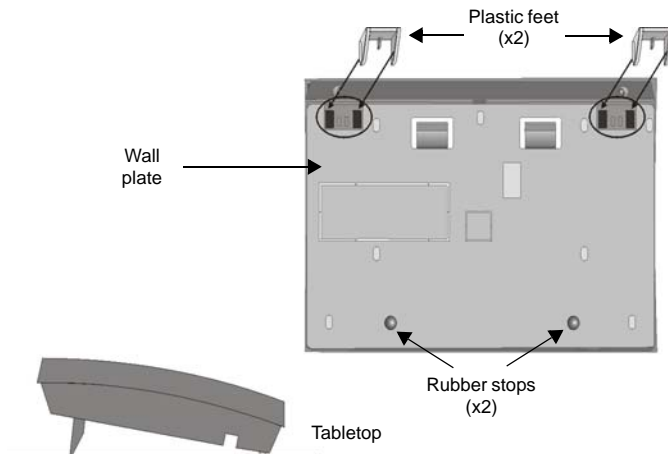


Tabletop mounting may not be an approved installation method by local regulations. It is recommended that the local regulations be verified prior to installing the Magellan console using this method.

Connecting the Radio Antenna (MG-6160 only)

If the radio's reception is not very good, connect the supplied radio antenna to the **ANT** terminal on the back of the Magellan console as shown in Figure 18 on page 12. Move the antenna around until the spot with the best reception is found.

Figure 18: Connecting the Radio Antenna

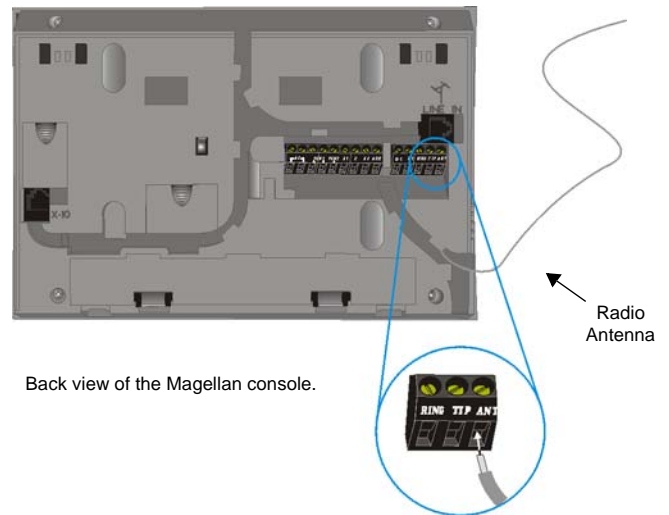

Back view of the Magellan console.



Radio Antenna

Programming Methods

WinLoad Installer Upload/Download Software

Program the Magellan console remotely or on-site using the WinLoad Installer Upload/Download Software for Windows®. For more information, contact your local Paradox Distributor or visit our Web site at paradox.com. If you are using the WinLoad software, you must program the features explained on page 38.



Please refer to *WinLoad's Online Help* for more information on using WinLoad.

Programming Using the Built-in Keypad

Use the built-in keypad to access Magellan's programming mode.



Use the supplied *Magellan Programming Guide* to keep track of which sections were programmed and how.

To access programming mode:

1. Press and hold the **[0]** key.
2. Enter your **[INSTALLER CODE]** or **[MAINTENANCE CODE]**.
3. Enter the 3-digit **[SECTION]** you wish to program.
4. Enter the required **[DATA]**.

There are two methods that can be used to enter data when in programming mode: Single Digit Data Entry and Feature Select Programming.

Single Digit Data Entry Method

After entering programming mode, some sections will require that you enter decimal values from 000 to 255. Other sections will require that you enter hexadecimal values from 0 to F. The required data will be clearly indicated in this manual as well as in the Magellan Programming Guide. When entering the final digit in a section, Magellan will automatically save and advance to the next section. Table 1 (see below) shows the keys and their equivalent decimal and/or hexadecimal value.

Table 1: Decimal and Hexadecimal Values

Key	Value	Key	Value
[1]	1	[9]	9
[2]	2	[0]	0 (decimal) Space (Hexadecimal)
[3]	3	[1] CK*	A (Hexadecimal only)
[4]	4	[2] CK*	B (Hexadecimal only)
[5]	5	[3] CK*	C (Hexadecimal only)
[6]	6	[4] CK*	D (Hexadecimal only)
[7]	7	[5] CK*	E (Hexadecimal only)
[8]	8	[6] CK*	F (Hexadecimal only)

* CK = Center keypad

Feature Select Programming Method

After entering certain sections, eight options will be displayed whereby each option from **[1]** to **[8]** represents a specific feature or option. To manipulate the options:

- Press the key corresponding to the desired option and the option number will appear in the LCD display. This means the option is ON. Press the key again to remove the digit from the LCD display, thereby, turning OFF the option.
- Press the **[*]** key to set all eight options to OFF. Press the keys until the current section's options are set. When the options are set, press the **[#]** key to save and advance to the next section.
- Press the **[*]** key twice to exit without changing any data.

Programming Using a Paradox Memory Key

The Paradox Memory Keys (PMC-3) are very useful when multiple Magellan consoles are to be programmed identically.

Rather than programming each console by entering its programming mode and then scrolling through programming sections, use a memory key to program each console. The programming of a console with a memory key takes approximately three seconds.

There are two actions that can be performed with a memory key.

Download Data to Destination Console

To download the data of a memory key into a console:

1. Remove power from the Magellan console (AC and battery) and connect the memory key to the 5-pin connector on the left side of the back of the console (see Figure 13 on page 11).
2. Re-apply both AC and battery power to the console.
3. Press the **[OK]** key and Magellan will begin downloading the data from the memory key.

Copy Data to Memory Key from Source Console

To copy the contents of a console into the memory key.

1. Remove power from the Magellan console (AC and battery) and connect the memory key to the 5-pin connector on the left side of the back of the console (see Figure 13 on page 11).
2. Re-apply both AC and battery power to the console.
3. Press the **[NEXT]** key and then the **[OK]** key. Magellan will begin copying its data into the memory key.



The Installer code of the Magellan console used to download data to the memory key must be the same installer code programmed in the Magellan console that is to download the contents from the same memory key. If the installer codes do not match, the contents of the memory key cannot be downloaded into the receiving console.

Example: The contents of the Magellan console A will be copied into memory key B. The Installer code for console A is 111111. In order to download the contents of memory key B into the Magellan console C, the installer code programmed in console C must also be 111111.

User Codes

A person must be assigned to a User code in order to have access to Magellan. A User code defines the extent of a user's access to the system and consists of a code # (PIN) and user options. Magellan supports one Installer code, one Maintenance code and up to 16 User codes (one System Master code and 15 User codes).

Installer Code	Used to program all console settings except User codes and remote controls.
Maintenance Code	Identical to the Installer code except that the code cannot program some communication settings.
System Master Code User Code 001	Provides access to the following Magellan user features: language, voice and utility reporting, delays and tones, zone labels, system tests. Arm and disarm using any method as well as program User codes.
15 User Codes User Codes 002 to 016	Can arm and disarm the system.

User Code Length

Section [090]: Option [1]

Option [1] OFF = 6-digit User codes

Option [1] ON = 4-digit User codes (default)

All User codes can be set to lengths of either 4 or 6 digits. When the 4-digit option is selected, entering a 4-digit code will allow access. Using the 6-digit option, entering 6 digits is required to allow access.



If the User code length is changed from 4 digits to 6 digits when User codes have already been programmed, the console will automatically add the last 2 digits by using the first 2 digits. For example, if the Access code is 1234 and you switch to 6 digits, the code will become 123412. Be sure to verify the Access codes after switching from 4-digit to 6-digit Access codes. When switching from 6 digits to 4 digits, the console will simply remove the final 2 digits of the Access code. For example, 123456 will become 1234.

Installer Code

Section [181]; Default = 000000

The Installer code is used to enter the console's programming mode (see Programming Using the Built-in Keypad on page 13), which allows you to program all the features, options and commands of the Magellan console. The Installer code can be 4 or 6 digits in length (see User Code Length on page 14) where each digit can be any value from 0 to 9. The Installer code cannot be used to program any User code.

To change the Installer code:

1. Access the installer programming mode (see page 13).
2. Enter section [181].
3. Enter a new **[4- OR 6-DIGIT INSTALLER CODE]**.

OR

1. Press **[MENU] + [4] + [INSTALLER CODE] + [8] + [NEW CODE]**.

Maintenance Code

Section [182]; Default = 111111

The Maintenance code is similar to the Installer code. It can be used to enter the console's programming mode (see Programming Using the Built-in Keypad on page 13), which allows you to program all features, options and commands **except** for the console's communication settings (sections [108] to [112] and [180] to [182]) as well as any User code. The Maintenance code can be 4 or 6 digits in length (see User Code Length on page 14). Each digit can be any value from 0 to 9.

To change the Maintenance code:

1. Access the installer programming mode (see page 13).
2. Enter section [182].
3. Enter a new **[4- OR 6-DIGIT MAINTENANCE CODE]**.

OR

1. Press **[MENU] + [4] + [INSTALLER CODE] + [8] + [NEW CODE]**.

System Master Code

With the System Master code a user can use any arming method and can program any user's (from 1 to 16) Access code. The System Master code can be 4 or 6 digits in length (see User Code Length on page 14), where each digit can be any digit from 0 to 9. The System Master code cannot be changed by the Installer or Maintenance code, but it can be reset to default.

Lock System Master Code

Section [090]: Option [3]

Option [3] OFF = System Master code unlocked (default)

Option [3] ON = System Master code locked

With section [090] option [3] enabled, the System Master code can only be changed or deleted through WinLoad or a power down reset.

Reset System Master Code

Section [200]

Enter section [200] to reset the System Master code to default (1234/123456).



Make sure that the Lock System Master Code feature (section [090] option [3]) is disabled.

Duress Code

Section [090]: Option [4]


Option [4] OFF = Duress code disabled (default)

Option [4] ON = User code 016 becomes a Duress code

With this feature enabled, User code 016 becomes a Duress code. When forced to arm or disarm their system, users can enter a Duress code (User code 016) to arm or disarm the system which can immediately transmit a silent alert to the Monitoring Station, transmitting the Duress report code programmed in section [148] (see page 28).

Zone Programming


Magellan supports up to 32 wireless zones whereby each zone can be configured with a different zone definition and option. Each zone can also have a voice label recorded for it. Magellan's zones can be programmed using section programming or through the Installer menu.

 See Quick Setup on page 4 for more information on zone programming using the Installer menu.

Zone Programming Overview

After assigning and setting up your wireless transmitters, define the associated zone's parameters. The zone parameters define the type of zone and how the control panel will react when an alarm condition occurs on that zone. These zone parameters are programmed into one section as detailed in Figure 19 on page 15.

Figure 19: Magellan Zone Programming Overview

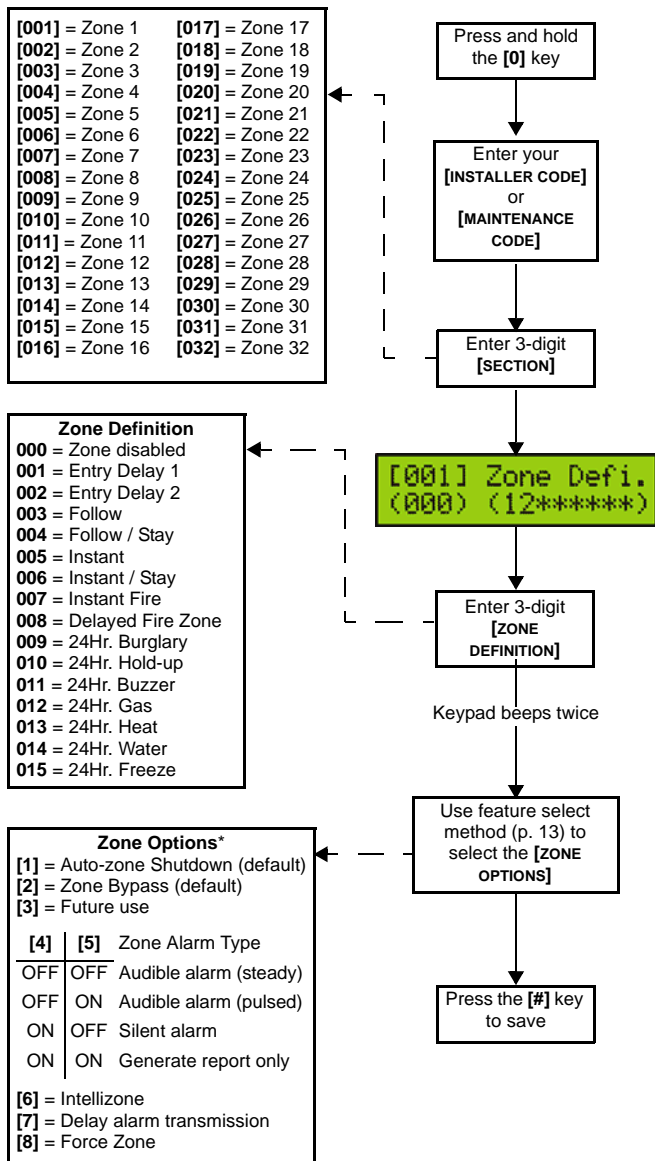

* Available through Section Programming only.

Zone Definitions

Sections [001] to [032] represent zones 1 through 32 respectively, whereby the first three digits in each of these sections represents the zone's definition. To **disable a zone**, enter 000 and then press the [#] key. There are 15 available Zone Definitions, which are described as follows:

Entry Delay 1

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 001

When the system is armed and a zone defined with Entry Delay 1 opens, the console will generate an alarm after the programmed Entry Delay 1 Timer elapses. This is to provide users with enough time to enter the protected area and disarm the system. Entry Delay zones are commonly used at the entry/exit points of the protected area (i.e., front/back door, garage, etc.). Using different Entry Delays (see Entry Delay 2 below) is useful when, for example, one entry point requires a longer delay than another entry point.

Entry Delay 1 Timer

Section [060]: 001 to 255 seconds; 000 = Disabled; Default = 45 seconds

Enter the desired 3-digit delay value from 000 to 255 seconds into section [060] to program the Entry Delay 1 Timer.

Entry Delay 2

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 002

Entry Delay 2 zones are identical to the Entry Delay 1 zones (see Entry Delay 1 on page 15), except it uses a separate Entry Delay Timer.

Entry Delay 2 Timer

Section [061]: 001 to 255 seconds; 000 = Disabled; Default = 45 seconds

Enter the desired 3-digit delay value from 000 to 255 seconds into section [061] to program the Entry Delay 2 Timer.

Follow Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 003

When an armed Follow zone opens, the console will immediately generate an alarm unless an Entry Delay zone opens first as described in the situations below:

- If an armed Follow zone opens after an Entry Delay zone opens, the console waits until the Entry Delay Timer has elapsed before generating an alarm.
- If an armed Follow zone opens after more than one Entry Delay zone opens, the console will wait until the Entry Delay Timer of the zone that opened first has elapsed.

This feature is commonly used when a motion detector is protecting the area occupied by the entry point keypad. This will prevent the motion detector from causing an alarm when a user enters through the entry point to disarm the system.

Follow/Stay Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 004

Follow/Stay zones function as follows:

- All zones defined as Follow/Stay zones become Follow zones (refer to Follow Zones on page 15) when the Magellan system is Regular armed.
- All zones defined as Follow/Stay zones become Stay zones when the Magellan system is Stay or Instant armed.

Instant Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 005

When an armed Instant zone opens, the console immediately generates an alarm. Instant zones are commonly used for windows, patio doors, skylights and other perimeter type zones.

Instant/Stay Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 006

Instant/Stay zones function as follows:

- All zones defined as Instant/Stay zones become Instant zones (refer to Instant Zones on page 16) when the Magellan system is Regular armed.
- All zones defined as Instant/Stay zones become Stay zones when the Magellan system is Stay or Instant armed.


Standard 24Hr. Fire Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 007

Whenever a Standard 24Hr. Fire zone opens, whether it is armed or disarmed, the console will generate the following:

- The console can send the corresponding Alarm Report Code from sections [131] to [138].
- Alarms are always audible regardless of other settings. Fire alarms generate an intermittent (pulsed) bell/siren output signal as shown in Figure 20 on page 16.

Figure 20: Bell/Siren Output during a Fire Alarm

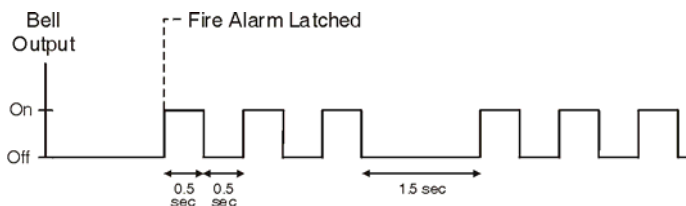

Delayed Fire Zones


Sections [001] to [032]: Zones 1 to 32, 3-digit # = 008

When a Delayed 24Hr. Fire zone opens, whether it is armed or disarmed, the console will react as shown in Figure 21 on page 16. Delayed 24Hr. Fire zones are commonly used in residential homes where a smoke detector often generates false alarms (i.e., burning bread, etc.).



This feature is not for use in UL installations.

Figure 21: Delayed Fire Zone

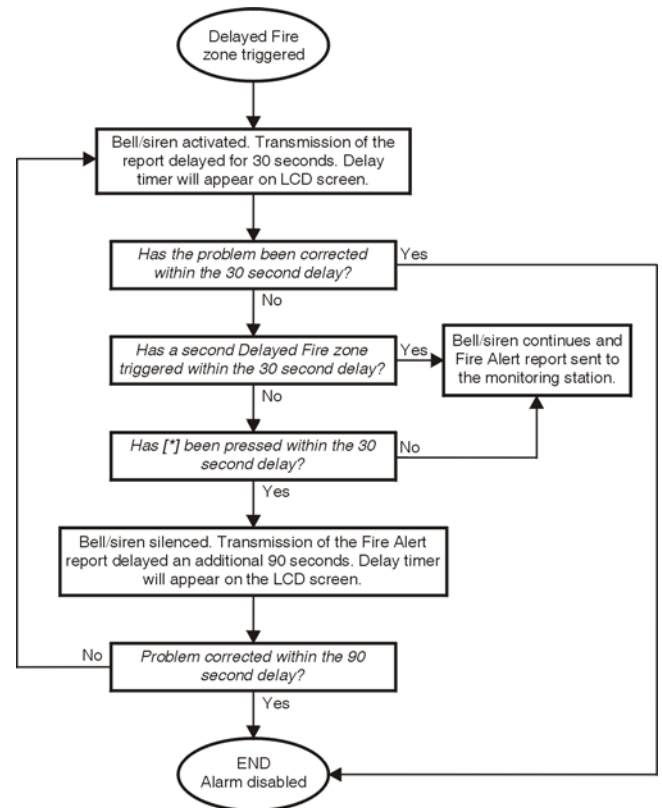

24Hr. Burglary Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 009

Whenever a 24Hr. Burglary zone opens, whether the system is armed or disarmed, the console will immediately generate an alarm.

24Hr. Hold-up Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 010

When a 24Hr. Hold-up zone opens, whether it is armed or disarmed, the console will immediately generate an alarm. The SIA FSK reporting format includes specific report codes to identify the alarm as a Hold-up alarm (see Appendix 1: Automatic Report Code List on page 39).

24Hr. Buzzer Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 011

This zone definition is particularly useful when a user wishes to be notified when something such as a safe or locker within the home has been accessed (i.e., a child accessing a valuable collection). This zone definition functions as follows:

- Whenever a 24Hr. Buzzer zone opens, whether the console is armed or disarmed, the console sets off the keypad's buzzer to indicate that the zone was breached.
- The console will report the alarm, but will not enable the bell/siren output.
- Enter any valid Access code on the keypad to stop the buzzer.

24Hr. Gas Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 012

When a 24Hr. Gas zone opens, whether it is armed or disarmed, the console will immediately generate an alarm. The SIA FSK reporting format includes specific report codes to identify the alarm as a Gas alarm (see Appendix 1: Automatic Report Code List on page 39).

24Hr. Heat Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 013

When a 24Hr. Heat zone opens, whether it is armed or disarmed, the console will immediately generate an alarm. The SIA FSK reporting format includes specific report codes to identify the alarm as a Heat alarm (see Appendix 1: Automatic Report Code List on page 39).

24Hr. Water Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 014

When a 24Hr. Water zone opens, whether it is armed or disarmed, the console will immediately generate an alarm. The SIA FSK reporting format includes specific report codes to identify the alarm as a Water alarm (see Appendix 1: Automatic Report Code List on page 39).

24Hr. Freeze Zones

Sections [001] to [032]: Zones 1 to 32, 3-digit # = 015

When a 24Hr. Freeze zone opens, whether it is armed or disarmed, the console will immediately generate an alarm. The SIA FSK reporting format includes specific report codes to identify the alarm as a Freeze alarm (see Appendix 1: Automatic Report Code List on page 39).

Zone Options

Sections [001] to [032] represent zones 1 through 32 respectively as demonstrated in Figure 19 on page 15. After entering the 3-digit Zone Definition (see Zone Definitions on page 15), select one or more of the following Zone Options by using the Feature Select Programming Method (see page 13).

Auto-zone Shutdown

Sections [001] to [032]: Zones 1 to 32; Option [1]

Option [1] OFF = Auto-zone Shutdown disabled
Option [1] ON = Auto-zone Shutdown enabled (default)

If, in a single armed period, the number of alarms generated by a zone with the Auto-zone Shutdown option enabled exceeds the number defined by the Auto-zone Shutdown Counter, the console will no longer generate an alarm for that zone. The Auto-zone Shutdown Counter resets every time the system is armed.

Auto-zone Shutdown Counter

Section [067]: 001 to 015 alarms; 000 = Disabled; Default = 5 alarms

Enter the desired limit into section [067] to program the Auto-zone Shutdown Counter.

Bypass Option

Section [001] to [032]: Zones 1 to 32; Option [2]

Option [2] OFF = Bypass option disabled
Option [2] ON = Selected zone is Bypass enabled (default)

When a user uses the *Bypass Programming* feature, only zones with the Bypass option enabled can be programmed as bypassed.



Fire zones cannot be programmed with the Bypass option because the console will not bypass a Fire zone.

Alarm Types

Sections [001] to [032]: Zones 1 to 32; Options [4] and [5]

When an alarm condition occurs, the console can be programmed to react as shown in Table 2 on page 17.

Table 2: Alarm Type Options

Options		Description
[4]	[5]	
OFF	OFF	Audible steady alarm (default) When the conditions for an alarm have been met, the control panel can transmit the appropriate Zone Alarm report code (see page 27) and provides a steady output for the on-board siren.
OFF	ON	Audible pulsed alarm When the conditions for an alarm have been met, Magellan can transmit the appropriate Zone Alarm report code (see page 27) and provides a pulsed output (see Figure 20 on page 16) for the on-board siren.
ON	OFF	Silent alarm When the conditions for an alarm are met, the control panel can transmit the appropriate Zone Alarm report code (see page 27) and will not activate the control panel's bell output. The appropriate ARM or STATUS LED on the keypads will flash to indicate an alarm and the user will still have to disarm the system.
ON	ON	Report only When the conditions for an alarm have been met, the control panel can transmit the appropriate Zone Alarm report code (see page 27). The system will not have to be disarmed.



The Alarm Type options cannot be programmed for Fire zones. Fire zones are automatically programmed with an audible pulsed alarm. This cannot be altered.

Intellizone

Sections [001] to [032]: Zones 1 to 32; option [6]

Option [6] OFF = Intellizone disabled (default)
Option [6] ON = Intellizone enabled

This feature reduces the possibility of false alarms. When a zone with the Intellizone option opens, the console does not immediately generate an alarm. First it triggers the Intellizone Delay Timer. If any of the following conditions occur during this period, the panel will generate an alarm:

- During the Intellizone Delay, a second zone has caused an alarm.
- During the Intellizone Delay, the zone in alarm has restored (closed) and re-occurred (opened).
- The zone in alarm is still open after the Intellizone Delay has elapsed.



This feature is not for use in UL installations.

Intellizone Delay Timer

Section [065]: 010 to 255 seconds; Default = 45 seconds

Enter the desired 3-digit value into section [065] to program the Intellizone Delay Timer.

Delay Before Alarm Report Code Transmission

Sections [001] to [032]: Zones 1 to 32; option [7]

Option [7] OFF = Delay alarm transmission disabled (default)

Option [7] ON = Delay alarm transmission enabled

This feature is commonly used with Entry Delay zones to reduce false alarms created by new users who may not disarm the system in time. This feature works as follows:

- When an alarm condition occurs on a zone with this option enabled, the console enables the bell/siren output, but does not report the alarm to the monitoring station until the end of the Alarm Transmission Delay.
- During this period, disarming the system disables the bell/siren output and cancels the report code transmission.



This feature is not for use in UL installations.

Alarm Transmission Delay

Section [075]: 001 to 255 seconds; 000 = Disabled; Default = 0 seconds

Enter the desired 3-digit delay value into section [075] to program the Alarm Transmission Delay.

Force Zones

Sections [001] to [032]: Zones 1 to 32; Option [8]

Option [8] OFF = Force zone disabled

Option [8] ON = Selected zone is Force enabled (default)

Any open Force zones at the time of arming will be considered deactivated by the console. If during this period a deactivated zone is closed, the console will revert that zone to active status. Consequently, the console will generate an alarm if the zone is breached.



Fire zones cannot be programmed with the Force zone option because the console will not bypass a Fire zone when the system is being Force armed.



This feature is not for use in UL installations.

Stay Delay Zones

Section [094]: Options [1]

Option [1] OFF = Stay Delay zone disabled (default)

Option [1] ON = Stay Delay zone enabled

When a Follow/Stay or Instant/Stay zone is armed using the Stay or Instant arming methods, with this option enabled and the zone is triggered, an alarm will not generate until the programmed Stay Delay elapses. A zone defined as Stay Delay follows the Entry Delay 1 Timer. To program the Entry Delay Timers, refer to Entry Delay 1 on page 15.



This feature is not for use in UL installations.

Zones 31 and 32 Become Hardwire Zones

Section [095]: Options [1] and [2]

Option [1] OFF = Wireless zone 31 remains unchanged (default)

Option [1] ON = Wireless zone 31 uses the on-board hardwire zone input 1

Option [2] OFF = Wireless zone 32 remains unchanged (default)

Option [2] ON = Wireless zone 32 uses the on-board hardwire zone input 2

The Magellan console comes with two on-board zone inputs, hardwire zone inputs 1 and 2. Section [095] options [1] and [2] allow you to convert zones 31 and 32 from wireless to hardwire by allowing you to connect hardwire detection devices (i.e., door contacts) to zone inputs 1 and 2.

- With section [095] option [1] ON, zone 31 is connected to zone input 1.
- With section [095] option [2] ON, zone 32 is connected to zone input 2.

EOL (End-Of-Line) Zones

Section [095]: Option [3]

Option [3] OFF = Hardwire zones 1 & 2 do not require EOL resistors (default)

Option [3] ON = Hardwire zones 1 & 2 require EOL resistors



This feature only applies to Magellan's on-board zone inputs. Section [095] options [1] and/or [2] (see Zones 31 and 32 Become Hardwire Zones on page 18) must be ON in order to use this feature.

If the hardwire detection devices connected to Magellan's zone inputs 1 and 2 have input terminals that require 1KΩ end-of-line resistors, enable (ON) section [095] option [3]. For details on using EOL resistors, refer to page 9.



When hardwired zones are used, the EOL Resistor Option must be enabled for UL installations. Wireless Programming

The Magellan system supports up to 32 wireless zones and two wireless doorbells. These wireless zones are monitored using transmitters such as wireless detectors and door contacts. The Magellan console only supports the Paradox Magellan series of wireless transmitters. The programming of the transmitters is accomplished in two steps:

1. Assign the wireless transmitter to Magellan.
2. Program the wireless zone.

Assigning Wireless Zone Transmitters

Sections [201] to [232]: Zones 1-32; Wireless Transmitters 1-32

Sections [201] to [232] represent zones 1 to 32. A wireless transmitter assigned to a section ([201] to [232]) will be assigned to the zone represented by the section.

For example, a wireless transmitter assigned to section [205] will be assigned to zone 5.

To assign a wireless transmitter:

1. Access the installer programming mode (see page 13).
2. Enter the **[SECTION]** corresponding to the desired zone.
3. Enter the 6-digit **[SERIAL NUMBER]** of the wireless transmitter.



The serial number is located on the inside of the wireless transmitter.

The wireless transmitters must be activated once having been assigned to the Magellan console. To activate a transmitter, insert the batteries and close the cover. To ensure proper synchronization between the console and the transmitter, open and close the zone corresponding to the transmitter.

Are the zones that have wireless transmitters assigned to them programmed? See Zone Definitions on page 15 and Zone Options on page 17.

*Wireless transmitters can also be assigned through the Installer menu. Press **[MENU] + [4] + [INSTALLER CODE] + [6]**. Select the zone you wish to assign the transmitter to, press **[OK]**, open the cover of the transmitter and then close the cover. The transmitter has been assigned. Refer to the Magellan Quick Setup on page 4 for more information on the Installer menu and the assignment of the wireless transmitters.*

Assigning Wireless Doorbells to the Console

Sections [233] and [234]: Wireless Doorbells 1 and 2

Magellan supports the use of two wireless doorbells. By connecting a pushbutton to the Universal Transmitter inputs of a Magellan Wireless Door Contact (MG-DCT1 or MG-DCTXP2), the MG-DCT1/MG-DCTXP2 will transmit a signal to Magellan whenever the pushbutton is pressed. Magellan will in turn become a doorbell and play a predetermined tone (see Wireless Doorbell Tones on page 19).



Please refer to the appropriate *Magellan Wireless Door Contact Instruction* for information on the installation and configuration of the wireless door contact.

To assign a wireless doorbell:

1. Access the installer programming mode (see page 13).
2. Enter the **[SECTION]** corresponding to the desired doorbell.
3. Enter the 6-digit **[SERIAL NUMBER]** of the MG-DCT1.

Wireless Doorbell Tones

Section [096]: Options [1] to [4]

Options [1] and [2] = Set tone for wireless doorbell 1
Options [3] and [4] = Set tone for wireless doorbell 2

Section [096] options [1] to [4] set the tones that will be played when Magellan receives a signal from either wireless doorbell 1 or 2 or both. Magellan comes with four tones. Refer to Table 3 on page 19 to set the desired tone.

Table 3: Wireless Doorbell Tones

Section [096] - Options [1] and [2]	Doorbell Tone #
Option [1] OFF / Option [2] OFF (Doorbell 1)	Tone 1 (default)
Option [1] OFF / Option [2] ON (Doorbell 1)	Tone 2
Option [1] ON / Option [2] OFF (Doorbell 1)	Tone 3
Option [1] ON / Option [2] ON (Doorbell 1)	Tone 4
Section [096] - Options [3] and [4]	Doorbell Tone #
Option [3] OFF / Option [4] OFF (Doorbell 2)	Tone 1
Option [3] OFF / Option [4] ON (Doorbell 2)	Tone 2 (default)
Option [3] ON / Option [4] OFF (Doorbell 2)	Tone 3
Option [3] ON / Option [4] ON (Doorbell 2)	Tone 4

Deleting Assigned Wireless Transmitters

Sections [201] to [232]: Zones 1-32; Wireless Transmitters 1-32
Sections [233] and [234]: Wireless Doorbells 1 and 2

To delete an assigned wireless transmitter:

1. Access the installer programming mode (see page 13).
2. Enter the **[SECTION]** corresponding to the desired zone or doorbell.
3. Press the **[0]** key six times to clear the wireless transmitter's serial number.

Viewing Wireless Transmitter Signal Strength

Sections [201] to [232]: Zones 1-32; Wireless Transmitters 1-32

Once wireless transmitters have been assigned to the Magellan console, the signal strength of each transmitter can be verified in sections [201] to [232] (zones 1 to 32 respectively). Each section represents the signal strength viewer for the wireless transmitter assigned to the corresponding zone.

For example, section [201] is the viewer for the wireless transmitter assigned to zone 1 and section [232] is the viewer for the wireless transmitter assigned to zone 32.

The signal strength is displayed using two terms:

- “Good”: This is an average reading and is acceptable.
- “Weak”: This is the weakest reading. The transmitter should be moved to another location. Sometimes moving the transmitter by a small amount will greatly increase the signal reception.

To view the signal strength of a wireless transmitter:

1. Access the installer programming mode (see page 13).
2. Enter the **[SECTION]** corresponding to the desired zone or doorbell.
3. The LCD will display either “Good” or “Weak” on the screen.



When performing a signal strength test, Magellan also displays the noise level surrounding each of the transmitters. “Low” refers to a low level of noise while “High” refers to a noisy environment.



The signal strength can also be verified by performing a system test. See Quick Setup on page 4 for more information.



The remote control will transmit a signal for only 1 second when a button is pressed and held for 1 second. This is done to conserve the remote control's batteries.

Although remote controls can be assigned by the System Master, the remote control's buttons are programmed by the installer.

Assigning Remote Controls

The Magellan console accepts up to 16 fully programmable remote controls. Every User code can have one remote control assigned to it.

To assign a remote control:

1. Press **[MENU] + [4] + [2]**.

Programming the Remote Control's Buttons

Sections [041] to [056]: Users 1 to 16; Remote Controls 1 to 16

Sections [041] to [056] represent the remote controls assigned to User codes 1 to 16 (see table below).

Each remote control can be programmed to perform different actions. Each digit in sections [041] to [056] represents a button or combination of buttons (see table below).

To program a remote control's buttons:

1. Access the installer programming mode (see page 13).
2. Enter the **[SECTION]** (sections [041] to [056]) corresponding to the desired remote control.
3. Enter the **[HEXADECIMAL VALUE]** (0 to F) of the desired button option from the Button Options Table on page 23.

If you do not wish to program all the buttons or button combinations, press the **[#]** key at any time to save and exit.




If you enable any Panic button options, you must enable the Panic options in the control panel (refer to Panic Alarms on page 26).

Programming the MG-REM1/MG-REM2




Warning: When section [040] is accessed, the console will copy the saved value of that section to all remotes.

Section	RC#	Data (Default: 4DE0)				Section	RC#	Data (Default: 4DE0)			
[040] Default	1-16	_____	_____	_____	_____			_____	_____	_____	_____
[041]	1	_____	_____	_____	_____	[049]	9	_____	_____	_____	_____
[042]	2	_____	_____	_____	_____	[050]	10	_____	_____	_____	_____
[043]	3	_____	_____	_____	_____	[051]	11	_____	_____	_____	_____
[044]	4	_____	_____	_____	_____	[052]	12	_____	_____	_____	_____
[045]	5	_____	_____	_____	_____	[053]	13	_____	_____	_____	_____
[046]	6	_____	_____	_____	_____	[054]	14	_____	_____	_____	_____
[047]	7	_____	_____	_____	_____	[055]	15	_____	_____	_____	_____
[048]	8	_____	_____	_____	_____	[056]	16	_____	_____	_____	_____



MG-REM1







 












MG-REM2

Button Options Table

- 0 - Button disabled
- 1 - Regular arming
- 2 - Stay arming
- 3 - Instant arming
- 4 - Force arming
- 5 - N/A
- 6 - N/A
- 7 - N/A
- 8 - Panic 1†
- 9 - Panic 2†
- A* - Panic 3†
- B* - PGM Activation (Event Group #7, see Appendix 1: PGM Event Table)
- C* - PGM Activation (Event Group #8, see Appendix 1: PGM Event Table)
- D* - Turn FM radio ON/OFF (MG-6160 only)
- E* - FM radio memory scan (MG-6160 only)
- F* - Non-medical alarm

* = Hex values A to F are keys [1] to [6] from Magellan's Center Keypad. Refer to Figure 1 on page 2.
 † = The panic feature (section [091] options [1] to [3]) must be enabled.

 The  button of the MG-REM1 and MG-REM2 remote controls has been permanently programmed to disarm the system. However, when the system is disarmed and the Magellan console's radio is on (MG-6160 only), the  button can be used for volume control. The button's functionality cannot be altered. The  button of the MG-REM2 remote control has been permanently programmed to request feedback from the system. The button's functionality cannot be altered. The  + ,  +  and  +  button combinations do not function with the MG-REM1 remote control. The  + ,  +  and  +  button combinations do not function with the MG-REM2 remote control.

 When section [040] is accessed, the console will display the contents of section [041] and copy the saved value of that section to all remote options: [041] to [56].

Assigning Wireless Keypads

Sections [243] to [246]: Keypads 1-4

Sections [243] to [246] represent keypads 1 to 4.

To assign a wireless keypad:

1. Access the installer programming mode (see page 13).
2. Enter the [SECTION] corresponding to the desired keypad.
3. Enter the 6-digit [SERIAL NUMBER] of the wireless keypad.

Assigning Wireless Repeaters

Sections [247] to [248]: Repeater 1-2

Sections [247] to [248] represent repeater 1 and 2.

To assign a wireless repeater:

1. Access the installer programming mode (see page 13).
2. Enter the [SECTION] corresponding to the desired repeater.
3. Enter the 6-digit [SERIAL NUMBER] of the wireless repeater.

Wireless Repeater Options

Section [300] to [305]: Options [1] to [8]; Repeater 1 options
 Section [306] to [311]: Options [1] to [8]; Repeater 2 options
 Defaults = OFF

Sections [300] to [303] represent zone repeating options for Repeater 1. Section [304] represents PGM repeating options for Repeater 1. Section [305] represents wireless keypad and doorbell repeating options.

Sections [306] to [309] represent zone repeating options for Repeater 1. Section [310] represents PGM repeating options for Repeater 1. Section [311] represents wireless keypad and doorbell repeating options.

By default, each option is OFF. Enable the option to have the respective zone/PGM/wireless keypad/doorbell repeated.

Arming and Disarming

Regular Arming Switches to Stay Arming

Section [092]: Option [4]

Option [4] OFF = Regular arming switches to Stay arming disabled (default)

Option [4] ON = Regular arming switches to Stay arming enabled

If a user Regular arms the system, but does not exit through (open and close) an Entry Delay zone during the Exit Delay, the console can be programmed to switch from Regular arming to Stay arming.

 
Regular Arming Switches to Force Arming

Section [092]: Option [5]

Option [5] OFF = Regular arming switches to Force arming disabled

Option [5] ON = Regular arming switches to Force arming enabled (default)

With this feature enabled, the console will always Force arm instead of Regular arm when a valid User code is entered. In installations where the user must always Force arm when leaving the protected area, this feature allows users to Force arm after entering their User code.




Stay Arming Switches to Force Arming

Section [092]: Option [6]

Option [6] OFF = Stay Arming Switches to Force Arming disabled (default)

Option [6] ON = Stay Arming Switches to Force Arming enabled

 With this feature enabled, the console will always Force arm and Stay arm when a valid User code is entered even if there are perimeter zones open.



Timed Auto-Arming

Section [092]: Option [1]

Option [1] OFF = Timed Auto-arming disabled (default)

Option [1] ON = Timed Auto-arming enabled

The Magellan system can be programmed to arm every day at the time specified by the Auto-arm Timer (see Auto-arm Timer on page 22). The following also apply:

- The Auto-arming options (see Auto-Arming Options on page 23) determine the arming method.
- Any open zones detected when the system is Auto-armed will be bypassed regardless of their definition (except 24Hr. zones).

movement has been detected for the period specified by the No

- The console will enter a 60-second Exit Delay period before arming the system. At this point, Auto-arming can be cancelled by entering a valid Access code.
- Once the system has successfully armed, the console can transmit the Timed Auto-Arming report code programmed in section [124].

Example: To automatically arm the system everyday at 6:15PM, enable section [092] option [1] to activate Timed Auto-arming and then key in 18:15 into section [085].



This feature is not for use in UL installations.

Auto-arm Timer

Section [085]

Using the 24-hour clock (i.e., 6:30PM = 18:30), program the time that you wish the console to attempt to arm the system and/or send the Late to Close report code.

No Movement Auto-Arming

Section [092]: Option [2]

Option [2] OFF = No Movement Auto-arming disabled (default)

Option [2] ON = No Movement Auto-arming enabled

If no movement occurs in a zone's protected area for the period specified by the No Movement Timer (see below), the console can automatically arm the system.

- The Auto-arming option (see Auto-Arming Options on page 23) determines the system's arming method.
- Any open zones detected when the system is Auto-armed will be bypassed regardless of their definition (except 24Hr. zones).
- Upon arming, the console will transmit the No Movement report code if programmed in section [124].
- Regardless of whether the system was successfully armed or not, the console will always transmit the No Movement report code if programmed in section [124].
- If No Movement Auto-arming is disabled, the console will still send the No Movement report code at the time specified by the No Movement Timer.

Example: To arm the system whenever there is no movement for a period of 4 hours, enable section [092] option [2] (No Movement Auto-arming) and then in section [064], enter 016 (16 x 15min. = 240min. = 4 hours).



This feature is not for use in UL installations.

No Movement Timer

Section [064]: 001 to 255 x 15 minutes; 000 = Disabled; Default = 000

Program the interval of time without movement that you wish the console to wait before arming and/or sending the No Movement report code. If No Movement Auto-arming is disabled, the console can still send the No Movement report code when no Movement Timer.

Auto-Arming Options

Section [092]: Option [3]

Option [3] OFF = Auto-arm system using Regular arm (default)

Option [3] ON = Auto-arm system using Stay arm

When using Timed Auto-arming (see page 22) or No Movement Auto-Arming (see page 22), the console can Regular or Stay arm the system.



This feature is not for use in UL installations.

One-Touch Arming

Section [092]: Options [7] and [8]

Option [7] OFF = One-touch Regular/Force arming disabled

Option [7] ON = One-touch Regular/Force arming enabled (default)

Option [8] OFF = One-touch Stay arming disabled

Option [8] ON = One-touch Stay arming enabled (default)

The One-touch arming features allow users to arm the system without having to enter any Access codes. To arm the system, press and hold the appropriate key for approximately 2 seconds.

Exit Delay

Section [062]: 001 to 255 seconds; 000 = disabled; Default = 60 seconds

The Exit Delay determines the amount of time a user has to leave the protected area before Magellan arms the system. The Exit Delay applies to all zones (except 24Hr zones) in the system. Program the Exit Delay from 001 to 255 seconds.

Bell Squawk on Arm/Disarm with Remote Control

Section [093]: Option [3]

Option [3] OFF = Bell squawk disabled (default)

Option [3] ON = Bell squawk enabled

When option [3] is enabled (ON), the siren will squawk once upon arming with a remote control and twice upon disarming with a remote control.



This feature must be enabled in UL installations.

No Exit Delay when Arming with Remote Control

Section [093]: Option [4]

Option [4] OFF = Provides Exit Delay when arming with remote control (default)

Option [4] ON = No Exit Delay when arming with remote control

When option [4] is enabled (ON), the console cancels the Exit Delay (arms instantly) when the system is armed with a remote control. When disabled, the Exit Delay Timer will start when the system is armed with a remote control.

Exit Delay Termination

Section [093]: Option [6]

Option [6] OFF = Exit Delay Termination disabled

Option [6] ON = Exit Delay Termination enabled (default)

When option [6] is enabled (ON), the console will reduce the Exit Delay to 10 seconds when an Entry Delay zone (see Exit Delay on page 23) is opened and closed during the Exit Delay.

Example: 15 seconds into a 45 second Exit Delay, an Entry Delay zone opens and closes. The remaining 30 seconds is reduced to 10 seconds.

Follow Zone Switches to Entry Delay 2

Section [093]: Option [7]

Option [7] OFF = Follow zone triggers an alarm (default)

Option [7] ON = Follow zone follows Entry Delay 2 when opened

When option [7] is enabled (ON) and an Entry Delay 1 zone is bypassed, an armed Follow zone that opens without an Entry Delay being triggered will switch to the Entry Delay 2 timer.

Example: Zone 1 is an Entry Delay zone and zone 2 is a Follow zone protecting the area where the keypad is installed. The system is armed but zone 1 is bypassed. With option [7] enabled, zone 2 will switch to and wait for the Entry Delay 2 timer to elapse before triggering an alarm.

Closing Delinquency Timer

Section [080]: 001 to 255 days; 000 = Disabled; Default = 000

The Magellan console will verify when the system was last armed at midnight of every day. If the last time the system was armed is greater than the programmed Closing Delinquency timer, the console will transmit a Closing Delinquency report code (see page 28) to the monitoring station.

Enter a value from 001 to 255 days into section [080] to program the Closing Delinquency timer. Enter 000 to disable the timer.

Stay Arm Siren Delay

Section [095]: Option [4]

Option [4] OFF = Stay Arm Siren Delay disabled

Option [4] ON = Stay Arm Siren Delay enabled (default)

When option [4] is enabled and an alarm is triggered on a stay armed system, the console plays an audible 15-second countdown that will increase in volume as the countdown progresses. While the system reports the alarm to the monitoring station immediately upon being triggered, the siren will not activate until the 15-second siren delay is complete.

Alarm Options

Bell Cut-off Timer

Section [063]: 001 to 255 minutes; 000 = Disabled; Default = 4 minutes

After an audible alarm, the siren will stop upon the disarming of the system or when the Bell Cut-Off timer has elapsed, whichever comes first.

Wireless Transmitter Supervision Options

Section [094]: Options [6] and [7]

This feature determines how the Magellan console will react to a Supervision Loss trouble. Table 4 shows the different Supervision Loss combinations available and how the system will react when armed or disarmed.



In UL installations, if a zone is used as a fire zone, the zone must be supervised and the check-in supervision time must be set to 80 minutes.

Table 4: Wireless Transmitter Supervision Options

Options		Description
[6]	[7]	
OFF	OFF	Wireless transmitter supervision disabled
OFF	ON	Trouble only (default) <i>System armed or disarmed:</i> If a Supervision Loss occurs on a zone, the console will display a trouble on the LCD screen and send a report to the monitoring station (if programmed).
ON	OFF	Audible alarm when armed <i>System armed:</i> If a Supervision Loss occurs on a zone, the console will follow the zone's Alarm Types setting (see page 17). <i>System disarmed:</i> If a Supervision Loss occurs on a zone, the console will display a trouble on the LCD screen and send a report to the monitoring station (if programmed).
ON	ON	Audible alarm <i>System armed:</i> If a Supervision Loss occurs on a zone, the console will follow the zone's Alarm Types setting (see page 17). <i>System disarmed:</i> It functions the same as Trouble Only setting, except it will also generate an audible alarm.

Supervision Bypass Options

Section [094]: Option [8]

Option [8] OFF = No Supervision Loss if detected on a bypassed zone (default)

Option [8] ON = Generate Supervision Loss if detected on a bypassed zone

- When option [8] is OFF, the Wireless Transmitter Supervision Options (see page 24) will follow the zone's bypass definition. This means the console will not perform any action if a Supervision Loss occurs on a bypassed zone.

- When option [8] is ON, the Wireless Transmitter Supervision Options (see page 24) will ignore the bypass definition. This means the console will generate an incident as per the set Wireless Transmitter Supervision Option if a Supervision Loss occurs on a bypassed zone.

Check-in Supervision Options

Section [290]: Options [1] to [8]; Zones 1 to 8; Default: All ON

Section [291]: Options [1] to [8]; Zones 9 to 16; Default: All ON

Section [292]: Options [1] to [8]; Zones 17 to 24; Default: All ON

Section [293]: Options [1] to [8]; Zones 25 to 32; Default: All ON

If enabled, Magellan can wait for each of its assigned wireless transmitters to send a status signal within a specified time (see Check-in Supervision Time on page 24) to confirm their presence and functionality. If a device has not sent a signal within the specified time period, Magellan can generate a trouble, an alarm and/or transmit a report code to the monitoring station as defined by the Wireless Transmitter Supervision Options (see page 24). Sections [190] and [193] determine which zones will be supervised and which will not. Enable the option pertaining to the zone you wish Magellan to supervise.



This feature must be enabled in UL installations.

Check-in Supervision Time

Section [096]: Option [7]

Option [7] OFF = Check-in Supervision Time = 24Hrs (default)

Option [7] ON = Check-in Supervision Time = 80 minutes

Section [096] option [7] defines the time period that Magellan will expect a check-in status signal from the specified wireless transmitters as defined in the Check-in Supervision Options (see page 24). If no signal is received within the check-in supervision time, Magellan's reaction will be defined by the Wireless Transmitter Supervision Options (see page 24).



In UL installations, if a zone is used as a fire zone, the zone must be supervised and the check-in supervision time must be set to 80 minutes.

Tamper Recognition Options

Section [094]: Options [3] and [4]

This feature determines how the Magellan console will react to a zone tamper. Table 5 on page 25 shows the different Tamper Recognition combinations available and how the system will react when armed or disarmed.

Table 5: Tamper Recognition Options

Options		Description
[3]	[4]	
OFF	OFF	Tamper Recognition disabled (default)
OFF	ON	Trouble only <i>System armed or disarmed:</i> If a tamper wiring failure occurs on a zone, the console will generate a trouble and send a report to the monitoring station (if programmed).
ON	OFF	Audible alarm when armed <i>System armed:</i> If a tamper failure occurs on a zone, the console will follow the zone's Alarm Types setting (see page 17). <i>System disarmed:</i> If a tamper failure occurs on a zone, the console will generate a trouble and send a report to the monitoring station (if programmed).
ON	ON	Audible alarm <i>System armed:</i> If a tamper failure occurs on a zone, the console will follow the zone's Alarm Types setting (see page 17). <i>System disarmed:</i> It functions the same as Trouble Only setting, except it will also generate an audible alarm.

Tamper Bypass Options

Section [094]: Option [5]

Option [5] OFF = Ignore any tampers detected on a bypassed zone (default)

Option [5] ON = Generate tamper if detected on a bypassed zone

- When option [5] is ON, the Tamper Recognition feature (see page 24) will ignore the zone's bypass definition. This means the console will generate an incident as per the set Tamper Recognition option if a tamper occurs on a bypassed zone.
- When option [5] is OFF, the Tamper Recognition feature (see page 24) will follow the zone's bypass definition. This means the console will ignore any tampers that occur on a bypassed zone.

Wireless PGM Supervision Options

Section [294]: Options [1] to [4]; Wireless PGMs 1 to 4; Default: All ON

If enabled, Magellan can wait for each of its assigned MG-2WPGM transmitters to send a status signal within a specified time (see Check-in Supervision Time on page 24) to confirm their presence and functionality. If a device has not sent a signal within the specified time period or Magellan tries to communicate with the device without success, Magellan can generate a trouble, an alarm and/or transmit a report code to the monitoring station as defined by the Wireless Transmitter Supervision Options (see page 24). Section [194] determines which wireless PGMs will be supervised and which will not. Enable the option pertaining to the MG-2WPGM you wish Magellan to supervise.

Wireless Keypad Supervision Options

Section [295]: Options [1] to [4]; Wireless keypads 1 to 4; Default: All ON

If enabled, Magellan can wait for each of its assigned wireless keypads to send a status signal within a specified time (see Check-in Supervision Time on page 24) to confirm their presence and functionality. If a device has not sent a signal within the specified time period or Magellan tries to communicate with the device without success, Magellan can generate a trouble, an alarm and/or transmit a report code to the monitoring station as defined by the Wireless Transmitter Supervision Options (see page 24). Section [295] determines which wireless PGMs will be supervised and which will not. Enable the option pertaining to the wireless keypad you wish Magellan to supervise.

Wireless Repeater Supervision Options

Section [296]: Options [1] to [2]; Wireless repeaters 1 to 2; Default: All ON

If enabled, Magellan can wait for each of its assigned wireless repeaters to send a status signal within a specified time (see Check-in Supervision Time on page 24) to confirm their presence and functionality. If a device has not sent a signal within the specified time period or Magellan tries to communicate with the device without success, Magellan can generate a trouble, an alarm and/or transmit a report code to the monitoring station as defined by the Wireless Transmitter Supervision Options (see page 24). Section [296] determines which wireless repeaters will be supervised and which will not. Enable the option pertaining to the wireless repeater you wish Magellan to supervise.

Wireless PGM Console Supervision Options (Follow Alarm/Follow Bell)

Section [297]: Options [1] to [4]; Wireless PGMs 1 to 4; Default: All OFF

This feature allows you to further program any wireless PGM that is set to follow an alarm or bell by allowing you to also program the wireless PGM to activate following an absence of successful communication with the Magellan console. If enabled, Magellan can send a status request to each of its assigned MG-2WPGM transmitters to confirm their presence and functionality. If a device has not received a status request by the Magellan console within a specified time period, the MG-2WPGM will activate. Section [195] determines which wireless PGMs that are set to follow an alarm/bell will supervise the Magellan console. If a wireless PGM has already been programmed for console supervision, this option will be ignored.

Backup Alarm Reporting Option

This feature provides you with the option of supervising the communication between the Magellan console and the MG-2WPGM. If enabled, the MG-2WPGM will periodically check for communication with the Magellan console. If there is no response from the console, the relay will activate.

When the Magellan system is in entry delay, the console will send a message to the MG-2WPGM telling it that it is in entry delay. During the entry delay, the MG-2WPGM will check for communication with the Magellan console every 10 seconds and if there is no response from the console, the relay will activate.

To enable the backup reporting option:

1. Press **[MENU] + [4] + [INSTALLER CODE] + [7]**.
2. Using the **[NEXT]** key, scroll to the **[CONSOLE SUPERU?]** option.
3. Press **[OK]**.

Panic Alarms

Section [091]: Options [1], [2] and [3]

Option [1] OFF = Panic 1 (Non-Medical Emergency Panic) disabled (default)

Option [1] ON = Panic 1 (Non-Medical Emergency Panic) enabled

Option [2] OFF = Panic 2 (Auxiliary Panic) disabled (default)

Option [2] ON = Panic 2 (Auxiliary Panic) enabled

Option [3] OFF = Panic 3 (Fire Panic) disabled (default)

Option [3] ON = Panic 3 (Fire Panic) enabled

Enable section [091] options [1], [2] and [3] to enable the system's three panic alarms. Each panic alarm is activated by pressing two keys simultaneously and holding them down for 2 seconds. See Table 6 on page 26 for the appropriate panic alarm keys. Whether these panic alarms will generate a silent or audible alarm is determined by section [091] options [4] to [6] (see Panic Alarm Types on page 26).

Table 6: Panic Alarm Keys

Keys to press	Panic Alarm Type
[1] and [3]	Panic 1 (Non-Medical Emergency Panic)
[4] and [6]	Panic 2 (Auxiliary Panic)
[7] and [9]	Panic 3 (Fire Panic)



Remote controls can also be programmed to generate panic alarms. See *Programming the Remote Control's Buttons* on page 20 for more information on programming remote controls to generate panic alarms.

Panic Alarm Types

Section [091]: Options [4], [5] and [6]

Option [4] OFF = Panic 1 (Non-Medical Emergency Panic) is silent (default)

Option [4] ON = Panic 1 (Non-Medical Emergency Panic) is audible

Option [5] OFF = Panic 2 (Auxiliary Panic) is silent (default)

Option [5] ON = Panic 2 (Auxiliary Panic) is audible

Option [6] OFF = Panic 3 (Fire Panic) is silent (default)

Option [6] ON = Panic 3 (Fire Panic) is pulsed

Options [4] to [6] represent the alarm types of panic alarms 1 to 3 respectively.

Silent Alarm: The Magellan console will emit a confirmation beep and transmit the appropriate Panic report code (if programmed in

section [139]). The console will not enable its speaker or the system siren.

Audible Alarm: Same as the silent alarm except that the console will enable its speaker and system siren until a user cancels the alarm (disarms) with a valid Access code or when the Bell Cut-off timer elapses (if enabled; see Bell Cut-off Timer on page 24).

Pulsed Alarm (Fire Panic only): Same as the audible alarm except that the siren will be pulsed as shown in Figure 20 on page 16. Refer to Standard 24Hr. Fire Zones on page 16 for more information on a pulsed siren output.

Remote Panic Disarm Lock Delay

Section [078]: 001 to 255 seconds; 000 = Disabled; Default = 20 seconds

When a panic alarm is generated through the use of a remote control, the system cannot be disarmed by remote control during the Remote Panic Disarm Lock Delay.

Enter the desired 3-digit delay value into section [078] to program the Remote Panic Disarm Lock Delay.

Reporting and Dialer Settings

Report Codes

A report code is a 1- or 2-digit hexadecimal value consisting of digits from 1 to F. Each section from [120] to [156] represents a set of up to four specific events and each of these events can be programmed with a separate 1- or 2-digit report code.



Only the Ademco Slow, Silent Knight, and Sescoa formats support 1-digit report codes. To program a 1-digit report code, press the [0] key followed by the desired hexadecimal digit or vice versa.

When a specific event occurs, the console will attempt to transmit the programmed report code to the monitoring station. The method of report code transmission is defined by the *Reporting Formats* (see page 30) and the *Event Call Direction* (see page 31). These two items define how and where the report codes are transmitted. If you are using the Ademco Contact ID format, sections [120] to [156] do not have to be programmed (see Appendix 2: Ademco Contact ID Report Code List on page 41). For more information, refer to *Reporting Formats* (see page 30). The following sub-sections provide a brief description of the events that the Magellan console can report.

Arming Report Codes

Sections [120] to [123]

A report code can be programmed for each of the 16 User codes. When using an Access code to arm the system, the Magellan console can send the appropriate report code to the monitoring station, identifying which user armed the system.

Special Arming Report Codes

Sections [124] and [125]

Whenever the system is armed using one of the special arming features listed below, the console can send the appropriate report code to the monitoring station identifying how the system was armed.

Section [124]

- **Timed Auto-arming:** The system has armed itself at the programmed time (see page 22).
- **Late to Close:** Reports every day at the time specified by the Auto-arm Timer (see page 22).
- **No Movement:** The system has armed itself after the programmed period without movement (see No Movement Auto-Arming on page 22).
- **Partial Arming:** The system was Stay, Instant or Force Armed or armed with bypassed zones.

Section [125]

- **Quick Arming:** The system was armed using a One-touch Arming feature (see page 23).
- **Arming via PC:** The system was armed using the WinLoad software.

Disarming Report Codes

Sections [126] to [129]

A report code can be programmed for each of the 16 User codes. Whenever an Access code is used to disarm the system or an alarm, the Magellan console can send the appropriate report code to the monitoring station, identifying which user disarmed the system.



The Disarming and the Special Disarming report codes can be transmitted every time the system is disarmed or only when the system is disarmed after an alarm (see Disarming Reporting Options on page 33).

Special Disarming Report Codes

Section [130]

Whenever using one of the special disarming features, the Magellan console can send the report code to the monitoring station, identifying how the system was disarmed.

- **End Auto-arm:** The system is disarmed during the Timed Auto-arm's 60-second Exit Delay (see page 22). Only reports if Disarming Reporting Options (see page 33) are set to always report disarming.
- **Disarm via PC:** System is disarmed using the WinLoad software.

Zone Alarm Report Codes

Sections [131] to [138]

A report code can be programmed for each of the 32 available zones. Whenever a zone generates an alarm, the console can send the appropriate report code to the monitoring station, identifying which zone generated an alarm.

Zone Alarm Restore Report Codes

Sections [139] to [146]

A report code can be programmed for each of the 32 available zones. The Magellan console can transmit these report codes to the monitoring station identifying which zone was restored.



A zone is restored when it closes after generating an alarm or once the bell has cut off after alarm generation. Please refer to Zone Alarm Restore Report Codes on page 27.

Special Alarm Report Codes

Sections [147] and [148]

Whenever the system generates an alarm due to one of the conditions listed below, the control panel can send the appropriate report code to the monitoring station identifying the type of alarm.

Section [147]

- **Non-Medical Emergency Panic:** Panic keys **[1]** and **[3]** (see page 26) or the appropriate button(s) on a remote control (see page 20) have been pressed.
- **Auxiliary Panic:** Panic keys **[4]** and **[6]** (see page 26) or the appropriate button(s) on a remote control (see page 20) have been pressed.

- Fire Panic: Panic keys [7] and [9] (see page 26) or the appropriate button(s) on a remote control (see page 20) have been pressed.
- Recent Closing: Reports when an alarm is generated after arming the system within the period defined by the Recent Close Delay (see page 32).

Section [148]

- Auto-zone Shutdown: A zone communicates more than the programmed number of transmissions in a single armed period (see page 17).
- Duress: A Duress code is keyed in (see page 14).
- Paramedical alarm

Zone Tamper Report Codes

Section [149] to [156]

A report code can be programmed for each of the 32 available zones. Whenever a tamper or wire fault occurs on a zone, the Magellan console can send the appropriate report code to the monitoring station identifying which zone was tampered.



If Tamper Recognition (see page 24) is disabled, the console will not report the occurrence of any tampers, wire faults or tamper restores.

Zone Tamper Restore Report Codes

Sections [157] to [164]

A report code can be programmed for each of the 32 available zones. Whenever a tampered zone is restored, the Magellan console can send the appropriate report code to the monitoring station identifying which zone has been restored.



If Tamper Recognition (see page 24) is disabled, the console will not report the occurrence of any tampers, wire faults or tamper restores.

System Trouble Report Codes

Section [165] to [167]

Whenever the system generates one of the instances listed below, the console can send the appropriate report code to the monitoring station identifying the type of system trouble.

Section [165]

- AC Failure: Magellan has detected a loss of AC power. Transmission of this report code can be delayed (see Power Failure Report Delay on page 33).
- Battery Failure: The backup battery is disconnected or battery voltage is \leq (less than or equal to) a certain voltage.
- Timer Loss: The console has detected a loss in time or clock failure.

Section [166]

- Unit Tamper: A tamper has been detected on the console itself (see Console Tamper Supervision on page 36).
- Fail To Communicate: The Magellan console has failed all attempts to communicate with the monitoring station. The report code will be transmitted upon the next successful attempt.
- Wireless Low Battery: The battery voltage of a wireless transmitter (motion detector or contact switch) has dropped below recommended limits.

- Tx Supervision Loss: Check-in Supervision (see page 24) has been enabled and a transmitter is no longer communicating with the system.

Section [167]

- RF Jamming Supervision: The Magellan console has encountered RF Jamming (see RF Jamming Supervision on page 33).

System Trouble Restore Codes

Sections [168] to [169]

Whenever the system restores one of the troubles listed in sections [165] to [167] (see System Trouble Report Codes on page 28), the Magellan console can send the appropriate report code to the monitoring station identifying the type of system trouble restored. If Telephone Line Monitoring is enabled (see page 32), use the first two digits to program a TLM Restore report code that the console can transmit.

Special Reporting Codes

Sections [171] and [172]

Whenever the system generates one of the instances listed below, the Magellan console can send the appropriate report code to the monitoring station identifying the type of system occurrence.

Section [171]

- Cold Start: The console was completely shut down (no battery, no AC) and then was restarted.
- Test Report: A test report has been generated automatically (see page 32).
- WinLoad Logout: The console has ended communication with WinLoad.

Section [172]

- Installer logon: Installer has entered the programming mode.
- Installer Logout: Installer has exited the programming mode.
- Closing Delinquency: The last time the system was armed is greater than the programmed Closing Delinquency timer (see page 23).

Wireless Module Trouble Report Codes

Section [173] to [174]

Whenever the system generates one of the instances listed below, the console can send the appropriate report code to the monitoring station identifying the type of wireless module trouble.

Section [173]

- PGM Supervision Loss: The console has lost communication with a wireless PGM.
- PGM Tamper: The anti-tamper switch of a PGM has been triggered.
- Keypad Supervision Loss: The console has lost communication with a wireless keypad.
- Keypad Battery Trouble: The battery voltage of a keypad has dropped below recommended limits.

Section [174]

- Keypad AC Failure: The AC voltage of a keypad has dropped below recommended limits.
- Repeater Supervision Loss: The console has lost communication with a wireless repeater.
- Repeater Battery Trouble: The battery voltage of a repeater has dropped below recommended limits.
- Repeater AC Failure: The AC voltage of a repeater has dropped below recommended limits.

Wireless Module Trouble Restore Codes

Sections [175] to [176]

Whenever the system restores one of the troubles listed in sections [173] to [174] (see System Trouble Report Codes on page 28), the Magellan console can send the appropriate report code to the monitoring station identifying the type of system trouble restored. If Telephone Line Monitoring is enabled (see page 32), use the first two digits to program a TLM Restore report code that the console can transmit.

Console Telephone Numbers

Magellan can dial up to two different monitoring station telephone numbers and one Pager telephone number. You can enter any digit from 0 to 9 and any special keys or functions (see Table 7 on page 29) up to a maximum of 32 digits. If the number is less than 32 digits, press the left **[ACTION]** key (**OK**) to save the message.



In UL installations, only one telephone number is allowed.

Table 7: Special Keys for Telephone Numbers

Keys to press	Action or Value
[*]	*
[#]	#
Center [ACTION] (pause) key	Add a 4-second pause to the telephone number. Press the key and a "P" will be inserted into the telephone number

Monitoring Station Telephone Numbers (MSTNs)

Section [111] = Monitoring Station Telephone Number 1

Section [112] = Monitoring Station Telephone Number 2

The Magellan console uses the MSTNs (Monitoring Station Telephone Numbers) programmed in sections [111] and/or [112] to connect and communicate with the monitoring station. The following situations also apply:

- If after eight attempts of calling one monitoring station telephone number have failed, the console will then dial the backup telephone number (if section [099] option [1] is enabled. See MSTN 2 as Backup Number on page 29).
- If the Alternate Dial option (see page 31) is enabled, the console will dial the programmed backup telephone number after every failed attempt (if section [099] option [1] is enabled. See MSTN 2 as Backup Number on page 29).

- If no backup telephone number is programmed, the console will never report to the backup telephone number.



For more information on how these telephone numbers are used, please refer to Event Call Direction on page 31 and Reporting Formats on page 30. Also refer to Delay Between Dialing Attempts on page 31.



For UL installations, the number of dialing attempts shall not exceed 10.

MSTN 2 as Backup Number

Section [099]: Option [1]

Option [1] OFF = Use MSTN 2 as a monitoring station telephone number only

Option [1] ON = MSTN 2 can be used as a backup telephone number (default)

MSTN 2 can also be used as a backup telephone number. If section [099] option [1] is enabled (ON) the console will use MSTN 2 as a backup telephone number.



For more information, please refer to Monitoring Station Telephone Numbers (MSTNs) on page 29 and Alternate Dial Option on page 31.

Pager Telephone Number

Section [113]

The Magellan console uses the Pager telephone number programmed in section [113] to connect and communicate the numeric pager message programmed in section [114] (see Pager Reporting Message on page 29) to a pager.

Pager Reporting Message

Section [114]: 32-digit decimal number (0 to 9 as well as [*] and [#])

Program the desired numeric message you wish to send whenever the console dials the Pager telephone number in section [114]. If the message is less than 32 digits, press the left **[ACTION]** key (**OK**) to save the message.

Voice Message Telephone Numbers

The Magellan console will use up to five Voice Message telephone numbers (which are programmed in the Installer menu; refer to the Magellan Quick Setup Guide for more information) to play a pre-recorded message to an external telephone or cellular telephone. Please note the following when programming and using this feature:

- The console will only dial a Voice Message telephone number when the system is in alarm. The console begins with the first programmed Voice Message telephone number.
- When the call is connected, the console will play the pre-recorded message and the zone labels of all the zones that are in alarm.
- Once the telephone call from the Magellan console is received, the **[#]** key on the telephone can be pressed twice to acknowledge and end the message or the **[1]** can be pressed to use the speakerphone feature* and talk through the Magellan console. The **[2]** key can be pressed to disarm the system. The console will ask for an access code, and if granted, will disarm the system and enter Access Mode.

- The console will repeat the message a programmed amount of times (see Voice Message Repetitions on page 30) if no acknowledgement is immediately received.
- If no acknowledgement is received before the number of repetitions has elapsed, the console will then call the next programmed Voice Message telephone number and repeat the process.
- After calling the last programmed Voice Message telephone number without an acknowledgement, the console will once again call the first Voice Message telephone number and repeat the process a maximum of three times.
- If no acknowledgement is received after the third time, the console will generate a Fail to Comm. event and trouble.

* The speakerphone feature is only available with the MG-6160.

Voice Message Repetitions

Section [079]: 001 to 010 repetitions; Default = 3 repetitions; Maximum = 10 repetitions

This feature determines the amount of times the console will repeat the pre-recorded message played with the Voice Message telephone number without receiving an acknowledgement. Enter any 3-digit number from 001 to 010 into section [079] to program the Voice Message Repetitions feature.

Service Telephone Number

Section [116]

When a specific trouble occurs (Fail to Comm., Console Tamper or Supervision Loss), the console will offer you the option of calling the telephone number programmed in section [116]. After selecting the option, the console becomes a speakerphone*.

* The speakerphone feature is only available with the MG-6160.



Refer to the *Magellan User Guide* for more information on using this feature.

Utility Reporting

Within the Utility Reporting menu, customize what events and when these events will be reported to the user. One of five report types can be programmed to have the Magellan console call the user on up to two different telephone numbers with a pre-recorded voice message when certain conditions are met. Once the telephone call from the Magellan console is received, the [#] key on the telephone can be pressed twice to acknowledge and end the message or the [1] can be pressed to use the speakerphone feature* and talk through the Magellan console.

* The speakerphone feature is only available with the MG-6160.

To program the Utility Reporting feature using the Magellan console:

1. Press [MENU] and then press the [4] key.
2. Enter the [INSTALLER CODE] and then press the [3] key.
3. Press [NEXT] until the Utility Reporting screen appears, then press [OK].
4. Press [NEXT] until the desired telephone number appears, then press [OK].
5. Enter the desired telephone number and then press [OK] twice.

6. Press [NEXT] until the desired report type appears, then press [OK] (see Report Types on page 30).
7. Press [NEXT] until the Record Alm Mes? screen appears, then press [OK].
8. Record the alarm message.

Report Types

There are four report types that can be used with Utility Reporting.

- *Disarm with user:* The Magellan console calls the user when specific users disarm the system.
- *System troubles:* The Magellan console calls the user when specific troubles appear.
- *Paramedic alarm:* The Magellan console calls the user when specific users require non-medical emergency assistance and press the appropriate key on their remote controls.
- *Zone activation:* The Magellan console calls the user when a specific zone is breached or opened.
- *Panic:* There are four types of panic: Emergency, Auxiliary, Fire, and Duress Alarm.



Refer to the *Magellan User Guide* for more information on using this feature.

Console Account Number

Section [107]

All report codes are preceded by a 4-digit or 3-digit Console Account Number to ensure correct identification of the Magellan console. The Console account number can be any hexa-digit from 1 to F. To enter a 3-digit account number, simply press the [1] key from the center keypad, followed by the 3-digit account number. Also, when using 3-digit account numbers, you must use 1-digit report codes.

Reporting Formats

Section [105] = Reporting format for MSTN 1

Section [106] = Reporting format for MSTN 2



The reporting formats apply only to the MSTNs (Monitoring Station Telephone Numbers) programmed in sections [111] and [112] (page 29)

The Magellan console can use a number of different reporting formats and each monitoring station telephone number can be programmed with a different reporting format. The three digits entered into section [105] represent the reporting format used to communicate with Monitoring Station Telephone Number 1 while the three digits entered into section [106] represent the reporting format used to communicate with Monitoring Station Telephone Number 2.

Table 8: Reporting Formats

3-digit Value	Reporting Format
001	Ademco slow (1400Hz, 1900Hz, 10BPS)
002	Silent Knight Fast (1400Hz, 1900Hz, 10BPS)
003	SESCO (2300Hz, 1800Hz, 20BPS)
004	Ademco Contact ID

005	SIA FSK
006	Ademco Express (DTMF 4+2)



UL Note: The installer is required to verify the complete compatibility of the DAC Receiver and formats at least once per year.



If you are using any report format other than SIA in sections [105] and [106] and you would like to transmit an "A", press [0] on the main keypad; if you would like to enter a space (non-reportable digit), press the [1] key on the center keypad.

Standard Pulse Formats

The Magellan console can use the Ademco slow, Silent Knight and SESCOA standard pulse reporting formats (see Table 8 on page 30).

Ademco Contact ID

Ademco Contact ID is a fast communicator format that uses tone reporting instead of pulse reporting. This communicator format also uses a pre-defined list of industry standard messages and report codes that will suit most of your basic installation needs.

- To manually program the report codes, use the 2-digit hexadecimal values from Appendix 2: Ademco Contact ID Report Code List on page 41.
- Enter 00 to disable reporting or FF to use the default report code from Appendix 1: Automatic Report Code List on page 39.

SIA FSK

SIA FSK is a fast communicator format that uses tone reporting instead of pulse reporting. This communicator format uses a pre-defined list of industry standard messages and report codes that will suit most basic installation needs.



Please refer to Appendix 1: Automatic Report Code List on page 39 for a complete list of the format's pre-defined industry standard messages and report codes.

Event Call Direction

Section [100]: Options [1] to [3]; Arming/Disarming

Option [1] ON = Call MSTN 1

Option [2] ON = Call MSTN 2

Option [3] ON = Call Pager telephone number

Section [100]: Options [5] to [7]; Alarm/Alarm Restore

Option [5] ON = Call MSTN 1

Option [6] ON = Call MSTN 2

Option [7] ON = Call Pager telephone number

Section [101]: Options [1] to [3]; Tamper/Tamper Restore

Option [1] ON = Call MSTN 1

Option [2] ON = Call MSTN 2

Option [3] ON = Call Pager telephone number

Section [101]: Options [5] to [7]; Trouble/Trouble Restore

Option [5] ON = Call MSTN 1

Option [6] ON = Call MSTN 2

Option [7] ON = Call Pager telephone number

Section [102]: Options [1] to [3]; Special

Option [1] ON = Call MSTN 1

Option [2] ON = Call MSTN 2

Option [3] ON = Call Pager telephone number

The events are divided into five groups (see above) where each event group can be programmed to dial up to three telephone numbers (MSTN 1 & 2 and the Pager telephone number) with one as a possible backup (see MSTN 2 as Backup Number on page 29).

- When a reportable event occurs in the system, the Magellan console will begin dialing the numbers sequentially starting from MSTN 1 (if enabled), skipping any disabled numbers and stopping once all selected telephone numbers have been called.
- After eight failed attempts at trying to call the monitoring station, the console will then dial the selected backup telephone number (if enabled; see MSTN 2 as Backup Number on page 29).
- If the Alternate Dial option (see page 31) is enabled, the console will dial the programmed backup telephone number (if enabled, see MSTN 2 as Backup Number on page 29) after every failed attempt.
- If no backup telephone number is programmed or section [099] option [1] is disabled (OFF, see page 31), the console will never report to the backup telephone number.



For more information, please refer to Monitoring Station Telephone Numbers (MSTNs) on page 29, Alternate Dial Option on page 31, MSTN 2 as Backup Number on page 29 and Delay Between Dialing Attempts on page 31.

Example: The system is armed and zone 1 has been breached causing an alarm. If options [5] and [7] are OFF and option [6] is ON in section [100], the console will attempt to communicate with MSTN 2 in order to transmit the Zone 1 Alarm Report Code programmed in section [131].

Delay Between Dialing Attempts

Section [076]: 001 to 255 seconds; 000 = disabled; Default = 20 seconds

This delay determines the amount of time the Magellan console will wait between each dialing attempt.

Alternate Dial Option

Section [098]: Option [5]

Option [5] OFF = Alternate dial disabled (default)

Option [5] ON = Alternate dial enabled

With option [5] OFF, the Magellan console will dial the programmed backup telephone number MSTN 2 (see MSTN 2 as Backup Number on page 29) only after all attempts to call MSTN 1 have failed. With option [5] ON, the console will dial the backup telephone number after every failed attempt.

Force Dial Option

Section [098]: Option [6]

Option [6] OFF = Force dial disabled

Option [6] ON = Force dial enabled (default)

When option [6] is enabled, the Magellan console will dial a telephone number even if no dial tone is present after 3 seconds.

Dialing Method

Section [098]: Option [7]
 Option [7] OFF = Pulse dialing
 Option [7] ON = Tone / DTMF dialing (default)

When option [4] is ON, the Magellan console is set for Tone/DTMF dialing. When option [4] is OFF, the console is set for pulse dialing. Refer to Pulse Ratio on page 32 for information on setting the pulse ratio.

Pulse Ratio

Section [098]: Option [8]
 Option [8] OFF = European Pulse Ratio of 1:2
 Option [8] ON = U.S.A. Pulse Ratio of 1:1.5 (default)

When using Pulse dialing, you can select one of two Pulse Ratios. Although most European countries use the 1:2 pulse ratio, the 1:1.5 ratio may provide better results in some cases. The same applies for North American countries. If the 1:1.5 pulse ratio is not providing the desired results, the 1:2 ratio may be used.

Switch to Pulse Dialing on 5th Attempt

Section [098]: Option [3]
 Option [3] OFF = Switch to pulse dialing on fifth attempt disabled (default)
 Option [3] ON = Switch to pulse dialing on fifth attempt enabled

When section [098] option [3] is ON, the Magellan console switches from tone/DTMF dialing to pulse dialing on the fifth attempt to report events to the monitoring station. The console continues to use pulse dialing until it establishes communication. When the console switches to another MSTN, it returns to tone/DTMF dialing and will once again switch to pulse dialing on the fifth attempt.

Telephone Line Monitoring (TLM)

Section [098]: Options [1] and [2]

When enabled, the system verifies the existence of a telephone line once every second. A line test failure occurs when the TLM detects less than a certain voltage for the period defined by the TLM Fail Timer (see page 32). If the line test fails, the Magellan console generates one or more conditions as defined by the TLM settings below. These will be restored when the console detects the telephone line again.

Table 9: Telephone Line Monitoring Options

Options		Description
[1]	[2]	
OFF	OFF	TLM disabled (default)
OFF	ON	<i>Trouble only:</i> Upon a line test failure, a TLM trouble will appear in the console's Trouble Display.
ON	OFF	<i>Alarm if System Armed:</i> Upon a line test failure, a TLM trouble will appear in the console's Trouble Display and if the system is armed, the console will generate an alarm.
ON	ON	<i>Silent Alarm becomes Audible:</i> Upon a line test failure, a TLM trouble will appear in the console's Trouble Display and causes a silent zone or silent panic alarm to switch to audible.



Please note that when the dialer detects an incoming call, the TLM test will stop for 1 minute.



If transmission is used off premises, telephone line monitoring must be used in UL installations.

TLM Fail Timer

Section [073]: 001 to 255 seconds; 000 = Disabled; Default = 32 seconds

If TLM does not detect the existence of a telephone line for the duration of this period, the control panel will generate the condition(s) defined by the TLM options (see Telephone Line Monitoring (TLM) on page 32).

Recent Close Delay

Section [066]: 001 to 255 seconds; 000 = Disabled; Default = Disabled

If after having armed the system, an alarm is generated within the period defined by the Recent Close Delay, the Magellan console will attempt to transmit the Recent Close report code programmed in section [139] (page 27).

Auto-Test Report

Section [071]: 001 to 255 days; 000 = Disabled; Default = Disabled

Section [084]: Time (HH:MM)

The Magellan console will transmit the Test Report report code programmed into section [153] after the number of days programmed into section [071] has elapsed at the time programmed into section [084]. Use the 24-hour clock to program the time (i.e. 6:30PM = 18:30). The first Test Report will be transmitted within 24 hours after the feature is enabled at the time programmed in [084].

Example: Section [071] = 005 and section [084] = 13:00. The first Test Report will be sent at 1 PM that day and then the report will be sent every 5 days at 1 PM.

Power Failure Report Delay

Section [070]: 001 to 255 minutes; 000 = Disabled;
Default = 15 minutes

The Magellan console will transmit the AC Failure report code programmed in section [149] after the Power Failure Report Delay period has elapsed.

Disarm Reporting Options

Section [093]: Option [5]
Option [5] OFF = Always report disarming
Option [5] ON = Report disarming only after alarm (default)

With option [5] OFF, the Magellan console will send the Disarming report codes (see page 27) to the monitoring station every time the system is disarmed. With option [5] ON, the console will send the Disarming report codes to the monitoring station when the system is disarmed following an alarm.

Zone Restore Report Options

Section [094]: Option [2]
Option [2] OFF = Report on Bell Cut-Off (default)
Option [2] ON = Report on zone closure

With option [2] OFF, the Magellan console will send the Zone Alarm Restore report codes (see page 27) to the monitoring station when the zone has returned to normal and the Bell Cut-Off Timer (see page 24) has elapsed. With option [2] ON, the console will send the Zone Alarm Restore report codes to the monitoring station as soon as the zone returns to normal or when the system is disarmed.

RF Jamming Supervision

Section [096]: Option [8]
Option [8] OFF = RF Jamming Supervision disabled
Option [8] ON = RF Jamming Supervision enabled (default)

With option [8] ON, a trouble will be generated when the Magellan console's RF signal is jammed or encounters interference for a minimum of 10 seconds.



This feature must be enabled for use in UL installations.

Programmable Outputs

A PGM is a programmable output that toggles to its opposite state (i.e. a normally open PGM will close) when a specific event has occurred in the system. For example, a PGM can be used to activate bells or strobe lights, open/close garage doors and much more. When a PGM activates, the control panel triggers any device or relay connected to it. The Magellan console includes two onboard PGMs. It can support up to a total of four PGMs (e.g., two onboard PGMs + two wireless PGMs OR four wireless PGMs).

Assigning PGMs

Sections [235] to [238]: PGMs 1 to 4

Sections [235] to [238] represent PGMs 1 to 4. A PGM module assigned to a section ([235] to [238]) will be assigned to the PGM represented by the section.

For example, a PGM module assigned to section [235] will be assigned to PGM1.

To assign a PGM:

1. Access the installer programming mode (see page 13).
2. Enter the **[SECTION]** corresponding to the desired zone.
3. Enter the 6-digit **[SERIAL NUMBER]** of the PGM module.



The serial number is located on the inside of the PGM module.

The PGM module must be activated once having been assigned to the Magellan console. To activate a PGM module, insert the batteries and close the cover.

PGM 1 and 2 are onboard. PGM 3 and 4 are wireless.

Setting PGM Function

This feature allows you to program the Magellan console to recognize PGM1 and/or PGM2 as a hardwire PGM (onboard) and PGM 3 and/or 4 as wireless. To set a PGM's function:

1. Press **[MENU] + [4] + [INSTALLER CODE] + [7]**.
2. Press **[OK]** to set the function of PGM1 or **[NEXT]** to set the function of PGM 2, 3, and/or 4. Press **[OK]** to set the function of the desired PGM module.
3. Press **[YES]** to set the PGM as wireless.
4. Open and then close the cover of the wireless PGM module. The PGM function has been set.
5. To continue programming the module, follow the instructions on the Magellan console.



To program the PGM's activation event and/or deactivation event, see Onboard PGM Activation Event on page 34, Wireless PGM Activation Event on page 35, Onboard PGM Deactivation Event on page 34 and Wireless PGM Deactivation Event on page 35.



If both PGM1 and PGM2 are set as hardwire (onboard), Magellan will ignore sections [260] to [267], and [280] to [283].

Onboard PGM Activation Event

Section [086] = PGM1 Activation Event

Section [088] = PGM2 Activation Event

This feature allows you to program the Magellan console to activate a PGM when a specific event occurs in the system. The PGM will remain in its active state until the programmed PGM Deactivation Event (see page 34) occurs or when the PGM Delay (see page 34) elapses. To program a PGM Activation Event:

1. Enter the section that corresponds to the desired PGM; PGM1 = [086], PGM2 = [088].
2. Enter the **[EVENT GROUP #]**.
3. Enter the **[SUB-GROUP #]**.



The AC Loss PGM event (Event Group #28, Event Sub-group #01) will only occur after the Power Failure Report Delay elapses (see page 33).



For the Event List, see the PGM Table in the *Magellan Programming Guide*.

Onboard PGM Deactivation Event

Section [087] = PGM1

Section [089] = PGM2

After PGM activation (see Onboard PGM Activation Event on page 34), the PGM will return to its normal state (deactivate) when the programmed PGM Deactivation Event occurs. To program a Deactivation Event:

1. Enter section that represents the desired PGM; PGM1 = [087], PGM2 = [089].
2. Enter the **[EVENT GROUP #]**.
3. Enter the **[SUB-GROUP #]**.



A PGM can also be set to deactivate after a programmed period elapses (see Onboard PGM Delay on page 34). If using the PGM Delay, sections [087] and [089] can be used as an additional PGM Activation Event.



For the complete Event List, see the PGM Table in the *Magellan Programming Guide*.

Onboard PGM Delay

Section [068] = PGM1, Section [069] = PGM2

001 to 255 seconds; 000 = Follow Deactivation Event;

Default = 5 seconds

Instead of deactivating the PGM on the occurrence of a specific event, the PGM will deactivate after the period programmed in here has elapsed. Enter 000 to have the PGMs deactivate with a PGM Deactivation Event (see page 34).



If a PGM Delay is programmed, the corresponding PGM Deactivation Event can be used as an additional PGM Activation Event.

PGM Normal State (Onboard Only)

Section [090]: Options [7] (PGM1) and [8] (PGM2)
Option [7] OFF = PGM1 Normally Open (default)
Option [7] ON = PGM1 Normally Closed
Option [8] OFF = PGM2 Normally Open (default)
Option [8] ON = PGM2 Normally Closed

A PGM toggles to its opposite state (i.e. a normally open PGM will close) when a specific event has occurred in the system. You can program each PGM output to be normally open (N.O.) or normally closed (N.C.) by enabling or disabling options [7] and [8] in section [090].

PGM X10 Option (MG-6160 Only / Onboard Only)

Section [091]: Options [7] (PGM1) and [8] (PGM2)
Option [7] OFF = PGM1 used as programmable output (default)
Option [7] ON = PGM1 used as X10 output 7
Option [8] OFF = PGM2 used as programmable output (default)
Option [8] ON = PGM2 used as X10 output 8

With section [091] options [7] and [8] enabled (ON), PGMs 1 and 2 will follow the ON/OFF state of X10 outputs 7 and 8. Therefore the PGMs will function as follows:

- When X10 output 7 is enabled, PGM1 will activate. When X10 output 7 is disabled, PGM1 will deactivate.
- When X10 output 8 is enabled, PGM2 will activate. When X10 output 8 is disabled, PGM2 will deactivate.



When section [091] options [7] and [8] are enabled, the PGM outputs will disregard their PGM activation and deactivation events (sections [086] to [089]).

Wireless PGM Activation Event

Section [260] = Wireless PGM1 Activation Event
Section [262] = Wireless PGM2 Activation Event
Section [264] = Wireless PGM3 Activation Event
Section [266] = Wireless PGM4 Activation Event

This feature allows you to program the MG-2WPGM modules to activate a wireless PGM when a specific event occurs in the system. The wireless PGM will remain in its active state until the programmed Wireless PGM Deactivation Event (see page 35) occurs or when the Wireless PGM Delay (see page 35) elapses. To program a Wireless PGM Activation Event:

1. Enter the section that corresponds to the desired wireless PGM; Wireless PGM1 = [260], Wireless PGM2 = [262], Wireless PGM3 = [264], Wireless PGM3 = [266].
2. Enter the [EVENT GROUP #].
3. Enter the [SUB-GROUP #].



The AC Loss PGM event (Event Group #28, Event Sub-group #01) will only occur after the Power Failure Report Delay elapses (see page 33).



For the Event List, see the PGM Table in the *Magellan Programming Guide*.

Wireless PGM Deactivation Event

Section [261] = Wireless PGM1 Deactivation Event
Section [263] = Wireless PGM2 Deactivation Event
Section [265] = Wireless PGM3 Deactivation Event
Section [267] = Wireless PGM4 Deactivation Event

After a Wireless PGM activation (see Wireless PGM Activation Event on page 35), the wireless PGM will return to its normal state (deactivate) when the programmed Wireless PGM Deactivation Event occurs. To program a Wireless Deactivation Event:

1. Enter section that represents the desired wireless PGM; Wireless PGM1 = [261], Wireless PGM2 = [263], Wireless PGM3 = [265], Wireless PGM3 = [267].
2. Enter the [EVENT GROUP #].
3. Enter the [SUB-GROUP #].



A wireless PGM can also be set to deactivate after a programmed period elapses (see Wireless PGM Delay on page 35). If using the Wireless PGM Delay, sections [280] to [283] can be used as a second Wireless PGM Activation Event.



For the complete Event List, see the PGM Table in the *Magellan Programming Guide*.

Wireless PGM Delay

Section [280] = Wireless PGM1, Section [281] = Wireless PGM2
Section [282] = Wireless PGM3, Section [283] = Wireless PGM4

000 = Follow Deactivation Event; 001 = 1s delay; 002 = 5s delay;
003 = 15s delay; 004 = 30s delay; 005 = 1min delay; 006 = 5min
delay; 007 = 15min delay; 008 = 30min delay;
Default = 000

Instead of deactivating the wireless PGM on the occurrence of a specific event, the wireless PGM will deactivate after the period programmed in here has elapsed. Enter 000 to have the wireless PGMs deactivate with a Wireless PGM Deactivation Event (see page 35).



If a Wireless PGM Delay is programmed, the Wireless PGM Deactivation Event can be used as a second Wireless PGM Activation Event.

System Settings

Software Reset

Section [199]

Performing a software reset will reset all programmed sections back to the factory defaults. To perform a software reset:

1. Access the installer programming mode (see page 13).
2. Enter section [199].



You can also perform a software reset by removing power to the console, pressing and holding down the [*] and [#] keys and then reapplying power to the console.

Installer Lock

Section [180]: 000 = Disabled; 147 = Lock Enabled;
Default = Disabled

Program 147 into section [180] to lock all programming. Performing a hardware reset will not affect the current console settings. To remove the Installer Lock, enter **000**.

Console Tamper Supervision

Section [090]: Option [5]

Option [5] OFF = Console Tamper Supervision disabled (default)

Option [5] ON = Console Tamper Supervision enabled

Magellan can be programmed to monitor its on-board tamper status. The console will follow its programmed Tamper Recognition options. Refer to Tamper Recognition Options on page 24 for more information.

Console Audible Trouble Warning

Section [090]: Option [2]

Option [2] OFF = Console beep on trouble disabled (default)

Option [2] ON = Console beep on trouble enabled

When enabled, the console emits an intermittent beep tone whenever a trouble condition occurs in the system. The intermittent beep tone remains activated until the user enters the Trouble Display by pressing the left **[ACTION]** key (i). The intermittent beeps will re-initialize whenever a new trouble occurs or the trouble restores and re-occurs.



The only trouble not covered by this feature is the AC Power Failure trouble. See AC Power Failure Warning on page 36.



This feature must be enabled in UL installations.

FM Tuner Option (MG-6160 only)

Section [093]: Option [8]

Option [8] OFF = FM tuner is disabled when the system is armed (default)

Option [8] ON = FM tuner is enabled when system is armed

With section [093] option [8] ON, the Magellan's radio is turned ON automatically after the system is armed (after the Exit Delay Timer has elapsed).

Daylight Savings Time

Section [096]: Option [5]

Option [5] OFF = Daylight Savings Time disabled (default)

Option [5] ON = Daylight Savings Time enabled

With section [096] option [5] ON, Magellan adjusts the system's clock (time) for daylight savings changes. At 2:00AM on the first Sunday of a full weekend in April, the console will add one hour to the programmed time (clock). At 2:00 AM on the last Sunday of a full weekend in October, the console will subtract one hour from the programmed time (clock).

AC Power Failure Warning

Section [096]: Option [6]

Option [6] OFF = AC Power Failure Warning disabled (default)

Option [6] ON = AC Power Failure Warning enabled

With this feature enabled, the console emits an intermittent beep tone whenever an AC power failure is detected. The intermittent beep tone remains activated until the user enters the Trouble Display by pressing the left **[ACTION]** key (i). The intermittent beeps will re-initialize whenever the trouble occurs or the trouble restores and re-occurs.



This feature must be enabled in UL installations.

The Trouble Display

When the system experiences problems or is tampered with, the Information symbol (i) will appear on the LCD screen and the i light will illuminate. The potential troubles that the Magellan system can experience are listed below. To access the Trouble Display:

1. Press the i key.
2. Use the **[NEXT]** key to scroll through the displayed troubles.
3. Press the **[OK]** key to view details on the desired trouble.

Trouble	Description
Bypass	There is a zone (or zones) that is bypassed in the system.
Alarm Memory	An alarm has occurred in the system. The zones displayed went into alarm.
Console Low Bat	The backup battery pack is disconnected or needs to be recharged or replaced.
Doorbell Low Bat	Wireless transmitter being used as a doorbell (see page 19) requires its batteries changed.
Zone Low Battery	Zone(s) displayed indicate(s) where a wireless transmitter's battery needs to be replaced.

Trouble	Description
Clock Loss	The time and date were reset to default. To reprogram: 1. Press the [12HRS] key to display the time using the 12-hour clock or the [24HRS] key to display the time using the 24-hour clock. 2. Enter the desired time and then press [OK] . 3. Enter the date and then press [OK] .
AC Failure	Power failure detected. The system is running on the backup battery pack.
Supervision Trouble	Zone(s) and/or wireless output(s) displayed has/have not sent a check-in signal within the programmed interval (see page 24).
Console Tamper	The Magellan console was tampered with.
Zone Tamper	Zone(s) and/or wireless output(s) displayed was/were tampered with.
Fail to Communicate with Central*	The Magellan console has failed to contact the monitoring station.
Fail to Communicate with Voice Reporting*	The Magellan console has failed to contact telephone number programmed for Voice reporting.
Fail to Communicate to Pager*	The Magellan console has failed to contact telephone number programmed for Pager reporting.
Fail to Communicate with PC*	The Magellan console is unable to communicate with the WinLoad software.
Fail to Communicate with Voice Utility*	The Magellan console has failed to contact telephone number programmed for Voice Utility reporting.

* When a communication failure trouble is acknowledged by pressing **[OK]**, you will be given the option to call your service provider. See Service Telephone Number on page 30.

WinLoad Software Settings

Panel Answer Options

The following two options define how Magellan answers an incoming call from a computer using the WinLoad Installer Upload/Download Software.

Answering Machine Override

Section [074]: 010 to 255 seconds; 000 = disabled; Default = disabled

When using WinLoad to communicate remotely with an installation site that uses an answering machine or service, the answering machine override must be programmed. Using WinLoad, you will call Magellan, hang up, then call back. If the installation site is called back within the delay programmed in section [074], the console will override the answering machine or service by picking up the line after the first ring on the second call. You must wait at least 10 seconds before attempting the second call, otherwise, the console will think it is the same call.



For details on how to use WinLoad, refer to the *WinLoad On-line Help*.

Example: A security installation is using an answering machine set to answer after three rings. If section [074] has been programmed with 040 (40 seconds) and the second call is made within 40 seconds, Magellan will pick up the line on the first ring. If it takes more than 40 seconds, the console will not answer on the first ring and the answering machine will answer after three rings.

Number of Rings

Section [072]: 001 to 015 rings; 000 = disabled; Default = 008

This value represents the number of rings Magellan will wait before picking-up the line. If the line is not answered after the number of programmed rings, the console will answer the call. You must wait at least 10 seconds before attempting the second call or Magellan will think it is the same call.

Panel Identifier

Section [108]: 4-digit Hexadecimal number from 0000 to FFFF

This 4-digit code identifies the console to WinLoad before initiating communication. Magellan will verify that the Panel Identifier in the WinLoad software is the same as the code programmed in section [108]. If the codes do not match, the console will not establish communication. Therefore, be sure to program the same panel identifier code into both Magellan and WinLoad.

PC Password

Section [109]: 4-digit Hexadecimal number from 0000 to FFFF

This 4-digit password identifies the PC to Magellan before establishing communication. Program the same PC password into both the console and WinLoad. If the passwords do not match, WinLoad will not establish communication.

PC Telephone Number

Section [115]

Magellan will dial the number programmed in section [118] when trying to initiate communication with a computer using WinLoad. You can enter any digit from 0 to 9 and any special keys or functions (see Table 7 on page 29) up to a maximum of 32 digits.

Call Back Feature

Section [098]: Option [4]

Option [4] OFF = Call Back Feature disabled (default)

Option [4] ON = Call Back Feature enabled

The Call Back feature provides additional security. When section [098] option [4] is ON and a computer using WinLoad attempts to communicate with Magellan, the console hangs up and calls the computer back to re-verify identification codes and re-establish communication. When Magellan hangs up, WinLoad automatically goes into Wait for Call mode, ready to answer when the console calls back. The PC Telephone number must be programmed (see PC Telephone Number on page 38).

Appendix 1: Automatic Report Code List

System Event	Default Contact ID Report Code when using sections [790] to [795]	Default SIA Report Code when using sections [790] to [795]
Arming with Master Code (##)	3 4A1 - Close by user	CL - Closing Report
Arming with User Code (##)	3 4A1 - Close by user	CL - Closing Report
Arming with Keyswitch (##)	3 4A9 - Keyswitch Close	CS - Closing Keyswitch
Auto Arming	3 4A3 - Automatic Close	CA - Automatic Closing
Arm with PC software	3 4A7 - Remote arm/disarm	CL - Closing Report
Late To Close	3 4A4 - Late to Close	OT - Late to Close
No Movement	3 4A4 - Late to Close	NA - No Activity
Partial arming	1 574 - Group bypass	CG - Close Area
Quick arming	3 408 - Quick arm	CL - Closing Report
Closing Delinquency	1 654 - System Inactivity	CD - System Inactivity
Disarm with Master Code (##)	1 4A1 - Open by user	OP - Opening Report
Disarm with User Code (##)	1 4A1 - Open by user	OP - Opening Report
Disarm with Keyswitch (##)	1 4A9 - Keyswitch Open	OS - Opening Keyswitch
Disarm after alarm* with Master Code (##)	1 4A1 - Open by user	OP - Opening Report
Disarm after alarm* with User Code (##)	1 4A1 - Open by user	OP - Opening Report
Disarm after alarm* with Keyswitch (##)	1 4A1 - Keyswitch Open	OS - Opening Keyswitch
Cancel alarm** with Master Code (##)	1 4A6 - Open by user	OR - Disarm from Alarm
Cancel alarm** with User Code (##)	1 4A6 - Open by user	OR - Disarm from Alarm
Cancel alarm** with Keyswitch (##)	1 4A6 - Keyswitch Open	OS - Opening Keyswitch
Auto Arming Cancellation	1 4A5 - Deferred Open/Close	CE - Closing Extend
Disarm with PC software	1 4A7 - Remote arm/disarm	OP - Opening Report
Disarm after an alarm with PC software	1 4A7 - Remote arm/disarm	OR - Disarm From Alarm
Quick disarm	1 408 - Quick disarm	OP - Opening Report
Zone Bypassed (##)	1 57A - Zone bypass	UB - Untyped Zone Bypass
Zone alarm (##)	1 13A - Burglary Alarm	BA - Burglary Alarm
Fire alarm (##)	1 11A - Fire alarm	FA - Fire Alarm
Zone alarm restore (##)	3 13A - Burglary Alarm Restore	BH - Burglary Alarm Restore
Fire alarm restore (##)	3 11A - Fire alarm Restore	FH - Fire Alarm Restore
Panic 1 - Non-Medical Emergency	1 12A - Panic alarm	PA - Panic Alarm
Panic 2 - Medical	1 1AA - Medical alarm	MA - Medical Alarm
Panic 3 - Fire	1 115 - Pull Station	FA - Fire Alarm
Recent closing	3 4AA - Open/Close	CR - Recent Closing
Global zone shutdown	1 574 - Group bypass	CG - Close Area
Duress alarm	1 121 - Duress	HA - Hold-up Alarm
Zone shutdown (##)	1 57A - Zone bypass	UB - Untyped Zone Bypass
Zone tampered (##)	1 144 - Sensor tamper	TA - Tamper Alarm
Zone tamper restore (##)	3 144 - Sensor tamper restore	TR - Tamper Restoral
Keypad Lockout	1 421 - Access denied	JA - User Code Tamper

* An armed system is or was in alarm and was disarmed by a user.

** A disarmed system is or was in alarm (e.g. 24Hr. zone) and was disarmed by a user.

System Event	Default Contact ID Report Code when using sections [790] to [795]	Default SIA Report Code when using sections [790] to [795]
AC Failure	1 3A1 - AC loss	AT - AC Trouble
Battery Failure	1 3A9 - Battery test failure	YT - System Battery Trouble
Auxiliary supply trouble	1 3AA - System trouble	YP - Power Supply Trouble
Bell output current limit	1 321 - Bell 1	YA - Bell Fault
Bell absent	1 321 - Bell 1	YA - Bell Fault
Clock lost	1 626 - Time/Date inaccurate	JT - Time Changed
Fire loop trouble	1 373 - Fire trouble	FT - Fire Trouble
TLM trouble restore	3 351 - Telco 1 fault restore	LR - Phone Line restoral
AC Failure restore	3 3A1 - AC loss restore	AR - AC Restoral
Battery Failure restore	3 3A9 - Battery test restore	YR - System Battery Restoral
Auxiliary supply trouble restore	3 3AA - System trouble restore	YQ - Power Supply restored
Bell output current limit restore	3 321 - Bell 1 restore	YH - Bell Restored
Bell absent restore	3 321 - Bell 1 restore	YH - Bell Restored
Clock programmed	3 625 - Time/Date Reset	JT - Time Changed
Fire loop trouble restore	3 373 - Fire trouble restore	FJ - Fire Trouble Restore
Combus fault	1 333 - Expansion module failure	ET - Expansion Trouble
Module tamper	1 145 - Expansion module tamper	TA - Tamper Alarm
Module ROM_RAM_error	1 3A4 - Rom checksum bad	YF - Parameter Checksum Fail
Module TLM trouble	1 352 - Telco 2 fault	LT - Phone Line trouble
Module fail to communicate to monitoring station.	1 354 - Fail to communicate	YC - Communication Fails
Printer fault	1 336 - Local printer failure	VT - Printer Trouble
Module AC Failure	1 3A1 - AC loss	AT - AC Trouble
Module battery failure	1 3A9 - Battery test failure	YT - System Battery Trouble
Module Auxiliary supply trouble	1 3AA - System trouble	YP - Power Supply Trouble
Bus fault restore	3 333 - Expansion module failure restore	ER - Expansion Restoral
Module tamper restore	3 145 - Expansion module tamper restore	TR - Tamper Restoral
Module ROM_RAM_error restore	3 3A4 - Rom checksum bad restore	YG - Parameter Changed
Module TLM restore	3 352 - Telco 2 fault restore	LR - Phone Line Restoral
Printer fault restore	3 336 - Local printer failure restore	VR - Printer Restore
Module AC restore	3 3A1 - AC loss restore	AR - AC Restoral
Module battery restore	3 3A9 - Battery test failure restore	YR - System Battery Restoral
Module Auxiliary supply restore	3 3AA - System trouble restore	YQ - Power Supply Restored
Fail to communicate with monitoring station	1 354 - Fail to communicate	YC - Communication Fails
Module RF low battery	1 384 - RF transmitter low battery	XT - Transmitter Battery Trouble
Module RF battery restore	3 384 - RF transmitter battery restore	XR - Transmitter Battery Restoral
Module RF supervision trouble	1 381 - Loss of supervision - RF	US - Untype Zone Supervision
Module RF supervision restore	3 381 - Supervision restore - RF	UR - Untyped Zone Restoral
Cold Start	1 3A8 - System shutdown	RR - Power Up
Warm Start	1 3A5 - System reset	YW - Watchdog Reset
Test Report engaged	1 6A2 - Periodic test report	TX - Test Report
PC software communication finished	1 412 - Successful - download access	RS - Remote Program Success
Installer on site	1 627 - Program mode Entry	LB - Local Program
Installer programming finished	1 628 - Program mode Exit	LS - Local Program Success

Appendix 2: Ademco Contact ID Report Code List

CID#	Reporting Code	Programming Value
Medical Alarms - 100		
100	Medical alarm	01
101	Pendant transmitter	02
102	Fail to report in	03
Fire Alarms - 110		
110	Fire alarm	04
111	Smoke	05
112	Combustion	06
113	Water flow	07
114	Heat	08
115	Pull station	09
116	Duct	0A
117	Flame	0B
118	Near alarm	0C
Panic Alarms - 120		
120	Panic alarm	0D
121	Duress	0E
122	Silent	0F
123	Audible	10
124	Duress - Access granted	11
125	Duress - Egress granted	12
Burglar Alarms - 130		
130	Burglary	13
131	Perimeter	14
132	Interior	15
133	24-hour	16
134	Entry/Exit	17
135	Day/Night	18
136	Outdoor	19
137	Tamper	1A
138	Near alarm	1B
139	Intrusion verified	1C
General Alarms - 140		
140	General alarm	1D
141	Polling loop open	1E
142	Polling loop short	1F
143	Expansion module failure	20
144	Sensor tamper	21
145	Expansion module tamper	22
146	Silent burglary	23
147	Sensor supervision failure	24
24-hour Non-burglary - 150 and 160		
150	24-hour non-burglary	25
151	Gas detected	26
152	Refrigeration	27
153	Loss of heat	28

CID#	Reporting Code	Programming Value
154	Water leakage	29
155	Foil break	2A
156	Day trouble	2B
157	Low bottled gas level	2C
158	High temperature	2D
159	Low temperature	2E
161	Loss of air flow	2F
162	Carbon monoxide detected	30
163	Tank level	31
Fire Supervisory - 200 and 210		
200	Fire supervisory	32
201	Low water pressure	33
202	Low CO ₂	34
203	Gate valve sensor	35
204	Low water level	36
205	Pump activated	37
206	Pump failure	38
System Troubles - 300 and 310		
300	System trouble	39
301	AC loss	3A
302	Low system battery	3B
303	RAM checksum bad	3C
304	ROM checksum	3D
305	System reset	3E
306	Panel program changed	3F
307	Self-test failure	40
308	System shutdown	41
309	Battery test failure	42
310	Ground fault	43
311	Battery missing/dead	44
312	Power supply over current limit	45
313	Engineer reset	46
Sounder/Relay Troubles - 320		
320	Sounder/relay	47
321	Bell 1	48
322	Bell 2	49
323	Alarm relay	4A
324	Trouble relay	4B
325	Reversing relay	4C
326	Notification appliance chk. #3	4D
327	Notification appliance chk. #4	4E
System Peripheral Troubles - 330 and 340		
330	System peripheral	4F
331	Polling loop open	50
332	Polling loop short	51
333	Expansion module failure	52
334	Repeater failure	53

CID#	Reporting Code	Programming Value
335	Local printer paper out	54
336	Local printer failure	55
337	Expansion module DC loss	56
338	Expansion module low battery	57
339	Expansion module reset	58
341	Expansion module tamper	59
342	Expansion module AC loss	5A
343	Expansion module self-test fail	5B
344	RF receiver jam detect	5C
Communication Troubles - 350 and 360		
350	Communication	5D
351	Telco 1 fault	5E
352	Telco 2 fault	5F
353	Long range radio	60
354	Fail to communicate	61
355	Loss of radio supervision	62
356	Loss of central polling	63
357	Long range radio VSWR problem	64
Protection Loop Troubles - 370		
370	Protection loop	65
371	Protection loop open	66
372	Protection loop short	67
373	Fire trouble	68
374	Exit error alarm	69
375	Panic zone trouble	6A
376	Hold-up zone trouble	6B
377	Swinger trouble	6C
378	Cross-zone trouble	6D
Sensor Troubles - 380 and 390		
380	Sensor trouble	6E
381	Loss of supervision - RF	6F
382	Loss of supervision - RPM	70
383	Sensor tamper	71
384	RF transmitter low battery	72
385	Smoke detector Hi sensitivity	73
386	Smoke detector Low sensitivity	74
387	Intrusion detector Hi sensitivity	75
388	Intrusion detector Low sensitivity	76
389	Sensor self-test failure	77
391	Sensor watch trouble	78
392	Drift compensation error	79
393	Maintenance alert	7A
Open/Close - 400		
400	Open/Close	7B
401	Open/Close by user	7C
402	Group open/close	7D
403	Automatic open/close	7E
406	Cancel	7F
407	Remote arm/disarm	80

CID#	Reporting Code	Programming Value
408	Quick arm	81
409	Keyswitch open/close	82
Remote Access - 410		
411	Call back request made	83
412	Success - download access	84
413	Unsuccessful access	85
414	System shutdown	86
415	Dialer shutdown	87
416	Successful upload	88
Access Control - 420 and 430		
421	Access denied	89
422	Access report by user	8A
423	Forced access	8B
424	Egress denied	8C
425	Egress granted	8D
426	Access door propped open	8E
427	Access point door status monitor trouble	8F
428	Access point request to exit	90
429	Access program mode entry	91
430	Access program mode exit	92
431	Access threat level change	93
432	Access relay/trigger fail	94
433	Access RTE shunt	95
434	Access DSM shunt	96
Arming - 440 and 450		
441	Armed Stay	97
442	Keyswitch armed Stay	98
450	Exception open/close	99
451	Early open/close	9A
452	Late open/close	9B
453	Failed to open	9C
454	Failed to close	9D
455	Auto-arm failed	9E
456	Partial arm	9F
457	Exit error (user)	A0
458	User on premises	A1
459	Recent close	A2
System - 460		
461	Wrong code entry	A3
462	Legal code entry	A4
463	Re-arm after alarm	A5
464	Auto-arm time extended	A6
465	Panic alarm reset	A7
466	Service on/off premises	A8
Sounder Relay Disabled - 520		
520	Sounder/Relay disabled	A9
521	Bell 1 disabled	AA
522	Bell 2 disabled	AB
523	Alarm relay disabled	AC
524	Trouble relay disabled	AD

CID#	Reporting Code	Programming Value
525	Reversing relay disabled	AE
526	Notification appliance chk. #3 disabled	AF
527	Notification appliance chk. #4 disabled	B0
Modules - 530		
531	Module added	B1
532	Module removed	B2
Communication Disables - 550 and 560		
551	Dialer disabled	B3
552	Radio transmitter disabled	B4
Bypasses - 570		
570	Zone bypass	B5
571	Fire bypass	B6
572	24Hr. zone bypass	B7
573	Burglary bypass	B8
574	Group bypass	B9
575	Swinger bypass	BA
576	Access zone shunt	BB
577	Access point bypass	BC
Test/Misc. - 600		
601	Manual trigger test	BD
602	Periodic test report	BE
603	Periodic RF transmission	BF
604	Fire test	C0
605	Status report to follow	C1
606	Listen-in to follow	C2
607	Walk test mode	C3
608	Periodic test - system trouble present	C4
609	Video transmitter active	C5
611	Point test OK	C6
612	Point not tested	C7
613	Intrusion zone walk tested	C8
614	Fire zone walk tested	C9
615	Panic zone walk tested	CA
616	Service request	CB
621	Event log reset	CC
622	Event log 50% full	CD
623	Event log 90% full	CE
624	Event log overflow	CF
625	Time/Date reset	D0
626	Time/Date inaccurate	D1
627	Program mode entry	D2
628	Program mode exit	D3
629	32-hour event log marker	D4
630	Schedule change	D5
631	Exception schedule change	D6
632	Access schedule change	D7
654	System inactivity	D8

Index

Numerics

001 to 016	15–18	130	27
021 to 036	19, 21, 34	131 to 134	27
058	19	135 to 138	27
059	19	139	27
060	15	140	14, 27, 28
061	15	141 to 144	28
062	23	145 to 148	28
063	24	149	28
064	22	150	28, 29
065	18	151	28, 29
066	32	154	28, 29
067	17	155	28
068	34	161 to 176	20
069	34	173	28
070	33	174	28, 29
071	32	175	29
072	38	176	29
073	32	180	36
074	38	181	14
075	18	182	14
076	31	187	16
078	26	190	16
079	30	200	14
080	23	201	19, 36
084	32	210	35
085	22	211	35
086	34	212	35
087	34	213	35
088	34	214	35
089	34	215	35
090	14, 35, 36	216	35
091	26, 35	217	35
092	22, 23	218	25
093	23, 33, 36	232	19
094	18, 24, 25, 33	233	19
095	9, 18, 23	234	19
096	19, 24, 33, 36	240	35
098	31, 32, 38	241	35
099	29, 31	242	35
100	31	243	21, 35
101	31	246	21
102	31	247	21
103	24	248	21
105	30	24Hr. zone types	
106	30	24Hr. Burglary Zones	16
107	30	24Hr. Buzzer Zones	16
108	38	24Hr. Freeze Zones	17
109	38	24Hr. Gas Zones	17
111	29	24Hr. Heat Zones	17
112	29	24Hr. Hold-up Zones	16
113	29	24Hr. Water Zones	17
114	29	Standard 24Hr. Fire Zones	16
115	38	290	24
116	30	291	24
119	30	292	24
120 to 123	27	293	24
124	22, 27	295	25
125	27	296	21, 25
126 to 129	27	32	16

A	
AC failure report code	33
AC power	7
AC power failure warning	36
Account number	30
Activation event (onboard)	34
Activation event (wireless)	35
Adding	6
Adding a zone	4
Ademco Contact ID	31
Ademco slow	30
Alarm options	
<i>Bell Cut-off timer</i>	24
<i>Check-in Supervision</i>	24
<i>Panic alarms</i>	26
<i>Tamper Recognition options</i>	24
<i>Wireless PGM Supervision</i>	25
<i>Wireless Transmitter Supervision options</i>	24
Alarm types	17
Alarms options	
<i>Backup Alarm Reporting Option</i>	25
Alternate dial options	31
Answer options, Panel	38
Answering machine override	38
Arming options	
<i>Auto-arm options</i>	23
<i>Bell Squawk on Arm/Disarm with Remote Control</i>	23
<i>Closing Delinquency Timer</i>	23
<i>Exit delay</i>	23
<i>Exit Delay Termination</i>	23
<i>Follow Zone switches to Entry Delay 2</i>	23
<i>No Exit Delay when Arming with Remote Control</i>	23
<i>No Movement Auto-arming</i>	22
<i>One-touch arming</i>	23
<i>Regular Arming switches to Force Arming</i>	22
<i>Regular Arming switches to Stay Arming</i>	22
<i>Stay Arm Siren Delay</i>	23
<i>Stay Arming switches to Force Arming</i>	22
<i>Timed Auto-arming</i>	22
Arming report codes	27
Assigning remote controls	20
Assigning wireless doorbells	19
Assigning Wireless Keypads	21
Assigning wireless repeaters	21
Assigning wireless zones	19, 21, 34
Auto-arm timer	22
Auto-arming options	23
Auto-test report	32
Auto-zone Shutdown	17
Auto-zone Shutdown counter	17
Auxiliary	7

B	
Backup Alarm Reporting Option	25
Backup telephone number	29
Battery pack	7
Bell Cut-off timer	24
Bell squawk on Arm/Disarm with Remote Control	23
Bypass option	17
Bypass options, Supervision	24
Bypass options, Tamper	25

C	
Call back feature	38
Call direction	31
Central station telephone numbers	29
Check-in Supervision time	24
Closing Delinquency Timer	23
Code length	14
Codes	
<i>Code length</i>	14
<i>Duress code</i>	14
<i>Installer code</i>	14
<i>Maintenance code</i>	14
<i>System master code</i>	14
Connections	
AC power	7
Backup battery	7
DC power	7
Hardwire zone	9
Paradox Memory Key	10, 12
PGMs	8
Telephone Line	8
UIP-256	10
WinLoad	10
X10	10
Console account number	30
Console audible trouble warning	36
Console tamper supervision	36
Console telephone numbers	29
Contact ID	31
Cut-off, Bell	24

D	
Date entry, single digit	13
Daylight savings time	36
DC Power	7
Deactivation event (onboard)	34
Deactivation event (wireless)	35
Definitions, zone	
<i>24Hr. Burglary Zones</i>	16
<i>24Hr. Buzzer Zones</i>	16
<i>24Hr. Freeze Zones</i>	17
<i>24Hr. Gas Zones</i>	17
<i>24Hr. Heat Zones</i>	17
<i>24Hr. Hold-up Zones</i>	16
<i>24Hr. Water Zones</i>	17
<i>Delayed Fire Zones</i>	16
<i>Entry Delay 1</i>	15
<i>Entry Delay 2</i>	15
<i>Follow Zones</i>	15
<i>Follow/Stay Zones</i>	16
<i>Instant Zones</i>	16
<i>Instant/Stay Zones</i>	16
<i>Standard 24Hr. Fire Zones</i>	16
Delay before Alarm Report Code Transmission	18
Delay between dialing attempts	31
Delay Power Failure Report	33
Delay, Alarm Transmission	18
Delay, Intellizone	18
Delay, PGM (onboard)	34
Delay, PGM (wireless)	35
Delay, Remote Panic Disarm Lock	26
Delay, Stay Delay Zones	18
Delayed Fire Zones	16

Deleting	6	Intellizone Delay timer	18
Deleting wireless zones	19	L	
Dialer & Reporting Settings		Line plug connect	8
<i>Alternate Dial Option</i>	31	Location	11
<i>Auto-test report</i>	32	Lock system master code	14
<i>Console account number</i>	30	Lock, installer	36
<i>Console telephone numbers</i>	29	M	
<i>Delay between dialing attempts</i>	31	Maintenance code	14
<i>Dialing method</i>	32	Master code	14
<i>Disarm reporting options</i>	33	Master code lock	14
<i>event call direction</i>	31	Master code reset	14
<i>Force Dial Option</i>	31	Memory Key	10
<i>Power failure report delay</i>	33	Memory Key programming	13
<i>Pulse ratio</i>	32	Mounting Magellan	11
<i>Recent close delay</i>	32	N	
<i>Report Codes</i>	27	No Exit Delay when Arming with Remote Control	23
<i>Reporting formats</i>	30	No Movement Auto-arming	22
<i>Switch to pulse dialing</i>	32	No Movement timer	22
<i>TLM</i>	32	Normal state, PGM	35
<i>Zone restore report options</i>	33	Number of rings	38
Dialing method	32	O	
Direct connect	8	Onboard programmable outputs	
Disarm reporting options	33	<i>Activation event</i>	34
Disarming report codes	27	<i>Deactivation event</i>	34
Display, trouble	36	Options	21
Doorbell tones	19	Options, zone	
Duress code	14	<i>Alarm types</i>	17
E		<i>Auto-zone Shutdown</i>	17
Entry Delay 1	15	<i>Bypass option</i>	17
Entry Delay 2	15	<i>Delay before Alarm Report Code Transmission</i>	18
EOL zones	18	<i>Force Zones</i>	18
Event		<i>Intellizone</i>	17
<i>Onboard PGM activation</i>	34	Output	7
<i>Onboard PGM deactivation</i>	34	Outputs	6
<i>Wireless PGM activation</i>	35	Overview, zone programming	15
<i>Wireless PGM deactivation</i>	35	P	
Event call direction	31	Pack, backup battery	7
Exit Delay Termination	23	Pager reporting message	29
F		Pager telephone number	29
Feature select programming	13	Panel answer options (WinLoad)	
Fire zone types		<i>Answering machine override</i>	38
<i>Delayed Fire Zones</i>	16	<i>Number of rings</i>	38
<i>Standard 24Hr. Fire Zones</i>	16	Panel identifier	38
FM tuner option	36	Panic Alarm types	26
Follow Zone switches to Entry Delay 2	23	Panic alarms	26
Follow Zones	15	Password, PC	38
Follow/Stay Zones	16	PC password	38
Force Dial Option	31	PC telephone number	38
Force Zones	18	PGM (Control Panel)	
Formats, reporting	30	<i>Deactivation Event</i>	34
H		<i>PGM Delay</i>	34
Hardwire zone connections	9	PGMs	34
I		PMC-3	10
Identifier, panel	38	Power failure report delay	33
Installer code	14	Power, AC	7
Installer lock	36	Power, DC	7
Instant Zones	16	Programmable outputs	8
Instant/Stay Zones	16		
Intellizone	17		

Normal state	35	Reset software	36
Onboard PGM delay	34	Reset system master code	14
Setting PGM1 & PGM2 Function	34	RF Interference Detection	33
Wireless PGM delay	35	RF Jamming Supervision	33
X10 option	35		
Programming methods		S	
Feature select programming	13	Service telephone number	30
Paradox Memory Key	13	SESCOA	30
Single digit data entry	13	Setting PGM 1 & PGM2 Function	34
Through the built-in keypads	13	Shutdown, Auto-zone	17
WinLoad	13	SIA FSK	31
Programming zones	15	Silent Knight Fast	30
Pulse ratio	32	Single digit data entry method	13
		Software reset	36
R		Special alarm report codes	27
Ratio, pulse	32	Special arming report codes	27
Recent close delay	32	Special disarming report codes	27
Regular arming switches to Force arming	22	Special keys for telephone nos.	29
Regular arming switches to Stay arming	22	Special report codes	28
Remote controls		Standard 24Hr. Fire Zones	16
Assigning	20	Stay Arm Siren Delay	23
Programming buttons	20	Stay arming switches to Force arming	22
Remote controls, assigning	20	Stay zone types	
Repeater	21	Follow/Stay Zones	16
Report codes		Instant/Stay Zones	16
AC failure	33	Supervision	
Arming	27	Check-in	24
Disarming	27	Console tamper	36
Special	28	Wireless PGM	25
Special alarm	27	Wireless transmitters	24
Special arming	27	Supervision Bypass options	24
Special disarming	27	Switch to Pulse dialing	32
System trouble	28	System master code	14
System trouble restore	28	System master code lock	14
Test	32	System master code reset	14
Zone alarm	27	System settings	
Zone alarm restore	27	AC power failure warning	36
Zone tamper	28	Console audible trouble warning	36
Zone tamper restore	28	Console tamper supervision	36
Report formats		Daylight savings time	36
Ademco Contact ID format	31	FM tuner option	36
Ademco slow format	30	Installer lock	36
SESCOA format	30	Software reset	36
SIA FSK format	31	System trouble report codes	28, 29
Silent Knight fast format	30	System trouble restore report codes	28
Standard Pulse format	31		
Reporting & Dialer Settings		T	
Account number	30	Tamper Bypass options	25
Alternate dial options	31	Tamper Recognition options	24
Auto-test report	32	Tamper supervision, console	36
Console telephone numbers	29	Telephone line connection	
Delay between dialing attempts	31	Direct connect	8
Dialing method	32	Line plug connect	8
Disarm report options	33	Telephone Line Monitoring (TLM)	32
Event call direction	31	Telephone numbers	29
Force Dial Option	31	Central station	29
Power Failure report delay	33	Pager	29
Pulse ratio	32	PC	38
Recent Close Delay	32	Service	30
Report Codes	27	Voice Message	29
Reporting formats	30	Test report code	32
Switch to Pulse dialing	32	Test Report, Automatic	32
TLM	32	Timed Auto-arming	22
Zone Restore Report options	33		

Timers		Wireless Repeater Supervision Options	21, 25
<i>Alarm Transmission</i>	18	Wireless Transmitter Supervision options	24
<i>Auto-arm</i>	22	Wireless zones become hardwire	18
<i>Auto-zone Shutdown</i>	17	Wireless doorbell tones	19
<i>Bell Cut-off</i>	24		
<i>Check-in Supervision</i>	24	X	
<i>Closing Delinquency</i>	23	X10 connections	10
<i>Delay between dialing attempts</i>	31	X10 PGM option	35
<i>Entry Delay 1</i>	15		
<i>Entry Delay 2</i>	15	Z	
<i>Exit delay</i>	23	Zone alarm report codes	27
<i>Intellizone</i>	18	Zone alarm restore report codes	27
<i>No Movement</i>	22	Zone definitions	
<i>Onboard PGM delay</i>	34	24Hr. Burglary Zones	16
<i>Power failure report delay</i>	33	24Hr. Buzzer Zones	16
<i>Recent close</i>	32	24Hr. Freeze Zones	17
<i>TLM fail</i>	32	24Hr. Gas Zones	17
<i>Wireless PGM delay</i>	35	24Hr. Heat Zones	17
TLM fail timer	32	24Hr. Hold-up Zones	16
Tones, doorbell	19	24Hr. Water Zones	17
Transmitter supervision options	24	Delayed Fire Zones	16
Trouble display	36	Entry Delay 1	15
Trouble, audible warning	36	Entry Delay 2	15
		Follow Zones	15
U		Follow/Stay Zones	16
User codes		Instant Zones	16
<i>Duress code</i>	14	Instant/Stay Zones	16
<i>Installer code</i>	14	Standard 24Hr. Fire Zones	16
<i>Maintenance code</i>	14	Zone options	
<i>System master code</i>	14	Alarm types	17
<i>User code length</i>	14	Auto-zone Shutdown	17
		Bypass option	17
V		Delay before Alarm Code Transmission	18
Viewing	19	Force Zones	18
Viewing transmitter signal strength	19	Intellizone	17
Voice message repetitions	30	Stay Delay Zones	18
Voice message telephone numbers	29	Zone programming	15
		Zone restore report options	33
W		Zone tamper report codes	28
Wall plate	11	Zone tamper restore report codes	28
WinLoad	13	Zone, hardwire	9
WinLoad settings			
<i>Call back feature</i>	38		
<i>Panel answer options</i>	38		
<i>Panel identifier</i>	38		
<i>PC password</i>	38		
<i>PC telephone number</i>	38		
Wireless Keypad Supervision Options	25		
Wireless Module Trouble Report Codes	28, 29		
Wireless PGM			
<i>Deactivation Event</i>	35		
<i>PGM Delay</i>	35		
Wireless PGM Supervision Options	25		
Wireless programmable outputs			
<i>Activation event</i>	35		
<i>Deactivation event</i>	35		
Wireless programming			
<i>Assigning remote controls</i>	20		
<i>Assigning wireless doorbells</i>	19		
<i>Assigning wireless zones</i>	19, 34		
<i>Deleting wireless zones</i>	19		
<i>Programming remote control buttons</i>	20		
<i>Viewing signal strength</i>	19		

WARRANTY

Paradox Security Systems Ltd. ("Seller") warrants its products to be free from defects in materials and workmanship under normal use for a period of one year. Except as specifically stated herein, all express or implied warranties whatsoever, statutory or otherwise, including without limitation, any implied warranty of merchantability and fitness for a particular purpose, are expressly excluded. Because Seller does not install or connect the products and because the products may be used in conjunction with products not manufactured by Seller, Seller cannot guarantee the performance of the security system and shall not be responsible for circumstances resulting from the product's inability to operate. Seller obligation and liability under this warranty is expressly limited to repairing or replacing, at Seller's option, any product not meeting the specifications. Returns must include proof of purchase and be within the warranty period. In no event shall the Seller be liable to the buyer or any other person for any loss or damages whether direct or indirect or consequential or incidental, including without limitation, any damages for lost profits stolen goods, or claims by any other party, caused by defective goods or otherwise arising from the improper, incorrect or otherwise faulty installation or use of the merchandise sold.

Notwithstanding the preceding paragraph, the Seller's maximum liability will be strictly limited to the purchase price of the defective product. Your use of this product signifies your acceptance of this warranty.

BEWARE: Dealers, installers and/or others selling the product are not authorized to modify this warranty or make additional warranties that are binding on the Seller.

© 2006 Paradox Security Systems Ltd. All rights reserved. Magellan is a trademark or registered trademark of Paradox Security Systems Ltd. or its affiliates in Canada, the United States and/or other countries. Windows® is a registered trademark of Microsoft Corporation. All rights reserved. Specifications may change without prior notice.

FCC WARNINGS

IMPORTANT INFORMATION

This equipment complies with Part 68 of the FCC rules subpart D and CS-03. Inside the cover of this equipment is a label that contains, among other information, the FCC registration number of this equipment.

NOTIFICATION TO TELEPHONE COMPANY

Upon request, customer shall notify telephone company of particular line to which the connection will be made, and provide the FCC registration number and the ringer equivalence of the protective circuit.

FCC REGISTRATION NUMBER:5A7AL01BMG-61606130
RINGER EQUIVALENCE NUMBER:0.1B (U.S. & Canada)
USOC JACK:RJ31X (USA), CA31A (CANADA)

TELEPHONE CONNECTION REQUIREMENTS

Except for telephone company provided ringers, all connections to the telephone network shall be made through standard plugs and telephone company provided jacks, or equivalent, in such a manner as to allow for easy, immediate disconnection of terminal equipment. Standard jacks shall be so arranged that, if plug connected thereto is withdrawn, no interference to operation of equipment at customer's premises which remains connected to telephone network shall occur by reason of such withdrawal.

INCIDENCE OF HARM

Should terminal equipment/protective circuitry cause harm to telephone network, telephone company shall, where practicable, notify customer that temporary disconnection of service may be required; however, where prior notice is not practicable, the telephone company may temporarily discontinue service if action is deemed reasonable in circumstances. In case of temporary discontinuance, telephone company shall promptly notify customer and will be given opportunity to correct the situation.

CHANGES IN TELEPHONE COMPANY EQUIPMENT OR FACILITIES

The telephone company may make changes in its communication facilities, equipment operations or procedures, where such actions are reasonably required and proper in its business. Should any such changes render customer's terminal equipment incompatible with the telephone company facilities, the customer shall be given adequate notice to effect the modifications to maintain uninterrupted service.

GENERAL

This equipment shall not be used on coin telephone lines. Connection to party line service is subject to state tariffs.

RINGER EQUIVALENCE NUMBER (REN)

The ren is useful to determine the quantity of devices that you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, sum of the ren's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices that you may connect to your line, you may want to contact your local telephone company.

EQUIPMENT MAINTENANCE FACILITY

If you experience trouble with this telephone equipment, please contact facility indicated below for information on obtaining service or repairs. The telephone company may ask that you disconnect this equipment from network until problem is corrected or until you are sure that the equipment is not malfunctioning.

FCC PART 15, WARNINGS INFORMATION TO USER

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to equipment intermittently, the user is encouraged to try to correct the interference by one or more of the following measures: (1) re orient or relocate the receiving antenna; (2) increase the separation between the equipment and receiver; (3) connect the equipment to an outlet on a circuit other than the one to which the receiver is connected, or (4) consult the dealer or an experienced radio/tv technician for assistance. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Changes or modifications not expressly approved by PARADOX SECURITY SYSTEMS could void the user's authority to operate the equipment.

UL WARNINGS

IMPORTANT INFORMATION

This equipment should be installed in accordance with Chapter 11 of the National Fire Alarm Code, ANSI/NFPA 72, (National Fire Protection Association, Batterymarch Park, Quincy, MA 02269).

Each console is intended to be checked by a technician at least once every three years.

LIMITATIONS OF ALARM SYSTEMS

It must be understood that while your Paradox alarm system is highly advanced and secure, it does not offer any guaranteed protection against burglary, fire or other emergency (fire and emergency options are only available on certain Paradox models). This is due to a number of reasons, including but not limited to inadequate or improper installation/positioning, sensor limitations, battery performance, wireless signal interruption, inadequate maintenance or the potential for the system or telephone lines to be compromised or circumvented. As a result, Paradox does not represent that the alarm system will prevent personal injury or property damage, or in all cases provide adequate warning or protection.

Your security system should therefore be considered as one of many tools available to reduce risk and/or damage of burglary, fire or other emergencies, such other tools include but are not limited to insurance coverage, fire prevention and extinguish devices, and sprinkler systems.

We also strongly recommend that you regularly maintain your security systems and stay aware of new and improved Paradox products and developments.

WARNINGS FOR CONNECTIONS TO NON-TRADITIONAL TELEPHONY (e.g. VoIP)

Paradox alarm equipment was designed to work effectively around traditional telephone systems. For those customers who are using a Paradox alarm panel connected to a non-traditional telephone system, such as "Voice Over Internet Protocol" (VoIP) that converts the voice signal from your telephone to a digital signal traveling over the Internet, you should be aware that your alarm system may not function as effectively as with traditional telephone systems.

For example, if your VoIP equipment has no battery back-up, during a power failure your system's ability to transmit signals to the central station may be compromised. Or, if your VoIP connection becomes disabled, your telephone line monitoring feature may also be compromised. Other concerns would include, without limitation, Internet connection failures which may be more frequent than regular telephone line outages.

We therefore strongly recommend that you discuss these and other limitations involved with operating an alarm system on a VoIP or other non-traditional telephone system with your installation company. They should be able to offer or recommend measures to reduce the risks involved and give you a better understanding.

For technical support in Canada or the U.S., call 1-800-791-1919, Monday to Friday from 8:00 a.m. to 8:00 p.m. EST. For technical support outside Canada and the U.S., call 00-1-450-491-7444, Monday to Friday from 8:00 a.m. to 8:00 p.m. EST. Please feel free to visit our website at www.paradox.com.

P  **R**  **D O X**[®]
S E C U R I T Y S Y S T E M S

paradox.com

Printed in Canada - 01/2007

MAGELLAN-EI07