



Quick Start

Copyright © 2004 Creative Technology Ltd. All rights reserved. The Creative logo and FreePoint are trademarks or registered trademarks of Creative Technology Ltd. in the United States and/or other countries. Microsoft, Windows and the Windows logo are registered trademarks of Microsoft Corporation. All other products are trademarks or registered trademarks of their respective owners and are hereby recognized as such. All specifications are subject to change without prior notice. Actual contents may differ slightly from those pictured.

FR _____


ES _____

BP _____


TR _____

CREATIVE FreePoint™ Travel Mini Mouse

Overview

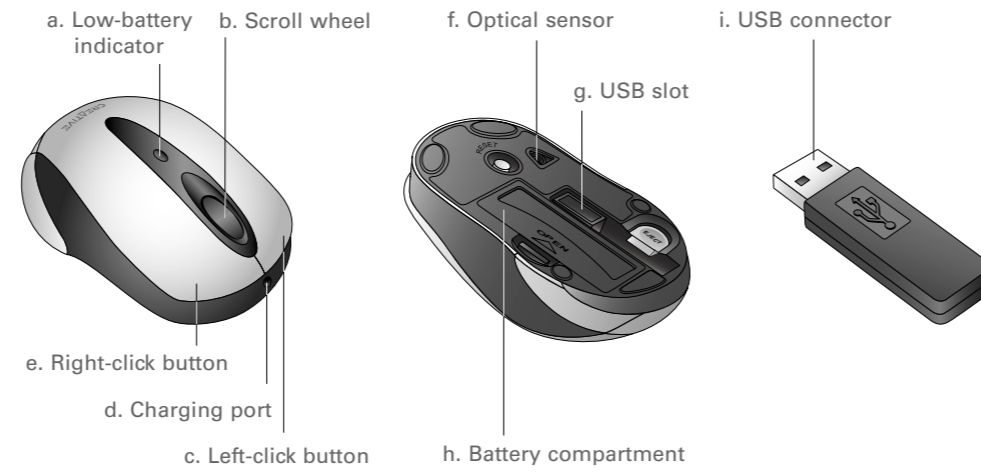

1. Inserting Batteries

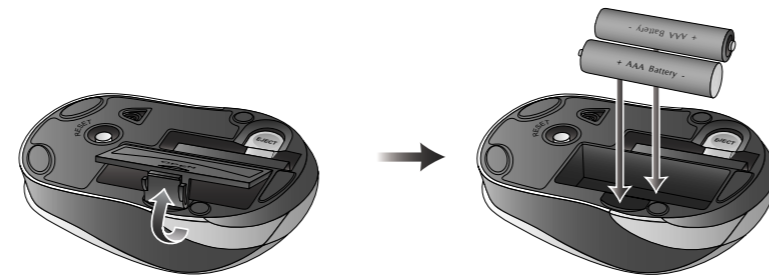

Your mouse is supplied with two rechargeable AAA batteries. **DO NOT mix batteries of different brands and capacities.**

2. Charging Batteries (Optional)


1. Connect the USB charging cable to the USB port on your computer and the Charging port on your mouse as shown.
 2. Fully charge the batteries for about four hours (**initial charge: eight hours**).
 3. Disconnect the mouse from the charging cable.
- When the Low-battery indicator blinks in red, repeat steps 1 and 2 to charge the batteries.




If you use non-rechargeable alkaline batteries, skip this step and proceed to **Step 3 Connecting the RF Receiver**. **DO NOT** attempt to charge non-rechargeable alkaline batteries. The batteries may leak and damage your mouse.

3. Connecting the RF Receiver

1. Press the **EJECT** button at the back of your mouse.
The RF Receiver is released and the red Optical sensor lights up to indicate that the mouse is turned on.
2. Remove the RF Receiver.

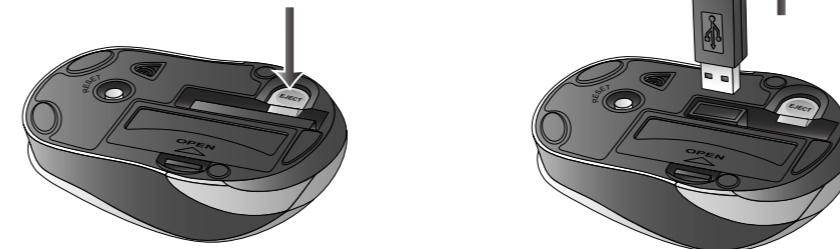

3. Connect the RF Receiver to an available USB port on your computer.
You can start using your mouse.

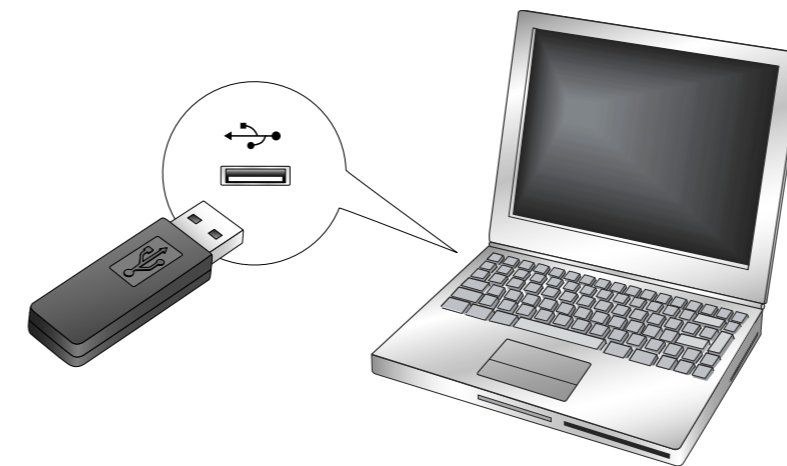

For Windows XP/2000/Me:


After you have connected the USB device, Windows will detect the USB device and install the required drivers automatically.

For Windows 98 SE:

Users may be prompted by an **Add New Hardware Wizard** dialog box when Windows detects the USB device. Make sure the original mouse is connected and follow the instructions on the screen. You may need to insert the Windows Installation CD into the CD-ROM drive. Some computers may be supplied without the Windows CD, but have the necessary files stored in **c:\windows\options\cabs** (replace c:\ with the drive letter your Windows has been installed on).

4. Storing Your Travel Mouse

1. Insert the RF Receiver into the USB slot.
2. Rotate and press the RF Receiver as shown.
The **EJECT** button clicks and the RF Receiver is held in place for convenient storage.

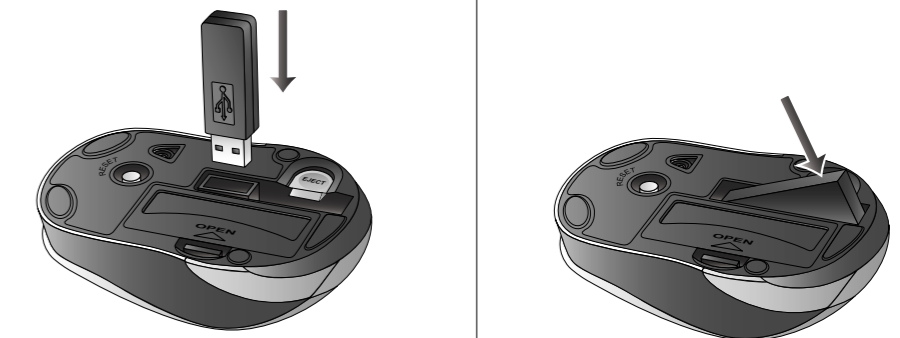

Your mouse turns off when the RF Receiver is fully inserted. Conserve battery power by turning off your mouse when it is not in use.

Frequently Asked Questions

My mouse seems to be experiencing interference. Is there anything I can do?
You can reset your mouse. Press the **RESET** button on your mouse as shown.



More Information

Register your product!

Enjoy a host of benefits by registering your product during installation, or at www.creative.com/register. Benefits include:

- Service and product support from Creative
- Exclusive updates on promotions and events

Please note that your warranty rights are not dependent on product registration.

Creative Knowledge Base

Resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. Go to www.creative.com and select your region.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.