

The TARGUS logo is displayed in a stylized, italicized font with a registered trademark symbol. It is positioned on a black horizontal bar that has a slight curve on its right side. The background of the entire page features a faint, light gray world map with latitude and longitude lines.

**5-Button Rechargeable
Wireless Optical Mouse**

The TARGUS logo is centered on the page, rendered in the same stylized, italicized font as seen in the top bar.

Making Your Mobile Life Easier.®

Visit our Web site at: www.targus.com

Features and specifications are subject to change without notice.

© 2005, Targus Group International, Inc. and Targus Inc.


AMW10US / 400-0281-001A

USER'S GUIDE

Making Your Mobile Life Easier.®

BRUSSELS HANNOVER BARCELONA TOKYO MILAN AMSTERDAM SINGAPORE

LONDON PARIS NEW YORK LOS ANGELES TORONTO HONG KONG SYDNEY

 PMS Black
15%

 PMS Black
100%

WIRELESS RECHARGEABLE MOUSE FOR DESKTOP

Introduction

Congratulations on your purchase of the Targus Wireless Rechargeable Mouse. This mouse offers a charge cable to ensure continuous use without power interruption and an extension seat that allows connectivity for the receiver and the charge cable. The 4th & 5th buttons are pre-programmed to provide Internet Backward and Internet Forward under Windows® 2000/XP.

Contents

- Wireless Rechargeable Mouse
- USB Receiver
- 2 AA NiMH Rechargeable Batteries
- USB Extension Seat
- USB Charge Cable
- User's Guide

System Requirements

Hardware

- USB version 1.1 or 2.0 interface


Operating System

- Windows® 2000/XP

Using the Extension Seat

An extension seat is provided to minimize interference from other wireless devices. This extension seat allows you to place the receiver closer to your mouse while in use.

- 1 Connect the extension seat to an available USB port on your Desktop PC or Notebook.
- 2 Plug the receiver into the USB port labeled 'receiver' located at the top of the seat.
- 3 Connect the USB end of the charge cable to the port labeled 'charge' on the extension seat.

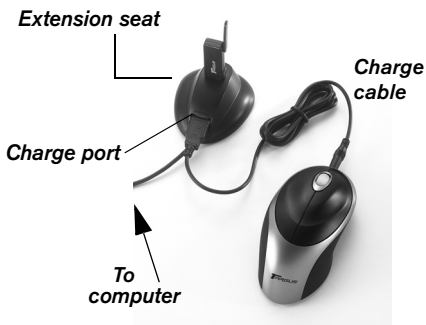

Your computer's operating system automatically detects the new hardware and begins installing the appropriate drivers.

- 4 If applicable, follow any on-screen instructions to complete the driver installation.



FOR BEST RESULTS, YOU SHOULD CHARGE THE MOUSE VIA THE SUPPLIED USB CHARGE CABLE FOR AT LEAST 8 HOURS BEFORE USING IT. SEE “CHARGING THE MOUSE” ON PAGE 5.

Installing the Batteries

- 1 Remove the battery cover from the bottom of the mouse by pressing the tab located on the bottom and lifting it off.



BOTTOM OF MOUSE

- 2 2 AA NiMH rechargeable batteries are included. Insert the supplied batteries, making sure that the positive (+) and negative (-) ends of each battery match the polarity indicators inside the battery housing.



WARNINGS: USE ONLY HEAVY-DUTY NiMH BATTERIES. NEVER USE ALKALINE IF YOU INTEND TO USE THE RECHARGING FEATURE.


AVOID MIXING NEW AND USED BATTERIES IN A DEVICE.

- 3 Slide the battery cover back into position until it “clicks” firmly into place.

The optical sensor, located on the bottom of the mouse, glows red.

Charging the Mouse

Connect the charge cable to the charge port on the supplied extension seat and plug the extension seat cable to the USB port on your computer.

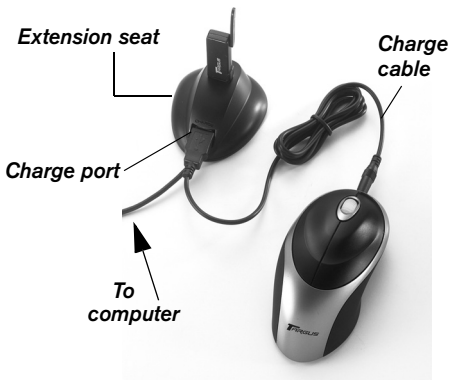

- 4 Connect the other end of the charge cable to the mouse as shown.
- 5 Alternatively, you can connect the supplied charge cable's USB connector directly into an available USB port on your computer.



NOTE: TO CONTINUOUSLY CHARGE THE MOUSE VIA THE USB CHARGE CABLE, YOUR COMPUTER MUST BE ON AND AWAKE. FOR BEST RESULTS, TURN OFF YOUR COMPUTER'S POWER MANAGEMENT FEATURE WHILE CHARGING THE MOUSE.

Synchronization

Make sure that your computer is turned on and has detected the USB receiver before you synchronize.

- 1 Press and release the connect button on the receiver.

**Connect
button**



- 2 Press and release the connect button located on the bottom of the mouse.

**Connect
button**



The receiver's status light flashes while it scans the identification codes. When synchronized the status light stops flashing. This process must be completed within a few seconds or the steps will need to be repeated.

After successfully synchronizing, you are ready to use the mouse.



NOTE: YOU MUST SYNCHRONIZE EVERY TIME YOU CHANGE THE BATTERIES.

4th & 5th Buttons



Operating Hints

For optimal performance and RF reception:

- For instances where the PC is positioned under a desk or other places that might impede wireless connectivity, use of the extension seat is recommended. (See the diagram on page 5.)
- Avoid using the mouse on a metal surface. Metals, such as iron, aluminum or copper, shield the radio frequency transmission and may slow down the mouse's response time or cause the mouse to fail temporarily.
- The mouse will enter a suspend mode at the same time your computer does. Click any mouse button to wake it.
- If your computer has a metal case that contains aluminum or magnesium, use the mouse to the side. The display panel may interfere with the radio frequency signal if you use the mouse directly in front of the computer.

- Never use the mouse on a glass or mirrored surface as these surfaces will cause the mouse to fail temporarily.
- To maximize battery life, use the mouse on a light colored surface. Dark surfaces cause the mouse's light emitter diode (LED) light to glow brighter, which causes the battery to discharge more rapidly.

Comfortable Usage

Research suggests that physical discomfort and injury to nerves, tendons, and muscles may be related to repetitive motion, an improperly set up work area, incorrect body posture, and poor work habits.

To reduce the risk of injury, follow these precautions:

- Stand, stretch, and move around several times every hour.
- Switch hands while performing tasks. Use shortcut keys to avoid repetitive or awkward mouse movements.
- Relax your shoulders and keep your elbows at your sides. Adjust the keyboard's position so that you don't have to stretch to reach it.
- Adjust your position so that you don't have to bend your wrists to type; avoid placing your wrists on a sharp edge.

If you feel discomfort or numbness in your hands, wrists, arms, shoulders, neck, or back while typing, consult a qualified medical professional.

Troubleshooting

What do I do if the mouse does not work?

- Make sure that the polarity of the battery is correct. The positive (+) and negative (-) ends of the battery must match the positive (+) and negative (-) connections in the battery housing.
- The battery may need recharging. See “Charging the Mouse” on page 5
- Check that the receiver's USB connector is firmly attached to the USB port on your computer or to the extension seat, and that the extension seat's cable is connected to your PC.
- Make sure you have established a communication link between the mouse and its receiver. See “Synchronization” on page 6.

When I use the mouse, other wireless devices work more slowly or fail temporarily – what should I do?

The mouse may cause interference with any cordless, radio-based device that operates at 27 MHz, such as a telephone, baby monitor, or toy. To reduce interference, move the mouse's receiver and the base unit of the affected device as far away from each other as possible.

What do I do if the response time of the mouse is slow or the mouse intermittently stops working?

- Increase the distance between the mouse's receiver and the rest of your computer equipment. Use the USB extension seat if necessary.

- Increase the distance between the mouse's receiver and the base units of other wireless devices.
- Turn off any wireless devices and their base units that are near the mouse's receiver.
- If you are using the mouse on a metal surface, move it and the receiver to a non-metal surface. Metals, such as iron, aluminum or copper, shield the radio frequency transmission and may slow down the mouse's response time or cause the mouse to fail temporarily.

Technical Support

For technical questions, please visit:

US

Internet: <http://targus.custhelp.com>

Australia

Internet: www.targus.com/au

Email: infoaust@targus.com

Telephone: 1800-641-645

New Zealand

Telephone: 0800-633-222

Product Registration

Targus recommends that you register your Targus accessory shortly after purchasing it. To register your Targus accessory, go to:

<http://www.targus.com/registration.asp>

You will need to provide your full name, email address, phone number, and company information (if applicable).

Warranty

Targus warrants this product to be free from defects in materials and workmanship for one year. If your Targus accessory is found to be defective within that time, we will promptly repair or replace it. This warranty does not cover accidental damage, wear and tear, or consequential or incidental loss. Under no conditions is Targus liable for loss of, or damage to a computer; nor loss of, or damage to, programs, records, or data; nor any consequential or incidental damages, even if Targus has been informed of their possibility. This warranty does not affect your statutory rights.

Regulatory Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Statement

Tested to Comply

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;

Wireless Rechargeable Mouse for Desktop

- Move the computer away from the receiver;
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Windows is a registered trademark of Microsoft Corporation. All other trademarks are the property of their respective owners. © 2005, Targus Group International, Inc. and Targus, Inc., Anaheim, CA 92806 USA.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.