

# Wireless Desktop Users Guide

## Table of Contents

Important Ergonomic Information	2
Introduction to the Wireless Desktop	2
The Wireless Mouse	2
The Wireless Keyboard	2
Package Checklist	2
Installation of the Wireless Desktop	3
Switching Channels	3
Low Battery Lights	3
Driver & Utilities Installation	3
Wireless Mouse Utility Program	4
Scrolling Functions	4
3rd Button Functionality	4
Keyboard Multi-Media key assignments	4
Maintenance of your Wireless Desktop	5
Installation Configuration and Troubleshooting	5
User Informaton	6

## **Important Ergonomic Information**

Long periods of repetitive motions using an improperly set-up workspace, incorrect body position, and poor work habits may be associated with physical discomfort and injury to nerves, tendons, and muscles. If you feel pain, numbness, weakness, swelling, burning, cramping, or stiffness in these areas, see a qualified health professional.

## **Introduction to the Wireless Desktop**

The Wireless Desktop is loaded full of features. A wireless 3-button wheel mouse and a wireless 112 key multi-media keyboard connect to your computer with a single receiver using RF (Radio Frequency) technology. This custom designed receiver can accept signals up to 1.2 meters (3.5 feet) away. We have included all the batteries you need to get started. Battery life will depend greatly on the amount of usage but you can expect in excess of 2-6 months.

## **The Wireless Mouse**

This 2-channel 3-button wheel mouse uses the latest RF technology to bring you unprecedented performance and value. Using the included mouse driver you may program your mouse wheel to perform many commonly used functions.

## **The Wireless Keyboard**

This 2-channel 103 key keyboard comes loaded with 9 extra multi-media keys that are specifically designed to enhance your Internet and Media experiences. These 9 keys come pre-programmed to perform many common functions.

## **Package Checklist**

- Wireless Keyboard
- Wireless Receiver
- 4 - AAA Batteries
- Hardware Product Warranty
- Wireless Mouse
- Driver Disk for Mouse and Keyboard
- User's Guide

## **Installation of the Wireless Desktop**

Make sure that your computer is powered off before plugging the receiver into the PS/2 mouse and keyboard ports located in the rear of your computer. Install the included batteries into the mouse and keyboard before turning on the system. Depending on your operating system you may be prompted to insert the driver disk into computer's drive, Insert the included driver disk and follow the on-screen instructions.

## **Switching Channels**

Channels allow more than one wireless device to be used at a time. An ID code allows more than one of the same type of device to be attached at the same time. If you find that you are having problems with your mouse or keyboard (erratic or no movement) simply select the channel by pressing the reset key on the receiver and then the reset button on the keyboard and or mouse. This will automatically switch the channel and ID code and keyboard and or mouse will work correctly.

## **Low Battery Lights**

If the light in the front of the mouse or the top left of the keyboard does **not** go on when you move the mouse or press a key, the voltage of the battery is low. Please replace your batteries. Expected battery life is 2 to 6 months depending on usage.

## **Driver & Utilities Installation**

The utilities program can be used to install the mouse and keyboard customization driver, this adds additional programmability to your mouse buttons and the multimedia keys of the keyboard. After the proper installation of the hardware, insert the program driver disk into the disk drive, and double click on the "SETUP" icon to start the installation. Follow the on screen prompts to finish the installation, which may or may not ask you to restart your computer (dependent on your operating system).

## **Wireless Mouse Utility Program**

The utility program uses your normal “Mouse Control Panel”. This addition adds two sets of tabs to the menus (“Wheel” and Buttons”). For additional help with all “Mouse Control Panel” items use the help buttons located in the menus.

## **Scrolling Functions**

These controls enable and disable smooth scrolling and the number of lines to scroll at a time. See the Details button for more information.

## **3rd Button Functionality**

These controls support the functions of the middle wheel button. The available controls are outlined here. See the Help button for more details.

- Universal Scroll - Allows you to change the scrolling style and speeds of the mouse wheel.
- Zooming - Magnify a section of your screen for easier viewing of small text and graphics.
- Auto Scroll - Program the screen to scroll by the direction of mouse movement.
- Vertical Wheel Cooperate Functions - This provides 3 types of additional functions to the scroll wheel including; zoom, shift lock, and switch from vertical to horizontal scrolling.
- Other Functions - Among these additional functions are “Backspace”, “F1”, and “Delete” plus activation of other special functions of Windows and Explorer.

## **Keyboard Multi-Media key assignments**

- Refresh – Refreshes the currently displayed web page
- Bookmark – Adds the current Web page to your Favorites List
- Search – Opens your systems default Search Page
- Mail – Opens your systems default E-mail application
- Internet – Opens your system default Internet Browser
- Play/Pause - Starts and stops the playback of your Audio and Video applications
- Volume Up - Increases your system volume
- Volume Down - Decreases your system volume

- Volume Mute - Mutes your system volume

### **Maintenance of your Wireless Desktop**

- If the mouse does not move smoothly, you should clean the roller ball and the roller bars in the mouse.
- Open the cover of the ball by turning it counter-clockwise, remove the ball and wipe it with a clean cloth.
- There are three sets of roller bars. Remove the dust or any other miscellaneous matter by using a cotton swab. You can dip the cotton swab in alcohol to help remove deposits if necessary.
- You may clean the surface of the Mouse and Keyboard with a soft damp cloth.
- Do not use any harsh or abrasive cleaners
- Before using any chemical cleaners, please test the results on the bottom of the device.

### **Installation Configuration and Troubleshooting**

If your Wireless Desktop does not function properly, please review the following steps for troubleshooting.

1. Insure that the PS/2 connectors of the wireless receiver are properly inserted into the mouse and keyboard PS/2 sockets of your computer.
2. Re-orient the receiver closer to the mouse and keyboard.
3. Check the power level of the batteries.
4. Keep the distance between the receiver and the devices within one meter (1.2 meters max.)(3.5 feet). Some objects may affect the operating distance or completely block the wireless signal.
5. Metallic surfaces will shorten transmission distances
6. Try changing to another channel. Please refer to “Switching Channels”

## **User Informaton**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The FCC require the user to be notified that any changes or modifications made to this device that are not expressly approved by Paten Technology Corporation (the manufacturer) may void the user' s authority to operate the equipment.