

FEDERAL COMMUNICATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation if this equipment does cause harmful interference to radio or television, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician of help.

Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Instruction Of The Wireless Desktop



Compatible Equipment

Compatible with all IBM-compatible PCs and equipped with USB interface.

Compatible with Windows Operating Systems:

Windows XP

Please Review this Checklist

Your System Includes:

Wireless keyboard	_____	1
Receiver	_____ (IN HOUSING)	1
Wireless mouse	_____	1
AAA size batteries	_____	2
AA size battery	_____	1
Instruction manual	_____	1



Please read the instruction for installing, operating, and using the wireless desktop.

 
Quick Installation Guide.

1.



Turn off the computer power.

2.

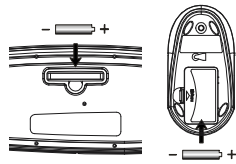


Insert the batteries in the mouse and keyboard.

3.



Turn on the computer power.

 4.




Press the receiver button.

5.



Press the reset button on the mouse.

 6.

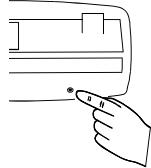

Press the reset button on the keyboard.

1. Please complete step 5 to step 7 within 30 seconds.
2. Move your mouse and / or keyboard to make sure the connection.
3. If the mouse or keyboard doesn't work properly, please repeat step 5 to step 7.
4. Every time after you replace batteries, please reconnect your devices.
5. In an office or multi-user environment, set up each system separately and don't move or click other devices when one system is under installation.

★ Your keyboard and mouse should be ready to use and enjoy.

Operating Software installation



If you have previously installed other keyboard or mouse drivers on your PC, please uninstall them first.

- Insert the driver disk to install the program for Multimedia and Internet functions. If the program does not auto-run, please find the "setup.exe" in the driver folder. And then follow the information on the screen to complete installation.

Product Features:

● USB Standard Keyboard Hotkey Functions



Refresh - Refreshes the currently displayed web page



Bookmark - Adds the current web page to your Favorites List



Internet - Opens your systems default Internet Browser



Mail - Opens your systems default E-mail application



My Document - Opens your systems default my document



My Pics - Opens your systems default my pics



My Music - Opens your systems default my music



Stop



Play / Pause - Starts and stops the playback of your Audio and Video applications



RR



FF



Volume Down - Decreases your system volume

Volume Up - Increases your system volume

Volume Mute - Mutes your system volume

- Extendable props on the keyboard may be adjusted in two stages to optimize the position for the user.

 
 
(from left to right)

Refresh key, Bookmark key, Search key

Launch E-Mail key, Launch Browser key


Play/Pause key, Volume Control key x2, Mute key

Wireless Keyboard

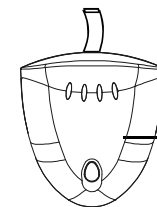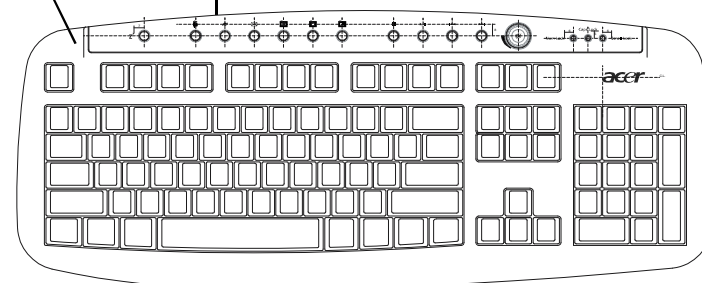


Receiver

 Wireless Mouse

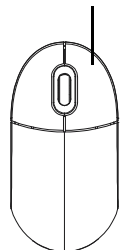

Maintaining your hardware and resolving basic problems

 - Should the ball on the mouse not roll smoothly, open the ball enclosure, remove the ball and wipe it thoroughly using a clean, lint-free cloth. With a cotton swab slightly moistened with industrial alcohol, clean the three roller contacts located inside the enclosure. When finished, return the ball to the enclosure and replace the cover.
- If your cursor is controlled by another system in an office or multi-user environment, try to unload the batteries, insert them again after 2 minutes and repeat step 5 to step 7 of the quick installation guide.
- Please locate the receiver at a minimum distance of 20 cm away from computer chassis, monitors, zip-drives, speakers, or switching power supply.

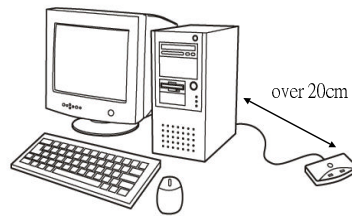

- A desk made of iron will negatively impact wireless keyboard and mouse operations.
- If your devices don't function smoothly, you may try the following steps:
 - a. replace with new batteries
 - b. repeat step 5 to step 7 of the quick installation guide to ensure connection
 - c. move mouse and keyboard closer to receiver
- Normal expected battery life for the keyboard and mouse units:

Battery life is greatly affected by the length of time these units are in use. Under "normal" usage conditions, you may expect unit batteries to last between three and six months.

The environment within which the units are used will also affect the length of battery life.

acer Wireless Desktop User Manual



Wireless Desktop

User Manual